

CONFIDENTIAL

CMEM for Linux

User's Manual: Software

R-Car H3/M3/M3N/E3/D3/V3U/V3H/V3M Series

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (<http://www.renesas.com>).

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.

7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan

www.renesas.com

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:
www.renesas.com/contact/.

CONFIDENTIAL

Trademark

- Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.
- Arm is a registered trademark of Arm Limited (or its subsidiaries) in the US and/or elsewhere.
- Other company names and product names mentioned herein are registered trademarks or trademarks of their respective owners.
- Registered trademark and trademark symbols (® and ™) are omitted in this document

How to Use This Manual

- **[Readers]**

This manual is intended for engineers who develop products which use the R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H / V3M processor.

- **[Purpose]**

This manual is intended to give users an understanding of the functions of the R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H / V3M processor device driver and to serve as a reference for developing hardware and software for systems that use this driver.

- **[How to Read This Manual]**

It is assumed that the readers of this manual have general knowledge in the fields of electrical

— engineering, logic circuits, microcontrollers, and Linux.

→ Read this manual in the order of the CONTENTS.

— To understand the functions of a multimedia processor for R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H / V3M

→ See the R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H / V3M User's Manual.

— To know the electrical specifications of the multimedia processor for R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H / V3M

→ See the R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H / V3M Data Sheet.

- **[Conventions]**

The following symbols are used in this manual.

Data significance: Higher digits on the left and lower digits on the right

Note: Footnote for item marked with Note in the text

Caution: Information requiring particular attention

Remark: Supplementary information

Numeric representation: Binary ... xxxx, 0bxxxx, or xxxxB

Decimal ... xxxx

Hexadecimal ... 0xxxxx or xxxxH

Data type: Double word ... 64 bits

Word ... 32 bits

Half word ... 16 bits

Byte ... 8 bits

Table of Contents

1.Overview	1
1.1 Overview of this Software	1
1.2 Configuration of this Software	1
1.3 Development Environments	2
1.3.1 Software Development Environment	2
2.Module Configuration.....	2
3.List of API	3
4.API Specification.....	4
4.1 Read data	4
4.2 Write data	5
4.3 IO control function	6
4.4 Map the Address for H/W IP to the User Space	7
4.5 Open device.....	8
4.6 Close.....	9
5.Definition.....	10
5.1 Structure	10
5.1.1 mem_setpara	10
5.1.2 mem_mlock.....	10
5.1.3 mem_info	10
5.2 Macro.....	11
5.2.1 Parameter Definition	11
6.Option Setting	12
6.1 Module parametters.....	12
6.1.1 Setting the size of memory	12
6.1.2 Enable/Disable cache	12
6.1.3 Change the cmem's device file major number.....	12

1. Overview

1.1 Overview of this Software

- This software can manage the memory's data.
- Feature:
 1. Acquire to physical memory address.
 2. Memory allocation

1.2 Configuration of this Software

This software consists of the following resources.

- Source code
- Makefile

To use this software, the following additional software, which is not included in this software, is required.
Details of this additional software are shown below.

- Kernel module source code

Figure 1-1 shows the lists of these source files.

```

cmem
|—— GPL-COPYING
|—— MIT-COPYING
|—— Makefile
|—— cmemdrv.h
|—— cmemdrv.c
  
```

Figure 1-1 File structure

1.3 Development Environments

This section describes the development environments for this software.

1.3.1 Software Development Environment

Table 1-1 Software specification

Software Name	Version / Revision	Remarks
R-Car H3/M3/M3N/E3/D3/V3U/V3H/V3 M Linux BSP	-	-

2. Module Configuration

The module configuration of CMEM is as follows.

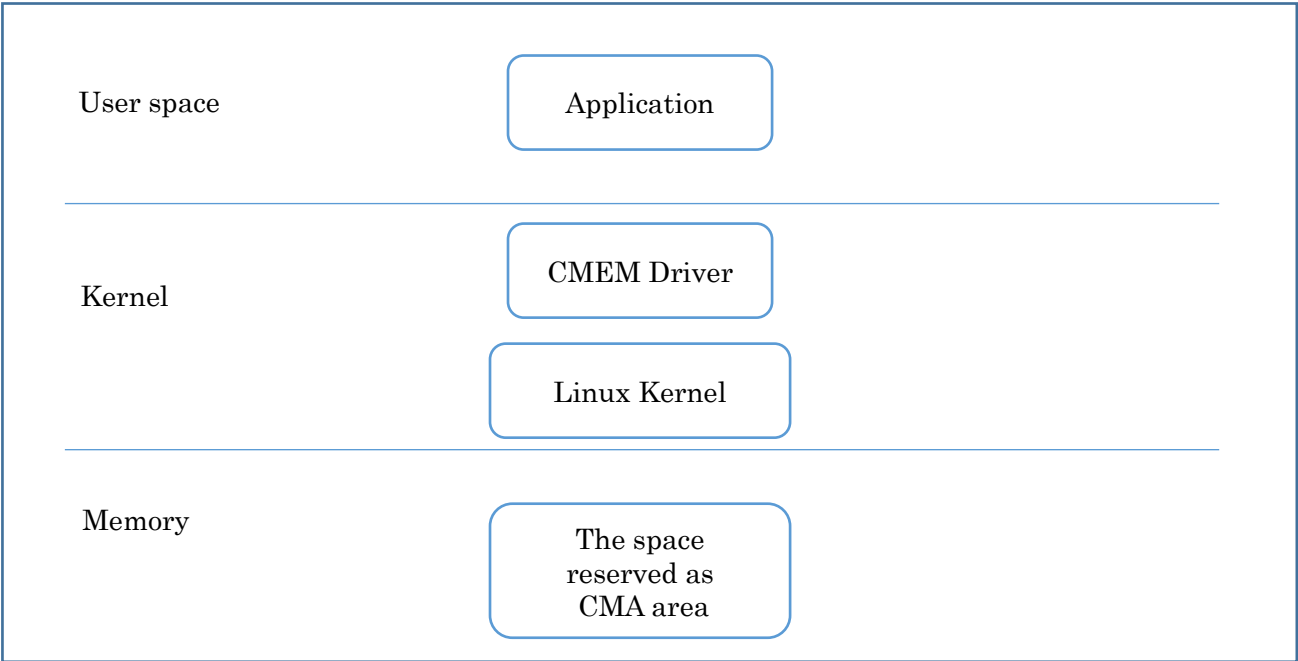


Figure 2-1 CMEM module configuration

3.

3.4. List of API

In CMEM driver, all callback functions are registered to file_operations function, so the user need to use file operations functions to call those callback function, the table bellow is shown the information of callback function

Table 3-1 List of callback functions

No	File operations functions	CMEM callback functions	Explain
1	read()	dev_read ()	read data from memory
2	write()	dev_write ()	write data to memory
3	ioctl()	dev_ioctl ()	io control
5	mmap ()	dev_mmap ()	remap address
6	open ()	dev_open ()	open device
7	close ()	dev_rls ()	release device

4.5. API Specification

4.45.1 Read data

Name

read()

Synopsis

```
ssize_t read(  
    int fd,                (input)  
    void *buf,            (output)  
    size_t count,         (output)  
)
```

Arguments

int <i>fd</i> ,	File descriptor
void * <i>buf</i> ,	The buffer where data is written.
size_t <i>count</i> ,	the length of data

Struct

-

Return Value

On success, the number of bytes read is returned (zero indicates end of file), and the file position is advanced by this number.

On error, -1 is returned, and `errno` is set appropriately.

Description

`read()` attempts to read up to `count` bytes from memory into the buffer starting at `buf`.

4.25.2 Write data

Name

write

Synopsis

```
ssize_t write (
    int fd,                (input)
    void *buf,            (input)
    size_t count,         (output)
)
```

Arguments

int <i>fd</i> ,	File descriptor
void * <i>buf</i> ,	The buffer which store the written data.
size_t <i>count</i> ,	the length of data

Struct

-

Return Value

On success, the number of bytes written is returned.
On error, -1 is returned, and `errno` is set to indicate the cause of the error.

Description

`write()` writes up to `count` bytes from the buffer starting at `buf` to the memory

4.35.3 IO control function

Name

ioctl

Synopsis

```
int ioctl (
    int fd,                (input)
    unsigned long request, (input)
    void* arg              (input/output)
)
```

Arguments

int <i>*filep</i> ,	File descriptor
unsigned long <i>request</i>	The command which is used to control CMEM driver The following command which is shown below can be used in those functions: PARAM_SET, M_LOCK, M_UNLOCK, GET_PHYS_ADDR, M_ALLOCATE, M_UNALLOCATE, TRY_CONV. For more information about those command, please refer the description part.
void* <i>arg</i>	Pointer to mem_setpara, mem_mlock, mem_info structure Depend on the type of command, the argument pointer will specify to the following structure

Struct

PARAM_SET : using mem_setpara struct to set cmem's parameters
M_LOCK: mem_mlock struct is used.
M_UNLOCK: mem_mlock struct is used
GET_PHYS_ADDR: get physical address of memory using mem_info struct
TRY_CONV : convert virtual address to physical address, user I/F is not updated in this time
Please refer chapter [6.15.1](#), for more information about those structure

Return Value

Zero is returned on success and -1 is return on error with errno is set appropriately

Description

The ioctl() system call io control function of CMEM driver
PARAM_SET : setting memory's parameters (width, height, offset, stride and tl)
M_LOCK : cache data flush and delete cache data
M_UNLOCK : delete cache data
GET_PHYS_ADDR: get physical address of memory
TRY_CONV : convert virtual address to physical address

4.45.4 Map the Address for H/W IP to the User Space

Name

mmap

Synopsis

```
void* mmap (
    void *addr,           (input)
    size_t length,        (input)
    int prot,             (input)
    int flags,            (input)
    int fd,               (input)
    off_t offset           (input)
)
```

Arguments

void *addr,	the starting address space of mapping
size_t length,	the length of memory space memory
int prot,	protect
int flags,	flags, but this flags variable is not used in CMEM driver, this flags must be set to 0.
int fd,	file descriptor
off_t offset	offset

Struct

-

Return Value

On success, mmap() returns a pointer to the mapped area.

On error, the value MAP_FAILED (that is, (void *) -1) is returned, and errno is set to indicate the cause of the error.

Description

mmap() creates a new mapping in the virtual address space of the calling process.

Note

the offset value can be set from 0.

4.55.5 Open device

Name

open

Synopsis

```
int open(  
    const char *pathname,    (input)  
    int flags                (input)  
)
```

Arguments

const char *pathname,	node ID
int flags	file operation struct

Struct

-

Return Value

Description

The open() system call opens cmem driver function

4.65.6 Close

Name

close

Synopsis

```
int close (
    int fd                                     (input)
)
```

Arguments

int <i>fd</i>	file descriptor
---------------	-----------------

Struct

—

Return Value

Return 0 on success and -1 on error with errno is set appropriately

Description

Close device

5-6. Definition

5-16.1 Structure

5-1-16.1.1 mem_setpara

```
struct mem_setpara {
    int offset;
    int width;
    int height;
    int stride;
    int tl;
};
```

Table 5-1 Members of mem_setpara structure

Member	Direction	Contents
int offset	Input	Setting the offset of memory
int width	Input	Setting the width of memory
int height	Input	Setting the height of memory
int stride	Input	Setting the stride of memory
int tl	Input	Translation lookaside

5-1-26.1.2 mem_mlock

```
struct mem_mlock {
    size_t offset;
    size_t size;
    size_t dir;
};
```

Table 5-2 Members of mem_mlock structure

Member	Direction	Contents
size_t offset	Input	Setting the offset of memory
size_t size	Input	Setting the size of memory
size_t dir	Input	Setting the direction. (IOCTL_FROM_DEV_TO_CPU and IOCTL_FROM_CPU_TO_DEV are used when setting this variable)

5-1-36.1.3 mem_info

```
struct mem_info {
    size_t phys_addr;
};
```

Table 5-3 Members of mem_info structure

Member	Direction	Contents
size_t phys_addr	Input	Getting the physical memory address

5.26.2 Macro

5.2.16.2.1 Parameter Definition

Table 6-4 List of Parameter Definition

Definition	Value	Content
PARAM_SET	1	Setting cmem's parameters
M_LOCK	3	Cache data flush and delete cache data
M_UNLOCK	4	Delete cache data
GET_PHYS_ADDR	5	Get physical address
M_ALLOCATE	6	No support
M_UNALLOCATE	7	No support
TRY_CONV	8	Convert virtual address to physical address

6.7. Option Setting

6.1.7.1 Module parameters

When load CMEM driver as loadable module, the following parameters can be used to change the CMEM setting

6.1.7.1.1 Setting the size of memory

The memory size can be specify by the following command

```
insmod cmemdrv.ko bsize= <value>
```

when: <value> is the size of memory that you want to create

If this option is not specified, the default value (16*1024*1024) will be used

Example: if you want to create memory with the size = 0x7000000

```
# insmod cmemdrv.ko bsize=0x7000000
```

6.1.7.1.2 Enable/Disable cache

The cache can be enabled or disable by the following command.

```
insmod cmemdrv.ko cached=<value>
```

When <value> is 0 or 1. 0 mean disable, and 1 mean enable.

The cache is enabled by default when this option is not specified.

Example: if you want to disable cache

```
# insmod cmemdrv.ko cached=0
```

6.1.7.1.3 Change the cmem's device file major number

The device file major number can be changed by the following command

```
insmod cmemdrv.ko cmem_major=<value>
```

When <value> is the number which you want to set.

If this option is not specified, 88 is set as default number for cmem device file.

Example: if you want to set cmem device file major number to 70

```
# insmod cmemdrv.ko cmem_major=70
```

CONFIDENTIAL

Revision History	CMEM for Linux User's Manual: Software
------------------	--

Rev.	Date	Description	
		Page	Summary
v2.50	Feb. 26, 2021	-	New creation
v2.51	Aug. 16, 2021	-	Support Gen3e devices
v3.00	Dec. 10, 2021	-	Support Kernel v5.10.41
v3.1.0	Dec. 25, 2023	-	Add Kernel v5.19.194 support for H3, M3, M3N, E3

CONFIDENTIAL

Continuous Memory Manager for Linux
User's Manual: Software

Publication Date: Rev.2.50 Feb. 26, 2021
 Rev.3.1.0 Dec. 25, 2023

Published by: Renesas Electronics Corporation



SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

Renesas Electronics Corporation

TOYOSU FORESIA, 3-2-24 Toyosu, Koto-ku, Tokyo 135-0061, Japan

Renesas Electronics America Inc. Milpitas Campus

1001 Murphy Ranch Road, Milpitas, CA 95035, U.S.A.
Tel: +1-408-432-8888, Fax: +1-408-434-5351

Renesas Electronics America Inc. San Jose Campus

6024 Silver Creek Valley Road, San Jose, CA 95138, USA
Tel: +1-408-284-8200, Fax: +1-408-284-2775

Renesas Electronics Canada Limited

9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3
Tel: +1-905-237-2004

Renesas Electronics Europe GmbH

Arcadiastrasse 10, 40472 Düsseldorf, Germany
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd.

Room 101-T01, Floor 1, Building 7, Yard No. 7, 8th Street, Shangdi, Haidian District, Beijing 100085, China
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.

Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai 200333, China
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

Renesas Electronics Hong Kong Limited

Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong
Tel: +852-2265-6688, Fax: +852 2886-9022

Renesas Electronics Taiwan Co., Ltd.

13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan
Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

Renesas Electronics Singapore Pte. Ltd.

80 Bendemeer Road, #06-02 Singapore 339949
Tel: +65-6213-0200, Fax: +65-6213-0300

Renesas Electronics Malaysia Sdn.Bhd.

Unit No 3A-1 Level 3A Tower 8 UOA Business Park, No 1 Jalan Pengaturcara U1/51A, Seksyen U1, 40150 Shah Alam, Selangor, Malaysia
Tel: +60-3-5022-1288, Fax: +60-3-5022-1290

Renesas Electronics India Pvt. Ltd.

No.777C, 100 Feet Road, HAL 2nd Stage, Indiranagar, Bangalore 560 038, India
Tel: +91-80-67208700

Renesas Electronics Korea Co., Ltd.

17F, KAMCO Yangjae Tower, 262, Gangnam-daero, Gangnam-gu, Seoul, 06265 Korea
Tel: +82-2-558-3737, Fax: +82-2-558-5338



ルネサスエレクトロニクス株式会社

■営業お問合せ窓口

<http://www.renesas.com>

※営業お問合せ窓口の住所は変更になることがあります。最新情報につきましては、弊社ホームページをご覧ください。

ルネサス エレクトロニクス株式会社 〒135-0061 東京都江東区豊洲3-2-24（豊洲フォレシア）

■技術的なお問合せおよび資料のご請求は下記へどうぞ。
総合お問合せ窓口：<https://www.renesas.com/contact/>

CMEM for Linux
User's Manual: Software