

CONFIDENTIAL

Linux Interface Specification Device Driver Video Capture

User's Manual: Software

R-Car H3/M3/M3N/E3/D3/V3U/V3H Series

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (<http://www.renesas.com>).

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.

7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan

www.renesas.com

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:
www.renesas.com/contact/.

CONFIDENTIAL

Trademark

- Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.
- Arm is a registered trademark of Arm Limited (or its subsidiaries) in the US and/or elsewhere.
- Other company names and product names mentioned herein are registered trademarks or trademarks of their respective owners.
- Registered trademark and trademark symbols (® and ™) are omitted in this document

How to Use This Manual

- **[Readers]**

This manual is intended for engineers who develop products which use the R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H processor.

- **[Purpose]**

This manual is intended to give users an understanding of the functions of the R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H processor device driver and to serve as a reference for developing hardware and software for systems that use this driver.

- **[How to Read This Manual]**

It is assumed that the readers of this manual have general knowledge in the fields of electrical

— engineering, logic circuits, microcontrollers, and Linux.

→ Read this manual in the order of the CONTENTS.

— To understand the functions of a multimedia processor for R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H

→ See the R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H User's Manual.

— To know the electrical specifications of the multimedia processor for R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H

→ See the R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H Data Sheet.

- **[Conventions]**

The following symbols are used in this manual.

Data significance: Higher digits on the left and lower digits on the right

Note: Footnote for item marked with Note in the text

Caution: Information requiring particular attention

Remark: Supplementary information

Numeric representation: Binary ... xxxx, 0bxxxx, or xxxxB

Decimal ... xxxx

Hexadecimal ... 0xxxxx or xxxxH

Data type: Double word ... 64 bits

Word ... 32 bits

Half word ... 16 bits

Byte ... 8 bits

Table of Contents

1. Overview	1
1.1 Overview	1
1.2 Reference	1
1.2.1 Standard	1
1.2.2 Related Document	1
1.3 Restrictions	2
1.4 Notice	2
2. Terminology	4
3. Operating Environment	5
3.1 Hardware Environment	5
3.2 Module Configuration	6
3.3 State Transition Diagram	10
4. Function	11
4.1 Connected Device	11
4.2 Input / Output Format	15
4.3 Input Resolution	19
4.4 Clipping and Scaling	20
4.5 Hardware Parameters	22
4.6 Field order	23
4.7 Initialization Process	24
4.8 Capture Process	24
4.8.1 Capture Control (enqueue / dequeue buffer)	27
4.8.2 Start or Stop Capturing	27
4.8.3 Pause capturing	27
4.8.4 Changing Output Image Size	27
4.8.5 Changing CROP of Captured Image	27
5. External Interface	28
5.1 Video for Linux Two API	29
5.1.1 ioctl(VIDIOC_QUERYCAP)	31
5.1.2 ioctl(VIDIOC_REQBUFS)	31
5.1.3 ioctl(VIDIOC_G_FMT)	31
5.1.4 ioctl(VIDIOC_S_FMT)	32
5.1.5 ioctl(VIDIOC_TRY_FMT)	32
5.1.6 ioctl(VIDIOC_QUERYCTRL)	32
5.1.7 ioctl(VIDIOC_G_CTRL)	33
5.1.8 ioctl(VIDIOC_S_CTRL)	33
5.1.9 ioctl(VIDIOC_CROPCAP)	33
5.1.10 ioctl(VIDIOC_G_CROP)	34
5.1.11 ioctl(VIDIOC_S_CROP)	34
5.1.12 ioctl(VIDIOC_QUERYBUF)	34
5.1.13 ioctl(VIDIOC_DQBUF)	34
5.1.14 ioctl(VIDIOC_QBUF)	35
5.1.15 ioctl(VIDIOC_STREAMON)	35
5.1.16 ioctl(VIDIOC_STREAMOFF)	35
5.2 Media Controller API	36

CONFIDENTIAL

5.2.1	Show current routing	36
5.2.2	Activate/Deactivate a link	37
5.2.3	Configuring the pipeline and propagate format	38
5.2.4	Deactivate all active links	40
6.	Integration	41
6.1	Directory Configuration	41
6.2	Integration Procedure	42
6.2.1	Video Capture Driver [R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H]	42
6.2.2	I2C Driver	42
6.3	Option Setting	43
6.3.1	Module Parameters	43
6.3.2	Kernel Parameters	46

1. Overview

1.1 Overview

This manual explains the driver module (this module) that controls the VIN on R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H.

1.2 Reference

1.2.1 Standard

The following table shows the standard that this module corresponds.

Table 1.1 Standard of V4L2 API (R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H)

Title	location
Linux Media Infrastructure userspace API	https://linuxtv.org/downloads/v4l-dvb-apis/

1.2.2 Related Document

The following table shows the document related to this module.

Table 1.2 Related documents (R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H)

Number	Issue	Title	Edition	Date
-	Renesas Electronics	R-Car Series, 3rd Generation User's Manual: Hardware	Rev.2.20	Jun. 30, 2020
-	Renesas Electronics	R-Car V3U Series User's Manual	Rev.0.5	Jul. 31, 2020
-	Renesas Electronics	R-CarH3-SiP System Evaluation Board Salvator-X RTP0RC7795SIPB0011S	Rev.1.09	May. 11, 2017
-	Renesas Electronics	R-CarM3-SiP System Evaluation Board Salvator-X RTP0RC7796SIPB0011S	Rev.0.04	Oct. 3, 2016
-	Renesas Electronics	R-CarH3-SiP/M3-SiP/M3N-SiP System Evaluation Board Salvator-XS Hardware Manual	Rev.2.04	Jul. 17, 2018
-	Renesas Electronics	R-CarE3 System Evaluation Board Ebisu Hardware Manual RTP0RC77990SEB0010S	Rev.0.03	Apr. 11, 2018
-	Renesas Electronics	R-CarE3 System Evaluation Board Ebisu-4D (E3 board 4xDRAM) Hardware Manual	Rev.1.01	Jul. 19, 2018
-	Renesas Electronics	R-CarV3U System Evaluation Board Falcon Hardware Manual	Rev.0.01	Sep. 11, 2020
-	Renesas Electronics	R-Car V3H_2 Additional Document for User's Manual: Hardware	Rev.0.50	Jul. 31, 2020
-	Renesas Electronics	R-CarV3H System Evaluation Board Condor-I Hardware Manual	Rev.0.02	Nov. 11, 2020

Table 1.3 Related documents (R-Car H3 / M3 / M3N / E3)

Issue	Title	Edition	Date
Analog Devices	ADV7482 Data Sheet	Rev.0	Jun. 2014
Analog Devices	ADV7481 Reference Manual UG-747	Rev.0	Dec. 2014
Analog Devices	ADV7481 Required Settings *1	Rev. v3.6	Oct. 24, 2014

*1 Please refer to <http://www.analog.com/media/en/engineering-tools/design-tools/ADV7481ES3C-VER.3.6c.txt>

Table 1.4 Related documents (R-Car D3)

Issue	Title	Edition	Date
Analog Devices	ADV7612 Data Sheet	Rev.E	Feb. 23, 2017
Analog Devices	ADV7612 User Guide UG-216	Rev.C	-
Analog Devices	ADV7180 Data Sheet	Rev.J	May. 09, 2017

Table 1.5 Related documents (R-Car V3U)

Please get the data sheet for the MAX96712 yourself.

Table 1.6 Related documents (R-Car V3H)

Please get the data sheet for the MAX9286 yourself

1.3 Restrictions

There are no restrictions.

1.4 Notice

- This module supports only the V4L2 APIs for capture. This module does not guarantee the undescribed V4L2 APIs in this document.
- The channel number of VIN that can operate simultaneously depends on the channel number of CSI2. In the Salvator-X/XS board, VIN can operate simultaneously up to 2 channels, so 2 channels of CSI40 and CSI20 are used.
- R-Car E3 has single 2 lane CSI2.
- CSI2 module name of R-Car E3 is CSI40 (CSI4LNK0), but the module is 2 lane CSI2.
- It is prohibited to simultaneously use the NV12 format with VIN0 and VIN1 by H/W specification. It also applies to VIN4 and VIN5.
- ISP module is not supported (this module control channel selector only).
- The supported camera device in this module is [LI-AR0231-AP0200-GMSL2](#), other cameras devices is not supported.
- The VIN function of BPS and UDS are not supported in V3U/V3H by H/W specification.
- The supported camera for this module is ov10635 of OmniVision.

-
- The R-CarV3H incorporates two MIPI-CSI2 interfaces.
 - R-Car D3 has no CSI2. Therefore, the functions of CSI2 described in this document cannot be used with R-Car D3.

2. Terminology

The following table shows the terminology related to this module.

Table 2.1 Terminology

Terms	Explanation
V4L2	Video For Linux Two
VIN	Video Input module
MIPI	Mobile Industry Processor Interface
CSI-2	Camera Serial Interface 2
CSI40	4 Lane of CSI-2 LINK 0
CSI41	4 Lane of CSI-2 LINK 1
CSI42	4 Lane of CSI-2 LINK 2
CSI43	4 Lane of CSI-2 LINK 3
CSI20	2 Lane of CSI-2 LINK 0
NTSC	National Television System Committee
STP	Shielded Twisted Pair
UDS	Up Down Scalar
BPS	Color Space Conversion B ypass Mode
VC	Virtual Channel
EMB	CSI2 Embedded of Virtual Channel 0

3. Operating Environment

3.1 Hardware Environment

The following table lists the hardware needed to use this module.

Table 3.1 Hardware environment (R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H)

Name	Version	Manufacturer
R-CarH3-SiP System Evaluation Board Salvator-X	-	Renesas Electronics
R-CarM3-SiP System Evaluation Board Salvator-X	-	Renesas Electronics
R-CarH3-SiP/M3-SiP/M3N-SiP System Evaluation Board Salvator-XS	-	Renesas Electronics
R-CarE3 System Evaluation Board Ebisu	-	Renesas Electronics
R-CarE3 System Evaluation Board Ebisu-4D	-	Renesas Electronics
R-CarV3U System Evaluation Board Falcon	-	Renesas Electronics
R-CarV3H System Evaluation Board Condor-I	-	Renesas Electronics
R-CarD3 System Evaluation Board Draak	-	Renesas Electronics

3.2 Module Configuration

The following figure shows the configuration of this module.

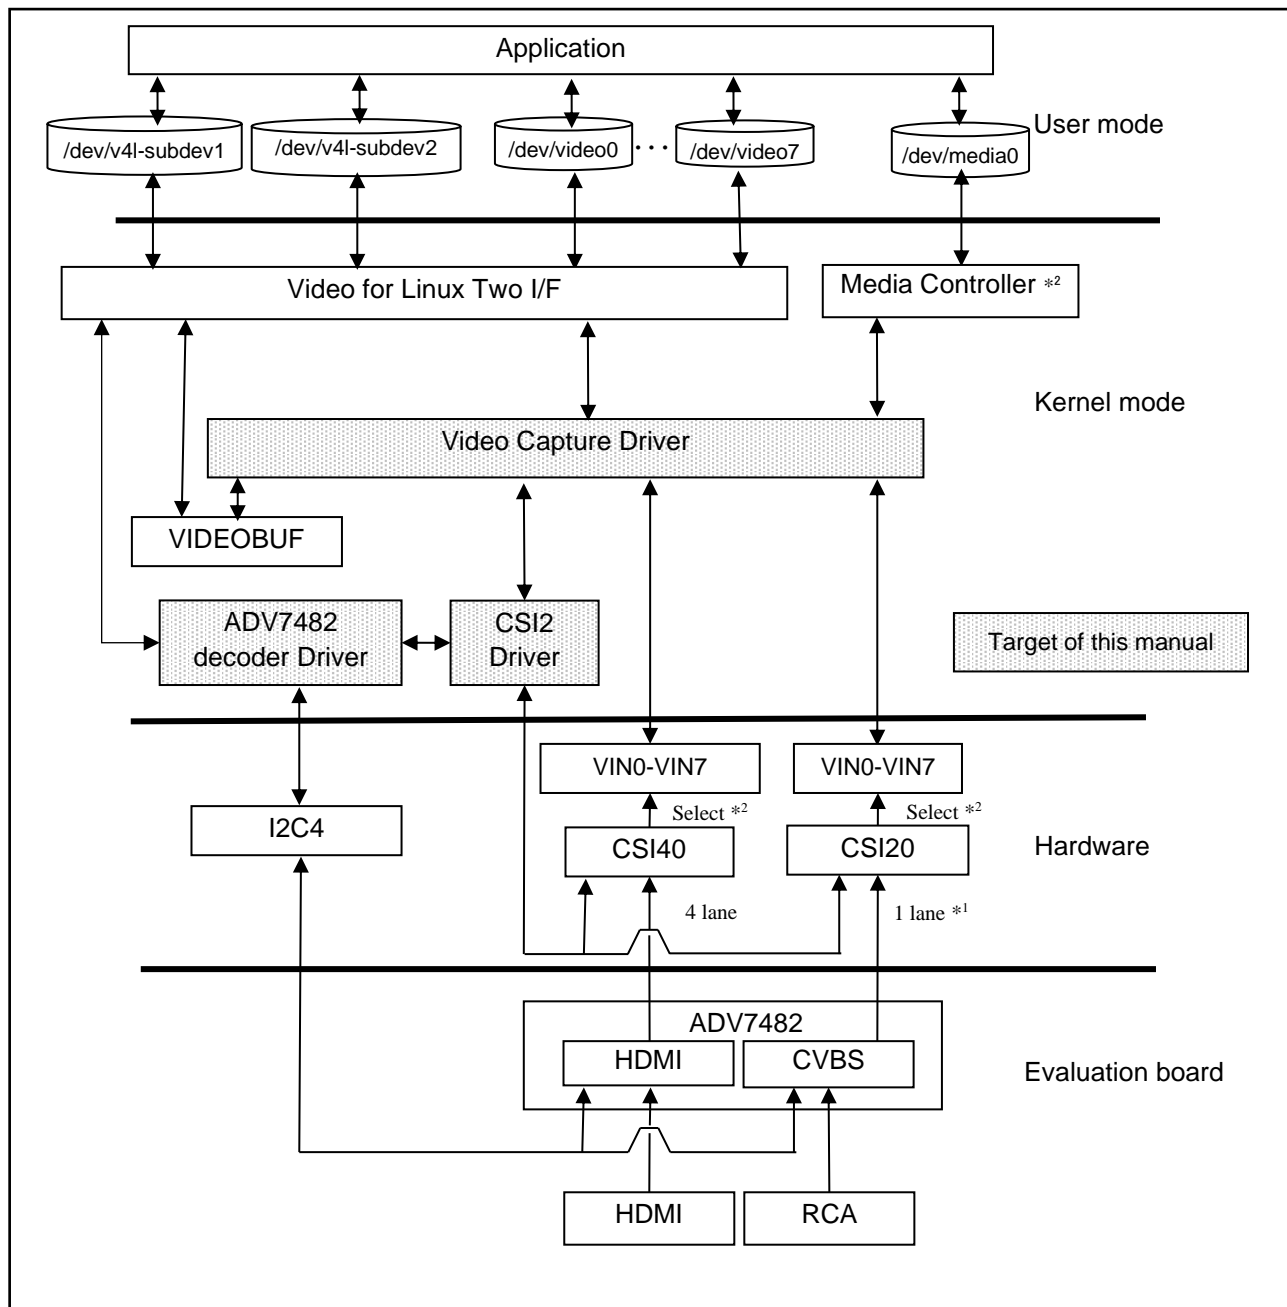


Figure 3.1 Module Configuration (R-Car H3 / M3 / M3N)

*1 CSI20 which has 2 lane is connected to 1 lane only by R-Car H3 / M3 / M3N evaluation board specification.

*2 The channel of the VIN can be selected from CSI2 driver by Media Controller API. Please refer to 4.1 Connected Device in detail and 5.2 Media Controller API

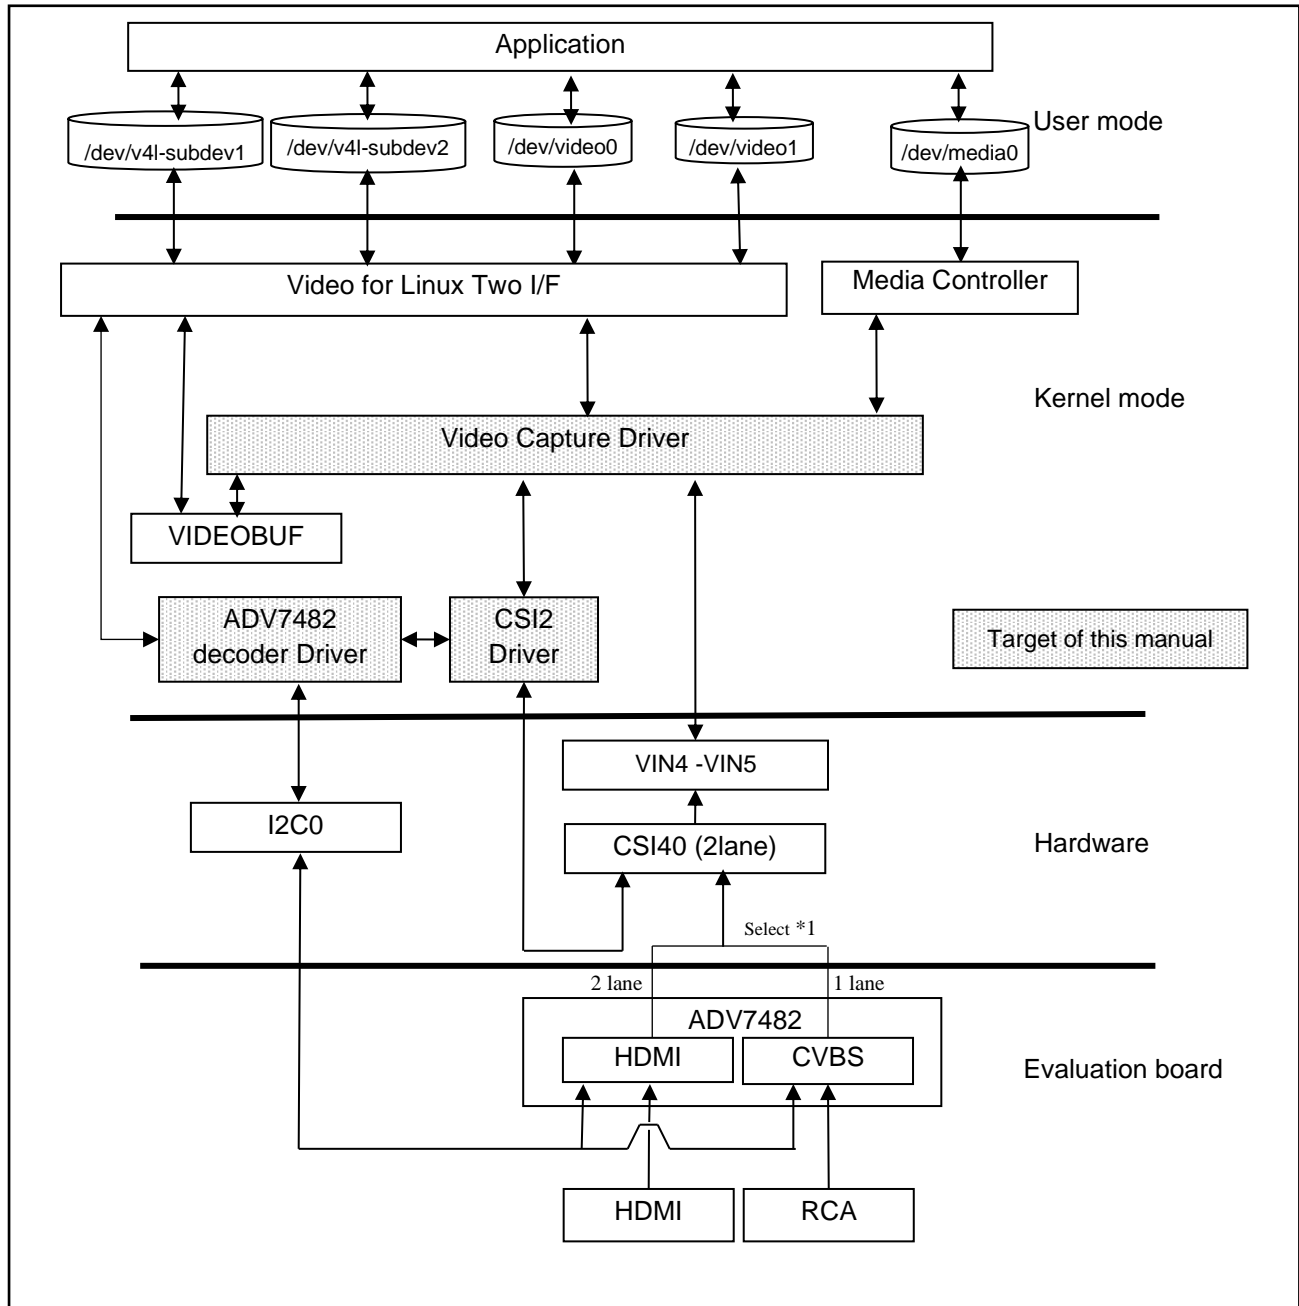


Figure 3.2 Module Configuration (R-Car E3)

*1 The input (HDMI / CVBS) of ADV7482 can be selected by device tree. Please refer to 6.3.1 Module Parameters.

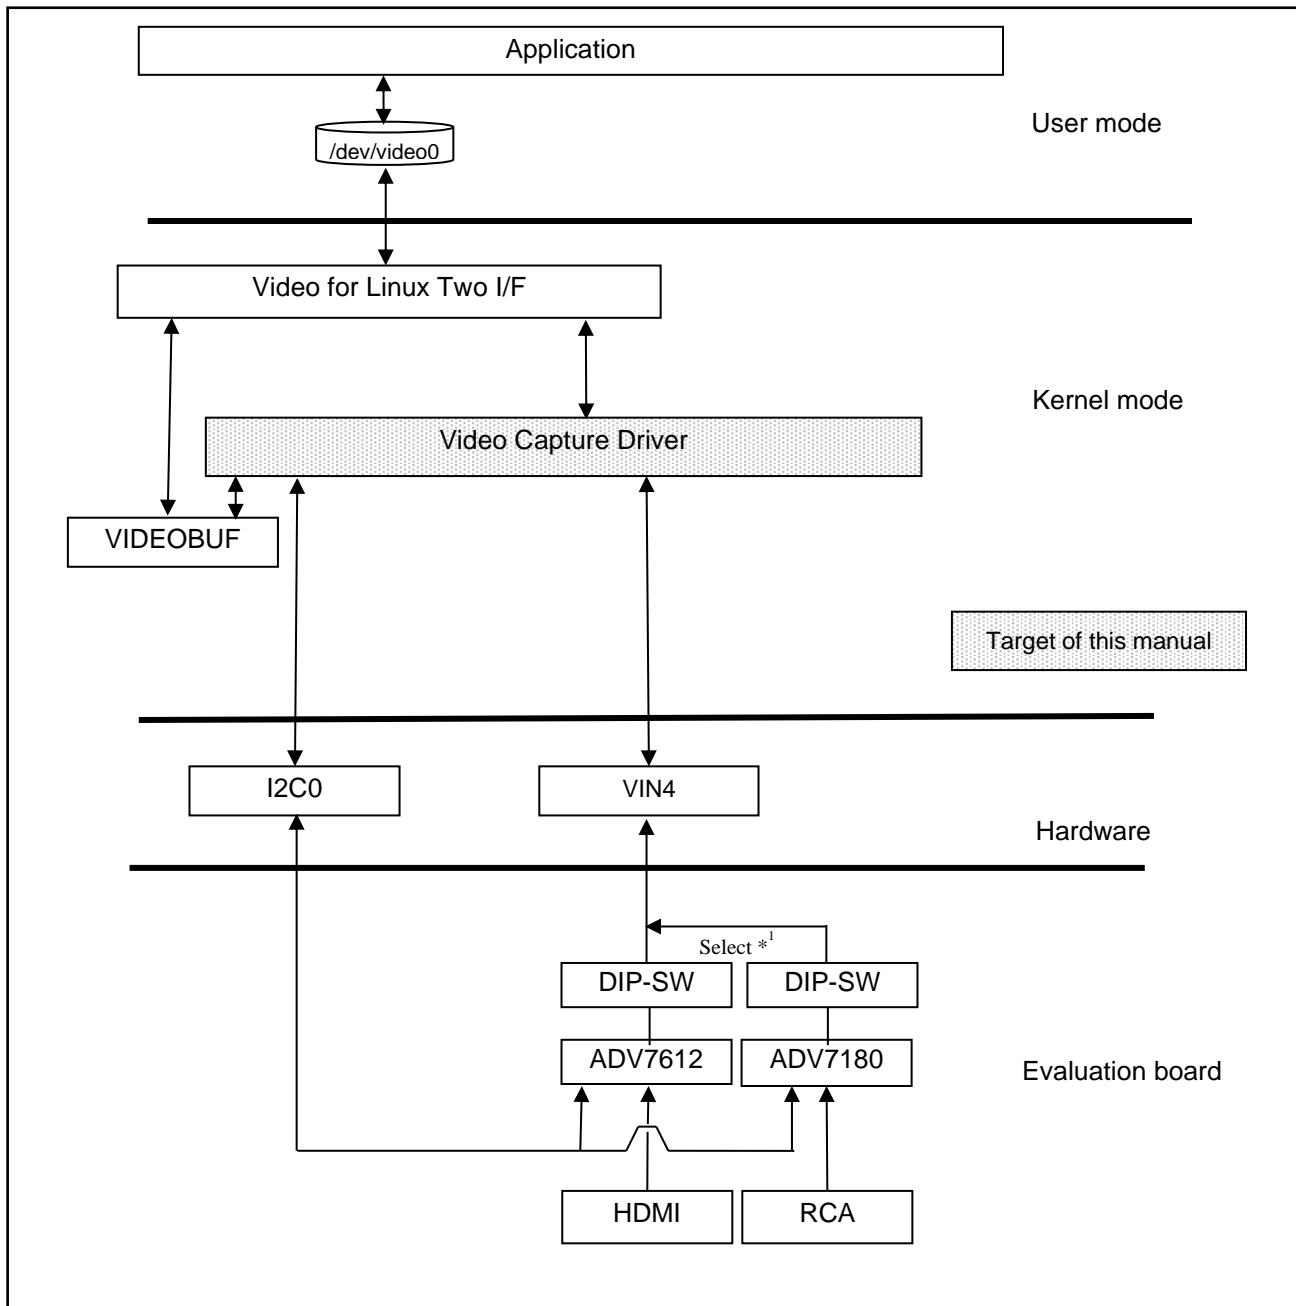


Figure 3.3 Module Configuration (R-Car D3)

*1 Input signal enables one side by the DIP-SW. please refer to [R-Car D3] in 6.3.1 Module Parameters in detail.

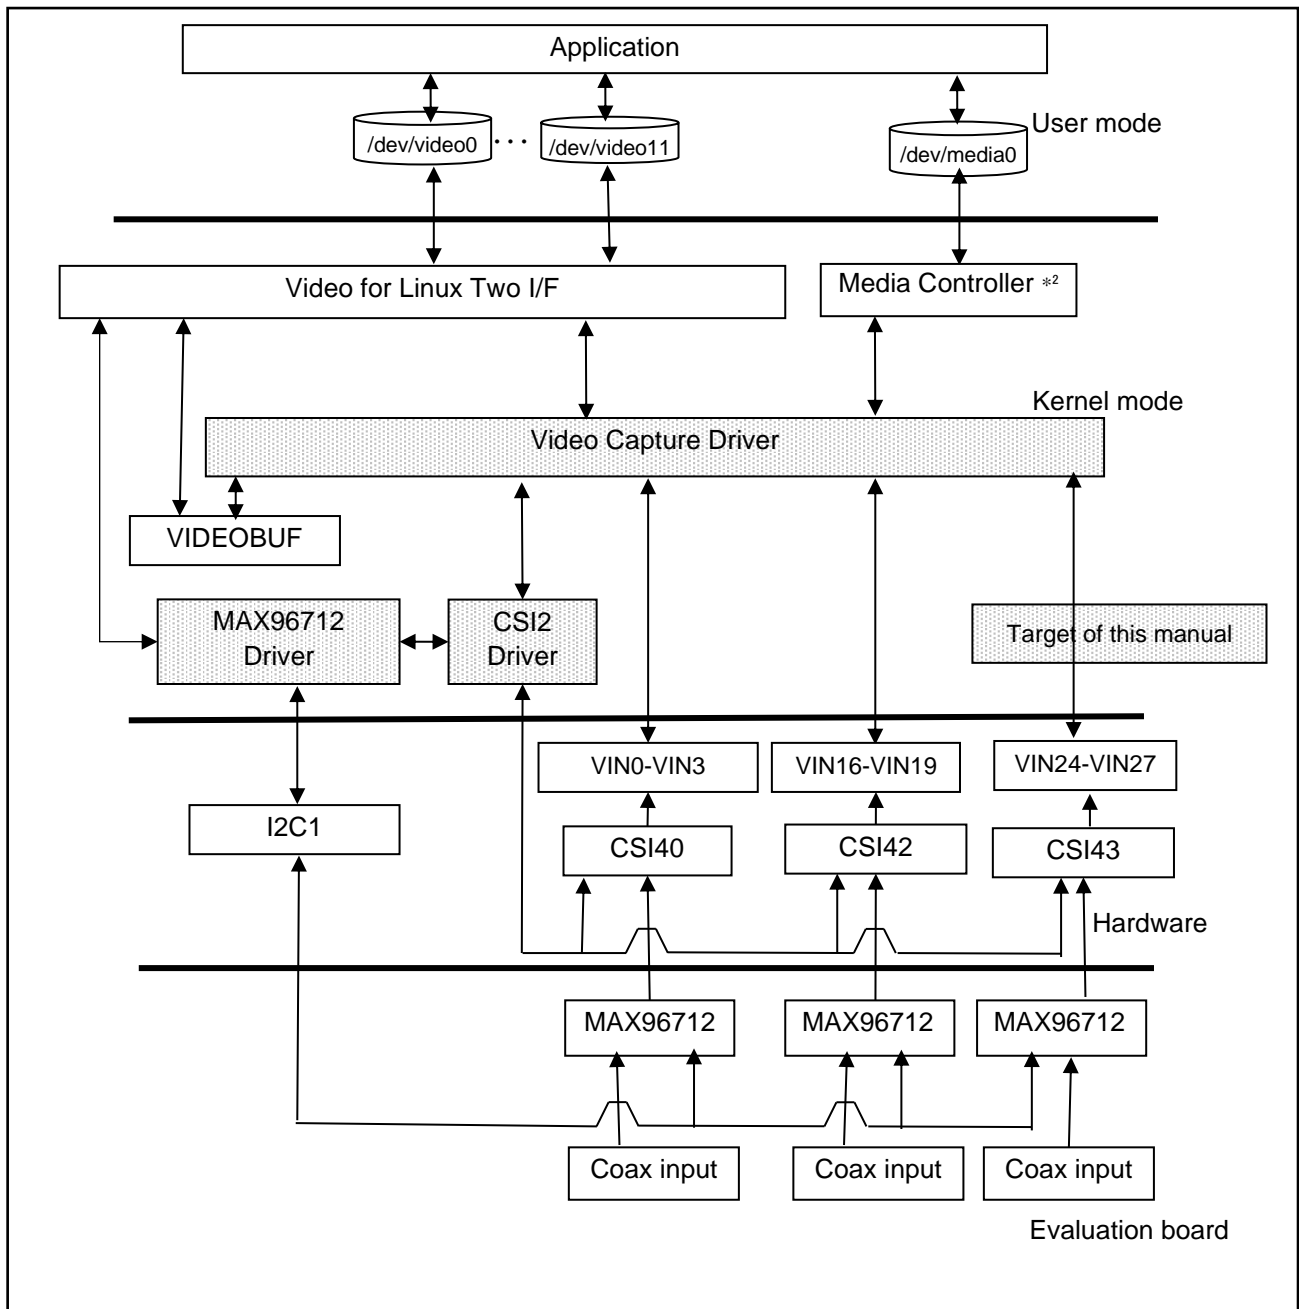


Figure 3.4 Module Configuration (R-Car V3U)

The following figure shows the configuration of this module

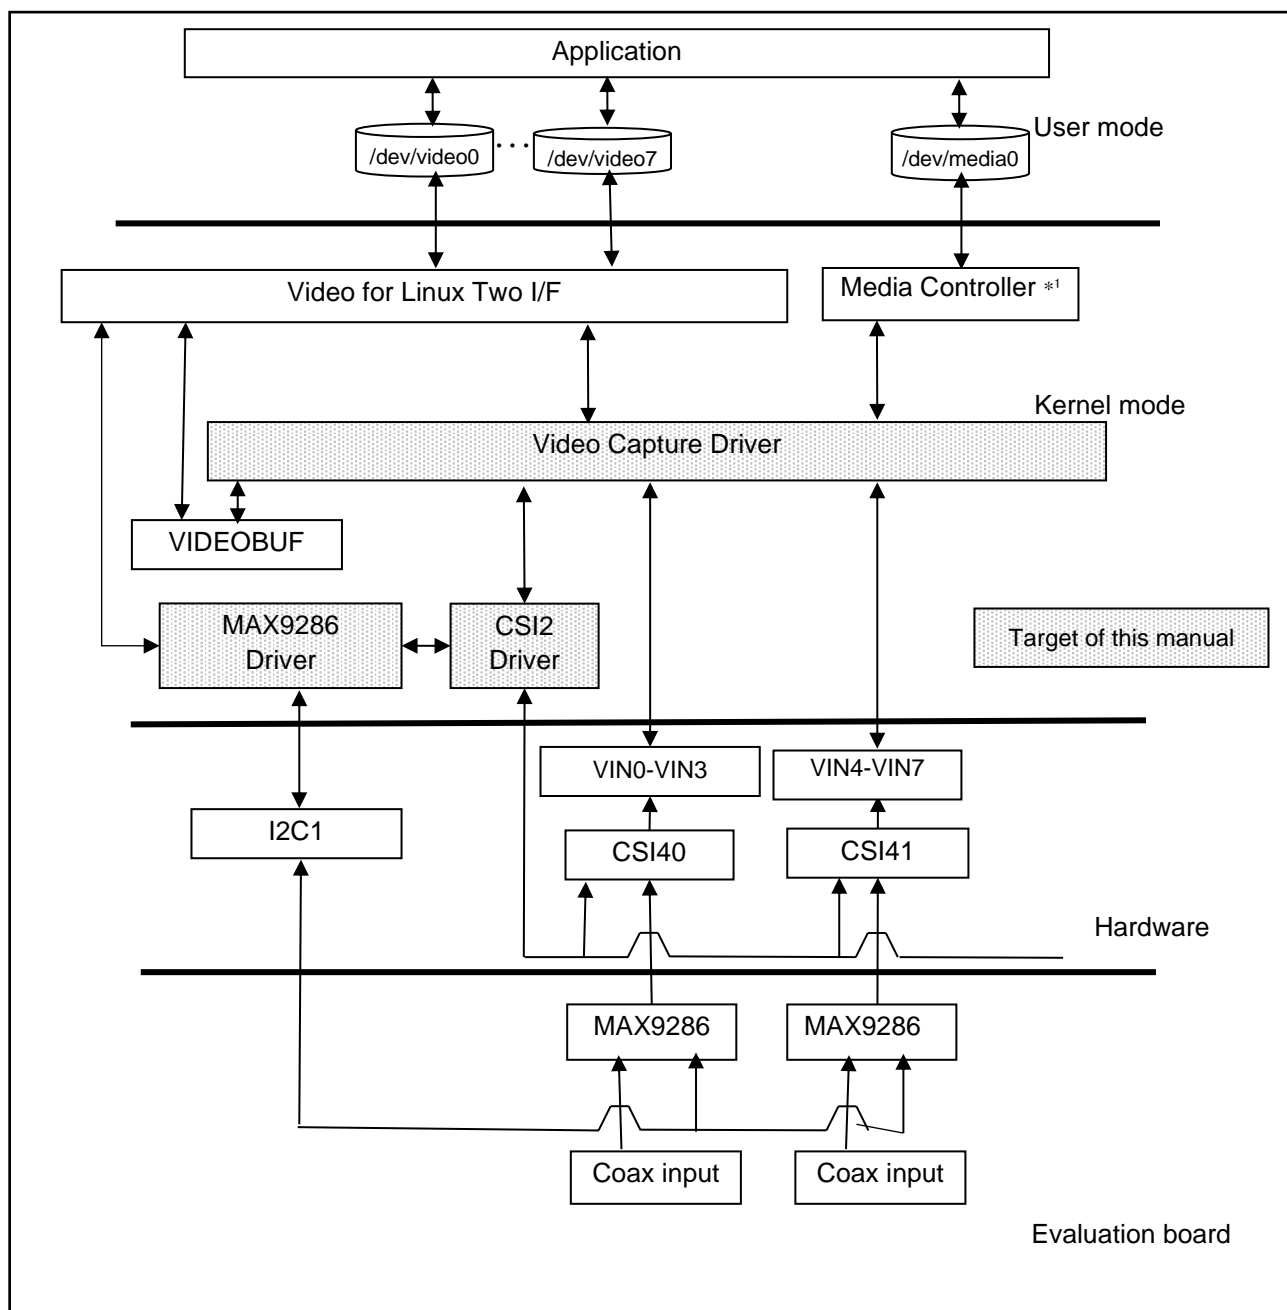


Figure 3.5 Module Configuration (R-Car V3H)

*1 The channel of the VIN can be selected from CSI2 driver by Media Controller API. Please refer to 4.1 Connected Device in detail and 5.2Media Controller API

3.3 State Transition Diagram

There is no state transition diagram for this module.

4. Function

This module controls the VIN and CSI2 on R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H and supports the video capture function. This module supports signals that the NTSC signal, the PAL signal and the HD digital signal that is decoded from the ADV7482 video decoder (R-Car H3 / M3 / M3N / E3).

This module supports serial output from the MAX96712 Deserializer(R-Car V3U).

This module supports serial output from MAX9286 Deserializer(R-Car V3H).

This module supports signals that the NTSC signal, the PAL signal (there are decoded from the ADV7180) and the HD digital signal (from the ADV7612). (R-Car D3)

The input data from the video decoder is transferred to the VIN through MIPI CSI-2 interface. Standard of ITU-R BT.601/BT.656/BT.709/BT.1358 is not supported in V3U.

Capture mode is decided by buffer number, and it becomes continuous frame capture mode by four or more buffer number, and it becomes single frame capture mode by three or less buffer number.

*Buffer number can be specified by 5.1.2 ioctl(VIDIOC_REQBUFS).

4.1 Connected Device

The following tables specify connector connected to Video Capture on the R-Car H3 / M3 / M3N evaluation board. CSI40 is used at CN20. CSI20 is used at CN21.

Table 4.1 Video Capture connection (R-Car H3)

Channel	Video Input Connector	Supporting Status	Scaling (UDS) support	Remark
VIN0	CN20 or CN21	Yes	Yes*1	HDMI / CVBS Receiver ADV7482
VIN1	CN20 or CN21	Yes	Yes*1	HDMI / CVBS Receiver ADV7482
VIN2	CN20 or CN21	Yes	No	HDMI / CVBS Receiver ADV7482
VIN3	CN20 or CN21	Yes	No	HDMI / CVBS Receiver ADV7482
VIN4	CN21	Yes	Yes*1	CVBS Receiver ADV7482
VIN5	CN21	Yes	Yes*1	CVBS Receiver ADV7482
VIN6	CN21	Yes	No	CVBS Receiver ADV7482
VIN7	CN21	Yes	No	CVBS Receiver ADV7482

Table 4.2 Video Capture connection (R-Car M3 / M3N)

Channel	Video Input Connector	Supporting Status	Scaling (UDS) support	Remark
VIN0	CN20 or CN21	Yes	Yes*1	HDMI / CVBS Receiver ADV7482
VIN1	CN20 or CN21	Yes	Yes*1	HDMI / CVBS Receiver ADV7482
VIN2	CN20 or CN21	Yes	No	HDMI / CVBS Receiver ADV7482
VIN3	CN20 or CN21	Yes	No	HDMI / CVBS Receiver ADV7482
VIN4	CN20 or CN21	Yes	Yes*1	HDMI / CVBS Receiver ADV7482
VIN5	CN20 or CN21	Yes	Yes*1	HDMI / CVBS Receiver ADV7482
VIN6	CN20 or CN21	Yes	No	HDMI / CVBS Receiver ADV7482

Channel	Video Input Connector	Supporting Status	Scaling (UDS) support	Remark
VIN7	CN20 or CN21	Yes	No	HDMI / CVBS Receiver ADV7482

Table 4.3 Video Capture connection (R-Car E3)

Channel	Video Input Connector	Supporting Status	Scaling (UDS) support	Remark
VIN4	CN20 or CN21	Yes	Yes*1	HDMI / CVBS Receiver ADV7482
VIN5	CN20 or CN21	Yes	Yes*1	HDMI / CVBS Receiver ADV7482

Note *1 The UDS module has two in VIN hardware. The first UDS is used in common by VIN0 and VIN1. The second UDS is used in common by VIN4 and VIN5. For use in common, it is prohibited that VIN0 and VIN1 is scaling at the same time. It is similar about VIN4 and VIN5.

Table 4.4 Video Capture connection (R-Car D3)

Channel	Video Input Connector	Supporting Status	Scaling (UDS) support	Remark
VIN4	CN42 or CN51	Yes	Yes	HDMI Receiver ADV7612 Video Processor ADV7180 Input signal is select by the DIP-SW.

Table 4.5 Video Capture connection (R-Car V3U)

Channel	Video Input Connector	Supporting Status on Falcon board	Scaling (UDS) support	Remark
VIN0	CN4	Yes	No	Max96712 Deserializer
VIN1	CN4	Yes	No	Max96712 Deserializer
VIN2	CN4	Yes	No	Max96712 Deserializer
VIN3	CN4	Yes	No	Max96712 Deserializer
VIN4	-	No	No	
VIN5	-	No	No	
VIN6	-	No	No	
VIN7	-	No	No	
VIN8	-	No	No	
VIN9	-	No	No	
VIN10	-	No	No	
VIN11	-	No	No	
VIN12	-	No	No	
VIN13	-	No	No	
VIN14	-	No	No	
VIN15	-	No	No	

Channel	Video Input Connector	Supporting Status on Falcon board	Scaling (UDS) support	Remark
VIN16	CN5	Yes	No	Max96712 Deserializer
VIN17	CN5	Yes	No	Max96712 Deserializer
VIN18	CN5	Yes	No	Max96712 Deserializer
VIN19	CN5	Yes	No	Max96712 Deserializer
VIN20	-	No	No	
VIN21	-	No	No	
VIN22	-	No	No	
VIN23	-	No	No	
VIN24	CN6	Yes	No	Max96712 Deserializer
VIN25	CN6	Yes	No	Max96712 Deserializer
VIN26	CN6	Yes	No	Max96712 Deserializer
VIN27	CN6	Yes	No	Max96712 Deserializer
VIN28	-	No	No	
VIN29	-	No	No	
VIN30	-	No	No	
VIN31	-	No	No	

Table 4.6 Video Capture connection (R-Car V3H)

Channel	Video Input Connector	Supporting Status	Scaling (UDS) support	Remark
VIN0	CN6	Yes	No	Max9286 Deserializer
VIN1	CN7	Yes	No	Max9286 Deserializer
VIN2	CN8	Yes	No	Max9286 Deserializer
VIN3	CN9	Yes	No	Max9286 Deserializer
VIN4	CN27	Yes	No	Max9286 Deserializer
VIN5	CN28	Yes	No	Max9286 Deserializer
VIN6	CN29	Yes	No	Max9286 Deserializer
VIN7	CN30	Yes	No	Max9286 Deserializer
VIN8	-	No	No	
VIN9	-	No	No	
VIN10	-	No	No	
VIN11	-	No	No	
VIN12	-	No	No	
VIN13	-	No	No	
VIN14	-	No	No	
VIN15	-	No	No	

The following table shows the connection table of the VIN, CSI2 and virtual channel. This module supports only the following connection by H/W specification. Please refer to 5.2 Media Controller API and 6.3.1 Module Parameters for the selection method.

About the combination of VIN3 from VIN0, please choose from No.5 to No.1. About the combination of VIN7 from VIN4, please choose from No.10 to No.6. If you select No.1, it determines connection of VIN0 (CSI40/VC0), VIN1 (CSI20/VC0), VIN2 (CSI21/VC0) and VIN3 (CSI40/VC1) automatically.

Make sure to set the VIN and CSI routing with media-ctl before executing capture.

Table 4.7 Connection of Video Capture and CSI2 (R-Car H3)

No.	VIN0	VIN1	VIN2	VIN3	CSI_CHSEL bit value
1	CSI40/VC0	CSI20/VC0	CSI20/VC1	CSI40/VC1	0
2	CSI20/VC0	CSI40/VC1	CSI40/VC0	CSI20/VC1	1
3	CSI40/VC1	CSI40/VC0	CSI20/VC0	CSI20/VC1	2
4	CSI40/VC0	CSI40/VC1	CSI40/VC2	CSI40/VC3	3
5	CSI20/VC0	CSI20/VC1	CSI20/VC2	CSI20/VC3	4
No.	VIN4	VIN5	VIN6	VIN7	CSI_CHSEL bit value
6	CSI41/VC0	CSI20/VC0	CSI20/VC1	CSI41/VC1	0
7	CSI20/VC0	CSI41/VC1	CSI41/VC0	CSI20/VC1	1
8	CSI41/VC1	CSI41/VC0	CSI20/VC0	CSI20/VC1	2
9	CSI41/VC0	CSI41/VC1	CSI41/VC2	CSI41/VC3	3
10	CSI20/VC0	CSI20/VC1	CSI20/VC2	CSI20/VC3	4

Table 4.8 Connection of Video Capture and CSI2 (R-Car M3)

No.	VIN0	VIN1	VIN2	VIN3	CSI_CHSEL bit value
1	CSI40/VC0	CSI20/VC0	-	CSI40/VC1	0
2	CSI20/VC0	-	CSI40/VC0	CSI20/VC1	1
3	-	CSI40/VC0	CSI20/VC0	-	2
4	CSI40/VC0	CSI40/VC1	CSI40/VC2	CSI40/VC3	3
5	CSI20/VC0	CSI20/VC1	CSI20/VC2	CSI20/VC3	4
No.	VIN4	VIN5	VIN6	VIN7	CSI_CHSEL bit value
6	CSI40/VC0	CSI20/VC0	-	CSI40/VC1	0
7	CSI20/VC0	-	CSI40/VC0	CSI20/VC1	1
8	-	CSI40/VC0	CSI20/VC0	-	2
9	CSI40/VC0	CSI40/VC1	CSI40/VC2	CSI40/VC3	3
10	CSI20/VC0	CSI20/VC1	CSI20/VC2	CSI20/VC3	4

Table 4.9 Connection of Video Capture and CSI2 (R-Car M3N)

No.	VIN0	VIN1	VIN2	VIN3	CSI_CHSEL bit value
1	CSI40/VC0	CSI20/VC0	CSI20/VC1	CSI40/VC1	0
2	CSI20/VC0	CSI40/VC1	CSI40/VC0	CSI20/VC1	1

No.	VIN0	VIN1	VIN2	VIN3	CSI_CHSEL bit value
1	CSI40/VC0	CSI20/VC0	CSI20/VC1	CSI40/VC1	0
3	CSI40/VC1	CSI40/VC0	CSI20/VC0	CSI20/VC1	2
4	CSI40/VC0	CSI40/VC1	CSI40/VC2	CSI40/VC3	3
5	CSI20/VC0	CSI20/VC1	CSI20/VC2	CSI20/VC3	4
No.	VIN4	VIN5	VIN6	VIN7	CSI_CHSEL bit value
6	CSI40/VC0	CSI20/VC0	CSI20/VC1	CSI40/VC1	0
7	CSI20/VC0	CSI40/VC1	CSI40/VC0	CSI20/VC1	1
8	CSI40/VC1	CSI40/VC0	CSI20/VC0	CSI20/VC1	2
9	CSI40/VC0	CSI40/VC1	CSI40/VC2	CSI40/VC3	3
10	CSI20/VC0	CSI20/VC1	CSI20/VC2	CSI20/VC3	4

Table 4.10 Connection of Video Capture and CSI2 (R-Car E3)

No.	VIN4	VIN5	CSI_CHSEL bit value
1	CSI40/VC0	-	0
2	-	CSI40/VC1	1
3	CSI40/VC1	CSI40/VC0	2
4	CSI40/VC0	CSI40/VC1	3

Table 4.11 Connection of Video Capture and CSI2 (R-Car V3U)

No.	VIN0	VIN1	VIN2	VIN3
1	CSI40/VC0	CSI40/VC1	CSI40/VC2	CSI40/VC3
No.	VIN16	VIN17	VIN18	VIN19
1	CSI42/VC0	CSI42/VC1	CSI42/VC2	CSI42/VC3
No.	VIN24	VIN25	VIN26	VIN27
1	CSI43/VC0	CSI43/VC1	CSI43/VC2	CSI43/VC3

Above is default setting statically on Falcon board (R-Car V3U).

4.2 Input / Output Format

The following table shows the Input/output format for this module.

Table 4.12 Input/output format (R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H)

Input format for VIN / CSI2		HDMI output formats from ADV7482	CVBS output formats from ADV7482	HDMI output formats from ADV7612	CVBS output formats from ADV7180	Output formats from MAX96712	Media bus pixel code that this module supports
Width of bits	Data format						
8bit	YCbCr422	No	Yes	No	Yes	No	MEDIA_BUS_FMT_UYVY8_2X8
10bit	RAW10	No	No	No	No	Yes	MEDIA_BUS_FMT_Y10_1X10 *1
24bit	RGB-888	Yes	No	Yes	No	No	MEDIA_BUS_FMT_RGB888_1X24
8bit	8-bit user defined data	No	No	No	No	No	-

*1 This is the MEDIA_BUS_FMT flag that is tentatively used instead of RAW10 input format in the V4L2 framework.

Table 4.13 Output format (R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H)

Output formats from VIN *4	Output formats for this module	Pixel format definition macro in V4L2
RGB565	Yes	V4L2_PIX_FMT_RGB565
YUYV	Yes	V4L2_PIX_FMT_YUYV
UYVY	Yes	V4L2_PIX_FMT_UYVY
ARGB1555	Yes	V4L2_PIX_FMT_ARGB555
RGB888 (32bits/pixel)	Yes	V4L2_PIX_FMT_XBGR32
ARGB8888	Yes	V4L2_PIX_FMT_ABGR32
NV16*1	Yes	V4L2_PIX_FMT_NV16
NV12*2 *3	Yes	V4L2_PIX_FMT_NV12
RAW10 *5	Yes	V4L2_PIX_FMT_Y10 *6

Notes: *1 At the time of NV16 format specification, the capture output width should be specified the value of the multiple of 32 by the specification of H/W. If it is not a multiple of 32, round it to a multiple of 32.

*2 At the time of NV12 format specification, the capture output width should be specified the value of the multiple of 32 by the specification of H/W. If it is not a multiple of 32, round it to a multiple of 32. the capture output height should be specified the vertical value of the input image size. Scaling is forbidden with NV12 format by the specification of H/W.

*3 Use of NV12 format is prohibited in VIN2, VIN3, VIN6 and VIN7 by the specification of H/W.

*4 This module is not supported other than output format format of above table.

*5 RAW10 is supported at V3U only.

*6 This is the V4L2_PIX_FMT flag that is tentatively used instead of RAW10 output format in the V4L2 framework..

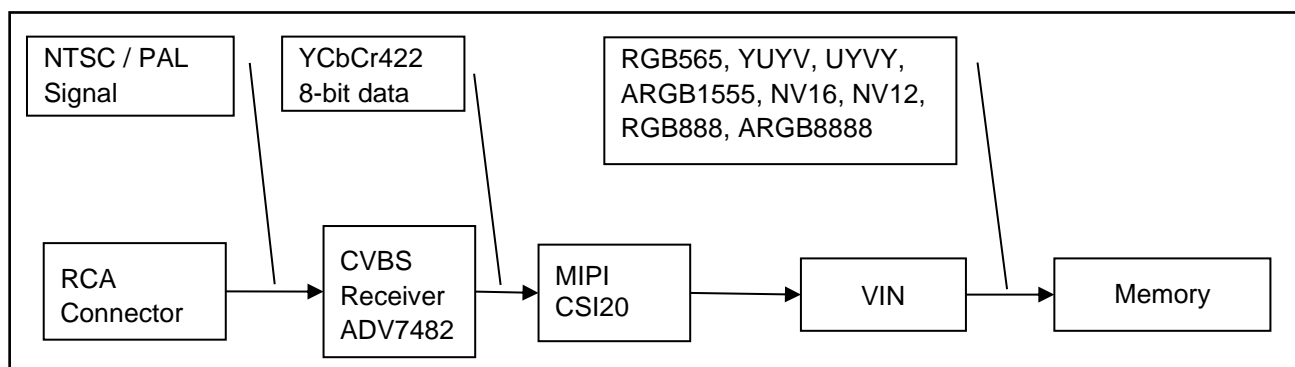


Figure 4.1 Flow of analog data (R-Car H3 / M3 / M3N and Salvator-X board)

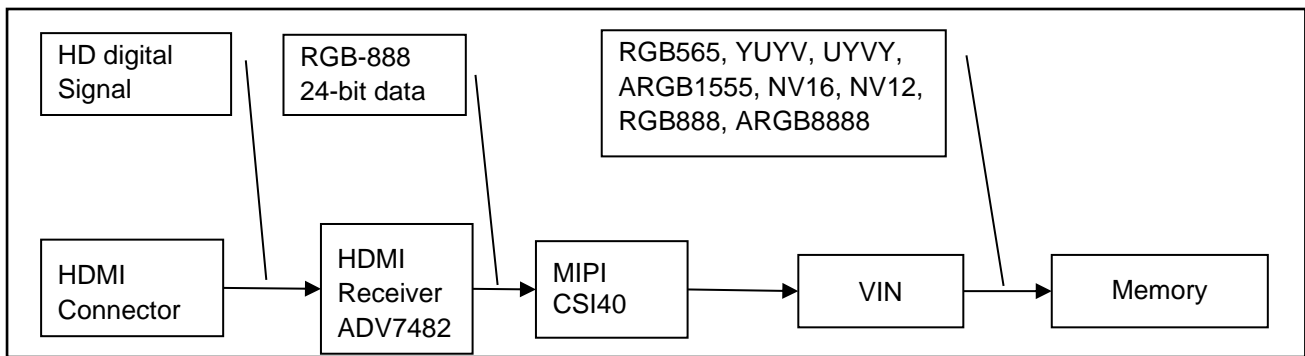


Figure 4.2 Flow of digital data (R-Car H3 / M3 / M3N and Salvator-X board)

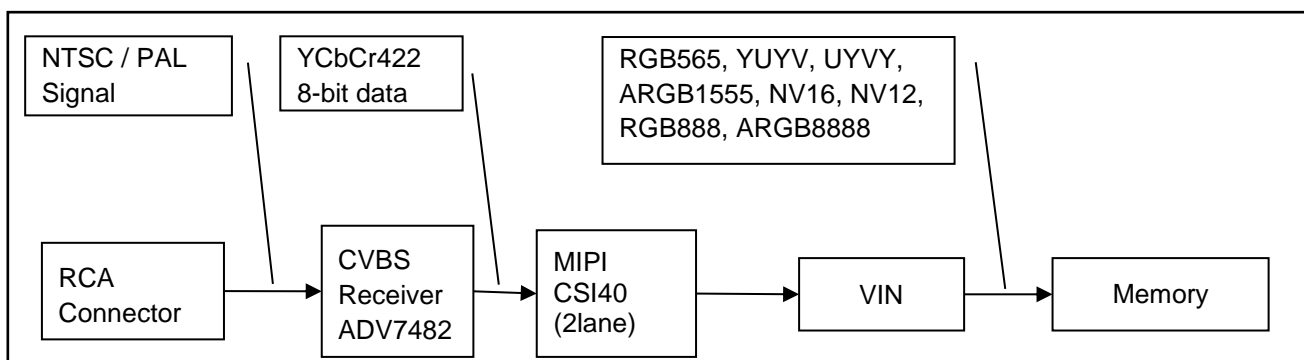


Figure 4.3 Flow of analog data (R-Car E3 and Ebus board)

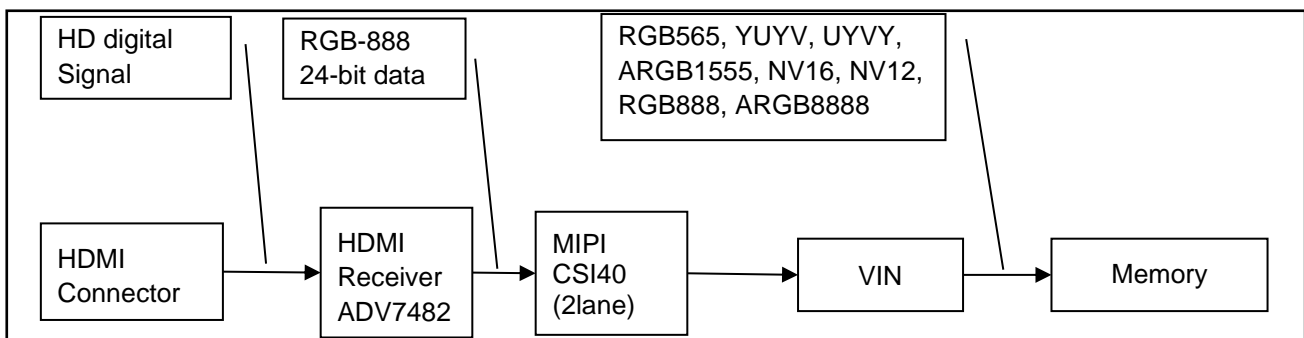


Figure 4.4 Flow of digital data (R-Car E3 and Ebus board)

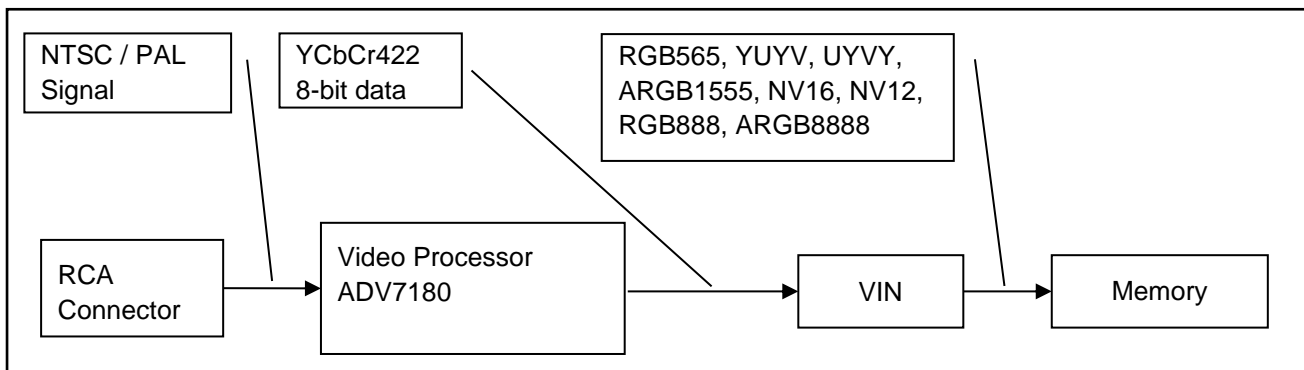


Figure 4.5 Flow of analog data (R-Car D3 and Draak board)

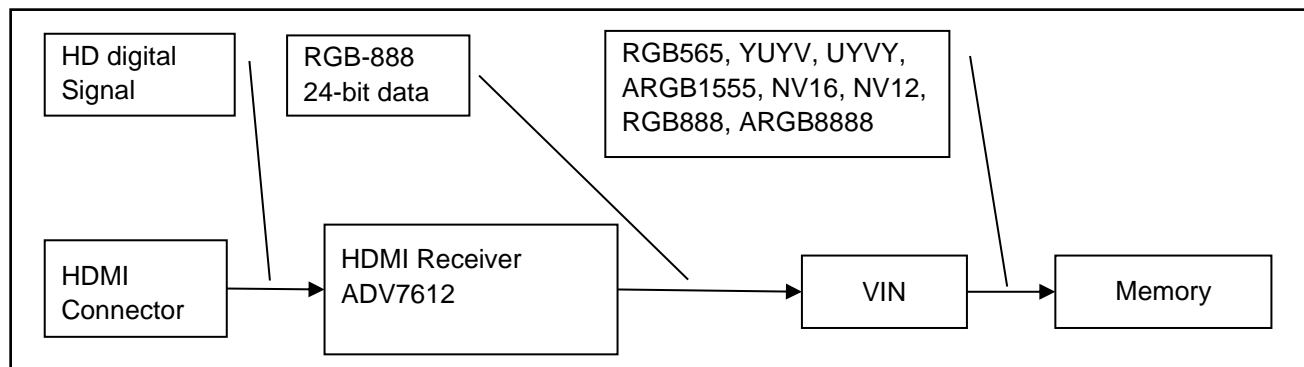


Figure 4.6 Flow of digital data (R-Car D3 and Draak board)

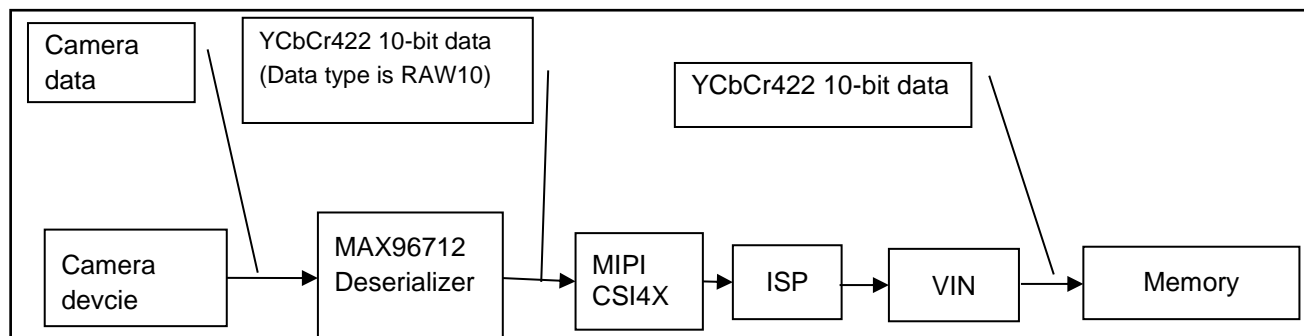


Figure 4.7 Flow of digital data (R-Car V3U and evaluation board)

This is the case when the Camera device is LI-AR0231-AP0200-GMSL2.

Notice: The datatype of LI-AR0231-AP0200-GMSL2 is RAW10, but the data inside is YCbCr422 10-bit data.

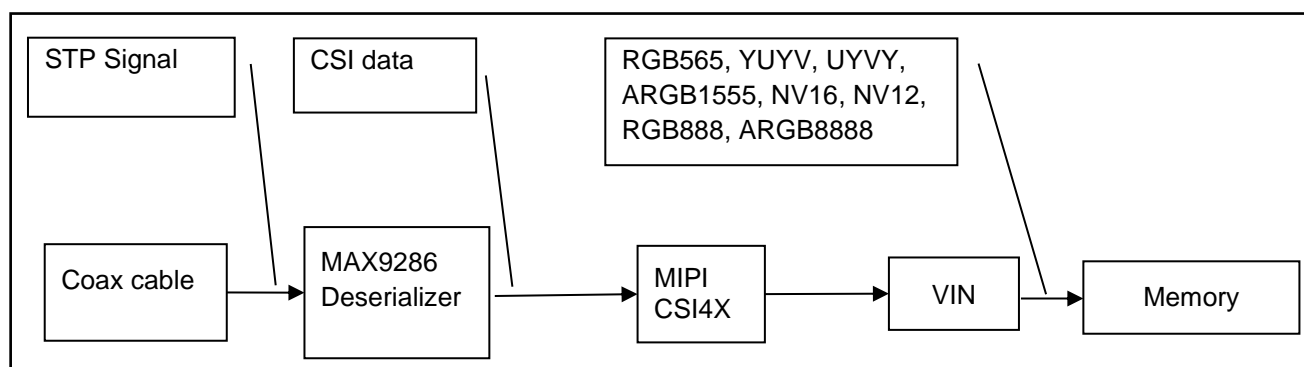


Figure 4.8 Flow of digital data (R-Car V3H and evaluation board)

4.3 Input Resolution

The following table shows the input resolution for this module.

Table 4.14 Input resolution [R-Car H3 / M3 / M3N / E3 / D3]

Input resolution for this module	HDMI connector	RCA connector
1920x1080p @ 60Hz	Yes*1	No
1920x1080i @ 60Hz	Yes	No
1280x720p @ 60Hz	Yes	No
720x480p @ 60Hz	Yes	No
640x480p @ 60Hz	Yes	No
720x576p @ 50Hz	Yes	No
720x480i @ 60Hz (NTSC signal)	No	Yes
720x576i @ 50Hz (PAL signal)	No	Yes

Notes: *1 1920x1080p@60Hz is not supported in R-Ca E3 / D3.

Table 4.15 Input resolution [R-Car V3U]

Input resolution for this module	Coax Cable
1920x1020p @ 30Hz*1	Yes

Notes: *1 Other resolutions may be able to captured, but the camera device on Falcon board can only evaluate and support 1920x1020 resolution. The refresh rate may decrease when operating multiple channels at the same time.

Table 4.16 Input resolution [R-Car V3H]

Input resolution for this module	Coax Cable
1280x1080p @ 30Hz	Yes*1

Notes: *1 Other resolutions can be captured, but the Condor I board can only evaluate and support 1280x1080 resolution.

4.4 Clipping and Scaling

This module supports clipping and scaling using the hardware function of the VIN. As shown in the Figure 4.9, the VIN input image is clipped first and then scaled to the size of output image. The scaling function by NV12 format is forbidden by the specification of H/W. The horizontal scaling should be specified the value of multiple of 16 (NV16 format should be specified the value of multiple of 32. If it is not a multiple of 32, round it to a multiple of 32.).

- VIN input image

The input resolution of the VIN input image (maximum 1920x1080) depends on the input device such as video decoder.

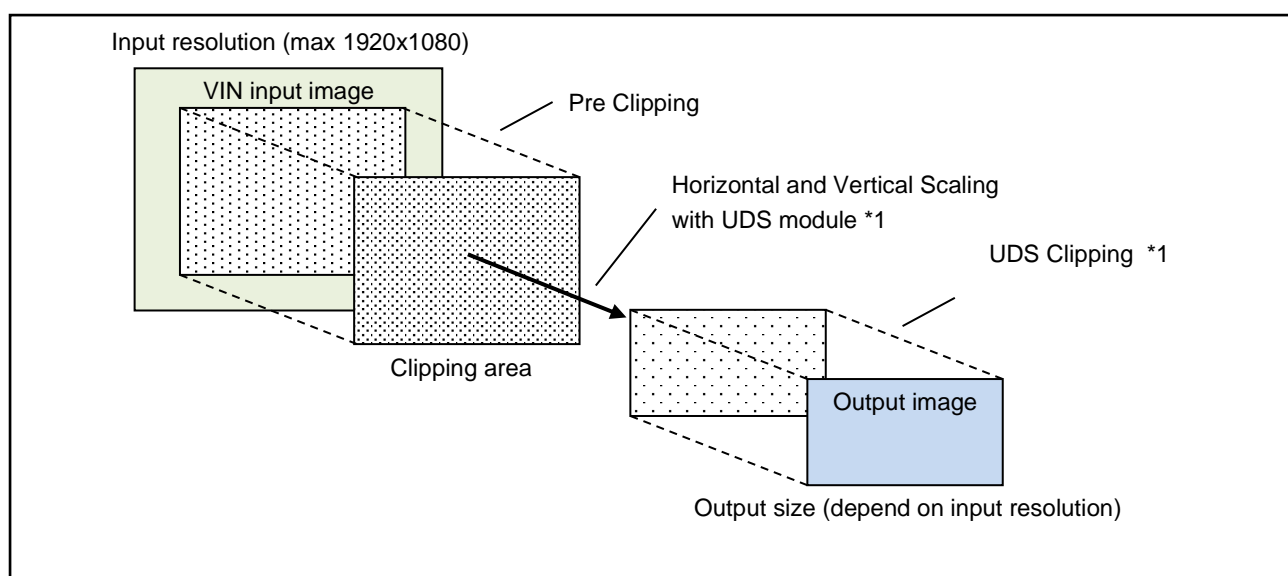


Figure 4.9 Clipping and Scaling function (R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H)

*1 UDS is not supported in V3U by H/W specification.

Scaling size is dependent on the input resolution. It indicates that information in the following.

Table 4.17 scaling size on the input resolution

Input resolution	Scale down minimum size of output image	Scale up maximum size of output image
1920x1080p @ 60Hz (cannot scaling up)	128x68p	1920x1080p
1920x1080i @ 60Hz (cannot scaling up)	128x68i	1920x1080i
1280x720p @ 60Hz	96x45p	1920x1080p
1280x800p @ 60Hz	96x50p	1920x1080p
720x480p @ 60Hz	64x30p	1440x1080p
640x480p @ 60Hz	64x30p	1280x1080p
720x576p @ 50Hz	64x36p	1440x1080p
720x480i @ 60Hz (NTSC signal)	64x30i	1440x1080i
720x576i @ 50Hz (PAL signal)	64x36i	1440x1080i

- Clipping area

The clipping area is set with VIDIOC_S_CROP interface of V4L2. Relations of the input image and VIDIOC_S_CROP are described below.

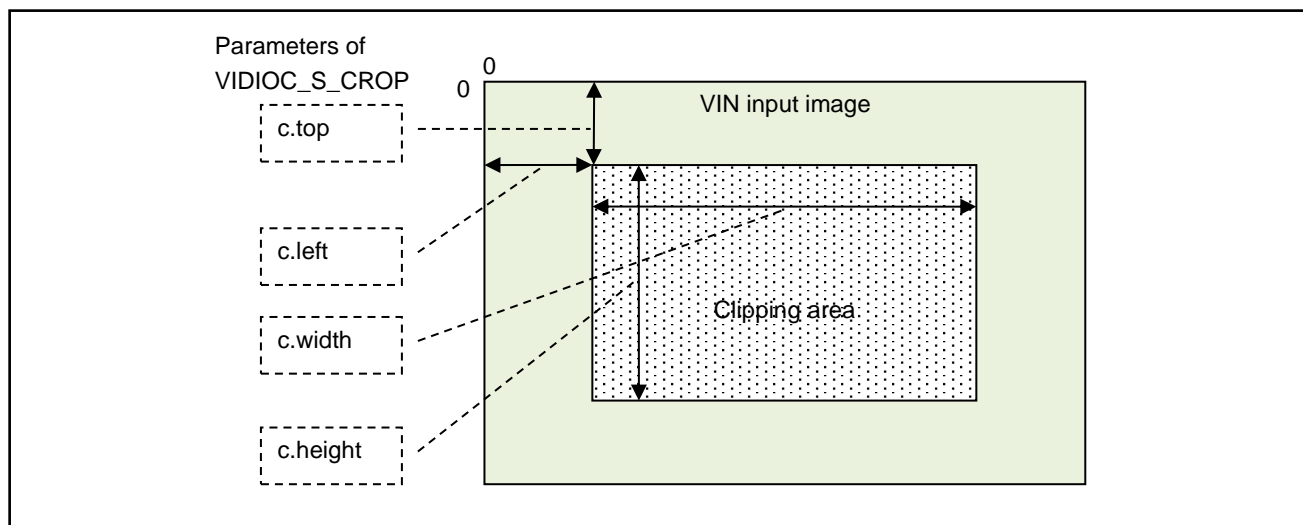


Figure 4.10 Relations of the VIN input image and VIDIOC_S_CROP (R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H)

- Output image

It is the image stored in the capture buffer. The output image size is set by VIDIOC_S_FMT interface of V4L2. Relations of the output image and VIDIOC_S_FMT are described below.

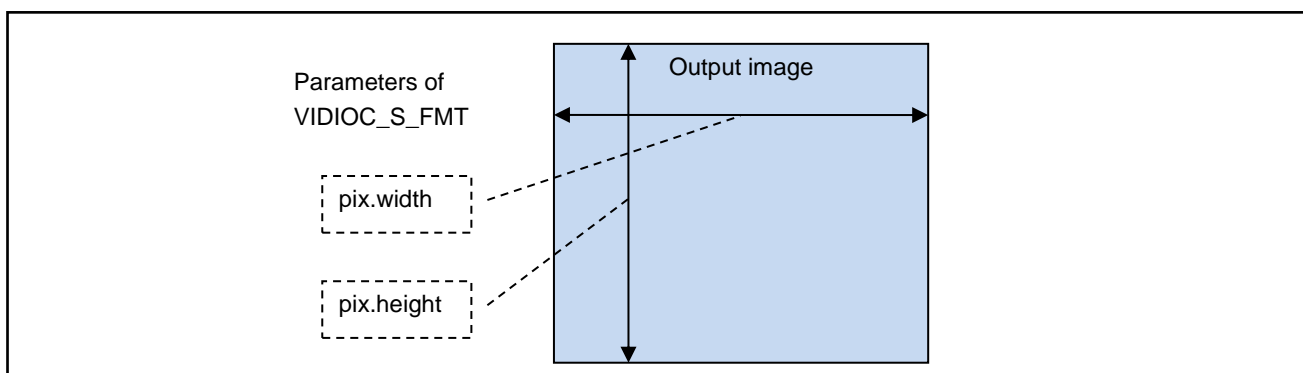


Figure 4.11 Relations of the VIN input image and VIDIOC_S_FMT (R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H)

At the time of scaling, Please refer to **Table 4.17** about the setting value of pix.width and pix.height.

This module performs scaling against the clipping area to fit the output image.

Notice: At the time of horizontal scaling, pix.width should be specified the value of multiple of 16 (NV16 format should be specified the value of multiple of 32. If it is not a multiple of 32, round it to a multiple of 32.). Scaling of NV12 format is prohibited by H/W specification. pix.height should be specified the vertical value of input image size. If the pix.height value is greater than the input size, the extra data will be captured. If the pix.height value is set smaller than the input size, the capture data will be distorted or clipped.

4.5 Hardware Parameters

This module supports VIDIOC_S_CTRL. Using this interface, the hardware control parameters of the video decoder (adv7482) can be set. The following tables show the hardware control parameters which can be set.

Table 4.18 Hardware CVBS input control of ADV7482 receiver (R-Car H3 / M3 / M3N / E3)

Item	V4L2 Command ID	Minimum	Default	Maximum
Contrast	V4L2_CID_CONTRAST	0	128	255
Brightness	V4L2_CID_BRIGHTNESS	-128	0	127
Hue	V4L2_CID_HUE	-127	0	128
Saturation	V4L2_CID_SATURATION	0	128	255

Table 4.19 Hardware HDMI input control of ADV7482 receiver (R-Car H3 / M3 / M3N / E3)

Item	V4L2 Command ID	Minimum	Default	Maximum
Contrast	V4L2_CID_CONTRAST	0	128	255
Brightness	V4L2_CID_BRIGHTNESS	-128	0	127
Hue	V4L2_CID_HUE	0	0	255
Saturation	V4L2_CID_SATURATION	0	128	255

Table 4.20 Hardware CVBS input control of ADV7180 video input processor (R-Car D3)

Item	V4L2 Command ID	Minimum	Default	Maximum
Contrast	V4L2_CID_CONTRAST	0	128	255
Brightness	V4L2_CID_BRIGHTNESS	-128	0	127
Hue	V4L2_CID_HUE	-127	0	128
Saturation	V4L2_CID_SATURATION	0	128	255

Table 4.21 Hardware HDMI input control of ADV7612 receiver (R-Car D3)

Item	V4L2 Command ID	Minimum	Default	Maximum
Contrast	V4L2_CID_CONTRAST	0	128	255
Brightness	V4L2_CID_BRIGHTNESS	-128	0	127
Hue	V4L2_CID_HUE	0	0	255
Saturation	V4L2_CID_SATURATION	0	128	255

4.6 Field order

This module supports interlaced image in addition to progressive image. The setting value shown in the Table 4.22. The setting value can be specified to use VIDIOC_S_FMT interface.

Table 4.22 Field order (R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H)

Setting Value	Content
V4L2_FIELD_NONE* ¹	Images are in progressive format, not interlaced. Output the image in 1 frame unit.
V4L2_FIELD_INTERLACED_TB* ²	Images contain both fields, interleaved line by line, top field first. The top field is transmitted first. Top field is set odd field. (Full interlace capture mode)
V4L2_FIELD_INTERLACED_BT* ²	Images contain both fields, interleaved line by line, top field first. The bottom field is transmitted first. Top field is set even field. (Full interlace capture mode)
V4L2_FIELD_TOP	Images consist of the top field only. (Odd-field capture mode)
V4L2_FIELD_BOTTOM	Images consist of the bottom field only. (Even-field capture mode)
V4L2_FIELD_SEQ_TB* ³	Images contain both fields, the top field lines are stored first in memory, immediately followed by the bottom field lines. Fields are always stored in temporal order, the older one first in memory. Image sizes refer to the frame, not fields.
V4L2_FIELD_SEQ_BT* ³	Images contain both fields, the bottom field lines are stored first in memory, immediately followed by the top field lines. Fields are always stored in temporal order, the older one first in memory. Image sizes refer to the frame, not fields.
V4L2_FIELD_INTERLACED* ²	Capture with top field first or bottom field first depending on the input signal. (Full interlace capture mode)
V4L2_FIELD_ALTERNATE* ³	The two fields of a frame are passed in separate buffers

Note : 1: This module prohibits to set the value of V4L2_FIELD_NONE in interlaced input.

2: H/W limitation on vertical scaling. For vertical scaling and full interlace composition, the capture lines are inverted in some cases depending on the scaling ratio because the scaling processing is applied before interlace composition in memory. Be sure to evaluate the image quality before practical application.

In addition, in full interlace composition mode (Full interlace capture mode), horizontal stripe noise (such as combing noise) is generated in composite images as fields based on different timelines are combined in memory due to the interlacing method.

3: This field is supported with single frame capture mode only.

4.7 Initialization Process


It is necessary to initialize this module, before starting video capturing.

1. Set the clipping area
Set `V4L2_BUF_TYPE_VIDEO_CAPTURE` to the “type” and specify a part or all valid area of the VIN input image, in `VIDIOC_S_CROP`.
2. Set the format and size of the capture buffer
Set `V4L2_BUF_TYPE_VIDEO_CAPTURE` to the “type” and specify the output image resolution, in `VIDIOC_S_FMT`.
3. Initiate the V4L2 queuing buffer area
Set `V4L2_BUF_TYPE_VIDEO_CAPTURE` to the “type”, `V4L2_MEMORY_MMAP` or `V4L2_MEMORY_DMABUF` or `V4L2_MEMORY_USERPTR` to the “memory”, and the necessary buffer number to the “count”, in `VIDIOC_REQBUFS`.
4. Query buffer status and map the buffer
Query the status of buffer using `VIDIOC_QUERYBUF`. And then, using the offset and length of the buffer, map the buffer into application address space with the system call `mmap()` or memory manager API.

4.8 Capture Process

This module captures video image in 1 frame unit. This module captures video image in 1 frame unit. The following figure shows the sequence of capturing video using this module.

Before using the V4L2 API by opening `/dev/videoX`, it is necessary to set the resolution and input format by using `media-ctl`. Please refer to 5.2 Media Controller API.

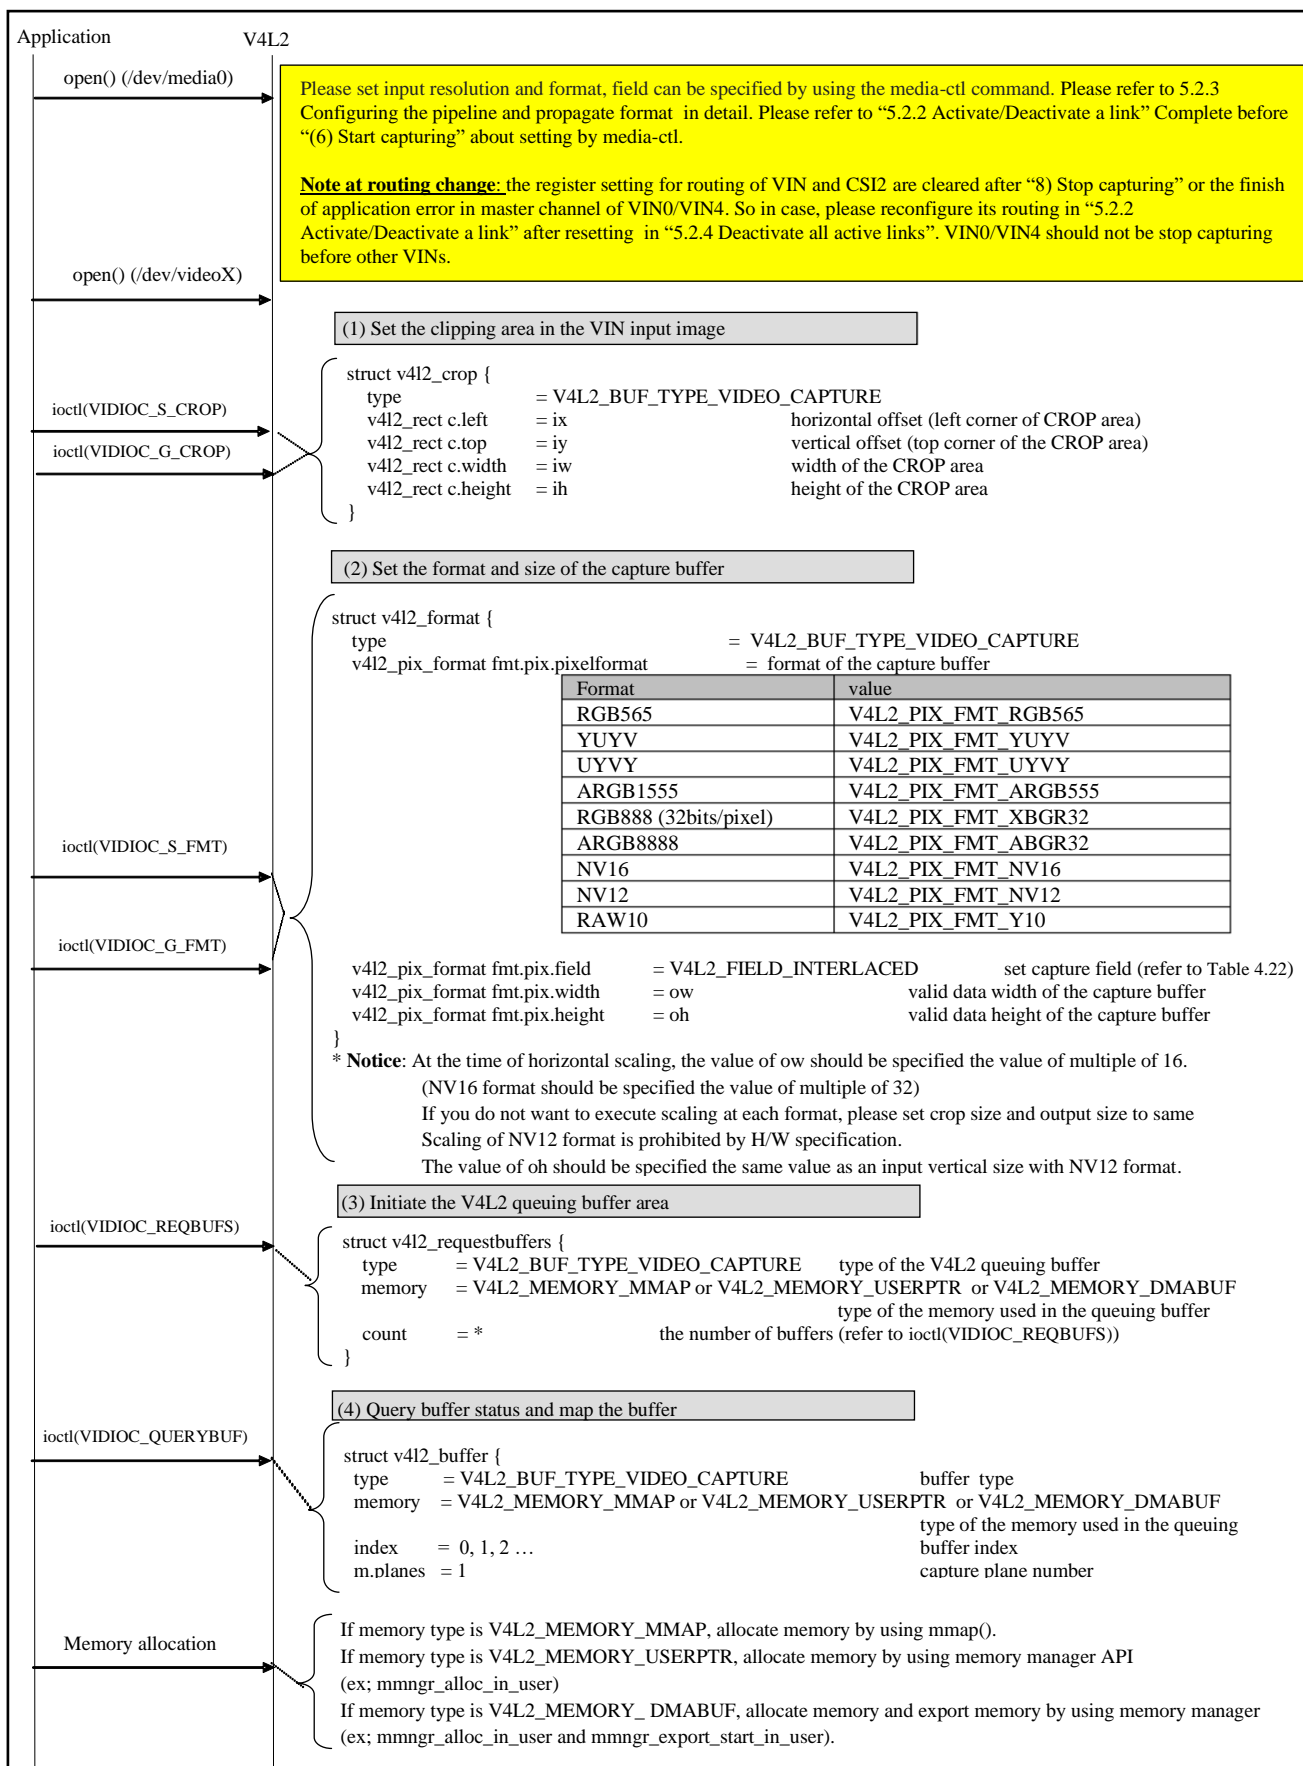

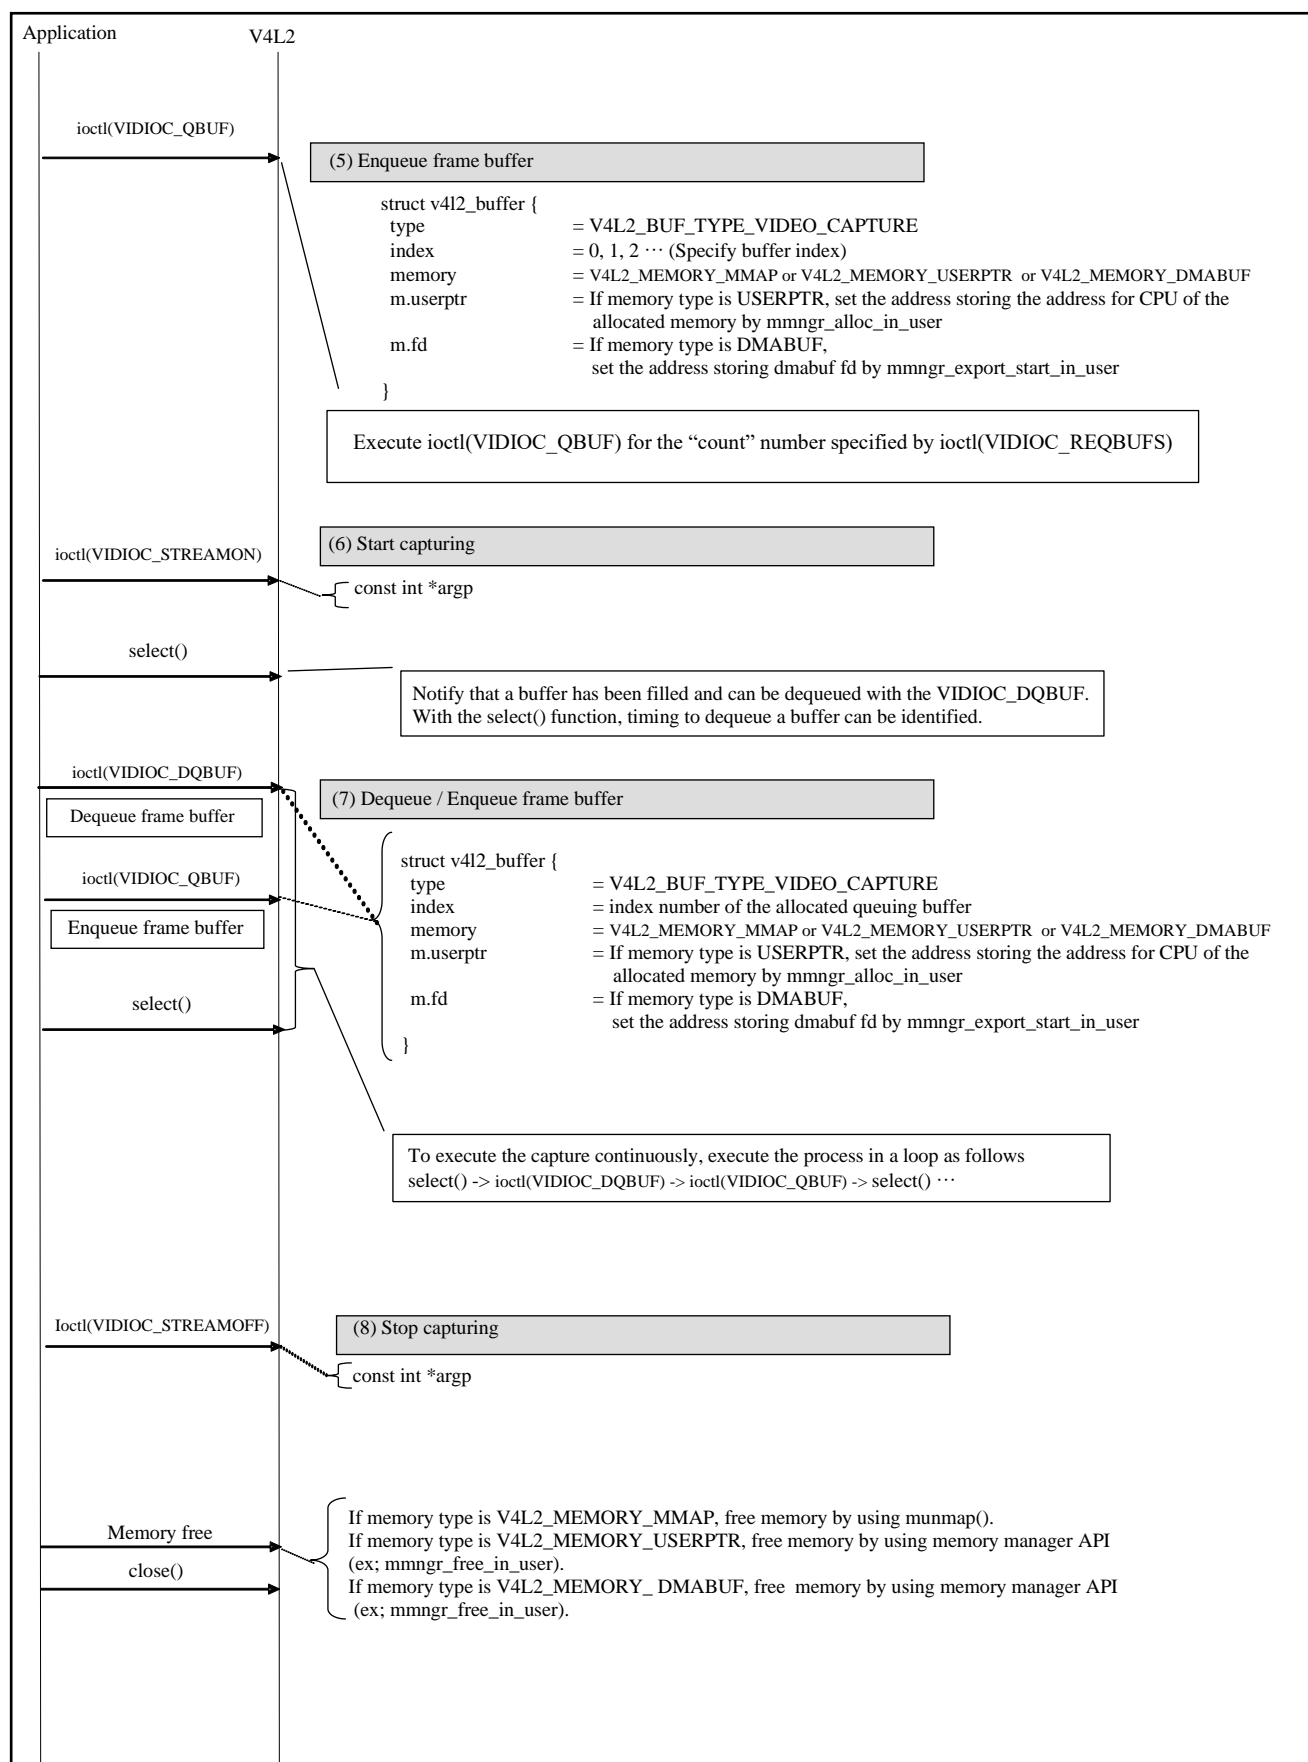


Figure 4.12 Initialization sequence of V4L2 (In case of /dev/videoX)

4.8.1 Capture Control (enqueue / dequeue buffer)

The buffer used to store the captured video image is enqueued by VIDIOC_QBUF from the application. The application needs to dequeue this buffer when it has been filled. VIDIOC_DQBUF will dequeue the buffer in turn, start from the oldest one. The application use system call select() to judge the capability to call VIDIOC_DQBUF.

4.8.2 Start or Stop Capturing

To start capturing, call the VIDIOC_STREAMON. To stop capturing, call the VIDIOC_STREAMOFF or close the device.

4.8.3 Pause capturing

To pause capturing, stop calling VIDIOC_QBUF and let the buffer queue of this module become empty. Do not call the VIDIOC_STREAMOFF or close the device.

4.8.4 Changing Output Image Size

Output image size cannot be changed during capture process. Please set the output size using VIDIOC_S_FMT in the initialization process.

4.8.5 Changing CROP of Captured Image

CROP cannot be changed during capture process. Please set the CROP using VIDIOC_S_CROP in the initialization process.

5. External Interface

The external interface of this module is based on Video for Linux Two API. Device node of this module is shown below.

Table 5.1 VIN device node (R-Car H3 / M3 / M3N / E3 / V3U / V3H)

Video decoder Input (VIN Channel supported)					Device node	Major number	Minor Number (H3/M3/M3N/E3/V3H)	Minor Number (V3U)	Remark
M3 / M3N	H3	E3	V3H	V3U					
HDMI / CVBS	HDMI / CVBS	HDMI / CVBS	Coax	Coax	/dev/video0	81	6(4)*1	18	UDS can be used. UDS shares with/dev/video0 and /dev/video1 *2
HDMI / CVBS	HDMI / CVBS	HDMI / CVBS	Coax	Coax	/dev/video1	81	7(5)*1	19	
HDMI / CVBS	HDMI / CVBS	-	Coax	Coax	/dev/video2	81	8	20	
HDMI / CVBS	HDMI / CVBS	-	Coax	Coax	/dev/video3	81	9	21	
HDMI / CVBS	CVBS	-	Coax	Coax	/dev/video4	81	10	22	UDS can be used. UDS shares with/dev/video4 and /dev/video5 *2
HDMI / CVBS	CVBS	-	Coax	Coax	/dev/video5	81	11	23	
HDMI / CVBS	CVBS	-	Coax	Coax	/dev/video6	81	12	24	
HDMI / CVBS	CVBS	-	Coax	Coax	/dev/video7	81	13	25	
-	-	-	Coax		/dev/video8	81		26	
-	-	-	Coax		/dev/video9	81		27	
-	-	-	Coax		/dev/video10	81		28	
-	-	-	Coax		/dev/video11	81		29	

*1 () is number at E3.

*2 V3U is not supported with UDS

Table 5.2 VIN device node (R-Car D3)

Video decoder Input (VIN Channel supported)	Device node	Major number	Minor number	Remark
HDMI / CVBS	/dev/video0	81	1	UDS can be used.

Table 5.3 media controller device node (R-Car H3 / M3 / M3N / E3)

Device node	Major number	Minor number
/dev/media0	250	0

Table 5.4 media controller device node (R-Car V3U)

Device node	Major number	Minor number
/dev/media0	250	0

Table 5.5 media controller device node (R-Car V3H)

Device node	Major number	Minor number
/dev/media0	250	0

Table 5.6 subdevice node (R-Car H3 / M3 / M3N / E3)

Device node	Major number	Minor number	Remark
/dev/v4l-subdev1	81	1	for controlling ADV7482(CVBS IN)
/dev/v4l-subdev2	81	2	for controlling ADV7482(HDMI IN)

Other subdevice node can be set via meida-ctl. list the necessary device file only for the application.

5.1 Video for Linux Two API

This module supports a part of Video for Linux Two API as follows.

Table 5.7 List of external interface (R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H)

Chapter	Function Name	Description	Remarks
5.1.1	ioctl(VIDIOC_QUERYCAP)	Query device capabilities.	#1
5.1.2	ioctl(VIDIOC_REQBUFS)	Buffer demand and transmission mode select.	#1
5.1.3	ioctl(VIDIOC_G_FMT)	Get a format.	#1
5.1.4	ioctl(VIDIOC_S_FMT)	Set scaling and the data format	#1
5.1.5	ioctl(VIDIOC_TRY_FMT)	Try a format.	#1
5.1.6	ioctl(VIDIOC_QUERYCTRL)	Enumerate controls and menu control items.	#3
5.1.7	ioctl(VIDIOC_G_CTRL)	Get the value of a decoder control.	#3
5.1.8	ioctl(VIDIOC_S_CTRL)	Set the value of a decoder control.	#3
5.1.9	ioctl(VIDIOC_CROPCAP)	Information about the video cropping and scaling abilities.	#1
5.1.10	ioctl(VIDIOC_G_CROP)	Get the current cropping rectangle.	#1
5.1.11	ioctl(VIDIOC_S_CROP)	Set the current cropping rectangle.	#1
5.1.12	ioctl(VIDIOC_QUERYBUF)	Query the status of a buffer.	#2
5.1.13	ioctl(VIDIOC_DQBUF)	Dequeue an empty buffer.	#2
5.1.14	ioctl(VIDIOC_QBUF)	Enqueue a filled buffer.	#2
5.1.15	ioctl(VIDIOC_STREAMON)	Start streaming I/O.	#2
5.1.16	ioctl(VIDIOC_STREAMOFF)	Stop streaming I/O.	#2

Notes: #1 This module provides these ioctls.
#2 VIDEOBUF provides these ioctls.
#3 These ioctls is provided by subdevice (/dev/v4l-subdev1 or /dev/v4l-subdev2).

5.1.1 ioctl(VIDIOC_QUERYCAP)

[Function] int ioctl(int fd, int request, struct v4l2_capability *argp)

[Arguments] fd : File descriptors

 request : VIDIOC_QUERYCAP

 argp : Pointer of v4l2_capability

[Returns] 0 : Success

 -1 : Error

[Error number] -EINVAL : The device is not compatible with this specification.

[Description] Query device capabilities.

5.1.2 ioctl(VIDIOC_REQBUFS)

[Function] int ioctl(int fd, int request, struct v4l2_requestbuffers *argp)

[Arguments] fd : File descriptors

 request : VIDIOC_REQBUFS

 argp : Pointer of v4l2_requestbuffers

[Returns] 0 : Success

 -1 : Error

[Error number] -EBUSY : The driver supports multiple opens and I/O is already in progress, or reallocation of buffers was attempted although one or more are still mapped.

 -EINVAL : The buffer type (type field) or the requested I/O method (memory) is not supported.

[Description] The buffer structure is allocated according to the number of the specified buffer.

 Moreover, Transmission mode is chosen by the number of a buffer.

 Transmission mode is chosen by the member "count" of a v4l2_requestbuffers structure.

 The count value of three or less: Single frame capture mode

 (Single transfer is up to max 15 fps by H/W specification, even if it is executed continuously.)

 The count value of four or more: Continuous frame capture mode

 The count value of zero: free all buffers

5.1.3 ioctl(VIDIOC_G_FMT)

[Function] int ioctl(int fd, int request, struct v4l2_format *argp)

[Arguments] fd : File descriptors

 request : VIDIOC_G_FMT

 argp : Pointer of v4l2_format

[Returns] 0 : Success

 -1 : Error

[Error number] -EINVAL : The struct v4l2_format type field is invalid or the requested buffer type not supported.

[Description] Get a format.

5.1.4 ioctl(VIDIOC_S_FMT)

[Function]	int ioctl(int fd, int request, struct v4l2_format *argp)
[Arguments]	fd : File descriptors request : VIDIOC_S_FMT argp : Pointer of v4l2_format
[Returns]	0 : Success -1 : Error
[Error number]	-EBUSY : The data format cannot be changed at this time, for example because I/O is already in progress. -EINVAL : The struct v4l2_format type field is invalid or the requested buffer type not supported.
[Description]	Set the data format.
[Notice]	At the time of horizontal scaling, the value of width in v4l2_pix_format structure of v4l2_format should be specified the value of multiple of 16 (NV16 format should be specified the value of multiple of 32. If it is not a multiple of 32, round it to a multiple of 32.). Scaling of NV12 format is prohibited by H/W specification. At the time of NV12 format specification, the value of height in v4l2_pix_format structure of v4l2_format should be specified the same value as an input vertical size.

5.1.5 ioctl(VIDIOC_TRY_FMT)

[Function]	int ioctl(int fd, int request, struct v4l2_format *argp)
[Arguments]	fd : File descriptors request : VIDIOC_TRY_FMT argp : Pointer of v4l2_format
[Returns]	0 : Success -1 : Error
[Error number]	-EINVAL : The setting value of struct v4l2_format is invalid.
[Description]	Try a format.

5.1.6 ioctl(VIDIOC_QUERYCTRL)

[Function]	int ioctl(int fd, int request, struct v4l2_queryctrl *argp)
[Arguments]	fd : File descriptors request : VIDIOC_QUERYCTRL argp : Pointer of v4l2_queryctrl
[Returns]	0 : Success -1 : Error
[Error number]	-EINVAL : The struct v4l2_queryctrl id is invalid. The struct v4l2_querymenu id or index is invalid. -EACCES : An attempt was made to read a write-only control.
[Description]	Enumerate controls.

5.1.7 ioctl(VIDIOC_G_CTRL)

[Function] int ioctl(int fd, int request, struct v4l2_control *argp)

[Arguments] fd : File descriptors
 request : VIDIOC_G_CTRL
 argp : Pointer of v4l2_control

[Returns] 0 : Success
 -1 : Error

[Error number] -EINVAL : The struct v4l2_control id is invalid.
 -ERANGE : The struct v4l2_control value is out of bounds.
 -EBUSY : The control is temporarily not changeable, possibly because another applications
 took over control of the device function this control belongs to.
 -EACCES : Attempt to get a write-only control.

[Description] Get the value of a video decoder control. Please refer to Table 4.18 and Table 4.19 about id of
 v4l2_control structure member.

5.1.8 ioctl(VIDIOC_S_CTRL)

[Function] int ioctl(int fd, int request, struct v4l2_control *argp)

[Arguments] fd : File descriptors
 request : VIDIOC_S_CTRL
 argp : Pointer of v4l2_control

[Returns] 0 : Success
 -1 : Error

[Error number] -EINVAL : The struct v4l2_control id is invalid.
 -ERANGE : The struct v4l2_control value is out of bounds.
 -EBUSY : The control is temporarily not changeable, possibly because another applications
 took over control of the device function this control belongs to.
 -EACCES : Attempt to set a read-only control.

[Description] Set the value of a video decoder control. Please refer to Table 4.18 and Table 4.19 about id of
 v4l2_control structure member.

5.1.9 ioctl(VIDIOC_CROPCAP)

[Function] int ioctl(int fd, int request, struct v4l2_cropcap *argp)

[Arguments] fd : File descriptors
 request : VIDIOC_CROPCAP
 argp : Pointer of v4l2_cropcap

[Returns] 0 : Success
 -1 : Error

[Error number] -EINVAL : v4l2_cropcap type is invalid.

[Description] Information about the video cropping and scaling abilities

5.1.10 **ioctl(VIDIOC_G_CROP)**

[Function] int ioctl(int fd, int request, struct v4l2_crop *argp)

[Arguments] fd : File descriptors
 request : VIDIOC_G_CROP
 argp : Pointer of v4l2_crop

[Returns] 0 : Success
 -1 : Error

[Error number] -EINVAL : Cropping is not supported.

[Description] Get the current cropping rectangle.

5.1.11 **ioctl(VIDIOC_S_CROP)**

[Function] int ioctl(int fd, int request, struct v4l2_crop *argp)

[Arguments] fd : File descriptors
 request : VIDIOC_S_CROP
 argp : Pointer of v4l2_crop

[Returns] 0 : Success
 -1 : Error

[Error number] -EINVAL : Cropping is not supported.

[Description] Set the current cropping rectangle.

5.1.12 **ioctl(VIDIOC_QUERYBUF)**

[Function] int ioctl(int fd, int request, struct v4l2_buffer *argp)

[Arguments] fd : File descriptors
 request : VIDIOC_QUERYBUF
 argp : Pointer of v4l2_buffer

[Returns] 0 : Success
 -1 : Error

[Error number] -EINVAL : The specified buffer type is not supported.

[Description] Query the status of a buffer.

5.1.13 **ioctl(VIDIOC_DQBUF)**

[Function] int ioctl(int fd, int request, struct v4l2_buffer *argp)

[Arguments] fd : File descriptors
 request : VIDIOC_DQBUF
 argp : Pointer of v4l2_buffer

[Returns] 0 : Success
 -1 : Error

[Error number] -EAGAIN : Non-blocking I/O is selected.
 -EINVAL : The specified buffer type is not supported.
 -EIO : VIDIOC_DQBUF failed due to an internal error.

[Description] Dequeue a filled buffer from the driver's outgoing queue

5.1.14 ioctl(VIDIOC_QBUF)

[Function] int ioctl(int fd, int request, struct v4l2_buffer *argp)

[Arguments] fd : File descriptors

 request : VIDIOC_QBUF

 argp : Pointer of v4l2_buffer

[Returns] 0 : Success

 -1 : Error

[Error number] -EINVAL : The specified buffer type is not supported.

[Description] Enqueue an empty buffer in the driver's incoming queue.

5.1.15 ioctl(VIDIOC_STREAMON)

[Function] int ioctl(int fd, int request, const int *argp)

[Arguments] fd : File descriptors

 request : VIDIOC_STREAMON

 argp : Pointer of const int area for v4l2_buf_type

[Returns] 0 : Success

 -1 : Error

[Error number] -EINVAL : The buffer type is not supported, or no buffers have been allocated (memory mapping) or enqueued (output) yet.

 -EPIPE : the pipeline configuration is invalid.

[Description] Start streaming I/O.

5.1.16 ioctl(VIDIOC_STREAMOFF)

[Function] int ioctl(int fd, int request, const int *argp)

[Arguments] fd : File descriptors

 request : VIDIOC_STREAMOFF

 argp : Pointer of const int area for v4l2_buf_type

[Returns] 0 : Success

 -1 : Error

[Error number] -EINVAL : The buffer type is not supported, or no buffers have been allocated (memory mapping) or enqueued (output) yet.

[Description] Stop streaming I/O and stop H/W operation.

5.2 Media Controller API

This ability not only work with a local digital subdevice directly attached to a VIN instance in a 1:1 mapping but to be part of a CSI-2 group which share a set of video decoders and CSI-2.

In this mode of operation each video decoder source is connected to a CSI-2 which in turn can be routed to the different VIN instances depending on one of the predetermined routing setups for that particular SoC, it's not possible to go outside the routing tables provided by the hardware.

5.2.1 Show current routing

Examine the current routing setup with 'media-ctl -d /dev/mediaX -p'.

```
# media-ctl -d /dev/media0 -p
```

Example)

```
Media controller API version 4.14.70

Media device information
-----
driver      rcar_vin
model       renesas,vin-r8a7795
serial
bus info    platform:e6ef0000.video
hw revision  0x0
driver version 4.14.70

Device topology
- entity 1: rcar_csi2 feaa0000.csi2 (5 pads, 9 links)
  type V4L2 subdev subtype Unknown flags 0
  device node name /dev/v4l-subdev0
  pad0: Sink
    [fmt:RGB888_1X24/720x480 field:none]
    <- "adv748x 4-0070 txa":1 [ENABLED,IMMUTABLE]
  pad1: Source
    [fmt:RGB888_1X24/720x480 field:none]
    -> "VIN0 output":0 [ENABLED]
    -> "VIN1 output":0 []
    -> "VIN2 output":0 []
  pad2: Source
    [fmt:RGB888_1X24/720x480 field:none]
    -> "VIN0 output":0 []
    -> "VIN1 output":0 []
    -> "VIN3 output":0 [ENABLED]
  pad3: Source
    [fmt:RGB888_1X24/720x480 field:none]
    -> "VIN2 output":0 []
  pad4: Source
    [fmt:RGB888_1X24/720x480 field:none]
    -> "VIN3 output":0 []

~~~~~ omission ~~~~~

- entity 80: VIN7 output (1 pad, 2 links)
  type Node subtype V4L flags 0
  device node name /dev/video7
  pad0: Sink
    <- "rcar_csi2 fea80000.csi2":2 []
    <- "rcar_csi2 fea80000.csi2":4 []
```

5.2.2 Activate/Deactivate a link

The Media Controller framework allows user-space to enable/disable a link and that way control the routing of video data from a CSI-2 to a VIN instance. Not all CSI-2 and Virtual Channel are possible to route to any and all VIN instances, this is limited by the SoC hardware and is specific for each SoC version. Look at the previous section on how to show which links are possible on your particular SoC. Furthermore not all links can be activated independent of other links, this is also a limitation set by the hardware. If you try to enable a link which would not be possible with regard to other already active links the operation will fail with a EBUSY error. Try deactivating some other link to create more routing possibilities and try again, all possible routing setups for a specific SoC are documented in the datasheet.

A link is always configured from a CSI-2 instance to a VIN instance, the same way the video data is flowing. To enable a link use the media-ctl utility from v4l-utils package:

To enable a link use the media-ctl utility from v4l-utils package: (VIN0 is set CSI20/VC0)

```
# media-ctl -d /dev/media0 -l "rcar_csi2 fea80000.csi2:1 -> 'VIN0 output':0 [1]"
```

```
# media-ctl -d /dev/media0 -l "rcar_csi2 fea80000.csi2:1 -> 'VIN0 output':0 [1]"
```



Select CSI2 device to set VIN device	VC number 1~4: (VC0~VC3)	Select VIN device	Set Connection [1]: Enable [0]: Disable
--------------------------------------	--------------------------	-------------------	---

To disable the same link use:

```
# media-ctl -d /dev/media0 -l "rcar_csi2 fea80000.csi2:1 -> 'VIN0 output':0 [0]"
```

Once a link is enabled you can access the /dev/videoX node associated with the VIN instance to start capturing video data. Using the link from the example above you would be able to access video data from CSI20/VC0 on the VIN0 instance.

[Example setting in R-Car H3/M3/M3N]

How to capture HDMI in HDMI connector by setting CSI_CHSEL[2:0]= 0 about VIN 0.

```
# media-ctl -d /dev/media0 -l "rcar_csi2 feaa0000.csi2:1 -> 'VIN0 output':0 [1]"
```

How to capture NTSC in RCA connector by setting CSI_CHSEL[2:0]= 0 about VIN 5.

```
# media-ctl -d /dev/media0 -l "rcar_csi2 fea80000.csi2:1 -> 'VIN5 output':0 [1]"
```

[Example setting in R-Car M3/M3N]

How to capture NTSC in RCA connector by setting CSI_CHSEL[2:0]= 1 about VIN 4.

```
# media-ctl -d /dev/media0 -l "rcar_csi2 fea80000.csi2:1 -> 'VIN4 output':0 [1]"
```

[Example setting in R-Car E3]

How to capture in HDMI connector by setting CSI_CHSEL[2:0] = 2 about VIN 5.

```
# media-ctl -r /dev/media0
```

```
# media-ctl -d /dev/media0 -l "rcar_csi2 feaa0000.csi2:1 -> 'VIN5 output':0 [1]"
```

```
# media-ctl -d /dev/media0 -l "rcar_csi2 feaa0000.csi2:2 -> 'VIN4 output':0 [1]"
```

5.2.3 Configuring the pipeline and propagate format

Once the user has configured a pipeline using 'media-ctl' as described 5.2.2 the format needs to be propagated in the pipeline before streaming can start (The capture cannot be performed unless it is set). The following shows an example of the execution command.

[HDMI IN]

[H3/M3/M3N/E3]

Please change command description in case of R-Car E3

adv748x 4-0070 -> adv748x 0-0070. VIN0 -> VIN4

- 1920x1080p (This resolution is not support in R-Car E3)


```
# media-ctl -d /dev/media0 -l "rcar_csi2 feaa0000.csi2:1 -> 'VIN0 output':0 [1]"
# media-ctl -d /dev/media0 -l "adv748x 4-0070 hdmi:1 -> 'adv748x 4-0070 txa':0 [1]"
# media-ctl -d /dev/media0 -V "rcar_csi2 feaa0000.csi2:1 [fmt:RGB888_1X24/1920x1080 field:none]"
# media-ctl -d /dev/media0 -V "adv748x 4-0070 txa:0 [fmt:RGB888_1X24/1920x1080 field:none]"
```
- 1920x1080i

```
# media-ctl -d /dev/media0 -l "rcar_csi2 feaa0000.csi2:1 -> 'VIN0 output':0 [1]"
# media-ctl -d /dev/media0 -l "adv748x 4-0070 hdmi:1 -> 'adv748x 4-0070 txa':0 [1]"
# media-ctl -d /dev/media0 -V "rcar_csi2 feaa0000.csi2:1 [fmt:RGB888_1X24/1920x540 field:alternate]"
# media-ctl -d /dev/media0 -V "adv748x 4-0070 txa:0 [fmt:RGB888_1X24/1920x540 field:alternate]"
```
- 1280x720p

```
# media-ctl -d /dev/media0 -l "rcar_csi2 feaa0000.csi2:1 -> 'VIN0 output':0 [1]"
# media-ctl -d /dev/media0 -l "adv748x 4-0070 hdmi:1 -> 'adv748x 4-0070 txa':0 [1]"
# media-ctl -d /dev/media0 -V "rcar_csi2 feaa0000.csi2:1 [fmt:RGB888_1X24/1280x720 field:none]"
# media-ctl -d /dev/media0 -V "adv748x 4-0070 txa:0 [fmt:RGB888_1X24/1280x720 field:none]"
```
- 720x576p

```
# media-ctl -d /dev/media0 -l "rcar_csi2 feaa0000.csi2:1 -> 'VIN0 output':0 [1]"
# media-ctl -d /dev/media0 -l "adv748x 4-0070 hdmi:1 -> 'adv748x 4-0070 txa':0 [1]"
# media-ctl -d /dev/media0 -V "rcar_csi2 feaa0000.csi2:1 [fmt:RGB888_1X24/720x576 field:none]"
# media-ctl -d /dev/media0 -V "adv748x 4-0070 txa:0 [fmt:RGB888_1X24/720x576 field:none]"
```
- 720x480p

```
# media-ctl -d /dev/media0 -l "rcar_csi2 feaa0000.csi2:1 -> 'VIN0 output':0 [1]"
# media-ctl -d /dev/media0 -l "adv748x 4-0070 hdmi:1 -> 'adv748x 4-0070 txa':0 [1]"
# media-ctl -d /dev/media0 -V "rcar_csi2 feaa0000.csi2:1 [fmt:RGB888_1X24/720x480 field:none]"
```

```
# media-ctl -d /dev/media0 -V '"adv748x 4-0070 txa':0 [fmt:RGB888_1X24/720x480 field:none]"
```

- 640x480p

```
# media-ctl -d /dev/media0 -l '"rcar_csi2 feaa0000.csi2':1 -> 'VIN0 output':0 [1]"
```

```
# media-ctl -d /dev/media0 -l '"adv748x 4-0070 hdmi':1 -> 'adv748x 4-0070 txa':0 [1]"
```

```
# media-ctl -d /dev/media0 -V '"rcar_csi2 feaa0000.csi2':1 [fmt:RGB888_1X24/640x480 field:none]"
```

```
# media-ctl -d /dev/media0 -V '"adv748x 4-0070 txa':0 [fmt:RGB888_1X24/640x480 field:none]"
```

[CVBS IN]

[H3/M3/M3N]

- NTSC (720x480i)

```
# media-ctl -d /dev/media0 -l '"rcar_csi2 fea80000.csi2':1 -> 'VIN5 output':0 [1]"
```

```
# media-ctl -d /dev/media0 -l '"adv748x 4-0070 afe':8 -> 'adv748x 4-0070 txb':0 [1]"
```

```
# media-ctl -d /dev/media0 -V '"rcar_csi2 fea80000.csi2':1 [fmt:UYVY2X8/720x240 field:alternate]"
```

```
# media-ctl -d /dev/media0 -V '"adv748x 4-0070 afe':8 [fmt:UYVY2X8/720x240 field:alternate]"
```

- PAL (720x576i)

```
# media-ctl -d /dev/media0 -l '"rcar_csi2 fea80000.csi2':1 -> 'VIN5 output':0 [1]"
```

```
# media-ctl -d /dev/media0 -l '"adv748x 4-0070 afe':8 -> 'adv748x 4-0070 txb':0 [1]"
```

```
# media-ctl -d /dev/media0 -V '"rcar_csi2 fea80000.csi2':1 [fmt:UYVY2X8/720x288 field:alternate]"
```

```
# media-ctl -d /dev/media0 -V '"adv748x 4-0070 afe':8 [fmt:UYVY2X8/720x288 field:alternate]"
```

[E3]

- NTSC (720x480i)

please refer to [Change data lane for cvbs input] in chapter 6.3.1

[In case of using VIN4]

```
# media-ctl -d /dev/media0 -r
```

```
# media-ctl -d /dev/media0 -l '"rcar_csi2 feaa0000.csi2':1 -> 'VIN4 output':0 [1]"
```

```
# media-ctl -d /dev/media0 -l '"adv748x 0-0070 afe':8 -> 'adv748x 0-0070 txa':0 [1]"
```

```
# media-ctl -d /dev/media0 -V '"rcar_csi2 feaa0000.csi2':1 [fmt:UYVY2X8/720x240 field:alternate]"
```

```
# media-ctl -d /dev/media0 -V '"adv748x 0-0070 txa':0 [fmt:UYVY2X8/720x240 field:alternate]"
```

- PAL (720x576i)

[In case of using VIN4]

```
# media-ctl -d /dev/media0 -r
```

```
# media-ctl -d /dev/media0 -l '"rcar_csi2 feaa0000.csi2':1 -> 'VIN4 output':0 [1]"
```

```
# media-ctl -d /dev/media0 -l '"adv748x 0-0070 afe':8 -> 'adv748x 0-0070 txa':0 [1]"
```

```
# media-ctl -d /dev/media0 -V "rcar_csi2 feaa0000.csi2:1 [fmt:UYVY2X8/720x288 field:alternate]"
```

```
# media-ctl -d /dev/media0 -V "adv748x 0-0070 txa:0 [fmt:UYVY2X8/720x288 field:alternate]"
```

[V3U]

[In case of LI-AR0231-AP0200-GMSL2 camera]

```
# media-ctl -d /dev/media0 -l "rcar_csi2 feaa0000.csi2:1 -> 'VIN0 output':0 [1]"
```

```
# media-ctl -d /dev/media0 -l "rcar_csi2 feaa0000.csi2:2 -> 'VIN1 output':0 [1]"
```

```
# media-ctl -d /dev/media0 -l "rcar_csi2 feaa0000.csi2:3 -> 'VIN2 output':0 [1]"
```

```
# media-ctl -d /dev/media0 -l "rcar_csi2 feaa0000.csi2:4 -> 'VIN3 output':0 [1]"
```

```
# media-ctl -d /dev/media0 -V "rcar_csi2 feaa0000.csi2:1 [fmt:Y10_1X10/1920x1020 field:none]"
```

```
# media-ctl -d /dev/media0 -l "rcar_csi2 fed60000.csi2:1 -> 'VIN16 output':0 [1]"
```

```
# media-ctl -d /dev/media0 -l "rcar_csi2 fed60000.csi2:2 -> 'VIN17 output':0 [1]"
```

```
# media-ctl -d /dev/media0 -l "rcar_csi2 fed60000.csi2:3 -> 'VIN18 output':0 [1]"
```

```
# media-ctl -d /dev/media0 -l "rcar_csi2 fed60000.csi2:4 -> 'VIN19 output':0 [1]"
```

```
# media-ctl -d /dev/media0 -V "rcar_csi2 fed60000.csi2:1 [fmt:Y10_1X10/1920x1020 field:none]"
```

```
# media-ctl -d /dev/media0 -l "rcar_csi2 fed70000.csi2:1 -> 'VIN24 output':0 [1]"
```

```
# media-ctl -d /dev/media0 -l "rcar_csi2 fed70000.csi2:2 -> 'VIN25 output':0 [1]"
```

```
# media-ctl -d /dev/media0 -l "rcar_csi2 fed70000.csi2:3 -> 'VIN26 output':0 [1]"
```

```
# media-ctl -d /dev/media0 -l "rcar_csi2 fed70000.csi2:4 -> 'VIN27 output':0 [1]"
```

```
# media-ctl -d /dev/media0 -V "rcar_csi2 fed70000.csi2:1 [fmt:Y10_1X10/1920x1020 field:none]"
```

[D3]

There is no need to config VIN in D3 through media-ctl

5.2.4 Deactivate all active links

This is a useful command to reset all links before you start enabling new links to make sure you got the biggest possible routing space to start out with.

```
# media-ctl -d /dev/media0 -r
```

6.Integration

6.1 Directory Configuration

The directory configuration is shown below

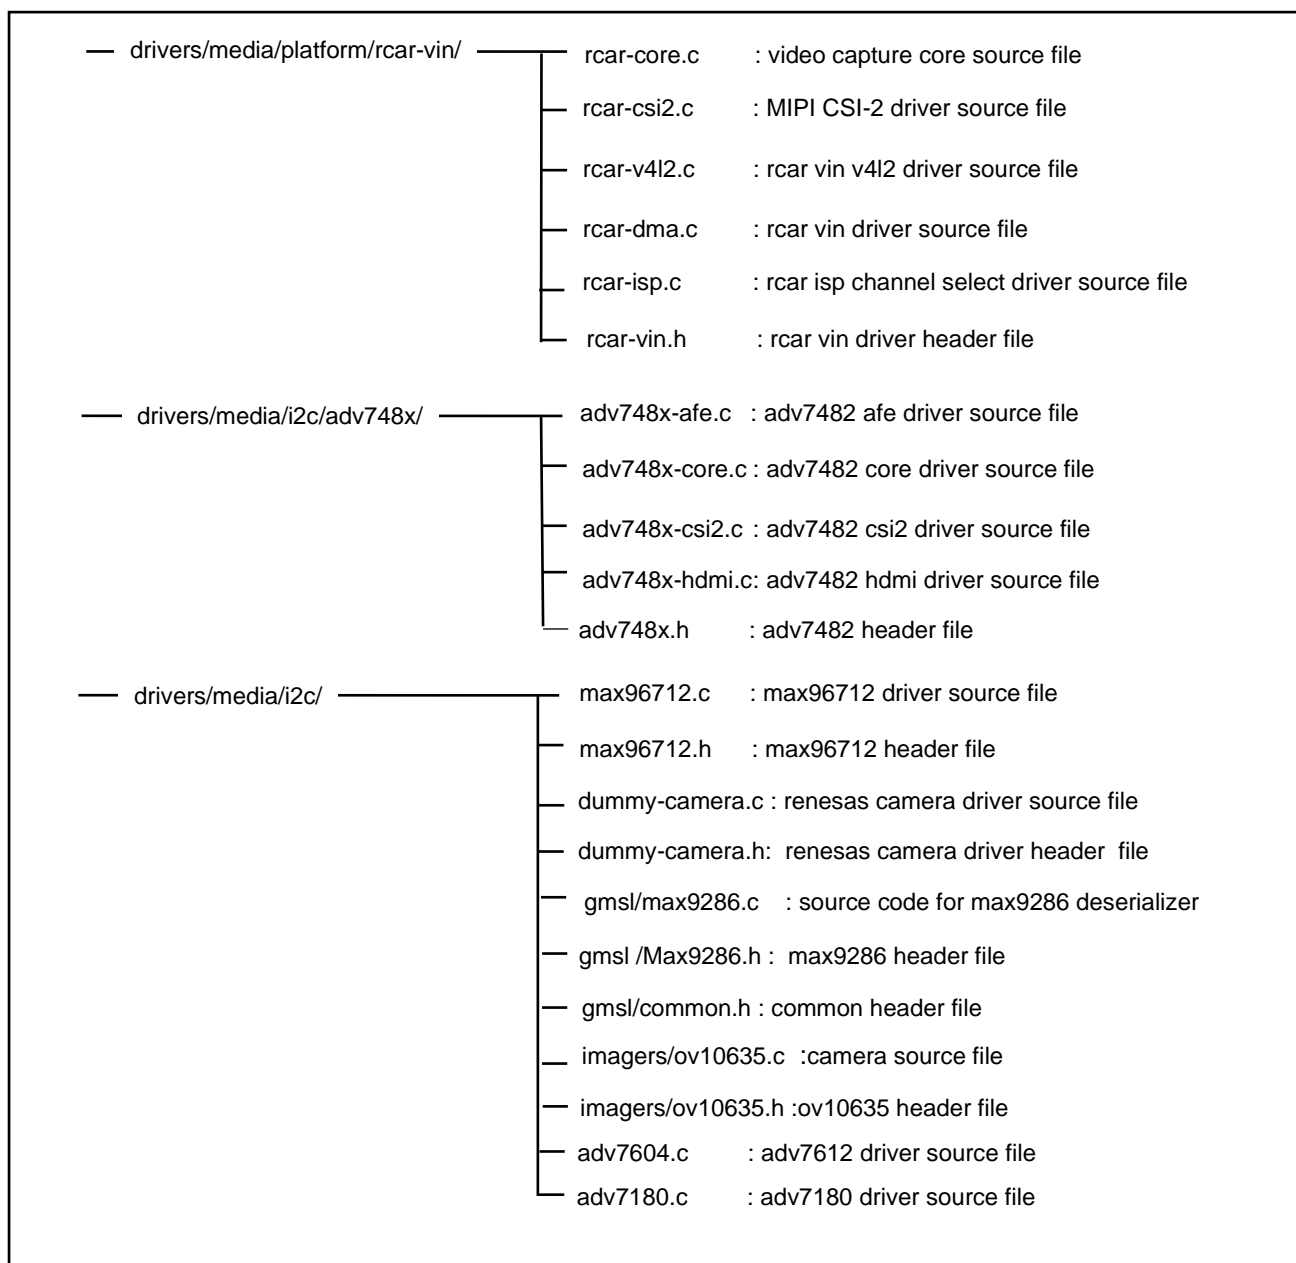


Figure 6.1 Directory Configuration (R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H)

6.2 Integration Procedure

To enable the function of this module, make the following setting with Kernel Configuration.

6.2.1 Video Capture Driver [R-Car H3 / M3 / M3N / E3 / D3 / V3U / V3H]

```

Device Drivers --->
  <*> Multimedia support --->
    Media device types --->
      [*] Cameras/video grabbers support
    Media core support ---> *2
      [*] Media Controller API
    Video4Linux options --->
      [*] V4L2 sub-device userspace API
    Media drivers --->
      [*] V4L platform devices --->
        <*> R-Car Image Signal Processor (ISP)
        <*> R-Car MIPI CSI-2 Receiver
        <*> R-Car Video Input (VIN) Driver
        [ ] R-Car VIN overflow debug messages *1
      [ ] Autoselect ancillary drivers (tuners, sensors, i2c, spi, frontends)
    Media ancillary drivers --->
      Video decoders --->
        <*> Analog Devices ADV7180 decoder
        <*> Analog Devices ADV748x decoder
        <*> Analog Devices ADV7604 decoder
        <*> Maxim MAX96712 GMSL2 deserializer support
        <*> Dummy camera support
        <*> MAXIM MAX9286 GMSL deserializer support
        <*> LVDS camera support
  
```

note: *1 This configuration is enabled debug message when VIN overflow occurring.

In addition, please step on the following steps after kernel starting.

1. # echo 1 > /sys/module/rcar_vin/parameters/debug (debug message enable and VIN overflow count starts)
2. # cat /sys/module/rcar_vin/parameters/overflow_video (Check VIN overflow count)
3. # 0,0,0,0,0,0,0,0 ... (From left to right, /dev/video0, /dev/video1 : value shows overflow count)

For overflow interrupt is enabled, it is a possibility that it becomes impossible to properly capture.

*2 Please checkout Filter media drivers option to show Media core support

6.2.2 I2C Driver

```

Device Drivers --->
  I2C support --->
    I2C Hardware Bus support --->
      <*> Renesas R-Car I2C Controller
  
```

6.3 Option Setting

6.3.1 Module Parameters

[R-Car H3 / M3 /M3N]

This module option is controlled by modifying the DT (Device Tree) file (arch/arm64/boot/dts/renesas/salvator-common.dtsi). This section explains how to change the virtual channel of VIN, CSI2 and ADV7482. (Please refer to Documentation\devicetree\bindings\media/rcar-vin.txt about device node definition method)

<pre> &vin0 { status = "okay"; }; </pre>	<pre> // Set VIN channel node (vin0-vin7) </pre>
<pre> &csi40 { status = "okay"; ports { port@0 { reg = <0>; csi40_in: endpoint { clock-lanes = <0>; data-lanes = <1 2 3 4>; remote-endpoint = <&adv7482_txa>; }; }; }; }; </pre>	<pre> // Set csi2 channel node (&csi20 / &csi41 / &csi40) // Set data lane number <1 2 3 4> = 4 lane (csi40 or csi41 only) <1 2> = 2lane <1> = 1 lane // Set video encoder node </pre>
<pre> ... video-receiver@70 { compatible = "adi,adv7482"; ... port@a { reg = <10>; adv7482_txa: endpoint { virtual-channel = <0>; clock-lanes = <0>; data-lanes = <1 2 3 4>; remote-endpoint = <&csi40_in>; }; }; port@b { reg = <11>; adv7482_txb: endpoint { virtual-channel = <0>; clock-lanes = <0>; data-lanes = <1>; remote-endpoint = <&csi20_in>; }; }; }; </pre>	<pre> // Set virtual channel. It is not specified by default. // If not set, virtual-channel is set 0. (0:VC0, 1:VC1, 2:VC2, 3:VC3) // Set data lane number <1> or <1 2> or <1 2 3 4>. (hdmi in only) // Set csi2 encoder node // Set virtual channel. It is not specified by default. // If not set, virtual-channel is set 0. (0:VC0, 1:VC1, 2:VC2, 3:VC3) // Set data lane number <1> // Set csi2 encoder node </pre>

Please set the virtual-channel to the same value for both txb and txa.

[R-Car E3]

This module option is controlled by modifying the DT (Device Tree) file (arch/arm64/boot/dts/renesas/r8a77990-ebisu.dts, r8a77990-es10-ebisu.dts). This section explains how to change input. About the virtual channel and lane (1 or 2) can be set for lane in csi40 is as described above (in case of R-Car H3/M3/M3N).

- **Set vin4/vin5 channel node for hdmi input**

Device node of video decoder, csi40 and vin is OK with default description.

- **Change data lane for cvbs input**

Please add and correct about following highlight.

```
&csi40 {
    status = "okay";

    ports {
        port@0 {
            reg = <0>;

            csi40_in: endpoint {
                clock-lanes = <0>;
                data-lanes = <1 2>;
                data-lanes = <1>;
                remote-endpoint = <&adv7482_txa>;
            };
        };
    };
};

&i2c0 {
    . . . .
    video-receiver@70 {
        . . . .
        port@a {
            reg = <10>;

            adv7482_txa: endpoint {
                clock-lanes = <0>;
                data-lanes = <1 2>;
                data-lanes = <1>;
                remote-endpoint = <&csi40_in>;
            };
        };
    };
};
```

[R-Car D3]

This module option is controlled by modifying the DT (Device Tree) file (arch/arm64/boot/dts/renesas/r8a77995-draak.dts). This section explains how to change ADV7180 and ADV7612.

Set vin4 channel node for hdmi input

The HDMI input is set by default on dts, so no need to modify dts in this case.

In case of this case, also change DIP switch. (R-Car D3 only)

DIP switch	Configuration
49	ALL ON
50	ALL ON
51	ALL ON
52	ALL ON
53	ALL OFF
54	ALL OFF

Set vin4 channel node for cvbs input.

```

composite-in@20 {
    ...
    ports {
        ...
        port@3 {
            reg = <3>;
            ...
            adv7180_out: endpoint {
+               remote-endpoint = <&vin4_in>;
            };
        };
    };
};

hdmi-decoder@4c {
    ...
    ports {
        ...
        port@2 {
            ...
            adv7612_out: endpoint {
-               remote-endpoint = <&vin4_in>;
            };
        };
    };
};

&vin4 {
    ...
    ports {
        port {
            vin4_in: endpoint {
                pclk-sample = <0>;
-               hsync-active = <0>;
-               vsync-active = <0>;
-               remote-endpoint = <&adv7612_out>;
+               remote-endpoint = <&adv7180_out>;
            };
        };
    };
};

```

In case of this case, also change DIP switch. (R-Car D3 only)

DIP switch	Configuration
49	ALL OFF
50	ALL OFF
51	ALL OFF
52	ALL OFF
53	ALL ON
54	ALL ON

6.3.2 Kernel Parameters

There are no kernel parameters

CONFIDENTIAL

REVISION HISTORY		Linux Interface Specification Device Driver Video Capture User's Manual: Software	
Rev.	Date	Description	
		Page	Summary
0.1	Nov. 20, 2015	—	New creation.
0.2	Mar. 18, 2016	All	Fix a typo Fix from V4L to V4L2 Fix from AVD7482 to ADV7482 Fix from V4L2_MEMORY_MAP to V4L2_MEMORY_MMAP
		1	1.3 Restrictions Delete the description of "The channel except for the VIN0 and VIN4 are not supported. Please refer to 3.1"
		2	1.4 Notice Add the chip revision prohibited to use about scaling. Add description of available VIN channel number
		3	1.5 Terminology Add terminology of CSI41, CSI21, UDS and VC. Change from CSI-2 channel to CSI-2 LINK
		5	Figure 2.1 Module Configuration (R-Car H3) Change VIN module to select VIN channel
		7	3. Function Add description of PAL signal support
		7	Table 3.1 Video Capture connection (R-Car H3) Add VIN support channel and Video Input Connector
		7	Add Table 3.2 Connection of Video Capture and CSI2 (R-Car H3)
		9	Figure 3.1 Flow of analog data (R-Car H3) Add PAL signal support
		10	Table 3.4 Input resolution Add PAL signal support
		11	Figure 3.3 Clipping and Scaling function (R-Car H3) Change Output size from 4096x4096 to "depend on input resolution".
		11	Add Table 3.6 scaling size on the input resolution
		15	Figure 3.6 Change from V4L2_PIX_FMT_RGB555X to V4L2_PIX_FMT_ARGB555
		18	Table 4.1 VIN device node (R-Car H3) Change VIN channel about video decoder input
		26	5.3.1 Module Parameters Add module option is controlled by modifying the DT
0.3	Apr. 15, 2016	All	Add R-Car M3 support.
		13	Add notice of Full interlaced mode
0.4	Aug. 5, 2016	1	Table 1.2 / Table 3.1 Add M3 System Evaluation Board information
		2	1.4 Notice Add the horizontal clip size restriction at the time of YUV420 format output.
		7	Add Table 4.2 Video Capture connection (R-Car M3)
		8	Table 4.3 / Table 4.4 According to the update of the H/W UM, and modify the table
		10	Table 4.8 Change refresh rate from 720x576p @ 60Hz to 720x576p @ 50Hz.
		12	Figure 4.5 Add note of caution to notice
		14	4.7 Initialization Process / 4.8 Capture Process Add Use method of DMABUF and USERPTR memory type
		24	Add 4.2 IPMMU setting
0.5	Dec. 16, 2016	1	Table 1.1 Update reference URL for V4L2 API
		5	3.2 Module Configuration Add Media Controller

CONFIDENTIAL

		7	Table 4.1 / Table4.2 Delete default comment
		8	Table 4.3 / Table 4.4 Change default setting information of IFMD
		13	Table 4.11 Field order (R-Car H3 / M3) Add V4L2_FIELD_ALTERNATE field support
		18	Table 5.1 VIN device node (R-Car H3 / M3) Add connection in case of M3
		25	5.2 IPMMU Setting Add description of r8a7795-es1.dtsi
		29	Add 5.3 Media Controller API
		32	6.1 Directory Configuration Change file name for kernel version up
		33	6.2.1 Video Capture Driver Change configuration name for kernel version up
		34	6.3.1 Module Parameters Change dt description for kernel version up
0.6	Mar. 15, 2017	1	Table 1.2 Related document (R-Car H3 / M3) Update revision of H/W manual and add Salvator-XS manual
		10	Add Table 4.4 Connection of Video Capture and CSI2 (R-Car H3 (ES2.0))
		10	Table 4.7 Output format (R-Car H3 / M3) Add notice of NV12 format
		17	Figure 4.6 Initialization sequence of V4L Add processing to execute ioctl(VIDIOC_QBUF) multiple times before ioctl(VIDIOC_STREAMON)
		28	5.2 IPMMU Setting Add arch/arm64/boot/dts/renesas/r8a7795.dtsi for R-Car H3(WS2.0)
0.7	Jun. 14, 2017	-	Fix H/W revision notation from ES to Ver.
		1	Table 1.2 Related document (R-Car H3 / M3) Update revision of H/W manual
		37	6.3.1 Module Parameters Add data lane number option for video decoder
1.00	Aug. 8, 2017	All	Update document format.
		21	Add 5.1.3 ioctl(VIDIOC_G_FMT)
		12,13,16,22	Fix scaling width specification to a multiple of 16 instead of a multiple of 32.
1.0.1	Oct. 24, 2017	All	Add R-Car M3N support.
		1	Table 1.2 Related document (R-Car H3 / M3 / M3N) Update revision of H/W manual
1.50	Jan. 29, 2018	-	Update for kernel v4.14
		15	4.6 Field order Delete field order of V4L2_FIELD_ALTERNATE (unsupported from v4.14)
		15	4.6 Field order Add V4L2_FIELD_SEQ_TB/BT support
		-	Delete IPMMU setting.
1.51	Mar. 28,2018	All	Add R-Car E3 support.
1.52	Apr. 25, 2018	10	Table 4.8 Input/output format (R-Car H3 / M3 / M3N / E3) Add Media Bus Pixel Code that VIN driver supports
		22	5.1.2 ioctl(VIDIOC_REQBUFS) Notice Add notice of single capture
		29	5.2.3 Configuring the pipeline and propagate format Add notice for R-Car E3 when CVBS input.
1.53	Jun. 27, 2018	8,9	Add CSI_CHSEL[2:0] value about table of Connection of Video Capture and CSI2, Add "EMB is not supported in this driver" in E3 table
		28	5.2.2 Activate/Deactivate a link Add example for R-Car E3 Fix from IFMD to CSI_CHSEL[3:0]
		29	5.2.3 Configuring the pipeline and propagate format Add notice in R-Car E3

CONFIDENTIAL

		33	6.3.1 Module Parameters Add notice of virtual-channel setting Add notice of lane setting in R-Car E3
1.54	Oct. 22, 2018	1	1.2.2 Related Documents Update Related Documents
1.55	Oct. 29, 2018	2	1.4 Notice Add notice of using NV12 format
		10,12, 14,23	Add note to be rounded to multiples of 32 at NV12/NV16 format
		20	5. External Interface Fix minor number by kernel version up
		27	5.2.1 Show current routing Update information for Itsi-2018
		28	5.2.2 Activate/Deactivate a link Update information for Itsi-2018
2.00	Dec. 25, 2018	-	Update AddressList
		1	Table 1.2 Related documents Update reference documents
		3	Table 3.1 Hardware environment Update board name
		20	5. External Interface Add comment for subdevice
		34	6.3.1 Module Parameters Change vin4/vin5 channel node for cvbs input Fix node setting method for cvbs input in Ebisu board.
2.01	Apr. 17, 2019	-	Update AddressList
		1	Table 1.2 Related documents (R-Car H3 / M3 / M3N / E3) Update reference manual
		17	Figure 4.8 Add notice of timing that media-ctl is set
		34	6.3.1 Module Parameters Add description of r8a77990-es10-ebisu.dts
2.02	Jun. 26, 2019	17	4.8 Capture Process Figure 4.8 Initialization sequence of V4L2 (In case of /dev/videoX) Add note of configuring routing by media-ctl
2.50	Apr. 24, 2020	-	Update for kernel v5.4
		-	Add R-Car V3U support
2.51	Jun. 24, 2020	36	Fix device node information for updating for kernel v5.4
2.52		33	Add routing example command for cvbs in H3/M3/M3N/E3
2.53	Dec. 1, 2020	1	Fix Edition and Data of H/W manual for V3U/Falcon
		2	1.4 Notice Add that BPS bit is not supported
		2	1.4 Notice Add supported camera name.
		3	Table 2.1 Terminology Add terminology of BPS
		23	Table 5.1 Add major/minor number of device file for V3U
		24	Table 5.3 Fix Major number for V3U
		28	Delete ioctl(VIDIOC_CROPCAP) by kernel version up
		37	Figure 6.1 Add source/header files for V3U
		38	Video Capture Driver [R-Car H3 / M3 / M3N / E3 / V3U] Add configuration for V3U
2.54	Jan. 29, 2020	-	Add R-Car V3H v2.0 support.
2.55	Apr. 21, 2021	-	Add R-Car D3 support
		-	Add Kernel 5.10 support
2.56	Aug. 16, 2021	46	Update setting for HDMI input in D3

CONFIDENTIAL

3.00	Dec. 10, 2021	-	Add Kernel v5.10.41 support
3.1.0	Dec. 25, 2023	-	Add Kernel v5.19.194 support for H3, M3, M3N, E3

CONFIDENTIAL

Linux Interface Specification Device Driver Video Capture
User's Manual: Software

Publication Date: Rev. 0.1 Nov. 20, 2015
Rev. 3.1.0 Dec. 12, 2023

Published by: Renesas Electronics Corporation



SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

Renesas Electronics Corporation

TOYOSU FORESIA, 3-2-24 Toyosu, Koto-ku, Tokyo 135-0061, Japan

Renesas Electronics America Inc. Milpitas Campus

1001 Murphy Ranch Road, Milpitas, CA 95035, U.S.A.
Tel: +1-408-432-8888, Fax: +1-408-434-5351

Renesas Electronics America Inc. San Jose Campus

6024 Silver Creek Valley Road, San Jose, CA 95138, USA
Tel: +1-408-284-8200, Fax: +1-408-284-2775

Renesas Electronics Canada Limited

9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3
Tel: +1-905-237-2004

Renesas Electronics Europe GmbH

Arcadiastrasse 10, 40472 Düsseldorf, Germany
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd.

Room 101-T01, Floor 1, Building 7, Yard No. 7, 8th Street, Shangdi, Haidian District, Beijing 100085, China
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.

Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai 200333, China
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

Renesas Electronics Hong Kong Limited

Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong
Tel: +852-2265-6688, Fax: +852 2886-9022

Renesas Electronics Taiwan Co., Ltd.

13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan
Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

Renesas Electronics Singapore Pte. Ltd.

80 Bendemeer Road, #06-02 Singapore 339949
Tel: +65-6213-0200, Fax: +65-6213-0300

Renesas Electronics Malaysia Sdn.Bhd.

Unit No 3A-1 Level 3A Tower 8 UOA Business Park, No 1 Jalan Pengaturcara U1/51A, Seksyen U1, 40150 Shah Alam, Selangor, Malaysia
Tel: +60-3-5022-1288, Fax: +60-3-5022-1290

Renesas Electronics India Pvt. Ltd.

No.777C, 100 Feet Road, HAL 2nd Stage, Indiranagar, Bangalore 560 038, India
Tel: +91-80-67208700

Renesas Electronics Korea Co., Ltd.

17F, KAMCO Yangjae Tower, 262, Gangnam-daero, Gangnam-gu, Seoul, 06265 Korea
Tel: +82-2-558-3737, Fax: +82-2-558-5338



ルネサスエレクトロニクス株式会社

■営業お問合せ窓口

<http://www.renesas.com>

※営業お問合せ窓口の住所は変更になることがあります。最新情報につきましては、弊社ホームページをご覧ください。

ルネサス エレクトロニクス株式会社 〒135-0061 東京都江東区豊洲3-2-24（豊洲フォレシア）

■技術的なお問合せおよび資料のご請求は下記へどうぞ。
総合お問合せ窓口：<https://www.renesas.com/contact/>

Linux Interface Specification Device Driver Video Capture



Renesas Electronics Corporation