

OPL1000

ULTRA-LOW POWER 2.4GHZ WI-FI + BLUETOOTH SMART SoC

BLE to WiFi Application Development Guide



OPULINKS

<http://www.opulinks.com/> Copyright © 2017-2018, Opulinks. All Rights Reserved.

OPL1000-BLEWIFI-Application-Dev-Guide-R01 | Version 04

| Date | Version | Contents Updated |
|-----------|---------|---------------------------------------------------------|
| 2018/4/1 | 0.1 | ● Initial Release |
| 2018/6/19 | 0.2 | ● Add message chart and add new command IDs |
| 2018/6/20 | 0.3 | ● Modify WIFI status part |
| 2018/7/19 | 0.4 | ● Add document application scope, abbr., reference etc. |

TABLE OF CONTENTS

| | |
|-----------------------------------------|----|
| 1. 介绍 | 3 |
| 1.1. 文档应用范围 | 3 |
| 1.2. 缩略语 | 3 |
| 1.3. 参考文献 | 3 |
| 2. List of Command ID | 4 |
| 3. The Usage of Command ID | 6 |
| 3.1. SCAN REQUEST | 6 |
| 3.2. SCAN REPORT RESPONSE | 6 |
| 3.3. SCAN RESPONSE END | 7 |
| 3.4. CONNECT REQUEST | 8 |
| 3.5. CONNECT RESPONSE | 8 |
| 3.6. DISCONNECT REQUEST | 9 |
| 3.7. DISCONNECT RESPONSE | 10 |
| 3.8. RECONNECT REQUEST | 10 |
| 3.9. RECONNECT RESPONSE | 11 |
| 3.10. READ DEVICE INFORMATION REQUEST | 12 |
| 3.11. READ DEVICE INFORMATION RESPONSE | 12 |
| 3.12. WRITE DEVICE INFORMATION REQUEST | 13 |
| 3.13. WRITE DEVICE INFORMATION RESPONSE | 13 |
| 3.14. WIFI STATUS REQUEST | 14 |
| 3.15. WIFI STATUS RESPONSE | 15 |
| 3.16. RESET REQUEST | 16 |
| 3.17. RESET RESPONSE | 16 |
| 4. Message Chart | 17 |
| 4.1. Wi-Fi Scan | 17 |
| 4.2. Wi-Fi Scan (TimeOut) | 18 |
| 4.3. Wi-Fi Scan (REPORT TimeOut) | 19 |
| 4.4. Wi-Fi Status | 20 |
| 4.5. Wi-Fi Status (TimeOut) | 21 |
| 4.6. Wi-Fi Connect | 22 |
| 4.7. Wi-Fi Connect (Failure) | 23 |
| 4.8. Wi-Fi Connect (TimeOut) | 24 |
| 4.9. Wi-Fi Disconnect | 25 |
| 4.10. Wi-Fi Disconnect (TimeOut) | 26 |
| 4.11. Wi-Fi Reset | 27 |

| | |
|-----------------------------|----|
| 4.12. Wi-Fi Reset (Failure) | 28 |
| 4.13. Wi-Fi Reset (TimeOut) | 29 |

1. 介绍

1.1. 文档应用范围

本文介绍了通过 BLE 配网 WIFI AP 的过程，使用的 API 调用接口以及消息流程。对应于 OPL1000 SDK Package 的示例工程 SDK\APS_PATCH\examples\bluetooth\blewifi。

1.2. 缩略语

| Abbr. | Explanation |
|-------|-------------------------|
| BLE | Bluetooth Energy 低功耗蓝牙 |
| WIFI | Wireless Fidelity 无线局域网 |

1.3. 参考文献

[1] BLE 配网 WIFI AP 演示说明 OPL1000-Demo-BLE-setup-network-guide.pdf


2. List of Command ID

| Name | Value | Description |
|-------------------------------|--------|--------------------------------------------------------------------------------------------------|
| BLEWIFI_REQ_SCAN | 0x0000 | The app sends a request of scan command to driver. |
| BLEWIFI_REQ_CONNECT | 0x0001 | The app sends a request of connect command to driver. |
| BLEWIFI_REQ_DISCONNECT | 0x0002 | The app sends a request of disconnect command to driver. |
| BLEWIFI_REQ_RECONNECT | 0x0003 | The app sends a request of reconnect command to driver. |
| BLEWIFI_REQ_READ_DEVICE_INFO | 0x0004 | The app sends a request of get device information. |
| BLEWIFI_REQ_WRITE_DEVICE_INFO | 0x0005 | The app sends a request of set device information. |
| BLEWIFI_REQ_WIFI_STATUS | 0x0006 | The app send a request of get Wi-Fi status |
| BLEWIFI_REQ_RESET | 0x0007 | The app send a request of reset Wi-Fi record |
| BLEWIFI_RSP_SCAN_REPORT | 0x1000 | Driver reports an event of scan results to app. |
| BLEWIFI_RSP_SCAN_END | 0x1001 | Driver reports an event of scan end to app, to notify app to stop to receive scan result events. |
| BLEWIFI_RSP_CONNECT | 0x1002 | Driver reports an event of connect to app. |
| BLEWIFI_RSP_DISCONNECT | 0x1003 | Driver reports an event of disconnect to app. |
| BLEWIFI_RSP_RECONNECT | 0x1004 | Driver reports an event of reconnect to app. |
| BLEWIFI_RSP_READ_DEVICE_INFO | 0x1005 | Driver reports data of device information. |
| BLEWIFI_RSP_WRITE_DEVICE_INFO | 0x1006 | Driver reports an event about |

| Name | Value | Description |
|-------------------------|--------|----------------------------------------------------------|
| | | whether the data is set successfully or not. |
| BLEWIFI_RSP_WIFI_STATUS | 0x1007 | Driver report an event of Wi-Fi status of device to app. |
| BLEWIFI_RSP_RESET | 0x1008 | Driver report an event reset results to app. |


3. The Usage of Command ID

3.1. SCAN REQUEST

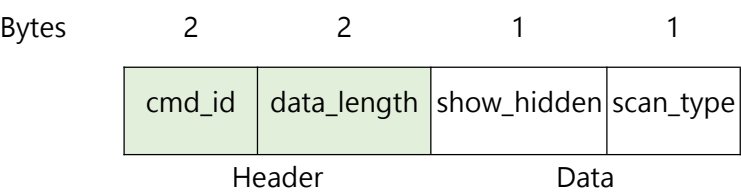


- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.
- Show_hidden: Enable to scan AP whose SSID is hidden; enable (1), disable (0).
- Scan_type: Scan type, active or passive; active (0), passive (1).

Example for frame format:

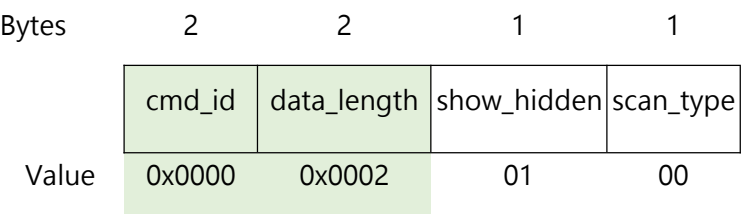

3.2. SCAN REPORT RESPONSE

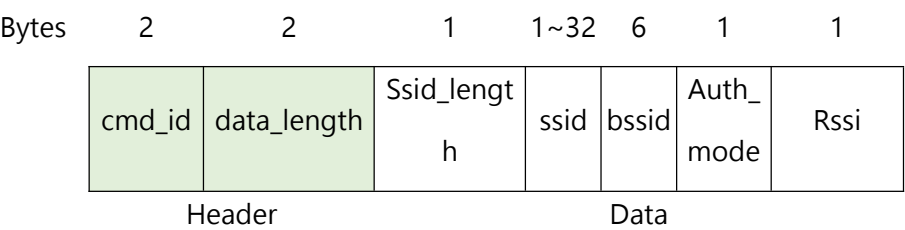

- CMD_ID: Command ID, please refer to Command ID section.

- Data_Length: Size of data.
- Ssid_length: Length of the SSID.
- Ssid: Stores the predefined SSID.
- Bssid: AP's MAC address.
- Auth_mode: This defines the wireless authentication mode to indicate the Wi-Fi device authentication attribute. Open (0), WEP (1), WPA_PSK (2), WPA2_PSK (3), WPA_WPA2_PSK (4), WPA2_ENTERPRISE (5).
- Rssi: Records the RSSI value when probe response is received.

Example for frame format:

| | | | | | | | |
|-------|--------|-------------|-------------|-------------------------|-------------------|-----------|------|
| Bytes | 2 | 2 | 1 | 1~32 | 6 | 1 | 1 |
| | cmd_id | data_length | Ssid_length | ssid | bssid | Auth_mode | Rssi |
| Value | 0x1000 | 0x0017 | 08 | 44 2d 4c 69 6e 6b 5f 44 | 74 DA DA E7 08 F1 | 03 | 1E |

3.3. SCAN RESPONSE END


| | | |
|-------|--------|-------------|
| Bytes | 2 | 2 |
| | cmd_id | data_length |
| | Header | |

- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.

Example for frame format:


| | | |
|-------|--------|-------------|
| Bytes | 2 | 2 |
| | cmd_id | data_length |
| Value | 0x1001 | 0x0000 |

3.4. CONNECT REQUEST

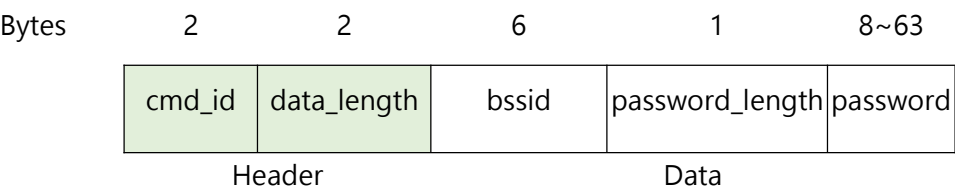


- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.
- Bssid: AP's MAC address.
- Password_length: The length of the password.
- Password: The password of the target AP.

Example for frame format:

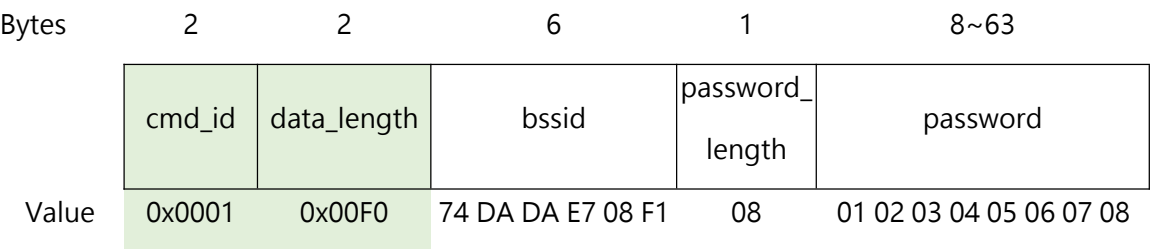

3.5. CONNECT RESPONSE

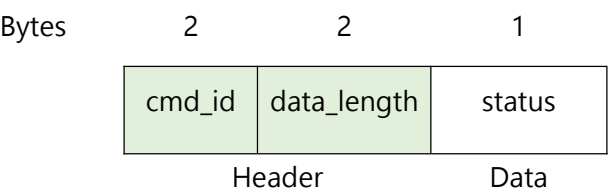

- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.

- Status: Return success (0) or failed reason code (1).

Example for frame format:

| | | | |
|-------|--------|-------------|--------|
| Bytes | 2 | 2 | 1 |
| | cmd_id | data_length | status |
| Value | 0x1002 | 0x0001 | 00 |

3.6. DISCONNECT REQUEST


| | | |
|-------|--------|-------------|
| Bytes | 2 | 2 |
| | cmd_id | data_length |
| | Header | |

- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.

Example for frame format:


| | | |
|-------|--------|-------------|
| Bytes | 2 | 2 |
| | cmd_id | data_length |
| Value | 0x0002 | 0x0000 |

3.7. DISCONNECT RESPONSE

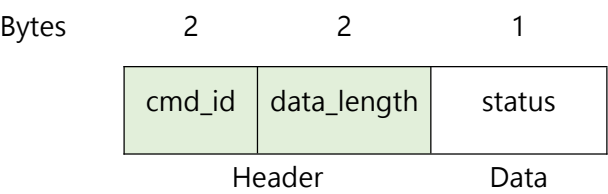


- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.
- Status: Return success (0) or failed reason code (1).

Example for frame format:

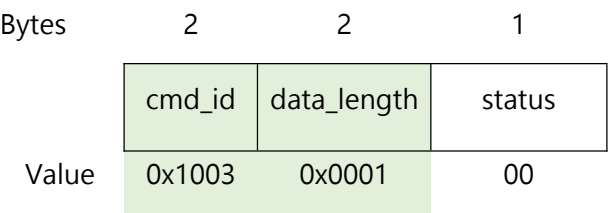


3.8. RECONNECT REQUEST

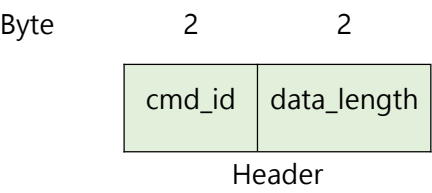

- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.

Example for frame format:



| | | |
|-------|--------|-------------|
| | cmd_id | data_length |
| Value | 0x0003 | 0x0000 |

3.9. RECONNECT RESPONSE


| | | | |
|------|--------|-------------|--------|
| Byte | 2 | 2 | 1 |
| | cmd_id | data_length | status |
| | Header | | Data |

- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.
- Status: Return success (0) or failed reason code (1).

Example for frame format:


| | | | |
|-------|--------|-------------|--------|
| Byte | 2 | 2 | 1 |
| | cmd_id | data_length | status |
| Value | 0x1004 | 0x0001 | 00 |

3.10. READ DEVICE INFORMATION REQUEST

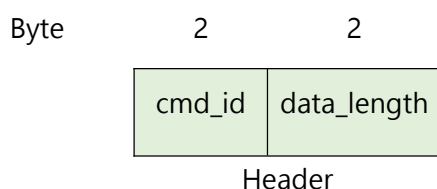


- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.

Example for frame format:

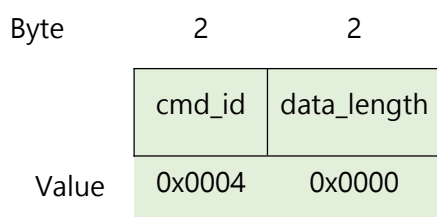

3.11. READ DEVICE INFORMATION RESPONSE

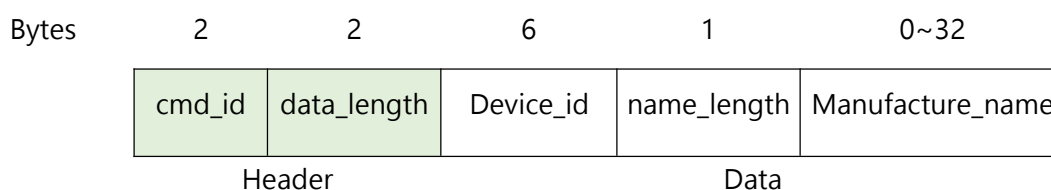

- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.
- Device_Id: The device MAC address.
- Name_Length: The length of the manufacture name.
- Manufacture Name: The device manufacture name.

Example for frame format:

| | | | | | |
|-------|--------|-------------|-------------------|-------------|------------------|
| Bytes | 2 | 2 | 6 | 1 | 7 |
| | cmd_id | data_length | Device_id | name_length | Manufacture_name |
| Value | 0x1005 | 0x000E | AA BB CC DD EE FF | 07 | Example |

3.12. WRITE DEVICE INFORMATION REQUEST

| | | | | | |
|-------|--------|-------------|-----------|-------------|------------------|
| Bytes | 2 | 2 | 6 | 1 | 0~32 |
| | cmd_id | data_length | Device_id | name_length | Manufacture_name |
| | Header | | Data | | |

- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.
- Device_Id: The device MAC address.
- Name_Length: The length of the manufacture name.
- Manufacture_Name: The device manufacture name.

Example for frame format:

| | | | | | |
|-------|--------|-------------|-------------------|-------------|------------------|
| Bytes | 2 | 2 | 6 | 1 | 8 |
| | cmd_id | data_length | Device_id | name_length | Manufacture_name |
| Value | 0x0005 | 0x000F | AA BB CC DD EE FF | 08 | Example2 |

3.13. WRITE DEVICE INFORMATION RESPONSE

| | | | |
|-------|--------|-------------|--------|
| Bytes | 2 | 2 | 1 |
| | cmd_id | data_length | status |
| | Header | | Data |

- CMD_ID: Command ID, please refer to Command ID section.
- Data_Length: Size of data.
- Status: Return success (0) or failed reason code (1).

Example for frame format:

| | | | |
|-------|--------|-------------|--------|
| Bytes | 2 | 2 | 1 |
| | cmd_id | data_length | status |
| Value | 0x1006 | 0x0001 | 00 |

3.14. WIFI STATUS REQUEST


| | | |
|-------|--------|-------------|
| Bytes | 2 | 2 |
| | cmd_id | data_length |
| | Header | |

- CMD_ID : command ID, please refer to section of Command ID.
- Data_Length : size of data

Example for frame format:


| | | |
|-------|--------|-------------|
| Bytes | 2 | 2 |
| | cmd_id | data_length |
| Value | 0x0006 | 0x0000 |

3.15. WIFI STATUS RESPONSE

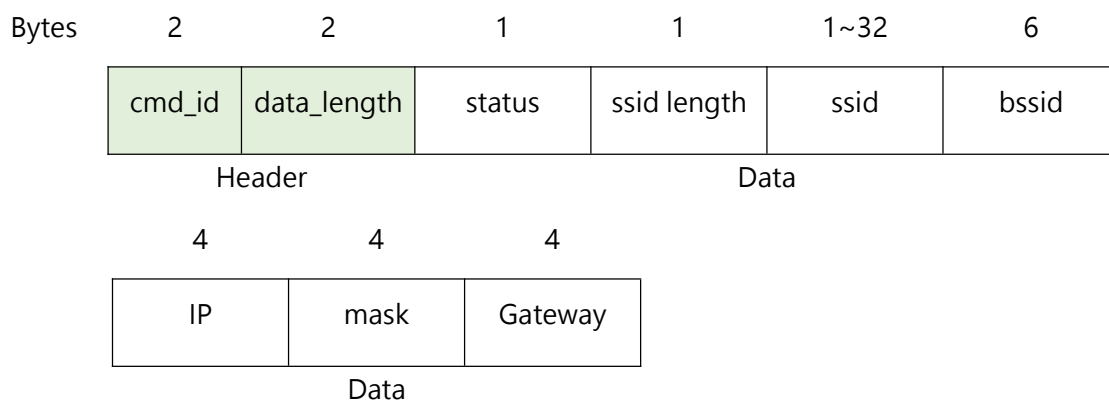


- CMD_ID : command ID, please refer to section of Command ID.
- Data_Length : size of data
- Status : return success (0) or failed reason code (1)
- Ssid_length: Length of the SSID.
- Ssid: Stores the predefined SSID.
- Bssid: AP's MAC address.
- IP: The IP address of device.
- Mask: The mask IP address of device.
- Gateway: The gateway IP address which get to device.

Example for frame format:

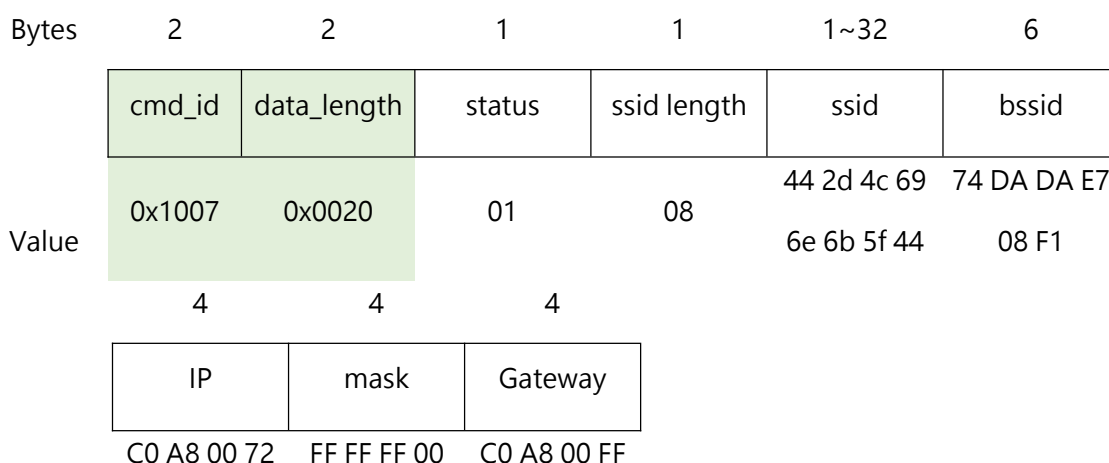


3.16. RESET REQUEST

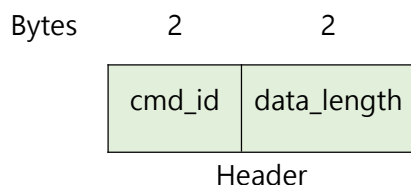


- CMD_ID : command ID, please refer to section of Command ID.
- Data_Length : size of data

Example for frame format:

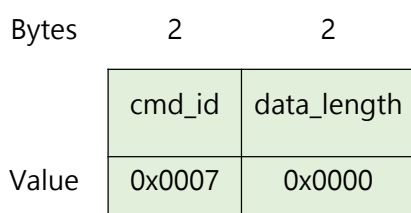


3.17. RESET RESPONSE

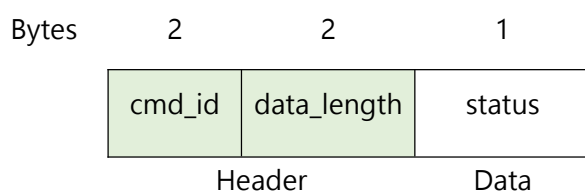


- CMD_ID : command ID, please refer to section of Command ID.
- Data_Length : size of data
- Status : return success (0) or failed reason code (1)

Example for frame format:

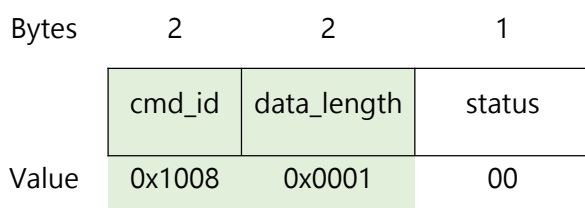


4. Message Chart


4.1. Wi-Fi Scan

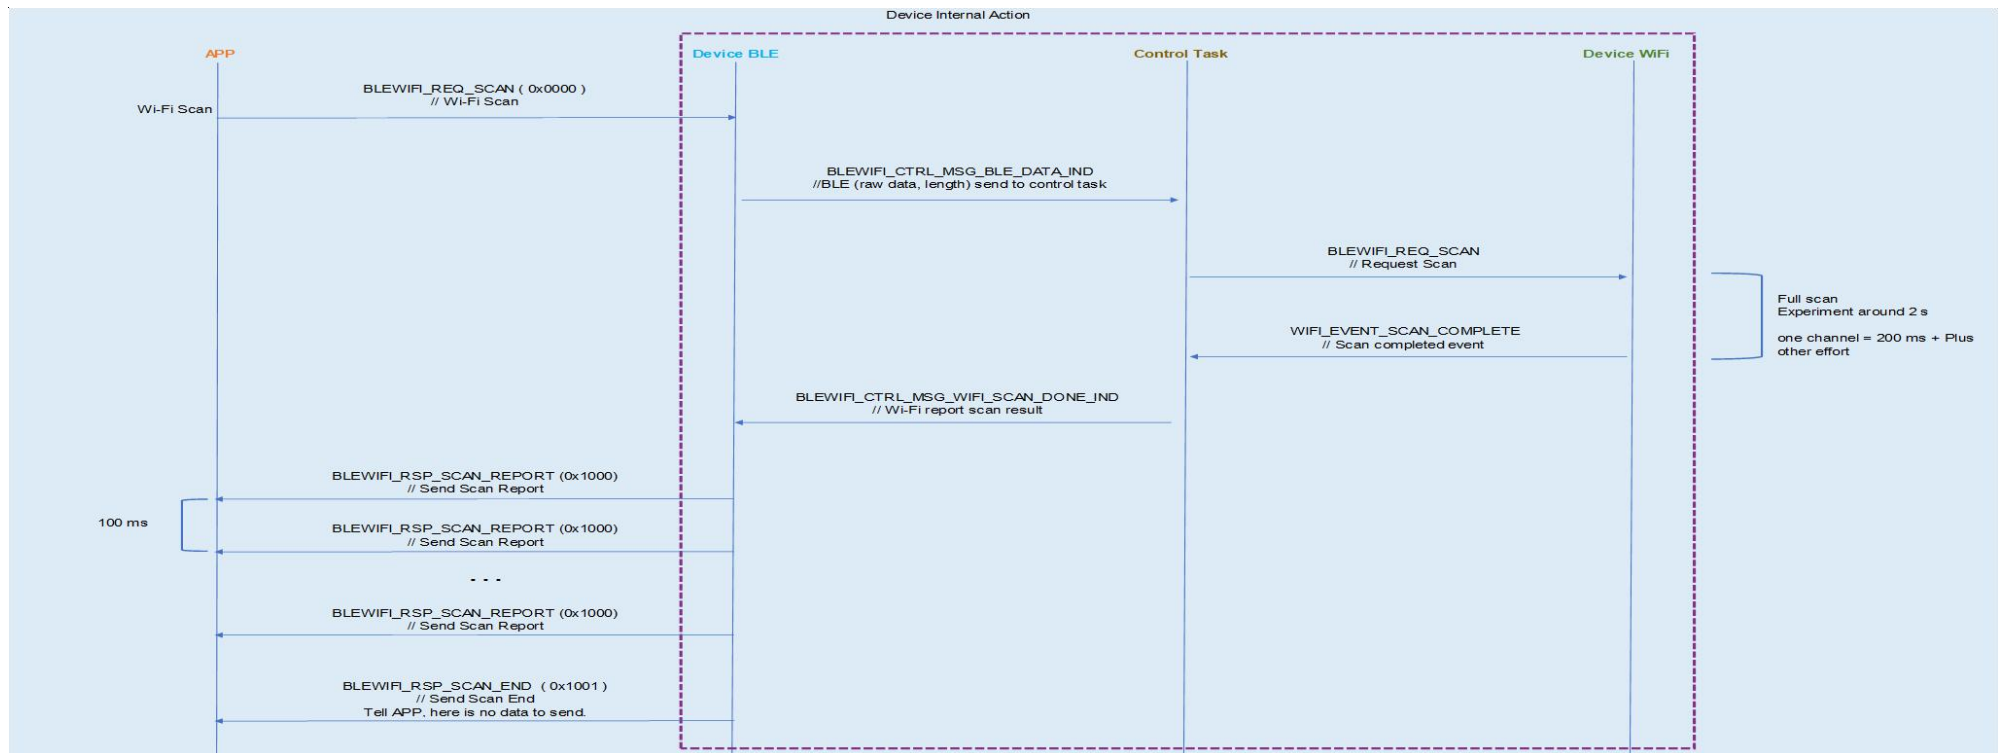


4.2. Wi-Fi Scan (TimeOut)

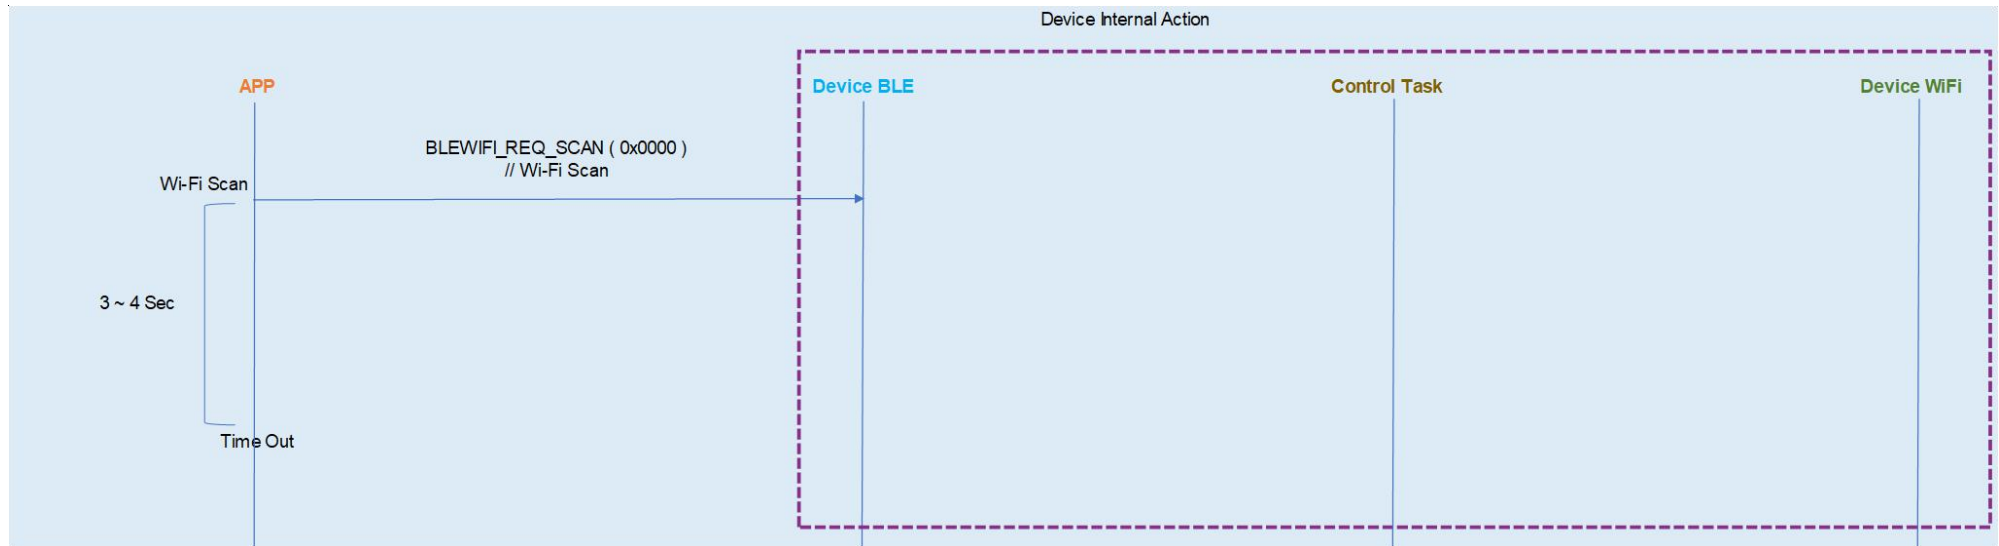


4.3. Wi-Fi Scan (REPORT TimeOut)

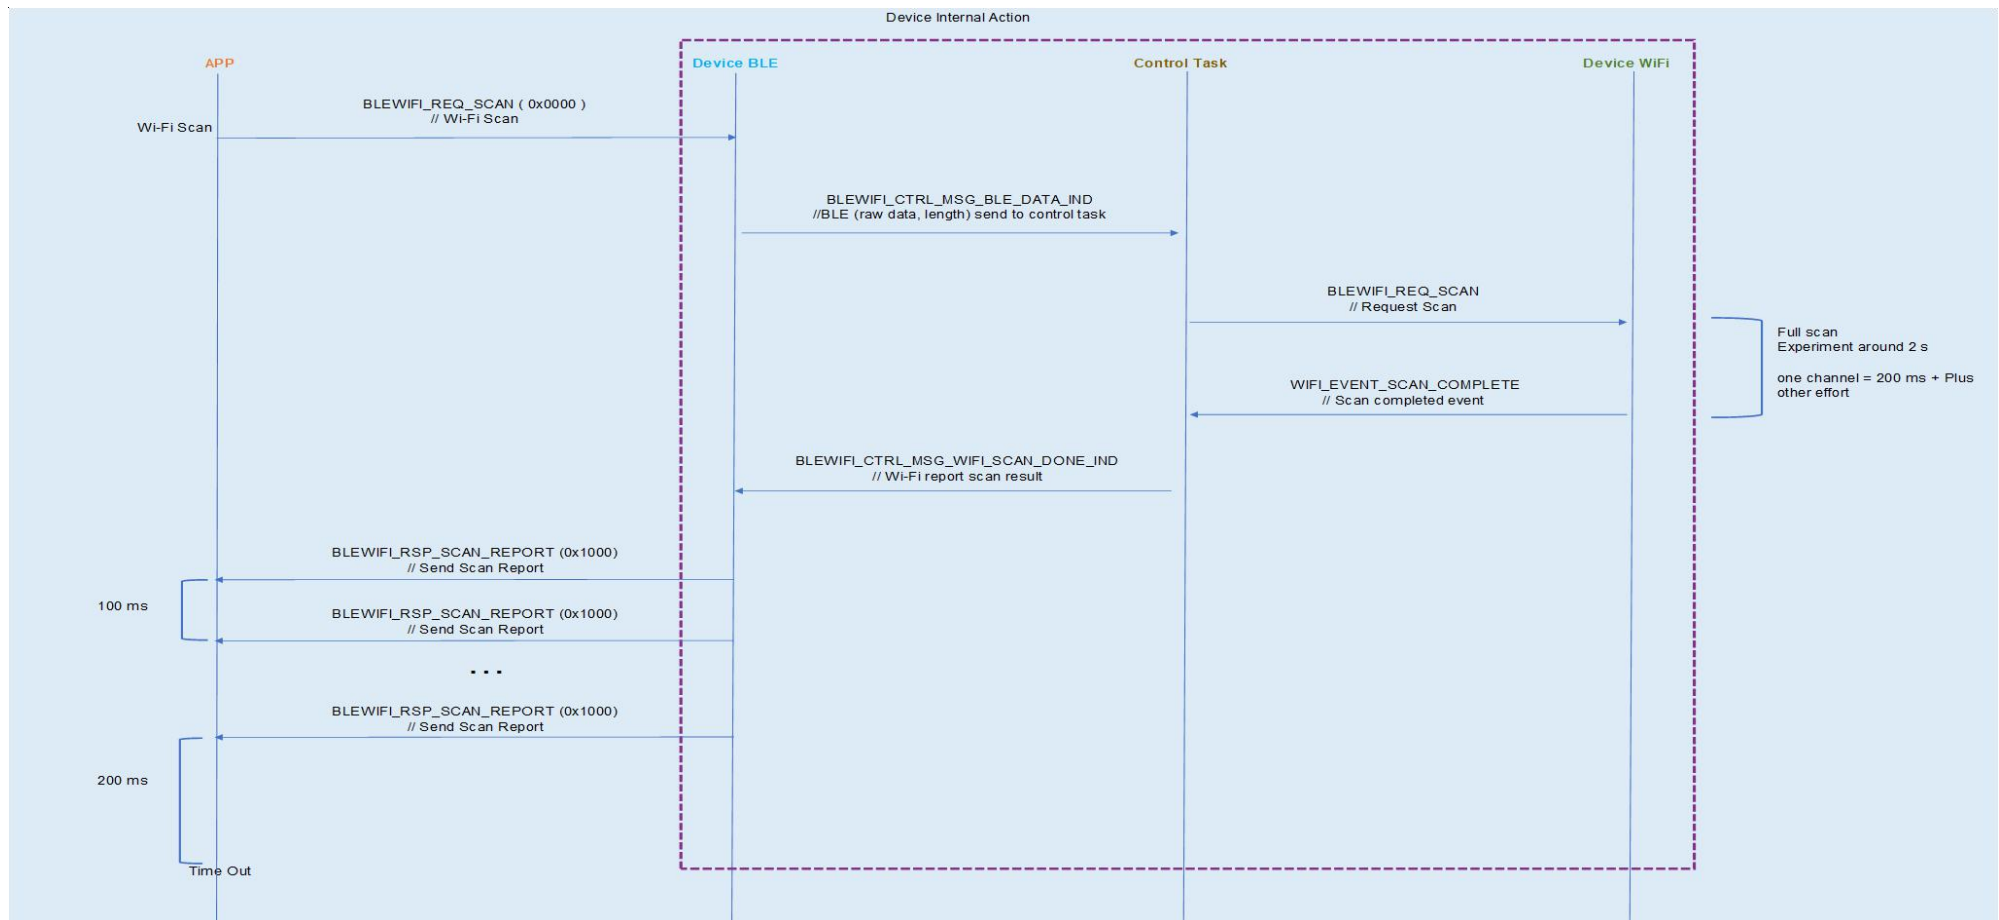


4.4. Wi-Fi Status

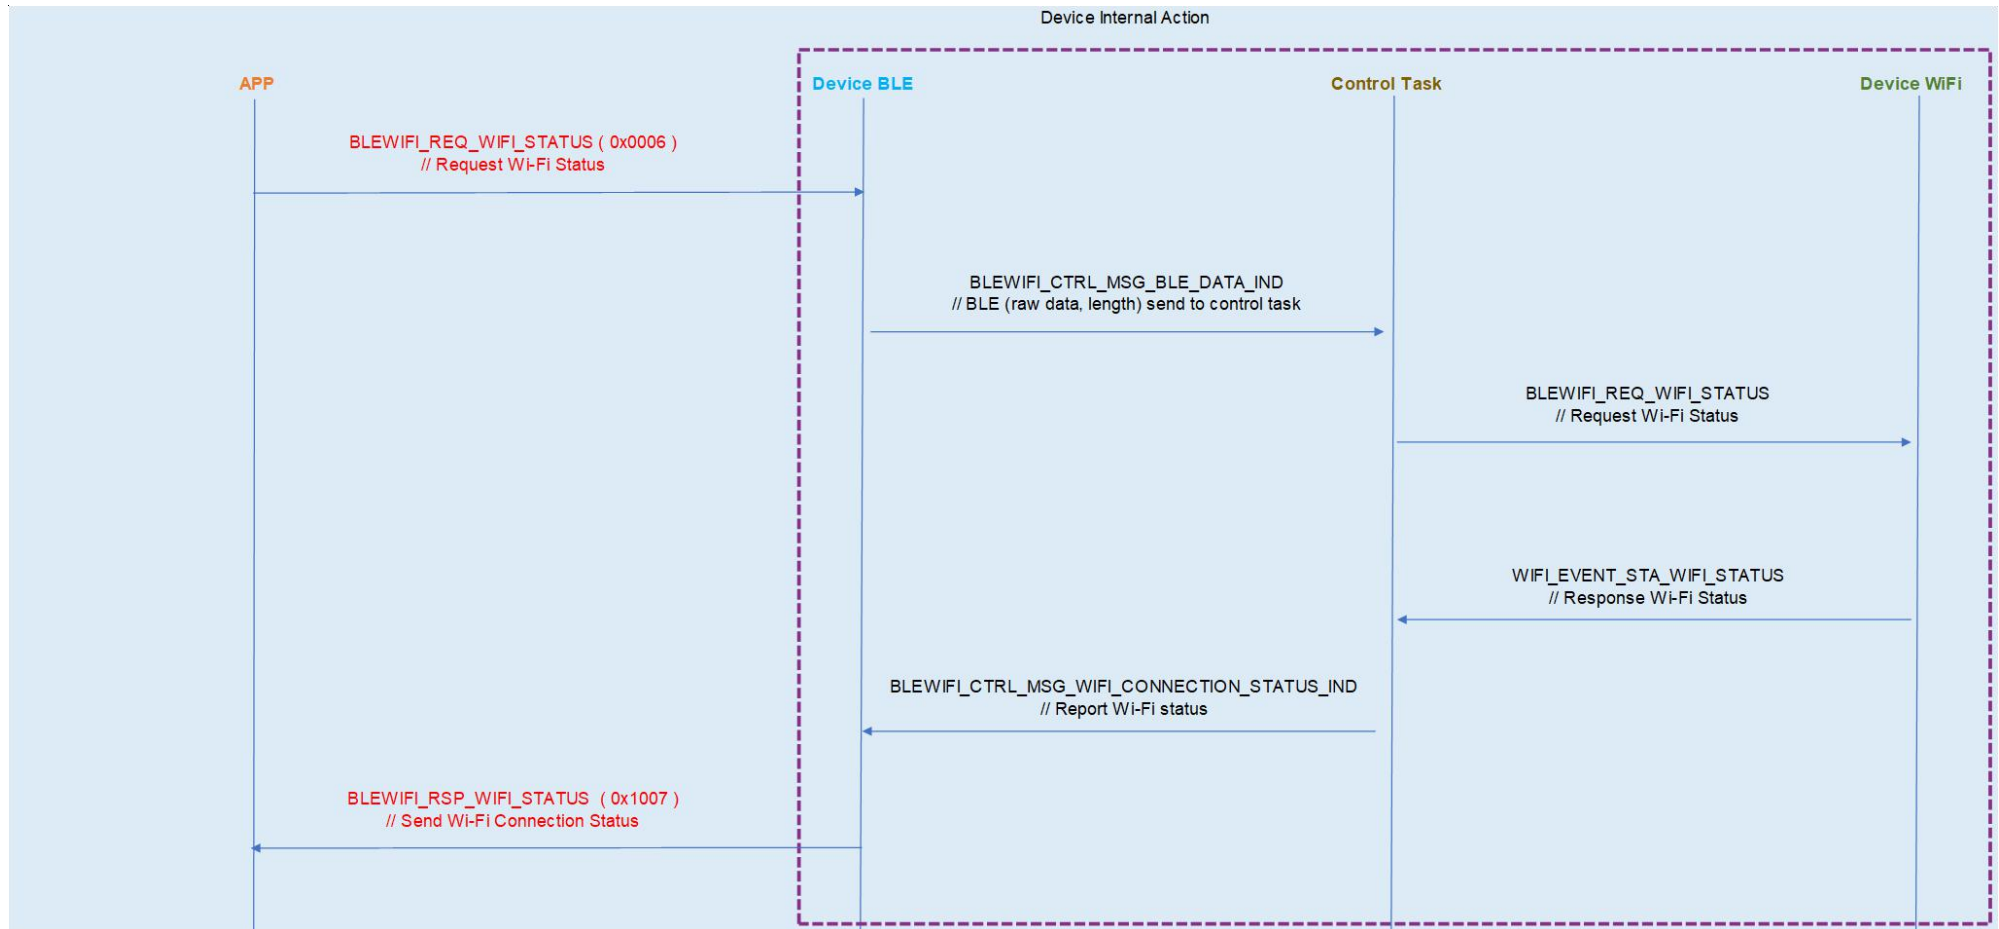


4.5. Wi-Fi Status (TimeOut)

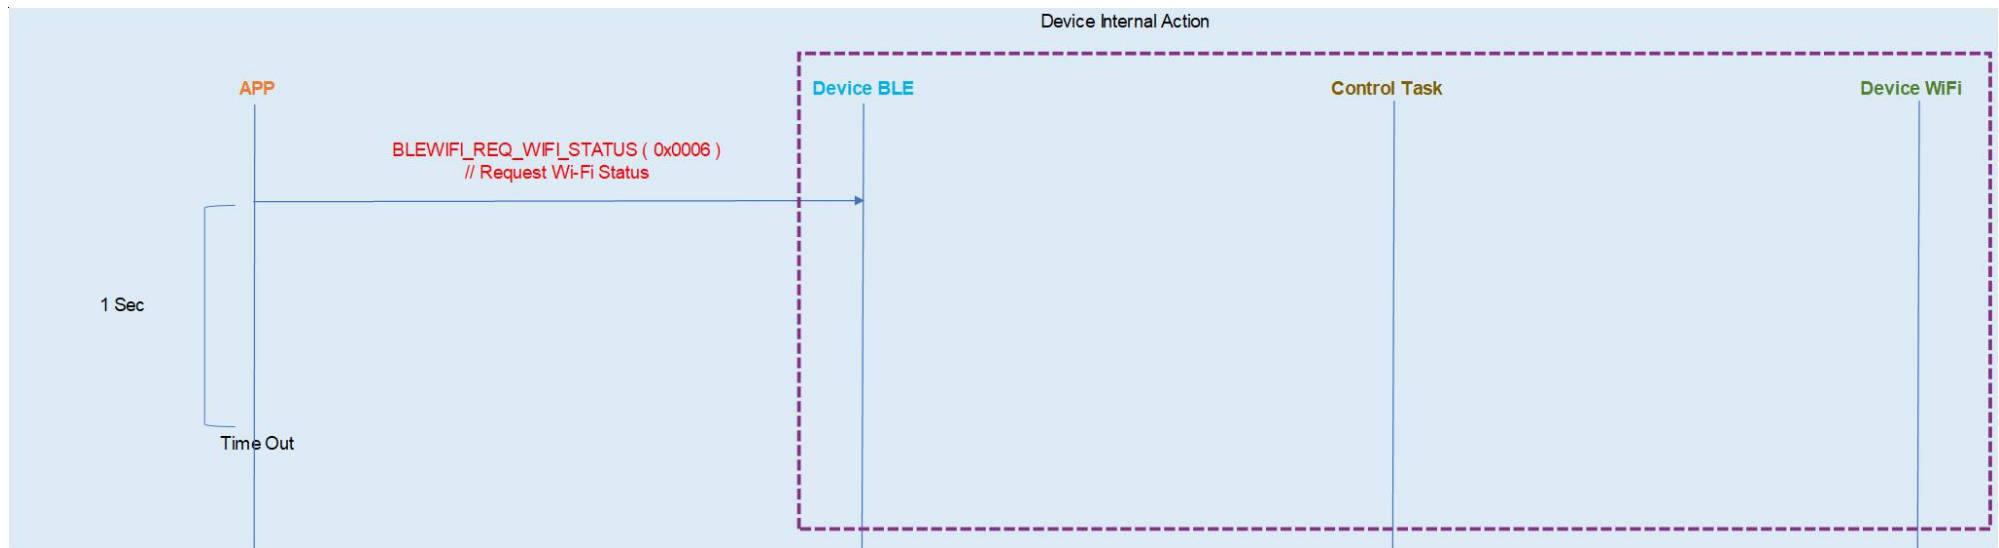


4.6. Wi-Fi Connect

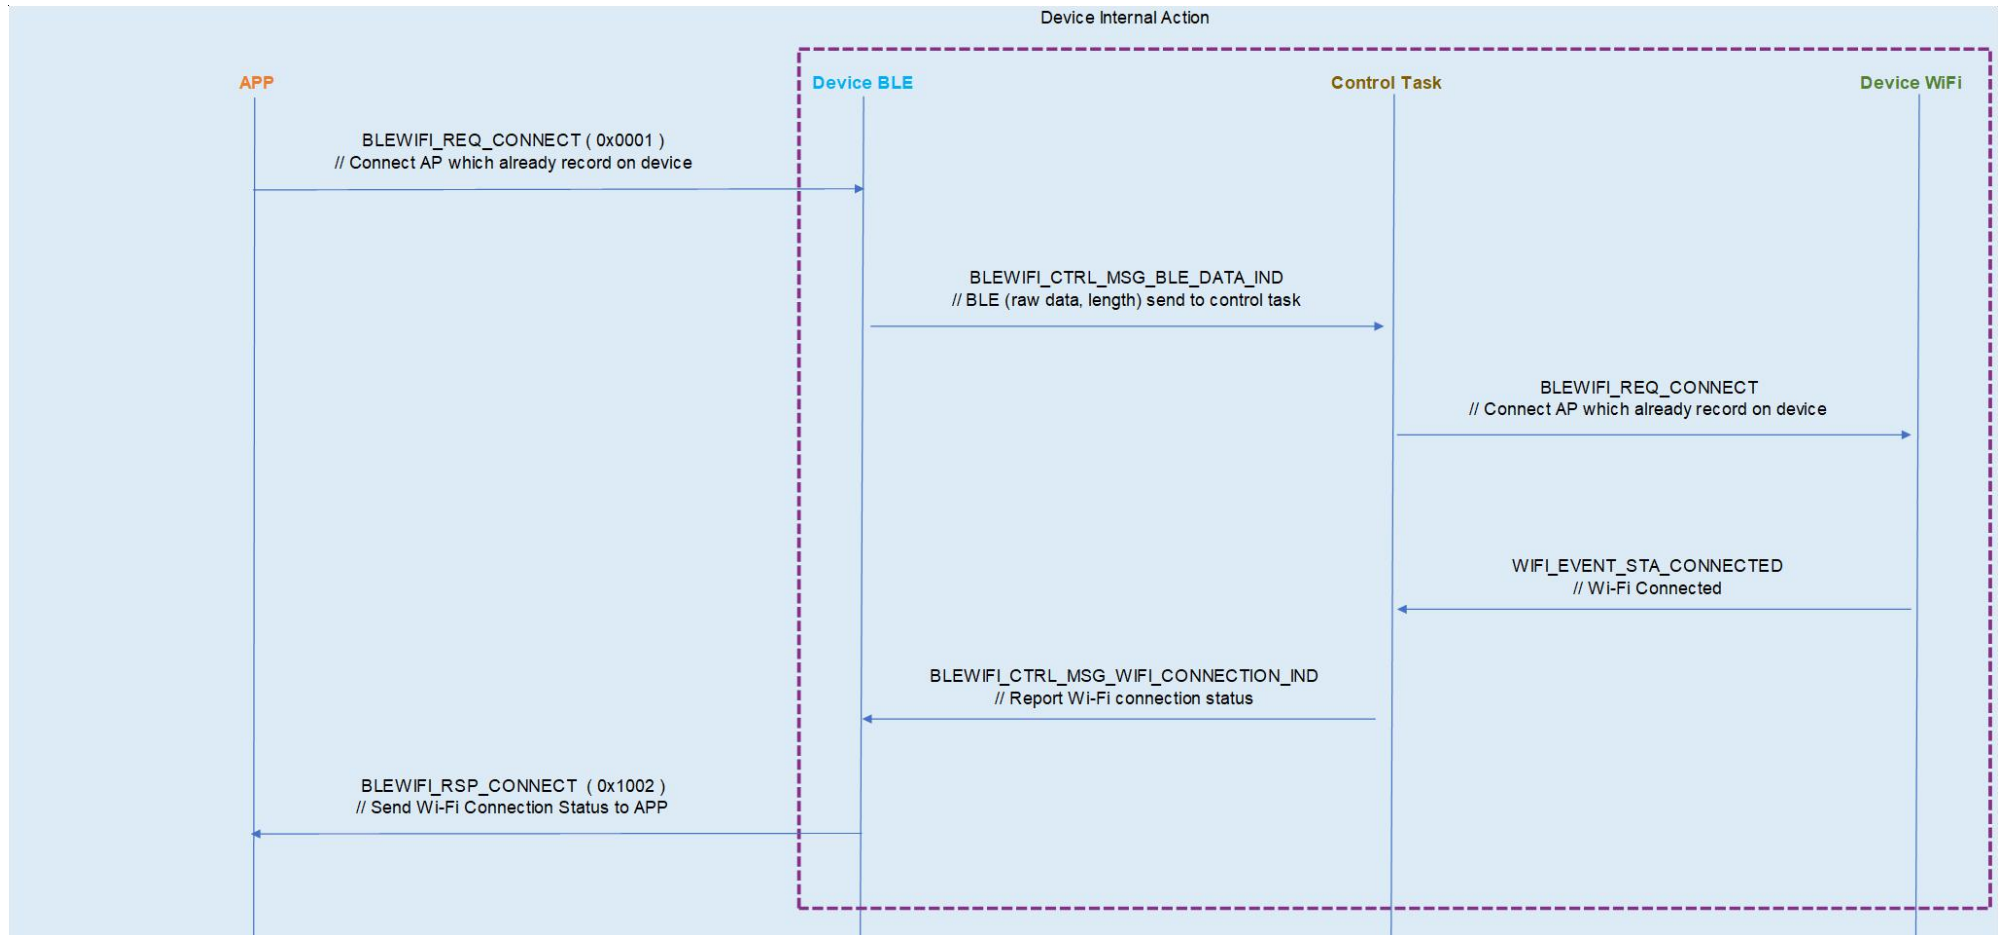


4.7. Wi-Fi Connect (Failure)

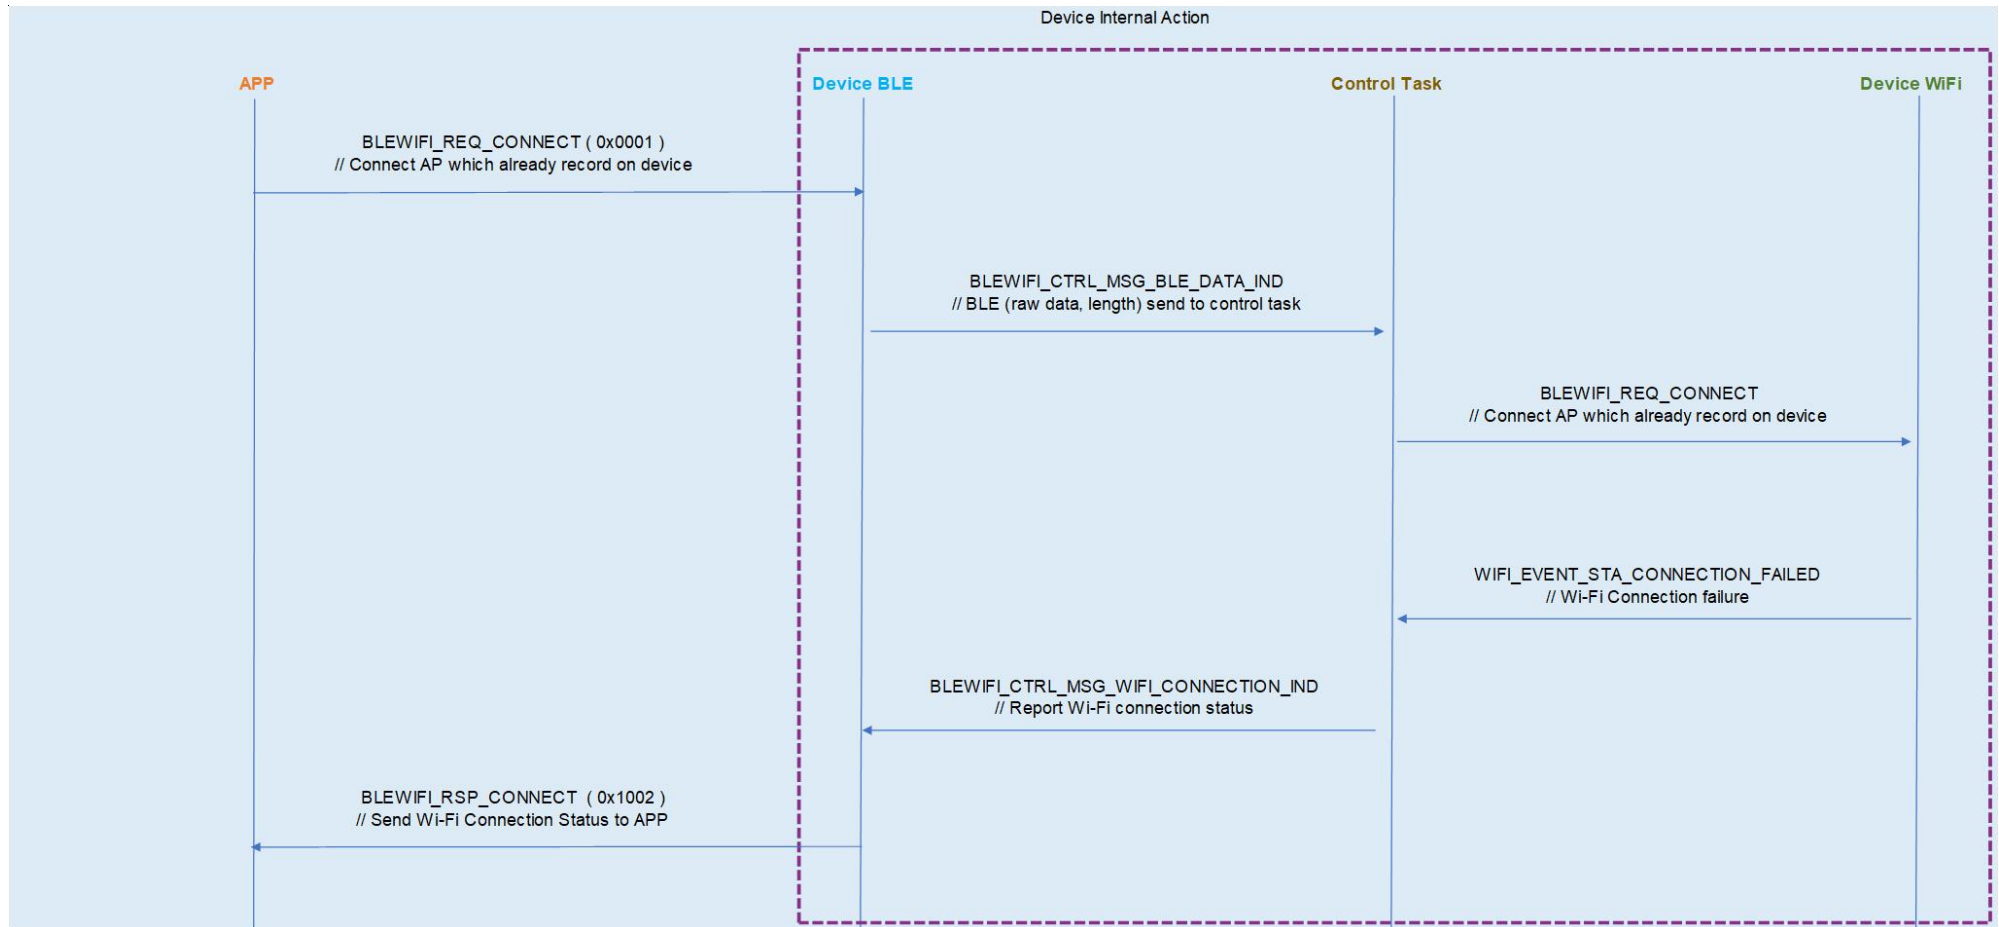


4.8. Wi-Fi Connect (TimeOut)

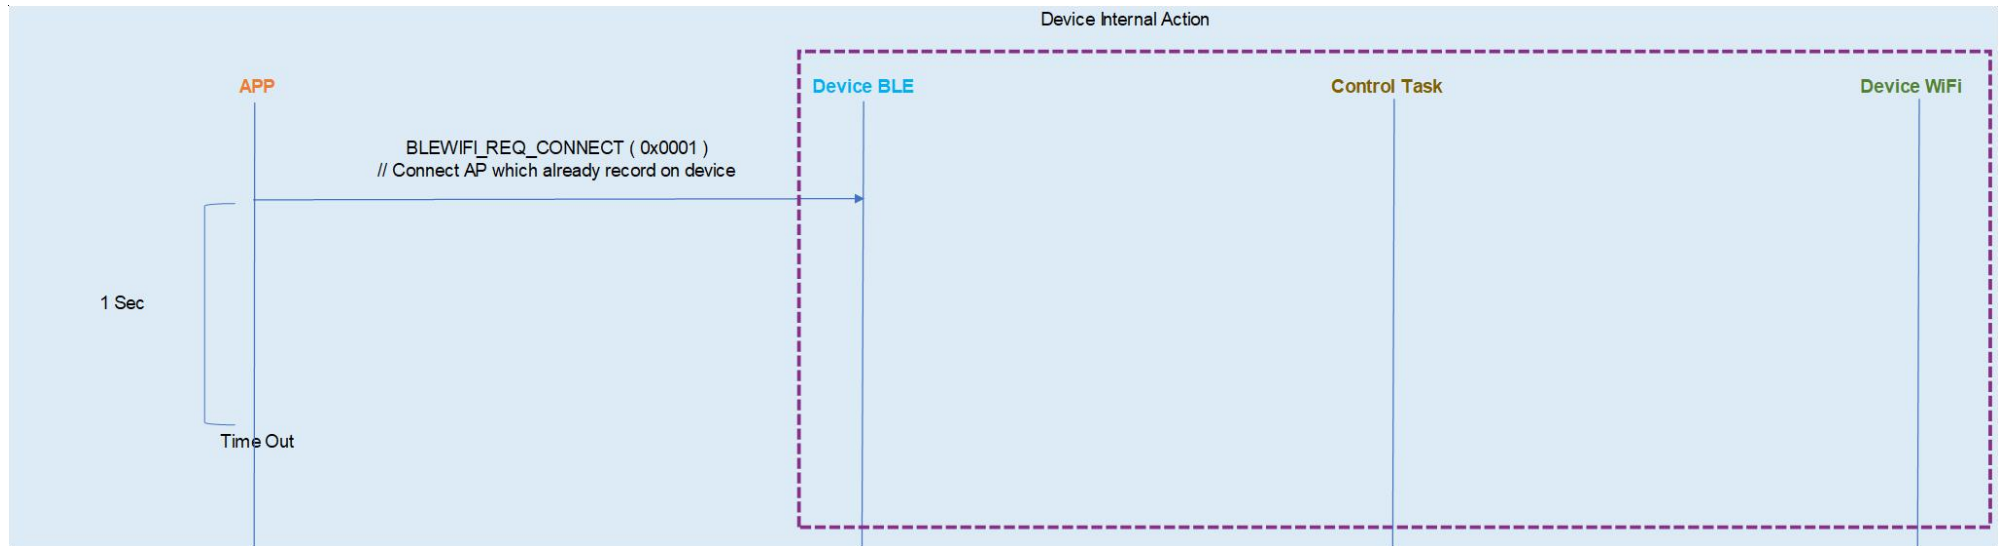


4.9. Wi-Fi Disconnect

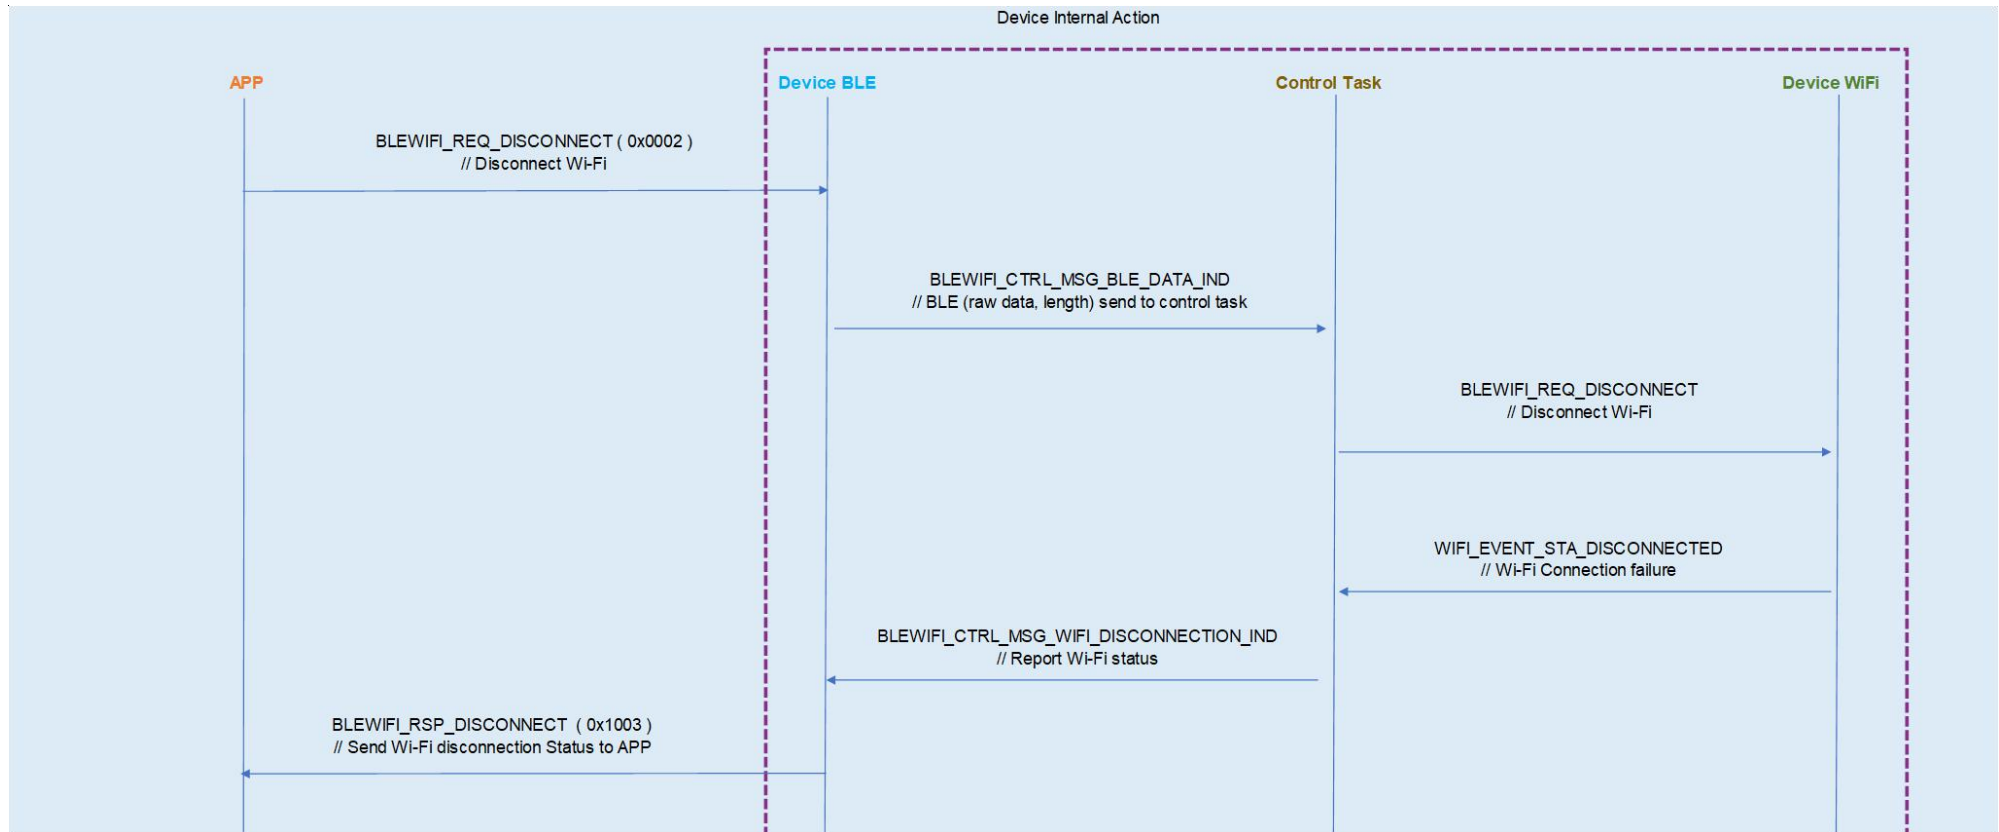


4.10. Wi-Fi Disconnect (TimeOut)

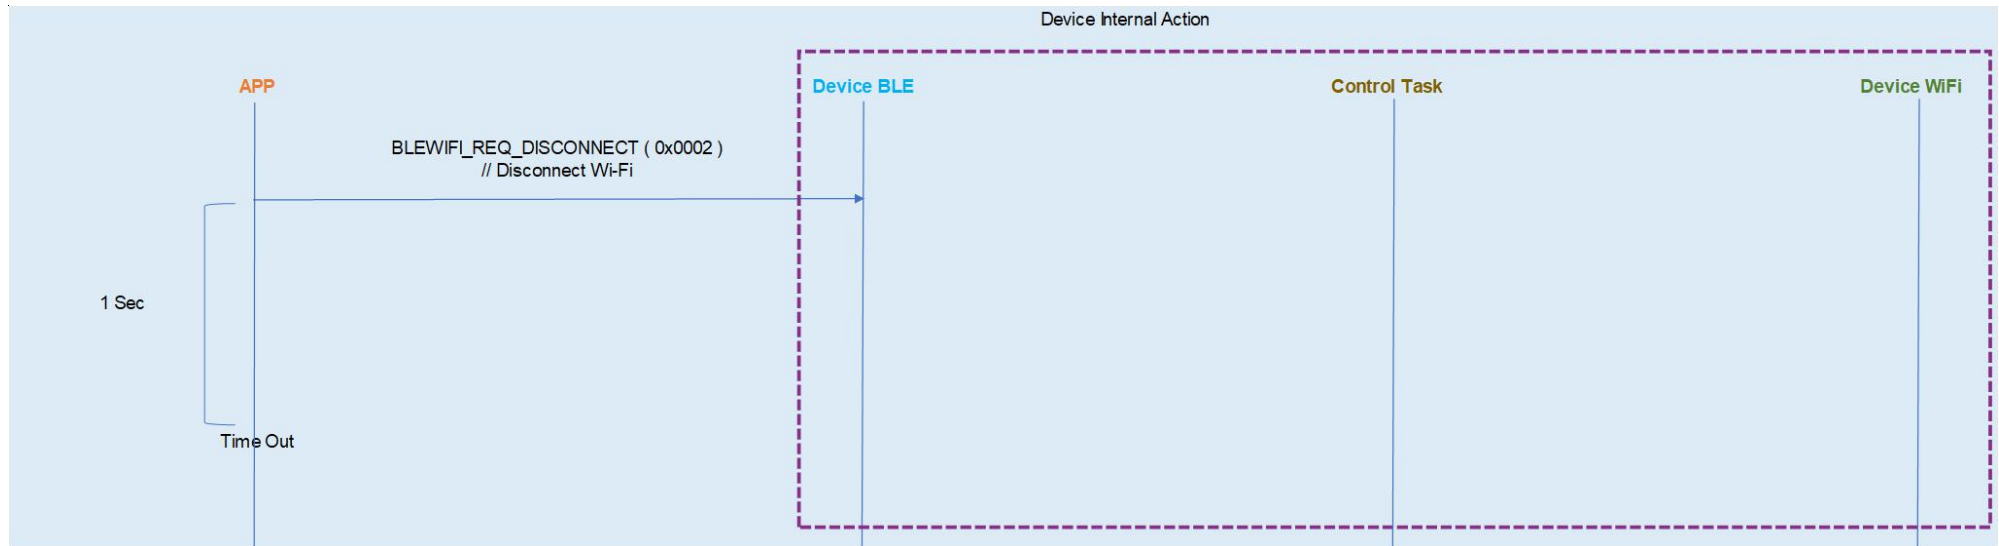


4.11. Wi-Fi Reset

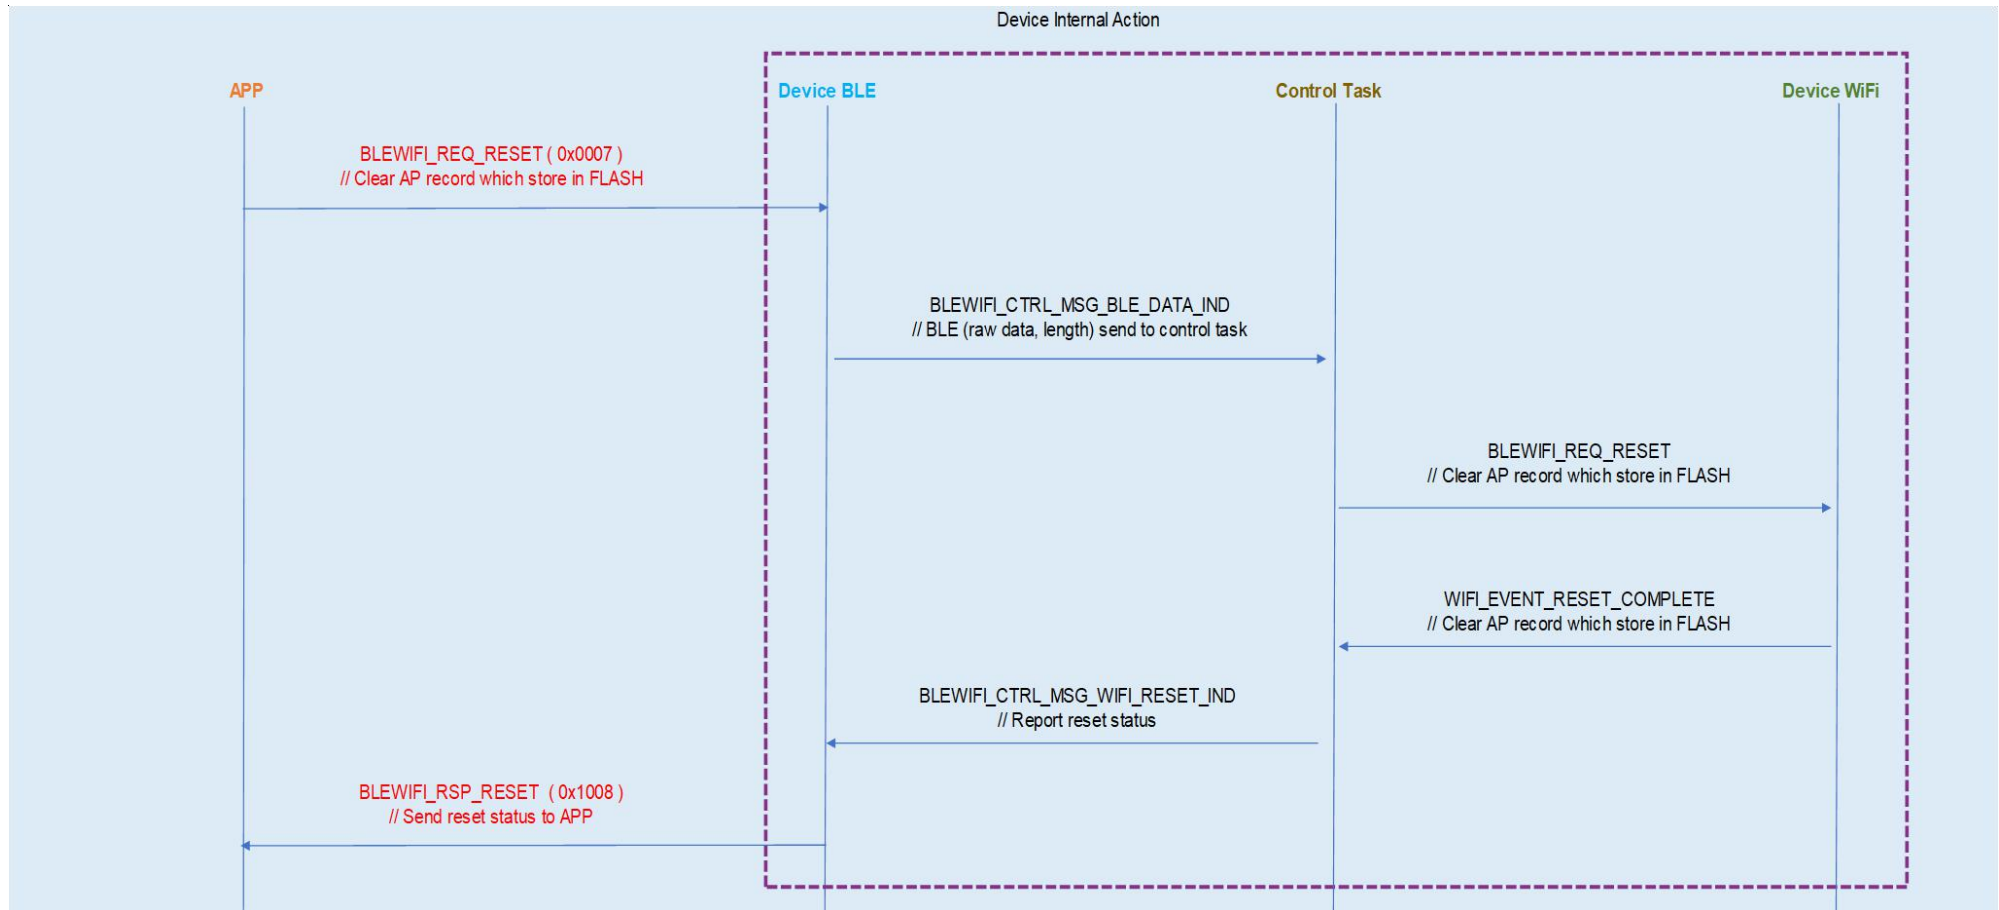

4.12. Wi-Fi Reset (Failure)

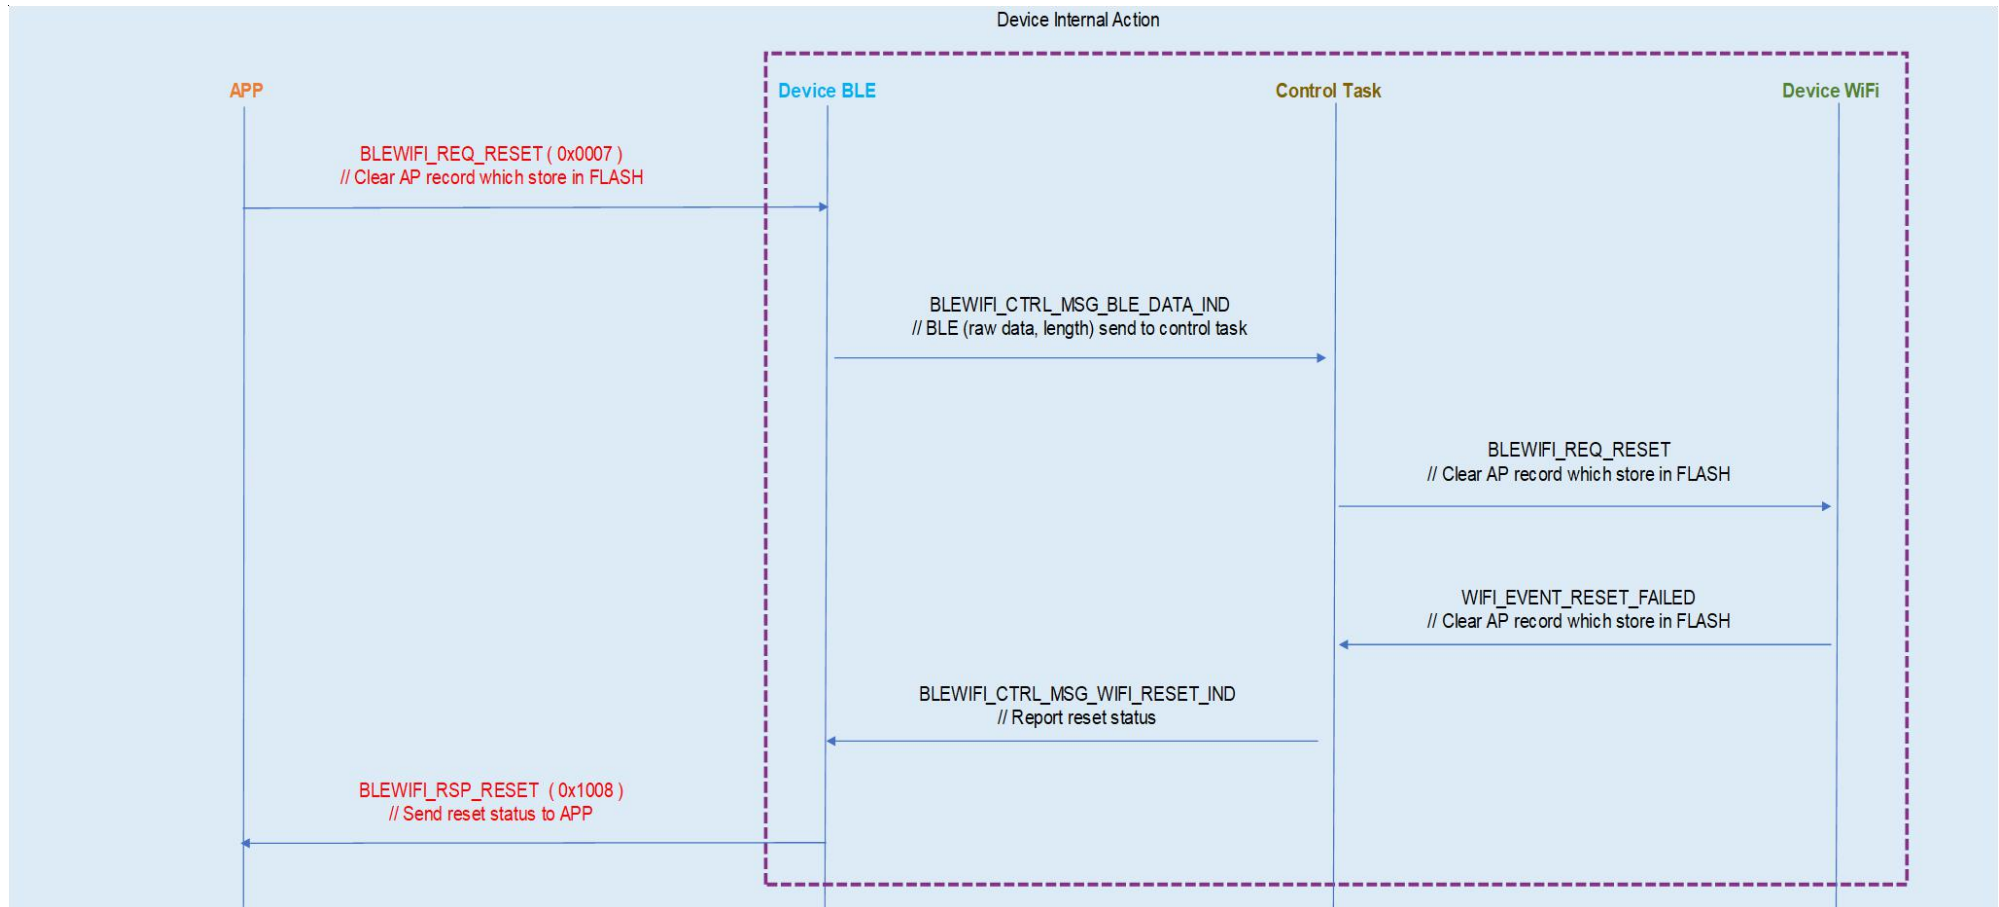

4.13. Wi-Fi Reset (TimeOut)

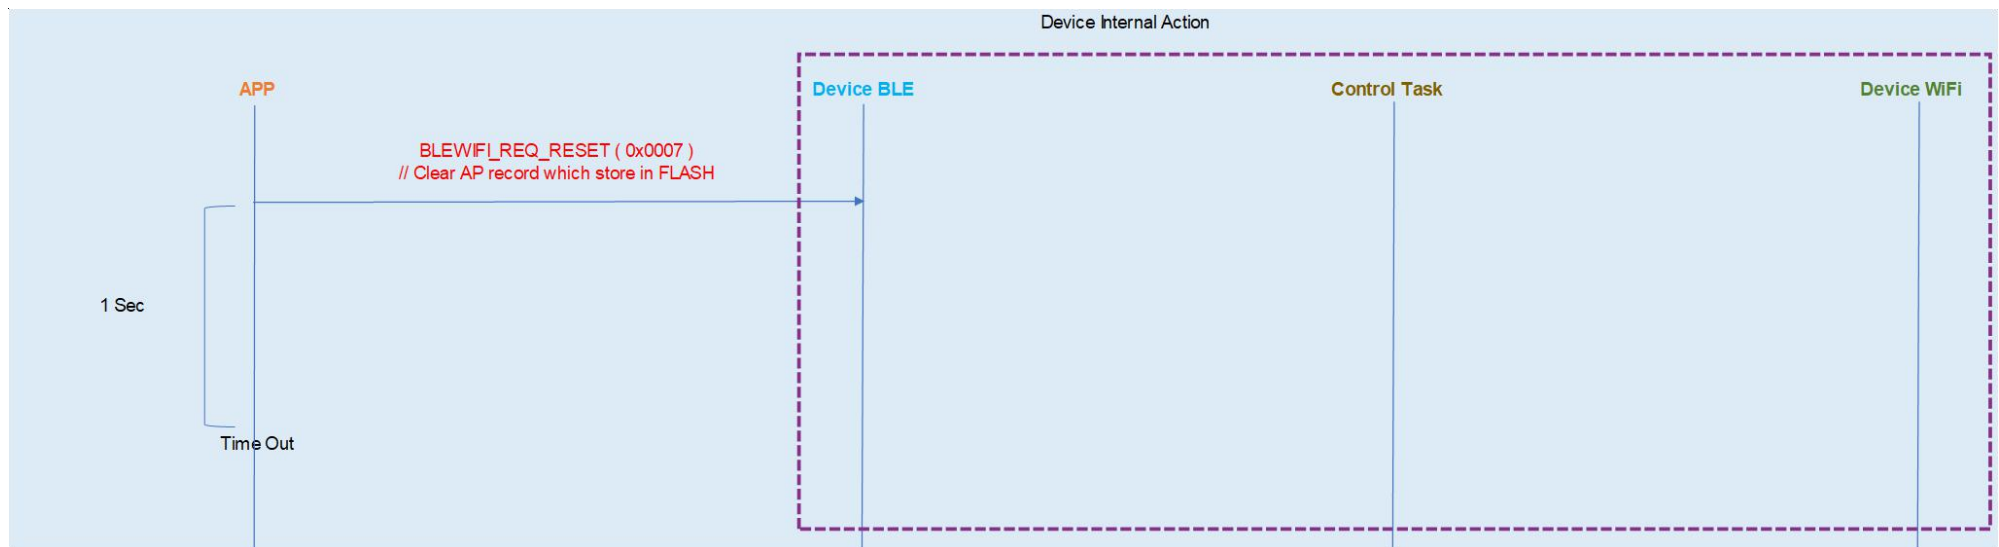

CONTACT

sales@Opulinks.com