

UPFC Model Documentation

Davis Montenegro Martinez

Created Feb-17-2016

Last update Aug-16-2022

The Universal Power Flow Controller (UPFC) model developed for EPRI's OpenDSS corresponds to an equivalent representation for applications on Distribution Systems (DS), where the aim is to regulate voltage for a part of the system and to compensate reactive power to fix a desired power factor (PF). In the current version, the UPFC control actions have been moved into the control queue in OpenDSS, this to make it more stable and improve the accuracy of the model when widely deployed across a medium/large-scale circuit model.

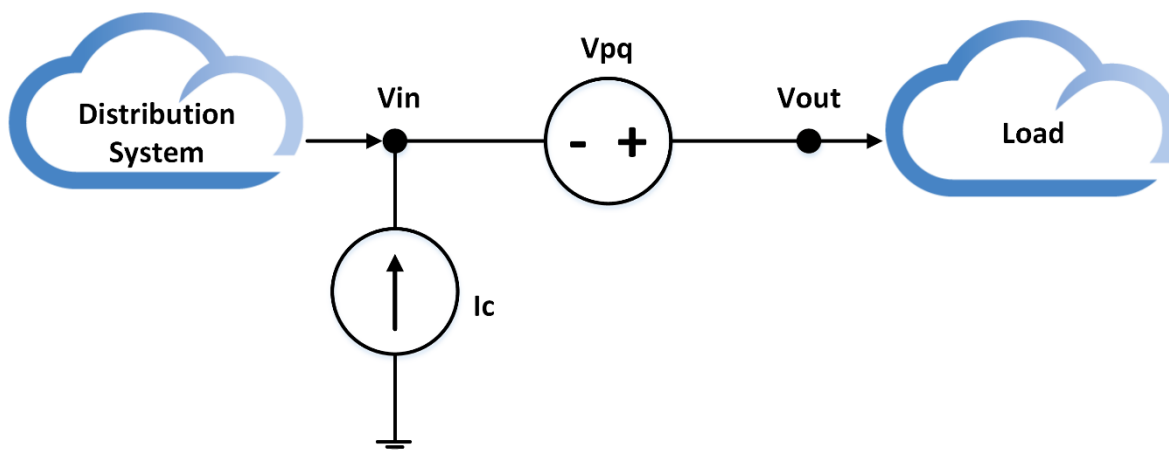


Figure 1. General architecture of the UPFC device

This model is a steady state model and can be used for simulations in sequential-time mode. The variables defined to configure this device allows to configure the set point in terms of the output voltage and PF. Additionally, this generalized model allows to specify the maximum rating for the compensating voltage source (V_{pq}) and the losses behavior as a function of the input voltage by using XY curves. These variables are described as follows:

Bus1	Name of bus to which the UPFC's first terminal (input terminal " V_{in} ") is connected. Remember to specify the node order if the terminals are connected in some unusual manner.
Bus2	Name of bus to which the UPFC's second terminal (output terminal " V_{out} ") is connected. Remember to specify the node order if the terminals are connected in some unusual manner.
RefkV	The set point in kV for the voltage regulation controller. The default value is 0.24
PF	The desired power factor to be compensated by the UPFC. The default value is 1.
Frequency	Frequency of the system. Defaults to circuit fundamental frequency.
Phases	Number of phases of the device, the default value is 1.

Xs	Impedance in ohms of the series transformer of the UPFC ($2\pi fL$). By default, is 0.745 Ω (2mH – 60Hz)
Tol1	Corresponds to the desired tolerance for the control algorithms of the UPFC, the default value is 0.02 (2%)
Mode	Number (integer) specifying the operation mode. The UPFC has 4 modes of operation: <ul style="list-style-type: none"> 0: The controllers are turned off; this means that the UPFC will behave as a series impedance with value Xs for all the phases. 1: Voltage regulation mode. In this mode the UPFC only regulates the output voltage; however, there is no reactive compensation. The set point is the one specified in the property RefkV. 2: Reactive power compensation. In this mode the UPFC will compensate reactive power and try to fix the PF programmed in the property PF. There will be no voltage regulation. 3: Dual control mode. In this mode the UPFC performs voltage regulation and reactive power compensation. Both controllers will follow the set points programmed in the properties RefkV and PF. 4: It is a control mode where the user can set two different set points to create a secure GAP, these references must be defined in the parameters <i>RefkV</i> and <i>RefkV2</i>. The only restriction when setting these values is that <i>RefkV</i> must be higher than <i>RefkV2</i>. 5: In this mode the user can define the same GAP using two set points as in control mode 4. The only difference between mode 5 and mode 4 is that in mode 5, the UPFC controller performs dual control actions just as in control mode 3.
VpqMax	It is the maximum voltage (in Volts) that the series voltage source (Vpq) can provide. By default, is 24 V.
LossCurve	It is the name of the XY curve that describes the losses as a function of the input voltage.
BaseFreq enabled	Base Frequency for impedance specifications. Default is 60 Hz. {Yes No or True False} Indicates whether this element is enabled
Like	Name of an existing UPFC object on which to base this one.
VHLimit	High limit for the voltage at the input of the UPFC, if the voltage is above this value the UPFC turns off. This value is specified in Volts (default 300 V)
VLLimit	Low limit for the voltage at the input of the UPFC, if voltage is below this value the UPFC turns off. This value is specified in Volts (default 125 V)';
CLimit	Current Limit for the UPFC, if the current passing through the UPFC is higher than this value the UPFC turns off. This value is specified in Amps (Default 265 A)
RefkV2	The set point in kV for the voltage regulation controller for control modes 4 and 5. The default value is 0
kvarLimit	This value is the maximum amount of reactive power (kvar) that the UPFC can compensate. (Default 5kvar)
Element	The name of the PD element monitored when operating with reactive power compensation. Normally, it should be the PD element

immediately upstream the UPFC. The element must be defined including the class, e.g. Line.myline.

After defining the UPFC device(s) in the model, it is necessary to define an UPFC controller to coordinate the control actions. If the UPFC controller is not defined, the UPFC device(s) will not perform any control action. The UPFC Controller has just a few properties, the only one to consider is UPFCList, in which the user can define the UPFCs that will operate. If this property (UPFCList) is not defined, all the UPFCs in the model will operate. Define the UPFCControl after defining the UPFCs as follows:

```
New UPFCControl.myUPFCtrl
```

Or in case the list of UPFCs will be defined:

```
New UPFCControl.myUPFCtrl UPFCList=[myupfc1, myupfc2, ...]
```

For more information, check the example located here:

https://sourceforge.net/p/electricdss/code/HEAD/tree/trunk/Version8/Distrib/Examples/UPFC_Test/

The losses curve

The losses curve of the UPFC is a XY curve where the losses are defined as a function of the input voltage. The values for the voltage (X) must be specified in pu and the values for the power (Y) must be specified in percentage. In the case of the power, the quantities must be specified considering the base power, this is, suppose that the load power is 50kW and the desired losses at 0.9 Vpu are the 1%, in this case, the couple of values will be 0.9 (X) and 1.01 (Y). For example, consider the losses curve shown in Figure 2. This curve corresponds to the losses of the UPFC when connected to a load of 50kW.

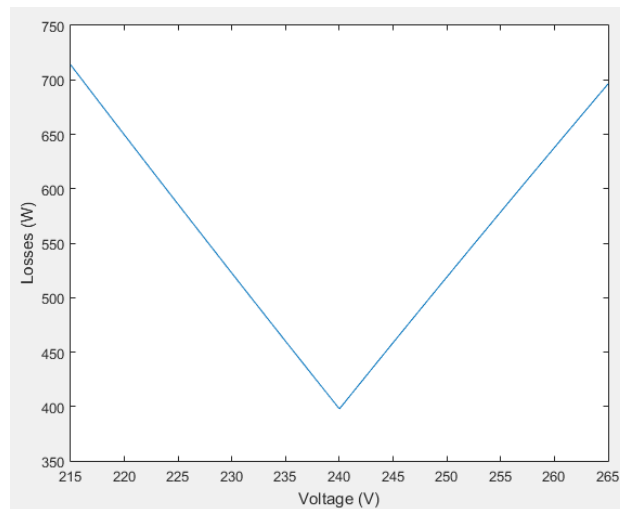


Figure 2. Losses curve for the UPFC with a 50kW load connected (example)

In Figure 2, the minimum value of losses is 397.76W and the maximum 713.76W, both values correspond to the 0.8% and 1.43% of the load. In this case, the XY curve object must be defined in OpenDSS as follows:

New XYCurve.UPFCLoss npts=3 xarray=[0.9 1 1.1] yarray=[1.0143 1.008 1.0143]

Mathematical model of the UPFC

The mathematical model of the UPFC is defined considering the problem formulation proposed in OpenDSS to solve the circuit's power flow. This way, the model proposed in Figure 1 is transformed into an equivalent based on current sources. This equivalent is shown in Figure 3.

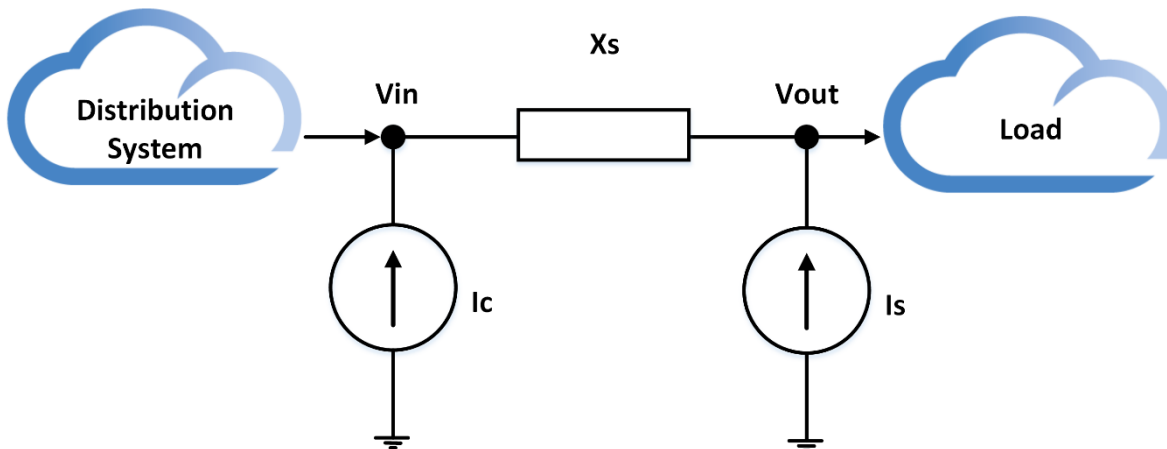


Figure 3. Equivalent circuit for the UPFC model

The equations that rules the control routines of the UPFC in steady state depends on the control mode selected. In these equations V_{in} and V_{out} correspond to the input and output voltages (as complex numbers) measured at the UPFC terminals. These equations are described as follows:

Control Mode 0 (Mode=0)

In this control mode both controllers (voltage regulation and reactive power compensator) are turned off. Therefore, the UPFC will be behave as a series impedance representing the series transformer impedance.

$$I_c = 0 \quad (1)$$

$$I_s = 0 \quad (2)$$

Control Mode 1 (Mode=1)

In this control mode the voltage regulation controller regulates the voltage at the output of the UPFC device. In this mode, the controller used to perform the reactive power compensation will not perform any control action.

The voltage regulation is made considering a Thevenin series equivalent of a voltage source, where the parallel impedance is given by the impedance of the series transformer X_s . Then, the value of the current source I_s will be given by:

$$I_s = \frac{V_{diff1} - (V_{out} - V_{in})}{jX_s} + I_s[z - 1] \quad (3)$$

Where V_{diff1} is the calculated as follows:

$$V_{diff1} = (V_{ref} - |V_{in}|)e^{j\theta_{vin}} \quad (4)$$

And $I_s[z-1]$ is a shift register containing the value of the current source I_s calculated in the previous iteration. Equations (3) and (4) are used to calculate the value of the current source until reach convergence, which is calculate considering the tolerance defined in the property Tol1. When the convergence is reached, the value of I_s will be equal to $I_s[z-1]$.

On the other hand, the value for the current source I_c is calculated by using the following expression:

$$I_c^* = \left(\frac{V_{out}}{I_s V_{in}} \right) \quad (5)$$

Equation (5) refers to power's balance, which basically allows to balance the power at the input and the output of the UPFC. However, the UPFC device converts active power into reactive power and add it at the load side to elevate/reduce the voltage magnitude and take it to the reference voltage. As a result, equation (5) is reformulated as follows:

$$I_c = -(I_c^*.re * Losses + I_s.im) \quad (6)$$

In (6), *Losses* corresponds to the losses programmed in the XY curve (Y axis) when the input voltage acquires certain value respect to the RefkV property (pu).

Control Mode 2 (Mode=2)

In this mode the controller designed for reactive power compensation will take the power factor to the desired set point (variable PF). However, the voltage regulation function will take no effect, which means that the current source I_s will be off (Zero).

Then, to calculate the percentage of reactive power that must be compensated by this controller the power flowing through the UPFC must be calculated, which is performed using the following expression:

$$S = V_{in} \frac{(V_{in} - V_{out})}{jX_s} = P_0 + jQ_0 \quad (7)$$

Using the power calculated in (6) the reactive power to compensate will be given as follows:

$$Q_{comp} = |Q_0| - \left(\sqrt{1 - PF^2} \right) |S| \quad (8)$$

Then, using (8) and the input voltage it is possible to calculate the compensating current source I_c as follows:

$$I_c = \left(\frac{jQ_{comp}}{V_{in}} \right)^* \quad (9)$$

Control Mode 3 (Mode=3)

In control mode 3 there are two controllers interacting to take the system to the programmed set points in terms of voltage and power factor. In this mode, both controllers are combined and synchronized by using flags. The operation of both controllers is made sequentially: the voltage regulation controller operates and then, the reactive power compensator performs the compensation using the information previously provided by controller the voltage controller.

The value for the current source I_s are calculated exactly in the same way that in control mode 1; however, in this mode an extra variable is added called the synchronism flag. This Boolean flag will be *false* until the controller converges into the programmed value in the property RefkV, then, the flag will be set as *True*.

The routine for calculating the value of the current source I_c is equal to the sum of the current sources calculated in the control modes 1 and 2 as follows:

$$I_c = \left(\frac{jQ_{comp}}{V_{in}} \right)^* - (I_c^*.re * Losses + I_s.im) \quad (9)$$

Nevertheless, this calculation process takes place until the synchronism flag is true AND if the latest value of I_c is lower than the one currently calculated. The power running through the device can be calculated as follows:

$$I_{Xfmr} = \frac{V_{out} - V_{in}}{jX_s} \quad (10)$$

$$S_{Out} = V_{out}(I_{Xfmr} - I_s)^* \quad (11)$$

$$S_{In} = V_{in}(I_{Xfmr} + I_c)^* \quad (12)$$

S_{In} is the power at the input of the UPFC (Network) and S_{Out} is the power at the output (Load).

Control Mode 4 (Mode=4)

Control mode 4 is a control mode where the user can set two different set points to create a secure GAP, these references must be defined in the parameters *RefkV* and *RefkV2*. The only restriction when setting these values is that *RefkV* must be higher than *RefkV2*.

The tolerance value will be applied to both set points in the same manner. In control mode 4, the UPFC will not perform control actions if the input voltage is within the GAP created with these set points. The voltages outside the GAP will be forced to stay near to the closest set point as shown in Figure 4.

In Figure 4, the lower set point (*RefkV2*) is 0.243, the higher set point (*RefkV*) is 0.2439 and the tolerance (*Tol1*) is 0.1%. Every voltage value within this GAP at the input of the UPFC will be the same at the output of the UPFC. On the other hand, if the voltage value at the input of the UPFC is higher than the higher set point, the output of the UPFC will be forced to stay within the limits of *RefkV* ($RefkV + RefkV * Tol1 \geq V_{out} \geq RefkV - RefkV * Tol1$). The same happens with *RefkV2* when the input voltage is below this reference.

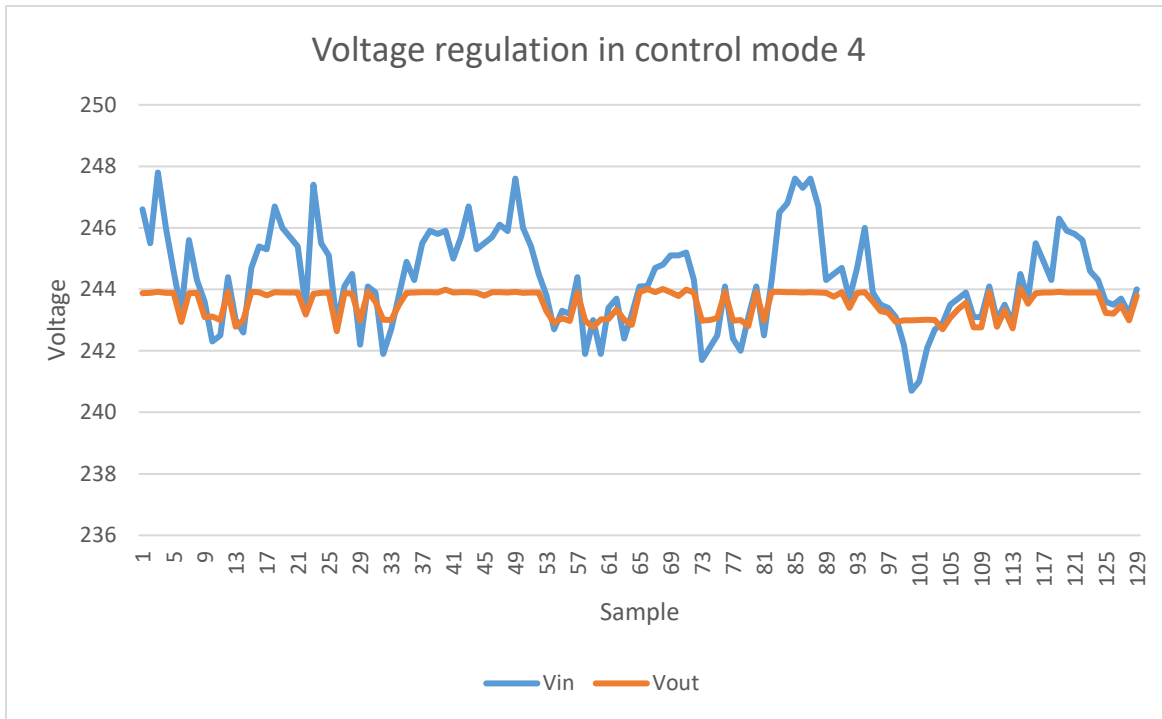


Figure 4. Voltage regulation in control mode 4, RefkV=243.9 and RefkV2=243

This control mode performs voltage regulation only (control mode 1). In Figure 5, the lower set point is set in $RefkV2 = 0.236$.

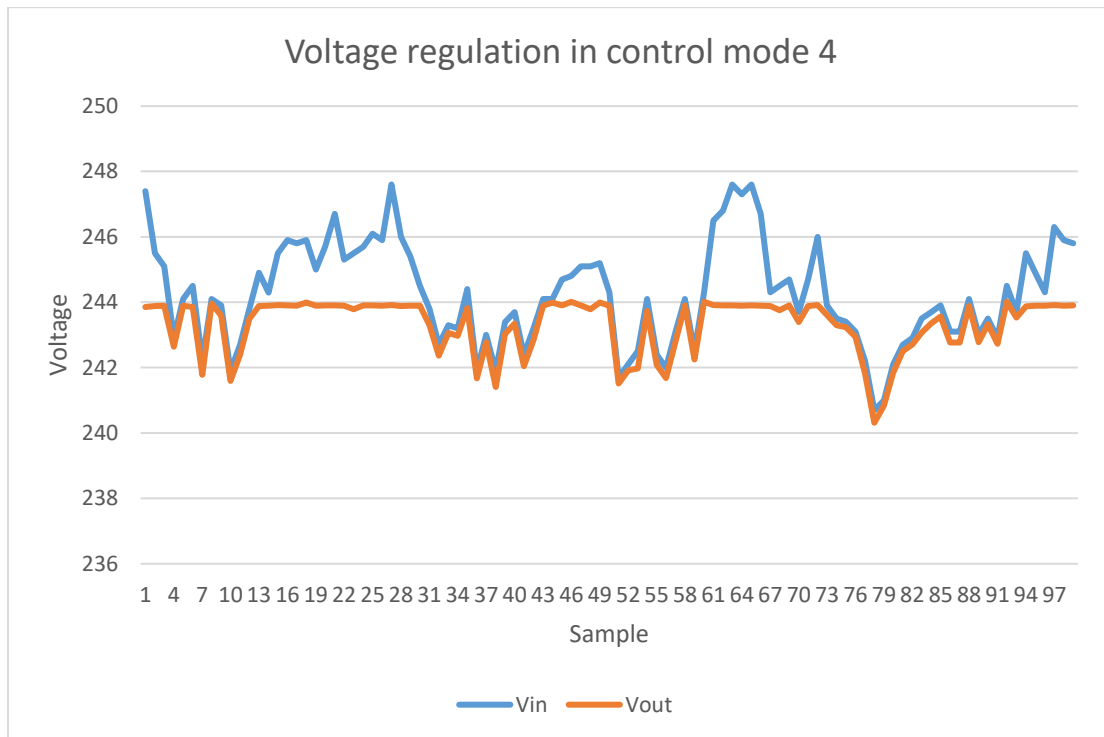


Figure 5. Voltage regulation in control mode 4, RefkV=243.9 and RefkV2=236

Control Mode 5 (Mode=5)

In control mode 5 the user can define the same GAP using two set points as in control mode 4. The only difference between mode 5 and mode 4 is that in mode 5, the UPFC controller performs dual control actions just as in control mode 3.

Behavior of the model

The model typically converges in 5 iterations (tolerance 0.5%); however, this behavior can change depending on the tolerance programmed by the user when declaring the UPFC. Figures 6 and 7 shows the evolution of the voltage and PF until reach convergence (tol1=0.02).

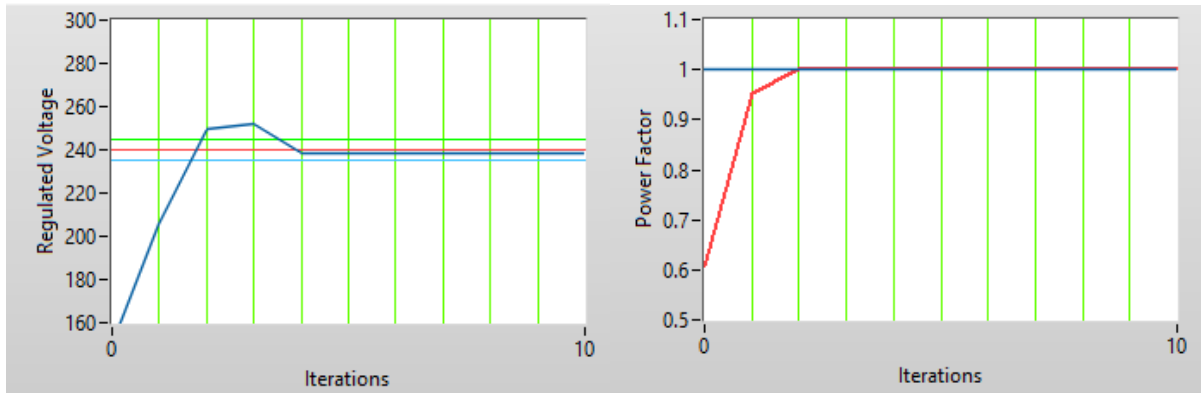


Figure 6. a) Voltage evolution until reach convergence (set point 240 V) b) Power factor evolution until reach convergence (Set point PF=1.0)

Figures 7 to 13 show the voltage and power factor values obtained as functions of the voltage incoming to the UPFC when simulating in OpenDSS. In these tests the property VpqMax=24.

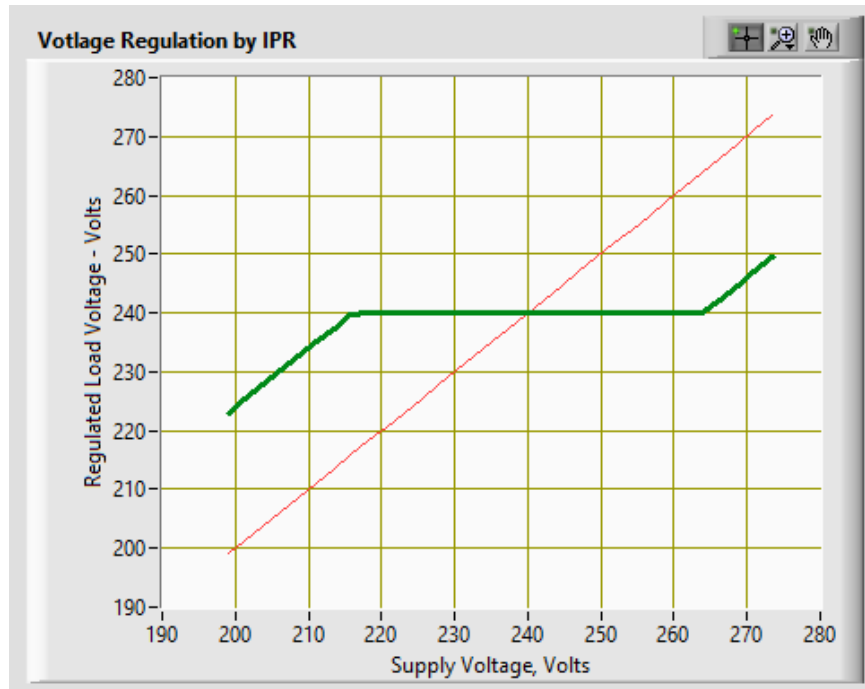


Figure 7. Voltage regulated as a function of the input voltage (set point 240 V)

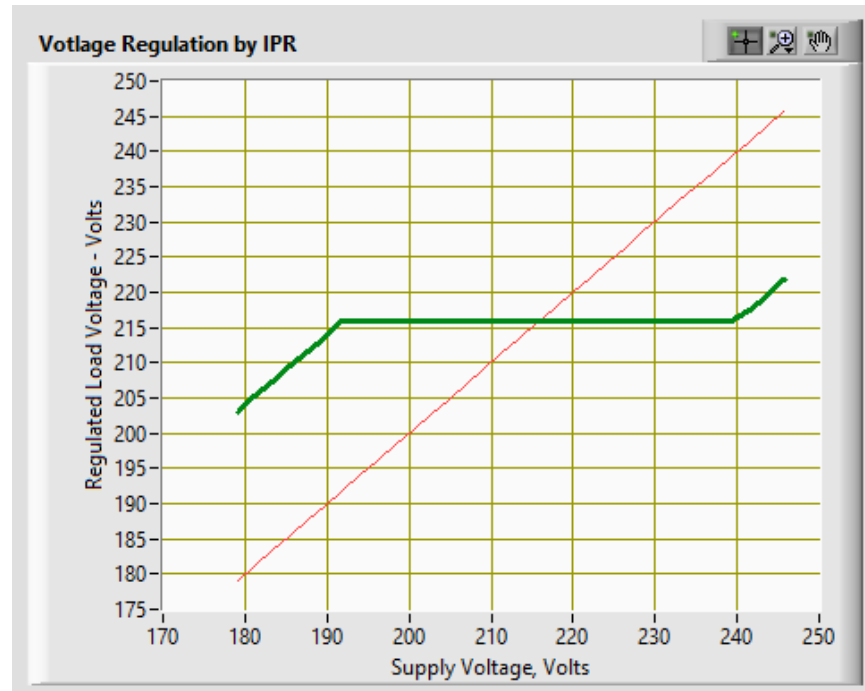


Figure 8. Voltage regulated as a function of the input voltage (set point 216 V)



Figure 9. Voltage regulated as a function of the input voltage (set point 264 V)

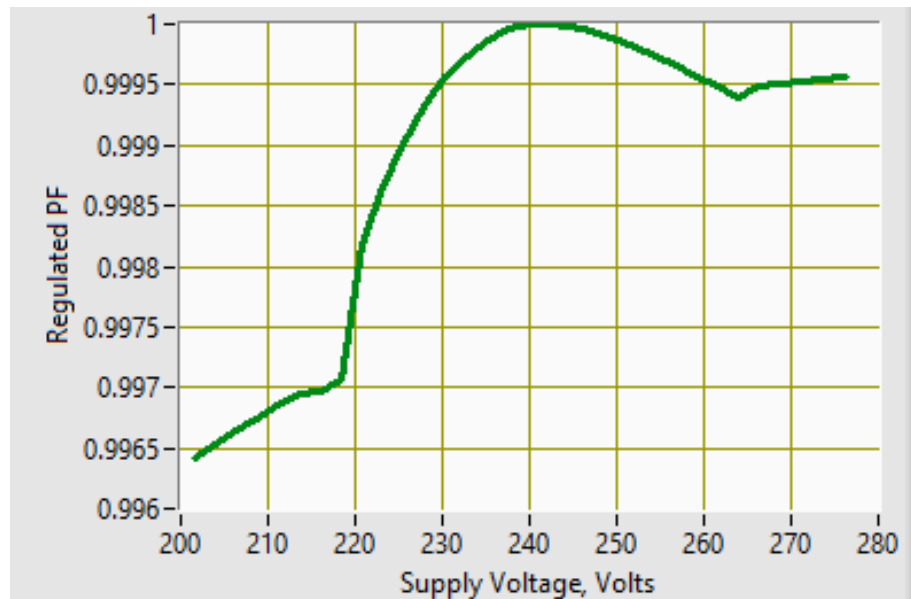


Figure 10. Compensated reactive power (set point PF=1)

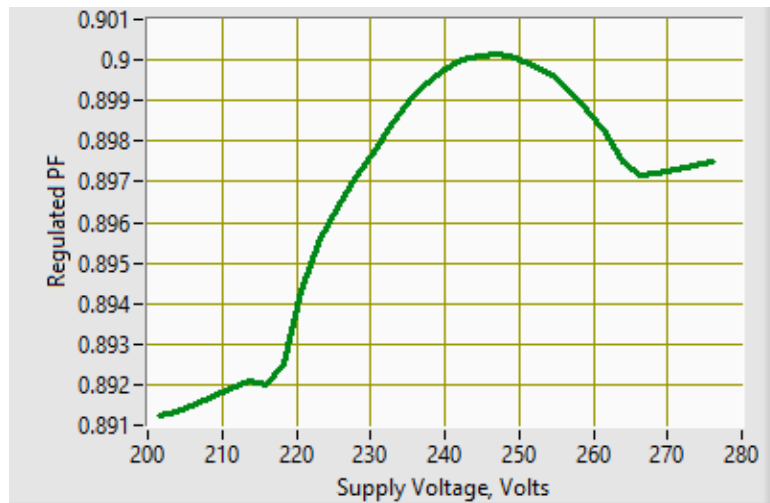


Figure 11. Compensated reactive power (set point PF=0.9)

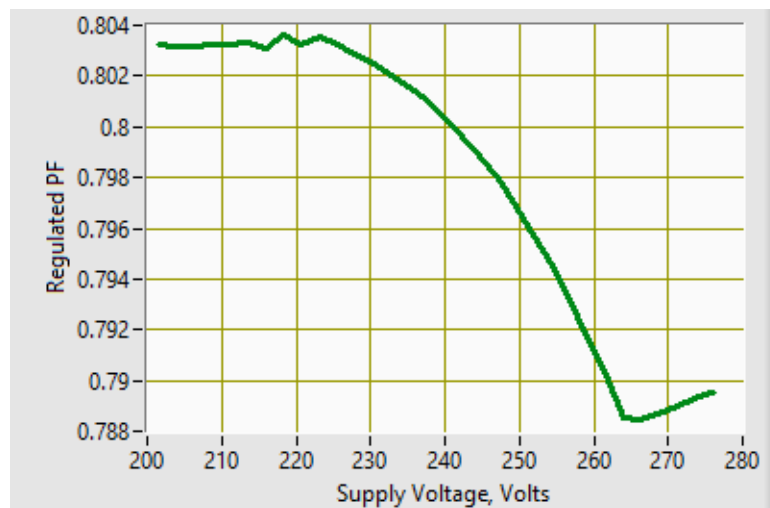


Figure 12. Compensated reactive power (set point PF=0.8)

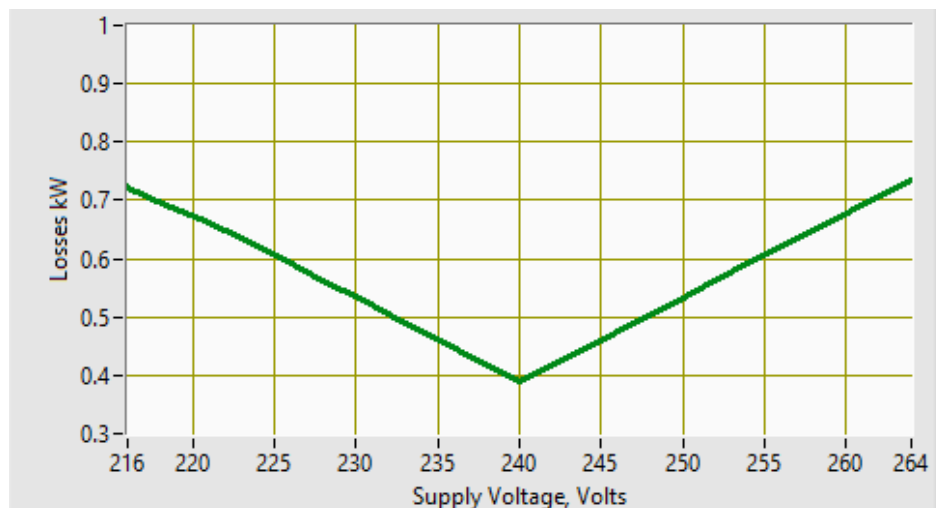


Figure 13. Losses obtained for a 50kW load

Example 1

In this example there is a single UPFC regulating voltage at a very demanding tolerance of 0.1%.

```
clear
New circuit.UPFC3-1 bus1=SOURCE_BUS.1.0 phases=1
~ BasekV=7.2 pu=1 angle=0
~ mvasc3=2000000 mvasc=20000000
New XYCurve.Losses npts=3 xarray=[0.9 1 1.1] yarray=[1.0143 1.008
1.0143]
New XFMRCode.QuasiIdeal Phases=1 windings=2 XHL=0.01 %LoadLoss=.01
kVAs=[100 100] kVs=[.24 .24] conns=[delta delta] ppm=0
New Loadshape.Load1 npts=37438 mininterval=1
pmult=[file=load1kW.csv] qmult=[file=load1kvar.csv]
Action=Normalize
New Loadshape.Load2 npts=37438 mininterval=1
pmult=[file=load2kW.csv] qmult=[file=load2kvar.csv]
Action=Normalize
New Loadshape.Vsource npts=37438 mininterval=1 mult=
[file=Vpucurve.csv]
Vsource.source.daily=Vsource
New XfmrCode.1-ph50kVA phases=1 Windings=3 ppm=0
~ Xhl=2.04 Xht=2.04 Xlt=1.36 %noloadloss=.02
~ kVs=[7.2 0.12 0.12] ! ratings of windings
~ kVAs=[50 50 50]
~ %Rs = [0.6 1.2 1.2]
~ conns=[wye wye wye] ! default

// 2 winding model
New XfmrCode.1-ph50kVA-2 phases=1 Windings=2 ppm=0
~ Xhl=2.04 %noloadloss=.02
~ kVs=[7.2 0.24] ! ratings of windings
~ kVAs=[50 50 ]
~ %Rs = [0.9 0.9]
~ conns=[wye wye] ! default

// low-impedance transformer for interconnecting the UPFC to the
system
New XfmrCode.UPFCInterface phases=1 Windings=3 ppm=0
~ Xhl=.0204 Xht=.0204 Xlt=.0136 %noloadloss=.01
~ kVs=[0.24 0.12 0.12] ! ratings of windings
~ kVAs=[50 50 50]
~ %Rs = [0.006 .012 .012]
~ conns=[wye wye wye] ! default

New Transformer.Service50kVA Xfmrcode=1-ph50kVA-2
Buses=[Source_Bus.1.0 UPFC_Input.1]

// Defining UPFC
New upfc.TEST phases=1 bus1=UPFC_Input.1 bus2=UPFC_Output.1
refkV=0.242 mode=1 losscurve=Losses TOL1=0.001 Xs=0.02
// defines the controller- without it, the UPFC will not work!
New UPFCControl.myUPFCtrl
```

```

New Transformer.TUPFCout XfmrCode=UPFCInterface
Buses=[UPFC_output.1.0   LOAD_BUS.1.0   LOAD_BUS.0.2]

New load.LOAD120A phases=1 model=1 bus1=LOAD_BUS.1.0 kv=0.12
kw=14.98 kvar=10.08 Daily=Load1
New load.LOAD120B phases=1 model=1 bus1=LOAD_BUS.2.0 kv=0.12
kw=12.38 kvar=1.71   Daily=Load2

Set voltagebases= [12.47 .415 0.208]
Calc

new monitor.VIin UPFC.TEST 1 mode=0 vipolar=y
new monitor.VIout Transformer.TUPFCout 1 mode=0 vipolar=y
new monitor.VIoutU UPFC.TEST 2 mode=0 vipolar=y
New monitor.State UPFC.Test 1 mode=3

solve

set mode=daily number=3700 ! 37438
solve

show monitor VIout
show monitor VIoutu
show monitor VIin
show monitor state

```

Example 2

In this example there is a single UPFC Installed for reactive power compensation only at the grid side.

```

clear

New circuit.UPFC3-1 bus1=SOURCE_BUS.1.0 phases=1
~ BasekV=7.2 pu=1 angle=0
~ mvasc3=2000000 mvasc=20000000

New XYCurve.Losses npts=3 xarray=[0.9 1 1.1] yarray=[1.0143 1.008
1.0143]
New XFMRCode.QuasiIdeal Phases=1 windings=2 XHL=0.01 %LoadLoss=.01
kVAs=[100 100] kVs=[.24 .24] conns=[delta delta] ppm=0

New XfmrCode.1-ph50kVA phases=1 Windings=3 ppm=0
~ Xhl=2.04 Xht=2.04 Xlt=1.36 %noloadloss=.02
~ kVs=[7.2 0.12 0.12] ! ratings of windings
~ kVAs=[50 50 50]
~ %Rs = [0.6 1.2 1.2]
~ conns=[wye wye wye] ! default

```

```
// 2 winding model
New XfmrCode.1-ph50kVA-2 phases=1 Windings=2 ppm=0
~ Xhl=2.04 %noloadloss=.02
~ kVs=[7.2 0.24] ! ratings of windings
~ kVAs=[50 50 ]
~ %Rs = [0.9 0.9]
~ conns=[wye wye] ! default

// low-impedance transformer for interconnecting the UPFC to the
system
New XfmrCode.UPFCInterface phases=1 Windings=3 ppm=0
~ Xhl=.0204 Xht=.0204 Xlt=.0136 %noloadloss=.01
~ kVs=[0.24 0.12 0.12] ! ratings of windings
~ kVAs=[50 50 50]
~ %Rs = [0.006 .012 .012]
~ conns=[wye wye wye] ! default

New Transformer.Service50kVA Xfmrcode=1-ph50kVA-2
Buses=[Source_Bus.1.0 UPFC_Input.1]

New upfc.TEST phases=1 bus1=UPFC_Input.1 bus2=UPFC_Output.1
refkV=0.242 PF = 0.99 mode=2 Element=Transformer.Service50kVA
kvarlimit=100 VHLimit=1000 VLLimit=0 CLimit=1000 enabled=True
losscurve=Losses TOL1=0.005 Xs=0.02
// defines the controller- without it, the UPFC will not work!
New UPFCControl.myUPFCCtrl

New Transformer.TUPFCout XfmrCode=UPFCInterface
Buses=[UPFC_output.1.0 LOAD_BUS.1.0 LOAD_BUS.0.2]

New load.LOAD120A phases=1 model=1 bus1=LOAD_BUS.1.0 kv=0.12
kw=14.98 kvar=10.08
New load.LOAD120B phases=1 model=1 bus1=LOAD_BUS.2.0 kv=0.12
kw=12.38 kvar=1.71

new monitor.Vxfmr Transformer.Service50kVA term=1 mode=0 vipolar=y
new monitor.VIin UPFC.TEST term=1 mode=0 vipolar=y
new monitor.VIout Transformer.TUPFCOut 1 mode=0 vipolar=y
new monitor.VIoutU UPFC.TEST 2 mode=0 vipolar=y
New monitor.State UPFC.Test 1 mode=3

Set voltagebases= [12.47 .415 0.208]
CalcV

set maxcontroliter=1000

solve
set mode=daily number=3700
solve
```

```
show monitor VIout  
show monitor VIoutu  
show monitor VIin  
show monitor state
```