

DepthVista

DepthVista CMD Build Manual



Version 1.3

e-con Systems

1/20/2024

Disclaimer

e-con Systems reserves the right to edit/modify this document without any prior intimation of whatsoever.

Contents

INTRODUCTION TO DEPTHVISTA	3
PREREQUISITES	3
DESCRIPTION	3
BUILDING DEPTHVISTA APPLICATION	5
BUILDING DEPTHVISTAConsoleApp PROJECT	6
RUNNING DEPTHVISTA APPLICATION	7
SUPPORT	8
FAQ	9

Introduction to DepthVista

DepthVista is a 3D camera based on Time of Flight (TOF) technology, USB Video Class (UVC) compliant, USB 3.2 Gen 1 SuperSpeed USB camera from e-con Systems, which has over two decades of experience in designing, developing, and manufacturing OEM cameras.

DepthVista is an RGB-D camera containing both RGB and TOF depth cameras. RGB camera has 1/2.6" AR0234CS CMOS digital image sensor with global shutter from onsemi™. It has dedicated high performance color image signal processor. TOF depth camera has 1/4" CCD sensor and dedicated depth processor. DepthVista is a two-board solution containing camera board with the USB 3.2 Gen 1 interface and laser board along with enclosure.

This document describes how to build the DepthVista console application on the host PC (Windows).

Prerequisites

The prerequisites are as follows:

- DepthVista console application source code.
- Visual Studio (VS 2017).
- DepthVistaSDK.

Description

DepthVista has USB interface controller with USB Type-C connector to interface with the host PC. It is a ready-to-manufacture camera board with all the necessary firmware built-in and is compatible with the UVC version 1.0 standard. You can integrate this camera into the products, and this helps to cut short the time-to-market.

DepthVista is a UVC compatible and will work with the standard drivers available with Windows and Linux OS. There is no need for any additional driver installation. So, video streaming through UVC is possible without any special drivers on OSes that have built-in support for UVC standards.

Table 1: DepthVista supported Format, Resolutions, and Frame Rates

S.No	Format	Camera Mode	Resolution	Frame Rate (fps) USB 3.2 Gen 1
1	UYVY	RGB Mode	2.3MP (1920 x 1200)	30
			FHD (1920 x 1080)	30
			HD (1280 x 720)	60

			VGA (640 x 480)	60
2	Y16 (RAW 12-bit)	TOF Mode	Depth (640 x 480)	30
			IR (640 x 480)	30
			Depth + IR (640 x 960)	30
3		RGB-D Mode	1280 x 600 (RGB-D)	30
			1443 X 960 (RGB-D)	30

The TOF camera in DepthVista can be used in two depth modes as follows:

- **Far Mode:** Effective depth range is between 1000 mm to 6000 mm.
- **Near Mode:** Effective depth range is between 200 mm to 1200 mm.

The TOF camera controls of DepthVista are as follows:

- TOF Data Mode
- TOF Depth Range
- TOF Mask
- TOF Gain

The RGB camera controls of DepthVista are as follows:

- Brightness
- Contrast
- Saturation
- Gamma
- Gain
- Sharpness
- White Balance
- Exposure
- Power line frequency

Building DepthVista Application

This section will describe the procedures for building the DepthVista Application.

The steps for building the DepthVista Application are as follows:

1. Extract the **SDK Package**
<Extracted Directory>/Windows/Source/CPP will contain the DepthVistaCmd.sln file.
<Extracted Directory>/Windows/Bin will contain the SDK which includes the headers, .lib files and .dll files.
2. Open DepthVistaCmd Project in Visual Studio.

The steps to open DepthVistaCmd Project are as follows:

1. Open the new instance of visual studio.
2. Click **File->Open->Project/Solution** as shown below.

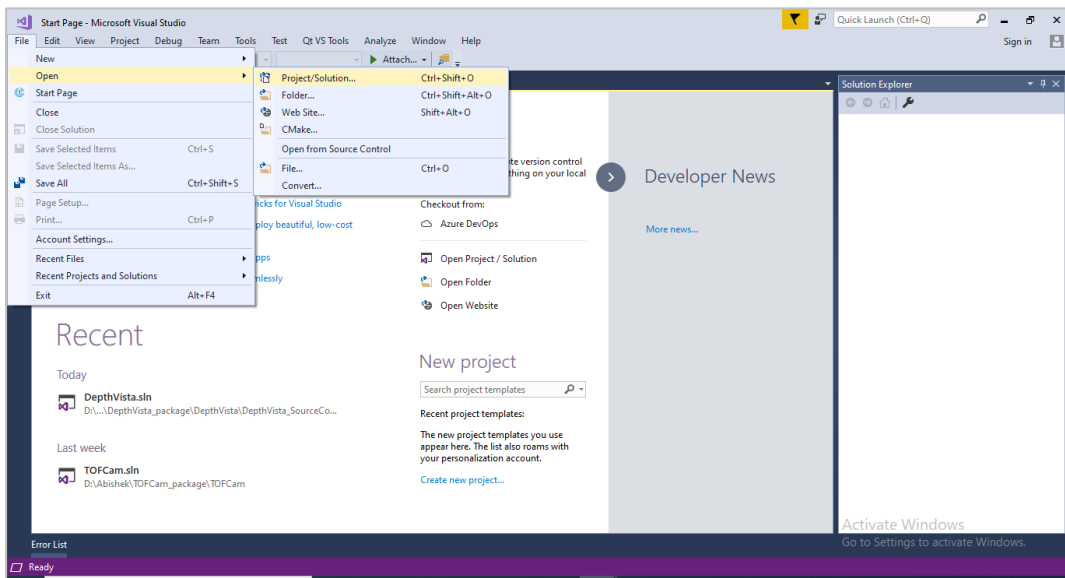


Figure 3: Opening Solution File In Visual Studio

3. Browse the **DepthVista** project and select **DepthVistaCmd.sln**.
4. Select **Solution configuration** (Debug / Release) and **Solution Platform** Win32 or x64) (based on your requirement).

Note: Win32 and x86 are the same.

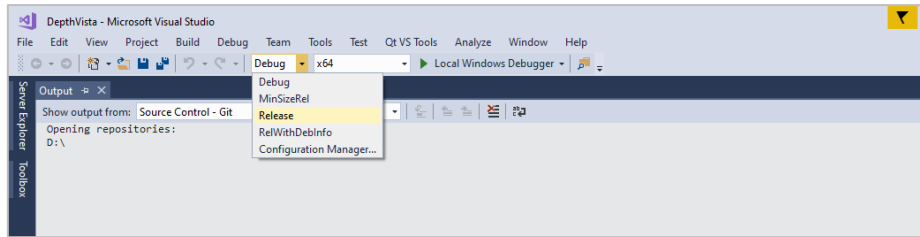


Figure 4: Choosing Solution Configuration

DepthVistaCmd.sln will contain two projects as shown below:

- DepthVistaConsoleApp

Building DepthVistaConsoleApp Project

The steps to build the DepthVistaConsoleApp project are as follows:

1. Right click on the **DepthVistaConsoleApp** project and select **Build** (or **rebuild**) as shown below.

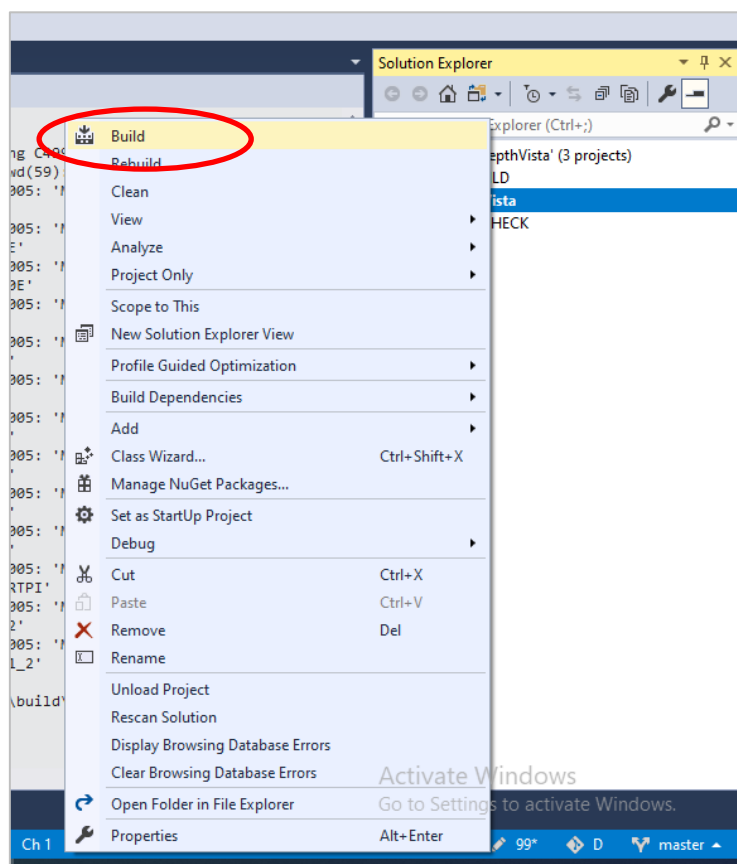


Figure 11: Building DepthVista Project

2. Build the solution.

Once the build is success, then you can view the message in the output tab of visual studio as shown below. It will also contain the folder in which the

DepthVistaConsoleApp.exe is placed. It will usually be placed in **Release** or **Debug** directory from Solution Directory.

```
1>d:\projects\time_of_flight\depthvistaconsole\consolepackage\depthv
1>d:\projects\time_of_flight\depthvistaconsole\consolepackage\depthv
1>d:\projects\time_of_flight\depthvistaconsole\consolepackage\depthv
1>d:\projects\time_of_flight\depthvistaconsole\consolepackage\depthv
1>d:\projects\time_of_flight\depthvistaconsole\consolepackage\depthv
1>Generating code
1>All 256 functions were compiled because no usable IPDB/IOBJ from p
1>Finished generating code
1>DepthVistaConsoleApp.vcxproj -> D:\Projects\Time_of_Flight\DepthVi
1>Done building project "DepthVistaConsoleApp.vcxproj".
===== Rebuild All: 1 succeeded, 0 failed, 0 skipped =====
```

Figure 12: Message on Successful Build of DepthVista Project

After building you can find the **DepthVistaConsoleApp.exe** in the respective Release and Debug folders.

Running DepthVista Application

The steps to run the DepthVista application are as follows:

1. Run the **DepthVistaConsoleApp.exe** application.
2. Follow the *DepthVista_Console_Application_User_Manual.pdf* provided in the package.

Support

Contact Us

If you need any support on DepthVista product, please contact us using the Live Chat option available on our website - <https://www.e-consystems.com/>

Creating a Ticket

If you need to create a ticket for any type of issue, please visit the ticketing page on our website - <https://www.e-consystems.com/create-ticket.asp>

RMA

To know about our Return Material Authorization (RMA) policy, please visit the RMA Policy page on our website - <https://www.e-consystems.com/RMA-Policy.asp>

General Product Warranty Terms

To know about our General Product Warranty Terms, please visit the General Warranty Terms page on our website - <https://www.e-consystems.com/warranty.asp>

1. Why does Windows systems headers like Windows.h, SDKDDKVer.h, gives error?

This error is due to incompatible Windows SDK Version.

Follow the below step to build the project again:

1. Open the property page of the project.
2. Navigate to **Configuration Properties->General->Windows SDK Version**.
Select any installed SDK version and build the project again.

Revision History

Rev	Date	Description	Author
1.0	02-November-2022	Initial Draft	Camera Products
1.1	05-June-2023	Document changes	Camera Products
1.2	10-October-2023	Build Step Changes	Camera Products
1.3	20-January-2024	Removed IMU build steps	Camera Products