



**MP6619**  
5.4V to 28V, 5A,  
H-Bridge Motor Driver

### DESCRIPTION

The MP6619 is an H-bridge motor driver that operates from a supply voltage up to 28V and delivers a motor current up to 5A. The MP6619 is ideally suited to drive a brushed DC motor.

The MP6619 also has cycle-by-cycle current limiting.

Full protection features include over-current protection (OCP), input over-voltage protection (OVP), under-voltage lockout (UVLO), and thermal shutdown.

The MP6619 is available in a QFN-19 (3mmx3mm) package.


## FEATURES

- Wide 5.4V to 28V Operating Input Range
- Up to 5A Peak Output Current
- Internal H-Bridge Driver
- Cycle-by-Cycle Current Limiting
- 65mΩ  $R_{DS(ON)}$  for Each Half-Bridge MOSFET
- 100% Duty Cycle Operation of H-Bridge
- 1μA Shutdown Mode
- Output Short-Circuit Protection (SCP)
- Input Over-Voltage Protection (OVP)
- Under-Voltage Lockout (UVLO)
- Over-Temperature Shutdown
- Fault Indication Output
- Available in a QFN-19 (3mmx3mm) Package

## APPLICATIONS




- DC Motors
- Solenoid/Actuators

## TYPICAL APPLICATION

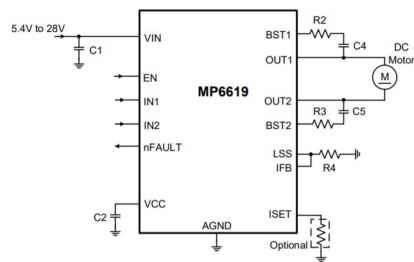

## PIN FUNCTIONS

Pin #	Name	Description
1	IFB	<b>Current-sense signal feedback.</b> Connect the IFB and LSS pins together.
2, 11	VIN	<b>Input supply.</b>
3	OUT2	<b>Output terminal 2.</b>
4	BS2T	<b>Bootstrap pin for the OUT2 high-side MOSFET (HS-FET) gate driver.</b> Connect a capacitor between the BS2T and OUT2 pins.
5	EN	<b>IC enable.</b>
6, 7, 8	LSS	<b>Low-side source connection.</b> For current sense, connect a current-sense resistor between the LSS pin and power ground.
9	BS1T	<b>Bootstrap pin for the OUT1 HS-FET gate driver.</b> Connect a capacitor between BS1T and OUT1.
10	OUT1	<b>Output terminal 1.</b>
12, 18	NC	<b>No connection.</b> Float this pin or connect it to AGND.
13	nFAULT	<b>Fault indication output.</b> nFAULT is active low for fault conditions.
14	VCC	<b>5V LDO output for internal driver and logic.</b>
15	IN1	<b>Output 1 control input.</b> IN1 is pulled down internally.
16	IN2	<b>Output 2 control input.</b> IN2 is pulled down internally.
17	ISET	<b>Current trip voltage setting.</b> Connect a resistor to GND from the ISET pin.
19	AGND	<b>Ground for internal logic.</b>

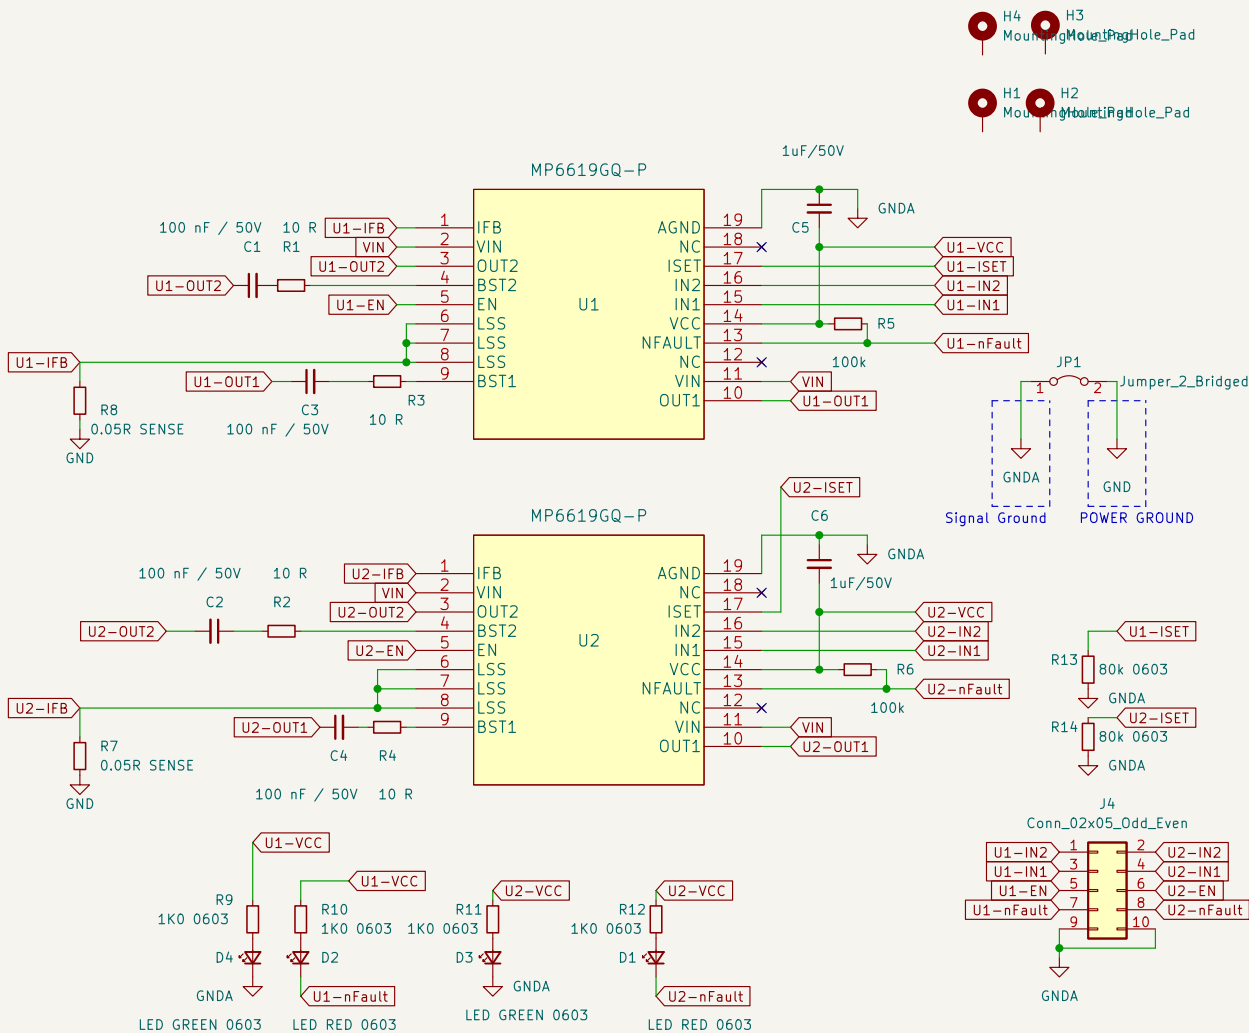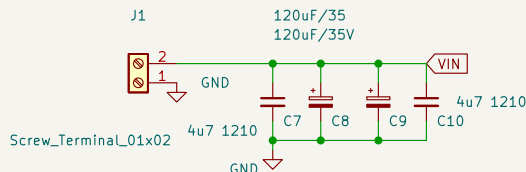

Sheet: /  
File: 2HBR\_NG.kicad\_sch

**Title: Dual H bridge 28V 5A**

Size: A4	Date: 2021-11-26
----------	------------------

KiCad E.D.A.	kicad (6.0.0-rc1-291-q863699f2d1)
--------------	-----------------------------------

Rev: 1

Id: 1/1