



intelligent motion systems, inc.


Excellence in Motion™

IM805

HIGH PERFORMANCE MICROSTEPPING DRIVE

**STANDARD DRIVER
CONNECTOR OPTIONS
COOLING SOLUTIONS
ACCESSORIES**

OPERATING INSTRUCTIONS

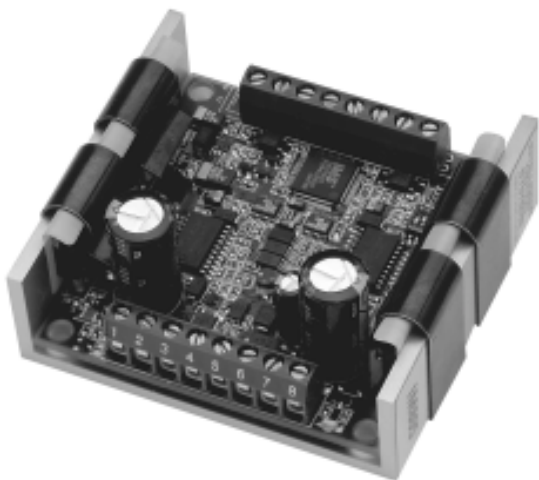

370 N. MAIN ST., PO BOX 457, MARLBOROUGH, CT 06447

PH. (860) 295-6102, FAX (860) 295-6107

Internet: <http://www.imshome.com>, E-Mail: info@imshome.com

The information in this book has been carefully checked and is believed to be accurate; however, no responsibility is assumed for inaccuracies.

*Intelligent Motion Systems, Inc., reserves the right to make changes without further notice to any products herein to improve reliability, function or design. Intelligent Motion Systems, Inc., does not assume any liability arising out of the application or use of any product or circuit described herein; neither does it convey any license under its patent rights of others. Intelligent Motion Systems and **IMS**[™] are trademarks of Intelligent Motion Systems, Inc.*

Intelligent Motion Systems, Inc.'s general policy does not recommend the use of its products in life support or aircraft applications wherein a failure or malfunction of the product may directly threaten life or injury. Per Intelligent Motion Systems, Inc.'s terms and conditions of sales, the user of Intelligent Motion Systems, Inc., products in life support or aircraft applications assumes all risks of such use and indemnifies Intelligent Motion Systems, Inc., against all damages.

*IM805 Operating Instructions
Revision 05.18.2004*

©2002 by Intelligent Motion Systems, Inc.
All Rights Reserved

Table of Contents

Introduction	5
The IM805	5
Features and Benefits	5
The Product Manual	6
Notes and Warnings	7
Hardware Specifications	8
Section Overview	8
Mechanical Specifications	8
Electrical Specifications	9
Thermal Specifications	10
Pin Assignment and Description	10
Mounting The IM805	13
Theory of Operation	15
Section Overview	15
Circuit Operation	15
Microstep Select (MSEL) Inputs	16
Stepping	16
Dual PWM Circuit	17
Fullstep Output Signal	18
Timing	18
Power Supply Requirements	19
Section Overview	19
Selecting a Power Supply	19
Selecting an Opto Supply	21
Recommended Wiring	22
AC Line Filtering	23
Motor Requirements	24
Section Overview	24
Selecting a Motor	24
Motor Wiring	29
Connecting the Motor	29
Interfacing and Controlling the IM805	33
Section Overview	33
Layout and Interface Guidelines	33
Motor Power Connection (+V)	34
Configuring and Controlling the Output Current	35
Controlling the Output Resolution	40
Interfacing and Using the Isolated Logic Inputs	42
Connecting and Using the Fault Output	48
Full Step Output	49
Minimum Connections	50
Troubleshooting	51
Section Overview	51
Basic Troubleshooting	51
Problem Symptoms and Possible Causes	51
Contacting Technical Support	54
The IMS Web Site	54
Returning Your Product to IMS	54

Standard Connection Options 55
Appendix Overview 55
IM805-34P1 56
IM805-8P2 61
IM805-34P1-8P2 62
IM805-PLG 63
Cooling Solutions 65
H-4X Heat Sink Kit 65
Thermal Non-Isolating Pad (TN-48) 65
Accessories 66
Appendix Overview 66
U3-CLP: Side-Mounting Clip 66
BB-34-4P Breakout Board 68
PLG-R Removable Screw Terminal Set 70
Appendix D: Recommended Cable Configurations 71

List Of Figures

Figure 2.1	IM805 Dimensions	8
Figure 2.2	IM805 Pin Configuration	10
Figure 3.1	Mounting Recommendations	13
Figure 4.1	IM805 Block Diagram	15
Figure 4.2	Recirculating PWM	17
Figure 4.3	Non-Recirculating PWM	17
Figure 6.1	Per Phase Winding Inductance	26
Figure 6.2	8 Lead Motor Series Connections	30
Figure 6.3	8 Lead Motor Parallel Connections	30
Figure 6.4	6 Lead Motor Half Coil (Higher Speed) Connections	31
Figure 6.5	6 Lead Motor Full Coil (Higher Torque) Connections	31
Figure 6.6	4 Lead motor Connections	32
Figure 7.1	IM805 Motor Power Connctions	35
Figure 7.2	Current Adjust Resistor Placement	38
Figure 7.3	Current Reduction Adjust Resistor Placement	39
Figure 7.4	MSEL Switch Showing 50 Microsteps/Step Selected	40
Figure 7.5	Optically Isolated Inputs	42
Figure 7.6	Switch Interface	45
Figure 7.7	Open Collector Interface	46
Figure 7.8	TTL Interface	46
Figure 7.9	LYNX Interface	47
Figure 7.10	The Fault Output Connected to an LED	48
Figure 7.11	The Full Step Output Connected to an Up/Down Counter	49
Figure 7.12	IM805 Minimum Connections	50
Figure A.1	IM805-34P1 Connector P1 Mechanical Drawing	56
Figure A.2	IM805-34P1 Connector P1 Pin Locations	56
Figure A.3	MSEL Connection Using TTL Interface	59
Figure A.4	Cascading IM805-34P1 Drives Using the Step/Direction Outputs	60
Figure A.5	IM805-8P2 - Connector P1	61
Figure A.6	IM805-8P2 - Connector P2	61
Figure A.7	IM805-34P1-8P2 - Connector P1	63
Figure A.8	IM805-34P1-8P2 - Connector P2	63
Figure A.9	IM805-PLG Connectors	65
Figure A.10	IM805-PLG Pin Location and Orientation	66
Figure B.1	H-4X Heat Sink	67
Figure C.1	U3-CLP Mounting Hole Locations	68
Figure C.2	Attaching the U3-CLP to the IM805	69
Figure C.3	Panel Mounting an IM805 Using the U3-CLP Clip Set	69
Figure C.4	BB-34-4P Breakout Board Mechanical Specifications	70
Figure C.5	BB-34-4P Pin Locations	71
Figure C.6	BB-34-4P Mounting Diagram	71

List Of Tables


Table 2.1	Electrical Specifications	9
Table 2.2	IM805 Thermal Specifications	10
Table 2.3	Connector P1 - Pin Assignment and Description	11
Table 2.4	Connector P2 - Pin Assignment and Description	12
Table 3.1	IM805 Mounting Screw/Washer Requirements	14
Table 5.1	Motor Power Supply Requirements	20
Table 5.2	+5 VDC Power Supply Requirements	21
Table 7.1	Current Adjust Resistor Values	38
Table 7.2	Microstep Resolution Switch Settings	41
Table 7.3	Recommended Input Current Limiting Resistor Values	43
Table 7.4	Logic Input Timing	44
Table A.1	IM805-34P1 - Connector P1 Pin Assignment and Description	57

Section 1

Introduction

The IM805

The IM805 is a high performance, yet low cost microstepping driver that utilizes surface mount ASIC technology. The IM805 is small, easy to interface and use, yet powerful enough to handle the most demanding applications.

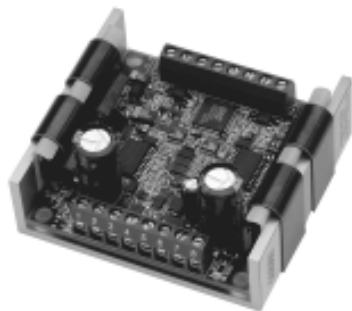

The IM805 has 14 built-in microstep resolutions (both binary and decimal). The resolution can be changed at any time without the need to reset the driver. This feature allows the user to rapidly move long distances, yet precisely position the motor at the end of travel without the expense of high performance controllers.

With the development of proprietary and patented circuits, ripple current has been minimized to reduce motor heating common with other designs, allowing the use of low inductance motors to improve high speed performance and system efficiency.

The IM805, because of its small size and low cost, can be used to increase accuracy and smoothness in systems using higher step angle motors. In many instances mechanical gearing can be replaced with microstepping, reducing cost and eliminating potential maintenance.

Available as options for the IM805 are a variety of connector styles, a heat sink and thermal pad.

The IM805 was developed to provide designers with affordable, state-of-the-art technology for the competitive edge needed in today's market.

Features and Benefits

- Low Cost.
- Small Size 2.75" x 3.00" x 1.20"
(69.9 x 76.2 x 30.5 mm).
- Advanced Surface Mount and ASIC Technology.
- High Input Voltage (+24 to +75VDC).
- High Output Current (5A RMS, 7A Peak).
- No Minimum Inductance.
- FAULT Output.

- Optically Isolated Inputs.
- Single Supply.
- Up to 10MHz Step Clock Rate.
- Short Circuit Protection.
- Microstep Resolution to 51,200 Steps/Rev.
- Microstep Resolutions can be Changed “On-The-Fly” Without Loss of Motor Position.
- 20 kHz Chopping Rate.
- Automatically Switches Between Slow and Fast Decay for Unmatched Performance.
- 14 Selectable Resolutions Both in Decimal and Binary.
- Adjustable Automatic Current Reduction.
- At Full Step Output.

The Product Manual

The main sections of this manual address the standard IM805 driver, which come with 8 position screw terminals as a connection medium. The different connector, input options and accessories are covered in detail in the appendices.

The Bookmarks

The IB Series product manual in it's electronic format (ib.pdf) can be downloaded from the IMS website at www.imshome.com. This version includes a Bookmark feature that allows the reader to link from a Bookmarked Topic in the Table of Contents to a full description of that feature's attributes and functions. You can also select a Topic directly from the Table of Contents Pages. Topics with a Bookmark function are further identifiable because the cursor changes from a normal pointer to a “finger” pointer when placed over the word.



Notes and Warnings



WARNING! The IM805 components are sensitive to ElectroStatic Discharge (ESD). All handling should be done at an ESD protected workstation.



WARNING! Hazardous voltage levels may be present if using an open frame power supply to power the IM805.



WARNING! Ensure that the power supply output voltage does not exceed the maximum input voltage of the IM805.



WARNING! A current adjustment resistor is always necessary to keep the Driver and/or Motor in a safe operating range.
DO NOT operate the IM805 Driver without a current adjustment resistor in place.



WARNING! Turn off the AC power side to power down the DC power supply.



WARNING! For battery operated systems connect a “transient suppressor” across the power switch to prevent arcs and high voltage spikes. Also place a “transorb” across the +V and GND of the battery connections at the Driver.

Section 2

Hardware Specifications

Section Overview

This section will acquaint you with the dimensional information, pin description, power, environmental and thermal requirements of the IM805. It is broken down as follows:

- Mechanical Specifications.
- Electrical Specifications.
- Thermal Specifications.
- Pin Assignment and Description.

Mechanical Specifications

Shown are the standard 8 position screw terminal set and the Optional 34 Pin Connector for the IM805. Specifications for the 34 Pin Connector are available in *Appendix A: Standard Connection Options*, of this document.

Dimensions are in inches, parenthesis dimensions are in millimeters.

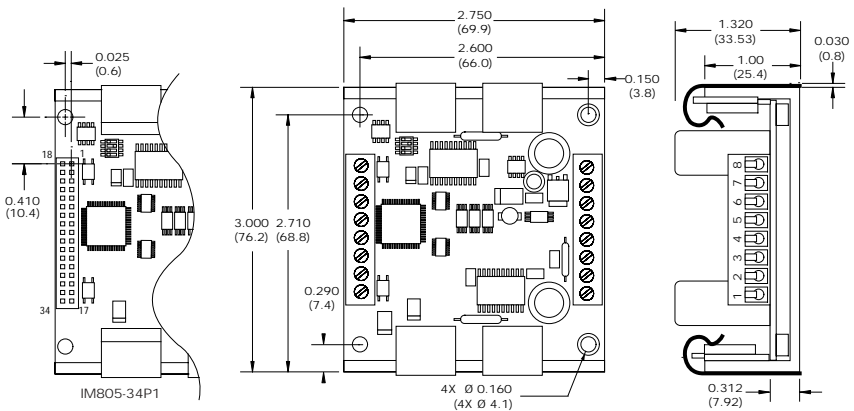


Figure 2.1: IM805 Dimensions

Electrical Specifications

Test Condition: $T_A = 25^{\circ}\text{C}$, $+V = 75\text{VDC}$

IM805 Electrical Characteristics					
Specification	Test Condition	Min	Typ	Max	Unit
Input Voltage		24		75*	V
Phase Output Current	RMS	1**		5	A
Phase Output Current	Peak			7	A
Quiescent Current	Inputs/Outputs Floating			13	mA
Active Power Dissipation	$I_{OUT} = 4\text{A RMS}$			9	W
Input Forward Current	Step Clock and Direction		7.0	20	mA
Input Forward Voltage	Step Clock and Direction		1.4	1.7	V
Input Forward Current	Enable and Reset		5.0	50	mA
Input Forward Voltage	Enable and Reset		1.1	1.4	V
Input Reverse Breakdown Voltage	Isolated Inputs	5			V
Output Current	Fault, Fullstep Outputs			25	mA
Drain-Source Voltage	Fault, Fullstep Outputs			100	V
Drain-Source On Resistance	Fault, Fullstep Outputs $I_{DS} = 25\text{mA DC}$		6.5		Ω

* Includes motor back EMF.

**Lower currents may be used for current reduction.

Table 2.1: IM805 Electrical Specifications

Thermal Specifications

IM805 Thermal Specifications(°C)	
Specification	Range
Ambient Temperature	0° to +50°
Storage Temperature	-40° to +125°
Maximum Plate Temperature	+70°

Table 2.2: IM805 Thermal Specifications

NOTE! Additional cooling may be required to limit the plate temperature to 70°C! An optional heat sink and thermal pad is available, see *Appendix C: Cooling Solutions* for details.

Pin Assignment and Description

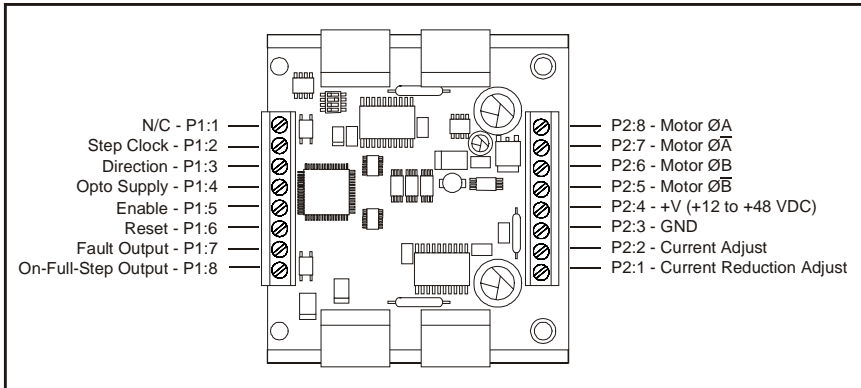


Figure 2.2: IM805 Pin Configuration

NOTE! This pin configuration diagram and table represent the pinout of any 8 position connector used for P1. If you purchased the IM805-34P1 option (34 Position Header) the pin configuration diagram and table is located in *Appendix A: Standard Connection Options*.

Connector P1

IM805 Connector P1 Configuration		
PIN #	FUNCTION	DETAILS
1	N/C	No connection.
2	Step Clock Input	A positive going edge on this input advances the motor one increment. The size of the increment is dependent upon the settings of the resolution select switch SW1.
3	Direction Input	This input is used to change the direction of the motor. Physical direction also depends upon the connection of the motor windings.
4	Opto Supply	This +5VDC input is used to supply power to the isolated logic inputs. A higher voltage may be used, but care must be taken to limit the current through the opto-coupler.
5	Enable/ $\overline{\text{Disable}}$ Input	This input is used to enable/disable the output section of the driver. When in a Logic HIGH state (open), the outputs are enabled. However, this input does not inhibit the step clock, therefore, the outputs will update by the number of clock pulses (if any) applied to the driver while it was disabled.
6	$\overline{\text{Reset}}$ Input	When LOW, this input will reset the driver (phase outputs will disable). When released, the driver will be at its initial state (Phase A OFF, Phase B ON).
7	Fault Output	This output indicates that a short circuit condition has occurred. This output is active LOW.
8	On-Full-Step Output	This open collector output indicates when the driver is positioned at full step. This output can be used to count the number of full steps the motor has moved, regardless of the number of microsteps in between. This output is active LOW.

Table 2.3: Connector P1 - Pin Assignment and Descriptions

Connector P2

IM805 Connector P2 Configuration		
PIN #	FUNCTION	DETAILS
1	Current Reduction Adjust	Phase Current Reduction Adjustment Input. A resistor connected between this pin and pin 2 will proportionately reduce the current in both motor windings approximately .5 seconds after the last positive edge of the step clock input. The amount of current reduced will depend upon the value of the resistor used.
2	Current Adjustment	Phase Current Adjustment. A resistor is connected between this pin and P2:3 (GND) to adjust the maximum phase current in the motor. A resistor MUST be connected to this input or the IM805 WILL latch into fault.
3	GND	Power Ground. The ground, or return, of the power supply is connected here.
4	+V	Motor Supply Voltage. +24 to +75VDC.
5	Phase \bar{B}	$\bar{O}B$ of the stepping motor.
6	Phase B	$O\bar{B}$ of the stepping motor.
7	Phase \bar{A}	$\bar{O}A$ of the stepping motor.
8	Phase A	$O\bar{A}$ of the stepping motor.

Table 2.4: Connector P2 - Pin Assignment and Descriptions



WARNING! The IM805 components are sensitive to ElectroStatic Discharge (ESD). All handling should be done at an ESD protected workstation.



WARNING! Hazardous voltage levels may be present if using an open frame power supply to power the IM805.



WARNING! Ensure that the power supply output voltage does not exceed the maximum input voltage of the IM805.

Section 3

Mounting The IM805

This section has recommended mounting instructions for the standard IM805. For additional connector options for the IM805 see *Appendix A: Standard Connection Options*, of this document. An optional heat sink and thermal pad, the H-4X and TN-48, are available for the IM805. See *Appendix C: Cooling Solutions*, for details.

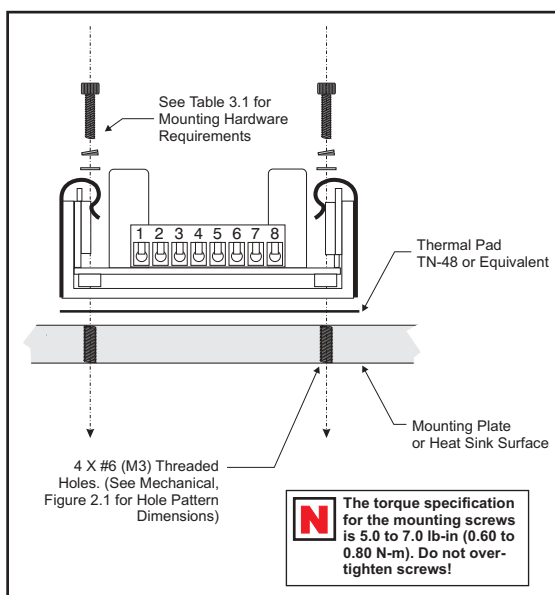


Figure 3.1: Mounting Recommendations

The IM805 has limited available clearance for mounting screws. If a mounting screw has a head diameter greater than 0.230 inches (5.8 mm), an insulating washer **MUST** be used to maintain proper electrical isolation between the mounting screw and the IM805's components. The washer must have a minimum thickness of 0.060 inches (1.52 mm) and a maximum diameter of 0.270 inches (6.86 mm). See Table 3.1 for screw recommendations/washer requirements.

Common ANSI #6 Screw Head Types and Diameters		
ANSI HEAD TYPE	MAX. HEAD DIAMETER - Inches (mm)	WASHER REQUIRED
Socket Cap	0.226 (5.74)	No
Fillister	0.226 (5.74)	No
Round	0.260 (6.60)	Yes
Pan	0.270 (6.86)	Yes

Table 3.1: IM805 Mounting Screw/Washer Requirements

The following insulating washers (listed by vendor and part #) are suitable for use in mounting the IM805:

- Accurate Screw Machine Co.
P/N 88-.062 N
- Micro Plastics, Inc.
P/N 17W02504
- Seastrom Manufacturing
P/N 5610-250-62



WARNING! Use of any mounting hardware other than that recommended may result in damage to the driver circuitry! Use **ONLY** the hardware recommended by this document to mount the IM805 to your panel or heatsink plate!

Section 4

Theory of Operation

Section Overview

This section will cover the circuit operation for the IM805 microstepping driver.

- Circuit Operation.
- Microstep Select Inputs.
- Stepping.
- Dual PWM Circuit.
- Fullstep Output.
- Timing.

Circuit Operation

Microstepping drives have a much higher degree of suitability for applications that require smooth operation and accurate positioning at low speeds than do half/fullstep drivers and reduction gearing. The IM805, which can be set to microstep resolutions as high as 51,200 microsteps/rev (256 microsteps/step) using a 1.8° stepping motor, is ideal for such applications.

In order to subdivide motor steps into microsteps while maintaining positional accuracy, precise current control is required. The IM805 accomplishes this by the use of a unique Dual PWM circuit built into the patented IM2000 Microstep Controller ASIC, which resides at the heart of the IM805. This PWM circuit uses alternating recirculating/non-recirculating modes to accurately regulate the current in the windings of a two phase stepping motor.

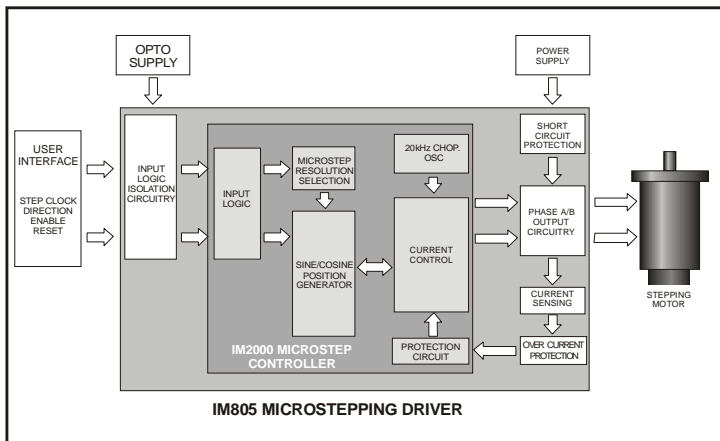


Figure 4.1: IM805 Block Diagram

Microstep Select (MSEL) Inputs

Another unique feature of the IM2000 is the ability to change resolutions at any time. A resolution change can occur whether the motor is being clocked or is at rest. The change will not take place until the rising edge of the next step clock input. At this time, the new resolution is latched and implemented before the step clock pulse takes effect.

If a resolution is chosen such that the sine/cosine output of the IM2000 would not land on an electrical fullstep of the motor, then the IM2000 will automatically align itself to the full step position on the step clock pulse that would have caused the motor to rotate past the full step. The step clock pulses, from that point forward, will be equal to the selected resolution. This feature allows the user to switch resolutions at any time without having to keep track of sine/cosine location. Because of this, the On-Full-Step output of the IM805 can easily be used to monitor position.

Configuration settings for the Microstep Resolution are located in Section 7 of this document, *Interfacing and Controlling the IM805*.

Stepping

The IM2000 contains a built-in sine/cosine generator used for the generation of Phase A and Phase B position reference. This digitally encoded 9 bit sine and 9 bit cosine signal is directly fed into a digital to analog converter.

The step clock (SCLK) and direction (DIR) inputs are buffered using Schmidt triggered buffers for increased noise immunity and are used to increment or decrement the sine/cosine position generator. The position generator is updated on the rising edge of the step clock input. It will increment or decrement by the amount specified by the microstep resolution select (MSEL) inputs.

The direction (DIR) input determines the direction of the position generator and hence the direction of the motor. The DIR input is synchronized to the SCLK input. On the rising edge of the SCLK input the state of the DIR input is latched in. The position generator will then look to see if there has been a change in direction and implement that change before executing the next step. By utilizing this method to implement the direction change, the noise immunity is greatly increased and no physical change in the motor occurs if the direction line is toggled prior to the step clock input.

The enable/disable input does not affect the step clock input. The sine/cosine generator will continue to update if a signal is applied to the step clock input.

The IM2000 outputs both sine and cosine data simultaneously when applying a step clock input. Dual internal look-up tables are used to output a unique position for every step clock input to enhance system performance.

Dual PWM Circuit

The IM2000 contains a unique dual PWM circuit that efficiently and accurately regulates the current in the windings of a two phase stepping motor. The internal PWM accomplishes this by using an alternating recirculating/non-recirculating mode to control the current.

Recirculating

In a recirculating PWM, the current in the windings is contained within the output bridge while the PWM is in its OFF state. (After the set current is reached.) This method of controlling the current is efficient when using low inductance motors, but lacks response because of its inability to remove current from the windings on the downward cycle of the sine/cosine wave (See Figure 4.1).

Non-Recirculating

In a non-recirculating PWM, the current flows up through the bridge and back to the supply in the OFF phase of the cycle. This method of controlling current allows for

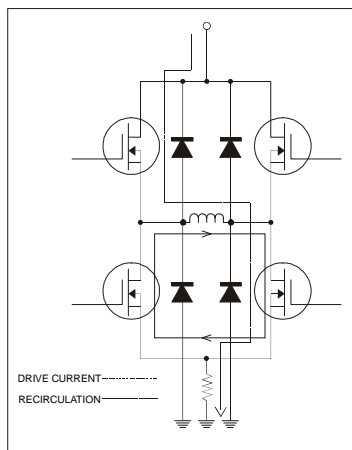


Figure 4.2: Recirculating PWM

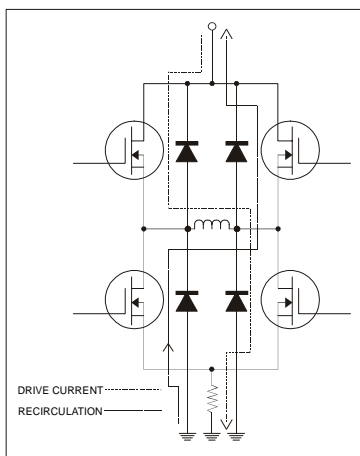


Figure 4.3: Non-Recirculating PWM

much better response but reduces efficiency and increases current ripple, especially in lower inductance motors (See Figure 4.3).

The IM2000's PWM utilizes the best features of both by combining recirculating and non-recirculating current control. On the rising edge of the sine/cosine waveform, the PWM will always be in a recirculating mode. This mode allows the driver to run at peak efficiency while maintaining minimum current ripple even with low inductance motors. On the downward cycle of the sine/cosine waveform, the PWM operates in a two part cycle. In the first part of its cycle, the PWM is in a non-recirculating mode to pull current

from the motor windings. In the second part of the cycle the PWM reverts back to recirculating mode to increase efficiency and reduce current ripple.

The IM2000 will automatically change the non-recirculating pulse widths to compensate for changes in supply voltage and accommodate a wide variety of motor inductances. This method also allows for the use of very low inductance motors with your IM805 driver, while utilizing a 20kHz chopping rate which reduces motor heating but maintains high efficiency and low current ripple.

Fullstep Output Signal

The fullstep output signal from the IM805 is an active high output at connector P1:8. This output will be TRUE for the duration of the full step. A full step occurs when either Phase A or Phase B crosses through zero (i.e. full current in one motor winding and zero current in the other winding). This fullstep position is a common position regardless of the microstep resolution selected.

The fullstep output can be used to count the number of mechanical fullsteps that the motor has traveled without the need to count the number of microsteps in between. A controller that utilizes this output can greatly reduce its position tracking overhead, thus substantially increasing its throughput.

Interface guidelines and a sample application for the fullstep output are located in Section 7 of this document, *Interfacing and Controlling the IM805*.

Timing

The direction and microstep resolution select inputs are synchronized with the positive going edge of the step clock input. When the step clock input goes HIGH, the direction and microstep resolution select inputs are latched. Further changes to these inputs are ignored until the next rising edge of the step clock input.

After these signals are latched, the IM805 looks to see if any changes have occurred to the direction and microstep resolution select inputs. If a change has occurred, the IM805 will execute the change before taking the next step. Only AFTER the change has been executed will the step be taken. If no change has occurred, the IM805 will simply take the next step. This feature works as an automatic debounce for the direction and microstep resolution select inputs.

The reset and enable inputs are asynchronous to any input and can be changed at any time.

Section 5

Power Supply Requirements

Section Overview

This section covers the power supply requirements of the IM805. Precise wiring and connection details are to be found in Section 7: *Interfacing and Controlling the IM805*. The following is covered by this section:

- Selecting a Power Supply.
- Recommended Wiring.
- AC Line Filtering.

Selecting a Power Supply

Selecting a Motor Supply (+V)

Proper selection of a power supply to be used in a motion system is as important as selecting the drive itself. When choosing a power supply for a stepping motor driver, there are several performance issues that must be addressed. An undersized power supply can lead to poor performance and possibly even damage to your drive.

The Power Supply - Motor Relationship

Motor windings can basically be viewed as inductors. Winding resistance and inductance result in an L/R time constant that resists the change in current. To effectively manipulate the rate of charge, the voltage applied is increased. When traveling at high speeds, there is less time between steps to reach current. The point where the rate of commutation does not allow the driver to reach full current is referred to as voltage mode. Ideally you want to be in current mode, which is when the drive is achieving the desired current between steps. Simply stated, a higher voltage will decrease the time it takes to charge the coil and, therefore, will allow for higher torque at higher speeds.

Another characteristic of all motors is back EMF. Back EMF is a source of current that can push the output of a power supply beyond the maximum operating voltage of the driver. As a result, damage to the stepper driver could occur over a period of time.

The Power Supply - Driver Relationship

The IM805 is very current efficient as far as the power supply is concerned. Once the motor has charged one or both windings of the motor, all the power supply has to do is replace losses in the system. The charged winding acts as an energy storage in that the current will recirculate within the bridge and in and

out of each phase reservoir. This results in a less than expected current draw on the power supply.

Stepping motor drivers are designed with the intent that a user's power supply output will ramp up to greater than or equal to the minimum operating voltage of the drive. The initial current surge is substantial and could damage the driver if the supply is undersized. The output of an undersized power supply could fall below the operating range of the driver upon a current surge. This could cause the power supply to start oscillating in and out of the voltage range of the driver and result in damage to either the supply, the driver, or both.

There are two types of supplies commonly used, regulated and unregulated, both of which can be switching or linear. Each have advantages and disadvantages.

Regulated vs. Unregulated

An unregulated linear supply is less expensive and more resilient to current surges, however, the voltage decreases with increasing current draw. This may cause problems if the voltage drops below the working range of the drive.

Fluctuations in line voltage are also a point of concern. These fluctuations may cause the unregulated linear supply to be above or below the anticipated or acceptable voltage.

A regulated supply maintains a stable output voltage, which is good for high speed performance. These supplies are also not affected by line fluctuations, however, they are more expensive. Depending on the current regulation, a regulated supply may crowbar or current clamp and lead to an oscillation that, as previously stated, can cause damage to the driver and/or supply. Back EMF can cause problems for regulated supplies as well. The current regeneration may be too large for the regulated supply to absorb. This could lead to an over voltage condition which could damage the output circuitry of the IM805.

Non IMS switching power supplies and regulated linear supplies with overcurrent protection are not recommended because of their inability to handle the surge currents inherent in stepping motor systems.

Motor Power Supply Specifications	
Specification	
Recommended Supply Type	Unregulated DC
Ripple Voltage	±10%
Output Voltage	+24 to +75 VDC
Output Current*	4A Peak
* The output current needed is dependent on the power supply voltage, the motor selection and the load.	

Table 5.1: Motor Power Supply Specifications

Recommended IMS Power Supplies

IMS has designed a series of low cost miniature unregulated switchers and unregulated linears which can handle extreme varying load conditions. This makes them ideal for stepper motor drives and DC servo motors as well. Each of these is available in either 120 or 240 VAC configuration. See the IMS Catalog or web site (<http://www.imshome.com>) for information on these supplies. Listed below are the power supplies recommended for use with the IM805.

IP804/IP804-240†
Unregulated Linear Supply

Range

Input 120 VAC Version 102-132 VAC
240 VAC Version 204-264 VAC
No Load Output Voltage* 76 VDC @ 0 Amps
Continuous Output Rating* 65 VDC @ 2 Amps
Peak Output Rating* 58 VDC @ 4 Amps

ISP200-7/ISP200H-7†
Unregulated Switching Supply

Range

Input 120 VAC Version 102-132 VAC
240 VAC Version 204-264 VAC
No Load Output Voltage* 70 VDC @ 0 Amps
Continuous Output Rating* 62 VDC @ 1 Amps
Peak Output Rating* 59 VDC @ 2 Amps

* Measurements taken at 25°C, 120 VAC, 60 Hz.

† Optional 240 VAC Version

Opto Supply Specifications	
Specification	
Recommended Supply Type	Regulated Linear or Switch Mode DC
Ripple Voltage	±10%
Output Voltage	+5VDC
Output Current	100mA
NOTE: An opto supply voltage in excess of +5VDC may be used if steps are taken to limit the current to 15mA maximum!	

Table 5.2: +5VDC Power Supply Specifications

Selecting an Opto Supply

Rules of Wiring and Shielding

Noise is always present in a system that involves both high power and small signal circuitry. Regardless of the power configuration used for your system, there are some wiring and shielding rules that should be followed to keep the noise-to-signal ratio as small as possible.

Rules of Wiring

- Power supply and motor wiring should be shielded twisted pairs run separately from signal carrying wires.
- A minimum of 1 twist per inch is recommended.
- Motor wiring should be shielded twisted pairs using 20-gauge wire or, for distance greater than 5 feet, 18 gauge or better.
- Power ground return should be as short as possible to established ground.
- Power supply wiring should be shielded twisted pairs. Use 18 gauge wire if load is less than 4 amps, or 16 gauge for more than 4 amps.
- Do not "Daisy-Chain" power wiring to system components.

Rules of Shielding

- The shield must be tied to zero-signal reference potential. In order for shielding to be effective, it is necessary for the signal to be earthed or grounded.
- Do not assume that earth ground is true earth ground. Depending on the distance to the main power cabinet, it may be necessary to sink a ground rod at a critical location.
- The shield must be connected so that shield currents drain to signal-earth connections.
- The number of separate shields required in a system is equal to the number of independent signals being processed plus one for each power entrance.
- The shield should be tied to a single point to prevent ground loops.
- A second shield can be used over the primary shield, however, the second shield is tied to ground at both ends.

Recommended Power Supply Cables

Power supply cables must not run parallel to logic level wiring as noise will be coupled onto the logic signals from the power supply cables. If more than one driver is to be connected to the same power supply, run separate power and

ground leads to each driver from the power supply. The following twisted pair jacketed Belden cable (or equivalent) are recommended for use with the IM805.

- $\leq 4\text{A DC}$ Belden Part# 9740 or equivalent 18 Gauge
- $\geq 4\text{A DC}$ Belden Part# 8471 or equivalent 16 Gauge



WARNING! Turn off the AC power side to power down the DC power supply.



WARNING! For battery operated systems connect a “transient suppressor” across the power switch to prevent arcs and high voltage spikes. Also place a “transorb” across the +V and GND of the battery connections at the Driver.



WARNING! Do not connect or disconnect the power leads or the motor leads with power applied!

AC Line Filtering

Since the output voltage of an unregulated power supply will vary with the AC input applied, it is recommended that an AC line filter be used to prevent damage to the IM805 due to a lightning strike or power surge.



WARNING! Verify that the power supply wiring is correct prior to power application. If +V and GND are connected in reverse order, catastrophic damage to the IM805 may occur! Ensure that the power supply output voltage does not exceed +75 VDC, which is the maximum input voltage of the IM805!



WARNING! Hazardous voltage levels may be present if using an open frame power supply to power the IM805!

Section 6

Motor Requirements

Section Overview

This section covers the motor configurations for the IM805.

- Selecting a Motor.
 - Motor Wiring.
 - Connecting the Motor.
-

Selecting a Motor

When selecting a stepper motor for your application, there are several factors that need to be taken into consideration:

- How will the motor be coupled to the load?
- How much torque is required to move the load?
- How fast does the load need to move or accelerate?
- What degree of accuracy is required when positioning the load?

While determining the answers to these and other questions is beyond the scope of this document, they are details that you must know in order to select a motor that is appropriate for your application. These details will affect everything from the power supply voltage to the type and wiring configuration of your stepper motor. The current and microstepping settings of your IM805 drive will also be affected.

Types and Construction of Stepping Motors

The stepping motor, while classed as a DC motor, is actually an AC motor that is operated by trains of pulses. Although it is called a “stepping motor”, it is in reality a polyphase synchronous motor. This means it has multiple phases wound in the stator and the rotor is dragged along in synchronism with the rotating magnetic field. The IM805 is designed to work with the following types of stepping motors:

- 1) Permanent Magnet (PM)
- 2) Hybrid Stepping Motors

Hybrid stepping motors combine the features of the PM stepping motors with the features of another type of stepping motor called a variable reluctance motor (VR). VR motors are low torque and load capacity motors which are typically used in instrumentation. The IM805 cannot be used with VR motors as they have no permanent magnet.

On hybrid motors, the phases are wound on toothed segments of the stator assembly. The rotor consists of a permanent magnet with a toothed outer surface which allows precision motion accurate to within ± 3 percent. Hybrid stepping motors are available with step angles varying from 0.45° to 15° with 1.8° being the most commonly used. Torque capacity in hybrid steppers ranges from 5 - 8000 ounce-inches. Because of their smaller step angles, hybrid motors have a higher degree of suitability in applications where precise load positioning and smooth motion is required.

Sizing a Motor for Your System

The IM805 is a bipolar driver which works equally well with both bipolar and unipolar motors (i.e. 8 and 4 lead motors, and 6 lead center tapped motors).

To maintain a given set motor current, the IM805 chops the voltage using a constant 20kHz chopping frequency and a varying duty cycle. Duty cycles that exceed 50% can cause unstable chopping. This characteristic is directly related to the motor's winding inductance. In order to avoid this situation, it is necessary to choose a motor with a low winding inductance. The lower the winding inductance, the higher the step rate possible.

Winding Inductance

Since the IM805 is a constant current source, it is not necessary to use a motor that is rated at the same voltage as the supply voltage. What is important is that the IM805 is set to the motor's rated current. See *Section 7: Interfacing and Controlling the IM805* for more details.

As was discussed in the previous section, *Power Supply Requirements*, the higher the voltage used the faster the current can flow through the motor windings. This in turn means a higher step rate, or motor speed. Care should be taken not to exceed the maximum voltage of the driver. Therefore, in choosing a motor for a system design, the best performance for a specified torque is a motor with the lowest possible winding inductance used in conjunction with highest possible driver voltage.

The winding inductance will determine the motor type and wiring configuration best suited for your system. While the equation used to size a motor for your system is quite simple, several factors fall into play at this point.

The winding inductance of a motor is rated in milliHenrys (mH) per Phase. The amount of inductance will depend on the wiring configuration of the motor.

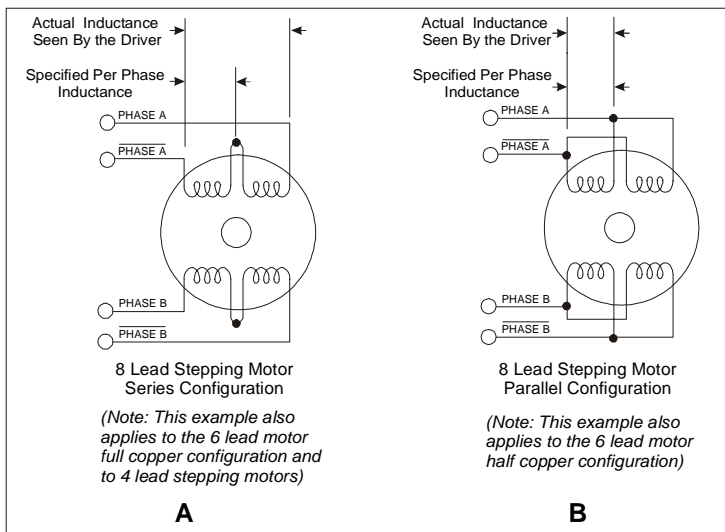


Figure 6.1 A & B: Per Phase Winding Inductance

The per phase winding inductance specified may be different than the per phase inductance seen by your IM805 driver depending on the wiring configuration used. Your calculations must allow for the actual inductance that the driver will see based upon the wiring configuration.

Figure 6.1A shows a stepper motor in a series configuration. In this configuration, the per phase inductance will be 4 times that specified. For example: a stepping motor has a specified per phase inductance of 1.47mH. In this configuration the driver will see 5.88 mH per phase.

Figure 6.1B shows an 8 lead motor wired in parallel. Using this configuration the per phase inductance seen by the driver will be as specified.

$$\text{Maximum Motor Inductance (mH per Phase)} = .2 \times \text{Minimum Supply Voltage}$$



NOTE: In calculating the maximum phase inductance, the minimum supply output voltage should be used when using an unregulated supply.

Using the following equation we will show an example of sizing a motor for a IM805 used with an unregulated power supply with a minimum voltage (+V) of 18 VDC:

$$.2 \times 18 = 3.6 \text{ mH}$$

The recommended per phase winding inductance we can use is 3.6 mH.

Recommended IMS Motors

IMS stocks the following 1.8° hybrid stepping motors that are recommended for the IM805. All IMS motors are CE marked. For more detailed information on these motors, please see the IMS Full Line catalog or the IMS web site at <http://www.imshome.com>.

23 Frame

Single Shaft	Double Shaft
M2-2215-S	M2-2215-D
M2-2220-S	M2-2220-D
M2-2232-S	M2-2232-D
M2-2240-S	M2-2240-D

34 Frame

Single Shaft	Double Shaft
M2-3424-S	M2-3424-D
M2-3437-S	M2-3437-D
M2-3450-S	M2-3450-D

Enhanced Stepper Motors

IMS also carries a new series of 23 frame enhanced stepping motors that are recommended for use with the IM805. These motors use a unique relationship between the rotor and stator to generate more torque per frame size while ensuring more precise positioning and increased accuracy.

The special design allows the motors to provide higher torque than standard stepping motors while maintaining a steadier torque and reducing torque drop-off.

The motors are available in 3 stack sizes, single or double shaft, with or without encoders. They handle currents up to 3 Amps in series or 6 Amps parallel, and holding torque ranges from 95 oz.-in. to 230 oz.-in (67 N-cm to 162 N-cm).

These CE rated motors are ideal for applications where higher torque is required.

23 Frame High Torque Motors

Single Shaft	Double Shaft
MH-2218-S	MH-2218-D
MH-2222-S	MH-2222-D
MH-2231-S	MH-2231-D

IMS Inside Out Stepper Motors

The new inside out stepper (IOS) motor was designed by IMS to bring versatility to stepper motors using a unique multi-functional, hollow core design.

This versatile new motor can be converted to a ball screw linear actuator by mounting a miniature ball screw to the front shaft face. Ball screw linear actuators offer long life, high efficiency, and can be field retrofitted. There is no need to throw the motor away due to wear of the nut or screw.

The IOS motors offer the following features:

- The shaft face diameter offers a wide choice of threaded hole patterns for coupling.
- The IOS motor can be direct coupled in applications within the torque range of the motor, eliminating couplings and increasing system efficiency.
- The IOS motor can replace gearboxes in applications where gearboxes are used for inertia damping between the motor and the load. The induced backlash from the gearbox is eliminated providing improved bi-directional position accuracy.
- Electrical or pneumatic lines can be directed through the center of the motor enabling the motors to be stacked end-to-end or applied in robotic end effector applications. The through hole is stationary, preventing cables from being chaffed by a moving hollow shaft.
- Light beams can be directed through the motor for refraction by a mirror or filter wheel mounted on the shaft mounting face.
- The IOS motor is adaptable to valves enabling the valve stem to protrude above the motor frame. The stem can be retrofitted with a dial indicator showing valve position.
- The motor is compatible with IMS bipolar drivers, keeping the system cost low.
- The IOS motor can operate up to 3000 rpm's.

The IOS motor is available in the following frames:

Frame Size	IMS PN
23 Frame	M3-2220-IOS
34 Frame	M3-3424-IOS

Motor Wiring

As with the power supply wiring, motor wiring should be run separately from logic wiring to minimize noise coupled onto the logic signals. Motor cabling exceeding 1' in length should be shielded twisted pairs to reduce the transmission of EMI (Electromagnetic Interference) which can lead to rough motor operation and poor system performance. For more information on wiring and shielding, please refer to *Rules of Wiring and Shielding* in Section 5 of this manual.



NOTE: The physical direction of the motor with respect to the direction input will depend upon the connection of the motor windings. To switch the direction of the motor with respect to the direction input, switch the wires on either Phase A or Phase B outputs.



WARNING! Do not connect or disconnect the power leads or the motor leads with power applied!

Below are listed the recommended motor cables:

Dual Twisted Pair Shielded (Separate Shields)

- ≤ 5 feet Belden Part# 9402 or equivalent 20 Gauge
- ≥ 5 feet Belden Part# 9368 or equivalent 18 Gauge

When using a bipolar motor, the motor must be within 100 feet of the drive.

Connecting the Motor

The motor leads are connected to the following connector pins:

IM805

Phase	Connector: Pin
Phase B̄	P2: 5
Phase B	P2: 6
Phase Ā	P2: 7
Phase A	P2: 8

8 Lead Motors

8 lead motors offer a high degree of flexibility to the system designer in that they may be connected in series or parallel, thus satisfying a wide range of applications.

Series Connection

A series motor configuration would typically be used in applications where a higher torque at lower speeds is required. Because this configuration has the most inductance, the performance will start to degrade at higher speeds. Use the per phase (or unipolar) current rating as the peak output current, or multiply the bipolar current rating by 1.4 to determine the peak output current.

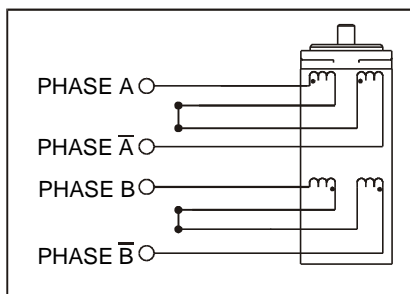


Figure 6.2: 8 Lead Motor Series Connections

Parallel Connection

An 8 lead motor in a parallel configuration offers a more stable, but lower torque at lower speeds. But because of the lower inductance, there will be higher torque at higher speeds. Multiply the per phase (or unipolar) current rating by 1.96, or the bipolar current rating by 1.4, to determine the peak output current.

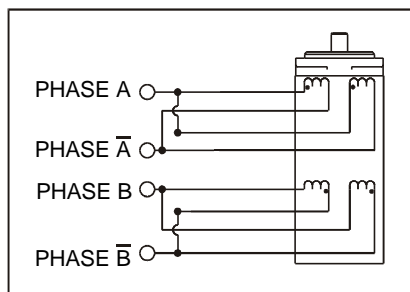


Figure 6.3: 8 Lead Motor Parallel Connections

6 Lead Motors

Like 8 lead stepping motors, 6 lead motors have two configurations available for high speed or high torque operation. The higher speed configuration, or *half coil*, is so described because it uses one half of the motor's inductor windings. The higher torque configuration, or *full coil*, uses the full windings of the phases.

Half Coil Configuration

As previously stated, the half coil configuration uses 50% of the motor phase windings. This gives lower inductance, hence, lower torque output. Like the parallel connection of 8 lead motor, the torque output will be more stable at higher speeds. This configuration is also referred to as *half copper*. In setting the driver output current multiply the specified per phase (or unipolar) current rating by 1.4 to determine the peak output current.

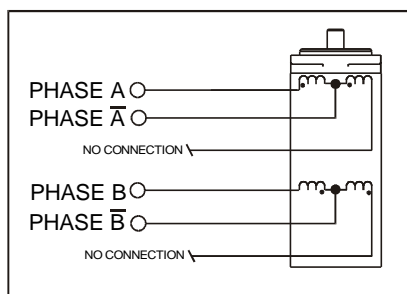


Figure 6.4: 6 Lead Half Coil (Higher Speed) Motor Connections

Full Coil Configuration

The full coil configuration on a six lead motor should be used in applications where higher torque at lower speeds is desired. This configuration is also referred to as *full copper*. Use the per phase (or unipolar) current rating as the peak output current.

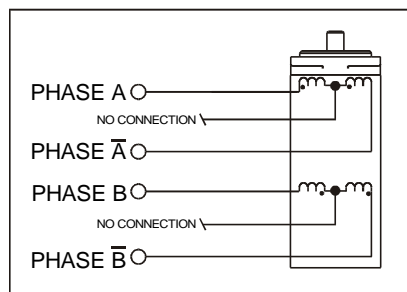


Figure 6.5: 6 Lead Full Coil (Higher Torque) Motor Connections

4 Lead Motors

4 lead motors are the least flexible but easiest to wire. Speed and torque will depend on winding inductance. In setting the driver output current, multiply the specified phase current by 1.4 to determine the peak output current.

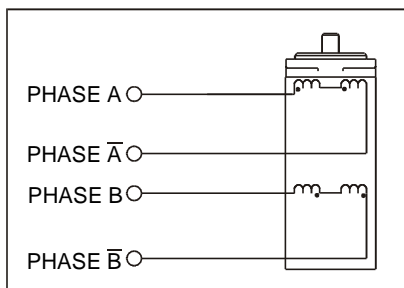


Figure 6.6: 4 Lead Motor Connections

Section 7

Interfacing and Controlling the IM805

Section Overview

This section covers the interface connections, configuration and control signals of the IM805. Covered are:

- Layout and Interface Guidelines.
- Motor Power Connection (+V).
- Controlling the Output Current
- Controlling the Output Resolution.
- Logic Interface Connection and Use.
- Using the Fault Output.
- Using the On-Fullstep Output.
- Minimum Required Connections.

Layout and Interface Guidelines

Logic level signals should not run parallel to motor phase signals. The motor phase signals will couple noise onto the logic level signals. This will cause rough motor motion and unreliable system operation. The motor phase signals should be run as pairs.

When leaving the driver module, motor cables should not run parallel with other wires. Phases should be wired using twisted pairs. If motor cabling in excess of one foot is required, motor cabling should be shielded twisted pairs to reduce the transmission of EMI. The shield must be tied to AC ground at the driver end only, or the supply ground if AC ground is not available. The motor end must be left floating.

If more than one driver is connected to the power supply, separate power and ground connections from each driver to the power supply should be used. Do not “daisy chain”.

The power supply cables need to be a twisted pair if power is connected from a source external to the board. If multiple drivers are used with an external power source and it is not possible to run separate power and ground connections to each driver, a low impedance electrolytic capacitor equivalent to two times the total capacitance of all driver capacitors and of equal voltage must be placed at the power input of the board.

Recommended Wiring Practices

The following wiring/cabling is recommended for use with the IM805:

Motor Power

≤ 4A DC	Belden Part# 9740 or equivalent 18 Gauge
≥ 4A DC	Belden Part# 8471 or equivalent 16 Gauge

Motor

The motor cabling recommended for use will depend upon the distance in which the motor will be located from the drive.

≤ 5 feet	Belden Part# 9402 or equivalent 20 AWG
≥ 5 feet	Belden Part# 9368 or equivalent 18 AWG

Logic Wiring

Wire Size	20-22 AWG
-----------------	-----------

General Practices

The following wire strip length and tightening torque is recommended:

Wire Strip Length	0.238" (6.0 mm)
Terminal Screw Tightening Torque	4.5 lb-in (0.5 N-m)



WARNING! Do not exceed the recommended tightening torque for the screw terminals!



WARNING! Do not connect or disconnect any wiring when power is applied!

Motor Power Connection (+V)

Figure 7.1 illustrates the motor power (+V) connection to two IM805 drives using a recommended IMS ISP200-7 unregulated switching power supply. Shown are the proper wiring practices of using shielded twisted pair wiring, with the shield tied to AC ground and the driver end left floating. Each drive is wired to the power supply separately, rather than daisy-chained together. Following these principles will reduce the electrical noise in your system and help eliminate a major cause of erratic system performance.

Please note that an AC line conditioner is also shown. This protects your system from potential damage resulting from line spikes and surges.

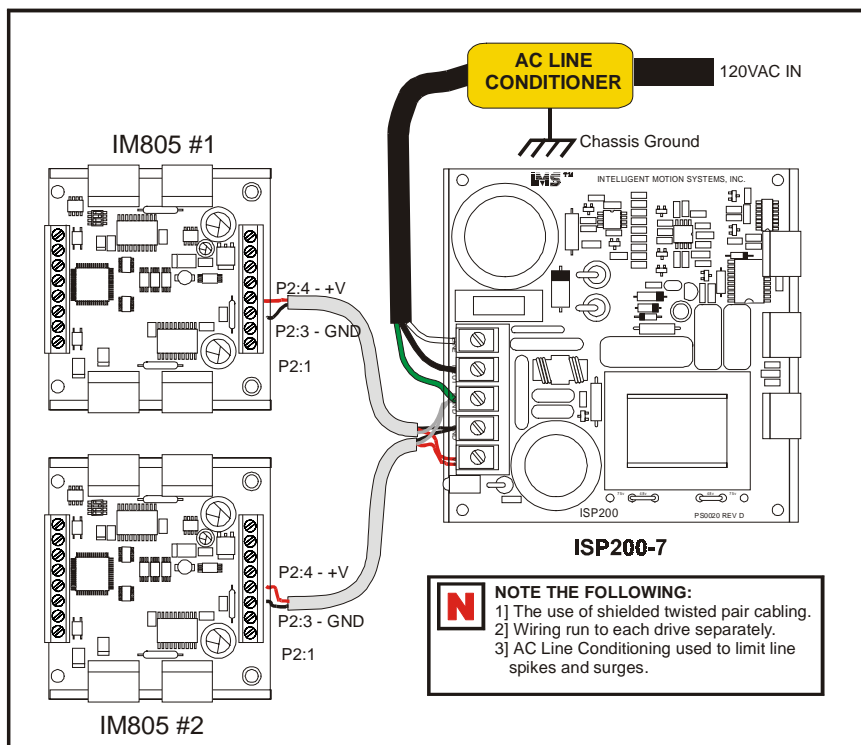


Figure 7.1: IM805 Motor Power Connection

Configuring and Controlling the Output Current

For any given motor, the output current used for microstepping is determined differently from that of a half/full step driver.

In the IM805, a sine/cosine output function is used in rotating the motor. Therefore, when microstepping, the specified phase current of the motor is considered an RMS value.

The output current is set by means of a current adjustment resistor placed between P2:2 (Current Adjust) and P2:3 (Power Ground). See the next subsection titled *“Setting the Output Current”* for connection instructions and resistor values.

The IM805 also has an automatic current reduction feature, which allows the user to reduce the current in the motor windings to the level required to maintain holding torque, thus allowing for cooler motor operation and greater system power efficiency. This feature is controlled by means of a resistor connected between P2:1 (Reduction Adjust) and P2:2 (Current Adjust). The subsection; *“Reducing the Output Current”* contains reduction adjustment resistor calculations and connection instructions.

Determining the Output Current

Stepper motors can be configured as 4, 6 or 8 leads. Each configuration requires different currents. Shown below are the different lead configurations and the procedures to determine the peak per phase output current setting that would be used with different motor/lead configurations.



NOTE! The **PEAK** current will be used to determine the current adjust resistor value, **NOT** the RMS current! This represents the maximum output current that should be set for your IM805 driver!

4 Lead Motors

Multiply the specified phase current by 1.4 to determine the peak output current.

EXAMPLE: A 4 lead motor has a specified phase current of 2.0A

$$2.0A \times 1.4 = 2.8 \text{ Amps Peak}$$

6 Lead Motors

- 1) When configuring a 6 lead motor in a half coil configuration (i.e. connected from one end of the coil to the center tap (high speed configuration)) multiply the specified per phase (or unipolar) current rating by 1.4 to determine the peak output current.

EXAMPLE: A 6 lead motor in half coil configuration has a specified phase current of 3.0A

$$4.0A \times 1.4 = 5.6 \text{ Amps Peak}$$

- 2) When configuring the motor so the full coil is used (i.e. connected from end-to-end with the center tap floating (higher torque configuration)) use the per phase (or unipolar) current rating as the peak output current.

EXAMPLE: A 6 lead motor in full coil configuration with a specified phase current of 3.0A

$$3.0A \text{ per phase} = 3.0 \text{ Amps Peak}$$

8 Lead Motors

SERIES CONNECTION:

When configuring the motor windings in series, use the per phase (or unipolar) current rating as the peak output current, or multiply the bipolar current rating by 1.4 to determine the peak output current.

EXAMPLE: An 8 lead motor in series configuration with a specified unipolar current of 3.0A

3.0A per phase = 3.0 Amps Peak

An 8 lead motor in series configuration with a specified bipolar current of 2.8A

2.8 x 1.4 = 3.92 Amps Peak

PARALLEL CONNECTION:

When configuring the motor windings in parallel, multiply the per phase (or unipolar) current rating by 2.0 or the bipolar current rating by 1.4 to determine the peak output current.

EXAMPLE: An 8 lead motor in parallel configuration with a specified unipolar current of 2.0A

2.0A per phase X 2.0 = 4.0 Amps Peak

An 8 lead motor in parallel configuration with a specified bipolar current of 2.8A

2.8 x 1.4 = 3.92 Amps Peak



WARNING! Although stepping motors will run hot when configured correctly, damage may occur to a motor if a higher than specified current is used. In most cases, the specified motor currents are maximum values and should not be exceeded!

Setting the Output Current

The IM805 uses an internal 1 milliamp current source to establish the reference voltage needed to control the output current. This voltage is programmed by means of an external 1/8 watt or higher, 1 percent resistor connected between P2:2 (Current Adjust) and P2:3 (Power Ground).



WARNING! A current adjustment resistor is always necessary to keep the Driver and/or Motor in a safe operating range.
DO NOT operate the IM805 Driver without a current adjustment resistor in place.

Figure 7.2 illustrates the connection of this resistor. Table 7.1 lists the resistor values for the driver output current in 200 milliamp increments.

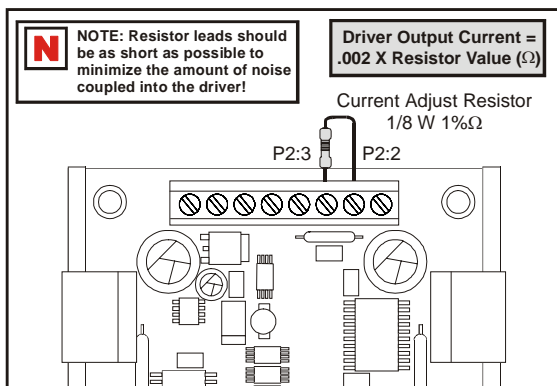


Figure 7.2: Current Adjust Resistor Placement

IM805 Current Adjust Resistor Values			
Output Current (Amps Peak)	Resistor Value (Ohms 1%)	Output Current (Amps Peak)	Resistor Value (Ohms 1%)
1.4	698	4.4	2210
1.6	806	4.6	2320
1.8	909	4.8	2370
2.0	1000	5.0	2490
2.2	1100	5.2	2610
2.4	1210	5.4	2670
2.6	1300	5.6	2800
2.8	1400	5.8	2870
3.0	1500	6.0	3010
3.2	1580	6.2	3090
3.4	1690	6.4	3240
3.6	1780	6.6	3320
3.8	1910	6.8	3400
4.0	2000	7.0	3480
4.2	2100	—	—

Table 7.1: Current Adjust Resistor Values

Reducing/Disabling the Output Current

The IM805 has the capability of automatically reducing the current in the motor windings following a move. Use of this feature will reduce motor and driver heating, thus allowing for cooler operation and improved system power efficiency.

The output current may be reduced to the level needed to maintain motor holding torque by means of a 1/8 watt or higher, 1 percent resistor. This resistor is connected between P2:1 (Reduction Adjust) and P2:2 (Current Adjust). The value of the reduced output current will also be dependant on the current adjust resistor value as expressed in the equation below. Figure 7.3 illustrates the connection. If no resistor is placed, the current in the motor windings will be at the amount set by the current adjust resistor when the motor is stopped and the driver enabled.

To reduce the current in the motor windings to zero between moves, the drive may be disabled by pulling the enable/disable input (P1:5) to ground by means of a sinking output on your controller or PLC, or by placing a shunt between pins 1 and 2 of connector P2. Note that if the controller continues to send step clock pulses to the driver, the internal counter on the IM2000 controller ASIC will continue to increment unless the driver is reset. This will only affect your system if the On-Full-Step output is used for position monitoring.

The amount of current reduced will depend upon the value of the reduction adjust resistor (R_{Red}) and the value of the current adjust resistor (R_{Adj}). The current will be reduced approximately 1.0 seconds after the rising edge of the last step clock pulse. The value of R_{Red} is calculated as follows:

$$R_{Red} = 500 \times \frac{I_{Run} \times I_{Hold}}{(I_{Run} - I_{Hold})}$$

I_{Run} is the desired peak running current. Range 1.0 to 7A Peak

I_{Hold} is the desired peak holding current. Range 0.5A to 7A Peak

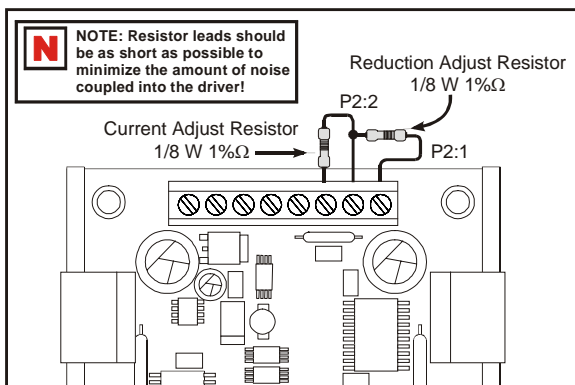


Figure 7.3: Current Reduction Adjust Resistor Placement

Controlling the Output Resolution

The number of microsteps per step is selected by the DIP switch (SW1). Table 7.2 lists the standard resolution values along with the associated switch settings for a 1.8° stepping motor.

If a motor with a different step angle is used, then the steps per revolution resolution will have to be calculated manually by multiplying the microsteps/step setting by the number of full steps per motor revolution.

For example, a 0.45° step angle motor (800 Fullsteps/Rev) set to 16 microsteps/step will have a resolution of 12,800 steps/rev.

These settings may be switched on-the-fly. There is no need to reset or disable the drive in order to change the output resolution. The resolution change will occur upon the rising edge of the step clock pulse following the change.

If remote control of the output resolution is required, these signals are brought out on connector P1 on the IM805-34P1. This option is discussed in detail in *Appendix A: Standard Connector Options*.

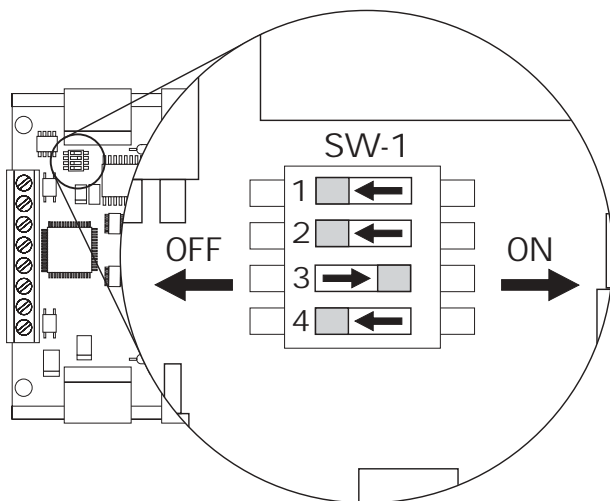


Figure 7.4: MSEL Switch Showing 50 Microsteps/Step Selected



NOTE! The table and example settings are for a stepper motor with 1.8° step angle. If using a motor with a different step angle the steps/rev resolution will vary with the step angle.

Resolution		Microstep Select DIP Switch Settings			
Microsteps/Step	Steps/Rev	SW 1:1 (MSEL0)	SW 1:2 (MSEL1)	SW 1:3 (MSEL2)	SW 1:4 (MSEL3)
Binary Microstep Resolution Settings (1.8° Motor)					
2	400	ON	ON	ON	ON
4	800	OFF	ON	ON	ON
8	1,600	ON	OFF	ON	ON
16	3,200	OFF	OFF	ON	ON
32	6,400	ON	ON	OFF	ON
64	12,800	OFF	ON	OFF	ON
128	25,600	ON	OFF	OFF	ON
256	51,200	OFF	OFF	OFF	ON

Decimal Microstep Resolution Settings (1.8° Motor)					
5	1,000	ON	ON	ON	OFF
10	2,000	OFF	ON	ON	OFF
25	5,000	ON	OFF	ON	OFF
50	10,000	OFF	OFF	ON	OFF
125	25,000	ON	ON	OFF	OFF
250	50,000	OFF	ON	OFF	OFF

Invalid Resolution Settings: May Cause Erratic Operation					
		ON	OFF	OFF	OFF
		OFF	OFF	OFF	OFF

Table 7.2: Microstep Resolution Switch Settings

Interfacing and Using the Isolated Logic Inputs

The IM805 has 4 optically isolated logic inputs which are located on connector P1. These inputs are isolated to minimize or eliminate electrical noise coupled onto the drive control signals. Each input is internally pulled-up to the level of the optocoupler supply and may be connected to sinking outputs on a controller such as the IMS LYNX or a PLC. These inputs are:

- 1] Step Clock (P1:2)
- 2] Direction (P1:3)
- 3] Enable (P1:5)
- 4] Reset (P1:6)

Of these inputs only step clock and direction are required to operate the IM805.

The schematic shown in Figure 7.5 illustrates the inputs.

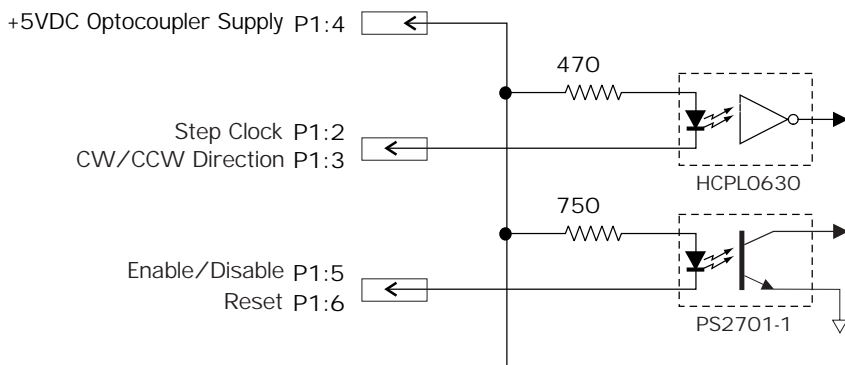


Figure 7.5: Optically Isolated Inputs

Powering the Optocouplers

In order to maintain isolation, the optocouplers must be powered by an external power supply connected to P1:4, with the opto supply ground connected to the ground of the input control circuitry. The logic inputs are internally limited to allow for a +5VDC power supply.

A power supply in excess of +5 volts may be used, however a current limiting resistor **MUST** be placed in series with the input to limit the input forward current to the recommended 7 milliamps. At no time can the input forward current exceed 15 milliamps or damage may occur to the drive.

Isolated Input Current Limiting Resistors		
Opto Supply (+VDC)	Resistor Value (Ohms 5%)	Resistor Value (Ohms 1%)
5	-	-
10	680	681
12	1000	1000
15	1300	1300
24	2700	2670

Table 7.3: Recommended Input Current Limiting Resistor Values



WARNING! The isolated logic inputs on the IM805 are internally limited to allow for an optocoupler supply voltage of +5 VDC. If using a higher voltage supply, a current limiting resistor must be placed in series with the input or damage will occur to the IM805's input circuitry, rendering the drive inoperable.

Isolated Logic Input Characteristics

Step Clock (P1:2)

The step clock input is where the motion clock from your control circuitry will be connected. A positive going edge on this input will increment or decrement the sine/cosine position generator in the IM2000 ASIC. The size of this increment or decrement will depend on the microstep resolution setting. The motor will advance one microstep in the plus or minus direction (based upon the state of the direction input) on the rising edge of each clock pulse.

The positive going edge of this input will also update and latch the states of the direction and microstep select inputs. If no change has occurred to these inputs then the drive will make the next step.

Direction (P1:3)

The direction input controls the CW/CCW direction of the motor. The direction of motion will depend upon the wiring of the motor phases. This input is synchronized to the positive going edge of the step clock input.

Enable (P1:5)

This input can be used to enable or disable the driver output circuitry. When in a logic HIGH (default, unconnected) state the driver outputs will be enabled and step clock pulses will cause the motor to advance. When this input is pulled LOW, by means of a switch or sinking output, the driver output circuitry will be disabled. Please note that the internal sine/cosine position generator will continue to increment or decrement as long as step clock pulses are being received by the IM805.

This input is asynchronous to any other input and may be changed at any time.

Reset (P1:6)

The reset input will disable the outputs and reset the driver to its initial state (Phase A OFF, Phase B full ON) when pulled LOW by a switch or sinking output.

Use of this input may also be used to clear a "Fault" condition, provided the cause of the fault has been eliminated.

The reset input is asynchronous to any other input and may also be changed at any time.

Input Timing

The direction input and the microstep resolution inputs are internally synchronized to the positive going edge of the step clock input. When a step clock pulse goes HIGH, the state of the direction input and microstep resolution settings are latched. Any changes made to the direction and/or microstep resolution will occur on the rising edge of the step clock pulse following this change. Table 7.4 lists the timing specifications.

NOTE: The control providing the Step Clock and Direction Inputs must be stable (to avoid simultaneous changes) before applying power to the driver. This ensures the typical execution setup times are met.

IM805 Logic Input Timing		
Specification	Input	Time
Minimum Pulse Width	Reset	500 nS
Minimum Pulse Width	Step Clock	75 nS
Typical Execution Time	Step Clock	100 nS
Typical Execution Time	Direction (Also Microstep Resolution Select)	100 nS

Table 7.4: Isolated Logic Input Timing

Interface Methods

The isolated logic inputs may be interfaced to the user's control system in a variety of ways. In all cases the inputs are normally in a logic HIGH state when left floating. For purposes of this manual we will show three interface methods:

- 1] Switch Interface.
- 2] Open Collector Interface.
- 3] TTL Interface.

We will also show IM805 inputs connected to the IMS LYNX modular motion controller, which is a powerful machine control solution.

Switch Interface

A switch connected between the input and the opto supply ground will sink the input. If this method is used a SPST (Single-Pole, Single-Throw) switch works well for enable and direction. A normally-open momentary switch works well for reset. Figure 7.6 illustrates a SPST switch connected to the direction input.

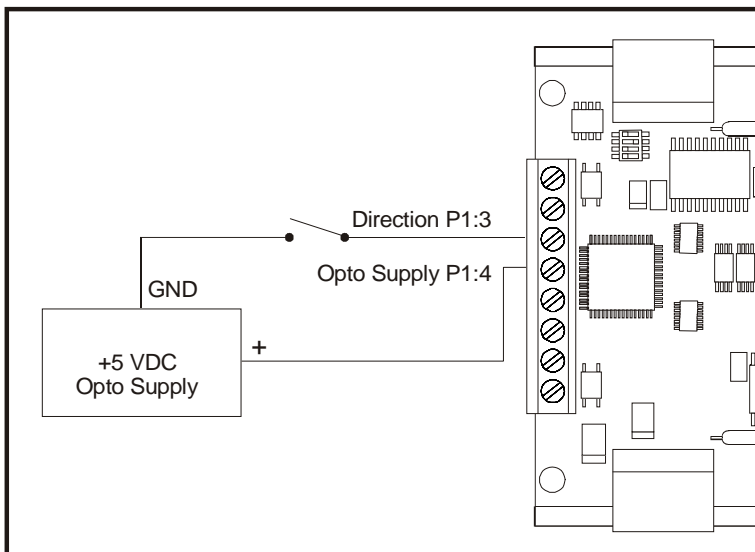


Figure 7.6: Switch Interface

Open Collector Interface

Figure 7.7 shows an open collector interface connected to the reset input. This interface method may be used with any of the logic inputs. Remember that a current limiting resistor is required if an opto supply voltage greater than +5 VDC is used.

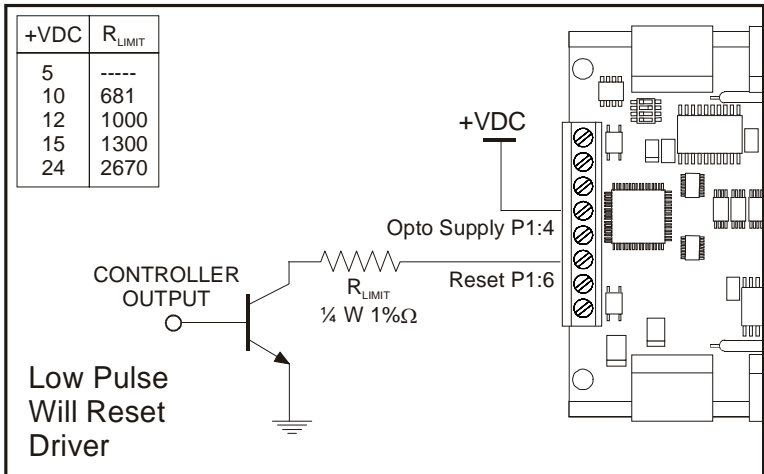


Figure 7.7: Open Collector Interface

TTL Interface

Figure 7.8 shows a TTL device connected to the enable input. This interface method may be used with any of the logic inputs.

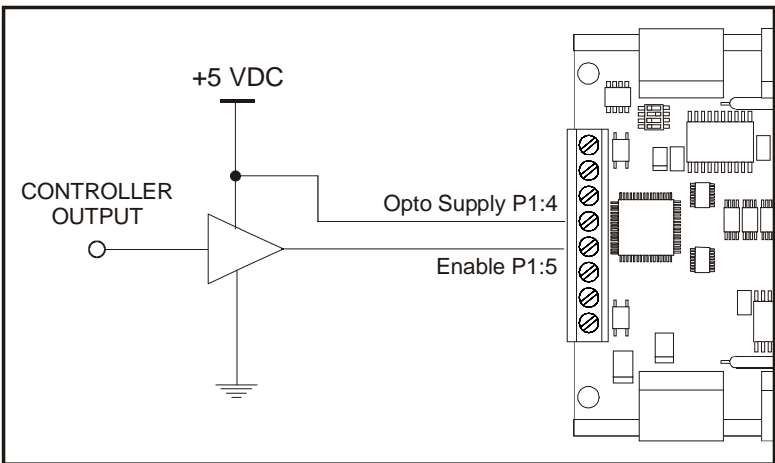


Figure 7.8: TTL Interface

IM805 Interfaced to an IMS LYNX

The LYNX Controller is a powerful, machine control solution which can be used to meet the system design needs of a wide range of applications. It has the capability of controlling up to three axes sequentially when used with the optional high speed differential I/O module. For more information on the LYNX, browse the IMS web site at www.imshome.com.

Figure 7.9 shows a LYNX Control Module and Differential I/O Module providing step clock, direction and optocoupler supply voltage to two IM805 drivers. The LYNX isolated I/O may also be used to control the enable and reset inputs, the MSEL inputs (IM805-34P1) and receive feedback from the fault and fullstep outputs.

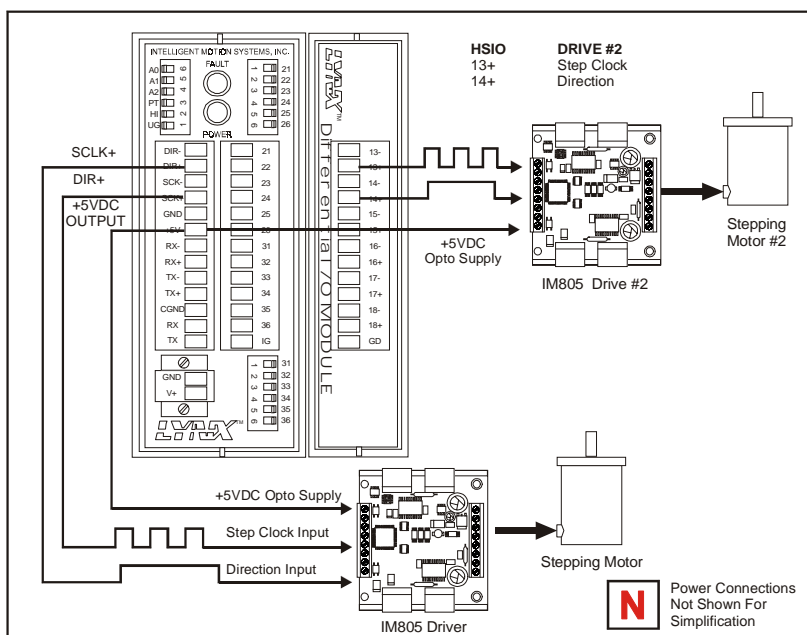


Figure 7.9: LYNX Interface

Connecting and Using the Fault Output

The IM805 has an open collector fault output located on P1:7. This output is non-isolated and has the ability of sustaining maximum driver voltage. It can sink a maximum of 25mA, which is sufficient to drive an LED or a small relay.

This output is active when in a LOW state. The following conditions will cause this output to become active:

- 1] Phase-to-phase short circuit.
- 2] Phase-to-ground short circuit.
- 3] Phase over-current condition.

When the fault output becomes active, it disables the driver outputs and latches in this condition. It can only be cleared by toggling the reset input LOW, or by powering OFF then powering ON the drive.

Figure 7:10 illustrates the fault output connected to an LED.

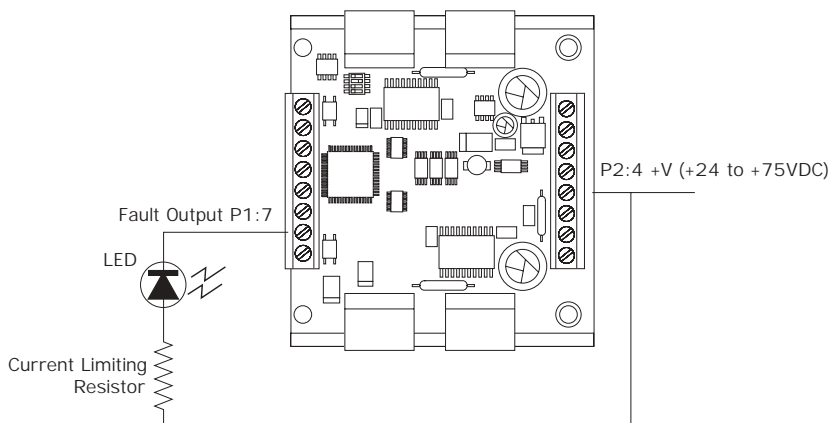


Figure 7.10: The Fault Output Connected to an LED



NOTE! Once the fault output is active, it can only be cleared by toggling the reset input LOW, or by powering off the driver.



NOTE! The IM805 driver outputs will disable in the event of an over-temperature condition, however, in this case the fault output **WILL NOT** latch. The driver will begin operating again when the temperature drops below the shut-off threshold.

Full Step Output

The full step output is a high speed MOSFET (open drain) output located at P1:8. This output will toggle LOW each time the driver makes a full step, and remain so for the duration of the full step. A full step occurs each time the Phase A or Phase B sine wave crosses through zero. At zero crossing there will be full current in one motor winding, zero current in the other. This full step position is a common position regardless of the microstep resolution selected.

This high speed output is non-isolated and can sustain maximum driver voltage. It is capable of sinking up to 25mA.

This output can be used to count the number of full steps directed by the driver. By so utilizing this output, the user can both measure the repeatability of the stepper system and track motor position. Please note that using this output is not closed-loop control, merely a method of monitoring position and repeatability. It represents full steps commanded by the driver, not actual full steps moved by the motor.

The application example shown in figure 7.11 illustrates a method where an up/down counter may be connected to the full step output. The counter will count the number of full steps up or down based upon the state of the direction input. The count input of the counter will increment or decrement with each full step taken.

As noted in the drawing, this is only a representation of a possible application of the full step output. Additional interface circuitry may be required between the IM805 and the counter. Check the documentation provided by the manufacturer of your counter for interface requirements.

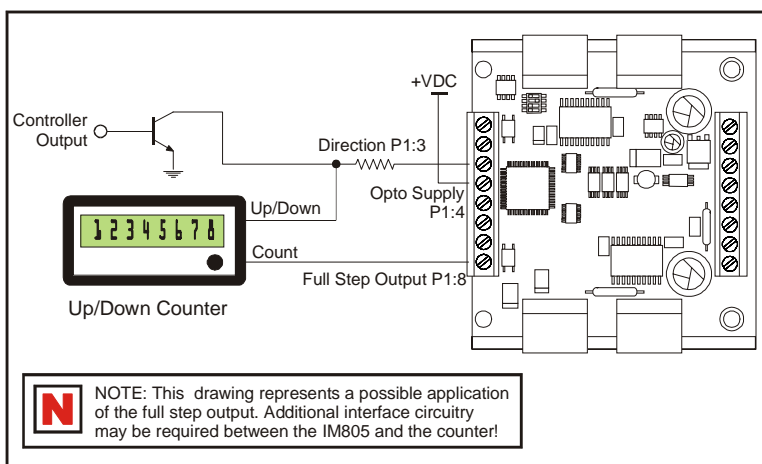


Figure 7.11: The Full Step Output Connected to an Up/Down Counter

Minimum Connections

The following figure illustrates the minimum connection requirements for the IM805.

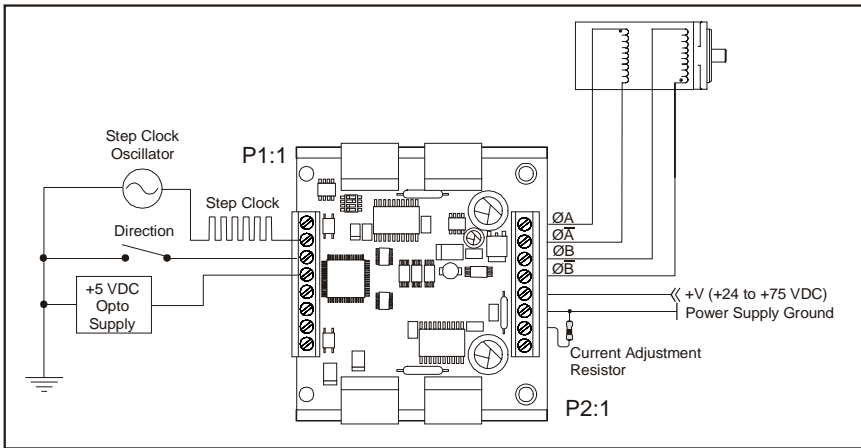


Figure 7.12: IM805 Minimum Required Connections

Section 8

Troubleshooting

Section Overview

This section will cover the following:

- Basic Troubleshooting.
- Common Problems/Solutions.
- Contacting Technical Support.
- Product Return Procedure.
- 24-Month Limited Warranty.

Basic Troubleshooting

In the event that your IM805 doesn't operate properly, the first step is to identify whether the problem is electrical or mechanical in nature. The next step is to isolate the system component that is causing the problem. As part of this process you may have to disconnect the individual components that make up your system and verify that they operate independently. It is important to document each step in the troubleshooting process. You may need this documentation to refer back to at a later date, and these details will greatly assist our Technical Support staff in determining the problem should you need assistance.

Many of the problems that affect motion control systems can be traced to electrical noise, controller software errors, or mistakes in wiring.

Problem Symptoms and Possible Causes

Symptom

Motor does not move.

Possible Problem

No power.

Unit is in a reset condition.

Invalid microstep resolution select setting.

Current adjust resistor is wrong value or not in place.

Fault condition exists.

Unit is disabled.

Symptom

Motor moves in the wrong direction.

Possible Problem

Motor phases may be connected in reverse.

Symptom

Unit in fault.

Possible Problem

Current adjust resistor is incorrect value or not in place.

Motor phase winding shorted.

Power input or output driver electrically overstressed.

Symptom

Erratic motor motion.

Possible Problem

Motor or power wiring unshielded or not twisted pair.

Logic wiring next to motor/power wiring.

Ground loop in system.

Open winding of motor.

Phase bad on drive.

Invalid microstep resolution select setting.

Symptom

Motor stalls during acceleration.

Possible Problem

Incorrect current adjust setting or resistor value.

Motor is undersized for application.

Acceleration on controller is set too high.

Power supply voltage too low.

Symptom

Excessive motor and driver heating.

Possible Problem

Inadequate heat sinking / cooling.

Current reduction not being utilized.

Current set too high.

Symptom

Inadequate holding torque.

Possible Problem

Incorrect current adjust setting or resistor value.

Increase holding current with the current reduction adjust resistor.

Contacting Technical Support

In the event that you are unable to isolate the problem with your IM805, the first action you should take is to contact the distributor from whom you originally purchased your product or IMS Technical Support at 860-295-6102 or by fax at 860-295-6107. Be prepared to answer the following questions:

- What is the application?
- In detail, how is the system configured?
- What is the system environment? (Temperature, Humidity, Exposure to chemical vapors, etc.)
- What external equipment is the system interfaced to?

The IMS Web Site

Another product support resource is the IMS web site located at <http://www.imshome.com>. This site is updated monthly with tech tips, applications and new product updates.

Returning Your Product to IMS

If Technical Support determines that your IM805 needs to be returned to the factory for repair or replacement, you will need to take the following steps:

- Obtain an RMA (Returned Material Authorization) number and shipping instructions from Customer Service.
- Fill out the "Reported Problem" field in detail on the RMA form that Customer Service will fax you.
- Enclose the product being returned, and the RMA form in the box. Package product in its original container if possible. If original packaging is unavailable ensure that the product is enclosed in approved antistatic packing material. Write the RMA number on the box.

The normal repair lead time is 10 business days. Should you need your product returned in a shorter time period, you may request that a "HOT" status be placed upon it while obtaining an RMA number. Should the factory determine that the product repair is not covered under warranty, you will be notified of any charges.

Appendix A

Standard Connection Options

Appendix Overview

The IM805 has multiple connection options available to the user. In general, these options will not change the operational characteristics of the driver. These connector options give the user multiple choices in how to interface and mount the driver into a system. Listed below are the connector options and how they may be used.

IM805-34P1

The IM805-34P1 features the standard 8 pin terminal block at the connector P2 location. P1 has been replaced by a 34 pin header.

The typical use for this connector style is remote control of the microstep resolution select inputs. The advantages of this control method are discussed later in this appendix.

IM805-8P2

This connector option uses 8 - 0.045 square pins at the P2 connector location. The P1 connector location uses 8 -0.025 square pins.

This connector style would be advantageous in a scenario where the user desiresto plug the IM805 directly into a system PCB.

NOTE: When mounting the IM805 directly to a PCB by wire wrap or receptacles, the Heat Sink temperature must still be kept at or below +70° C.

IM805-34P1-8P2

This option combines the features and potential uses of the IM805-34P1 and the IM805-8P2.

IM805-PLG

The IM805-PLG replaces both connectors P1 and P2 with an Altech 8 position pluggable interface. The removeable, plug-in screw terminal set is available as an option (PLG-R).

This connector option is useful in system designs where ease of removal is desired. For example, the IM805-PLG is pin compatible with the IM804/5-PLG. If more power is needed the drives are easily swapped.

IM805-34P1

The IM805-34P1 connector configuration replaces the 8 position screw terminal at connector location P1 with a 34 pin header. Connector P2 is still an 8 position screw terminal.

There are 2 key features that are added with this connector option:

- 1] Microstep resolution select inputs (MSEL) on P1 allow for remote control of the output resolution.
- 2] Step/Direction outputs follow the step/direction inputs, allowing for multiple drives to be cascaded.

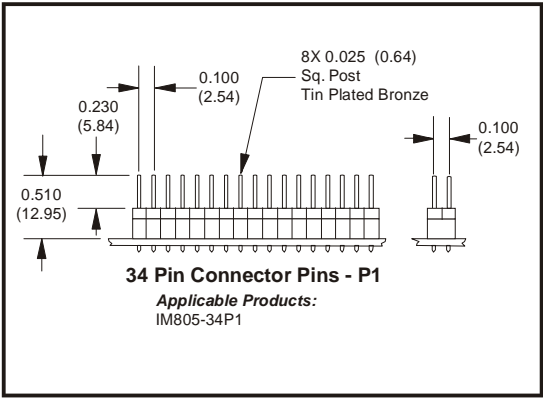


Figure A.1: IM805-34P1 Connector P1 Mechanical Drawing

Pin Configuration / Description

Figure A.2 and Table A.1 show the pin location and description of the 34 pin header.

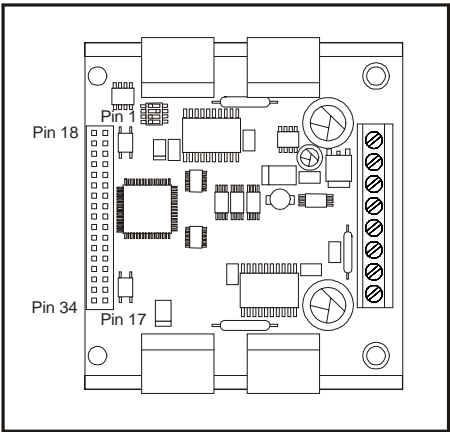


Figure A.2: IM805-34P1 Connector P1 Pin Locations

IM805-34P1 Connector P1 Configuration		
PIN #	FUNCTION	DETAILS
3	Resolution Select 3	Microstep Resolution Select 3 Input.
4	Step Clock Input	A positive going edge on this input advances the motor one increment. The size of the increment is dependent upon the settings of the resolution select switch SW1.
6	Direction Input	This input is used to change the direction of the motor. Physical direction also depends upon the connection of the motor windings.
8	Opto Supply	This +5VDC input is used to supply power to the isolated logic inputs. A higher voltage may be used, but care must be taken to limit the current through the opto-coupler.
10	Enable/Disable Input	This input is used to enable/disable the output section of the driver. When in a Logic HIGH state (open), the outputs are enabled. However, this input does not inhibit the step clock, therefore, the outputs will update by the number of clock pulses (if any) applied to the driver while it was disabled.
12	Reset Input	When LOW, this input will reset the driver (phase outputs will disable). When released, the driver will be at its initial state (Phase A OFF, Phase B ON).
14	Fault Output	This output indicates that a short circuit condition has occurred. This output is active LOW.
16, 26	On-Full-Step Output	This open collector output indicates when the driver is positioned at full step. This output can be used to count the number of full steps the motor has moved, regardless of the number of microsteps in between. This output is active LOW.
21	Step Clock Output	Non-isolated step clock output follows step input.
22	Direction Output	Non-isolated direction output follows direction input.
23	Resolution Select 0	Microstep Resolution Select 0 Input.
24	Resolution Select 2	Microstep Resolution Select 2 Input.
25	Resolution Select 1	Microstep Resolution Select 1 Input.
27	Ground	Non-isolated ground. Common with power ground.
NOTE: Pin numbers 1, 2, 5, 7, 9, 11, 13, 15, 17, 18, 19, 20, and 28 - 34 are no connect pins (N/C) thus have been omitted from this table.		

Table A.1: IM805-34P1 Connector P1 Pin Assignment and Description

The Resolution Select (MSEL) Inputs

One of the key features of the 34 pin header is the availability of the resolution select inputs on P1. This allows the user to take external control of the driver output resolution, enabling the user to switch the output resolution “on-the-fly”.

An example would be to switch to a lower resolution (higher velocity, lower positional accuracy) during a long move. When the move nears completion, switch back to a higher resolution (lower speed, greater positional accuracy) to accurately position the axis. This on-the-fly “gear shifting” facilitates high speed slewing combined with high resolution positioning at either end of the move.

The microstep resolution is synchronized with the step clock input. If the resolution change does not fall on a full step, the IM805 will readjust itself at the next pulse that would overshoot the fullstep position. This feature allows the IM805 to readjust the motor position regardless of the output resolution selected during a resolution change.

These inputs are non-isolated and are active when in a logic LOW state (if left open or floating the input is considered to be OFF). They are pulled-up to +5 VDC via 1.5 k Ω resistors. These inputs may be interfaced via an external switch or sinking output on a control device. Figure A.3 shows the resolution select inputs connected using a TTL interface method. Note that the DIP switch (SW1) is still in place and may be used to control the resolution. If controlling the resolution externally, the four switches need to be in the “OFF” position.


The driver output resolution has two modes of operation: decimal and binary. The modes are switched by changing the logic state of MSEL 3. If MSEL 3 is in a logic HIGH (open/floating) state the output resolution will be in decimal mode. Binary mode is entered by sinking MSEL 3 to a 0 state.

Typically, in cases where resolution is being switched on-the-fly, only one mode will be used. The desired mode may be selected by positioning the DIP switch (SW1:4) for MSEL 3 to the appropriate state for the selected mode, then the resolution may be controlled by changing the states of MSEL 0 - 2 as needed, thus using only 3 outputs on the control device.



NOTE! When controlling the driver output resolution externally, the DIP switches (SW1) should be in the “OFF” position.

MSEL Connection Showing TTL Interface

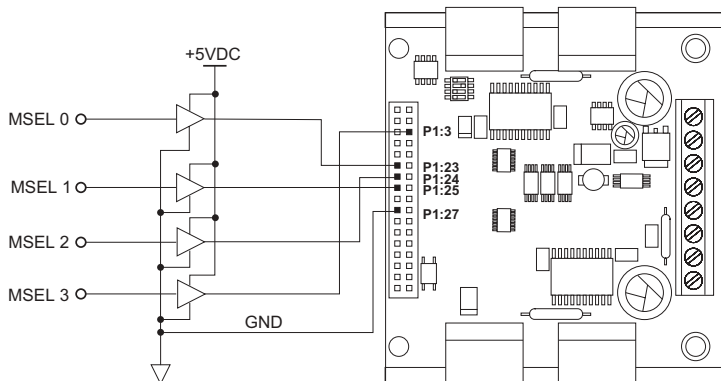

Truth Table: Resolution Select Inputs - Binary Mode

Microsteps per Full Step	MSEL 0	MSEL 1	MSEL 2	MSEL 3
2	0	0	0	0
4	1	0	0	0
8	0	1	0	0
16	1	1	0	0
32	0	0	1	0
64	1	0	1	0
128	0	1	1	0
256	1	1	1	0

Truth Table: Resolution Select Inputs - Decimal Mode

Microsteps per Full Step	MSEL 0	MSEL 1	MSEL 2	MSEL 3
5	0	0	0	1
10	1	0	0	1
25	0	1	0	1
50	1	1	0	1
125	0	0	1	1
250	1	0	1	1

Invalid Microstep Resolution Settings

Microsteps per Full Step	MSEL 0	MSEL 1	MSEL 2	MSEL 3
xxxxxxx	0	1	1	1
xxxxxxx	1	1	1	1

Figure A.3: MSEL Connection Using TTL Interface

Step Clock and Direction Outputs

Another key feature offered by the IM805-34P1 is the non-isolated step clock and direction outputs. These outputs will follow the step and direction inputs. This allows for multiple drives to be cascaded, with the primary drive receiving the step/direction signals from the control device, and the drives connected to the step/direction outputs to follow the primary. Figure A.4 illustrates a possible connection/application of these outputs.

These outputs used in this configuration would allow the user to electronically gear or ratio the drives using the MSEL inputs. For instance, if the resolution of the primary drive was set to 128 and the secondary drive set to 256, when a move is commanded, the secondary drive will move 1/2 the distance and velocity of the primary drive.

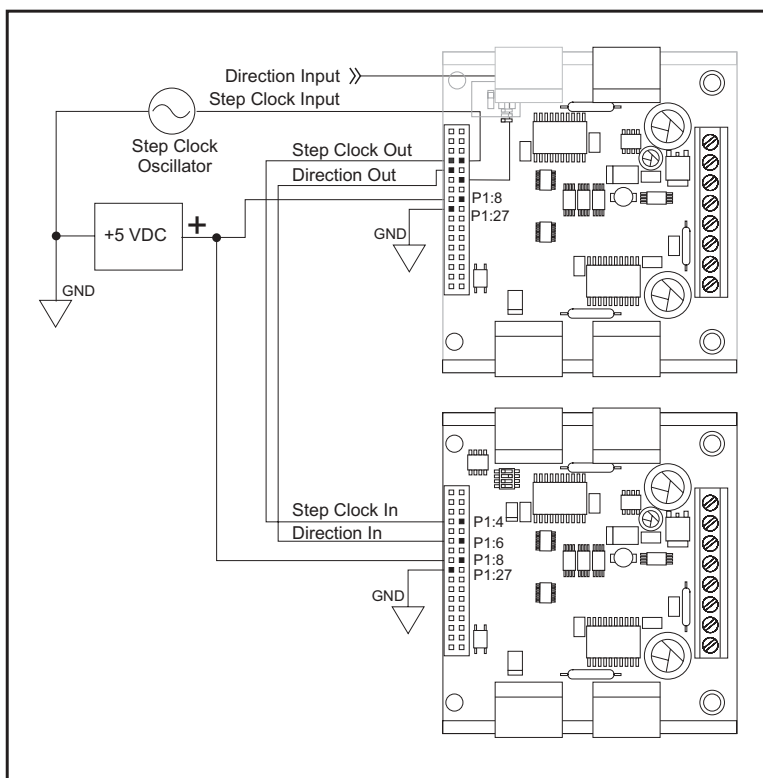


Figure A.4: Cascading IM805-34P1 Drives Using the Step/Direction Outputs

Optional Screw Terminal Interface for P1

The BB-34-4P is an optional breakout board that plugs directly into the pin receptacle for P1. This gives the user a screw terminal interface to P1. For drawings and details please see [Appendix D: Accessories, BB-34-4P](#).

IM805-8P2

This connector option uses 8 - 0.045 square pins at the P2 connector location. The P1 connector location uses 8 - 0.025 square pins.

This connector style is advantageous in a scenario where the user desires to wire wrap the IM805 directly into a system interface or use a receptacle to make the connections. Figures A.5 and A.6 show the pin dimensions.

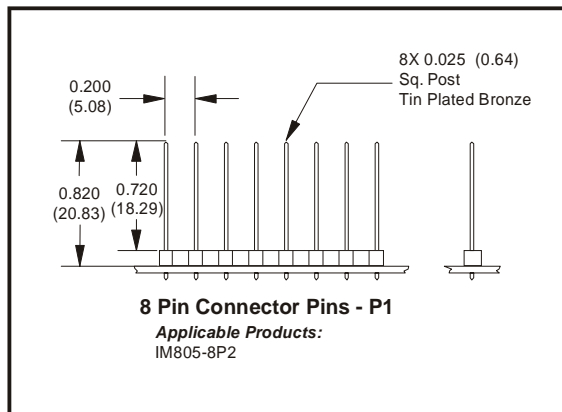


Figure A.5: IM805-8P2 - Connector P1

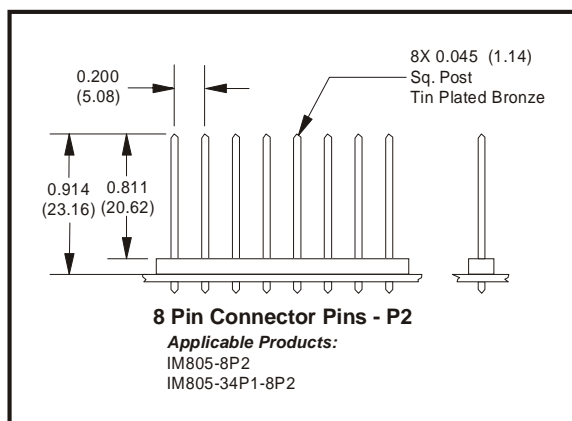


Figure A.6: IM805-8P2 - Connector P2

IM805-34P1-8P2

This option combines the features and potential uses of the IM805-34P1 and the IM805-8P2. The connector pins used for connector P2 are identical to those used on the IM805-8P2.

This option may be wire-wrapped or plugged for interfacing.

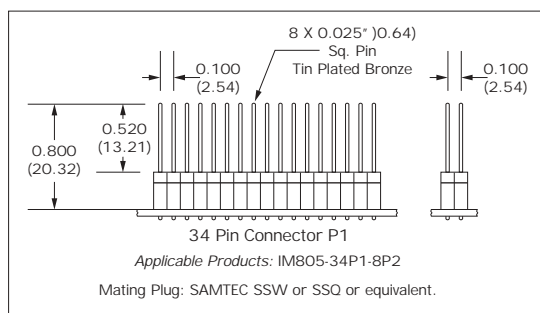


Figure A.7: IM805-34P1-8P2 - Connector P1

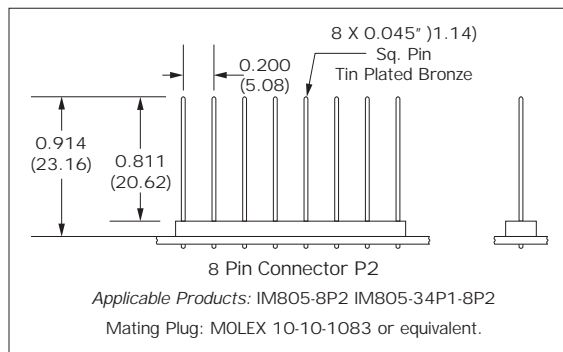


Figure A.8: IM805-34P1-8P2 - Connector P2

Interfacing the Additional I/O on Connector P1

The MSEL inputs and Step/Direction outputs on the IM805-34P1-8P2 are interfaced in the same way as those on the IM805-34P1. See the part of this appendix pertaining to that model of the IM805 for interface and connection details.

Optional Screw Terminal Interface for P1

The BB-34-4P is an optional breakout board that plugs directly into the pin receptacle for P1. This gives the user a screw terminal interface to P1. For drawings and details please see [Appendix D: Accessories, BB-34-4P](#).

IM805-PLG

The IM805-PLG replaces both connectors P1 and P2 with an Altech 8 position pluggable interface. The removeable, plug-in screw terminal set is available as an option (PLG-R).

This connector option is useful in system designs where ease of removal is desired. For example, the IM805-PLG is pin compatible with the IM804/5-PLG. If more power is needed the drives are easily swapped.

These connectors are oriented to prevent plugging the driver in backwards. When the mating connectors are plugged in, they will lock in place.

See Figure A.12 for pin locations and orientation.

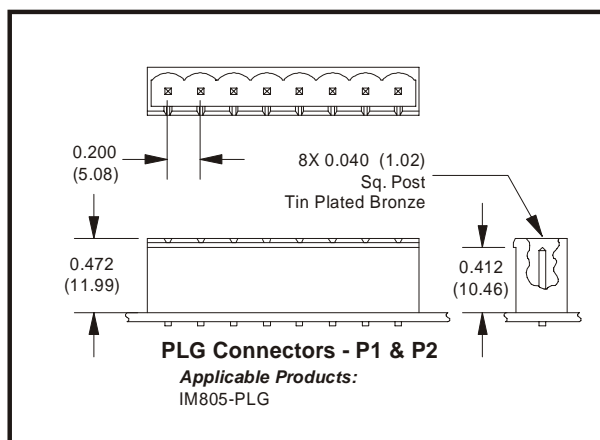


Figure A.9: IM805-PLG Connectors

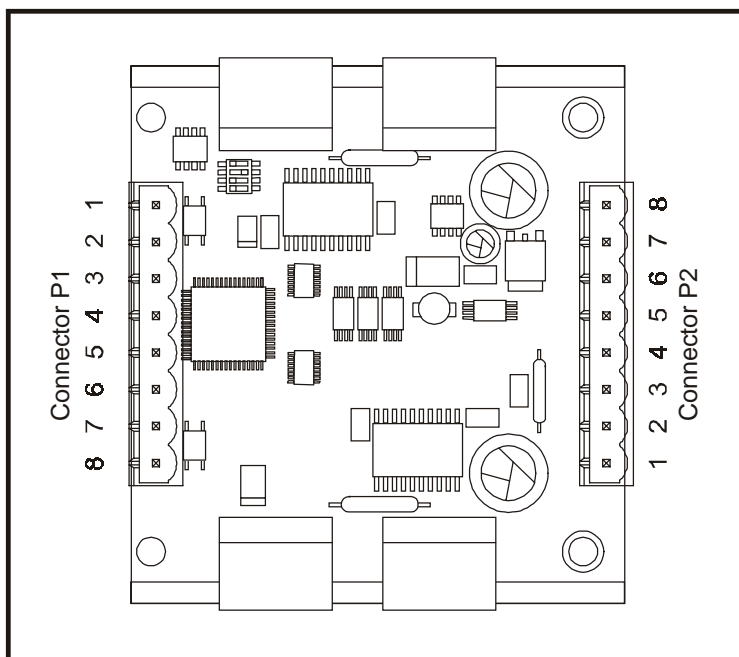


Figure A.10: IM805-PLG Pin Location and Orientation

Appendix B

Cooling Solutions

H-4X Heat Sink Kit



The H-4X heat sink is designed for use with the IM805. When ordering, please specify which drive is being used as this heat sink is also used with the IB46X drivers. The H-4X comes with the following items:

- (1) H-4X heat sink.
- (4) 6 X 32 mounting screws/washers.
- (1) TN-48 non-isolating thermal pad.

Mechanical Specifications

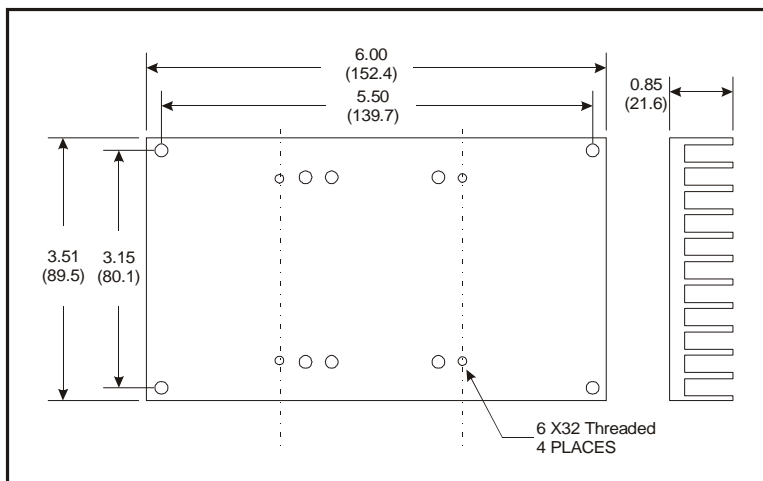


Figure B.1: H-4X Heat Sink, Dimensions in Inches (mm)

Thermal Non-Isolating Pad (TN-48)

The TN-48 thermal non-isolating pad is a composite of .0015" (.038 mm) aluminum foil coated on both sides with a .0025" (.063 mm) thick thermally and electrically conductive rubber. These pads have a thermal conductivity of 0.65 W/m-K and a maximum temperature rating of 180°C.

One side of the TN-48 pad is adhesive and may be applied directly to the IM805 driver. The TN-48 pad eliminates the problems associated with using thermal grease.

This pad are also included in the heat sink kit.

Appendix Overview

This appendix discusses in detail the optional accessories available for use with the IM805. These accessories are:

- U3-CLP - Side-mounting clip set for all versions of the IM805.
- BB-34-4P - Breakout board for the -34P1 connection option.
- PLG-R - Pluggable screw terminal set for use with the -PLG connection option.

U3-CLP: Side-Mounting Clip

The U3-CLP mounting clips were specially designed for the IM805, IM483 series of Microstepping drivers and driver indexers and the ISP200 and ISP300 series power supplies to decrease overall panel space and allow for more flexible mounting patterns.

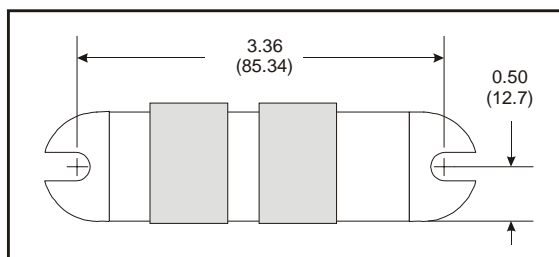


Figure C.1: U3-CLP Mounting Hole Locations

The 2 clips attach easily to the unit for optional side mounting and reduce the amount of panel space required to mount the drive by 42%. The low-profile clips attach to the side of the unit and do not interfere with various connection configurations.

Included in the Kit

- (1) IMS0063 Top Clip
- (1) IMS0064 Bottom Clip

Recommended Hardware (Not Included)

- 2 - 10 X 32 Pan Head Machine Screw (Length determined by mounting plate thickness)
- 2 - # 10 Lock Washers



Figure C.2-A: Clips being installed on an IM483I



Figure C.2-B: Clip being inserted onto a case



Figure C.2-C: Back view showing clips installed on an IM483I

Figure C.2: Attaching the U3-CLP to the IM805

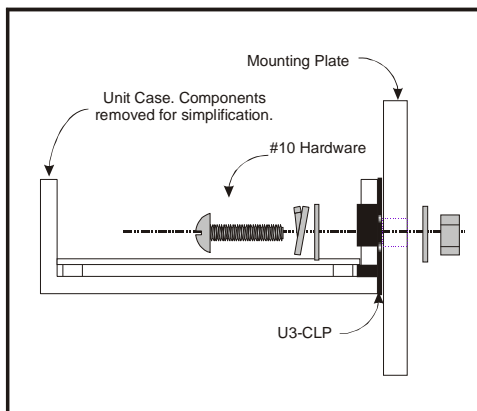


Figure C.3: Mounting to a Panel

4 - # 10 Flat Washers

2 - 10 X 32 Nuts

Installation

Using the photographs in Figure C.2, place the clips on the unit to be mounted as shown. The clips must be oriented in a fashion that places the smaller retaining tab between the bottom of the printed circuit board and the aluminum channel case (Figure C.2-B).



NOTE: The Mounting Clips **MUST** be placed on the side for which they are designed. They are not interchangeable. They can, however, be attached to either vertical plate of the aluminum channel case.

Mounting

The unit should be mounted in accordance with Figure D.3 using the recommended hardware. Ensure that mounting hardware doesn't interfere with any circuitry or wiring.



WARNING! The maximum plate temperature for all the units that may be used with these clips is 70°C. It may be necessary to install a fan in your enclosure or provide additional heat sinking to remain below this temperature!

BB-34-4P Breakout Board

The BB-34-4P breakout board is designed to provide a screw terminal interface for the IM805-34P1 microstepping driver.

This interface is easily inserted into the P1 pin receptacle.



Mechanical Specifications and Wiring Recommendations

IMS recommends that the following wiring practices be used to interface to the IM805-34P1 using the BB-34-4P:

- Wire Size: 16 - 22 AWG
- Strip Length: 0.200" (5mm)
- Screw Torque: 3.0 lb-in (0.33 N-m)

Mechanical specifications are illustrated in Figure C.4.

Installation

To install the BB-34-4P first remove the 34 pin header from the receptacle by gently rocking it back and forth and lifting the pin header straight upwards. Do not remove at a side-to-side angle.

Insert the breakout board into the P1 pin receptacle as shown in Figure C.6. Mount to drive and heat sink plate using the recommended mounting hardware.


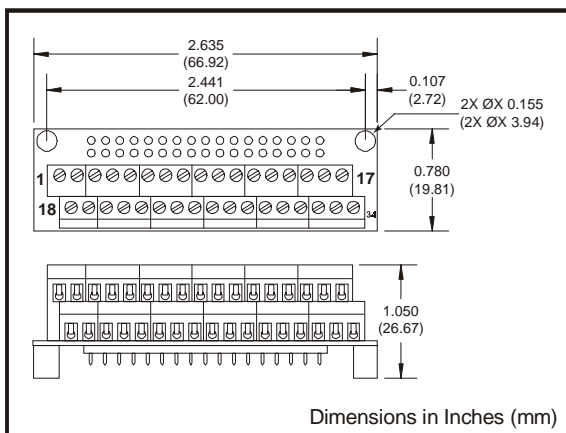


Figure C.4: BB-34-4P Mechanical Specifications

IM805-34P1 CONNECTIONS

See Operating Instructions for Pin Description & Electrical Specifications

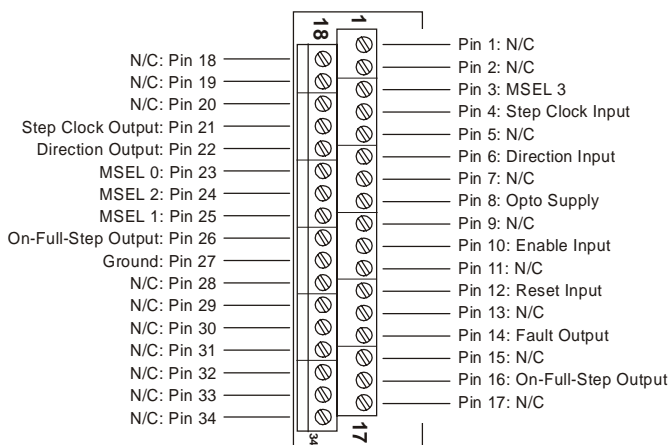

N/C = No Connection

Figure C.5: BB-34-4P Pin Locations

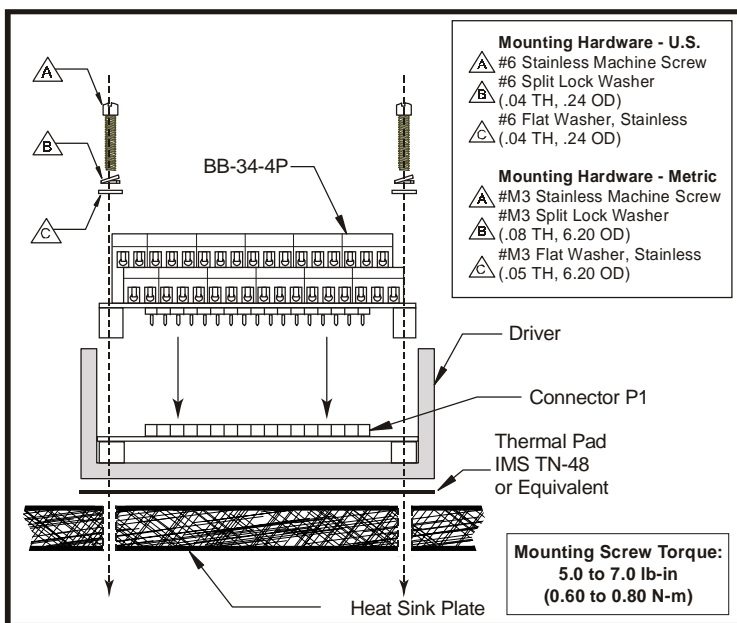


Figure C.6: BB-34-4P Mounting Diagram

PLG-R Removable Screw Terminal Set

The PLG-R removable screw terminal set is the optional terminal set for the IM805-PLG connection configuration. Because the -PLG is configured to eliminate the possibility of plugging the driver in backwards, the kit includes two unique terminal blocks, one each for both P1 and P2.

Replacement terminals may be ordered individually as needed. The order numbers for individual replacements are:



- Connector P1 PLG-R2
- Connector P2 PLG-R1

APPENDIX d

Recommended Cable Configurations: DC Supply to IMS Driver


Cable length, wire gauge and power conditioning devices play a major role in the performance of your IMS Driver and Motor.

NOTE: The length of the DC power supply cable to the IMS Driver should not exceed 50 feet.


Example A demonstrates the recommended cable configuration for DC power supply cabling under 50 feet long. If cabling of 50 feet or longer is required, the additional length may be gained by adding an AC power supply cable (see Examples B & C).

Correct AWG wire size is determined by the current requirement plus cable length. Please see the IMS Driver Supply Cable AWG Table in this Appendix.


Example A – Cabling Under 50 Feet, DC Power

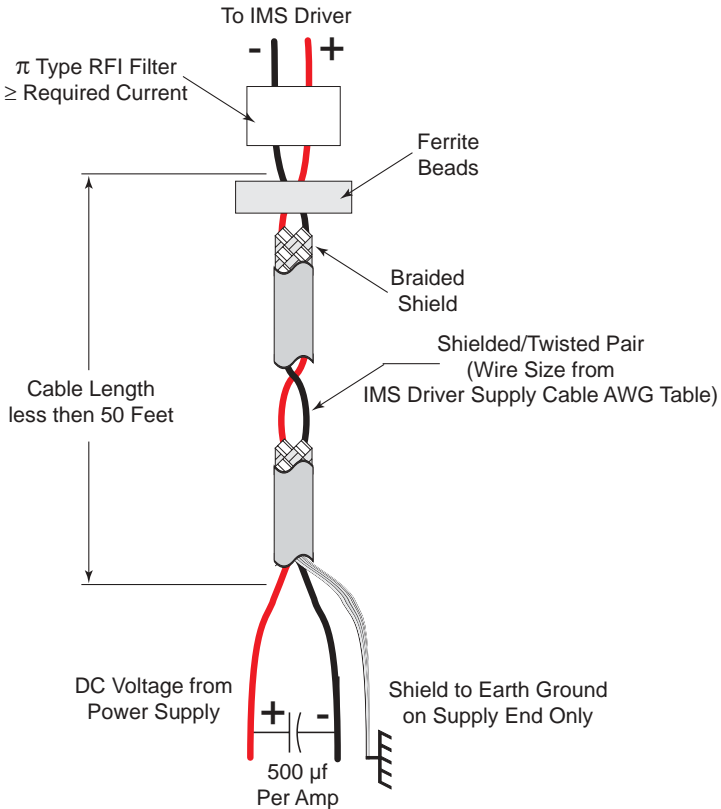

Example B - Cabling 50 Feet or Greater,
AC Power to Full Wave Bridge

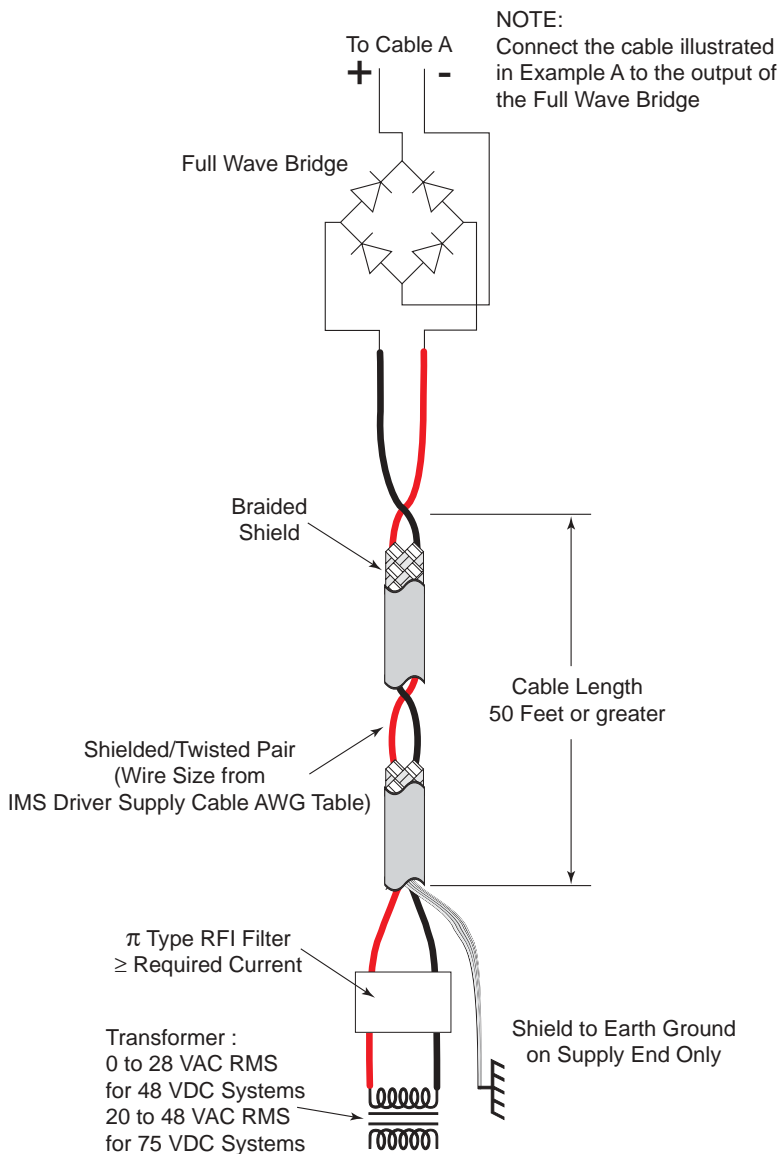

Example C - Cabling 50 Feet or Greater,
AC Power to Power Supply

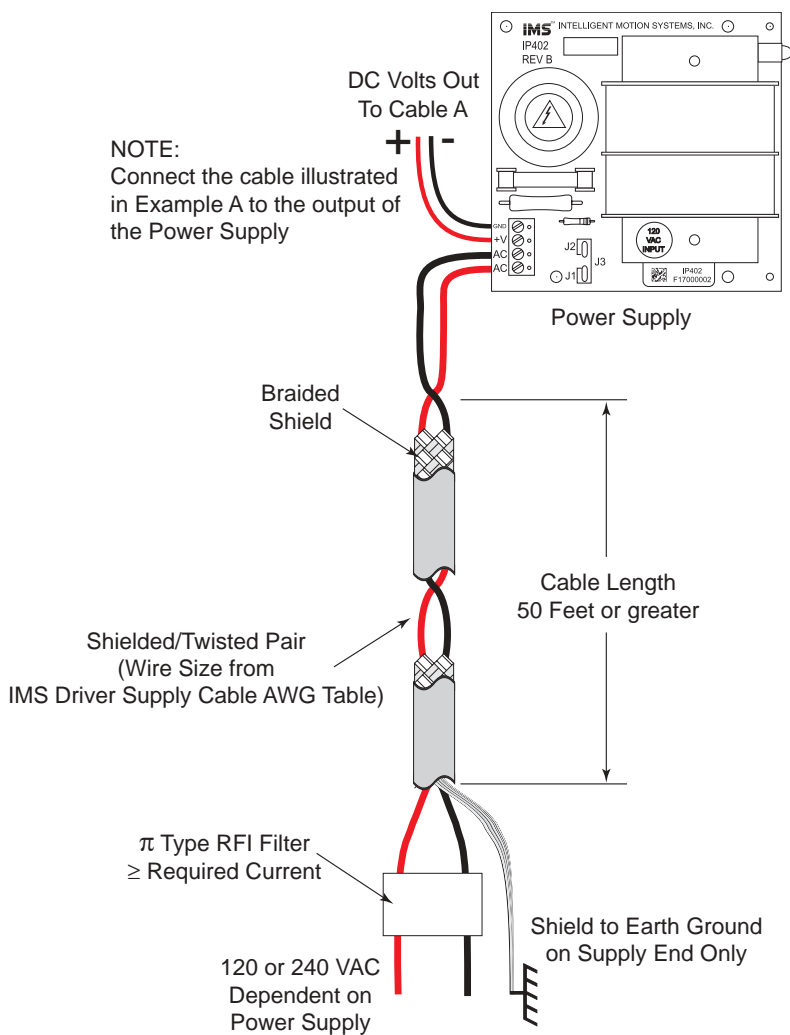



NOTE: These recommendations will provide optimal protection against EMI and RFI. The actual cable type, wire gauge, shield type and filtering devices used are dependent on the customer's application and system.

IMS Driver Supply Cable AWG Table					
1 Ampere (Peak)					
Length (Feet)	10	25	50*	75*	100*
Minimum AWG	20	20	18	18	16
2 Amperes (Peak)					
Length (Feet)	10	25	50*	75*	100*
Minimum AWG	20	18	16	14	14
3 Amperes (Peak)					
Length (Feet)	10	25	50*	75*	100*
Minimum AWG	18	16	14	12	12
4 Amperes (Peak)					
Length (Feet)	10	25	50*	75*	100*
Minimum AWG	18	16	14	12	12
* Use the alternative methods illustrated in Examples A and B when the cable length is ≥ 50 feet. Also, use the same current rating when the alternate AC power is used.					

Driver Supply Cable Wire Size



NOTE: Always use Shielded/Twisted Pairs for the IMS Driver DC Supply Cable, the AC Supply Cable and the IMS Driver to Motor Cable.

Recommended Cable Configurations: IMS Driver to Motor


Cable length, wire gauge and power conditioning devices play a major role in the performance of your IMS Driver and Motor.

NOTE: The length of the DC power supply cable between the IMS Driver and the Motor should not exceed 50 feet.


Example A demonstrates the recommended cable configuration for the IMS Driver to Motor cabling under 50 Feet long. If cabling of 50 feet or longer is required, the additional length can be gained with the cable configuration in Example B.

Correct AWG wire size is determined by the current requirement plus cable length. Please see the IMS Driver to Motor Cable AWG Table in this Appendix.

Example A - Cabling Under 50 Feet,
IMS Driver to Motor

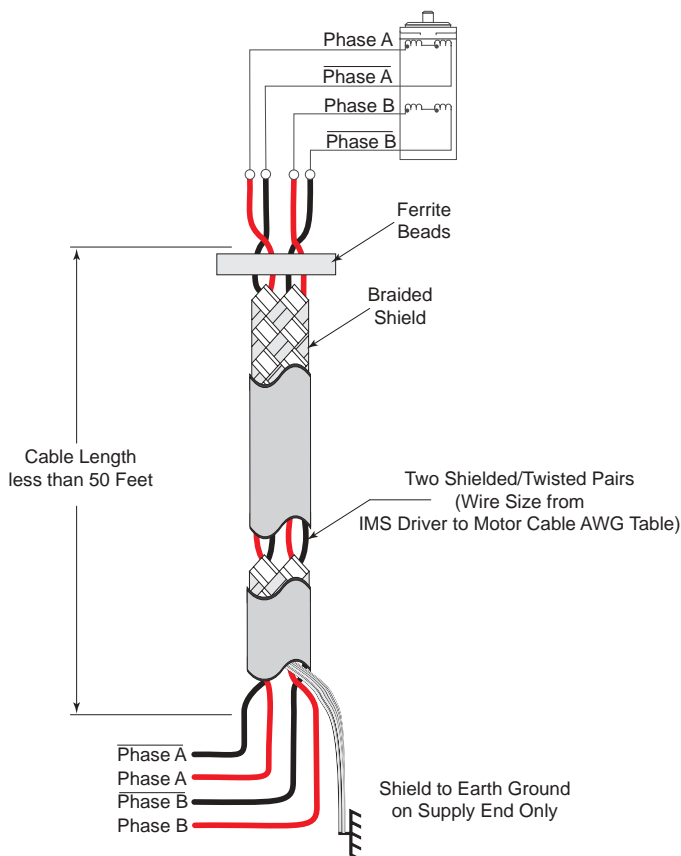

Example B - Cabling 50 Feet or Greater, IMS Driver to Motor

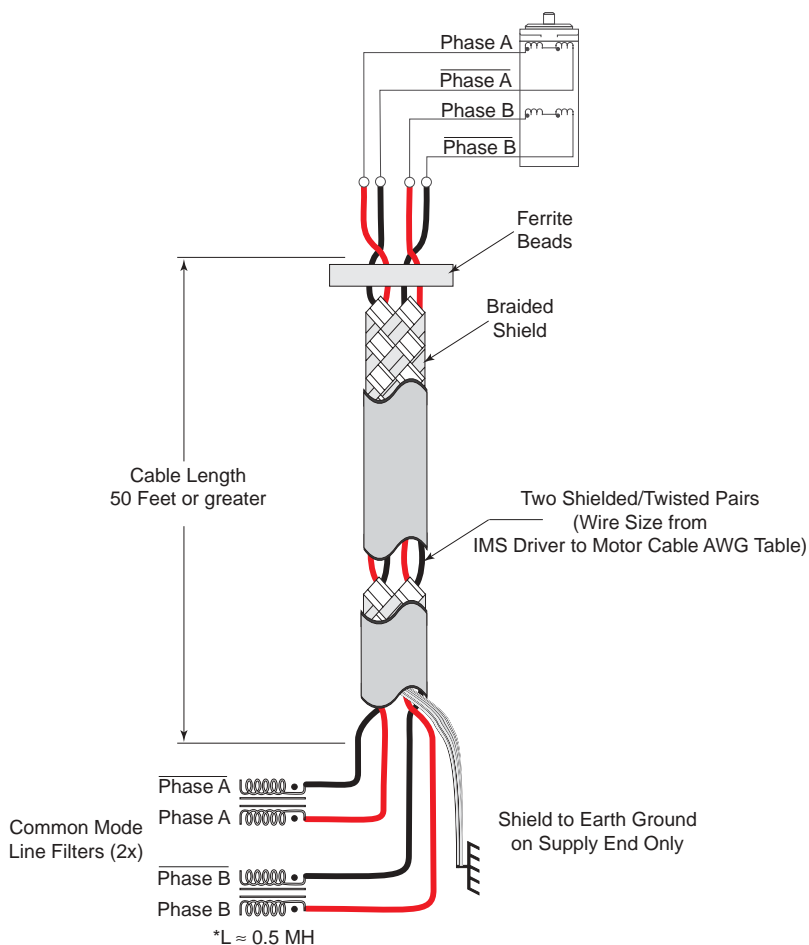

* 0.5 MH is a typical starting point for the Common Mode Line Filters. By increasing or decreasing the value of L you can set the drain current to a minimum to meet your requirements.

IMS Driver to Motor Cable AWG Table												
1 Ampere (Peak)							5 Amperes (Peak)					
Length (Feet)	10	25	50*	75*	100*		Length (Feet)	10	25	50*	75*	100*
Minimum AWG	20	20	18	18	16		Minimum AWG	16	16	14	12	12
2 Amperes (Peak)							6 Amperes (Peak)					
Length (Feet)	10	25	50*	75*	100*		Length (Feet)	10	25	50*	75*	100*
Minimum AWG	20	18	16	14	14		Minimum AWG	14	14	14	12	12
3 Amperes (Peak)							7 Amperes (Peak)					
Length (Feet)	10	25	50*	75*	100*		Length (Feet)	10	25	50*	75*	100*
Minimum AWG	18	16	14	12	12		Minimum AWG	12	12	12	12	12
4 Amperes (Peak)							* Use the alternate method illustrated in Example B when cable length is ≥ 50 feet.					
Length (Feet)	10	25	50*	75*	100*							
Minimum AWG	18	16	14	12	12							

Driver to Motor Supply Cable Wire Size



NOTE: These recommendations will provide optimal protection against EMI and RFI. The actual cable type, wire gauge, shield type and filtering devices used are dependent on the customer's application and system.



NOTE: Always use Shielded/Twisted Pairs for the IMS Driver DC Supply Cable, the AC Supply Cable and the IMS Driver to Motor Cable.

WARRANTY

TWENTY-FOUR (24) MONTH LIMITED WARRANTY

Intelligent Motion Systems, Inc. ("IMS"), warrants only to the purchaser of the Product from IMS (the "Customer") that the product purchased from IMS (the "Product") will be free from defects in materials and workmanship under the normal use and service for which the Product was designed for a period of 24 months from the date of purchase of the Product by the Customer. Customer's exclusive remedy under this Limited Warranty shall be the repair or replacement, at Company's sole option, of the Product, or any part of the Product, determined by IMS to be defective. In order to exercise its warranty rights, Customer must notify Company in accordance with the instructions described under the heading "Obtaining Warranty Service."

This Limited Warranty does not extend to any Product damaged by reason of alteration, accident, abuse, neglect or misuse or improper or inadequate handling; improper or inadequate wiring utilized or installed in connection with the Product; installation, operation or use of the Product not made in strict accordance with the specifications and written instructions provided by IMS; use of the Product for any purpose other than those for which it was designed; ordinary wear and tear; disasters or Acts of God; unauthorized attachments, alterations or modifications to the Product; the misuse or failure of any item or equipment connected to the Product not supplied by IMS; improper maintenance or repair of the Product; or any other reason or event not caused by IMS.

IMS HEREBY DISCLAIMS ALL OTHER WARRANTIES, WHETHER WRITTEN OR ORAL, EXPRESS OR IMPLIED BY LAW OR OTHERWISE, INCLUDING WITHOUT LIMITATION, **ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.** CUSTOMER'S SOLE REMEDY FOR ANY DEFECTIVE PRODUCT WILL BE AS STATED ABOVE, AND IN NO EVENT WILL THE IMS BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, SPECIAL OR INDIRECT DAMAGES IN CONNECTION WITH THE PRODUCT.

This Limited Warranty shall be void if the Customer fails to comply with all of the terms set forth in this Limited Warranty. This Limited Warranty is the sole warranty offered by IMS with respect to the Product. IMS does not assume any other liability in connection with the sale of the Product. No representative of IMS is authorized to extend this Limited Warranty or to change it in any manner whatsoever. No warranty applies to any party other than the original Customer.

IMS and its directors, officers, employees, subsidiaries and affiliates shall not be liable for any damages arising from any loss of equipment, loss or distortion of data, loss of time, loss or destruction of software or other property, loss of production or profits, overhead costs, claims of third parties, labor or materials, penalties or liquidated damages or punitive damages, whatsoever, whether based upon breach of warranty, breach of contract, negligence, strict liability or any other legal theory, or other losses or expenses incurred by the Customer or any third party.

OBTAINING WARRANTY SERVICE

Warranty service may be obtained by a distributor, if the Product was purchased from IMS by a distributor, or by the Customer directly from IMS, if the Product was purchased directly from IMS. Prior to returning the Product for service, a Returned Material Authorization (RMA) number must be obtained. Complete the form at <http://www.imshome.com/rma.html> after which an RMA Authorization Form with RMA number will then be faxed to you. Any questions, contact IMS Customer Service (860) 295-6102.

Include a copy of the RMA Authorization Form, contact name and address, and any additional notes regarding the Product failure with shipment. Return Product in its original packaging, or packaged so it is protected against electrostatic discharge or physical damage in transit. The RMA number MUST appear on the box or packing slip. Send Product to: Intelligent Motion Systems, Inc., 370 N. Main Street, Marlborough, CT 06447.

Customer shall prepay shipping charges for Products returned to IMS for warranty service and IMS shall pay for return of Products to Customer by ground transportation. However, Customer shall pay all shipping charges, duties and taxes for Products returned to IMS from outside the United States.

**P.O. Box 457, 370 North Main Street
Marlborough, CT 06447 U.S.A.**

Phone: 860/295-6102

Fax: 860/295-6107

Email: info@imshome.com

Home Page: www.imshome.com

TECHNICAL SUPPORT

Eastern U.S.

Phone: 860/295-6102

Fax: 860/295-6107

E-mail: etech@imshome.com

Western U.S.

Phone: 760/966-3162

Fax: 760/966-3165

E-mail: wtech@imshome.com

IMS MOTORS DIVISION

105 Copperwood Way, Suite H
Oceanside, CA 92054

Phone: 760/966-3162

Fax: 760/966-3165

E-mail: motors@imshome.com

IMS GmbH EUROPE

Hahnstrasse 10, VS-Schwenningen
Germany D-78054

Phone: +49/7720/94138-0

Fax: +49/7720/94138-2

European Sales Management

4 Quai Des Etroits

69005 Lyon, France

Phone: +33/4 7256 5113

Fax: +33/4 7838 1537

German Sales/Technical Support

Phone: +49/35205/4587-8

Fax: +49/35205/4587-9

Email: hruland@imshome.com



IM805 Operating Instructions
OM-IM805
V05.18.2004