


# emModbus

CPU independent  
Modbus stack for  
embedded applications

## User & Reference Guide

Document: UM14001  
Software version: 1.02  
Revision: 0  
Date: April 1, 2016

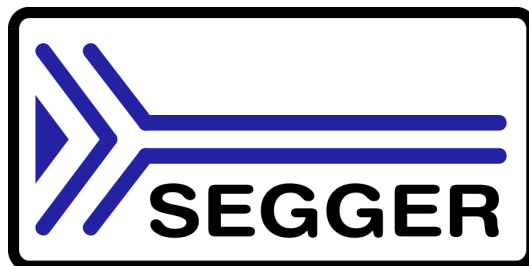

A product of SEGGER Microcontroller GmbH & Co. KG

[www.segger.com](http://www.segger.com)

**Disclaimer**

Specifications written in this document are believed to be accurate, but are not guaranteed to be entirely free of error. The information in this manual is subject to change for functional or performance improvements without notice. Please make sure your manual is the latest edition. While the information herein is assumed to be accurate, SEGGER Microcontroller GmbH & Co. KG (SEGGER) assumes no responsibility for any errors or omissions. SEGGER makes and you receive no warranties or conditions, express, implied, statutory or in any communication with you. SEGGER specifically disclaims any implied warranty of merchantability or fitness for a particular purpose.

**Copyright notice**

You may not extract portions of this manual or modify the PDF file in any way without the prior written permission of SEGGER. The software described in this document is furnished under a license and may only be used or copied in accordance with the terms of such a license.

© 2014 - 2016 SEGGER Microcontroller GmbH & Co. KG, Hilden / Germany

**Trademarks**

Names mentioned in this manual may be trademarks of their respective companies.

Brand and product names are trademarks or registered trademarks of their respective holders.

**Contact address**

SEGGER Microcontroller GmbH & Co. KG

In den Weiden 11

D-40721 Hilden

Germany

Tel. +49 2103-2878-0

Fax. +49 2103-2878-28

E-mail: [support@segger.com](mailto:support@segger.com)

Internet: <http://www.segger.com>

## Manual versions

This manual describes the current software version. If any error occurs, inform us and we will try to assist you as soon as possible.

Contact us for further information on topics or routines not yet specified.

Print date: April 1, 2016

Software	Revision	Date	By	Description
1.02	0	160401	OO	Chapter "emModbus API" updated. * MB_LoadU16BE() added. * MB_StoreU16BE() added. * MB_SLAVE_SetCustomFunctionCodeHandler() added.
1.00b	3	150806	MC /OO	Minor corrections and layout updates. Chapter "Introduction to emModbus" * Added information about emModbus data handling.
1.00	2	140601	MC	Updated file information.
1.00	1	140314	MC	Chapters "Getting Started" and "Tasks and Interrupt usage" updated. Spelling.
1.00	0	140224	MC	Initial version.



# About this document

---

## Assumptions

This document assumes that you already have a solid knowledge of the following:

- The software tools used for building your application (assembler, linker, C compiler)
- The C programming language
- The target processor
- DOS command line

If you feel that your knowledge of C is not sufficient, we recommend *The C Programming Language* by Kernighan and Richie (ISBN 0-13-1103628), which describes the standard in C-programming and, in newer editions, also covers the ANSI C standard.

## How to use this manual

This manual explains all the functions and macros that the product offers. It assumes you have a working knowledge of the C language. Knowledge of assembly programming is not required.

## Typographic conventions for syntax

This manual uses the following typographic conventions:

Style	Used for
Body	Body text.
Keyword	Text that you enter at the command-prompt or that appears on the display (that is system functions, file- or pathnames).
Parameter	Parameters in API functions.
Sample	Sample code in program examples.
Sample comment	Comments in programm examples.
Reference	Reference to chapters, sections, tables and figures or other documents.
GUIElement	Buttons, dialog boxes, menu names, menu commands.
Emphasis	Very important sections.

**Table 1.1: Typographic conventions**



**SEGGER Microcontroller GmbH & Co. KG** develops and distributes software development tools and ANSI C software components (middleware) for embedded systems in several industries such as telecom, medical technology, consumer electronics, automotive industry and industrial automation.

SEGGER's intention is to cut software development time for embedded applications by offering compact flexible and easy to use middleware, allowing developers to concentrate on their application.

Our most popular products are emWin, a universal graphic software package for embedded applications, and embOS, a small yet efficient real-time kernel. emWin, written entirely in ANSI C, can easily be used on any CPU and most any display. It is complemented by the available PC tools: Bitmap Converter, Font Converter, Simulator and Viewer. embOS supports most 8/16/32-bit CPUs. Its small memory footprint makes it suitable for single-chip applications.

Apart from its main focus on software tools, SEGGER develops and produces programming tools for flash micro controllers, as well as J-Link, a JTAG emulator to assist in development, debugging and production, which has rapidly become the industry standard for debug access to ARM cores.

**Corporate Office:**

<http://www.segger.com>

**United States Office:**

<http://www.segger-us.com>

## EMBEDDED SOFTWARE (Middleware)



**emWin**

**Graphics software and GUI**

emWin is designed to provide an efficient, processor- and display controller-independent graphical user interface (GUI) for any application that operates with a graphical display.



**embOS**

**Real Time Operating System**

embOS is an RTOS designed to offer the benefits of a complete multitasking system for hard real time applications with minimal resources.



**embOS/IP**

**TCP/IP stack**

embOS/IP a high-performance TCP/IP stack that has been optimized for speed, versatility and a small memory footprint.



**emFile**

**File system**

emFile is an embedded file system with FAT12, FAT16 and FAT32 support. Various Device drivers, e.g. for NAND and NOR flashes, SD/MMC and Compact-Flash cards, are available.



**USB-Stack**

**USB device/host stack**

A USB stack designed to work on any embedded system with a USB controller. Bulk communication and most standard device classes are supported.

## SEGGER TOOLS

**Flasher**

**Flash programmer**

Flash Programming tool primarily for micro controllers.

**J-Link**

**JTAG emulator for ARM cores**

USB driven JTAG interface for ARM cores.

**J-Trace**

**JTAG emulator with trace**

USB driven JTAG interface for ARM cores with Trace memory. supporting the ARM ETM (Embedded Trace Macrocell).

**J-Link / J-Trace Related Software**

Add-on software to be used with SEGGER's industry standard JTAG emulator, this includes flash programming software and flash breakpoints.



# Table of Contents

1	Introduction to emModbus .....	9
1.1	The Modbus standard .....	10
1.1.1	Modbus message basics.....	10
1.1.2	Modbus data basics.....	13
1.1.3	emModbus data handling .....	14
1.1.4	Further reading .....	14
1.2	emModbus.....	15
1.2.1	Features of emModbus .....	15
1.2.2	emModbus requirements .....	15
1.2.3	Development environment (compiler).....	16
1.3	Tasks and interrupt usage.....	17
1.3.1	ASCII / RTU slave with tasks dedicated to the stack .....	17
1.3.2	ASCII / RTU slave without tasks dedicated to the stack.....	18
1.3.3	TCP / UDP slave with tasks dedicated to the stack.....	19
1.3.4	TCP / UDP slave without tasks dedicated to the stack .....	20
1.3.5	emModbus master .....	21
2	Getting Started.....	23
2.1	Installation .....	24
2.2	Upgrade a trial version .....	25
2.3	Upgrade an embOS start project.....	26
2.3.1	Step 1: Open an embOS start project.....	27
2.3.2	Step 2: Adding embOS/IP to the start project.....	28
2.3.3	Step 3: Adding emModbus to the start project.....	29
2.3.4	Step 4: Build the project.....	30
2.4	Create a project from scratch .....	31
3	Example applications .....	33
3.1	Overview .....	34
3.1.1	OS_IP_MB_MasterTCP.c .....	35
3.1.2	OS_IP_MB_SlaveTCP.c .....	35
3.1.3	OS_MB_MasterASCII.c .....	35
3.1.4	OS_MB_MasterRTU.c.....	35
3.1.5	OS_MB_SlaveASCII.c.....	35
3.1.6	OS_MB_SlaveRTU.c .....	35
4	emModbus API .....	37
4.1	API functions .....	38
4.1.1	Channel specific core functions .....	40
4.1.2	Master specific core functions.....	41
4.1.3	Master instruction set.....	46
4.1.4	Slave specific core functions.....	54
4.1.5	Other core functions .....	64
4.1.6	Helper functions .....	68
4.2	emModbus data structures .....	70
4.2.1	Interface configuration structures .....	70
4.2.2	Interface function structures .....	72
4.2.3	Slave structures .....	74
4.3	Error codes .....	76

5	Configuring emModbus.....	79
5.1	Compile-time configuration.....	80
5.1.1	Compile-time configuration switches .....	80
5.1.2	Debug level .....	81
6	Debugging.....	83
6.1	Message output .....	84
6.1.1	Debug API functions .....	85
6.2	Using a network sniffer to analyse Ethernet communication problems.....	89
6.3	Testing emModbus applications .....	90
7	OS Integration.....	91
7.1	General information.....	92
7.2	OS layer API functions .....	93
7.2.1	General functions .....	94
7.2.2	Synchronization functions.....	101
8	Resource usage.....	105
8.1	Memory footprint .....	106
8.1.1	ARM7 system.....	106
9	Support .....	107
9.1	Contacting support .....	108



# Chapter 1

## Introduction to emModbus

---

This chapter provides an introduction to emModbus. It explains the basic concept behind emModbus and its modules.

## 1.1 The Modbus standard

The Modbus protocol was originally published in 1979 by Modicon (which later became Schneider Electric) and has since evolved into a standard communications protocol for industrial electronic devices. In 2004, Schneider transferred rights to the protocol to the Modbus Organization, who now controls the open standard's further development.

### 1.1.1 Modbus message basics

The Modbus protocol is an application layer messaging protocol used for communications between devices that are connected to different types of buses or networks.

It uses a master-slave-technique in which one device, the master, initiates transactions (called "queries"). Other devices, the slaves, respond by performing the action requested in the query or by supplying the requested data to the master.

The protocol determines how each device will know its address, how it will recognize a message addressed to it, how it will determine the kind of action to be taken and how it will extract data or any other information contained in the message. It also determines how slaves construct and send reply messages.

#### 1.1.1.1 Message frames

Several Modbus messaging formats ("frames") exist and are used for different purposes and environments, though many of them are not compliant to the Modbus standard. The standard-compliant frame variants are listed in the following table:

Protocol	Description
RTU	Original Modbus standard. Binary data is sent via serial connections such as RS-232 or similar.
ASCII	Similar to RTU. Instead of raw binary, data is encoded in ASCII.
Modbus/TCP	Binary data is encapsulated in a TCP frame and sent via network connections such as Ethernet. This variant can also be used with UDP instead of TCP and is then called Modbus/UDP.


**Table 1.1: Standard-compliant variants of Modbus message frames**

When using ASCII frames or RTU frames via serial connection, parameters such as baud rate and parity bits must be set correctly for all connected devices.

When using Modbus/TCP, setting these parameters is not required, but correct IP address and port number are required instead. The standard port number for Modbus/TCP is port 502.

### 1.1.1.2 Message fields

Although the different message frames are each handled differently by the protocol, RTU frames and ASCII frames each include the same four fields. Field 2 and 3 constitute the Protocol Data Unit (PDU), which is part of Modbus/TCP message frames as well, while all 4 fields together constitute the Application Data Unit (ADU):

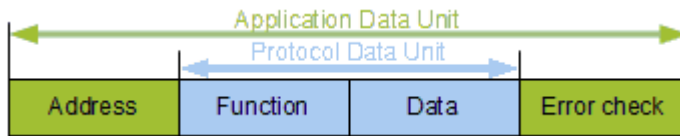

Field 1 includes the address of a slave device, either indicating the slave that is designated to receive the message from its master, or indicating the slave that sent the message towards its master. This address, which is referred to as "unit ID" or "slave address", is a number from 1 to 247 and is uniquely assigned to a single slave device, allowing these devices to listen for messages containing their specific ID. Additionally, ID 0 is used to send broadcasts and ID 255 usually is reserved for communications with a Modbus gateway.

Field 2 includes a function code, which, when sent by a master, indicates the instruction a slave is asked to carry out. When sent by a slave, on the other hand, the function code indicates the instruction the slave is responding to.


Field 3 contains variable amounts of data, e.g. certain data addresses a master wants a slave to read, or the data a slave is reporting towards its master.

In field 4 Modbus messages carry a checksum to allow their respective recipients to determine whether a message has arrived completely.

#### RTU message frames

When using RTU frames, each byte contained in a message is sent as binary data. The main advantage of this mode is its greater density, allowing better data throughput for the same baud rate when compared to ASCII frames. To indicate the start of an RTU frame, the ADU is preceded by a silent interval of at least 3.5 Byte times, hence the length of that interval depends on the configuration of the devices in use. To indicate the end of a frame, another silent interval of 3.5 Byte times succeeds the ADU. Note that one single interval of silence can, at the same time, indicate the end of one frame and the beginning of another frame. RTU frames use Cyclic Redundancy Checks (CRC).


A complete RTU frame can be depicted as shown below:

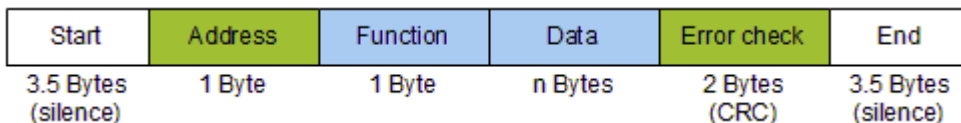

#### ASCII message frames

When using ASCII frames, each byte contained in a message is encoded and sent as two ASCII characters. This allows time intervals of up to one second to occur between characters without causing an error. To indicate the start of a frame, the ADU is preceded by a single character, which always is a colon (0x3A). To indicate the end of a frame, another two trailing characters succeed the ADU, which always are "Carriage Return" and "Line Feed" (0x0D and 0x0A, respectively). ASCII frames use Longitudinal Redundancy Checks (LRC).

A complete ASCII frame can be depicted as shown below:

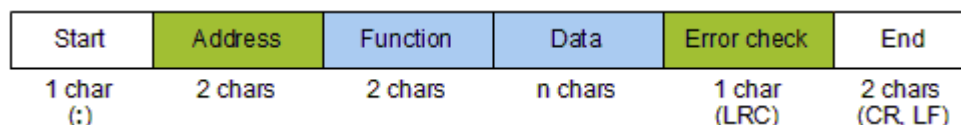

## Modbus/TCP message frames


When using Modbus/TCP frames, an additional header called "Modbus Application Header" precedes the PDU. Its four fields contain the transaction ID, the protocol ID, the length of the following frame and the slave address.

The transaction ID is a number from 0 to 65,535 encoded into two bytes. A master device will increment this number for every request it sends to a slave, while slaves simply echo the number back to their master. By doing so, the master is able to decide whether messages got lost or delayed in transmission.

The protocol ID is a two-byte value, too, but is always 00 00. The length field consists of two more bytes indicating the length of the remaining message.

Finally the address field contains a unit ID, similar to that included in ASCII frames or RTU frames. But with Modbus/TCP, it does not necessarily serve a purpose, as the IP address is used instead to indicate the message's recipient. However, the unit ID is still part of the message and might be used to decide whether a device forwards a message onto a serial connection, thereby allowing devices without networking capabilities to be used in these environments, too.

A complete Modbus/TCP frame can be depicted as shown below:

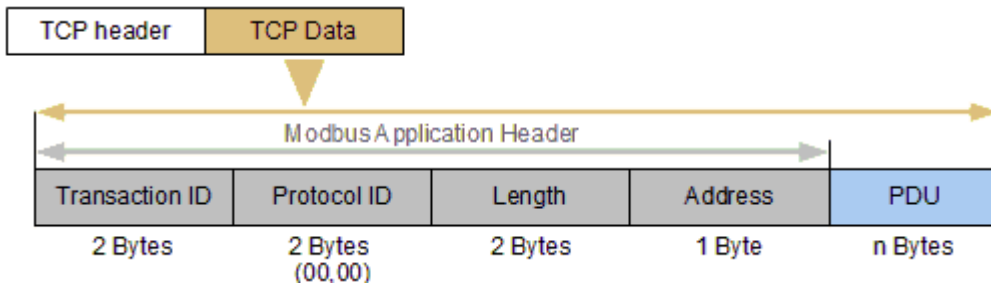

## 1.1.2 Modbus data basics

Modbus was specifically designed for usage in supervisory control and data acquisition systems, connecting a supervisory computer with one or several remote terminal units (RTU). Therefore, data types used in Modbus communications have been named according to that implementation. When the Modbus protocol was extended in 1999 to include TCP frames via Ethernet, the data types' names were left unchanged.

Four primary data types are used by Modbus:

Data type	Description
Coil	single bit, alterable by an application program, read-write
Discrete Input	single bit, provided by an I/O system, read-only
Holding Register	16-bit, alterable by an application program, read-write
Input Register	16-bit, provided by an I/O system, read-only

**Table 1.2: Primary Modbus data types**

For referencing data, Modbus uses a concept of data tables, which are arrays or blocks of memory used to store data. This data can then be referenced by using data table addresses, represented by simple integer values between 0 and 65,535. While it is fully standard-compliant to implement up to 65,536 addresses for each data type, the number of addresses implemented in a particular device usually is much lower. Therefore, Modbus implementations might even assign specific address ranges of a single table to each type of data. While the Modbus standard itself does not specify distinct address ranges, typical Modbus implementations utilize the following assignments:

- 0xxxx-ranged addresses store coils.
- 1xxxx-ranged addresses store discrete inputs.
- 3xxxx-ranged addresses store input registers.
- 4xxxx-ranged addresses store holding registers.

Modbus uses a big-endian representation for data table addresses as well as for the actual data itself. Therefore, the most significant byte is sent first when a numerical quantity larger than a single byte is transmitted. For example

- (16-bits) 0x1234 gets sent as 0x12 0x34, and
- (32-bits) 0x12345678 gets sent as 0x12 0x34 0x56 0x78.

In addition to single bit data types (e.g. representing Boolean values) and 16-bit data types (e.g. representing integers), it is also possible to use large data types such as long integers, floating point numbers and strings by splitting them over several addresses. However, the Modbus standard does not stipulate this, hence it is up to the individual user to split and store data accordingly.

### 1.1.3 emModbus data handling

While Modbus data is always used in big endian emModbus takes addresses and values to set in registers and values read in host endianness to make your life easier. The data will then be converted by emModbus so you do not have to do it on your own.

This is easy for register accesses which are U16 registers. This means that you can simply use an U16 variable with emModbus for reading/writing a register.

For coils emModbus expects and delivers data as stream of bytes with the bits in each byte treated in LSB order. For a register base addr. of 1000 this means:

- Bit 0 of the first byte means value of coil at addr. 1000.
- Bit 1 of the first byte means value of coil at addr. 1001.
- Bit 7 of the first byte means value of coil at addr. 1007.
- Bit 1 of the second byte means value of coil at addr. 1008.
- Bit 7 of the second byte means value of coil at addr. 1015.

The byte order itself is treated in MSB by emModbus.

### 1.1.4 Further reading

This guide explains the usage of the emModbus stack. It describes all functions which are required to build a Modbus application. For a deeper understanding of the official Modbus protocol, please visit:

- Modbus Organization official website: <http://www.modbus.org/>

## 1.2 emModbus

emModbus is written in ANSI C and can be used on virtually any CPU. It combines a maximum of performance with a small memory footprint and comes with all features typically required by embedded systems. RAM usage has been kept to a minimum by smart buffer handling.

### 1.2.1 Features of emModbus

Features of emModbus include:

- Easy to integrate.
- Low memory footprint.
- ANSI-C code is completely portable and runs on any target.
- Follows the SEGGER coding standards: Efficient and compact, yet easy to read, understand & debug.
- Supports ASCII, RTU and Modbus/TCP (and UDP) protocol.
- Sample applications for all protocols included.
- Kernel abstraction layer: can be used with or without any RTOS.
- Works out-of-the-box with embOS.
- Modbus/TCP can be used with standard socket interface and any TCP/IP stack.
- Works out-of-the-box with embOS/IP.
- Project for executable on PC for Microsoft Visual Studio available.

The following table shows the contents of the emModbus root directory:

Directory	Content
Application\*.c	Contains example applications to run emModbus with UART or embOS/IP.
Config\*.*	Contains the emModbus configuration files. Refer to <i>Configuring emModbus</i> on page 79 for further information.
MB\*.*	Contains the emModbus sources such as MB_Core.c, MB_CHANNEL.c, MB_MASTER.c and MB_SLAVE.c
Util\*.c	Contains optimized memcpy routines to speed up the stack.
Windows\*.*	Contains the source(s), project file(s) and a executable(s) to run emModbus on a Microsoft Windows host.

**Table 1.3: Supplied directory structure of emModbus shippings**

### 1.2.2 emModbus requirements

#### TCP/IP stack

For usage of Modbus/TCP, emModbus requires a TCP/IP capable stack. emModbus can be used with any TCP/IP stack that supports BSD Standard Sockets. The shipment includes an implementation which uses the socket API of embOS/IP.

#### Multi tasking

Although emModbus can be used completely without an RTOS, it is recommended to use emModbus in a multi tasking system, at least when implementing a Modbus master.

### 1.2.3 Development environment (compiler)

The CPU used is of no importance; only an ANSI-compliant compiler complying with at least one of the following international standard is required:

- ISO/IEC/ANSI 9899:1990 (C90) with support for C++ style comments (//)
- ISO/IEC 9899:1999 (C99)
- ISO/IEC 14882:1998 (C++)

If your compiler has some limitations, let us know and we will inform you if these will be a problem when compiling the software. Any compiler for 16/32/64-bit CPUs or DSPs that we know of can be used; most 8-bit compilers can be used as well.

A C++ compiler is not required, but can be used. The application program can therefore also be programmed in C++ if desired.



## 1.3 Tasks and interrupt usage


emModbus can be used in an application in two different ways.

- With tasks dedicated to the stack.
- Without tasks dedicated to the stack.

The following chapters provide information on these ways for both ASCII and RTU frames as well as for Modbus/TCP (or UDP) frames.


### 1.3.1 ASCII / RTU slave with tasks dedicated to the stack

To use tasks dedicated to the stack is the simplest way to use emModbus with ASCII and/or RTU frames. The `MB_SLAVE_Task` handles housekeeping operations and evaluation of incoming frames. The "Store byte" operation is called and performed from within the Interrupt Service Routine, hence no additional task is required.

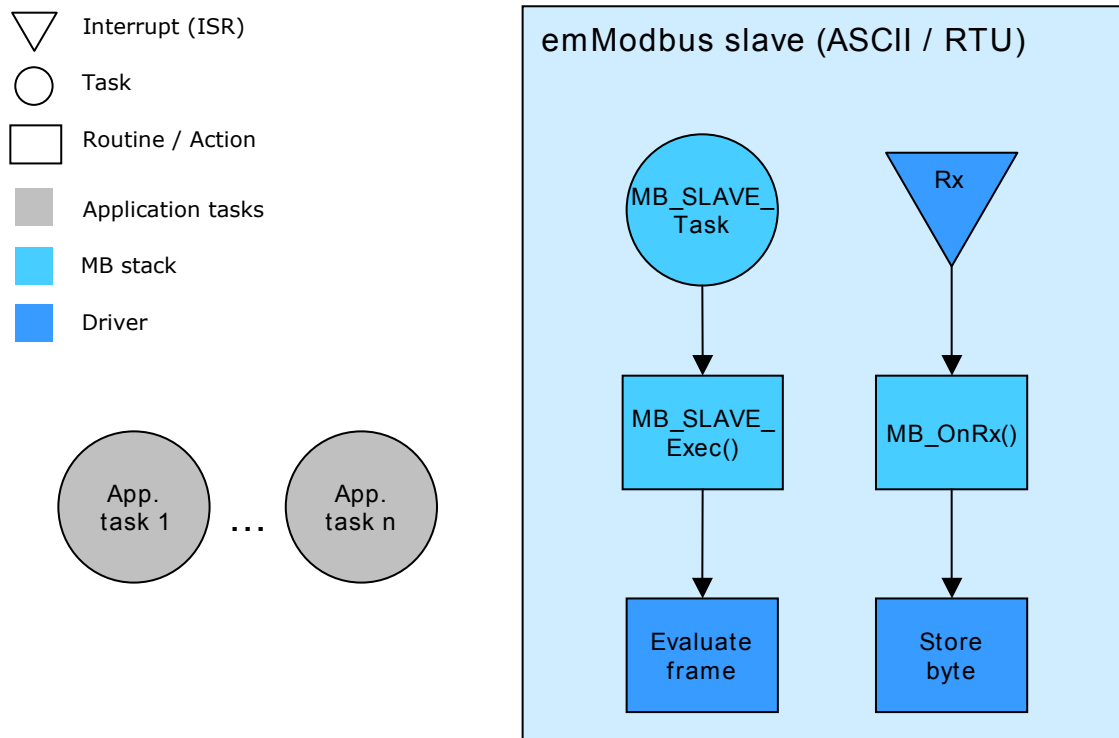


### 1.3.2 ASCII / RTU slave without tasks dedicated to the stack

emModbus ASCII and/or RTU frames can also be used without any task dedicated to the stack, if an application task calls `MB_SLAVE_Exec()` periodically. The "Store byte" operation is called and performed from within the Interrupt Service Routine.

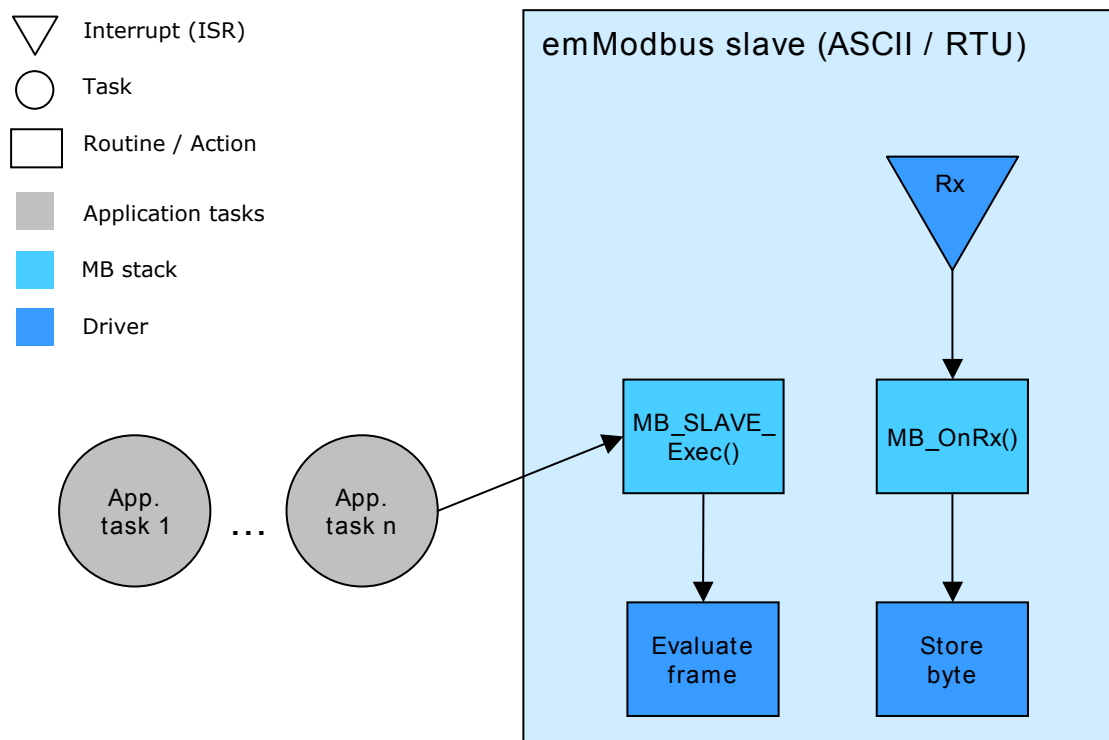


### 1.3.3 TCP / UDP slave with tasks dedicated to the stack

To use tasks dedicated to the stack is the simplest way to use emModbus/TCP. The `MB_SLAVE_Task` handles housekeeping operations and evaluation of incoming frames. The "Read frame" operation is called and performed by another task, `MB_SLAVE_PollChannel`, which periodically polls for incoming frames.

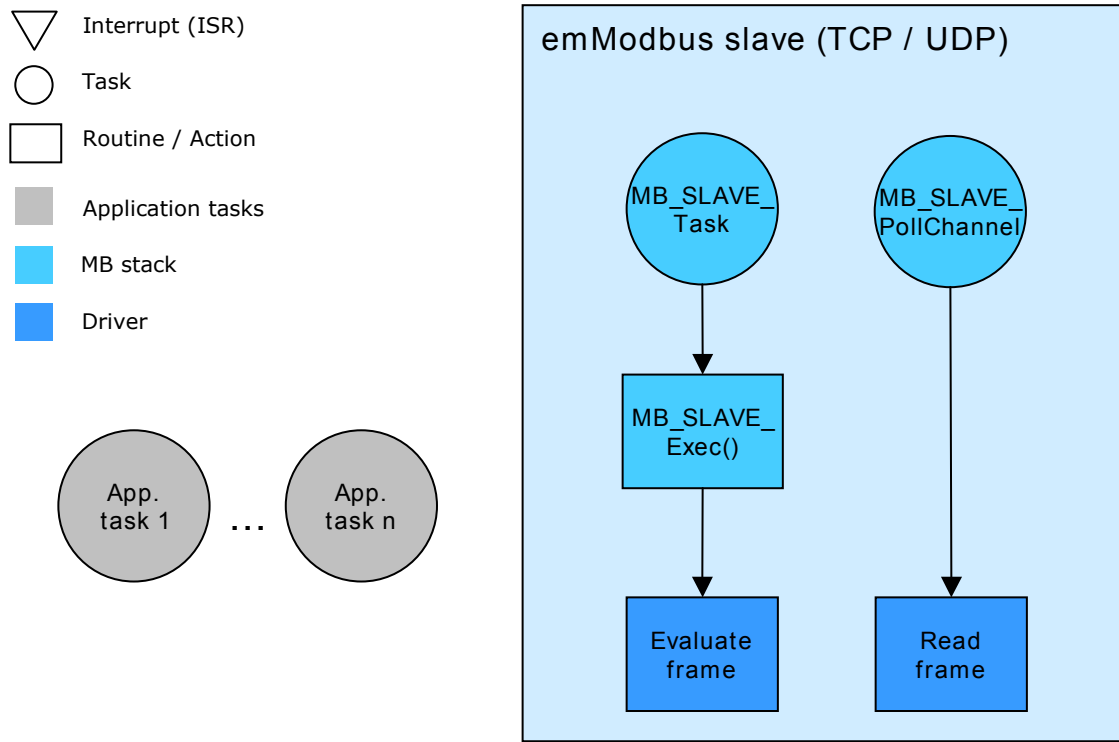

### 1.3.4 TCP / UDP slave without tasks dedicated to the stack

emModbus/TCP can also be used without any task dedicated to the stack, if an application task consecutively calls `MB_SLAVE_PollChannel()` and `MB_SLAVE_Exec()` periodically.

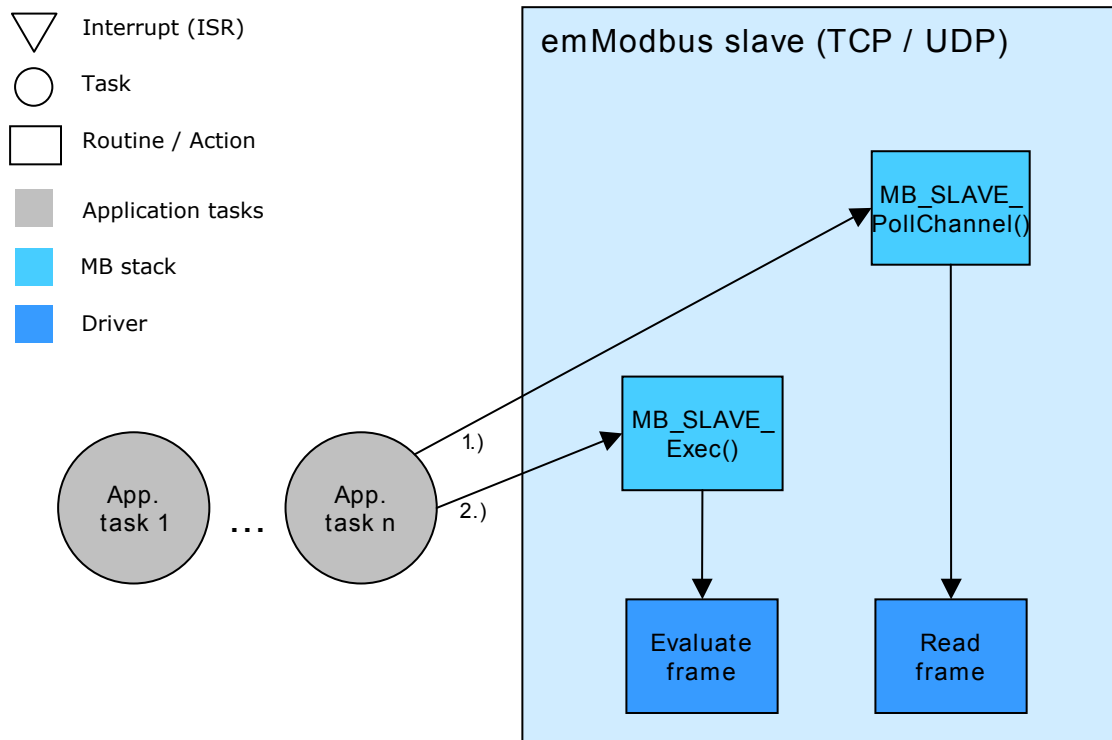

### **1.3.5 emModbus master**

The emModbus master API is independent of the usage of any real-time operating system. However, by utilizing an RTOS the emModbus interface becomes easier to use and more comfortable to integrate into any desired application.



# Chapter 2

## Getting Started

---

The first step in getting started with emModbus is to compile it for and run it on the target system. This chapter explains how to do this.

In this document the IAR Embedded Workbench® IDE is used for all examples and screenshots, but every other ANSI-C toolchain can be used as well. It is also possible to use makefiles; in this case, “add to the project” translates into “add to the make-file”.

## 2.1 Installation

emModbus is typically shipped as a .ZIP file in electronic form. In order to install emModbus, extract it to any folder of your choice, preserving the directory structure of the .ZIP file.

To create a running emModbus project, there are three different routes available:

- Upgrade a trial version by adding source code.
- Upgrade an embOS start project.
- Create a project from scratch.

The following example procedures describe each of these routes. They focus on integrating an emModbus slave device using Modbus/TCP frames, but any other emModbus project can be created as well by following the same steps.

emModbus via TCP is optimized for use with embOS/IP, SEGGER's TCP/IP stack. However, emModbus can be used with any other TCP/IP stack as well. Note that when using ASCII frames or RTU frames, the integration of a TCP/IP stack is not required and should be omitted for smaller code size. Similarly, if no real-time operating system is required, the integration of an RTOS should be omitted as well.




## 2.2 Upgrade a trial version

Various trial packages for different target hardware are available at SEGGER's web-site.

Note that not all trial packages currently available contain a trial of emModbus. If you are interested in a specific package that does not contain emModbus yet, feel free to contact us. Including emModbus in a trial package can be completed quickly by our Expert Team. Additionally, trial packages that do not contain embOS/IP do lack an appropriate TCP/IP stack, which is required for Modbus/TCP frames. However, ASCII frames and RTU frames might be used regardless of a TCP/IP stack.

### Replace libraries with sources

After downloading the trial package, extract the project contained in the .ZIP file to any folder of your choice and open the workspace/project file. Copy the source files from the folder MB of your emModbus shipment into the folder MB of your downloaded package, add the files to the project and exclude the trial libraries from the build.

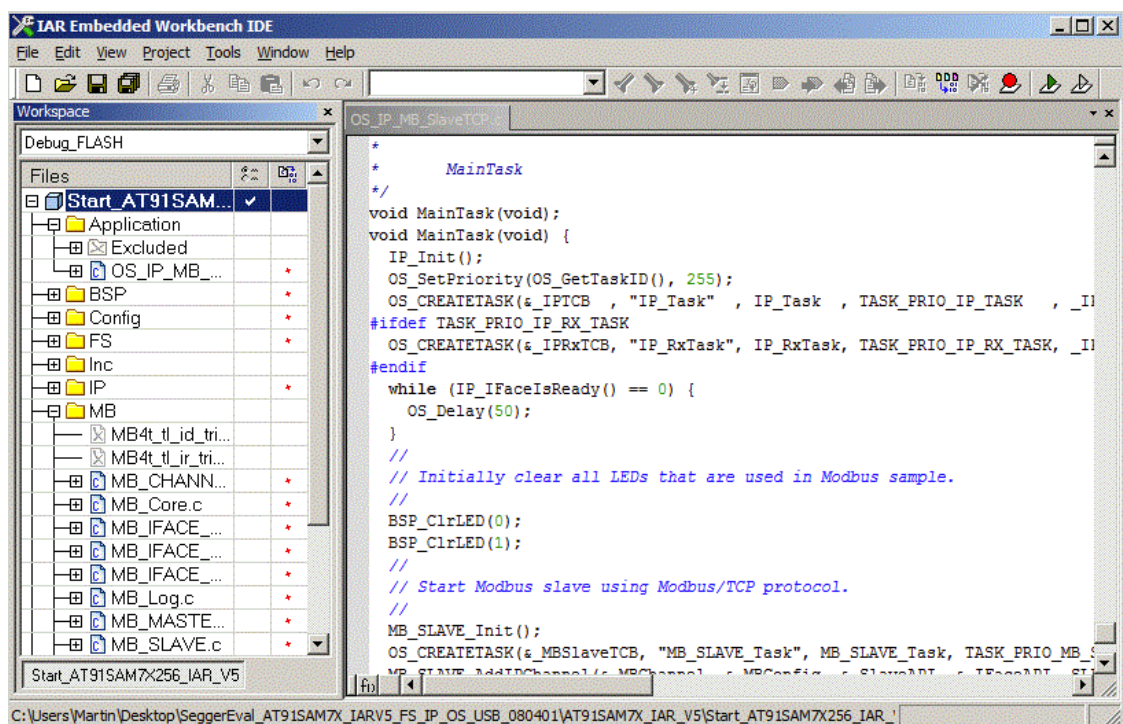

### Build the project

Build the project; it should compile without errors and warnings. If any problem is encountered during the build process, checking the include paths and project configurations is advisable as first step. When building completes, download the output into the designated target and start the application.

### Test the project

We recommend testing emModbus devices by using their respective counterparts, e.g. using a emModbus/TCP master to test an emModbus/TCP slave and vice versa. Alternatively, devices can also be tested with a desktop computer running an appropriate Modbus application.

Refer to *Testing emModbus applications* on page 90 for additional information.

## 2.3 Upgrade an embOS start project

Begin with a sample project for embOS, SEGGER's real-time operating system, then include embOS/IP and emModbus into the project.

The emModbus default configuration is preconfigured with valid values, which match the requirements of most applications.


### Procedure to follow

Integration of emModbus is a relatively simple process, which consists of the following steps:

1. Open an embOS start project.
2. Add embOS/IP to the start project.
3. Add emModbus to the start project.
4. Build the project.

## 2.3.1 Step 1: Open an embOS start project

We recommend that you use one of the supplied embOS start projects for your target system. Compile the project and run it on your target hardware.

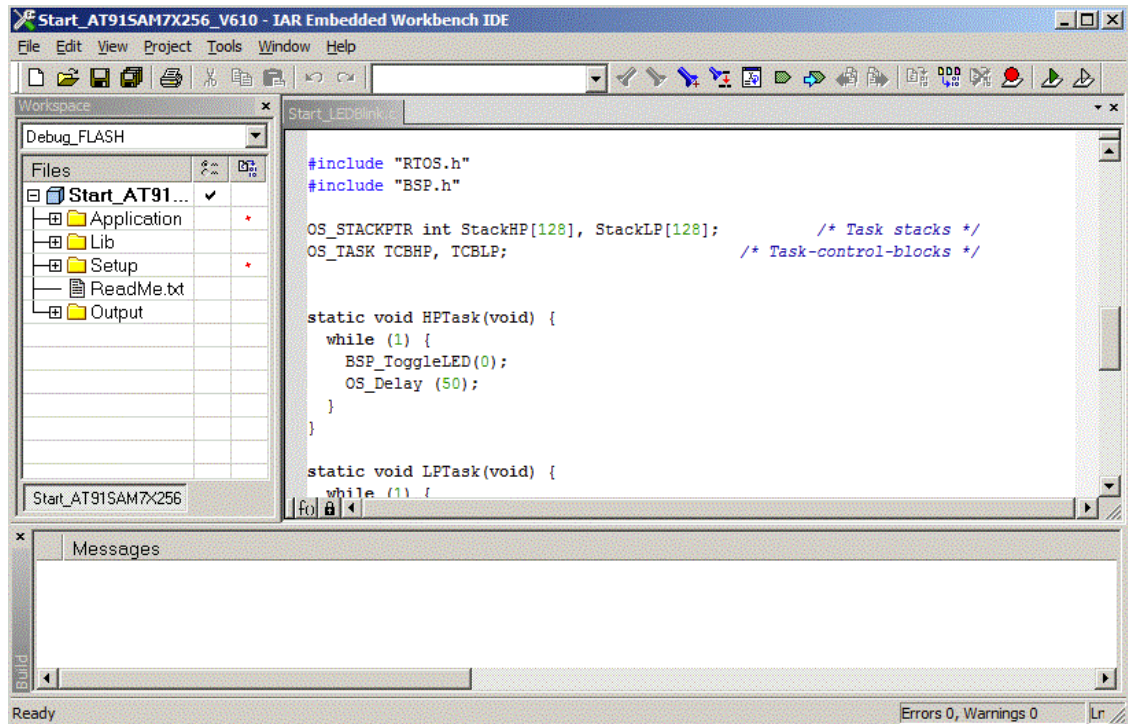

## 2.3.2 Step 2: Adding embOS/IP to the start project

Add all source files in the following directories to your project:

- Config
- IP
- UTIL (optional)

The `Config` folder includes all configuration files of embOS/IP. The configuration files are preconfigured with valid values that match the requirements of most applications. Add the hardware configuration `IP_Config_<TargetName>.c` supplied with the driver shipment.

If your hardware is currently not supported, use the example configuration file and the driver template to write your own driver. The example configuration file and the driver template is located in the `Sample\Driver\Template` folder.

The `util` folder is an optional component of the embOS/IP shipment. It contains optimized MCU and/or compiler specific files, for example an optimized memcpy function.


### Replace BSP.c and BSP.h of your embOS start project

Replace the `BSP.c` source file and the `BSP.h` header file used in your embOS start project with the one which is supplied with the embOS/IP shipment. Some drivers require a special functions which initializes the network interface of the driver. This function is called `BSP_ETH_Init()`. It is used to enable the ports which are connected to the network hardware. All network interface driver packages include the `BSP.c` and `BSP.h` files irrespective if the `BSP_ETH_Init()` function is implemented.

### Configuring the include path

The include path is the path in which the compiler looks for include files. In cases where the included files (typically header files, `.h`) do not reside in the same directory as the C file to compile, an include path needs to be set. In order to build the project with all added files, you will need to add the following directories to your include path:

- Config
- Inc
- IP

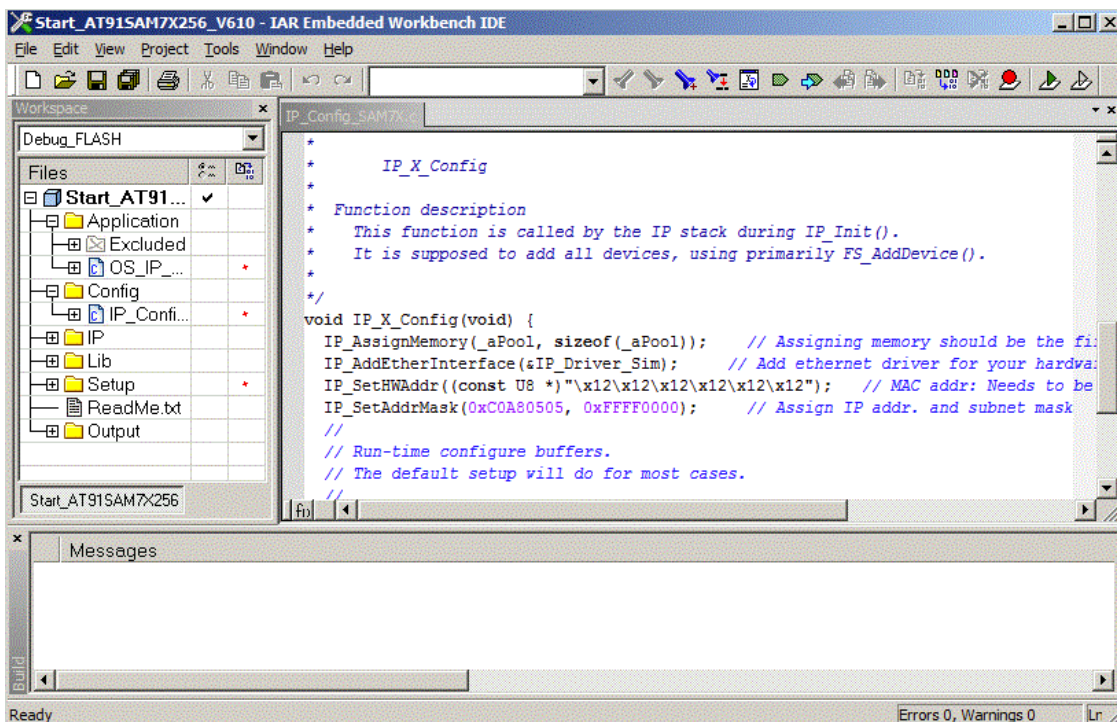

### 2.3.3 Step 3: Adding emModbus to the start project

Add all source files in the following directories to your project:

- Config
- MB
- UTIL (optional)

The Config folder includes all configuration files of emModbus. The configuration files are preconfigured with valid values, which match the requirements of most applications.


#### Configuring the include path

The include path is the path in which the compiler looks for include files. In cases where the included files (typically header files, .h) do not reside in the same directory as the C file to compile, an include path needs to be set. In order to build the project with all added files, you will need to add the following directories to your include path:

- Config
- MB

#### Select the start application

For quick and easy testing of your emModbus integration, start with the code found in the folder Application. Add one of the applications to your project (for example OS\_IP\_MB\_SlaveTCP.c).

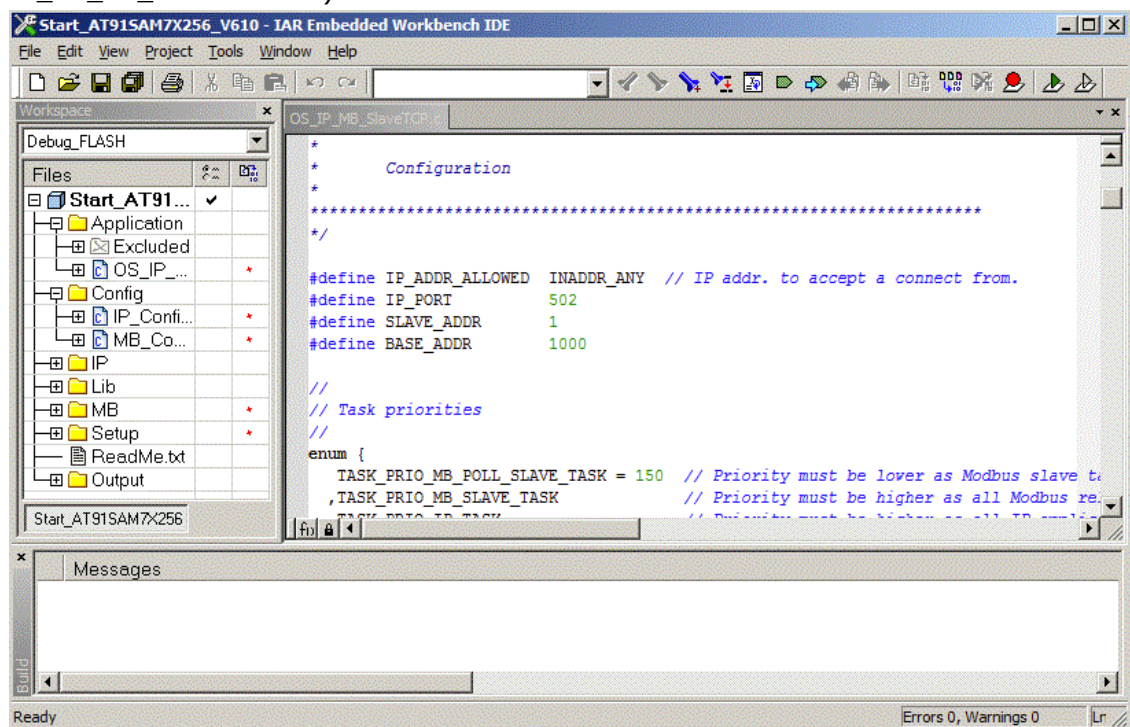

## 2.3.4 Step 4: Build the project

### Build the project

Build the project; it should compile without errors and warnings. If any problem is encountered during the build process, checking the include paths and project configurations is advisable as first step. When done building, download the output into the designated target and start the application.

### Test the project

We recommend testing emModbus devices by using their respective counterparts, e.g. using a emModbus/TCP master to test an emModbus/TCP slave and vice versa. Alternatively, devices can also be tested with a desktop computer running an appropriate Modbus application.

Refer to *Testing emModbus applications* on page 90 for additional information.



## 2.4 Create a project from scratch


To create a project from scratch, some steps have to be taken:

- A project or make file has to be created for the specific toolchain.
- The project configurations may need adjustments.
- The hardware routines have to be implemented.
- The path of any required header files has to be set as include path.

To get the target up and running is a lot easier if target hardware drivers are already available. In that case, these drivers can be used.

### Creating the project or make file

The screenshot below gives an idea about a possible project setup:

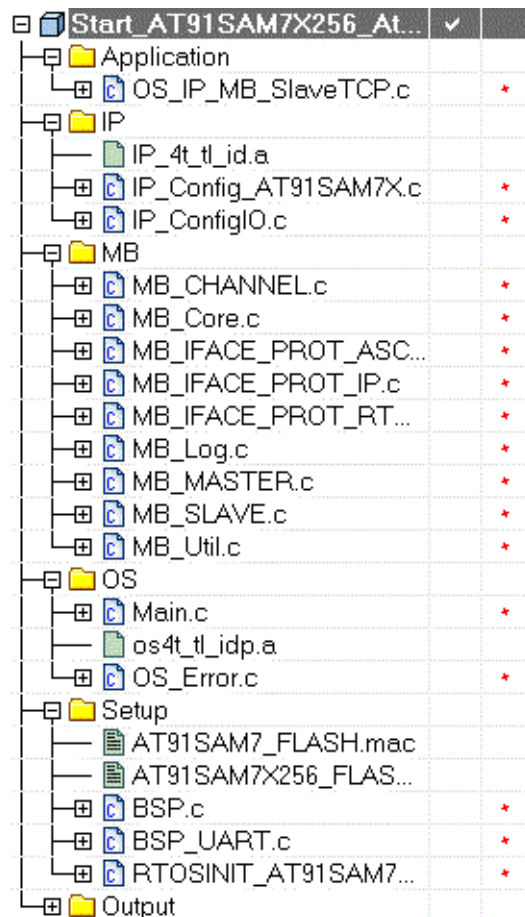

### Build the project

Build the project; it should compile without errors and warnings. If any problem is encountered during the build process, checking the include paths and project configurations is advisable as first step. When done building, download the output into the designated target and start the application.

### Test the project

We recommend testing emModbus devices by using their respective counterparts, e.g. using a emModbus/TCP master to test an emModbus/TCP slave and vice versa. Alternatively, devices can also be tested with a desktop computer running an appropriate Modbus application.

Refer to *Testing emModbus applications* on page 90 for additional information.





# Chapter 3

## Example applications

---

In this chapter, you will find a description of the emModbus example applications that are delivered together with the emModbus shipment.

## 3.1 Overview

Example applications for emModbus are supplied in source code in the `Application` folder. These can be used for testing the correct installation and proper function of the device running emModbus.

The following start application files are provided:

File	Description
<code>OS_IP_MB_MasterTCP.c</code>	Demonstrates the functionality of a Modbus Master device using TCP frames via network.
<code>OS_IP_MB_SlaveTCP.c</code>	Demonstrates the functionality of a Modbus Slave device using TCP frames via network.
<code>OS_MB_MasterASCII.c</code>	Demonstrates the functionality of a Modbus Master device using ASCII frames via serial connection.
<code>OS_MB_MasterRTU.c</code>	Demonstrates the functionality of a Modbus Master device using RTU frames via serial connection.
<code>OS_MB_SlaveASCII.c</code>	Demonstrates the functionality of a Modbus Slave device using ASCII frames via serial connection.
<code>OS_MB_SlaveRTU.c</code>	Demonstrates the functionality of a Modbus Slave device using RTU frames via serial connection.

**Table 3.1: emModbus example applications**

### 3.1.1 OS\_IP\_MB\_MasterTCP.c

This sample demonstrates emModbus master functionalities using the Modbus/TCP protocol. It opens a channel and tries to establish a TCP connection to a Modbus slave device, which is known to the master by the slave's IP address as defined at the beginning of the file. The master also uses a given port for this connection, which is defined at the beginning of the file (e.g. port 502, the standard port for Modbus communications). When a connection is established, the master repeatedly sends queries to the slave, asking it to perform the function "write coil", and waits for appropriate responses.

### 3.1.2 OS\_IP\_MB\_SlaveTCP.c

This sample demonstrates emModbus slave functionalities using the Modbus/TCP protocol. It opens a channel and waits for incoming TCP connections on a given port, which is known to the slave as defined at the beginning of the file. When an incoming connection from a Modbus master device has been established, the slave reacts to queries it receives from the master. When ordered to write a coil (like the associated Modbus master sample does), the slave will toggle LEDs to signal its new status.

### 3.1.3 OS\_MB\_MasterASCII.c

This emModbus sample demonstrates emModbus master functionalities using ASCII frames. It opens a channel and repeatedly sends queries to a Modbus slave device (specified by its slave ID as defined at the beginning of the file), asking it to perform the function "write coil", and waits for appropriate responses.

### 3.1.4 OS\_MB\_MasterRTU.c

This emModbus sample demonstrates emModbus master functionalities using RTU frames. It opens a channel and repeatedly sends queries to a Modbus slave device (specified by its slave ID as defined at the beginning of the file), asking it to perform the function "write coil", and waits for appropriate responses.

### 3.1.5 OS\_MB\_SlaveASCII.c

This sample demonstrates emModbus slave functionalities using ASCII frames. It opens a channel and waits for incoming queries from a Modbus master device. When ordered to write a coil (like the associated Modbus master sample does), the slave will toggle LEDs to signal its new status.

### 3.1.6 OS\_MB\_SlaveRTU.c

This sample demonstrates emModbus slave functionalities using RTU frames. It opens a channel and waits for incoming queries from a Modbus master device. When ordered to write a coil (like the associated Modbus master sample does), the slave will toggle LEDs to signal its new status.



# Chapter 4

## emModbus API

---

In this chapter, you will find a description of each emModbus core function.

## 4.1 API functions

The table below lists the available API functions within their respective categories.

Function	Description
Channel specific core functions	
<code>MB_CHANNEL_Disconnect()</code>	Disconnects a connected channel.
Master specific core functions	
<code>MB_MASTER_AddASCIIChannel()</code>	Adds a master channel that uses ASCII frames via serial connection.
<code>MB_MASTER_AddIPChannel()</code>	Adds a master channel that uses TCP frames via network.
<code>MB_MASTER_AddRTUChannel()</code>	Adds a master channel that uses RTU frames via serial connection.
<code>MB_MASTER_DeInit()</code>	De-Initializes master resources and channels and removes the master endpoint from the global endpoint list.
<code>MB_MASTER_Init()</code>	Initializes master resources and adds master endpoint to global endpoint list.
Master instruction set	
<code>MB_MASTER_ReadCoils()</code>	Reads Coils from a slave.
<code>MB_MASTER_ReadDI()</code>	Reads Discrete Inputs from a slave.
<code>MB_MASTER_ReadHR()</code>	Reads Holding Registers from a slave.
<code>MB_MASTER_ReadIR()</code>	Reads Input Registers from a slave.
<code>MB_MASTER_WriteCoil()</code>	Writes a single coil to a slave.
<code>MB_MASTER_WriteCoils()</code>	Writes multiple coils to a slave.
<code>MB_MASTER_WriteReg()</code>	Writes a single register to a slave.
<code>MB_MASTER_WriteRegs()</code>	Writes multiple registers to a slave.
Slave specific core functions	
<code>MB_SLAVE_AddASCIIChannel()</code>	Adds a slave channel that uses ASCII frames via serial connection.
<code>MB_SLAVE_AddIPChannel()</code>	Adds a slave channel that uses TCP frames via network.
<code>MB_SLAVE_AddRTUChannel()</code>	Adds a slave channel that uses RTU frames via serial connection.
<code>MB_SLAVE_DeInit()</code>	De-Initializes the slave resources and channels and removes the slave endpoint from the global endpoint list.
<code>MB_SLAVE_Exec()</code>	Loops over all slave channels once and processes data when channel has been signalled ready.
<code>MB_SLAVE_Init()</code>	Initializes slave resources and adds slave endpoint to global endpoint list.
<code>MB_SLAVE_PollChannel()</code>	Polled periodically for each slave channel that requires requesting data instead of getting it via interrupt.
<code>MB_SLAVE_SetCustomFunctionCodeHandler()</code>	Sets a handler for custom function codes.

**Table 4.1: emModbus API function overview**

Function	Description
<code>MB_SLAVE_Task()</code>	Wrapper function that runs <code>MB_SLAVE_Exec()</code> in a task.
Other core functions	
<code>MB_ConfigTimerFreq()</code>	Function allowing to set a user defined timer frequency instead of the default frequency of 1kHz.
<code>MB_OnRx()</code>	Function called by byte oriented transmission channels that receive an interrupt for new data received.
<code>MB_OnTx()</code>	Function called by byte oriented transmission channels once a Tx complete interrupt has been received.
<code>MB_TimerTick()</code>	Function called on each timer interrupt to manage internal RTU timeout with serial channels using the RTU protocol.
Helper functions	
<code>MB_LoadU16BE()</code>	Loads an U16 value from a big endian memory location.
<code>MB_StoreU16BE()</code>	Stores an U16 value to a big endian memory location.

**Table 4.1: emModbus API function overview (Continued)**

## 4.1.1 Channel specific core functions

### 4.1.1.1 MB\_CHANNEL\_Disconnect()

#### Description

Disconnects a previously connected channel, if the channel did any connect at all and is currently connected.

#### Prototype

```
void MB_CHANNEL_Disconnect ( MB_CHANNEL *pChannel );
```

#### Parameter

Parameter	Description
<a href="#">pChannel</a>	[IN] Pointer to element of MB_CHANNEL.

**Table 4.2: MB\_CHANNEL\_Disconnect() parameter list**



## 4.1.2 Master specific core functions

### 4.1.2.1 MB\_MASTER\_AddASCIChannel()

#### Description

Adds a master channel that uses ASCII frames via serial connection.

#### Prototype

```
void MB_MASTER_AddASCIChannel ( MB_CHANNEL          *pChannel,
                                MB_IFACE_CONFIG_UART *pConfig,
                                const MB_IFACE_UART_API *pIFaceAPI,
                                U32                    Timeout,
                                U8                      SlaveAddr,
                                U32                    Baudrate,
                                U8                      DataBits,
                                U8                      Parity,
                                U8                      StopBits,
                                U8                      Port );
```

#### Parameter

Parameter	Description
<a href="#">pChannel</a>	[IN] Pointer to element of MB_CHANNEL that is added to linked list.
<a href="#">pConfig</a>	[IN] Pointer to element of MB_IFACE_CONFIG_UART.
<a href="#">pIFaceAPI</a>	[IN] Pointer to element of MB_IFACE_UART_API used to read/write from/to interface.
<a href="#">Timeout</a>	[IN] Timeout [in ms] to wait for answer.
<a href="#">SlaveAddr</a>	[IN] Slave address to access.
<a href="#">Baudrate</a>	[IN] Desired baudrate in UART protocol.
<a href="#">DataBits</a>	[IN] Number of data bits used in UART protocol.
<a href="#">Parity</a>	[IN] Parity used in UART protocol.
<a href="#">StopBits</a>	[IN] Number of stop bits used in UART protocol.
<a href="#">Port</a>	[IN] UART port number used by this channel.

**Table 4.3: MB\_MASTER\_AddASCIChannel() parameter list**

#### Example

```
//
// Static declarations
//
static MB_CHANNEL _MBChannel;
static MB_IFACE_CONFIG_UART _MBConfig;
static const MB_IFACE_UART_API _IFaceAPI = {
    _SendByte, _Init, _DeInit, NULL, NULL, NULL, NULL, NULL, NULL
};

//
// Code running in its own task
//
static void _MasterTask(void) {
    MB_MASTER_Init(); // Init master
    MB_MASTER_AddASCIChannel(&_MBChannel, &_MBConfig, &_IFaceAPI, 3000, 1,
                             38400, 8, 0, 1, 0); // Add master channel
    do { ... } // e.g. master/slave communications
}
```

### 4.1.2.2 MB\_MASTER\_AddIPChannel()

#### Description

Adds a master channel that uses TCP frames via network.

#### Prototype

```
void MB_MASTER_AddIPChannel ( MB_CHANNEL          *pChannel,
                             MB_IFACE_CONFIG_IP  *pConfig,
                             const MB_IFACE_IP_API *pIFaceAPI,
                             U32                  Timeout,
                             U8                   SlaveAddr,
                             U32                  IPAddr,
                             U8                   Port );
```

#### Parameter

Parameter	Description
<a href="#">pChannel</a>	[IN] Pointer to element of MB_CHANNEL that is added to linked list.
<a href="#">pConfig</a>	[IN] Pointer to element of MB_IFACE_CONFIG_IP.
<a href="#">pIFaceAPI</a>	[IN] Pointer to element of MB_IFACE_IP_API used to read/write from/to interface.
<a href="#">Timeout</a>	[IN] Timeout [in ms] to wait for answer.
<a href="#">SlaveAddr</a>	[IN] Slave address to access.
<a href="#">IPAddr</a>	[IN] IP address of slave.
<a href="#">Port</a>	[IN] Slave port to connect to.

**Table 4.4: MB\_MASTER\_AddIPChannel() parameter list**

#### Example

```
//
// Static declarations
//
static      MB_CHANNEL      _MBChannel;
static      MB_IFACE_CONFIG_UART _MBConfig;
static const MB_IFACE_IP_API _IFaceAPI = {
    NULL, NULL, NULL, _Send, _Recv, _Connect, _Disconnect, NULL, NULL
};

//
// Code running in its own task
//
static void _MasterTask(void) {
    MB_MASTER_Init(); // Init master
    MB_MASTER_AddIPChannel(&_MBChannel, &_MBConfig, &_IFaceAPI, 3000, 1,
        IP_BYTES2ADDR(192,168,1,80), 502); // Add master channel
    do { ... } // e.g. master/slave communications
}
```

### 4.1.2.3 MB\_MASTER\_AddRTUChannel()

#### Description

Adds a master channel that uses RTU frames via serial connection.

#### Prototype

```
void MB_MASTER_AddRTUChannel ( MB_CHANNEL          *pChannel,
                               MB_IFACE_CONFIG_UART *pConfig,
                               const MB_IFACE_UART_API *pIFaceAPI,
                               U32                    Timeout,
                               U8                      SlaveAddr,
                               U32                    Baudrate,
                               U8                      DataBits,
                               U8                      Parity,
                               U8                      StopBits,
                               U8                      Port );
```

#### Parameter

Parameter	Description
<a href="#">pChannel</a>	[IN] Pointer to element of MB_CHANNEL that is added to linked list.
<a href="#">pConfig</a>	[IN] Pointer to element of MB_IFACE_CONFIG_UART.
<a href="#">pIFaceAPI</a>	[IN] Pointer to element of MB_IFACE_IP_API used to read/write from/to interface.
<a href="#">Timeout</a>	[IN] Timeout [in ms] to wait for answer.
<a href="#">SlaveAddr</a>	[IN] Slave address to access.
<a href="#">Baudrate</a>	[IN] Desired baudrate in UART protocol.
<a href="#">DataBits</a>	[IN] Number of data bits used in UART protocol.
<a href="#">Parity</a>	[IN] Parity used in UART protocol.
<a href="#">StopBits</a>	[IN] Number of stop bits used in UART protocol.
<a href="#">Port</a>	[IN] UART port number used by this channel.

**Table 4.5: MB\_MASTER\_AddRTUChannel() parameter list**

#### Example

```
//
// Static declarations
//
static      MB_CHANNEL      _MBChannel;
static      MB_IFACE_CONFIG_UART _MBConfig;
static const MB_IFACE_UART_API _IFaceAPI = {
    _SendByte, _Init, _DeInit, NULL, NULL, NULL, NULL, _InitTimer, _DeInitTimer
};

//
// Code running in its own task
//
static void _MasterTask(void) {
    MB_MASTER_Init(); // Init master
    MB_MASTER_AddRTUChannel(&_MBChannel, &_MBConfig, &_IFaceAPI, 3000, 1,
                           38400, 8, 0, 1, 0); // Add master channel
    do { ... } // e.g. master/slave communications
}
```

#### 4.1.2.4 MB\_MASTER\_DeInit()

##### Description

De-Initializes the master resources and channels and removes the master endpoint from the global endpoint list.

##### Prototype

```
void MB_MASTER_DeInit ( void );
```

#### 4.1.2.5 MB\_MASTER\_Init()

##### **Description**

Initializes the master resources and adds the master endpoint to the global endpoint list.

##### **Prototype**

```
void MB_MASTER_Init ( void );
```

### 4.1.3 Master instruction set

#### 4.1.3.1 MB\_MASTER\_ReadCoils()

**Description**

Reads coils from a slave.

**Prototype**

```
int MB_MASTER_ReadCoils ( MB_CHANNEL *pChannel,
                          U8          *pData,
                          U16          Addr,
                          U16          NumItems );
```

**Parameter**

Parameter	Description
pChannel	[IN] Pointer to channel configured to interface a slave.
pData	[OUT] Pointer to application buffer where to store the read data.
Addr	[IN] Address in slave where to find the coils to access.
NumItems	[IN] Number of items to read.

Table 4.6: MB\_MASTER\_ReadCoils() parameter list

**Return value**

<0: Error  
0: OK

**Example**

```
//
// Static declarations
//
static int      _Result;
static MB_CHANNEL _MBChannel;
static U8       _Data;

//
// Code running in its own task
//
static void _MasterTask(void) {
    MB_MASTER_Init();                               // Init master
    MB_MASTER_AddASCIIChannel( ... );                // Add master channel
    _Data = 0;
    _Result = MB_MASTER_ReadCoils(&_MBChannel, &_Data, 1000, 2); // Read Coils
}
```

### 4.1.3.2 MB\_MASTER\_ReadDI()

#### Description

Reads Discrete Inputs from a slave.

#### Prototype

```
int MB_MASTER_ReadDI ( MB_CHANNEL *pChannel,
                       U8          *pData,
                       U16          Addr,
                       U16          NumItems );
```

#### Parameter

Parameter	Description
<a href="#">pChannel</a>	[IN] Pointer to channel configured to interface a slave.
<a href="#">pData</a>	[OUT] Pointer to application buffer where to store the read data.
<a href="#">Addr</a>	[IN] Address in slave where to find the inputs to access.
<a href="#">NumItems</a>	[IN] Number of items to read.

**Table 4.7: MB\_MASTER\_ReadDI() parameter list**

#### Return value

<0: Error

0: OK

#### Example

```
//
// Static declarations
//
static int      _Result;
static MB_CHANNEL _MBChannel;
static U16      _aData[2];

//
// Code running in its own task
//
static void _MasterTask(void) {
    MB_MASTER_Init(); // Init master
    MB_MASTER_AddASCIIChannel( ... ); // Add master channel
    _Result = MB_MASTER_ReadDI(&_MBChannel,&_aData[0],1000,2); // Read Discrete Input
}
```

4.1.3.3 MB\_MASTER\_ReadHR()

Description

Reads Holding Registers from a slave.

Prototype

```
int MB_MASTER_ReadHR ( MB_CHANNEL *pChannel,
                        U8          *pData,
                        U16          Addr,
                        U16          NumItems );
```

Parameter

Parameter	Description
pChannel	[IN] Pointer to channel configured to interface a slave.
pData	[OUT] Pointer to application buffer where to store the read data.
Addr	[IN] Address in slave where to find the registers to access.
NumItems	[IN] Number of items to read.

Table 4.8: MB\_MASTER\_ReadHR() parameter list

Return value

- <0: Error
- 0: OK

Example

```
//
// Static declarations
//
static int      _Result;
static MB_CHANNEL _MBChannel;
static U16      _aData[2];

//
// Code running in its own task
//
static void _MasterTask(void) {
    MB_MASTER_Init(); // Init master
    MB_MASTER_AddASCIIChannel( ... ); // Add master channel
    _Result = MB_MASTER_ReadHR(&_MBChannel, &_aData[0], 1000, 2); // Read Holding Register
}
```



### 4.1.3.4 MB\_MASTER\_ReadIR()

#### Description

Reads Input Registers from a slave.

#### Prototype

```
int MB_MASTER_ReadIR ( MB_CHANNEL *pChannel,
                       U8          *pData,
                       U16         Addr,
                       U16         NumItems );
```

#### Parameter

Parameter	Description
<a href="#">pChannel</a>	[IN] Pointer to channel configured to interface a slave.
<a href="#">pData</a>	[OUT] Pointer to application buffer where to store the read data.
<a href="#">Addr</a>	[IN] Address in slave where to find the registers to access.
<a href="#">NumItems</a>	[IN] Number of items to read.

**Table 4.9: MB\_MASTER\_ReadIR() parameter list**

#### Return value

<0: Error

0: OK

#### Example

```
//
// Static declarations
//
static int      _Result;
static MB_CHANNEL _MBChannel;
static U16      _aData[2];

//
// Code running in its own task
//
static void _MasterTask(void) {
    MB_MASTER_Init(); // Init master
    MB_MASTER_AddASCIIChannel( ... ); // Add master channel
    _Result = MB_MASTER_ReadIR(&_MBChannel, &_aData[0], 1000, 2); // Read Input Register
}
```

### 4.1.3.5 MB\_MASTER\_WriteCoil()

#### Description

Writes a single coil to a slave.

#### Prototype

```
int MB_MASTER_WriteCoil ( MB_CHANNEL *pChannel,
                          U16         Addr,
                          U8          OnOff );
```

#### Parameter

Parameter	Description
pChannel	[IN] Pointer to channel configured to interface a slave.
Addr	[IN] Address in slave where to find the coil to access.
OnOff	[IN] Write Coil to 0: Off or 1: On.

Table 4.10: MB\_MASTER\_WriteCoil() parameter list

#### Return value

<0: Error  
0: OK

#### Example

```
//
// Static declarations
//
static int      _Result;
static MB_CHANNEL _MBChannel;

//
// Code running in its own task
//
static void _MasterTask(void) {
    MB_MASTER_Init();
    MB_MASTER_AddASCIIChannel( ... );
    _Result = MB_MASTER_WriteCoil(&_MBChannel, 1000, 1);
}
```

### 4.1.3.6 MB\_MASTER\_WriteCoils()

#### Description

Writes multiple coils to a slave

#### Prototype

```
int MB_MASTER_WriteCoils ( MB_CHANNEL *pChannel,
                           U8          *pData,
                           U16         Addr,
                           U16         NumItems );
```

#### Parameter

Parameter	Description
<code>pChannel</code>	[IN] Pointer to channel configured to interface a slave.
<code>pData</code>	[IN] Pointer to application buffer where the values to write are stored.
<code>Addr</code>	[IN] Address in slave where to find the coils to access.
<code>NumItems</code>	[IN] Number of items to write. Not to be mistaken with number of bytes that will be used for x coils.

**Table 4.11: MB\_MASTER\_WriteCoils() parameter list**

#### Return value

<0: Error

0: OK

#### Example

```
//
// Static declarations
//
static int      _Result;
static MB_CHANNEL _MBChannel;
static U8       _Data[2];

//
// Code running in its own task
//
static void _MasterTask(void) {
    MB_MASTER_Init();                                     // Init master
    MB_MASTER_AddASCIIChannel( ... );                     // Add master channel
    //
    // Set coils at addr. 1000 & 1003.
    // Clr. coild 1001 - 1002 & 1004 - 1007.
    //
    _Data[0] = (1 << 0) | (1 << 3);
    //
    // Set coil at addr. 1008.
    //
    _Data[1] = (1 << 0);                                  // Add master channel
    _Result = MB_MASTER_WriteCoils(&_MBChannel, &_Data[0], 1000, 9); // Write Coils
}
```

4.1.3.7 MB\_MASTER\_WriteReg()

Description

Writes a single register to a slave.

Prototype

```
int MB_MASTER_WriteReg ( MB_CHANNEL *pChannel,
                        U16          Data,
                        U16          Addr );
```

Parameter

Parameter	Description
pChannel	[IN] Pointer to channel configured to interface a slave.
Data	[IN] 16-bit data to write to register.
Addr	[IN] Address in slave where to find the register to access.

Table 4.12: MB\_MASTER\_WriteReg() parameter list

Return value

<0: Error  
0: OK

Example

```
//
// Static declarations
//
static int      _Result;
static MB_CHANNEL _MBChannel;
static U16      _Data;

//
// Code running in its own task
//
static void _MasterTask(void) {
    MB_MASTER_Init(); // Init master
    MB_MASTER_AddASCIIChannel( ... ); // Add master channel
    _Result = MB_MASTER_WriteReg(&_MBChannel, _Data, 1000); // Write Register
}
```

### 4.1.3.8 MB\_MASTER\_WriteRegs()

#### Description

Writes multiple registers to a slave.

#### Prototype

```
int MB_MASTER_WriteRegs ( MB_CHANNEL *pChannel,
                          U16         *pData,
                          U16         Addr,
                          U16         NumItems );
```

#### Parameter

Parameter	Description
<a href="#">pChannel</a>	[IN] Pointer to channel configured to interface a slave.
<a href="#">pData</a>	[IN] Pointer to application buffer where the values to write are stored.
<a href="#">Addr</a>	[IN] Address in slave where to find the registers to access.
<a href="#">NumItems</a>	[IN] Number of items to write.

**Table 4.13: MB\_MASTER\_WriteRegs() parameter list**

#### Return value

<0: Error

0: OK

#### Example

```
//
// Static declarations
//
static int      _Result;
static MB_CHANNEL _MBChannel;
static U16      _aData[2];

//
// Code running in its own task
//
static void _MasterTask(void) {
    MB_MASTER_Init();                                     // Init master
    MB_MASTER_AddASCIIChannel( ... );                     // Add master channel
    _Data[0] = 0x0001;
    _Data[1] = 0x1234;
    _Result = MB_MASTER_WriteRegs(&_MBChannel,&_aData[0],1000,2); // Write Registers
}
```

## 4.1.4 Slave specific core functions

### 4.1.4.1 MB\_SLAVE\_AddASCIIChannel()

#### Description

Adds a slave channel that uses ASCII frames via serial connection.

#### Prototype

```
void MB_SLAVE_AddASCIIChannel ( MB_CHANNEL          *pChannel,
                               MB_IFACE_CONFIG_UART *pConfig,
                               const MB_SLAVE_API    *pSlaveAPI,
                               const MB_IFACE_UART_API *pIFaceAPI,
                               U8                    SlaveAddr,
                               U8                    DisableWrite,
                               U32                    Baudrate,
                               U8                    DataBits,
                               U8                    Parity,
                               U8                    StopBits,
                               U8                    Port );
```

#### Parameter

Parameter	Description
<a href="#">pChannel</a>	[IN] Pointer to element of MB_CHANNEL that is added to linked list.
<a href="#">pConfig</a>	[IN] Pointer to element of MB_IFACE_CONFIG_UART.
<a href="#">pSlaveAPI</a>	[IN] Pointer to element of MB_SLAVE_API used to read/write from/to target.
<a href="#">pIFaceAPI</a>	[IN] Pointer to element of MB_IFACE_UART_API used to read/write from/to interface.
<a href="#">SlaveAddr</a>	[IN] Slave address to listen on.
<a href="#">DisableWrite</a>	[IN] Disable write access on this channel.
<a href="#">Baudrate</a>	[IN] Desired baudrate in UART protocol.
<a href="#">DataBits</a>	[IN] Number of data bits used in UART protocol.
<a href="#">Parity</a>	[IN] Parity used in UART protocol.
<a href="#">StopBits</a>	[IN] Number of stop bits used in UART protocol.
<a href="#">Port</a>	[IN] UART port number used by this channel.

**Table 4.14: MB\_SLAVE\_AddASCIIChannel() parameter list**

#### Example

```
//
// Static declarations
//
static MB_CHANNEL          _MBChannel;
static MB_IFACE_CONFIG_UART _MBConfig;
static const MB_IFACE_UART_API _IFaceAPI = {
    _SendByte, _Init, _DeInit, NULL, NULL, NULL, NULL, NULL, NULL
};
static const MB_SLAVE_API _SlaveAPI = {
    _WriteCoil, _ReadCoil, _ReadDI, _WriteReg, _ReadHR, _ReadIR
};

//
// Code running in main task
//
void MainTask(void) {
    MB_SLAVE_Init(); // Init slave
    MB_SLAVE_AddASCIIChannel(&_MBChannel, &_MBConfig, &_SlaveAPI, &_IFaceAPI, 1, 0,
        38400, 8, 0, 1, 0); // Add slave channel
    OS_CREATETASK( ... ); // Start slave task
}
```

#### 4.1.4.2 MB\_SLAVE\_AddIPChannel()

##### Description

Adds a slave channel that uses TCP frames via network.

##### Prototype

```
void MB_SLAVE_AddIPChannel ( MB_CHANNEL          *pChannel,
                             MB_IFACE_CONFIG_IP *pConfig,
                             const MB_IFACE_IP_API *pIFaceAPI,
                             U8                  SlaveAddr,
                             U32                  DisableWrite,
                             U32                  IPAddr,
                             U8                  Port );
```

##### Parameter

Parameter	Description
<a href="#">pChannel</a>	[IN] Pointer to element of MB_CHANNEL that is added to linked list.
<a href="#">pConfig</a>	[IN] Pointer to element of MB_IFACE_CONFIG_IP.
<a href="#">pSlaveAPI</a>	[IN] Pointer to element of MB_SLAVE_API used to read/write from/to target.
<a href="#">pIFaceAPI</a>	[IN] Pointer to element of MB_IFACE_IP_API used to read/write from/to interface.
<a href="#">SlaveAddr</a>	[IN] Slave address to access.
<a href="#">DisableWrite</a>	[IN] Disable write access on this channel.
<a href="#">IPAddr</a>	[IN] Filter address. If set, only connections on this address should be accepted.
<a href="#">Port</a>	[IN] Port that accepts connections for this channel.

**Table 4.15: MB\_SLAVE\_AddIPChannel() parameter list**

##### Example

```
//
// Static declarations
//
static MB_CHANNEL _MBChannel;
static MB_IFACE_CONFIG_UART _MBConfig;
static const MB_IFACE_IP_API _IFaceAPI = {
    NULL, _Init, _DeInit, _Send, _Recv, _Connect, _Disconnect, NULL, NULL
};
static const MB_SLAVE_API _SlaveAPI = {
    _WriteCoil, _ReadCoil, _ReadDI, _WriteReg, _ReadHR, _ReadIR
};

//
// Code running in main task
//
void MainTask(void) {
    MB_SLAVE_Init();           // Init slave
    OS_CREATETASK( ... );      // Start slave task
    MB_SLAVE_AddIPChannel(&_MBChannel, &_MBConfig, &_SlaveAPI, &_IFaceAPI, 1, 0,
        0, 502);               // Add slave channel
    OS_CREATETASK( ... );      // Start polling task for this channel
}
```

### 4.1.4.3 MB\_SLAVE\_AddRTUChannel()

#### Description

Adds a slave channel that uses RTU frames via serial connection.

#### Prototype

```
void MB_SLAVE_AddASCIIChannel ( MB_CHANNEL          *pChannel,
                                MB_IFACE_CONFIG_UART *pConfig,
                                const MB_SLAVE_API    *pSlaveAPI,
                                const MB_IFACE_UART_API *pIFaceAPI,
                                U8                    SlaveAddr,
                                U8                    DisableWrite,
                                U32                    Baudrate,
                                U8                    DataBits,
                                U8                    Parity,
                                U8                    StopBits,
                                U8                    Port );
```

#### Parameter

Parameter	Description
<code>pChannel</code>	[IN] Pointer to element of MB_CHANNEL that is added to linked list.
<code>pConfig</code>	[IN] Pointer to element of MB_IFACE_CONFIG_UART.
<code>pSlaveAPI</code>	[IN] Pointer to element of MB_SLAVE_API used to read/write from/to target.
<code>pIFaceAPI</code>	[IN] Pointer to element of MB_IFACE_UART_API used to read/write from/to interface.
<code>SlaveAddr</code>	[IN] Slave address to listen on.
<code>DisableWrite</code>	[IN] Disable write access on this channel.
<code>Baudrate</code>	[IN] Desired baudrate in UART protocol.
<code>DataBits</code>	[IN] Number of data bits used in UART protocol.
<code>Parity</code>	[IN] Parity used in UART protocol.
<code>StopBits</code>	[IN] Number of stop bits used in UART protocol.
<code>Port</code>	[IN] UART port number used by this channel.

**Table 4.16: MB\_SLAVE\_AddRTUChannel() parameter list**

#### Example

```
//
// Static declarations
//
static      MB_CHANNEL      _MBChannel;
static      MB_IFACE_CONFIG_UART _MBConfig;
static const MB_IFACE_UART_API _IFaceAPI = {
    _SendByte, _Init, _DeInit, NULL, NULL, NULL, _InitTimer, _DeInitTimer
};
static const MB_SLAVE_API    _SlaveAPI = {
    _WriteCoil, _ReadCoil, _ReadDI, _WriteReg, _ReadHR, _ReadIR
};

//
// Code running in main task
//
void MainTask(void) {
    MB_SLAVE_Init();           // Init slave
    MB_SLAVE_AddRTUChannel(&_MBChannel, &_MBConfig, &_SlaveAPI, &_IFaceAPI, 1, 0,
                          38400, 8, 0, 1, 0); // Add slave channel
    OS_CREATETASK( ... );      // Start slave task
}
```



#### 4.1.4.4 MB\_SLAVE\_DeInit()

##### **Description**

De-Initializes the slave resources and channels and removes the slave endpoint from the global endpoint list.

##### **Prototype**

```
void MB_SLAVE_DeInit ( void );
```

#### 4.1.4.5 MB\_SLAVE\_Exec()

##### Description

Loops once over all slave channels, processes data when the channel has been signalled ready.

##### Prototype

```
void MB_SLAVE_Exec ( void );
```

#### 4.1.4.6 MB\_SLAVE\_Init()

##### **Description**

Initializes the slave resources and adds the slave endpoint to the global endpoint list.

##### **Prototype**

```
void MB_SLAVE_Init ( void );
```

### 4.1.4.7 MB\_SLAVE\_PollChannel()

#### Description

Function that has to be periodically polled for each slave channel that requires requesting data instead of getting it via interrupt.

#### Prototype

```
void MB_SLAVE_PollChannel ( MB_Channel *pChannel );
```

#### Parameter

Parameter	Description
<a href="#">pChannel</a>	[IN] Pointer to element of MB_CHANNEL.

**Table 4.17: MB\_SLAVE\_PollChannel() parameter list**

#### Return value

<0: Error

0: No complete Modbus message signaled.

1: Complete Modbus message signaled.

#### Example

```
//  
// Polling a slave channel in a task, allowing it to sleep when possible.  
//  
static void _PollSlaveChannelTask(void *pChannel) {  
    while (1) {  
        MB_SLAVE_PollChannel ( (MB_CHANNEL*)pChannel );  
    }  
}
```

#### 4.1.4.8 MB\_SLAVE\_SetCustomFunctionCodeHandler()

##### Description

Sets a handler for custom function codes.

##### Prototype

```
void MB_SLAVE_SetCustomFunctionCodeHandler (
    MB_CHANNEL                                *pChannel,
    int (*pf) ( struct MB_CHANNEL              *pChannel,
                MB_CUSTOM_FUNC_CODE_PARA *pPara ) );
```

##### Parameter

Parameter	Description
<a href="#">pChannel</a>	[IN] Pointer to element of MB_CHANNEL.
<a href="#">pf</a>	[IN] Callback function to execute.
<a href="#">pChannel</a>	[IN] Context of type MB_CHANNEL provided to the callback.
<a href="#">pPara</a>	[IN] Structure of parameters of type MB_CUSTOM_FUNC_CODE_PARA provided to the callback.

**Table 4.18: MB\_SLAVE\_SetCustomFunctionCodeHandler() parameter list**

##### Example

```

/*****
 *
 *      _HandleCustomFunctionCode()
 *
 * Function description
 *   Handles custom function codes or overwrites stack internal handling.
 *
 * Parameters
 *   pChannel: Pointer to element of type MB_CHANNEL.
 *   pPara   : Input/output parameter structure.
 *
 * Return value
 *   >= 0: O.K., function code handled. Number of bytes to send back.
 *   < 0: Error, use official Modbus error codes
 *        like MB_ERR_ILLEGAL_DATA_VAL .
 *   MB_ERR_FUNC_CODE: Function code not handled. Try stack internal handling.
 *
 * Additional information
 *   Function code 0x08 (Diagnostic), subfunction code 0x00 0x00 (Return Query Data) :
 *   This very basic diagnostic subfunction echoes back a two byte
 *   value that has just been received.
 *   Function code 0x30 :
 *   The payload of the message is expected to be a printable
 *   string with termination. As the string itself is properly
 *   terminated no length field is necessary.
 *   One U8 is expected as return code that lets the master
 *   know if the string has been printed or not. In this sample
 *   this is decided by checking if MB_DEBUG is active or not.
 */
static int _HandleCustomFunctionCode(MB_CHANNEL *pChannel,
                                     MB_CUSTOM_FUNC_CODE_PARA *pPara) {
    U32 SubCode;
    int r;

    MB_USE_PARA(pChannel);

    r = MB_ERR_FUNC_CODE; // Assume that we can not handle this function code.

    //
    // Handle custom function codes.
    //
    switch (pPara->Function) {
    case 0x08:
        SubCode = MB_LoadU16BE((const U8*)pPara->pData);
        switch (SubCode) {
        case 0x0000:
            r = 4; // Send back Subfunction Hi/Lo & Data Hi/Lo fields. Data is echoed
                  // back as it is in the input/output buffer.
            break;

```

```

    }
    break;
case 0x30:
    //
    // Output the string that has been sent.
    //
    MB_Log((const char*)pPara->pData);
    //
    // Store MB_DEBUG level as 1 byte answer.
    // Up to pPara->BufferSize bytes might be stored.
    //
    *pPara->pData = MB_DEBUG;
    r = 1; // Tell the stack that we are sending back 1 byte data.
    break;
}
return r;
}

/*****
*
*      MainTask()
*
* Function description
* Main task executed by the RTOS to create further resources and
* running the main application.
*/
void MainTask(void) {
    ...
    //
    // Start Modbus slave using Modbus/TCP protocol.
    //
    MB_SLAVE_Init();
    MB_SLAVE_AddIPChannel(&_MBChannel, ...; // Add a slave channel.
    //
    // Add a custom function code handler for this channel.
    //
    MB_SLAVE_SetCustomFunctionCodeHandler(&_MBChannel, HandleCustomFunctionCode);
    ...
}

```

#### 4.1.4.9 MB\_SLAVE\_Task()

##### Description

Wrapper function that runs MB\_SLAVE\_Exec() in a task.

##### Prototype

```
void MB_SLAVE_Task ( void );
```

## 4.1.5 Other core functions

### 4.1.5.1 MB\_ConfigTimerFreq()

#### Description

This function allows setting a user defined timer frequency instead of the default frequency of 1kHz.

#### Prototype

```
void MB_ConfigTimerFreq ( U32 Freq );
```

#### Parameter

Parameter	Description
<code>Freq</code>	[IN] Timer frequency that shall be used for all all channels to calculate the RTU timeout.

**Table 4.19: MB\_ConfigTimerFreq() parameter list**



### 4.1.5.2 MB\_OnRx()

#### Description

Function called by byte oriented transmission channels that receive an interrupt for new data received.

#### Prototype

```
void MB_OnRx ( MB_CHANNEL *pChannel,
               U8          Data );
```

#### Parameter

Parameter	Description
<a href="#">pChannel</a>	[IN] Pointer to element of MB_CHANNEL.
<a href="#">Data</a>	[IN] Received character.

**Table 4.20: MB\_OnRx() parameter list**

### 4.1.5.3 MB\_OnTx()

#### Description

Function called by byte oriented transmission channels once a Tx complete interrupt has been received to send the next byte or report back that there is no more to send.

#### Prototype

```
int MB_OnTx ( MB_CHANNEL *pChannel );
```

#### Parameter

Parameter	Description
<a href="#">pChannel</a>	[IN] Pointer to element of MB_CHANNEL.

**Table 4.21: MB\_OnTx() parameter list**

#### Return value

<0: Error

0: More data sent

1: No more data to send

#### 4.1.5.4 MB\_TimerTick()

##### **Description**

Function called on each timer interrupt to manage internal RTU timeout with serial channels using the RTU protocol. Needs to be called by the user application each millisecond.

##### **Prototype**

```
void MB_TimerTick ( void );
```

# 4.1.6 Helper functions

## 4.1.6.1 MB\_LoadU16BE()

### Description

Loads an U16 value from a big endian memory location.

### Prototype

```
U32 MB_LoadU16BE ( const U8 *pData );
```

### Parameter

Parameter	Description
<a href="#">pData</a>	[IN] Pointer to data location.

Table 4.22: MB\_LoadU16BE() parameter list

### Return value

Data in target endianness.

### 4.1.6.2 MB\_StoreU16BE()

#### Description

Stores an U16 value to a big endian memory location

#### Prototype

```
void MB_StoreU16BE ( U8  *pData,  
                    U16  v );
```

#### Parameter

Parameter	Description
<a href="#">pData</a>	[IN] Pointer to data location.
<a href="#">v</a>	[IN] Value to store.

**Table 4.23: MB\_StoreU16BE() parameter list**

## 4.2 emModbus data structures

### 4.2.1 Interface configuration structures

#### 4.2.1.1 Structure MB\_IFACE\_CONFIG\_IP

##### Description

This structure holds configurations for IP communications.

##### Prototype

```
typedef struct {  
    MB_SOCKET Sock;  
    MB_SOCKET ListenSock;  
    U32      IPAddr;  
    U16      Port;  
    U16      xID;  
} MB_IFACE_CONFIG_API;
```

Member	Description
<a href="#">Sock</a>	Socket used for send and receive.
<a href="#">ListenSock</a>	Socket used by TCP for listen() and accept(). Not needed for UDP.
<a href="#">IPAddr</a>	Master: Addr. to connect to. Slave: Filter address. If set only connections on this address should be accepted.
<a href="#">Port</a>	Master: Port to connect to. Slave: Port that accepts connections for this channel.
<a href="#">xID</a>	Master: Transaction ID that is incremented for each send. Slave: Ignored.

**Table 4.24: Structure MB\_IFACE\_CONFIG\_IP member list**

### 4.2.1.2 Structure MB\_IFACE\_CONFIG\_UART

#### Description

This structure holds configurations for UART communications.

#### Prototype

```
typedef struct {
    U32 Cnt;
    U32 CntReload;
    U32 Baudrate;
    U8  DataBits;
    U8  Parity;
    U8  StopBits;
    U8  Port;
} MB_IFACE_CONFIG_UART;
```

Member	Description
<a href="#">Cnt</a>	RTU timeout countdown.
<a href="#">CntReload</a>	RTU countdown reload value.
<a href="#">Baudrate</a>	Baudrate to use.
<a href="#">DataBits</a>	Number of data bits.
<a href="#">Parity</a>	Parity as interpreted by application.
<a href="#">StopBits</a>	Number of stop bits.
<a href="#">Port</a>	Interface index.

**Table 4.25: Structure MB\_IFACE\_CONFIG\_UART member list**

#### Additional information

MB\_IFACE\_CONFIG is of type MB\_IFACE\_CONFIG\_UART.

## 4.2.2 Interface function structures

### 4.2.2.1 Structure MB\_IFACE\_IP\_API

#### Description

This structure holds function pointers for IP communications.

#### Prototype

```
typedef struct {
    void ( *pfSendByte )      ( MB_IFACE_CONFIG_UART *pConfig,
                                U8
                                Data );
    int  ( *pfInit )          ( MB_IFACE_CONFIG_UART *pConfig );
    void ( *pfDeInit )        ( MB_IFACE_CONFIG_UART *pConfig );
    int  ( *pfSend )          ( MB_IFACE_CONFIG_UART *pConfig,
                                const U8
                                *pData,
                                U32
                                NumBytes );
    int  ( *pfRecv )          ( MB_IFACE_CONFIG_UART *pConfig,
                                U8
                                *pData,
                                U32
                                NumBytes,
                                U32
                                Timeout );
    int  ( *pfConnect )       ( MB_IFACE_CONFIG_UART *pConfig,
                                U32
                                Timeout );
    void ( *pfDisconnect )    ( MB_IFACE_CONFIG_UART *pConfig );
    void ( *pfInitTimer )     ( U32
                                MaxFreq );
    void ( *pfDeInitTimer )   ( void );
} MB_IFACE_IP_API;
```

Member	Description
<a href="#">pfSendByte</a>	Send first byte. Every next byte will be sent via <code>MB_OnTx()</code> from interrupt. NULL if stream oriented interface, as <code>pfSend</code> gets used instead.
<a href="#">pfInit</a>	Init IP and get listen socket and bring it in listen state if needed. NULL if not needed.
<a href="#">pfDeInit</a>	Close listen socket and de-init IP. NULL if not needed.
<a href="#">pfSend</a>	Send data for stream oriented interface. NULL if byte oriented interface is used, as <code>pfSendByte</code> gets used instead.
<a href="#">pfRecv</a>	Request more data.
<a href="#">pfConnect</a>	Master: Connect to slave. Slave: Accept connection if needed. NULL if not needed.
<a href="#">pfDisconnect</a>	Master: Disconnect from slave. Slave: Close connection if needed. NULL if not needed.
<a href="#">pfInitTimer</a>	NULL.
<a href="#">pfDeInitTimer</a>	NULL.

**Table 4.26: Structure MB\_IFACE\_IP\_API member list**



## 4.2.2.2 Structure MB\_IFACE\_UART\_API

### Description

This structure holds function pointers for UART communications.

### Prototype

```
typedef struct {
    void ( *pfSendByte )      ( MB_IFACE_CONFIG_UART *pConfig,
                                U8
                                Data );
    int  ( *pfInit )          ( MB_IFACE_CONFIG_UART *pConfig );
    void ( *pfDeInit )        ( MB_IFACE_CONFIG_UART *pConfig );
    int  ( *pfSend )          ( MB_IFACE_CONFIG_UART *pConfig,
                                const U8
                                *pData,
                                U32
                                NumBytes );
    int  ( *pfRecv )          ( MB_IFACE_CONFIG_UART *pConfig,
                                U8
                                *pData,
                                U32
                                NumBytes,
                                U32
                                Timeout );
    int  ( *pfConnect )       ( MB_IFACE_CONFIG_UART *pConfig,
                                U32
                                Timeout );
    void ( *pfDisconnect )    ( MB_IFACE_CONFIG_UART *pConfig );
    void ( *pfInitTimer )     ( U32
                                MaxFreq );
    void ( *pfDeInitTimer )   ( void );
} MB_IFACE_UART_API;
```

Member	Description
<a href="#">pfSendByte</a>	Send first byte. Every next byte will be sent via MB_OnTx() from interrupt. NULL if stream oriented interface, as pfSend gets used instead.
<a href="#">pfInit</a>	Init hardware. NULL if not needed.
<a href="#">pfDeInit</a>	De-Init hardware. NULL if not needed.
<a href="#">pfSend</a>	Send data for stream oriented interface. NULL if byte oriented interface, as pfSendByte gets used instead.
<a href="#">pfRecv</a>	Typically data is received via MB_OnRx() from interrupt. NULL if not using polling mode.
<a href="#">pfConnect</a>	NULL.
<a href="#">pfDisconnect</a>	NULL.
<a href="#">pfInitTimer</a>	Typically needed for RTU interfaces only. Initializes a timer needed for RTU timeout. NULL if not needed.
<a href="#">pfDeInitTimer</a>	De-initialize RTU timer. NULL if not needed.

**Table 4.27: Structure MB\_IFACE\_UART\_API member list**

### Additional information

MB\_IFACE\_API is of type MB\_IFACE\_UART\_API.

## 4.2.3 Slave structures

### 4.2.3.1 Structure MB\_SLAVE\_API

#### Description

This structure holds function pointers used by slaves.

#### Prototype

```
typedef struct {  
    int ( *pfWriteCoil ) ( U16 Addr, char OnOff );  
    int ( *pfReadCoil ) ( U16 Addr );  
    int ( *pfReadDI ) ( U16 Addr );  
    int ( *pfWriteReg ) ( U16 Addr, U16 Val );  
    int ( *pfReadHR ) ( U16 Addr, U16 *pVal );  
    int ( *pfReadIR ) ( U16 Addr, U16 *pVal );  
} MB_SLAVE_API;
```

Member	Description
<a href="#">pfReadCoil</a>	Read coil status.
<a href="#">pfReadDI</a>	Read discrete input registers.
<a href="#">pfReadHR</a>	Read holding register.
<a href="#">pfReadIR</a>	Read input register.
<a href="#">pfWriteCoil</a>	Write coil.
<a href="#">pfWriteReg</a>	Write register.

**Table 4.28: Structure MB\_SLAVE\_API member list**

### 4.2.3.2 Structure MB\_CUSTOM\_FUNC\_CODE\_PARA

#### Description

This structure holds function pointers used by slaves.

#### Prototype

```
typedef struct {
    U8  *pData;
    U32  DataLen;
    U32  BufferSize;
    U8   SlaveAddr;
    U8   Function;
} MB_CUSTOM_FUNC_CODE_PARA;
```

Member	Description
<a href="#">pData</a>	Beginning of input/output buffer.
<a href="#">DataLen</a>	Data length received.
<a href="#">BufferSize</a>	Max. buffer size that can be used for an answer.
<a href="#">SlaveAddr</a>	Slave addr. for which the message has been received.
<a href="#">Function</a>	Function code received.

**Table 4.29: Structure MB\_CUSTOM\_FUNC\_CODE\_PARA member list**

## 4.3 Error codes

The following table contains a list of emModbus error codes.

Generally, success is indicated by 0 and definite errors are indicated by negative numbers.

Symbolic name	Value	Description
Slave errors		
<a href="#">MB_ERR_ILLEGAL_FUNC</a>	-1	The function code received in the query is an illegal function code for the slave. This may be because the function code was not implemented in the selected device. It could also indicate that the slave is in the wrong state to process a request of this type.
<a href="#">MB_ERR_ILLEGAL_DATA_ADDR</a>	-2	The data address received in the query is an invalid address for the slave. More specifically, the combination of reference number and transfer length is invalid.
<a href="#">MB_ERR_ILLEGAL_DATA_VAL</a>	-3	A value contained in the query data field is an invalid value for the slave. This indicates a fault in the structure of a request, such as an incorrect implied length.
<a href="#">MB_ERR_SLAVE_FAIL</a>	-4	An unrecoverable error occurred while the slave was attempting to perform the requested action.
<a href="#">MB_ERR_ACK</a>	-5	The slave has accepted the request and is processing it, but a long duration of time will be required to do so. This response is returned to prevent a timeout error from occurring in the master, which can then poll for process completion.
<a href="#">MB_ERR_SLAVE_BUSY</a>	-6	The slave is engaged in processing a long-duration command. The master should retransmit the message later.
<a href="#">MB_ERR_NACK</a>	-7	The requested function cannot be performed. Issue poll to obtain detailed device dependent error information.
<a href="#">MB_ERR_MEM_PARITY_ERR</a>	-8	The slave attempted to perform the query, but detected a parity error in the memory. The master can retry the request, but service may be required on the slave device.
Stack internal errors		
<a href="#">MB_ERR_MISC</a>	-20	Unspecified error.
<a href="#">MB_ERR_CONNECT</a>	-21	Error while connecting.
<a href="#">MB_ERR_CONNECT_TIMEOUT</a>	-22	Timeout while connecting.
<a href="#">MB_ERR_DISCONNECT</a>	-23	Interface signaled disconnect.
<a href="#">MB_ERR_TIMEOUT</a>	-24	No answer received on request.
<a href="#">MB_ERR_CHECKSUM</a>	-25	Received message did not pass LRC/CRC check.
<a href="#">MB_ERR_PARAM</a>	-26	Parameter error in API call.
<a href="#">MB_ERR_SLAVE_ADDR</a>	-27	Received valid response with wrong slave address.

**Table 4.30: emModbus error codes**

Symbolic name	Value	Description
MB_ERR_FUNC_CODE	-28	Received valid response with wrong function code.
MB_ERR_REF_NO	-29	Received valid response with wrong reference number.
MB_ERR_NUM_ITEMS	-30	Received valid response with more or less items than requested.
MB_ERR_DATA	-31	Received valid response for a single write with different data than written.
MB_ERR_TRIAL_LIMIT	-32	Trial limit exceeded. When using trial libraries, this error occurs after 12 hours of run time. Except from this, the trial library is fully functional and includes all features of emModbus.

**Table 4.30: emModbus error codes**



# Chapter 5

## Configuring emModbus

---

emModbus can be used without changing any of the compile-time flags. All compile-time configuration flags are preconfigured with valid values, which match the requirements of most applications.

The default configuration of emModbus can be changed via compile-time flags which can be added to `MB_Conf.h`. `MB_Conf.h` is the main configuration file for the emModbus stack.

## 5.1 Compile-time configuration

The following types of configuration macros exist:

### Binary switches "B"

Switches can have a value of either 0 or 1, for deactivated and activated respectively. Actually, anything other than 0 works, but 1 makes it easier to read a configuration file. These switches can enable or disable a certain functionality or behavior. Switches are the simplest form of configuration macros.

### Numerical values "N"

Numerical values are used somewhere in the code in place of a numerical constant. A typical example is the configuration of the sector size of a storage medium.

### Function replacements "F"

Macros can be treated like regular functions although certain limitations apply, as a macro is still put into the code as simple text replacement. Function replacements are mainly used to add specific functionality to a module which is highly hardware dependent. This type of macro is always declared using brackets (and optional parameters).

### 5.1.1 Compile-time configuration switches

Type	Symbolic name	Default	Description
System configuration macros			
B	<a href="#">MB_IS_BIGENDIAN</a>	0	Macro to define if a big endian target is used.
Debug macros			
N	<a href="#">MB_DEBUG</a>	0	Macro to define the debug level of the emModbus build. Refer to <i>Debug level</i> on page 81 for a description of the different debug level.
Optimization macros			
F	<a href="#">MB_MEMCMP</a>	memcmp (C-routine in standard C-library)	Macro to define an optimized memcmp routine to speed up the stack. An optimized memcmp routine is typically implemented in assembly language.
F	<a href="#">MB_MEMCPY</a>	memcpy (C-routine in standard C-library)	Macro to define an optimized memcpy routine to speed up the stack. An optimized memcpy routine is typically implemented in assembly language. Optimized versions for IAR and GCC compilers are supplied.
F	<a href="#">MB_MEMMOVE</a>	memmove (C-routine in standard C-library)	Macro to define an optimized memmove routine to speed up the stack. An optimized memmove routine is typically implemented in assembly language.
F	<a href="#">MB_MEMSET</a>	memset (C-routine in standard C-library)	Macro to define an optimized memset routine to speed up the stack. An optimized memset routine is typically implemented in assembly language.



## 5.1.2 Debug level

emModbus can be configured to display debug information at higher debug levels to locate a problem (Error) or potential problem. To display information, emModbus uses the logging routines (see chapter *Debugging* on page 83). These routines can be blank, they are not required for the functionality of emModbus. In a target system, they are typically not required in a release (production) build, since a production build typically uses a lower debug level.

If (IP\_DEBUG == 0): used for release builds. Includes no debug options.

If (IP\_DEBUG == 1): MP\_PANIC() is mapped to MP\_Panic().

If (IP\_DEBUG >= 2): MP\_PANIC() is mapped to MP\_Panic() and logging support is activated.



# Chapter 6

## Debugging

---

emModbus comes with debugging options including optional warning and log outputs.

## 6.1 Message output

The debug builds of emModbus include a debug system which helps to analyze the correct implementation of the stack in your application. All modules can output logging and warning messages via terminal I/O.

## 6.1.1 Debug API functions

Function	Description
I/O functions	
<code>MB_Log()</code>	This function is called by the stack in debug builds with log output.
<code>MB_Panic()</code>	This function is called if the stack encounters a critical situation.
<code>MB_Warn()</code>	This function is called by the stack in debug builds with warning output.

**Table 6.1: emModbus debug API functions overview**

### 6.1.1.1 MB\_Log()

#### Description

This function is called by the stack in debug builds with log output. In a release build, this function may not be linked in.

#### Prototype

```
void MB_Log ( const char *s );
```

#### Parameter

Parameter	Description
<a href="#">s</a>	[IN] String to output.

**Table 6.2: MB\_Log() parameter list**

### 6.1.1.2 MB\_Panic()

#### Description

This function is called if the stack encounters a critical situation. In a release build, this function may not be linked in.

#### Prototype

```
void MB_Panic ( const char *s );
```

#### Parameter

Parameter	Description
<a href="#">s</a>	[IN] String to output before running into endless loop.

**Table 6.3: MB\_Panic() parameter list**

### 6.1.1.3 MB\_Warn()

#### Description

This function is called by the stack in debug builds with warning output. In a release build, this function may not be linked in.

#### Prototype

```
void MB_Warn ( const char *s );
```

#### Parameter


Parameter	Description
<a href="#">s</a>	[IN] String to output.

**Table 6.4: MB\_Warn() parameter list**



## 6.2 Using a network sniffer to analyse Ethernet communication problems

Using a network sniffer to analyze your local Ethernet traffic may give you a deeper understanding of the data that is being sent in your network. For this purpose you can use several network sniffers. Some of them are available for free such as Wireshark. An example of a network sniff using Wireshark is shown in the screenshot below:

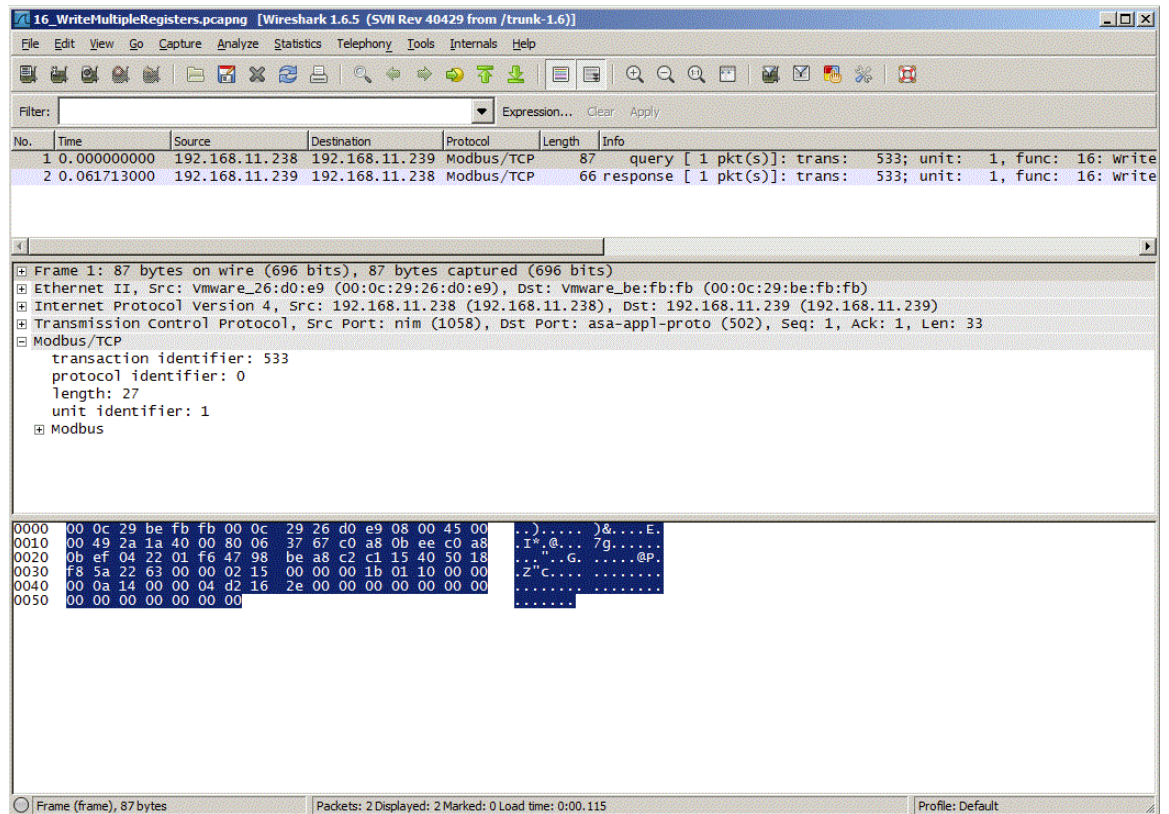

## 6.3 Testing emModbus applications

We recommend testing emModbus devices by using their respective counterparts, e.g. using a emModbus/TCP master to test a emModbus/TCP slave and vice versa. Alternatively, devices can also be tested with a desktop computer running an appropriate Modbus application.

To solely test emModbus on target hardware, we recommend building a corresponding project for the specific application. For example, the application contained in `OS_IP_MB_SlaveTCP.c`, can be tested using a project for the application contained in `OS_IP_MB_MasterTCP.c`. Configuration of some parameters (e.g. IP address) is required before compiling the project and downloading the output into a second target. When connected to the same network, both devices should then start communication with each other.

To test emModbus using a desktop computer, an appropriate software package is required. The shipment contains Windows applications for Modbus master and slave devices using Modbus/TCP, which can be used to test both devices via that connection. In addition, several vendors offer Modbus testing applications for Microsoft Windows and other operating systems, many of which are free or at least free to evaluate for a limited time. We recommend "Modbus Poll" for testing emModbus slave functionalities and "Modbus Slave" for testing emModbus master functionalities. Both applications can be downloaded from <http://www.modbustools.com>.

# Chapter 7

## OS Integration

---

emModbus is designed to be used in a multitasking environment. The interface to the operating system is encapsulated in a single file, the MB/OS interface. For embOS, all functions required for this MB/OS interface are implemented in a single file which comes with emModbus.

This chapter provides descriptions of the functions required to fully support emModbus in multitasking environments.

## 7.1 General information

All OS interface functions for embOS are implemented in `MB_X_embOS.c`, which is located in the root folder of the emModbus stack.

## 7.2 OS layer API functions

Function	Description
General functions	
<code>MB_X_OS_DeInitMaster()</code>	De-Initializes (removes) all objects required for task synchronisation of the master.
<code>MB_X_OS_DeInitSlave()</code>	De-Initializes (removes) all objects required for task synchronisation of the slave.
<code>MB_X_OS_DisableInterrupt()</code>	Disables interrupts before critical operations.
<code>MB_X_OS_EnableInterrupt()</code>	Enables interrupts after critical operations.
<code>MB_X_OS_GetTime()</code>	Returns the current system time in ms.
<code>MB_X_OS_InitMaster()</code>	Initializes (creates) all objects required for task synchronisation of the master.
<code>MB_X_OS_InitSlave()</code>	Initializes (creates) all objects required for task synchronisation and signalling of the slave.
Synchronization functions	
<code>MB_X_OS_SignalItem()</code>	Sets an object to signaled state, or resumes tasks which are waiting at the event object.
<code>MB_X_OS_SignalNetEvent()</code>	Wakes tasks waiting for a NET-event or timeout in the function <code>MB_OS_WaitNetEvent()</code> .
<code>MB_X_OS_WaitItemTimed()</code>	Suspends a task which needs to wait for an object.
<code>MB_X_OS_WaitNetEvent()</code>	Blocks until a NET-event occurs, meaning <code>MB_OS_SignalNetEvent()</code> is called from another task or ISR.

**Table 7.1: OS layer API functions list**

## 7.2.1 General functions

### 7.2.1.1 MB\_X\_OS\_DeInitMaster()

#### Description

De-Initializes (removes) all objects required for task synchronisation of the master.

#### Prototype

```
void MB_X_OS_DeInitMaster ( void );
```

### 7.2.1.2 MB\_X\_OS\_DeInitSlave()

#### Description

De-Initializes (removes) all objects required for task synchronisation of the slave.

#### Prototype

```
void MB_X_OS_DeInitSlave ( void );
```

### 7.2.1.3 MB\_X\_OS\_DisableInterrupt()

#### Description

Disables interrupts before critical operations.

#### Prototype

```
void MB_X_OS_DisableInterrupt ( void );
```



#### 7.2.1.4 MB\_X\_OS\_EnableInterrupt()

**Description**

Enables interrupts after critical operations.

**Prototype**

```
void MB_X_OS_EnableInterrupt ( void );
```

### 7.2.1.5 MB\_X\_OS\_GetTime()

**Description**

Returns the current system time in ms. The value will wrap around after approximately 49.7 days. This is taken into account by the stack.

**Prototype**

```
U32 MB_x_OS_GetTime32 ( void );
```

**Return value**

System time in ms.

### 7.2.1.6 MB\_X\_OS\_InitMaster()

#### Description

Initializes (creates) all objects required for task synchronisation of the master. This is one semaphore for protection of critical code, which may not be executed from multiple tasks at the same time, and a hook in case a task currently executing Modbus master API is terminated.

#### Prototype

```
void MB_X_OS_InitMaster ( void );
```

### 7.2.1.7 MB\_X\_OS\_InitSlave()

#### Description

Initializes (creates) all objects required for task synchronisation and signalling of the slave.

#### Prototype

```
void MB_X_OS_InitSlave ( void );
```

## 7.2.2 Synchronization functions

### 7.2.2.1 MB\_X\_OS\_SignalItem()

#### Description

Sets an object to signaled state, or resumes tasks which are waiting at the event object.

#### Prototype

```
void MB_X_OS_SignalItem ( void *pWaitItem );
```

#### Parameter

Parameter	Description
<a href="#">pWaitItem</a>	[IN] Pointer to item a task is waiting for.

**Table 7.2: MB\_X\_OS\_SignalItem() parameter list**

### 7.2.2.2 MB\_X\_OS\_SignalNetEvent()

#### Description

Wakes tasks waiting for a NET-event or timeout in the function `MB_OS_WaitNetEvent()`.

#### Prototype

```
void MB_X_OS_SignalNetEvent ( void );
```

### 7.2.2.3 MB\_X\_OS\_WaitItemTimed()

#### Description

Suspends a task which needs to wait for an object. This object is identified by a pointer to it and can be of any type, e.g. channel.

#### Prototype

```
void MB_X_OS_WaitItemTimed ( void      *pWaitItem,
                             unsigned  Timeout );
```

#### Parameter

Parameter	Description
<code>pWaitItem</code>	[IN] Pointer to item a task shall wait for until signalled or timeout occurs.
<code>Timeout</code>	[IN] Timeout [in ms] to wait for item to be signalled.

**Table 7.3: MB\_X\_OS\_WaitItemTimed() parameter list**

### 7.2.2.4 MB\_X\_OS\_WaitNetEvent()

#### Description

Called from `MB_Task()` only. Blocks until a NET-event occurs, meaning `MB_OS_SignalNetEvent()` is called from another task or ISR.

#### Prototype

```
void MB_X_OS_WaitNetEvent ( unsigned ms );
```

#### Parameter

Parameter	Description
<a href="#">ms</a>	[IN] Time to wait for a NET-event to occur [in ms]. 0 for infinite.

**Table 7.4: MB\_X\_OS\_WaitNetEvent() parameter list**



# Chapter 8

## Resource usage

---

This chapter covers the resource usage of emModbus. It contains information about the memory requirements in typical systems, which can be used to obtain sufficient estimates for most target systems.

## 8.1 Memory footprint

emModbus is designed to fit many kinds of embedded design requirements. Some features might be excluded from a build to get a minimal system. Note that the values are only valid for the given configurations.

### 8.1.1 ARM7 system

The following table shows the hardware and the toolchain details of the project:

Detail	Description
CPU	ARM7
Tool chain	IAR Embedded Workbench for ARM V6.30.6
Model	ARM7, Thumb instructions; interwork;
Compiler options	Highest size optimization;

**Table 8.1: ARM7 sample configuration**

#### 8.1.1.1 ROM usage

The following table shows the ROM requirement of emModbus:

Description	ROM
master using ASCII	approx. 1.5 Kbytes
master using TCP	approx. 0.9 Kbytes
master using RTU	approx. 2.1 Kbytes
slave using ASCII	approx. 2.0 Kbytes
slave using TCP	approx. 1.6 Kbytes
slave using RTU	approx. 2.6 Kbytes

#### 8.1.1.2 RAM usage

emModbus requires approximately 30 Bytes of RAM for the stack itself and approximately 300 Bytes of RAM for each channel added.

# Chapter 9

## Support

---

This chapter should help if any problem occurs, e.g. with the use of the emModbus functions, and describes how to contact the emModbus support.

## 9.1 Contacting support

If you are a registered emModbus user and you need to contact the emModbus support, please send the following information via email to **support@segger.com**:

- Which emModbus do you use? (Master/Slave)
- The emModbus version.
- Your emModbus registration number.
- If you are unsure about the above information, you may also use the name of the emModbus ZIP-file (which contains the above information).
- A detailed description of the problem.
- Optionally, a project with which we can reproduce the problem.

# Index

---

<b>A</b>		Modbus Organization .....	10
Application Data Unit (ADU) .....	11	Modbus, standard protocol .....	10
<b>C</b>		Modicon .....	10
Coil .....	13	Multi tasking .....	15
Compiler, required compliance .....	16	<b>N</b>	
Compile-time flags .....	79	Network sniffer .....	89
Contact address .....	2	<b>O</b>	
Core functions .....	38	OS integration functions .....	93
Cyclic Redundancy Check .....	11	<b>P</b>	
<b>D</b>		Port number (Modbus/TCP) .....	10
Data table .....	13	Protocol Data Unit (PDU) .....	11
Data types, primary .....	13	Protocol ID (Modbus/TCP) .....	12
Debug functions .....	85	<b>Q</b>	
Discrete Input .....	13	Query .....	10
<b>E</b>		<b>S</b>	
Endianess .....	13	Schneider Electric SA .....	10
<b>F</b>		Slave (device) .....	10
Frames, Modbus-compliant variants .....	10	Syntax, conventions used .....	5
Function code .....	11	<b>T</b>	
Function replacements .....	80	TCP/IP stack .....	15
<b>H</b>		Transaction ID (Modbus/TCP) .....	12
Holding Register .....	13	<b>U</b>	
<b>I</b>		Unit ID .....	11
Input Register .....	13		
<b>L</b>			
Log output .....	86		
Longitudinal Redundancy Check .....	11		
<b>M</b>			
Master (device) .....	10		
Memory requirement .....	105		
Modbus Application Header (Modbus/TCP) .....	12		



