

MT825 Cat M1 & NB-IoT GPS Tracker

User Manual V1.0



Preface

Congratulations on choosing the Mictrack MT825 CAT M1/NB-IoT GPS tracker. This manual shows how to easily program and setup the tracker for best results. Make sure to read this manual carefully before using this product, so as to avoid delays or confusion with its operation. Please note that specifications and instructions are subject to change without notice to facilitate product improvement. Updates and changes will be integrated into the latest release. The manufacturer assumes no responsibility for any errors or omissions in outdated documents.

Contents

1. Overview.....	1
2. Features.....	1
3. Applications.....	1
4. Specifications.....	1
5. MT825 interface.....	2
6. In the box.....	3
7. Installation.....	3
7.1 SIM Card installation.....	3
7.2 LED Indications.....	3
7.2.1 Green indicator.....	3
7.2.2 RED indicator.....	3
8. Setup and Configuration.....	4
8.1 Set APN (Access Point Name).....	4
8.2 Set the IP and port.....	4
8.3 Working mode.....	4
8.3.1 One report per day mode.....	4
8.3.2 Deep sleep interval mode.....	4
8.3.3 GPS sleep mode.....	4
8.3.4 GPS always ON mode.....	4
8.3.5 Power Saving mode.....	5
8.4 Network mode.....	5
8.4.1 Setup to Cat M1 network only.....	5
8.4.2 Setup to NB-IoT network only.....	5
8.4.3 Setup to GSM only.....	5
8.4.4 Setup to AUTO Mode.....	5
8.5 Setup Protocol.....	5
8.5.1 Setup to TCP.....	5
8.5.2 Setup to UDP.....	5
8.6 Logprint.....	6
8.7 OTA.....	6
8.8 Rconf.....	6
8.9 Reboot.....	6
8.10 Reset.....	6
9. App & PC Tracking platform.....	6
9.1 App install & Login.....	6
9.2 PC login.....	7
10. Troubleshooting.....	8

1. Overview

MT825 is a Mini waterproof GPS tracker that use the latest CAT M1 & NB-IoT technology that can provide low power consumption and optimized data transmission with low cost. The parents or pet owners can track the unit via their smart phone even if far away. With the hybrid positioning system GPS and WiFi allow get more precise location. It can used for personal(kids/elderly), pets and fleet management etc.

2. Features

● CAT M1 & NB-IoT & GSM Network

- Real-time tracking
- GPS+WiFi Positioning
- History record check
- Geo-Fence alarm
- SOS Alarm report
- Low battery alarm
- Power saving mode
- PC & Mobile App tracking
- Long standby for 5 months
- P65 Water resistant
- OTA

3. Applications

- Kids & Elderly tracking
- Lonely workers tracking
- Pets tracking
- Logistics
- Asset tracking

4. Specifications

Item	Specifications
Dimension	50*40*16mm
Weight	36g
Charging mode	Magnetic charging DC 5V
Backup battery	3.7 V 680mAh
Power consumption	45uA standby current

Item	Specifications
Working temperature	-20°C to 65°C
Cellular Bands	Cat M1 (LTE-M, eMTC) LTE FDD: B1/B2/B3/B4/B5/B8/B12/B13/B18/B19/B20/B26/B28 LTE TDD: B39 NB-IoT (CAT NB1): LTE FDD: B1/B2/B3/B4/B5/B8/B12/B13/B18/B19/B20/B26/B28 GSM: 850/900/1800/1900Mhz
Positioning	GPS, WiFi, LBS
Tracking Sensitivity	-162 dBm
Sensor	Accelerometer
LED	RED/GREEN
SIM Card interface	PUSH Nano SIM
Waterproof	IP65

5. MT825 interface




6. In the box

- 1* MT825 GPS Tracker
- 1* Magnetic charging cable
- 1* Quick Start Guide
- 1* USB Config Cable
- 1* Pet collar (optional)
- 1* Lanyard (optional)

7. Installation

7.1 SIM Card installation

- Get ready a **Nano Sim Card** that support **Cat M1** or **NB-IoT** with 15MB data a month
- Open the waterproof rubber plug
- Insert **Sim card** to sim card slot correctly(as following picture)
watch the video:<http://bit.ly/2SvopQO>
- Press SOS button for 3 seconds to power ON (green led will blinking).
- After that the device will be ready.

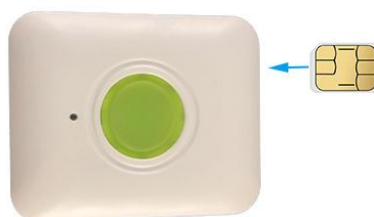

7.2 LED Indications

7.2.1 Green indicator

Status	Description
Solid Green	● GPS & Network available
OFF	● Device Power OFF or in sleep mode
Fast blinking (1s)	● Network available only
Slow blinking (3s)	● GPS available only
Slow blinking (6s)	● Network & GPS unavailable

7.2.2 RED indicator

Status	Description
Solid Red	In charging
OFF	No charge or full charged

8. Setup and Configuration

- If you use NB-IoT SIM card, ONLY can setup the device via USB Config cable(because NB-IoT SIM do not support SMS)
- If you use Cat M1 SIM card, you can setup the unit via following SMS commands (8.1-8.10) or via USB Config cable.
- Download the USB Config tool and guide/video from the link:<http://bit.ly/30n5yZT>

8.1 Set APN (Access Point Name)

SMS Command format 1: apn,apn,.,#

For example : apn,iot.nb,.,#

SMS Command format 2: apn,apn,username,password#

For example: apn,internet,internet,internet#

Reply: apn=Success!

8.2 Set the IP and port

SMS Command format : data,ip:port#

For example : data,113.98.254.179:7700##

Reply: data=Success!

8.3 Working mode

8.3.1 One report per day mode

SMS Command format: mode,0,T#

For examples: mode,0,8#

Reply: mode=Success!

Note: Device will wake up and report one data to server at 8AM every day, after that it will go to sleep again until next day at 8AM. T is [0-23] hours.

8.3.2 Deep sleep interval mode

SMS Command format: Mode,1,T#

For examples: Mode,1,30#

Reply: mode=success!

Note: Device will wake up and report one data to server every 30 minutes, after that it will go to sleep again until next 30minutes . T is [3-1440] minutes.

8.3.3 GPS sleep mode

SMS Command format: Mode,5,T#

For examples: Mode,5,10#

Reply: mode=success!

Note: Device will wake up every 10 minutes and report one data to server, after that it will go to sleep again until next 10 minutes. T is [3-1440] minutes.

8.3.4 GPS always ON mode

SMS Command format: Mode,6,T#

For examples: Mode,6,10#

Reply: mode=success!

Note: The device will report data every 10s .T is [10-86400] seconds.

8.3.5 Power Saving mode

SMS Command format: Mode,7,T#

For examples: Mode,7,10#

Reply: mode=success!

Note: When the device detects continuous vibration for more than 10s, it will wakes up and starts to connect to the network, After connected it will Immediately report a data (event 15) to the platform;

If the device is still in a vibrating state, MT825 will report to server every 30 seconds/

If there is no vibration for more than 2 minutes, the device will automatically goes to sleep and report a data((event 16) to server. T is [10-86400] seconds

8.4 Network mode

8.4.1 Setup to Cat M1 network only

SMS Command format : netlock,2,3,0#

Reply: netlock=Success!

Note: In this mode device will only works under Cat M1 network.

8.4.2 Setup to NB-IoT network only

SMS Command format :netlock,3,3,1#

Reply: netlock=Success!

Note: Device will only works under NB-IoT network.

8.4.3 Setup to GSM only

SMS Command format : netlock,1,1,2#

Reply: netlock=Success!

Note: Device will only works under GSM network.

8.4.4 Setup to AUTO Mode

SMS Command format : netlock,0,0,2#

Reply: netlock=Success!

Note: Device will auto switch to available network include Cat M1, NB-IoT and GSM.

8.5 Setup Protocol

8.5.1 Setup to TCP

SMS Command format: protocol, 1,X#

For examples: protocol,1,0#

Reply: protocol=success!

Note: X=1, means response ACK, X=0, means do not need response ACK.

8.5.2 Setup to UDP

SMS Command format: protocol, 0,Y#

For examples: protocol,0,0#

Reply: protocol=success!

Note: Y=1, means response ACK, Y=0, means do not need response ACK.

8.6 Logprint

SMS Command format: Logprint, 0,Z#

For examples: Logprint, 0,1#

Reply: logprint=success!

Note: Z=[0,1]. To enable the print log, send command: Logprint,1#, To disable the print log, sent command: Logprint,0#

8.7 OTA

SMS Command format: otastart,ip:port,user name,password,firmware name,1#

For examples: otastart,173.230.147.117:21,ota,ota,MT825.bin,1#

Reply: otastart =Success! OTADONE

It will response "OTADONE" if OTA successfully or response "OTAFAILED" when OTA fail. If it has failed, please try again.

8.8 Rconf

SMS Command format : rconf,0#

After send this command, the device will reply as follow:

UI:866425032478242

rconf=cmmtn,,113.98.254.179,7700,6,60,MT825_MICTRACK_B1.05V2.8_20191202,GSM

Note: According the above message and we can get the info as follow:

ID: 866425032478242

APN: cmmtn

IP: 113.98.254.179

Port: 7700,

Mode: Mode,6,60#

Version: MT825_MICTRACK_B1.05V2.8_20191202

Network: GSM

8.9 Reboot

SMS Command format : reboot,0#

The device will restart after send this command.

Reply: reboot=Success!

8.10 Reset

SMS Command format : factoryreset,1#

The device will reset to default after send this command.

Reply: reset=Success!

9. App & PC Tracking platform

9.1 App install & Login

- Search "Yi tracker" in Google Play or iOS store(or scan the following QR code) to download the Mobile APP(not Yi tracker2);



- Choose the "Login by Device No.", Input server www.trackits.com
- Input **your device's ID number** and password(default is 123456) to login.

The image shows a mobile app login interface. At the top, there are two tabs: "Login By Username" and "Login By Device No.". A red arrow labeled "1" points to the "Login By Device No." tab, which is highlighted with a green border. Below the tabs, there are three input fields. A red arrow labeled "2" points to the first field, which contains "www.trackits.com". A red arrow labeled "3" points to the second field, which contains "860425042514958". A red arrow labeled "4" points to the third field, which contains ".....". To the right of the password field is a blue checkmark icon. Below the input fields is a "Google Map" button with a dropdown arrow. At the bottom is a large blue "Log in" button.

9.2 PC login

- Web: www.trackits.com, Choose "ID No."
- Input **your device's ID number** and password(default is 123456) to login

The image shows a PC login interface. At the top, there is a "Trackits" logo. Below it is a navigation bar with two tabs: "Account" and "ID No.". A red arrow labeled "1" points to the "ID No." tab, which is highlighted with a green border. Below the tabs, there are three input fields. A red arrow labeled "2" points to the first field, which contains "869260047172275". A red arrow labeled "3" points to the second field, which contains ".....". Below the input fields is a "Remember" checkbox, which is checked, and a "Demo>>" link. At the bottom is a large green "Login" button. A red arrow labeled "4" points to the "Login" button.

10. Troubleshooting

Issues	Caused	Solutions
Send SMS to the device but no reply	1>The device only reply with Cat M1 sim card and will not reply the NB-IoT SIM card 2>SIM Card have not active 3>Card balance is not enough	Please check the SIM card status and try again.
	Text command format is wrong	Please check the command format again
	Connect network fail.	Please check LED status and make sure the network connect successful first.
GPS platform shows logged off		1.Check the APN setting ; 2. Check IP and port 3. Check network if match
GPS platform shows no location or the coast of Africa.	Device indoor/garage	Take it outside for a 10-minute walk or drive, and its location should update.
LED no light	Backup battery is low power	Please charge the device for 30 minutes at least.

Any questions please do not hesitate to contact us:



Shenzhen Mictrack Electronics Co.,Ltd.

Add: B305-306, Kangsheng Electronic Industrial Park, Zhonghua Rd, Longhua District, Shenzhen, China 518131

Tel: +86-755-21014699

Web: www.mictrack.com

Email: info@mictrack.com