

# WiMOD LoRaWAN EndNode Studio

User Guide Version 0.16

Document ID: 4100/40140/0087

---

**IMST GmbH**

Carl-Friedrich-Gauß-Str. 2-4  
47475 KAMP-LINTFORT  
GERMANY



## Document Information

<b>File name</b>	WiMOD_LoRaWAN_EndNode_Studio_UserGuide.docx
<b>Created</b>	2015-10-06
<b>Total pages</b>	25

## Revision History

Version	Note
0.1	Created, Initial Version
0.2	Draft Version Created For Review
0.3	Preliminary Version
0.4	Updates according to new GUI version V0.20.6 and firmware version V1.5
0.5	Updates according to new GUI version V0.24.2 and firmware version V1.10
0.6	Updates according to new GUI version V0.25.0 and firmware version V1.11
0.7	Updates according to new GUI version V0.25.6 and firmware version V1.11 (Build 53)
0.8	Updates according to new GUI version V0.27.0 and firmware version V1.13 (Build 59)
0.9	Updates according to new GUI version V0.27.5 and firmware version V1.15 (Build 68)
0.10	Updates according to new GUI version V0.28.0 and firmware version V1.16 (Build 72)
0.11	Updates according to new GUI version V0.30.0 and firmware version V1.16 (Build 76)
0.12	Updates according to new GUI version V0.31.0 and firmware version V1.17 (Build 78)
0.13	Updates according to new GUI version V0.36.0 and firmware version V2.0 (Build 106)
0.14	Updates according to new GUI version V0.37.0 and firmware version V2.0 (Build 112)
0.15	Updates according to new GUI version V0.41.0 and firmware version V2.0 (Build 123)
0.16	Updates according to new GUI version V0.42.0 and firmware version V2.0 (Build 136)

## Aim of this Document

This document describes the WiMOD LoRaWAN EndNode Studio, a Windows application which can be used in combination with the WiMOD LoRaWAN™ compatible radio modules (e.g. iM880A, iM880B, iU880A, iU880B) and its embedded WiMOD LoRaWAN EndNode firmware.

## Table of Contents

<b>1. INTRODUCTION</b>	<b>4</b>
1.1 Overview	4
1.2 Installation	5
1.2.1 USB Driver	5
1.2.2 WiMOD LoRaWAN EndNode Studio	5
1.2.3 Finish Installation	6
<b>2. GETTING STARTED</b>	<b>7</b>
2.1 Navigation	7
2.2 Connection to Radio Modules	8
2.3 Disconnect/Remove Radio Modules	9
2.4 Status Box	9
2.5 Firmware Update	10
<b>3. FEATURE SECTION</b>	<b>11</b>
3.1 LoRaWAN Services	11
3.1.1 LoRaWAN Services	11
3.1.2 LoRaWAN Configuration	13
3.2 Device Management	15
3.2.1 Device Information	15
3.2.2 Real Time Clock	16
3.2.3 Info	17
3.3 Extras	18
3.3.1 HCI Logging	18
3.3.2 Customer Settings	19
3.3.3 Studio Settings	20
<b>4. APPENDIX</b>	<b>21</b>
4.1 List of Abbreviations	21
4.2 List of Figures	21

4.3	References	22
5.	REGULATORY COMPLIANCE INFORMATION	23
6.	IMPORTANT NOTICE	24
6.1	Disclaimer	24
6.2	Contact Information	24

# 1.Introduction

## 1.1 Overview

The WiMOD LoRaWAN EndNode Studio is a Windows application which allows to explore the capabilities of the WiMOD LoRaWAN EndNode firmware. The GUI offers a comfortable way to configure and control the features of the embedded radio stack:

- Node Activation by Personalization (ABP)
- Node Over the Air Activation (OTAA)
- Encryption & Authentication
- Unconfirmed Data Transmission
- Confirmed Data Transmission
- Data & ACK Reception (including Frame Pending bit)
- Adaptive Data Rate
- Power Saving
- Class A & Class C
- Multi Band Support

The communication between WiMOD LoRaWAN EndNode Studio and the connected radio modules is implemented by means of so called HCI messages (see [1]) which are exchanged over a serial interface.

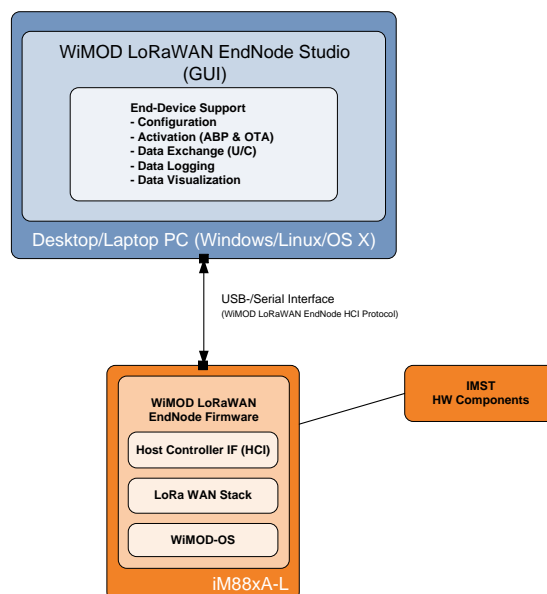


Figure 1-1: Overview

## 1.2 Installation

The WiMOD LoRaWAN EndNode Studio operates in combination with the pre-programmed radio modules plus demo board or USB sticks. The demo board provides a USB connector for communication and power supply purposes. An USB chip converts the serial interface signals from the radio module into USB signals. For communication over this USB interface a virtual COM port (VCP) driver must be installed on the host PC.

### 1.2.1 USB Driver

It is recommended to download the recent version from the [USB drivers web site](#).

Run the CDM version.exe. A command box appears and the driver will be installed. Plug in the USB cable to the USB port on the demo board. Plug in the other end of the USB cable into the USB port of the host PC. Now the Windows OS will recognize the demo board as a USB serial converter.

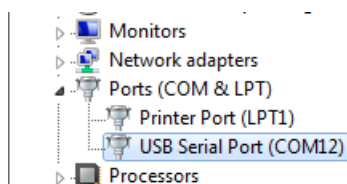


Figure 1-2: USB Driver Installation

To verify that the USB driver installation was successful, open the Windows Device Manager ("Start>Control>Panel>System>Hardware>Device Manager" or hit <WIN>+<PAUSE>). A new USB – Serial Port (COMxx) entry in section "Ports (COM & LPT)" should appear (see Figure 1-2).

Note: for firmware update purpose of old firmware and other custom firmware it is also necessary to install the D2XX driver of FTDI (see Firmware Update).

### 1.2.2 WiMOD LoRaWAN EndNode Studio

The EndNode Studio is based on Qt, a cross-platform application and GUI framework, compiled with MinGW and delivered as a bunch of files:

- WiMOD\_LoRaWAN\_EndNode\_Studio.exe  
The executable Windows application file
- LoRaNodeStudio.ini  
The application INI file will be copied to the user's local application data folder:  
"C:\Users\%USER\_NAME%\AppData\Local\IMST\WiMOD\_LoRaWAN\_EndNode\_Studio"  
Note: The application must be restarted after a modification of the INI file content
- WiMOD\_LoRaWAN\_EndNode\_Studio\_UserGuide.pdf  
This document

- Several Qt + mingw runtime libraries

**Note:** It might be necessary to install the [Microsoft Visual C++ 2008 Redistributable Package \(x86\)](#) in case the WiMOD LR Studio doesn't start. Click the download button on the Microsoft web page. Double click the vcredist\_x86.exe to install runtime components of Visual C++ libraries on a computer that does not have Visual C++ installed.

### 1.2.3 Finish Installation

Mount the radio module on the Demo Board and connect the board by means of an USB cable to the PC. Start WiMOD\_LoRaWAN\_EndNode\_Studio.exe and continue with the following chapter.

## 2. Getting Started

The EndNode Studio enables the user to evaluate the capabilities of the WiMOD LoRaWAN EndNode firmware. Several features of the embedded radio firmware can be controlled from different pages which are described in more detail in the following chapters.

### 2.1 Navigation

The GUI presents the embedded radio features on several pages. The navigation from one page to another is implemented by means of two navigation bars. The vertical bar on the left side is used to change between the following main sections:

- LoRaWAN Services
- Device Management
- Extras

Each section provides an individual horizontal bar on top which offers access to several pages e.g. **Device Information**, **Real Time Clock**, **Info** and so on.

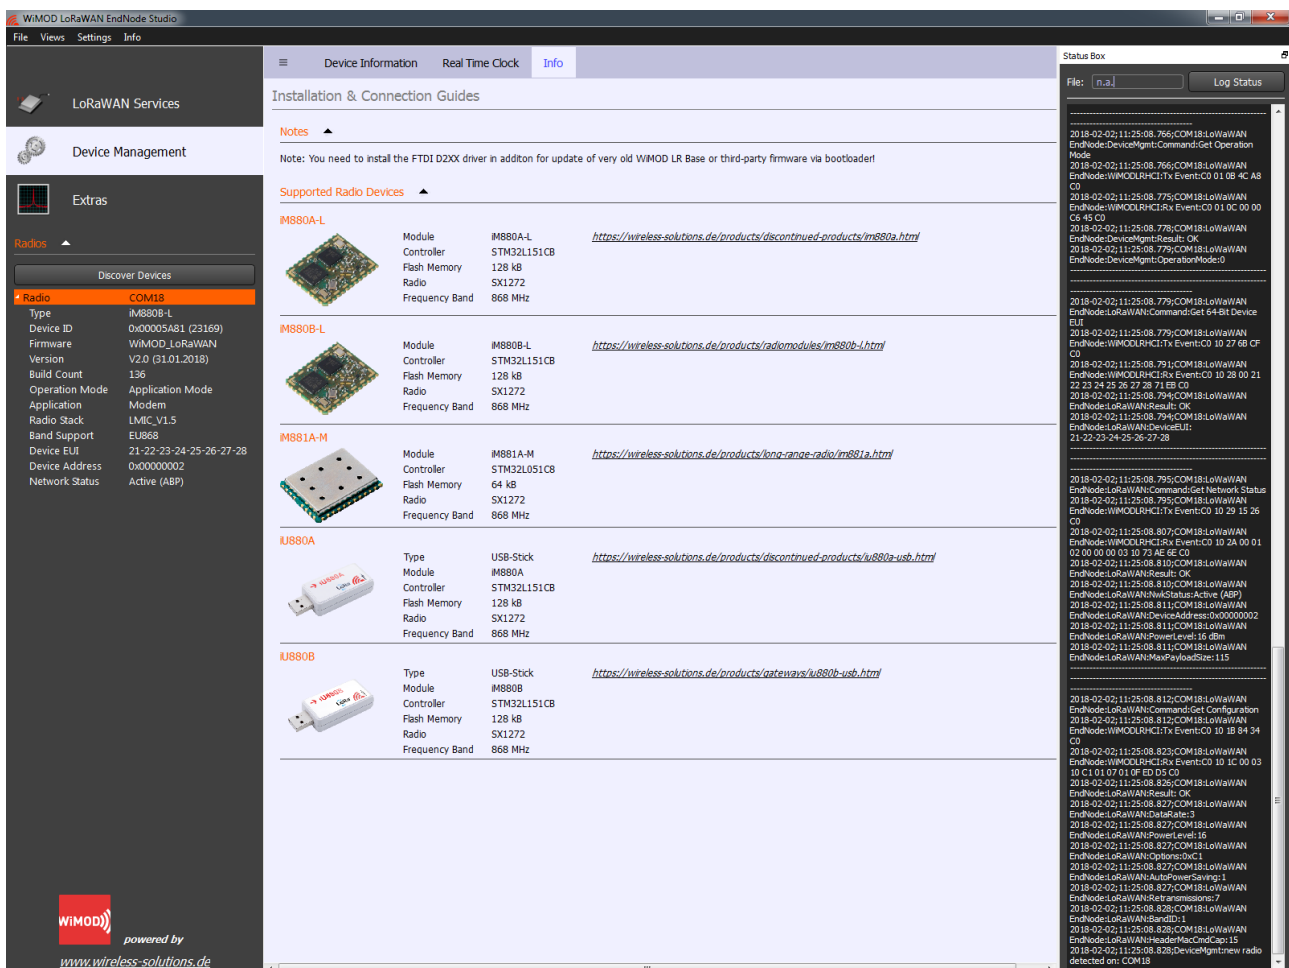


Figure 2-1: Navigation Bars



## 2.2 Connection to Radio Modules

The EndNode Studio provides an automatic device discovery procedure. A new connected radio module and its associated serial COM port will be displayed in the list box **Radios** (left side) after successful identification. The box provides additional information about the radio configuration and its firmware version. The application allows connecting multiple devices at the same time. Note that commands are always sent to the selected device in the list box.

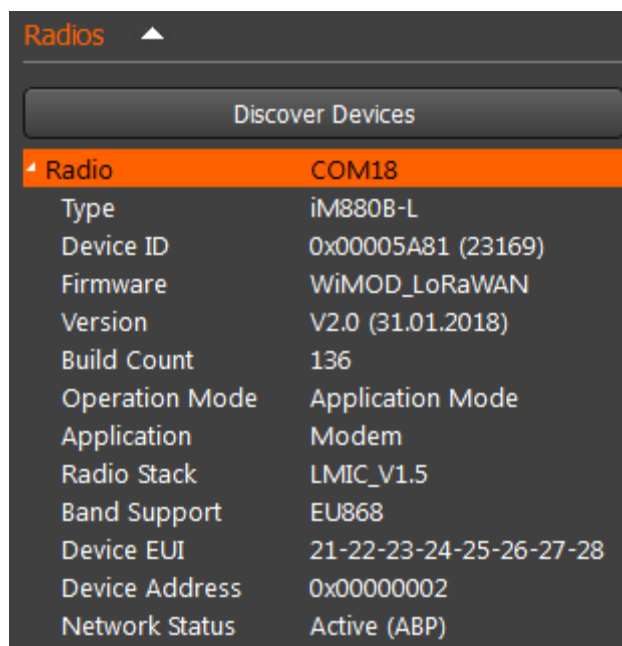


Figure 2-2: Connected iM880B on serial com port

The box shows the following properties per connected device:

- COM x :                      used COM port
- Type:                        connected hardware component
- Device ID                    32-Bit serial number
- Firmware:                  firmware name
- Version:                    firmware version (build date)
- Build Count:                firmware build counter
- Operation Mode:          operation mode (e.g. application/customer mode)
- Application:                application name
- Radio Stack:                embedded LoRa WAN radio stack version
- Band Support:              supported band (e.g. EU868)
- Device EUI:                configured 64-Bit LoRaWAN Device EUI
- Device Address:            32-Bit device address used in radio packets
- Network Status:            inactive – not activated  
active(ABP) – activated by personalization  
active(OTAA) – activated over the air  
joining (OTAA) – joining over the air

## 2.3 Disconnect/Remove Radio Modules

The **Radios** box allows to remove a connected device by **right-click** mouse operation. The device will become available for a second instance of EndNode Studio afterwards. Reconnecting to the same Studio requires to unplug and to plug again.

## 2.4 Status Box

The right area of the main window contains a **Status Box** which is used to display events or the result (success/error) of any issued command. The **Status Box** can be picked by its title bar and moved to any other area on the screen. The content of this box can be cleared from the context menu (**right-click** mouse operation).

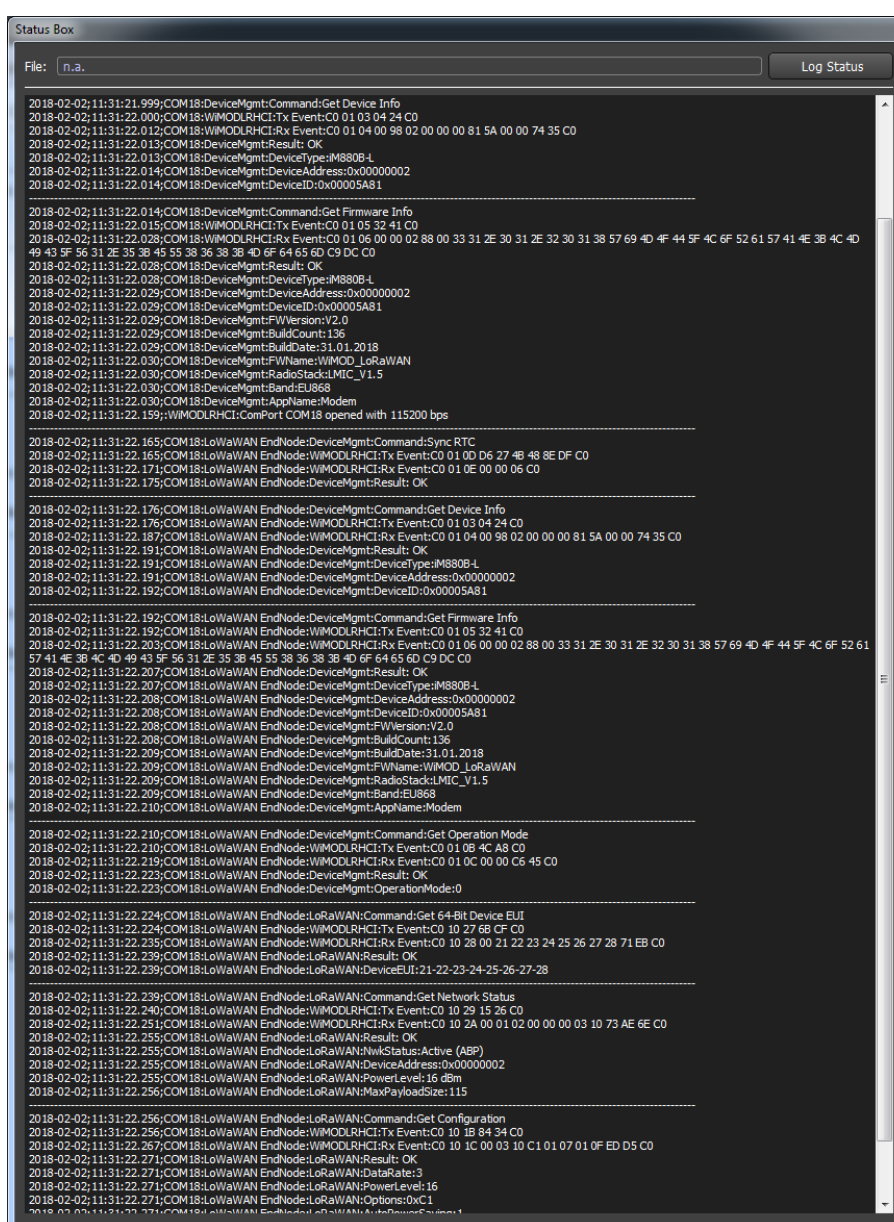


Figure 2-3: Status Box (left side)

The **Log Status** feature allows to save every status line into a human readable ASCII text file. The created text file can be opened with any kind of text editor.

## 2.5 Firmware Update

The EndNode Studio includes the possibility to update the firmware of the connected device through the **File** menu.



Figure 2-4: Firmware Update - Menu

The bootloader activation is implemented in different ways and explained during the update procedure. Latest WiMOD LoRaWAN EndNode firmware includes a HCI command which activates the bootloader fully automatically from the firmware itself. Older firmware or customer firmware might require a signal on the dedicated bootloader signal pin of the radio module. For USB-Sticks and modules on the Demoboard this signal can be controlled via FTDI. Beside the VCP driver an additional D2XX driver must be installed for proper operation.

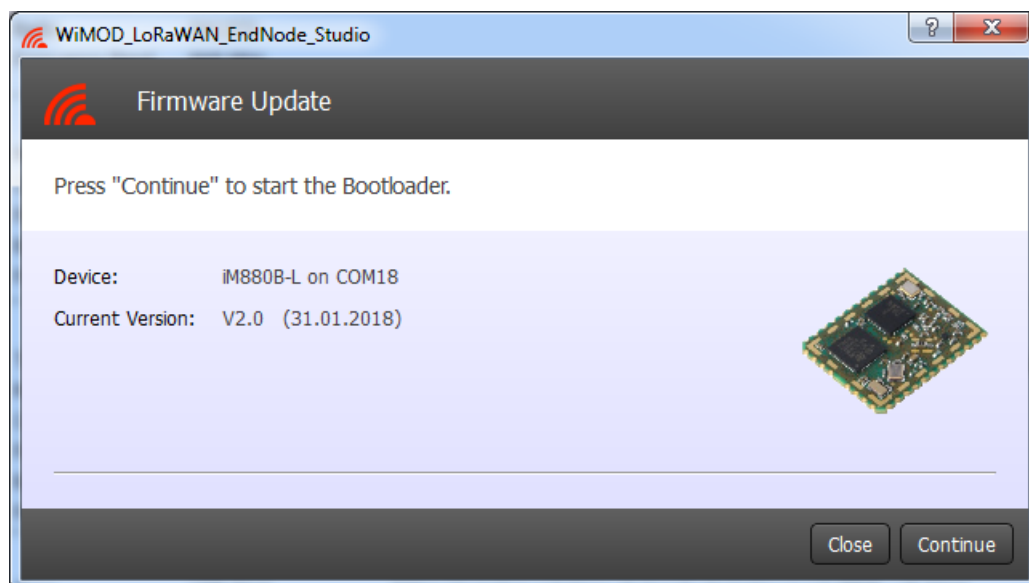


Figure 2-5: Firmware Update

## 3. Feature Section

The software features are presented on the following main sections (left navigation bar):

- LoRaWAN Services
- Device Management
- Extras

### 3.1 LoRaWAN Services

This section includes the following pages:

- LoRaWAN Services
- LoRaWAN Configuration

#### 3.1.1 LoRaWAN Services

This page provides the activation of an end-device and the exchange of LoRaWAN radio packets with a LoRaWAN server over the air.

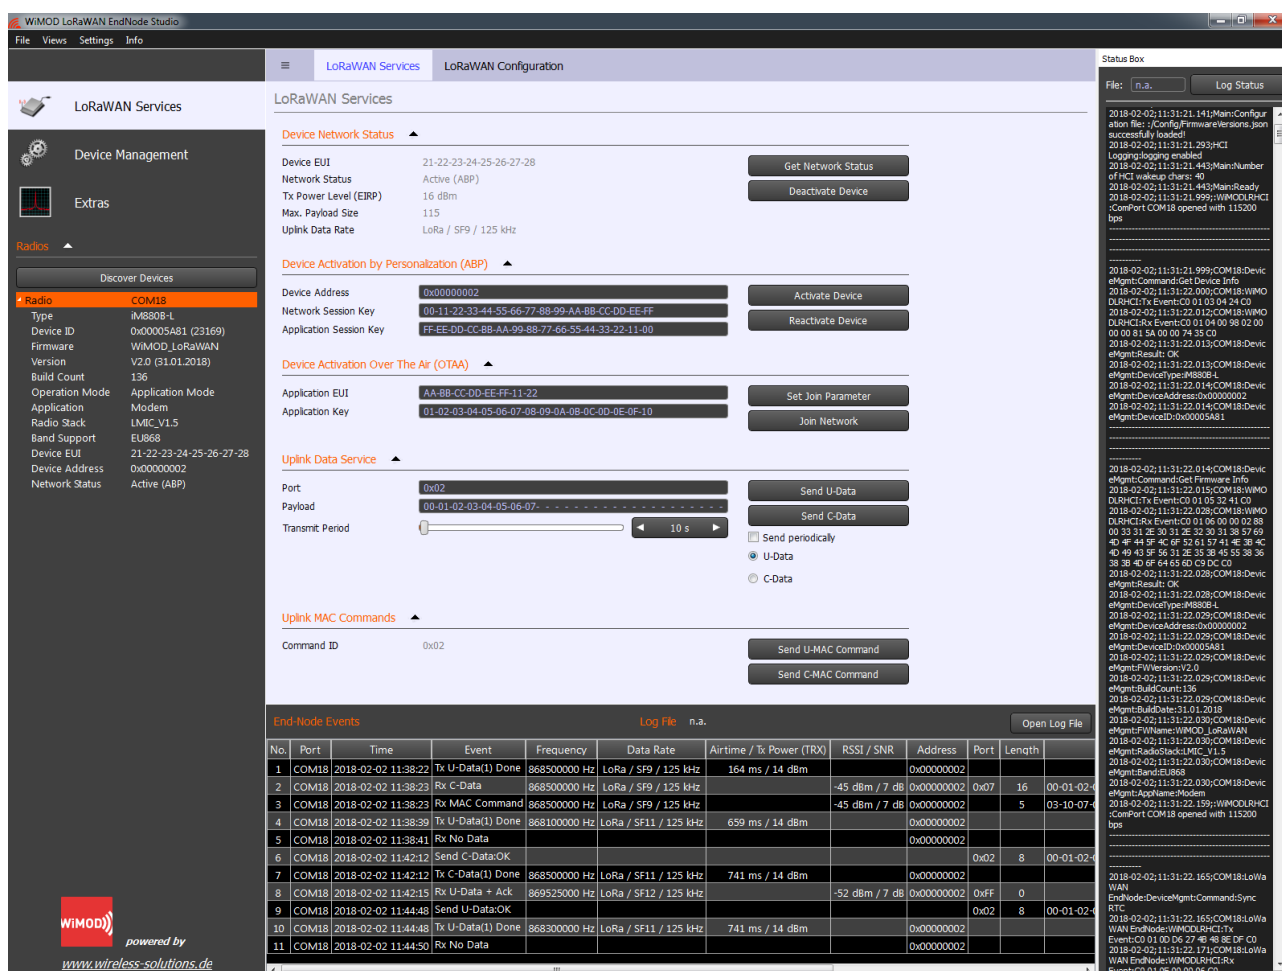


Figure 3-1: LoRaWAN Services

## Device Network Status

The section displays the current activation status and Device-EUI of a connected device and allows to deactivate a device if required. Additionally the current transmission power level, maximum payload size and uplink data rate are shown.

Note: The Device-EUI can be configured through section **Extras/Custom Settings**.

## Device Activation

An end-device must be activated before it can communicate with a server. The following two activation options can be used:

- **Direct Device Activation by Personalization (ABP)**  
Enter the three required parameters Device Address (32-bit), Network Session Key (128-bit) and Application Session Key (128-bit) into the fields, press **Activate Device** to write them into the connected end-device.
- The **Reactivate Device** option allows the activation of the end-device using the previously stored ABP parameters.
- **Device Activation Over The Air (OTAA)**  
The second method uses the join procedure over the air. Enter the two parameters Application EUI (64-bit) and Application Key (128-bit), press **Set Join Parameter** to write the parameters into the connected end-device. Finally press **Join Network** to start the join procedure and observe the **Status Box** and **Event Table**.

## Uplink Services

Within this section it is possible to send unconfirmed or confirmed data to the server. Enter a LoRa WAN Port and some test payload into the fields and press the appropriate button to send a packet.

It offers also the possibility to initiate a periodically transmission of radio packets.

## Uplink MAC Commands

This feature allows the transmission of a single MAC command to the server. For this, the desired command ID and its parameters should be entered. An unconfirmed or confirmed empty data frame is sent, depending on the selected button.

## End-Node Events

Several radio events which are exposed via HCI are printed into the **Status Box** and in addition into the **Event Table** for observation and logging purpose.

## 3.1.2 LoRaWAN Configuration

This page provides a comfortable way to change some radio stack parameters.

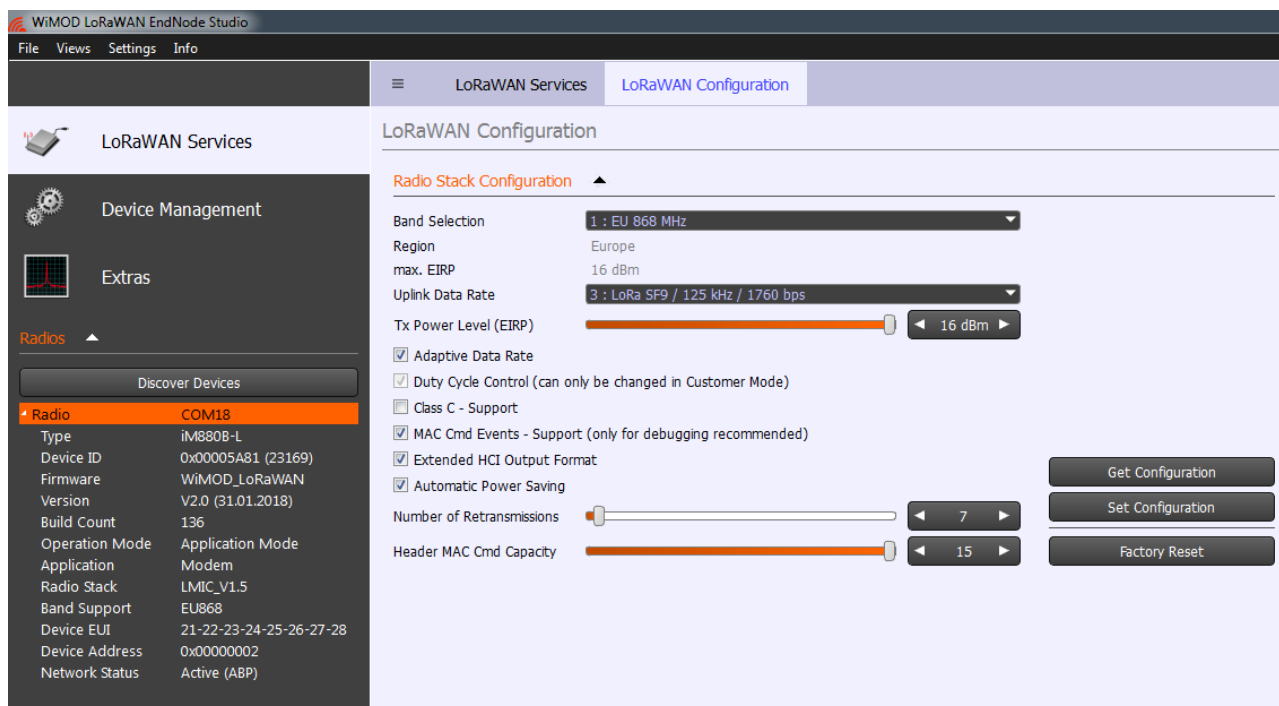


Figure 3-2: Radio Stack Configuration

### Band Selection

This value is used to configure the radio band. In case a change in the radio band is requested, the end-device will be automatically deactivated.

The **Region** and **max. EIRP** will be updated accordingly.

Note that the maximum supported EIRP depends on the radio module and the configured RF Gain value (for more information refer to [2]).

### Uplink Data Rate

This value is used for unconfirmed and confirmed LoRa WAN data packets. The selected data rate will be used in the next uplink and might be changed automatically by the end-device and/or server too.

### Tx Power Level (EIRP)

This value is used in the next uplink and may change automatically.

### Adaptive Data Rate

This feature can be enabled to allow an automatic data rate adaption from server side (see LoRa WAN server/Data service).



## Duty Cycle Control

This value is used to enable/disable the duty cycle control (for test purposes). Note that this parameter can only be modified if the **Customer Mode** is selected on the end-device.

## Class C - Support

This feature enables the Class C operation mode.

## MAC Events - Support

This feature enables the visualization of the MAC command, which are piggybacked in the options field of the header, in the Event Table.

## Extended HCI Output - Support

This feature enables the extended RF packet output format, where the Tx/Rx channel info is attached (see [1]).

## Automatic Power Saving

This feature can be enabled to activate the automatic power saving mode. The module will enter a low power mode whenever possible.

## Number of Retransmissions

This value sets the maximum number of retries for a reliable radio packet where an acknowledgment is not received.

## Header MAC Cmd Capacity

This value is used to configure the maximum length of the MAC commands to be piggybacked in the header within the next uplink. If the length of the reply exceeds this value, they will be sent immediately using the port 0.

## Factory Reset

This services can be used to restore all settings which have been configured during production at IMST. It also includes the Device-EUI, Application-EUI and the LoRaWAN security keys.

Note: Modules which have been updated from WiMOD-LR Base firmware to WiMOD LoRaWAN EndNode firmware do not support this feature.


## 3.2 Device Management

This section includes the following pages:

- Device Information
- Real Time Clock
- Info

### 3.2.1 Device Information

This page provides some basic information about the connected end-device and its firmware.

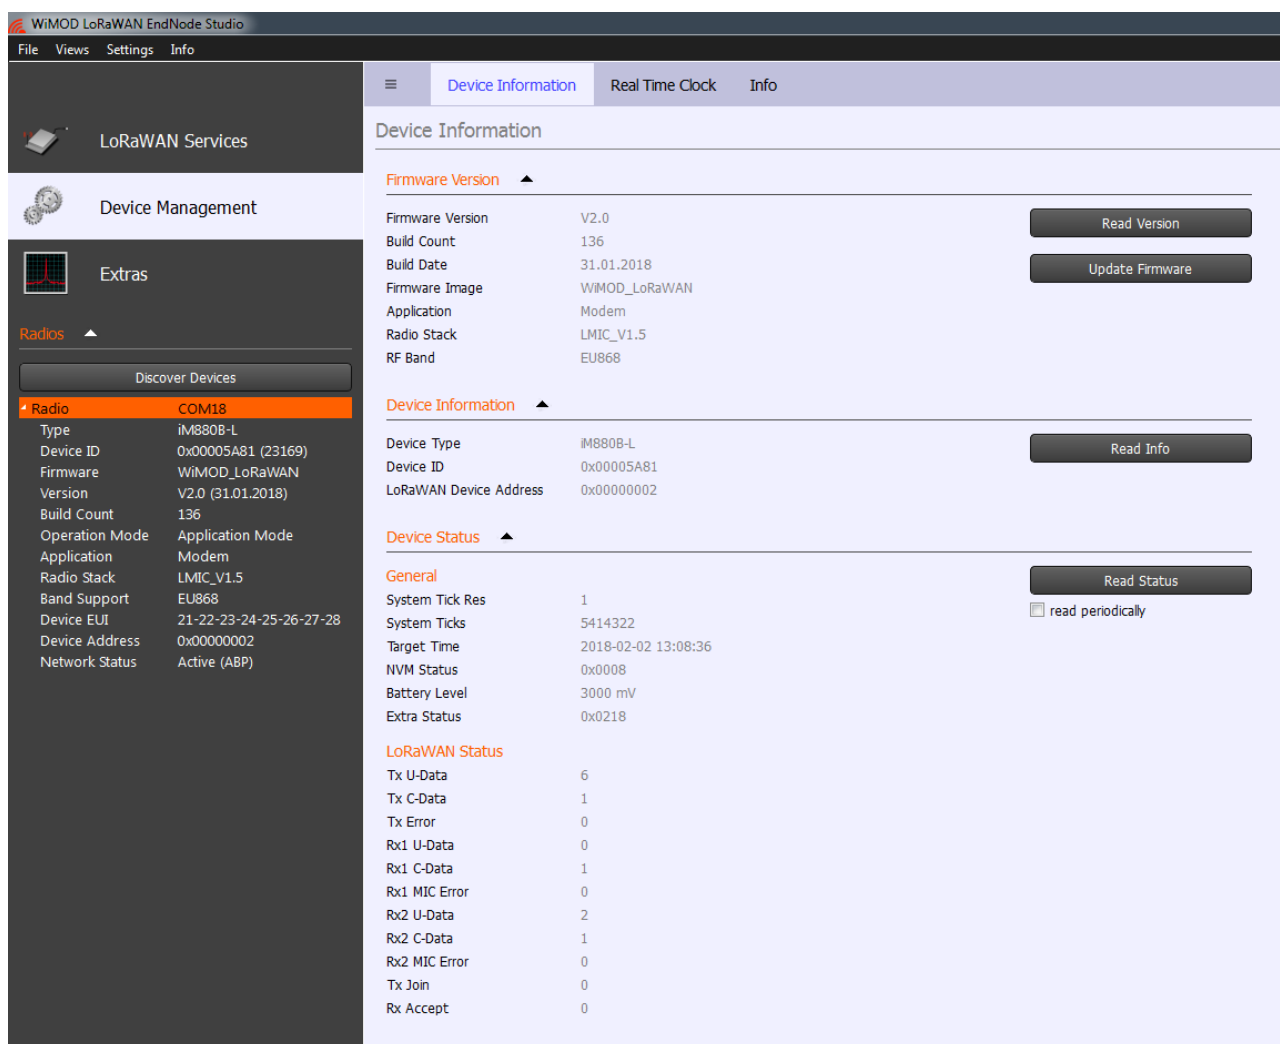

The screenshot shows the WiMOD LoRaWAN EndNode Studio interface. The sidebar on the left contains 'LoRaWAN Services', 'Device Management', and 'Extras'. Under 'Device Management', there is a 'Discover Devices' button and a list of devices. The 'Radio COM18' device is selected, showing details like Type (iM880B-L), Device ID (0x00005A81), Firmware (WiMOD\_LoRaWAN V2.0), Build Count (136), Operation Mode (Application Mode), Application (Modem), Radio Stack (LMIC\_V1.5), Band Support (EU868), Device EUI (21-22-23-24-25-26-27-28), Device Address (0x00000002), and Network Status (Active (ABP)).

The main area displays the 'Device Information' page, which is divided into several sections:

- Firmware Version**: Shows Firmware Version (V2.0), Build Count (136), Build Date (31.01.2018), Firmware Image (WiMOD\_LoRaWAN), Application (Modem), Radio Stack (LMIC\_V1.5), and RF Band (EU868). Buttons for 'Read Version' and 'Update Firmware' are present.
- Device Information**: Shows Device Type (iM880B-L), Device ID (0x00005A81), and LoRaWAN Device Address (0x00000002). A 'Read Info' button is present.
- Device Status**: Includes a 'General' section with System Tick Res (1), System Ticks (5414322), Target Time (2018-02-02 13:08:36), NVM Status (0x0008), Battery Level (3000 mV), and Extra Status (0x0218). A 'Read Status' button and a checkbox for 'read periodically' are also present.
- LoRaWAN Status**: Shows Tx U-Data (6), Tx C-Data (1), Tx Error (0), Rx1 U-Data (0), Rx1 C-Data (1), Rx1 MIC Error (0), Rx2 U-Data (2), Rx2 C-Data (1), Rx2 MIC Error (0), Tx Join (0), and Rx Accept (0).

Figure 3-3: Device Information



## 3.2.2 Real Time Clock

This page allows synchronization and read-out of the embedded Real Time Clock of the connected device.

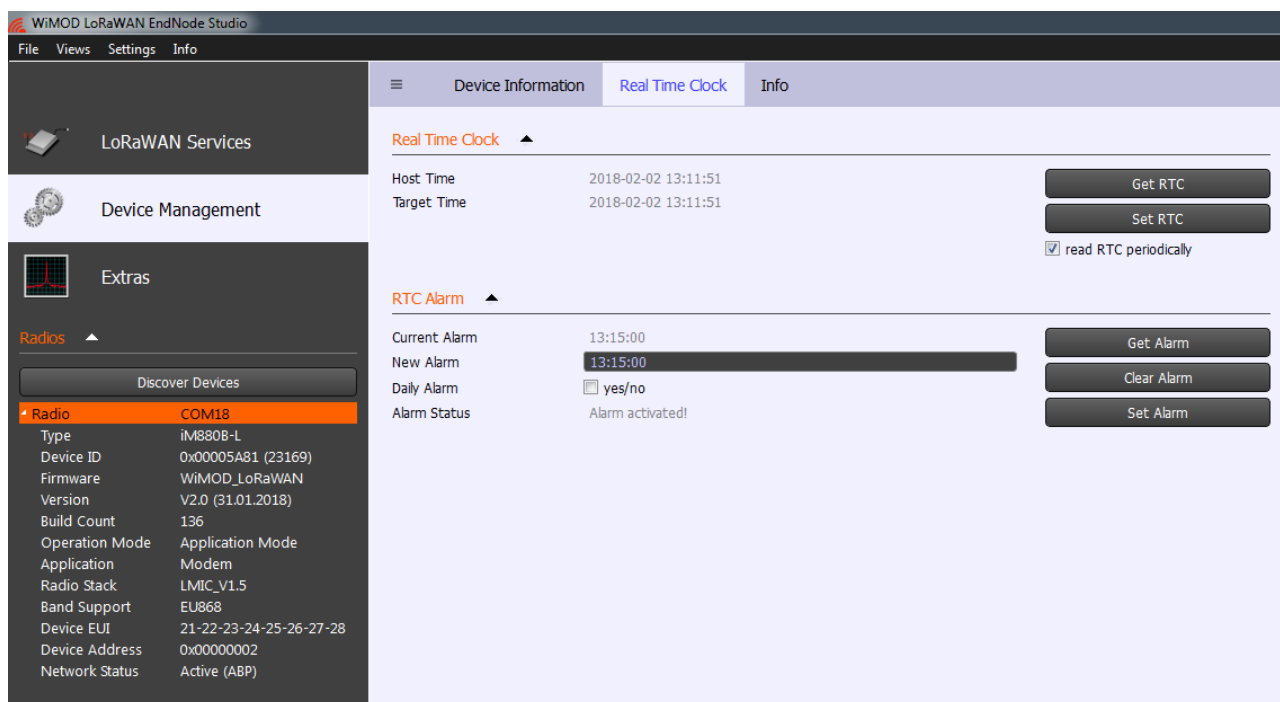


Figure 3-4: Real Time Clock

### RTC Alarm

This services provides access to the RTC alarm handling:

- Set Alarm: sets a daily or single RTC alarm
- Clear Alarm: clears a pending RTC alarm
- The following window will be opened to indicate a RTC alarm event.


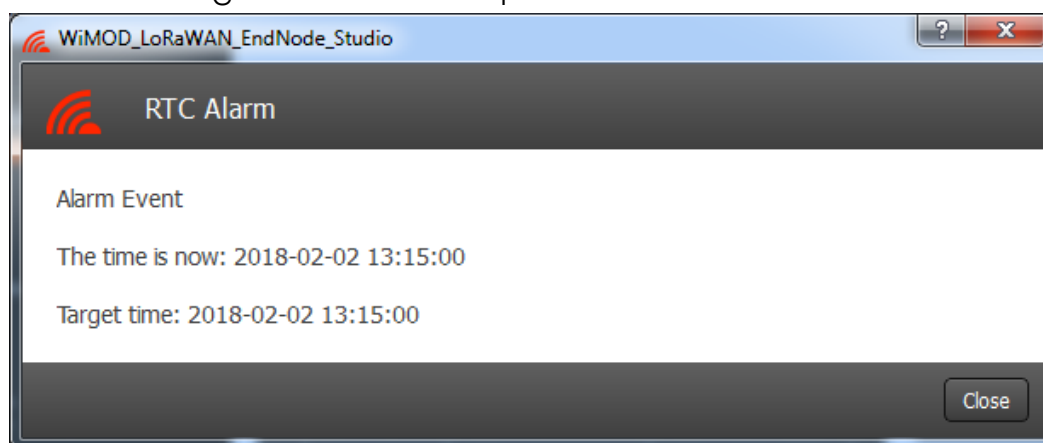


Figure 3-5: Real Time Clock Alarm Indication

### 3.2.3 Info

This page shows general information, such as additional notes and a list of the supported radio devices.

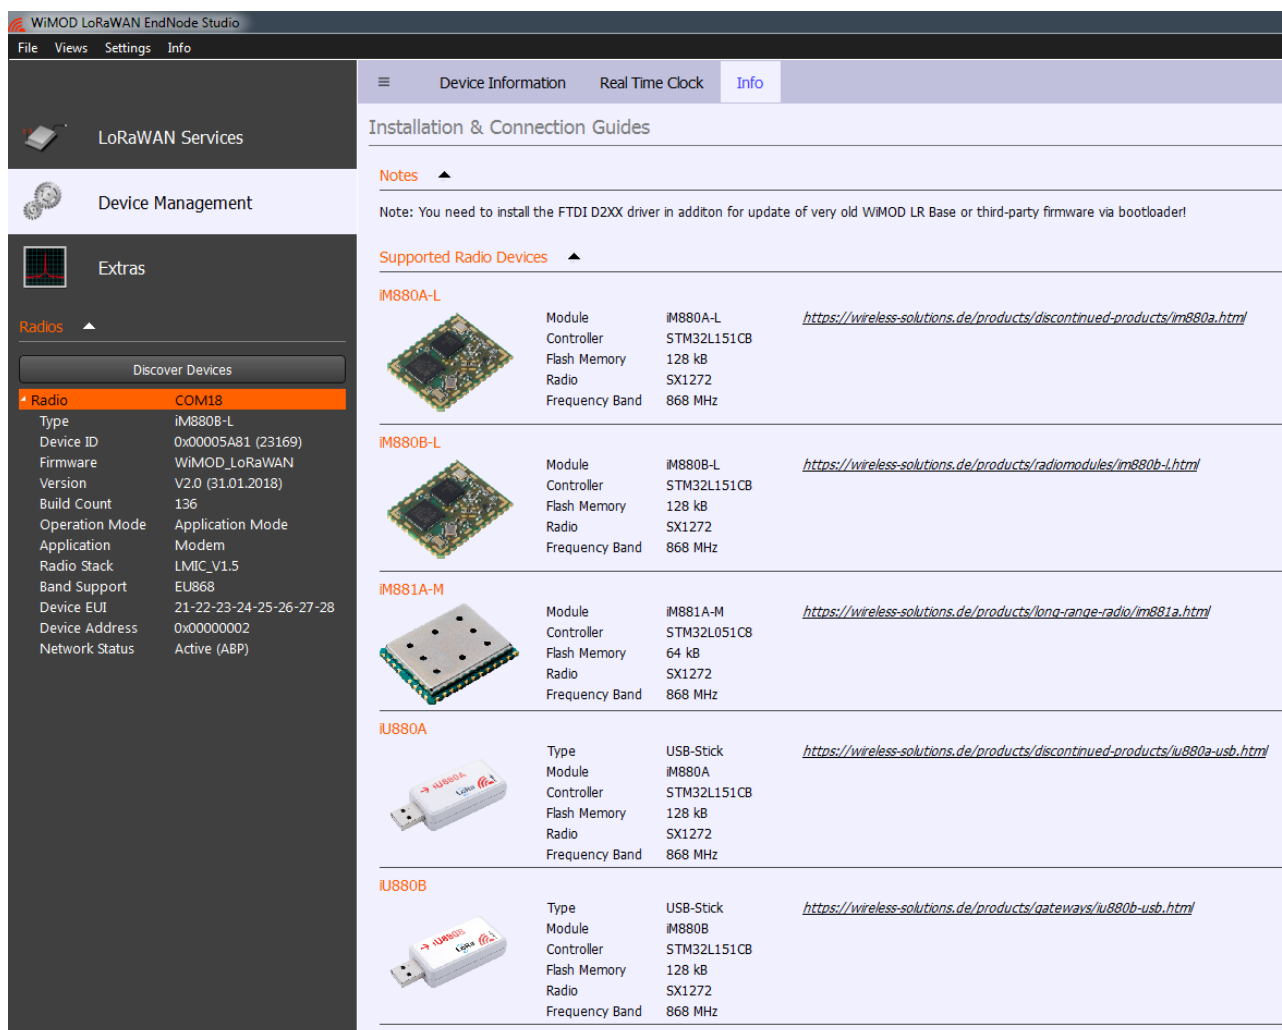

**WiMOD LoRaWAN EndNode Studio**

File Views Settings Info

**LoRaWAN Services**

**Device Management**

**Extras**

**Radios** ▲

Discover Devices

**Radio** **COM18**

Type	IM880B-L
Device ID	0x0005A81 (23169)
Firmware	WiMOD_LoRaWAN
Version	V2.0 (31.01.2018)
Build Count	136
Operation Mode	Application Mode
Application	Modem
Radio Stack	LMIC_V1.5
Band Support	EU868
Device EUI	21-22-23-24-25-26-27-28
Device Address	0x00000002
Network Status	Active (ABP)

**Installation & Connection Guides**

**Notes** ▲

Note: You need to install the FTDI D2XX driver in addition for update of very old WiMOD LR Base or third-party firmware via bootloader!

**Supported Radio Devices** ▲






Image	Module	Controller	Flash Memory	Radio	Frequency Band	Link
	IM880A-L	STM32L151CB	128 kB	SX1272	868 MHz	<a href="https://wireless-solutions.de/products/discontinued-products/im880a.html">https://wireless-solutions.de/products/discontinued-products/im880a.html</a>
	IM880B-L	STM32L151CB	128 kB	SX1272	868 MHz	<a href="https://wireless-solutions.de/products/radiomodules/im880b-l.html">https://wireless-solutions.de/products/radiomodules/im880b-l.html</a>
	IM881A-M	STM32L051CB	64 kB	SX1272	868 MHz	<a href="https://wireless-solutions.de/products/long-range-radio/im881a.html">https://wireless-solutions.de/products/long-range-radio/im881a.html</a>
	IU880A	STM32L151CB	128 kB	SX1272	868 MHz	<a href="https://wireless-solutions.de/products/discontinued-products/iu880a-usb.html">https://wireless-solutions.de/products/discontinued-products/iu880a-usb.html</a>
	IU880B	STM32L151CB	128 kB	SX1272	868 MHz	<a href="https://wireless-solutions.de/products/gateways/iu880b-usb.html">https://wireless-solutions.de/products/gateways/iu880b-usb.html</a>

Figure 3-6: Info

## 3.3 Extras

This section includes the following pages:


- HCI Logging
- Customer Settings
- Studio Settings

### 3.3.1 HCI Logging

#### HCI Logging

This feature enables the display of the SLIP encoded/decoded streams of all HCI messages, which will be listed in the **HCI Messages Table**.

Note that the **Status Box** contains more details about their interpretation.

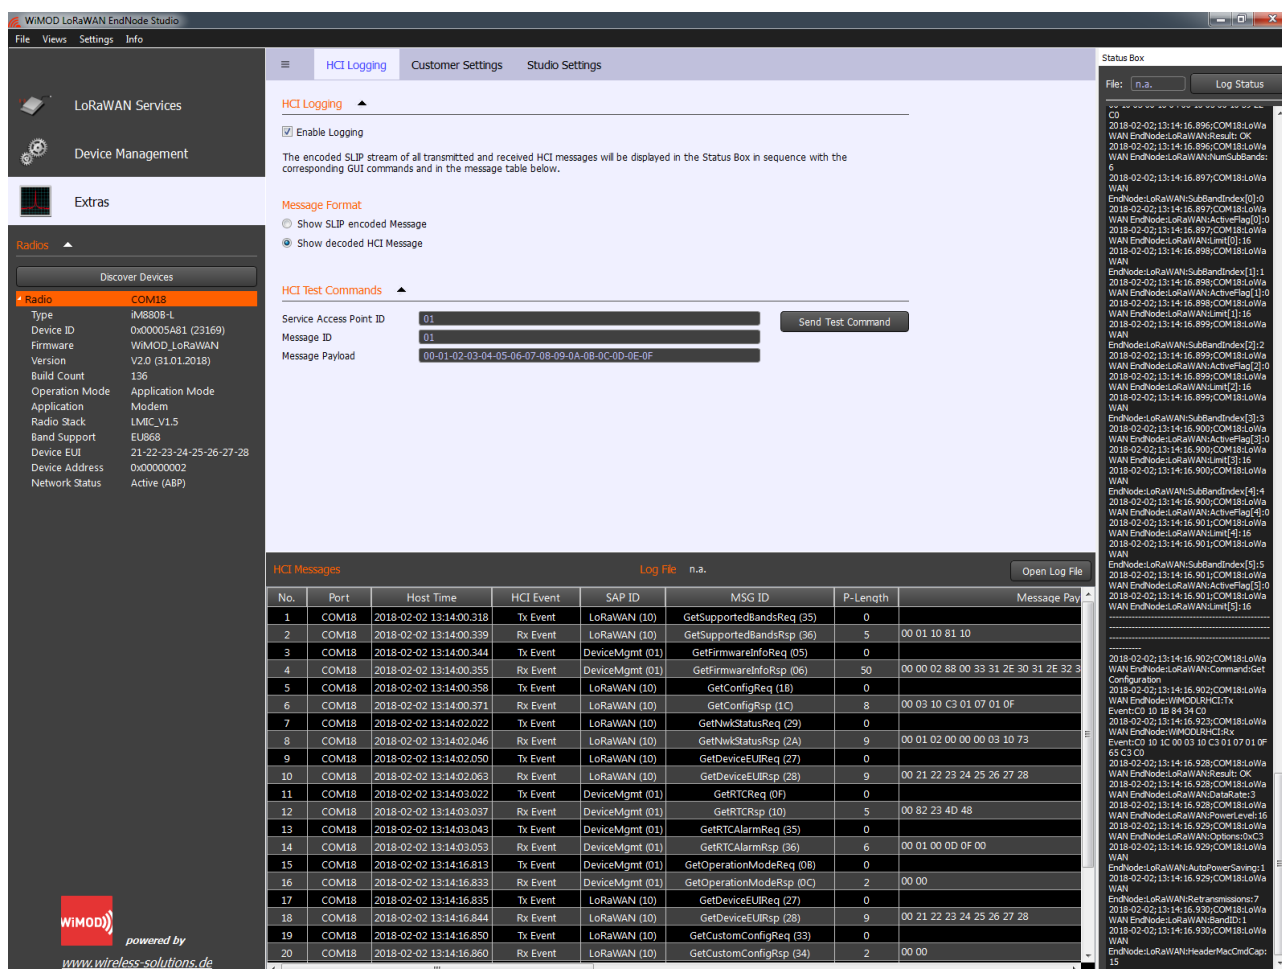

The screenshot shows the WiMOD LoRaWAN EndNode Studio interface. The 'Extras' section is active, displaying the 'HCI Logging' settings. The 'HCI Test Commands' section has input fields for 'Service Access Point ID' (01), 'Message ID' (01), and 'Message Payload' (00-01-02-03-04-05-06-07-08-09-0A-0B-0C-0D-0E-0F), with a 'Send Test Command' button. The 'HCI Messages' table displays a list of messages with columns: No., Port, Host Time, HCI Event, SAP ID, MSG ID, P-Length, and Message Pay. The 'Status Box' on the right shows a log of messages.

No.	Port	Host Time	HCI Event	SAP ID	MSG ID	P-Length	Message Pay
1	COM18	2018-02-02 13:14:00.318	Tx Event	LoRaWAN (10)	GetSupportedBandsReq (35)	0	
2	COM18	2018-02-02 13:14:00.339	Rx Event	LoRaWAN (10)	GetSupportedBandsRsp (36)	5	00 01 10 81 10
3	COM18	2018-02-02 13:14:00.344	Tx Event	DeviceMgmt (01)	GetFirmwareInfoReq (05)	0	
4	COM18	2018-02-02 13:14:00.355	Rx Event	DeviceMgmt (01)	GetFirmwareInfoRsp (06)	50	00 00 02 88 00 33 31 2E 30 31 2E 32 33
5	COM18	2018-02-02 13:14:00.358	Tx Event	LoRaWAN (10)	GetConfigReq (18)	0	
6	COM18	2018-02-02 13:14:00.371	Rx Event	LoRaWAN (10)	GetConfigRsp (1C)	8	00 03 10 C3 01 07 01 0F
7	COM18	2018-02-02 13:14:02.022	Tx Event	LoRaWAN (10)	GetNwkStatusReq (29)	0	
8	COM18	2018-02-02 13:14:02.046	Rx Event	LoRaWAN (10)	GetNwkStatusRsp (2A)	9	00 01 02 00 00 00 03 10 73
9	COM18	2018-02-02 13:14:02.050	Tx Event	LoRaWAN (10)	GetDeviceEUIReq (27)	0	
10	COM18	2018-02-02 13:14:02.063	Rx Event	LoRaWAN (10)	GetDeviceEUIRsp (28)	9	00 21 22 23 24 25 26 27 28
11	COM18	2018-02-02 13:14:03.022	Tx Event	DeviceMgmt (01)	GetRTCTReq (0F)	0	
12	COM18	2018-02-02 13:14:03.037	Rx Event	DeviceMgmt (01)	GetRTCTRsp (10)	5	00 82 23 40 48
13	COM18	2018-02-02 13:14:03.043	Tx Event	DeviceMgmt (01)	GetRTCTAlarmReq (35)	0	
14	COM18	2018-02-02 13:14:03.053	Rx Event	DeviceMgmt (01)	GetRTCTAlarmRsp (36)	6	00 01 00 0D 0F 00
15	COM18	2018-02-02 13:14:16.813	Tx Event	DeviceMgmt (01)	GetOperationModeReq (08)	0	
16	COM18	2018-02-02 13:14:16.833	Rx Event	DeviceMgmt (01)	GetOperationModeRsp (0C)	2	00 00
17	COM18	2018-02-02 13:14:16.835	Tx Event	LoRaWAN (10)	GetDeviceEUIReq (27)	0	
18	COM18	2018-02-02 13:14:16.844	Rx Event	LoRaWAN (10)	GetDeviceEUIRsp (28)	9	00 21 22 23 24 25 26 27 28
19	COM18	2018-02-02 13:14:16.850	Tx Event	LoRaWAN (10)	GetCustomConfigReq (33)	0	
20	COM18	2018-02-02 13:14:16.860	Rx Event	LoRaWAN (10)	GetCustomConfigRsp (34)	2	00 00

Figure 3-7: HCI Logging

#### HCI Test Commands

This feature allows to send an user defined HCI message.

Note that any triggered response messages will be handled as unexpected by the GUI.

### 3.3.2 Customer Settings

This page provides the access to the Operation Mode, the Device EUI configuration and other customer settings.

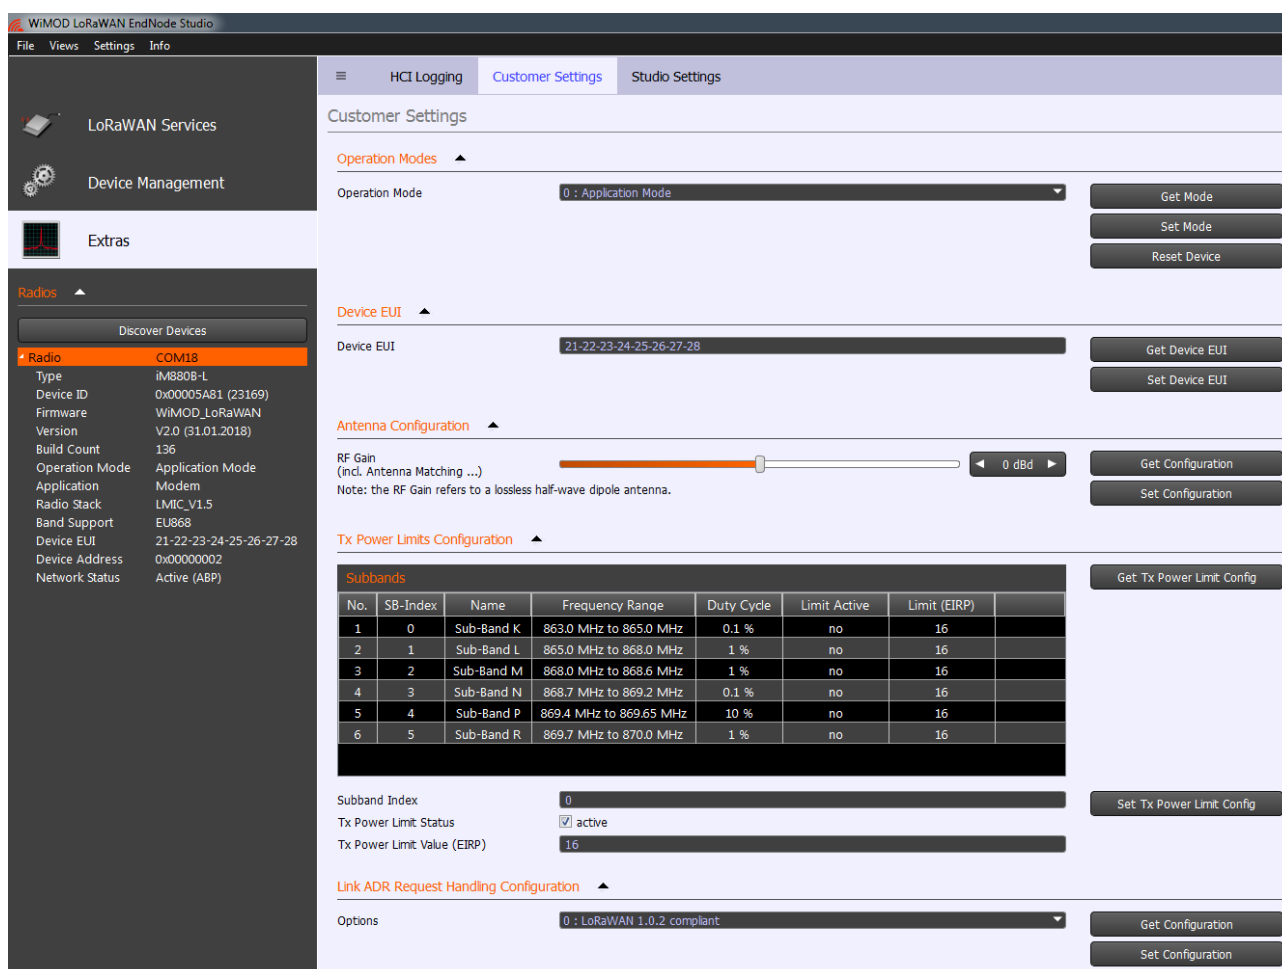


Figure 3-8: Factory Settings

#### Operation Modes

This section allows to switch between the Application and Customer Mode. Additionally, an option to reset the device is included.

#### Device EUI

This feature offers the configuration of a new Device-EUI. For this, the **Customer Mode** is required.

#### Antenna Configuration

This feature allows the configuration of the RF Gain for the final product to define an offset to be used to compensate possible transmission losses/gains in the final product, including circuit, matching and antennas (for more information refer to [2]). For this, the **Customer Mode** is required.

## Tx Power Limits Configuration

This feature can be used to configure a transmit power limit for each sub-band included in the operating ISM band. If the status flag is activated, the configured transmit power limit value will be applied, otherwise the default values will be used (for more information refer to [1]). For this, the **Customer Mode** is required.

Note that this feature is only available for the regions supporting different RF sub-bands definitions (see corresponding regional HCI specification, e.g. [3]).

## Link ADR Request Handling Configuration

This feature allows different configurations to handle the LinkADRReq MAC Command sent by the LoRaWAN network server. This setting takes place if the Adaptive Data Rate feature is disabled (for more information refer to [2]). For this, the **Customer Mode** is required.

### 3.3.3 Studio Settings

This page offers some settings related to the WiMOD LoRaWAN EndNode Studio, e.g. the configuration of the Virtual Com Port Drivers and Extra COM Ports.

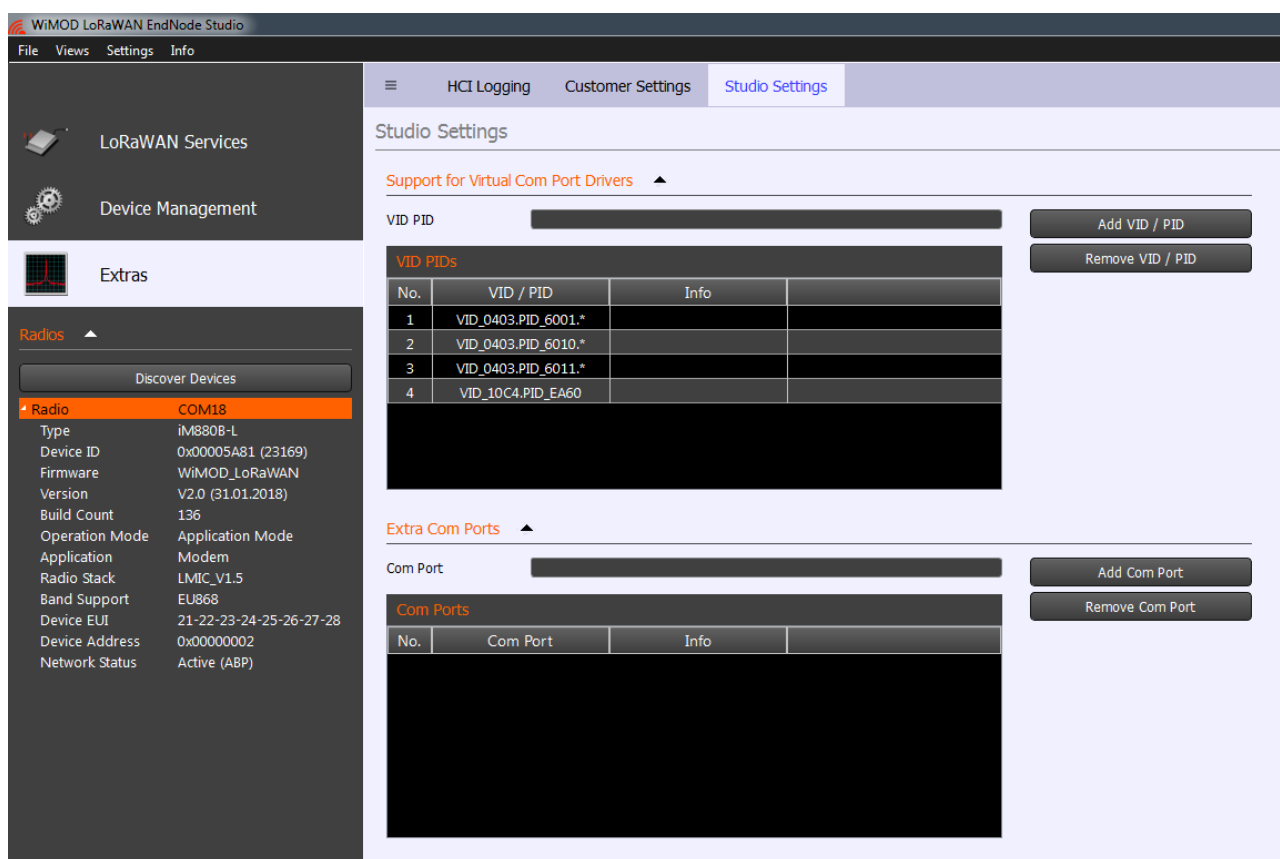


Figure 3-9: Studio Settings

## 4. Appendix

### 4.1 List of Abbreviations

ABP	Activation by Personilization
FSK	Frequency Shift Keying Modulation
FW	Firmware
GUI	Graphical User Interface
HCI	Host Controller Interface
HW	Hardware
LoRa	Long Range
OTAA	Over The Air Activation
RF	Radio Frequency
RSSI	Received Signal Strength Indicator
RTC	Real Time Clock
SNR	Signal to Noise
SW	Software
UART	Universal Asynchronous Receiver/Transmitter
WAN	Wide Area Network

### 4.2 List of Figures

Figure 1-1: Overview	4
Figure 1-2: USB Driver Installation	5
Figure 2-1: Navigation Bars	7
Figure 2-2: Connected iM880B on serial com port	8
Figure 2-3: Status Box (left side)	9
Figure 2-4: Firmware Update - Menu	10
Figure 2-5: Firmware Update	10
Figure 3-1: LoRaWAN Services	11
Figure 3-2: Radio Stack Configuration	13

Figure 3-3: Device Information	15
Figure 3-4: Real Time Clock	16
Figure 3-5: Real Time Clock Alarm Indication	16
Figure 3-6: Info	17
Figure 3-7: HCI Logging	18
Figure 3-8: Factory Settings	19
Figure 3-9: Studio Settings	20

## 4.3 References

- [1] WiMOD\_LoRaWAN\_EndNode\_Modem\_HCI\_Spec.pdf
- [2] WiMOD\_LoRaWAN\_EndNode\_Modem\_Feature\_Spec.pdf
- [3] WiMOD\_LoRaWAN\_EndNode\_Modem\_EU868\_HCI\_Spec.pdf

## 5.Regulatory Compliance Information

The use of radio frequencies is limited by national regulations. The radio module has been designed to comply with the European Union's R&TTE (Radio & Telecommunications Terminal Equipment) directive 1999/5/EC and can be used free of charge within the European Union. Nevertheless, restrictions in terms of maximum allowed RF power or duty cycle may apply.

The radio module has been designed to be embedded into other products (referred as "final products"). According to the R&TTE directive, the declaration of compliance with essential requirements of the R&TTE directive is within the responsibility of the manufacturer of the final product. A declaration of conformity for the radio module is available from IMST GmbH on request.

The applicable regulation requirements are subject to change. IMST GmbH does not take any responsibility for the correctness and accuracy of the aforementioned information. National laws and regulations, as well as their interpretation can vary with the country. In case of uncertainty, it is recommended to contact either IMST's accredited Test Center or to consult the local authorities of the relevant countries.



## 6. Important Notice

### 6.1 Disclaimer

IMST GmbH points out that all information in this document is given on an “as is” basis. No guarantee, neither explicit nor implicit is given for the correctness at the time of publication. IMST GmbH reserves all rights to make corrections, modifications, enhancements, and other changes to its products and services at any time and to discontinue any product or service without prior notice. It is recommended for customers to refer to the latest relevant information before placing orders and to verify that such information is current and complete. All products are sold and delivered subject to “General Terms and Conditions” of IMST GmbH, supplied at the time of order acknowledgment.

IMST GmbH assumes no liability for the use of its products and does not grant any licenses for its patent rights or for any other of its intellectual property rights or third-party rights. It is the customer's duty to bear responsibility for compliance of systems or units in which products from IMST GmbH are integrated with applicable legal regulations. Customers should provide adequate design and operating safeguards to minimize the risks associated with customer products and applications. The products are not approved for use in life supporting systems or other systems whose malfunction could result in personal injury to the user. Customers using the products within such applications do so at their own risk.

Any reproduction of information in datasheets of IMST GmbH is permissible only if reproduction is without alteration and is accompanied by all given associated warranties, conditions, limitations, and notices. Any resale of IMST GmbH products or services with statements different from or beyond the parameters stated by IMST GmbH for that product/solution or service is not allowed and voids all express and any implied warranties. The limitations on liability in favor of IMST GmbH shall also affect its employees, executive personnel and bodies in the same way. IMST GmbH is not responsible or liable for any such wrong statements.

Copyright © 2018, IMST GmbH

### 6.2 Contact Information

IMST GmbH

Carl-Friedrich-Gauss-Str. 2-4  
47475 Kamp-Lintfort  
Germany

**T** +49 2842 981 0

**F** +49 2842 981 299

**E** [wimod@imst.de](mailto:wimod@imst.de)

**I** [www.wireless-solutions.de](http://www.wireless-solutions.de)