

**HPU Core 3.3 (Rev 1) - User Guide**

Author: Francesco Diotalevi, Maurizio Casti

Company: Istituto Italiano di Tecnologia

History:			
Revision	Date	Author	Description
1.0	September 19 <sup>th</sup> 2016	Francesco Diotalevi, Maurizio Casti	First Release (DRAFT)
1.1	June 14 <sup>th</sup> 2017	Francesco Diotalevi	Modified the AXIstream module and added some debug ports. Added Reset_DMA_stream bit into CTRL_REG.
2.0	November 15 <sup>th</sup> 2017	Francesco Diotalevi	Bug fixed for the HSSAER Channel Enable. Added AUX Threshold Error register and AUX Rx Counter registers. Some Fixes in HDL code.
2.1	June 15 <sup>th</sup> 2018	Francesco Diotalevi	Enlarged to 24 the SSAER data transfer. Different header coding.
3.0	August 9 <sup>th</sup> 2018	Maurizio Casti	Added the SpiNNlink interface capability
3.1	August 24 <sup>th</sup> 2018	Maurizio Casti	Added the START/STOP and Data Mask Feature to SpiNNlink
3.2	October 24 <sup>th</sup> 2018	Francesco Diotalevi	Splitted FlushFifos in FlushRXFifo and FlushTXFifos. Modifications in axistream module to premature end a burst transfer. Added register that counts data in AXI stream bus. Modified reset value of RX PAER Configuration register (RX_PAER_CFNG_REG). Enlarged DMA length field to 16 bits.
3.3	October 30 <sup>th</sup> 2018	Francesco Diotalevi	DMA register (DMA_REG) has thi bit 0 fixed to 0. It can be written only with even values.

## Contents

<b>HPU CORE 3.3 (REV 1) - USER GUIDE .....</b>	<b>1</b>
<b>GLOSSARY .....</b>	<b>4</b>
<b>HPUCORE IMPLEMENTATION PARAMETERS.....</b>	<b>4</b>
<b>INTRODUCTION .....</b>	<b>5</b>
<b>1 HPUCORE BLOCK DIAGRAM .....</b>	<b>7</b>
1.1 UNDERSTANDING THE HPU CORE IN SYNTHACTAER APPLICATION.....	8
<b>2 HPUCORE INTERNAL REGISTERS.....</b>	<b>10</b>
2.1 CONTROL REGISTER (CTRL_REG) .....	12
2.2 LOOPBACK LR CONFIGURATION REGISTER (LPBK_LR_CNFG_REG).....	14
2.3 RX DATA BUFFER REGISTER (RXDATA_REG).....	15
2.4 RX TIME BUFFER REGISTER (RXTIME_REG).....	16
2.5 TX DATA BUFFER REGISTER (TXDATA_REG) .....	18
2.6 DMA REGISTER (DMA_REG) .....	19
2.7 RAW STATUS REGISTER (STAT_RAW_REG) .....	20
2.8 IRQ REGISTER (IRQ_REG).....	23
2.9 MASK REGISTER (MSK_REG) .....	24
2.10 WRAPPING TIMEStAMP REGISTER (WRAPTimeStAMP_REG) .....	25
2.11 HSSAER STATUS REGISTER (HSSAER_STAT_REG) .....	26
2.12 HSSAER RX ERROR REGISTER (HSSAER_RX_ERR_REG).....	27
2.13 HSSAER RX MSK REGISTER (HSSAER_RX_MSK_REG) .....	28
2.14 RX CONTROL REGISTER (RX_CTRL_REG).....	29
2.15 TX CONTROL REGISTER (TX_CTRL_REG).....	30
2.16 RX PAER CONFIGURATION REGISTER (RX_PAER_CFNG_REG).....	31
2.17 TX PAER CONFIGURATION REGISTER (TX_PAER_CFNG_REG) .....	32
2.18 IP CONFIGURATION REGISTER (IP_CFNG_REG) .....	33
2.19 FIFO THRESHOLD REGISTER (FIFO_THRSH_REG) .....	34
2.20 LOOPBACK AUX CONFIGURATION (LPBK_AUX_CNFG_REG).....	35
2.21 IDENTIFICATION REGISTER (ID_REG) .....	36
2.22 AUXILIARY RX CONTROL REGISTER (AUX_RX_CTRL_REG) .....	37
2.23 HSSAER AUX RX ERROR REGISTER (HSSAER_AUX_RX_ERR_REG) .....	38
2.24 HSSAER AUX RX MSK REGISTER (HSSAER_AUX_RX_MSK_REG).....	39
2.25 AUX ERROR COUNTER THRESHOLD REGISTER (HSSAER_AUX_RX_ERR_THR_REG) .....	40
2.26 AUX ERROR COUNTER CH0 REGISTER (HSSAER_AUX_RX_ERR_CH0_REG).....	41
2.27 AUX ERROR COUNTER CH1 REGISTER (HSSAER_AUX_RX_ERR_CH1_REG).....	42
2.28 AUX ERROR COUNTER CH2 REGISTER (HSSAER_AUX_RX_ERR_CH2_REG).....	43
2.29 AUX ERROR COUNTER CH3 REGISTER (HSSAER_AUX_RX_ERR_CH3_REG).....	44
2.30 SPINNLINK START COMMAND KEY (SPNN_START_KEY_REG) .....	45
2.31 SPINNLINK STOP COMMAND KEY (SPNN_STOP_KEY_REG) .....	46
2.32 SPINNLINK TX DATA MASK (SPNN_TX_MASK_REG) .....	47

2.33	SPINNLINK RX DATA MASK (SPNN_RX_MASK_REG) .....	48
2.34	TLAST TIMEOUT REGISTER (TLASTTO_REG) .....	49
2.35	TLAST COUNTER REGISTER (TLASTCNT_REG) .....	50
2.36	TDATA COUNTER REGISTER (TDATAACNT_REG) .....	51
<b>3</b>	<b>REFERENCES .....</b>	<b>52</b>
<b>4</b>	<b>APPENDIXES .....</b>	<b>53</b>

## Glossary

Acronym	Meaning
TBD	To Be Defined
TBT	To Be Tested

## HPUCore implementation parameters

The generic parameters used in SynthTactAER design are shown in Table 1

Parameter name	Display name	Description	Def.
<b>C_RX_HAS_PAER</b>	PAER RX Interface	If true (checked) the RX PAER interface is exposed	True
<b>C_TX_HAS_PAER</b>	PAER TX Interface	If true (checked) the TX PAER interface is exposed	True
<b>C_PAER_DSIZE</b>	PAER Data Width	Size of PAER address	24
<b>C_RX_HAS_HSSAER</b>	HSSAER RX Interface	If true (checked) the RX HSSAER interface is exposed	True
<b>C_RX_HSSAER_N_CHAN</b>	HSSAER RX Channels	The number of RX HSSAER channels [1-4]	3
<b>C_TX_HAS_HSSAER</b>	HSSAER TX Interface	If true (checked) the TX HSSAER interface is exposed	True
<b>C_TX_HSSAER_N_CHAN</b>	HSSAER TX Channels	The number of TX HSSAER channels [1-4]	3
<b>C_RX_HAS_GTP</b>	GTP RX Interface	If true (checked) the RX GTP interface is exposed	False
<b>C_TX_HAS_GTP</b>	GTP TX Interface	If true (checked) the TX GTP interface is exposed	False
<b>C_RX_HAS_SPNNLNK</b>	SpiNNlink RX Interface	If true (checked) the RX SpiNNlink interface is exposed	True
<b>C_TX_HAS_SPNNLNK</b>	SpiNNlink TX Interface	If true (checked) the TX SpiNNlink interface is exposed	True
<b>C_PSPNNLNK_WIDTH</b>	SpiNNaker Parallel Data Width	Size of SpiNNaker parallel data interface	32
<b>C_DEBUG</b>	Debug Ports	If true (checked) the debug ports are exposed	False
<b>C_S_AXI_ADDR_WIDTH</b>	AXI4 Lite Slave Address width	Size of AXI4 Lite Address bus	8
<b>C_S_AXI_DATA_WIDTH</b>	AXI4 Lite Slave Data width	Size of AXI4 Lite Data bus	32

**Table 1 HPUCore implementation parameters in SynthTactAER design**

## Introduction

The Head Processor Unit Core (HPU Core) is an AXI peripheral used to manage different input AER or SpiNNlink streaming and transfer the acquired data into memory through DMA interface or by reading registers with Host CPU. It is also Transmission capable, and permits to send AER or SpiNNlink streaming to external devices.

It has an Axi4 lite bus I/f for writing/reading internal registers and delivers two AXI stream bus @ 32bit (Read and Write lanes). It can be configured with up to 4 input channels and 1 output channel, and each channel can manage PAER, SAER, GTP (TBT), SpiNNlink flows.

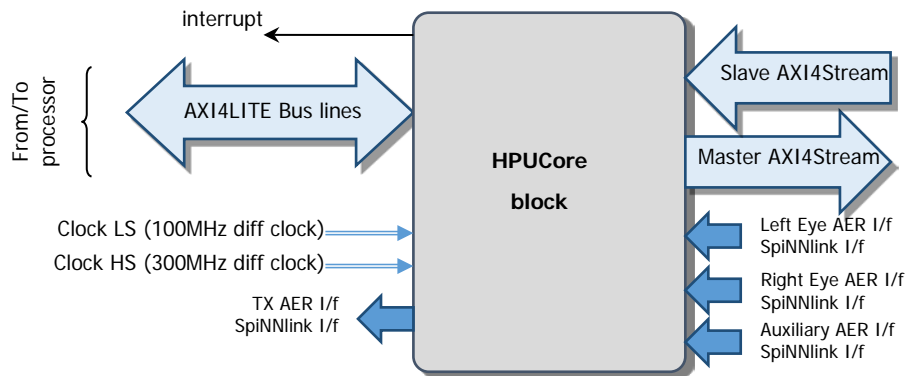


Figure 1 HPUCore block

a list of the ports and their description is shown in Table 2.

Comment	Port name	Width	Dir	Description
Interrupt	Interrupt	1	O	Level interrupt active high signal
AXI4 Lite Bus lines	S_AXI_ACLK	1	I	AXI Clock, System clock line <i>IT MUST BE THE SAME AS HSSAER_CikLS_p</i>
	S_AXI_ARESETN	1	I	AXI Reset active low line
	S_AXI_AWADDR	32	I	AXI Write address
	S_AXI_AWVALID	1	I	Write address valid
	S_AXI_WDATA	32	I	Write data
	S_AXI_WSTRB	4	I	Write strobes
	S_AXI_WVALID	1	I	Write valid
	S_AXI_BREADY	1	I	Response ready
	S_AXI_ARADDR	32	I	Read address
	S_AXI_ARVALID	1	I	Read address valid
	S_AXI_RREADY	1	I	Read ready
	S_AXI_ARREADY	1	O	Read address ready
	S_AXI_RDATA	32	O	Read data
	S_AXI_RRESP	2	O	Read response
	S_AXI_RVALID	1	O	Read valid
	S_AXI_WREADY	1	O	Write ready
	S_AXI_BRESP	2	O	Write response
	S_AXI_BVALID	1	O	Write response valid
	S_AXI_AWREADY	1	O	Write address ready

Comment	Port name	Width	Dir	Description
RX Left Eye I/F	LRx_PAER_Addr	18	I	Parallel AER address
	LRx_PAER_Req	1	I	Parallel AER request
	LRx_PAER_Ack	1	O	Parallel AER acknowledge
	LRx_HSSAER	4	I	4 channels High Speed Serial AER signal
	LRx_data_2of7_from_spinnaker	7	I	SpiNNlink input data line
	LRx_ack_to_spinnaker_o	1	O	SpiNNlink acknowledge
RX Right Eye I/F	RRx_PAER_Addr	18	I	Parallel AER address
	RRx_PAER_Req	1	I	Parallel AER request
	RRx_PAER_Ack	1	O	Parallel AER acknowledge
	RRx_HSSAER	4	I	4 channels High Speed Serial AER signal
	RRx_data_2of7_from_spinnaker	7	I	SpiNNlink input data line
	RRx_ack_to_spinnaker_o	1	O	SpiNNlink acknowledge
RX Auxiliary I/F	AuxRx_PAER_Addr	18	I	Parallel AER address
	AuxRx_PAER_Req	1	I	Parallel AER request
	AuxRx_PAER_Ack	1	O	Parallel AER acknowledge
	AuxRx_HSSAER	4	I	4 channels High Speed Serial AER signal
	AuxRx_data_2of7_from_spinnaker	7	I	SpiNNlink input data line
	AuxRx_ack_to_spinnaker_o	1	O	SpiNNlink acknowledge
Slave Axis stream I/f	S_AXIS_TREADY	1	O	Tready
	S_AXIS_TDATA	32	I	Data bus
	S_AXIS_TLAST	1	I	Last signal
	S_AXIS_TVALID	1	I	Valid signal
Master Axis stream I/f	M_AXIS_TREADY	1	I	Tready
	M_AXIS_TDATA	32	O	Data bus
	M_AXIS_TLAST	1	O	Last signal
	M_AXIS_TVALID	1	O	Valid signal
TX I/F	Tx_PAER_Addr	18	O	Parallel AER address
	AuxRx_PAER_Req	1	O	Parallel AER request
	AuxRx_PAER_Ack	1	I	Parallel AER acknowledge
	AuxRx_HSSAER	3	O	3 channels High Speed Serial AER signal
System signals	HSSAER_ClkLS_p, HSSAER_ClkLS_n	2	I	Differential 100MHz clock <i>IT MUST BE THE SAME AS S_AXI_CLK</i>
	HSSAER_ClkHS_p, HSSAER_ClkHS_n	2	I	Differential 300MHz clock
	nSyncReset	1	I	Active low Synchronous reset
	DefLocFarLpbk	1	I	Default Far loopback value
	DefLocNearLpbk	1	I	Default Near loopback value

Table 2 HPUCore interface signals description

# 1 HPUCore Block Diagram

The HPUCore Block diagram is shown in Figure 2.

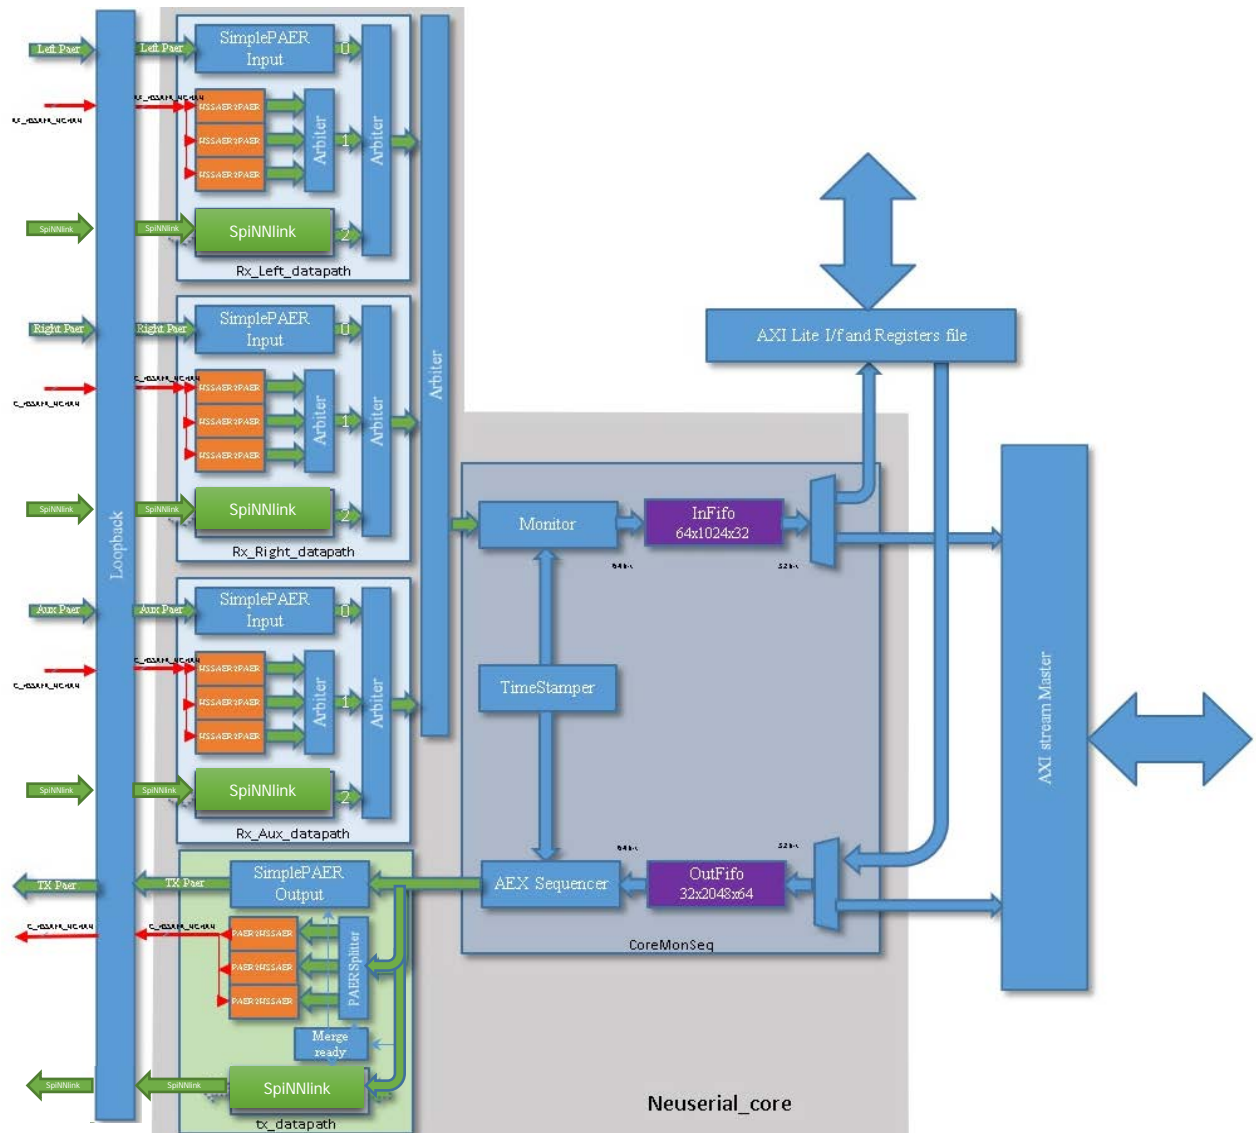



Figure 2 HPUCore architecture

## 1.1 Understanding the HPU Core in SynthTactAER Application

The HPU Core can have until 3 different AER generator connected to him. In the HPU Core implementation for SynthTactAER design the AER sources are configured as Serial AER lines. The Serial AER lines are LVDS signals and each source has 3 different channels. The 3 interfaces are:

- Left ATIS camera,
- Right ATIS camera and
- AUXiliary interface.

The HPU Core deserializes the data coming from its channels and fill a FIFO with data and associated time stamp.

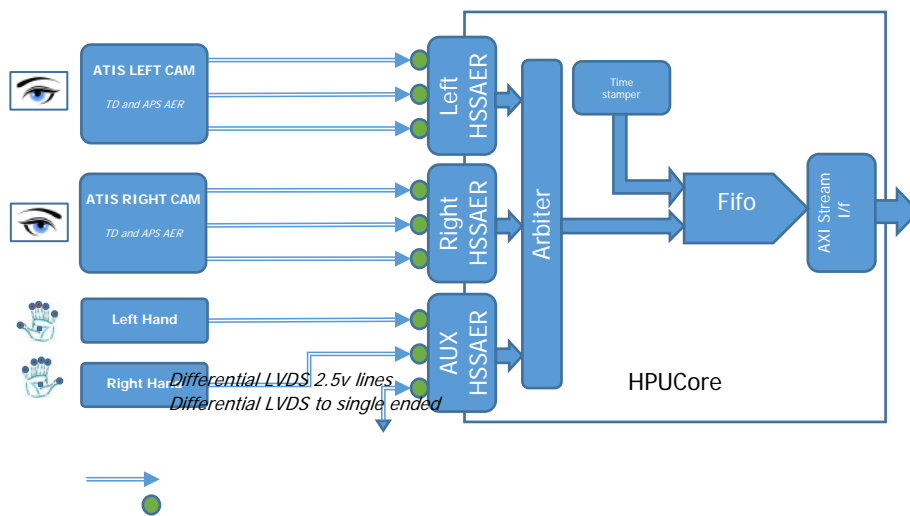

**Figure 3 Simplified block diagram of the HPUCore.**

**Table 3 Meaning of Timestamp and Data values.**

**TIMESTAMP (31 downto 0) when CTRLReg.15 is '0'**

TIME ID (Reserved) 31 downto 24	Payload 23 downto 0
10000000	Time value

**TIMESTAMP (31 downto 0) when CTRLReg.15 is '1'**

Payload 31 downto 0
Time value

*Note: One-unit difference into Time value means 80ns.*

According to the AERSensorsMap.xlsx (svn version r12867) the data are packed as in the tables that follow:

**DATA (31 downto 0) coming from Left/Right eyes channels**

31	30	29	28	27	26	25	24	Payload 23 downto 0
0	Reserved				0	0	0	Data



## DATA (31 downto 0) coming from Aux channel

31	30	29	28	27	26	25	24	Payload 23 downto 0			
0	Reserved				Copy of data[21:19]			Data			

The AXI stream I/f is connected to a DMA used to perform slave to memory transfers.

Reading from `/dev/iit-hpu` we obtain couples of 32bit wide data. The first data is a timestamp while the second one is the data associated to the timestamp.

The Table 3 shows the meaning of both timestamp and data values.

Then a typical acquired sequence is as in the table below:

Example of acquired sequence	Events Notes: <i>All events in the table come from Left Eye through SAER interface</i>
T: 0x80FFFD1D --> TD: 0x040132E5	The payload for TD event is 0x132E5
T: 0x80FFFD9E --> TD: 0x040132E6	The payload for TD event is 0x132E6
T: 0x80FFFE1F --> TD: 0x040132E7	The payload for TD event is 0x132E7
T: 0x80FFFEA0 --> TD: 0x040132E8	The payload for TD event is 0x132E8
T: 0x80FFFE8B --> APS: 0x0405C600	This is a APS event because of the 18 <sup>th</sup> bit is high. The payload for APS event is 0x1C600
T: 0x80FFFF21 --> TD: 0x040132E9	The payload for TD event is 0x132E9
T: 0x80FFFA2 --> TD: 0x040132EA	The payload for TD event is 0x132EA
T: 0x80000023 --> TD: 0x040132EB	Here the time stamp has wrapped incrementing the wrap value. The payload for TD event is 0x132EB

## 2 HPUCore internal registers

In this Section a detailed view of the registers internal to the HPUCore module is given.

The HPUCore block has an Axi Light Slave interface [1] to interface the registers with the hosting processor.

AXI is part of ARM AMBA, a family of micro controller buses first introduced in 1996. The first version of AXI was first included in AMBA 3.0, released in 2003. AMBA 4.0, released in 2010, includes the second version of AXI, AXI4. There are three types of AXI4 interfaces:

- AXI4—for high-performance memory-mapped requirements.
- AXI4-Lite—for simple, low-throughput memory-mapped communication (for example, to and from control and status registers).
- AXI4-Stream—for high-speed streaming data.

Xilinx introduced these interfaces in the ISE® Design Suite, release 12.3.

In the following the complete list of accessible HPUCore registers.

#	Offset	Mnemonic	Description	Type	Reset Value
0	0x00	<a href="#">CTRL_REG</a>	Control register	R/W	0x00000000
1	0x04	<a href="#">LPBK_LR_CNFG_REG</a>	Loopback LR Configuration register	R/W	0x00000000
2	0x08	<a href="#">RXData_REG</a>	RX Data Buffer	R/O	0x00000000
3	0x0C	<a href="#">RXTime_REG</a>	RX Time Buffer	R/O	0x00000000
4	0x10	<a href="#">TXData_REG</a>	TX Data Buffer	R/W	0x00000000
5	0x14	<a href="#">DMA_BREG</a>	DMA Burst Register	R/W	0x00000000
6	0x18	<a href="#">STAT_RAW_REG</a>	Status RAW register	R/O	0x00000000
7	0x1C	<a href="#">IRQ_REG</a>	IRQ register	R/C	0x00000000
8	0x20	<a href="#">MSK_REG</a>	Mask register for the IRQ_REG register	R/W	0x00000000
10	0x28	<a href="#">WRAPTimeStamp_REG</a>	Wrapping TimeStamp Register	R/C	0x00000000
13	0x34	<a href="#">HSSAER_STAT</a>	HSSAER status register	R/O	0x00000000
14	0x38	<a href="#">HSSAER_RX_ERR</a>	HSSAER RX Error register	R/O	0x00000000
15	0x3C	<a href="#">HSSAER_RX_MSK</a>	HSSAER RX Mask register	R/W	0x00000000
16	0x40	<a href="#">RX_CTRL_REG</a>	RX Control register	R/W	0x00000000
17	0x44	<a href="#">TX_CTRL_REG</a>	TX Control register	R/W	0x00000000
18	0x48	<a href="#">RX_PAER_CNFG_REG</a>	RX PAER configuration register	R/W	0x01010100
19	0x4C	<a href="#">TX_PAER_CNFG_REG</a>	TX PAER Configuration register	R/W	0x00000000
20	0x50	<a href="#">IP_CNFG_REG</a>	IP implemented configuration register	R/O	0x0000????
21	0x54	<a href="#">FIFO_THRS_REG</a>	FIFO threshold value register	R/W	0x00000000
22	0x58	<a href="#">LPBK_AUX_CNFG_REG</a>	Loopback AUX Configuration register	R/W	0x00000000
23	0x5C	<a href="#">ID_REG</a>	ID Register	R/O	0x48505520
24	0x60	<a href="#">AUX_CTRL_REG</a>	Auxiliary interface Control register	R/W	0x00000000
25	0x64	<a href="#">HSSAER_AUX_RX_ERR</a>	HSSAER AUX RX Error register	R/O	0x00000000
26	0x68	<a href="#">HSSAER_AUX_RX_MSK</a>	HSSAER AUX RX Mask register	R/W	0x00000000
27	0x6C	<a href="#">HSSAER_AUX_RX_ERR_THR_REG</a>	HSSAER AUX RX error threshold	R/W	0x10101010

#	Offset	Mnemonic	Description	Type	Reset Value
			register		
28	0x70	<a href="#">HSSAER_AUX_RX_ERR_CH0_REG</a>	HSSAER AUX RX error counter register for Channel 0	R/C	0x00000000
29	0x74	<a href="#">HSSAER_AUX_RX_ERR_CH1_REG</a>	HSSAER AUX RX error counter register for Channel 1	R/C	0x00000000
30	0x78	<a href="#">HSSAER_AUX_RX_ERR_CH2_REG</a>	HSSAER AUX RX error counter register for Channel 2	R/C	0x00000000
31	0x7C	<a href="#">HSSAER_AUX_RX_ERR_CH3_REG</a>	HSSAER AUX RX error counter register for Channel 3	R/C	0x00000000
32	0x80	<a href="#">SPNN_START_KEY_REG</a>	SpiNNlink Start command key	R/W	0x80000000
33	0x84	<a href="#">SPNN_STOP_KEY_REG</a>	SpiNNlink Stop command key	R/W	0x40000000
34	0x88	<a href="#">SPNN_TX_MASK_REG</a>	SpiNNlink TX Data Mask	R/W	0x00FFFFFF
35	0x8C	<a href="#">SPNN_RX_MASK_REG</a>	SpiNNlink Stop command key	R/W	0x00FFFFFF
36	0xA0	<a href="#">TlastTimeOut_REG</a>	TLAST Time Out register	R/W	0x00010000
37	0xA4	<a href="#">TlastConter_REG</a>	TLAST Counter register	R/O	0x00000000
38	0xA8	<a href="#">TdataCounter_REG</a>	TData Counter register	R/O	0x00000000
39	0xAC	Reserved			

## 2.1 Control register (CTRL\_REG)

This register is used to control the behaviour of the HPUCore block.

CTRL_REG (HPUCore Base + 0x00)										Reset Value: 0x00000000					
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
LocFar RPAER Lpbk	LocFar PAERL pbk	LocFar RSAER Lpbk	LocFar LSAER Lpbk	LocFar AuxPA ERLpbk	LocFar AuxSA ERLpbk	Loc Near Lpbk	Remote Lpbk	LocFar SpinnL pbkSel (1)	LocFar SpinnL pbkSel (0)	Reserved					
r/w	r/w	r/w	r/w	r/w	r/w	r/w	r/w	r/w	r/w						
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Full Time stamp	Reserved		Reset DMA stream	Reserved		AXIS stream Latency	Flush TX FIFO	AuxRxPaer FIFO Flush	RRxPaer FIFO Flush	LRxPaer FIFO Flush	Flush RX FIFO	Reserved	EN INT	EN DMA	DMA running
r/w							s/c	s/c	s/c	s/c	s/c		r/w	r/w	ro

- Local Far PAER/SAER Loopback enabling (for further details, look at the RTL code)
- Local Near Loopback enabling (for further details, look at the RTL code)
- Remote Loopback enabling (for further details, look at the RTL code)
- Local Far SpinnLink Loopback selection (for further details, look at the RTL code):
  - When '00' No Loopback
  - When '01' Tx is sent to "LEFT" Rx
  - When '10' Tx is sent to "RIGHT" Rx
  - When '11' Tx is sent to "AUX" Rx
- DMA running
  - When '1' it shows that the DMA transfer is on going
  - When '0' it shows that no DMA transfer is active
- EN DMA is the DMA interface Enable
  - When '1' the DMA I/f is enabled
  - When '0' the DMA I/f is disabled
- Enable Interrupt
  - When '1' the Interrupt is enabled
  - When '0' the Interrupt never rises up
- FlushRXFIFO
  - When set to '1' the RX FIFO of the HPUCore is flushed. This bit is automatically cleared.
- LRxPAER Flush FIFOS
  - When set to '1' the FIFOS of the Left PAER interface are flushed. This bit is automatically cleared.
- RRxPAER Flush FIFOS
  - When set to '1' the FIFOS of the Right PAER interface are flushed. This bit is automatically cleared.
- AuxRxPAER Flush FIFOS
  - When set to '1' the FIFOS of the AUX PAER interface are flushed. This bit is automatically cleared.
- FlushTXFIFO
  - When set to '1' the TX FIFO of the HPUCore is flushed. This bit is automatically cleared.
- AXISStream Latency
  - When set to 1 the HPU based on ??? can have a maximum latency
- Reset DMA stream
  - By writing this bit to 1, the AXI stream master module is put in reset.
- Fulltimestamp
  - When set to '1' the Timestamp is 32 bit wide, when set to '0' the time stamp is 24 bit wide and the higher part is equal to 0x80.



## 2.2 Loopback LR Configuration register (LPBK\_LR\_CNFG\_REG)


This register contains the configuration for Left and Right loopback.

LPBK_LR_CNFG_REG (HPUCore Base + 0x04)												Reset Value: 0x00000000			
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Right RX chan 3 LPB cnfg				Right RX chan 2 LPB cnfg				Right RX chan 1 LPB cnfg				Right RX chan 0 LPB cnfg			
r/w				r/w				r/w				r/w			
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Left RX chan 3 LPB cnfg				Left RX chan 2 LPB cnfg				Left RX chan 1 LPB cnfg				Left RX chan 0 LPB cnfg			
r/w				r/w				r/w				r/w			

The register is used in debug to test the connection. For further details, look at the RTL code.

## 2.3 RX Data Buffer register (RXDATA\_REG)

This register contains the data (read from the INFIFO) coming from the selected by N\_MuxAddr NMC. The format of the register is depicted into the figure below.

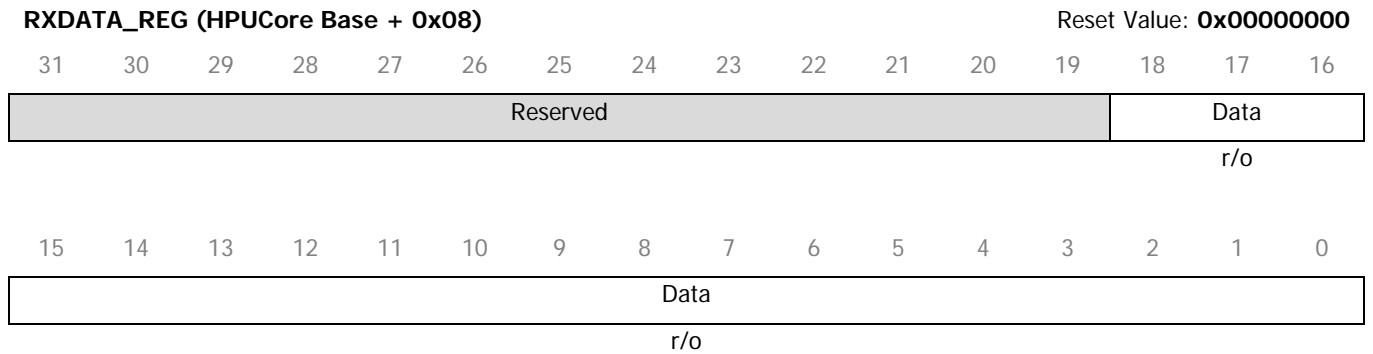

The meaning of this register is as explained in Table 3.

**NOTE: The reading of this register must follow the reading of the RX Time Buffer register (RXTIME\_REG).**

## 2.4 RX Time Buffer register (RXTIME\_REG)

This register contains the time stamp associated to the received data (see Loopback LR Configuration register (LPBK\_LR\_CNFG\_REG))


This register contains the configuration for Left and Right loopback.

LPBK_LR_CNFG_REG (HPUCore Base + 0x04)												Reset Value: 0x00000000			
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Right RX chan 3 LPB cnfg				Right RX chan 2 LPB cnfg				Right RX chan 1 LPB cnfg				Right RX chan 0 LPB cnfg			
r/w				r/w				r/w				r/w			
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Left RX chan 3 LPB cnfg				Left RX chan 2 LPB cnfg				Left RX chan 1 LPB cnfg				Left RX chan 0 LPB cnfg			
r/w				r/w				r/w				r/w			

The register is used in debug to test the connection. For further details, look at the RTL code.




RX Data Buffer register (RXDATA\_REG)) from the INFIFO.

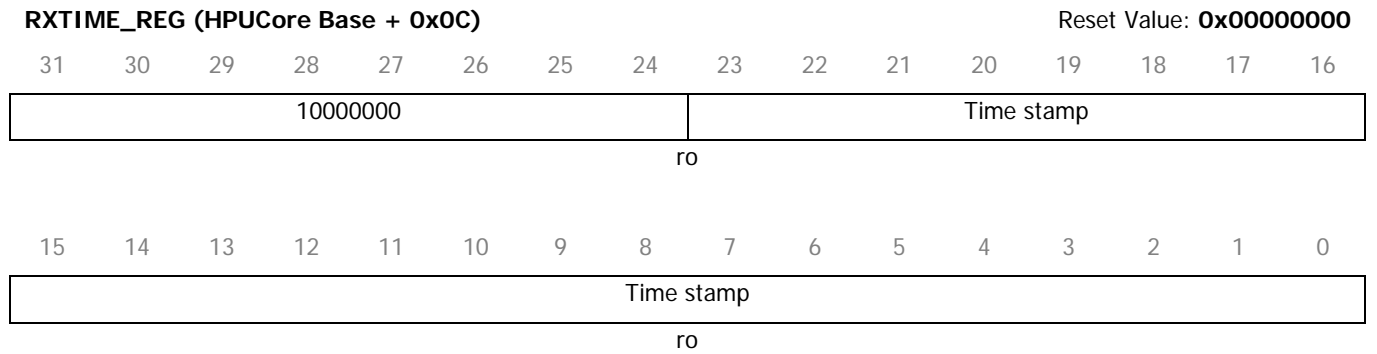

The Time Stamp value read from this register is the Time Stamp that the HPUCore sticks to the Received data available into the RX Data Buffer register (RXDATA\_REG).

## 2.5 TX Data Buffer register (TXDATA\_REG)

This register is used to fill the OUTFIFO.

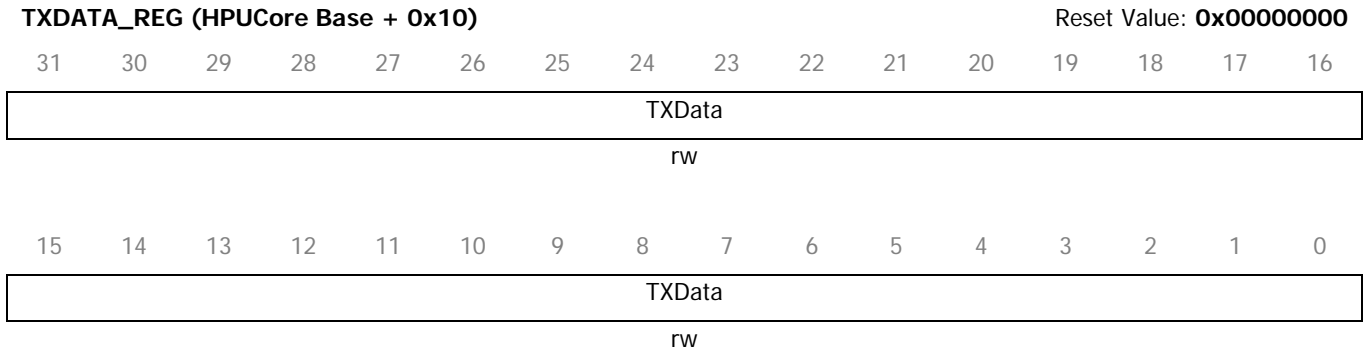

When writing to this register, keep in mind that it is used by the internal hw as follows:

The register needs to be written twice to enable the correct behaviour.

The first data written into the register represents the time, elapsed which, the second data written into the register is delivered to the *loopback* module, routing it according to its MSB bit:

- 00 => the packet is sent to the parallel AER interface
- 01 => the packet is sent to the HSSAER interface
- 10 => the packet is sent to the SpiNNlink interface ----- it was: GTP driver interface
- 11 => the packet is sent to all the interfaces: it is acknowledged only when all the interfaces have acknowledged the transfer

## 2.6 DMA register (DMA\_REG)

This register is used set the behaviour of the Axistream interface. It represents the number of data (32 bit size length) sent to the DMA interface and "closed" by a TLAST on the axistream interface.


Please note that this value has bit 0 set to 0, this means that it cannot be written with an odd value.

NOTE: This register can be written only if CTRL\_REG.ENDMA='0'.

DMA_REG (HPUCore Base + 0x14)															Reset Value: 0x00000100	
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	
reserved															DMA_test mode	
															r/w	
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
DMA Length[15:1]															0	
															r/w	

The DM\_test\_mode set to '1' enables the DMA to write consecutive incremental values at high rates.

For example, if it is set to 8, the burst from/to the DMA I/f will be in terms of 8 data length.

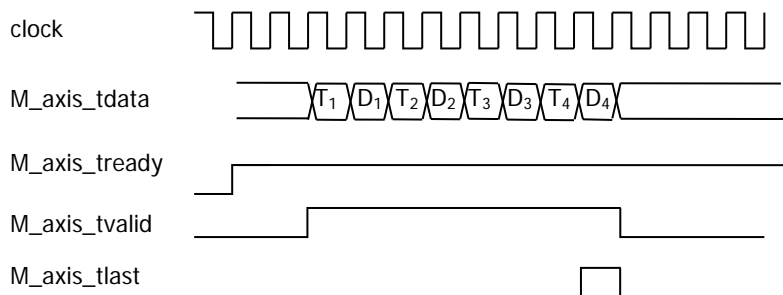

## 2.7 RAW Status Register (STAT\_RAW\_REG)

When read, this register gives a snapshot of the status of warning or errors signals. It is a Read Only register.

STAT_RAW_REG (HPUCore Base + 0x18)														Reset Value: 0x00000000	
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Reserved					AuxS pinn RxErr	RSpi nnRx Err	LSpi nnRx Err	AuxS pinn ParityErr	RSpi nnPa rityErr	LSpi nnPa rityErr	TxSp innD ump	Glbl RX err_ of	Glbl RX err_ to	Glbl RX err_ tx	Glbl RX err_ ko
					ro	ro	ro	ro	ro	ro	ro	ro	ro	ro	ro
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
RXFIFO > THRS	AUX RX PAER FIFO FULL	RRX PAER FIFO FULL	LRX PAER FIFO FULL	Reserved		RX FIFO Not Empty	RxBu fferR eady	Time Stam p Wra pped	Rese rved	TX Data Full	TX Data Almo st Full	TX Data Empt y	RX Data Full	RX Data Almo st Empt y	RX Data Empt y
ro	ro	ro	ro			ro	ro	ro		ro	ro	ro	ro	ro	ro

- RxDataEmpty
  - When '0', the INFIFO is not empty
  - When '1' the INFIFO is empty
- RxDataAlmostEmpty
  - When '1' the INFIFO has 1 or 0 data to be read.
  - When '0' the INFIFO has more or equal two data to be read.
- RxDataFull
  - When '1' the INFIFO is full.
  - When '0' the INFIFO is not full.
- TxDataEmpty
  - When '0', the OUTFIFO is not empty
  - When '1' the OUTFIFO is empty
- TxDataAlmostFull
  - When '1' the OUTFIFO has 2047 or 2048 data within himself.
  - When '0' the OUTFIFO has less than 2047 data within himself.
- TxDataFull
  - When '1' the OUTFIFO is full.
  - When '0' the OUTFIFO is not full.
- Bias Finished
  - When '1' the Bias signals have been latched
  - When '0' no Bias signals have been latched
- Time stamp wrapped (this bit is high for one clock period only, when the counter wraps its value)
  - When '1' the counter inside the TimeStamp module has wrapped its value.
  - When '0' the counter inside the TimeStamp module has not yet wrapped its value
- RXBufferReady
  - When '1' the Rx Fifo has at least DMA\_REG value of data available
  - When '0' the Rx Fifo has less than DMA\_REG value of data available
- RXFifoNotEmpty
  - When '1' the RX Fifo is not empty.
  - When '0' the RX Fifo is empty
- LRXPaerFifoFull
  - When '1' the Left RX Fifo is not empty.
  - When '0' the Left RX Fifo is empty
- RRRXPaerFifoFull


- When '1' the Right RX Fifo is not empty.
  - When '0' the Right RX Fifo is empty
- AuxRXPaerFifoFull
  - When '1' the Aux RX Fifo is not empty.
  - When '0' the Aux RX Fifo is empty
- RXfifo>Threshold
  - When '1' the Infifo has more elements with respect the value written into Fifo Threshold register (FIFO\_THRSH\_REG).
  - When '0' the Infifo has lesse elements with respect the value written into Fifo Threshold register (FIFO\_THRSH\_REG).
- Glbl Rx err ko
  - Global Rx err ko. (see [3] for further details)

It's an logic *or* between any unmasked errors detected on Left eye, Right eye and the number of errors in Aux interface overcoming the Aux Error counter threshold register (HSSAER\_AUX\_RX\_ERR\_THR\_REG).
- Glbl Rx err rx
  - Global Rx err rx. (see [3] for further details)

It's an logic *or* between any unmasked errors detected on Left eye, Right eye and the number of errors in Aux interface overcoming the Aux Error counter threshold register (HSSAER\_AUX\_RX\_ERR\_THR\_REG).
- Glbl Rx err to
  - Global Rx err to. (see [3] for further details)

It's an logic *or* between any unmasked errors detected on Left eye, Right eye and the number of errors in Aux interface overcoming the Aux Error counter threshold register (HSSAER\_AUX\_RX\_ERR\_THR\_REG).
- Glbl Rx err of
  - Global Rx err of. (see [3] for further details)

It's an logic *or* between any unmasked errors detected on Left eye, Right eye and the number of errors in Aux interface overcoming the Aux Error counter threshold register (HSSAER\_AUX\_RX\_ERR\_THR\_REG).

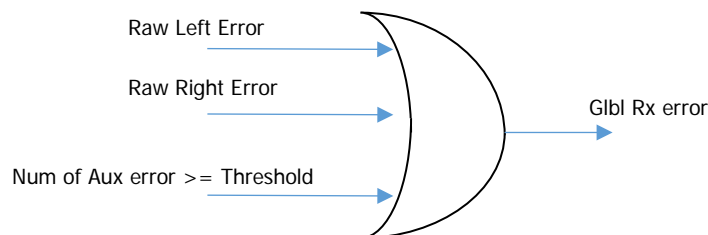


- TxSpinnDump
  - When '0', the SpiNNlink TX is working
  - When '1', the SpiNNlink TX is "dumping" data
- LSpinnRxErr
  - When '0', the Left SpiNNlink RX is working
  - When '1', the Left SpiNNlink RX is receiving wrong symbols
- RSpinnRxErr
  - When '0', the Right SpiNNlink RX is working
  - When '1', the Right SpiNNlink RX is receiving wrong symbols
- AuxSpinnRxErr
  - When '0', the Aux SpiNNlink RX is working
  - When '1', the Aux SpiNNlink RX is receiving wrong symbols
- LSpinnParityErr
  - When '0', the Left SpiNNlink RX is working
  - When '1', the Left SpiNNlink RX is receiving packets with wrong parity

- RSpinnParityErr
  - When '0', the Right SpiNNlink RX is working
  - When '1', the Right SpiNNlink RX is receiving packets with wrong parity
- AuxSpinnParityErr
  - When '0', the Aux SpiNNlink RX is working
  - When '1', the Aux SpiNNlink RX is receiving packets with wrong parity

## 2.8 IRQ Register (IRQ\_REG)

When read, this register gives the status of the collected warning or errors signals. It is a Read/Set register, i.e., to clear the warning/error bit the user has to write '1' on the corresponding bit position.

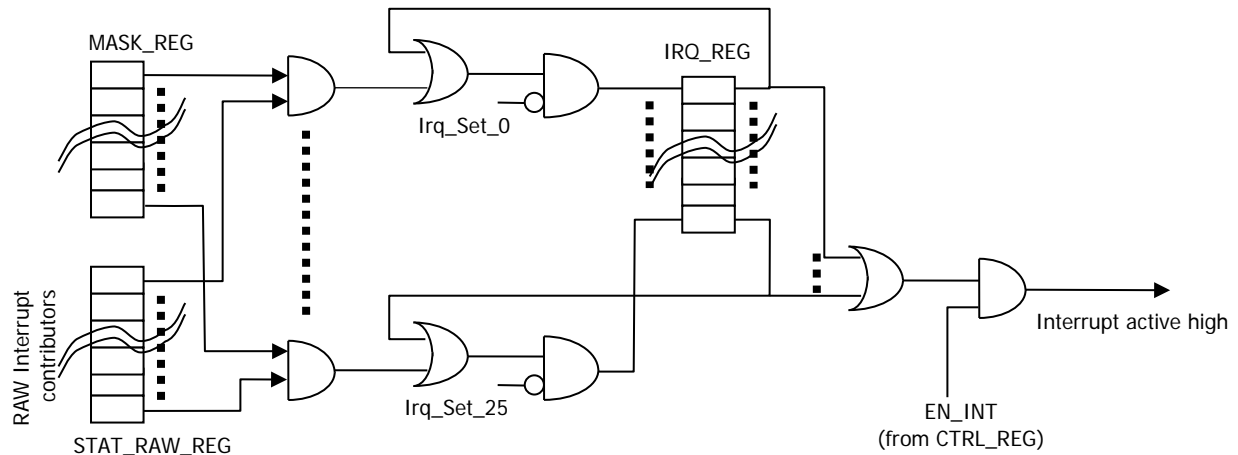

### IRQ\_REG (HPUCore Base + 0x1C)

Reset Value: **0x00000000**

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Reserved					AuxS pinn RxErr	RSpi nnRx Err	LSpi nnRx Err	AuxS pinn ParityErr	RSpi nnPa rityErr	LSpi nnPa rityErr	TxSp innD ump	Glbl RX err_ of	Glbl RX err_ to	Glbl RX err_ rx	Glbl RX err_ ko
r/c					r/c	r/c	r/c	r/c	r/c	r/c	r/c	r/c	r/c	r/c	r/c
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
RXFIFO > THRS	AUX RX PAER FIFO FULL	RRX PAER FIFO FULL	LRX PAER FIFO FULL	Reserved			RX FIFO Not Empty	RxBu fferR eady	Time Stam p Wra pped	Rese rved	TX Data Full	TX Data Almo st Full	TX Data Empty	RX Data Full	RX Data Almo st Empty
r/c	r/c	r/c	r/c	r/c			r/c	r/c	r/c	r/c	r/c	r/c	r/c	r/c	r/c

The meaning of the masked contributors of this register is the same of the RAW Status Register (STAT\_RAW\_REG).

## 2.9 Mask Register (MSK\_REG)

This is the Mask register used to mask the contributors for the interrupt signal.

**MSK\_REG (HPUCore Base + 0x20)**

Reset Value: **0x00000000**

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Reserved												Glbl RX err_ of	Glbl RX err_ t o	Glbl RX err_ t x	Glbl RX err_ k o
												r/w	r/w	r/w	r/w
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
RXFIFO > THRS	AUX RX PAER FIFO FULL	RRX PAER FIFO FULL	LRX PAER FIFO FULL	Reserved		RX FIFO Not Empty	RxBu fferR eady	Time Stam p Wra pped	Rese rved	TX Data Full	TX Data Almo st Full	TX Data Empt y	RX Data Full	RX Data Almo st Empt y	RX Data Empt y
r/w	r/w	r/w	r/w			r/w	r/w	r/w		r/w	r/w	r/w	r/w	r/w	r/w

The meaning of the masked contributors of this register is the same of the RAW Status Register (STAT\_RAW\_REG).





## 2.10 Wrapping TimeStamp Register (WRAPTimeStamp\_REG)

This register is used to read how many times the internal 32bit counter of the TimeStamp module has wrapped its value.

In case the user writes any value in this register, it will be cleared and also the internal 32bit counter of the TimeStamp module will be cleared.

**WRAPTIMESTAMP\_REG (NEUELAB Base + 0x28)**

Reset Value: **0x00000000**

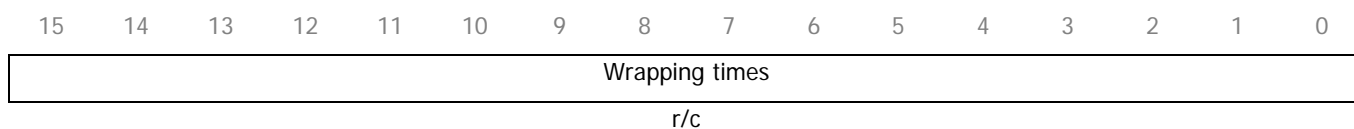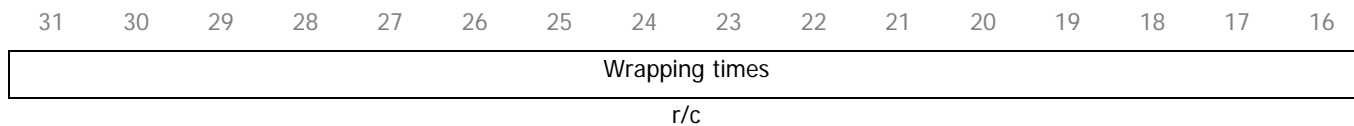

## 2.11 HSSAER STATus register (HSSAER\_STAT\_REG)

This is the HSSAER Status register.

HSSAER_STAT_REG (HPUCore Base + 0x34)																Reset Value: 0x00000000	
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16		
Reserved				Chan3 Aux run	Chan2 Aux run	Chan1 Aux run	Chan0 Aux run	Reserved				Chan3 TX run	Chan2 TX run	Chan1 TX run	Chan0 TX run		
				ro	ro	ro	ro					ro	ro	ro	Ro		
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0		
Reserved				Chan3 R RX run	Chan2 R RX run	Chan1 R RX run	Chan0 R RX run	Reserved				Chan3 L RX run	Chan2 L RX run	Chan1 L RX run	Chan0 L RX run		
				ro	ro	ro	ro					ro	ro	ro	ro		

The user can read the status of the 4 channels of Left Rx Eye, Right Rx Eye, Aux Rx or Tx channel.

**2.12 HSSAER RX Error register (HSSAER\_RX\_ERR\_REG)**

This is the HSSAER Rx error register.

**HSSAER\_RX\_ERR\_REG (HPUCore Base + 0x38)**

Reset Value: **0x00000000**

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Chan3 R RX err_of	Chan3 R RX err_to	Chan3 R RX err_rx	Chan3 R RX err_ko	Chan2 R RX err_of	Chan2 R RX err_to	Chan2 R RX err_rx	Chan2 R RX err_ko	Chan1 R RX err_of	Chan1 R RX err_to	Chan1 R RX err_rx	Chan1 R RX err_ko	Chan0 R RX err_of	Chan0 R RX err_to	Chan0 R RX err_rx	Chan0 R RX err_ko
ro	ro	ro	ro	ro	ro	ro	ro	ro	ro	ro	ro	ro	ro	ro	Ro
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Chan3 L RX err_of	Chan3 L RX err_to	Chan3 L RX err_rx	Chan3 L RX err_ko	Chan2 L RX err_of	Chan2 L RX err_to	Chan2 L RX err_rx	Chan2 L RX err_ko	Chan1 L RX err_of	Chan1 L RX err_to	Chan1 L RX err_rx	Chan1 L RX err_ko	Chan0 L RX err_of	Chan0 L RX err_to	Chan0 L RX err_rx	Chan0 L RX err_ko
ro	ro	ro	ro	ro	ro	ro	ro	ro	ro	ro	ro	ro	ro	ro	ro

The user can read the error contributors for Left and Right 4 channels. See [3].

**2.13 HSSAER RX MSK register (HSSAER\_RX\_MSK\_REG)**

This is the HSSAER Rx mask register.

HSSAER_RX_MSK_REG (HPUCore Base + 0x3C)														Reset Value: 0x00000000	
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Chan3 R RX err_of	Chan3 R RX err_to	Chan3 R RX err_rx	Chan3 R RX err_ko	Chan2 R RX err_of	Chan2 R RX err_to	Chan2 R RX err_rx	Chan2 R RX err_ko	Chan1 R RX err_of	Chan1 R RX err_to	Chan1 R RX err_rx	Chan1 R RX err_ko	Chan0 R RX err_of	Chan0 R RX err_to	Chan0 R RX err_rx	Chan0 R RX err_ko
rw	rw	rw	rw	rw	rw	rw	rw	rw	rw	rw	rw	rw	rw	rw	rw
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Chan3 L RX err_of	Chan3 L RX err_to	Chan3 L RX err_rx	Chan3 L RX err_ko	Chan2 L RX err_of	Chan2 L RX err_to	Chan2 L RX err_rx	Chan2 L RX err_ko	Chan1 L RX err_of	Chan1 L RX err_to	Chan1 L RX err_rx	Chan1 L RX err_ko	Chan0 L RX err_of	Chan0 L RX err_to	Chan0 L RX err_rx	Chan0 L RX err_ko
rw	rw	rw	rw	rw	rw	rw	rw	rw	rw	rw	rw	rw	rw	rw	rw

The user can mask (writing 0) or not (writing 1) the corresponding contributors of error register. See [3].

## 2.14 RX Control register (RX\_CTRL\_REG)

This is the HSSAER Left and Right Rx control register.

RX_CTRL_REG (HPUCore Base + 0x40)																Reset Value: 0x00000000			
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16				
Reserved				RRX HSSAER Channel En				Reserved				RRX SpNNInkEn	RRX GTP En	RRX PAER En	RRX HSSAER En				
				Channel 3	Channel 2	Channel 1	Channel 0												
				rw								rw	rw	rw	rw				
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0				
Reserved				LRX HSSAER Channel En				Reserved				LRX SpNNInkEn	LRX GTP En	LRX PAER En	LRX HSSAER En				
				Channel 3	Channel 2	Channel 1	Channel 0												
				rw								rw	rw	rw	rw				

Where:

- LRX HSSAER Enable
  - When '0', the Left HSSAER interface is not enabled
  - When '1', the Left HSSAER interface is enabled
- LRX PAER Enable
  - When '0', the Left PAER interface is not enabled
  - When '1', the Left PAER interface is enabled
- LRX GTP Enable
  - When '0', the Left GTP interface is not enabled
  - When '1', the Left GTP interface is enabled
- LRX SpNNInk Enable
  - When '0', the Left SpiNNlink interface is not enabled
  - When '1', the Left SpiNNlink interface is enabled
- LRX HSSAER Channel Enable
  - Write 1 in the corresponding channel to enable it
- RRX HSSAER Enable
  - When '0', the Right HSSAER interface is not enabled
  - When '1', the Right HSSAER interface is enabled
- RRX PAER Enable
  - When '0', the Right PAER interface is not enabled
  - When '1', the Right PAER interface is enabled
- RRX GTP Enable
  - When '0', the Right GTP interface is not enabled
  - When '1', the Right GTP interface is enabled
- RRX SpNNInk Enable
  - When '0', the Right SpiNNlink interface is not enabled
  - When '1', the Right SpiNNlink interface is enabled
- RRX HSSAER Channel Enable
  - Write 1 in the corresponding channel to enable it

## 2.15 TX Control register (TX\_CTRL\_REG)

This is the HSSAER Tx control register.

TX_CTRL_REG (HPUCore Base + 0x44)												Reset Value: 0x00000000			
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Reserved															
rw												rw		rw	rw
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Reserved				TX HSSAER Channel En				Reserved	Tx Dest Switch En	Tx Dest Switch (1)	Tx Dest Switch (0)	TX SpNNI nkEn	TX GTP En	TX PAER En	TX HSSAER En
				Channel 3	Channel 2	Channel 1	Channel 0								
rw				rw				rw							

Where:

- TX Destination Switch Enable
  - When '0' the message is routed according to its two MSB bits:
    - 00 => the packet is sent to the parallel AER interface
    - 01 => the packet is sent to the HSSAER interface
    - 10 => the packet is sent to the SpiNNlink interface ----- it was: GTP driver interface
    - 11 => the packet is sent to all the interfaces: it is acknowledged
  - When '1' the message is routed according to TxDestSwitch(1:0)
 

Note: tied to '0' if IP doesn't have any TX interface
- TX Destination Switch
  - if TX Destination Switch Enable = '1',
 

when

    - 00 => the packet is sent to the parallel AER interface
    - 01 => the packet is sent to the HSSAER interface
    - 10 => the packet is sent to the SpiNNlink interface ----- it was: GTP driver interface
    - 11 => the packet is sent to all the interfaces: it is acknowledged
  - if TX Destination Switch Enable = '0', it doesn't have effect
 

Note: tied to '0' if IP doesn't have any TX interface
- TX HSSAER Enable
  - When '0', the HSSAER interface is not enabled
  - When '1', the HSSAER interface is enabled
- TX PAER Enable
  - When '0', the PAER interface is not enabled
  - When '1', the PAER interface is enabled
- TX GTP Enable
  - When '0', the GTP interface is not enabled
  - When '1', the GTP interface is enabled
- TX SpiNNlink Enable
  - When '0', the SpiNNlink interface is not enabled
  - When '1', the SpiNNlink interface is enabled
- TX HSSAER Channel Enable
  - Write 1 in the corresponding channel to enable it

## 2.16 RX PAER Configuration register (RX\_PAER\_CFNG\_REG)

This is the RX PAER configuration register.

RX_PAER_CFNG_REG (HPUCore Base + 0x48)														Reset Value: 0x02000100	
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
RXPAER Ack release Delay								RXPAER Ack Set Delay							
rw								rw							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
RXPAER Data Sample Delay								Reserved		RXPAER ignore Fifo Full	Reserved		RXPAER R Ack Active Lvl	RXPAER R Req Active Lvl	
rw										rw			rw	rw	

Where:

- RXPAER Req Active level
  - When '0', the Request signal is active low
  - When '1', the Request signal is active high
- RXPAER Ack Active level
  - When '0', the Acknowledge signal is active low
  - When '1', the Acknowledge signal is active high
- RX PAER ignore Fifo Full
  - When '0', the Fifo Full stops the acknowledge signal
  - When '1', the Fifo Full doesn't stop the acknowledge signal by acknowledging the request
- RXPAER Data Sample Delay
  - This is the number of system clock used to sample the PAER address.
- RXPAER Ack Set Delay
  - This is the number of system clock used to set the ACK signal after that the request becomes active.
- RXPAER Ack Release Delay
  - This is the number of system clock used to release the ACK signal after that the request becomes active.

Please note that *RXPAER Data Sample Delay*, *RXPAER Ack Set Delay* and *RXPAER Ack Release Delay* must be different in values.

Please note that this register must be written before enabling the interface in RX Control register (RX\_CTRL\_REG) and/or AUXiliary RX Control register (AUX\_RX\_CTRL\_REG)

## 2.17 TX PAER Configuration register (TX\_PAER\_CFNG\_REG)

This is the TX PAER configuration register.

TX_PAER_CFNG_REG (HPUCore Base + 0x4C)												Reset Value: 0x00000000			
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Reserved															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Reserved													TXPAE R Ack Active Lvl	TXPAE R Req Active Lvl	
													rw	rw	

Where:

- TXPAER Req Active level
  - When '0', the Request signal is active low
  - When '1', the Request signal is active high
- TXPAER Ack Active level
  - When '0', the Acknowledge signal is active low
  - When '1', the Acknowledge signal is active high

Please note that this register must be set before to enabling the PAER interface (i.e.: before writing the TX Control register (TX\_CTRL\_REG))



## 2.18 IP Configuration register (IP\_CFNG\_REG)

This is the HPUCore configuration register. It shows how the HPUCore has been implemented in terms of features.

IP_CFNG_REG (HPUCore Base + 0x50)												Reset Value: 0x0000????			
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Reserved															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Reserved		TX HSSAER #channels -1		HAS TX SpNNlnk	HAS TX GTP	Has TX PAER	Has TX HSSAER	Reserved		RX HSSAER #channels -1		HAS RX SpNNlnk	HAS RX GTP	Has RX PAER	Has RX HSSAER
													ro	ro	ro

Where:


- Has RX HSSAER
  - When '0', the IP doesn't have the RX HSSAER I/f
  - When '0', the IP has the RX HSSAER I/f
- Has RX PAER
  - When '0', the IP doesn't have the RX PAER I/f
  - When '0', the IP has the RX PAER I/f
- Has RX GTP
  - When '0', the IP doesn't have the RX GTP I/f
  - When '0', the IP has the RX GTP I/f
- Has RX SpiNNlink
  - When '0', the IP doesn't have the RX SpiNNlink I/f
  - When '0', the IP has the RX SpiNNlink I/f
- RX HSSAER #channels -1
  - This shows the number of channels of RX HSSAER I/f. For instance, if it is 2'b10, it means that the RX HSSAER interface has 3 channels
- Has TX HSSAER
  - When '0', the IP doesn't have the TX HSSAER I/f
  - When '0', the IP has the TX HSSAER I/f
- Has TX PAER
  - When '0', the IP doesn't have the TX PAER I/f
  - When '0', the IP has the TX PAER I/f
- Has TX GTP
  - When '0', the IP doesn't have the TX GTP I/f
  - When '0', the IP has the TX GTP I/f
- Has TX SpiNNlink
  - When '0', the IP doesn't have the TX SpiNNlink I/f
  - When '0', the IP has the TX SpiNNlink I/f
- RX HSSAER #channels -1
  - This shows the number of channels of RX HSSAER I/f. For instance, if it is 2'b10, it means that the RX HSSAER interface has 3 channels

**2.19 Fifo Threshold register (FIFO\_THRSH\_REG)**

This register contains the number of elements of the INFIFO after which the “RXFIFO > THRS” of the IRQ Register (IRQ\_REG) bit goes high.

**FIFO\_THRSH\_REG (HPUCore Base + 0x54)**

Reset Value: **0x00000000**

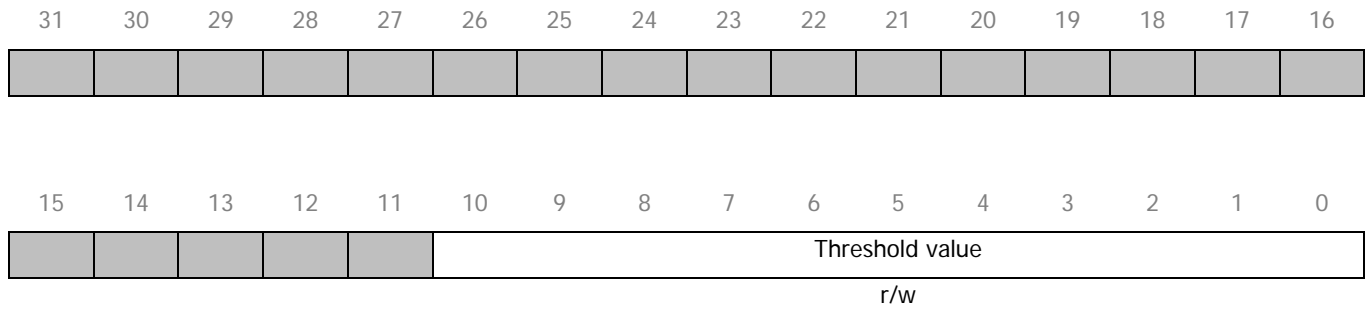

## 2.20 LoopBack AUX Configuration (LPBK\_AUX\_CNFG\_REG)

This register contains the configuration for the AUX interface loopback.

LPBK_AUX_CNFG_REG (HPUCore Base + 0x58)												Reset Value: 0x00000000			
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Reserved															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
AUX RX chan 3 LPB cnfg				AUX RX chan 2 LPB cnfg				AUX RX chan 1 LPB cnfg				AUX RX chan 0 LPB cnfg			
r/w				r/w				r/w				r/w			

The register is used in debug to test the connection. For further details, look at the RTL code.

## 2.21 Identification register (ID\_REG)

This register contains the ID of the NeuElab.

**ID\_REG (HPUCore Base + 0x5C)**

Reset Value: **48505521**

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
H								P							
r/o								r/o							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
U								Major				Minor			
r/o								r/o				r/o			

Minor =3;

Major = 1;

## 2.22 AUXiliary RX Control register (AUX\_RX\_CTRL\_REG)

This is the Auxiliary Rx control register.

AUX_RX_CTRL_REG (HPUCore Base + 0x60)												Reset Value: 0x00000000			
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Reserved															
rw															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Reserved				AUX HSSAER Channel En				Reserved				AuxRX SpNNI nkEn	AUX GTP En	AUX PAER En	AUX HSSAER En
				Channel 3	Channel 2	Channel 1	Channel 0								
rw								rw							

Where:

- AUX HSSAER Enable
  - When '0', the AUX HSSAER interface is not enabled
  - When '1', the AUX HSSAER interface is enabled
- AUX PAER Enable
  - When '0', the AUX PAER interface is not enabled
  - When '1', the AUX PAER interface is enabled
- AUX GTP Enable
  - When '0', the AUX GTP interface is not enabled
  - When '1', the AUX GTP interface is enabled
- AUX SpiNNlink Enable
  - When '0', the AUX SpiNNlink interface is not enabled
  - When '1', the AUX SpiNNlink interface is enabled
- AUX HSSAER Channel Enable
  - Write 1 in the corresponding channel to enable it

## 2.23 HSSAER AUX RX Error register (HSSAER\_AUX\_RX\_ERR\_REG)

This is the HSSAER Rx error register.

HSSAER_AUX_RX_ERR_REG (HPUCore Base + 0x64)												Reset Value: 0x00000000			
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Chan3 AUX RX err_of	Chan3 AUX RX err_to	Chan3 AUX RX err_rx	Chan3 AUX RX err_ko	Chan2 AUX RX err_of	Chan2 AUX RX err_to	Chan2 AUX RX err_rx	Chan2 AUX RX err_ko	Chan1 AUX RX err_of	Chan1 AUX RX err_to	Chan1 AUX RX err_rx	Chan1 AUX RX err_ko	Chan0 AUX RX err_of	Chan0 AUX RX err_to	Chan0 AUX RX err_rx	Chan0 AUX RX err_ko
ro	ro	ro	ro	ro	ro	ro	ro	ro	ro	ro	ro	ro	ro	ro	ro

The user can read the error contributors for the 4 channels of the AUX interface. See [3].

## 2.24 HSSAER AUX RX MSK register (HSSAER\_AUX\_RX\_MSK\_REG)

This is the HSSAER AUX Rx mask register.

HSSAER_AUX_RX_MSK_REG (HPUCore Base + 0x68)												Reset Value: 0x00000000			
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Chan3 AUX RX err_of	Chan3 AUX RX err_to	Chan3 AUX RX err_rx	Chan3 AUX RX err_ko	Chan2 AUX RX err_of	Chan2 AUX RX err_to	Chan2 AUX RX err_rx	Chan2 AUX RX err_ko	Chan1 AUX RX err_of	Chan1 AUX RX err_to	Chan1 AUX RX err_rx	Chan1 AUX RX err_ko	Chan0 AUX RX err_of	Chan0 AUX RX err_to	Chan0 AUX RX err_rx	Chan0 AUX RX err_ko
rw	rw	rw	rw	rw	rw	rw	rw	rw	rw	rw	rw	rw	rw	rw	rw

The user can mask (writing 0) or not (writing 1) the corresponding contributors of error register. See [3].

**2.25 Aux Error counter threshold register (HSSAER\_AUX\_RX\_ERR\_THR\_REG)**

This register is used for setting the threshold of the AUX Rx counter error.

As soon as the number of the corresponding error overcome the threshold here set, the interrupt related will be raised if opportunely masked.

**HSSAER\_AUX\_RX\_ERR\_THR\_REG (HPUCore Base + 0x6C)**

Reset Value: **0x10101010**

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Number of AUX of error								Number of AUX to error							
r/w								r/w							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Number of AUX rx error								Number of AUX ko errors							
r/w								r/w							

- Number of AUX ko errors
  - The number of ko errors which, if overcome, can raise an interrupt
- Number of AUX rx errors
  - The number of rx errors which, if overcome, can raise an interrupt
- Number of AUX to errors
  - The number of to errors which, if overcome, can raise an interrupt
- Number of AUX of errors
  - The number of of errors which, if overcome, can raise an interrupt



## 2.26 Aux Error counter CH0 register (HSSAER\_AUX\_RX\_ERR\_CH0\_REG)

This register is used to read the number of errors occurred in HSSAER AUX channel 0 lines.

Reading this register we also clear it.

HSSAER_AUX_RX_ERR_CH0_REG (HPUCore Base + 0x70)													Reset Value: 0x00000000		
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Number of CH0 of error								Number of CH0 to error							
r/c								r/c							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Number of CH0 rx error								Number of CH0 ko errors							
r/c								r/c							

- Number of CH0 ko errors
  - The number of ko errors
- Number of CH0 rx errors
  - The number of rx errors
- Number of CH0 to errors
  - The number of to errors
- Number of CH0 of errors
  - The number of of errors

## 2.27 Aux Error counter CH1 register (HSSAER\_AUX\_RX\_ERR\_CH1\_REG)

This register is used to read the number of errors occurred in HSSAER AUX channel 1 lines.

Reading this register we also clear it.

**HSSAER\_AUX\_RX\_ERR\_CH1\_REG (HPUCore Base + 0x74)**

Reset Value: **0x00000000**

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Number of CH1 of error								Number of CH1 to error							
r/c								r/c							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Number of CH1 rx error								Number of CH1 ko errors							
r/c								r/c							

- Number of CH1 ko errors
  - The number of ko errors
- Number of CH1 rx errors
  - The number of rx errors
- Number of CH1 to errors
  - The number of to errors
- Number of CH1 of errors
  - The number of of errors

## 2.28 Aux Error counter CH2 register (HSSAER\_AUX\_RX\_ERR\_CH2\_REG)

This register is used to read the number of errors occurred in HSSAER AUX channel 2 lines.

Reading this register we also clear it.

**HSSAER\_AUX\_RX\_ERR\_CH2\_REG (HPUCore Base + 0x78)**

Reset Value: **0x00000000**

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Number of CH2 of error								Number of CH2 to error							
r/c								r/c							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Number of CH2 rx error								Number of CH2 ko errors							
r/c								r/c							

- Number of CH2 ko errors
  - The number of ko errors
- Number of CH2 rx errors
  - The number of rx errors
- Number of CH2 to errors
  - The number of to errors
- Number of CH2 of errors
  - The number of of errors

**2.29 Aux Error counter CH3 register (HSSAER\_AUX\_RX\_ERR\_CH3\_REG)**

This register is used to read the number of errors occurred in HSSAER AUX channel 3 lines.

Reading this register we also clear it.

**HSSAER\_AUX\_RX\_ERR\_CH3\_REG (HPUCore Base + 0x7C)**

Reset Value: **0x00000000**

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Number of CH3 of error								Number of CH3 to error							
r/c								r/c							
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Number of CH3 rx error								Number of CH3 ko errors							
r/c								r/c							

- Number of CH3 ko errors
  - The number of ko errors
- Number of CH3 rx errors
  - The number of rx errors
- Number of CH3 to errors
  - The number of to errors
- Number of CH3 of errors
  - The number of of errors

### 2.30 SpiNNlink Start command key (SPNN\_START\_KEY\_REG)

This register is used to define the Command Key that HPU Core expects to receive from SpiNNaker before starting to transmit Packets to it.

TX Spinnaker Module is in "dump mode" until the Key is received.

**SPNN\_START\_KEY\_REG (HPUCore Base + 0x80)**

Reset Value: **0x80000000**

31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16

Value of START Command Key (MSB)

r/w

15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

Value of START Command Key (LSB)

r/w

- Value of START Command Key

**NOTE:** if both SPNN\_START\_KEY\_REG and SPNN\_STOP\_KEY\_REG are set to 0x00000000, the functionality is bypassed and TX interface is allowed to transmit despite of a START command has not be received.

### 2.31 SpiNNlink Stop command key (SPNN\_STOP\_KEY\_REG)

This register is used to define the Command Key that HPU Core expects to receive from SpiNNaker before stopping to transmit Packets to it.

TX Spinnaker Module is in "dump mode" after the Key is received.

**SPNN\_START\_KEY\_REG (HPUCore Base + 0x84)**

Reset Value: **0x40000000**

31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16

Value of STOP Command Key (MSB)

r/w

15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

Value of STOP Command Key (LSB)

r/w

- Value of STOP Command Key

**NOTE:** if both SPNN\_START\_KEY\_REG and SPNN\_STOP\_KEY\_REG are set to 0x00000000, the functionality is bypassed and TX interface is allowed to transmit despite of a START command has not been received.

### 2.32 SpiNNlink TX Data Mask (SPNN\_TX\_MASK\_REG)

This register is used to define the mask applied to data that are to be transmitted to SpiNNaker.

The default value is 0x00FFFFFF

**SPNN\_TX\_MASK\_REG (HPUCore Base + 0x88)**

Reset Value: **0x00FFFFFF**

31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16

Value of START Command Key (MSB)

r/w

15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

Value of START Command Key (LSB)

r/w

- Value of START Command Key

### 2.33 SpiNNlink RX Data Mask (SPNN\_RX\_MASK\_REG)

This register is used to define the mask applied to data received from SpiNNaker.

Please note: the mask affects only data, and not commands (i.e. START and STOP commands)

The default value is 0x00FFFFFF

SPNN_RX_MASK_REG (HPUCore Base + 0x8C)																Reset Value: 0x00FFFFFF	
31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16		
Value of STOP Command Key (MSB)																	
r/w																	
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0		
Value of STOP Command Key (LSB)																	
r/w																	

- Value of STOP Command Key



## 2.34 TLAST TIMEOUT Register (TLASTTO\_REG)

This register is used to issue a premature end of an Axistream burst. When the time counted by this register expires and at least a couple of data have been transferred, a dummy data (0xF0CACC1A) is sent as last data of the burst. In this way we can perform a premature end of an axistream burst. This is useful to decrease the latency in DMA responsiveness.

**TLASTTO\_REG (HPUCore Base + 0xA0)**

Reset Value: **0x00010000**

31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16

Number of clock period to perform a premature Axistream burst end during a "slow" transfer

r/w

15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

Number of clock period to perform a premature Axistream burst end during a "slow" transfer

r/w

## 2.35 TLAST Counter Register (TLASTCNT\_REG)

This register is used to read the number of valid Tlast Axistream events that the HPU has performed.

**TLASTCNT\_REG (HPUCore Base + 0xA4)**

Reset Value: **0x00000000**

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Number of Tlast events in RX Fifo															
r/o															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Number of Tlast events in TX Fifo															
r/o															

## 2.36 TData Counter Register (TDATACNT\_REG)

This register is used to read the number of valid Axistream DATA that the HPU has performed.

**TDATACNT\_REG (HPUCore Base + 0xA8)**

Reset Value: **0x00000000**

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Number of TDATA valid in RX Fifo															
r/o															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Number of TDATA valid in TX Fifo															
r/o															

### **3 References**

- [1] ARM AMBA AXI protocol v2.0
- [2] "Combining the ADS1202 with an FPGA Digital Filter for Current Measurement in Motor Control Applications", Texas Instruments, Application Report SBAA094 – June 2003.
- [3] "Asynchronous DC-Free Serial Protocol for Event-Based AER Systems", P. Motto Ros, M. Crepaldi, C. Bartolozzi and D. Demarchi, 2015 IEEE International Conference on Electronics, Circuits, and Systems (ICECS)

## **4 Appendixes**