

# eForce<sup>®</sup> Keyless Entry

## Owner's Manual & Installation Instructions for Models 3090C & 3090P



**ASSA ABLOY**

Adams Rite Manufacturing Co.  
260 Santa Fe Street  
Pomona, CA 91767  
Phone: 800-872-3267  
[www.adamsrite.com](http://www.adamsrite.com)

# TABLE OF CONTENTS

General Information .....	1
Definitions .....	1
FCC Statement .....	2
IC Statement .....	2
Operational Description.....	3
Operational Specifications .....	4
Troubleshooting .....	5
Installation Tools & Equipment.....	6
Door Preparation.....	7
Spindle Preparation .....	7
Configure for Lock.....	8
Handing.....	10
Mortise Cylinder Installation .....	11
Limited Warranty .....	13

## **GENERAL INFORMATION**

The eForce<sup>®</sup> Prox (3090P) and eForce<sup>®</sup> iCLASS (3090C) lever operators have integrated contactless proximity readers that communicate with a Weigand protocol access control system. Utilizing HID 125kHz Prox or HID 13.56MHz iCLASS technology, the eForce<sup>®</sup> offers reliable and secure access to your secured building or area. The eForce<sup>®</sup> Prox or eForce<sup>®</sup> iCLASS will mechanically interface with Adams Rite deadbolts, deadlatches, and exit devices.

### **DEFINITIONS**

- Prox – Class of contactless card credentials that operate on 125kHz.
- iCLASS – Class of contactless card credentials that operate on 13.56MHz.
- Secured – State of eForce<sup>®</sup> when the clutch is not engaged, preventing lever rotation from retracting latch/deadbolt.
- Unsecured – State of eForce<sup>®</sup> when clutch is engaged, allowing lever rotation to retract latch/deadbolt.
- Weigand – Communication protocol utilized between the eForce<sup>®</sup> and access control system, which consists of two data lines, WG0, WG1.
- Access Control System – Third party system that manages contactless card credentials, and door opening states (secured/unsecured).

## **FCC STATEMENT**

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Operation with non-approved equipment is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

## **IC STATEMENT**

This class [B] digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

## **OPERATIONAL DESCRIPTION**

### **Manual Operation – Key Cylinder**

1. Insert key into lock cylinder.
2. Turn the key to the detent position.
3. Rotate the lever until latch or deadbolt clear the strike and open the door.
4. Return the key to a non-detent position that will allow the key to be removed.

### **Credential Card Operation**

When the eForce® is in a secured state, the LED in the front plastic faceplate will be red, and the lever will not operate the locking mechanism.

To gain entry using the eForce® Prox or eForce® iCLASS:

1. Place Prox/iCLASS card in front of the eForce® LED, at a distance no greater than one inch.
2. The access control system will receive the card credential information, and will send an unlock signal to the eForce® if the credentials are valid.
3. The LED will change states from red to green, and a short audible tone will be heard to indicate a valid unlock status.
4. Rotate the lever to gain entry into the building.
5. The lock will return to a secured (locked state) after the access control system unlock period has expired. NOTE: the access control system will determine the unlock period. There are no adjustments in the eForce® for unlock period.

### **Adding Card Credentials**

Consult the access control system manual or the system administrator to manage your credential database. The eForce® does not store card credentials; it simply extracts the information from the card and sends it to the access control system for verification.

**NOTE: We need to show a wiring diagram from Access Panel to ElectroLynx (3090P & 3090C)**

## **OPERATIONAL SPECIFICATIONS**

### Card Compatibility

**Prox:** All HID (125kHz) Prox credentials  
**iCLASS:** All iCLASS (13.56MHz) credentials

### Electrical Specifications

**Power Requirements (Prox/iCLASS):** Voltage In: 12Vdc (Range: 10.8Vdc – 16Vdc)  
Current Consumption: 150mA average, 300mA peak  
**Transmit Frequencies:** Prox – 125kHz  
iCLASS – 13.56MHz

### Environmental Specifications (Prox/iCLASS)

**Operating Temperature** -31° to 150°F (-35° to 65°C)  
**Operating Humidity** 5% to 95% relative humidity non-condensing

### Wiring Connections (Prox/iCLASS)

#### **E-Lynx Cable Pin Out**

<b>8 – PIN E-Lynx Connector</b>		
Molex Pin #	Color	Description
1	Black	System Ground
5	Red	Reader/Motor Controller Power (+12Vdc, 300mA Max)
2	White	Weigand Data 1
6	Green	Weigand Data 0
8	Yellow	Green Led Control

<b>4 – PIN E-Lynx Connector</b>		
Molex Pin #	Color	Description
1	Violet	System Ground
3	Gray	Lock Activate (+12Vdc, 10mA Max)

#### **Lock Activate Signal – (+12Vdc, 10mA Max)**

N.O. relay (or other isolated source) output from access control system that applies +12Vdc to this pin when valid credentials were accepted by the access control system. As long as this signal is active (+12Vdc) the lock will remain in an unsecured state, which will allow the lever to retract the latch/bolt. This line needs to return to 0Vdc in order for the eForce® to return to a secured state.

### Recommended Cable Information

1. Cable Size – 28 AWG minimum, stranded 7/36
2. Cable Distance – 500 feet maximum
3. Cable Type – 300V minimum, PVC insulation or better

## **TROUBLE SHOOTING**

Green light comes on, but lever will not retract latch or deadbolt:

- Check the eForce® body connection with lock/latch mechanism.
- Check the cylinder tailpiece length (see installation instructions).
- Check for proper door preparation (refer to door templates).

Operator stays unlocked (unsecured):

- Check the cylinder tailpiece length (see installation instructions).
- Check the eForce® body connection.

LED not lit in secured state:

- Check that power and Weigand lines are properly connected.

Credentials not activating lock:

- Check for lock power (led should be lit, and red when secured)
- Trigger access control system lock activate input.
  - > If this unlock the lock:
    - Be sure credentials are in system database.
    - Ensure Weigand lines are connected properly.
    - Place card in front of eForce®:
      - If the eForce® emits one short tone, but lock does not activate, check Weigand data lines for connectivity and proper connection.

## INSTALLATION TOOLS & EQUIPMENT

### IMPORTANT NOTES:


- The 3090P-01 & 3090C-01 are designed exclusively for latching hardware including: 4500/4900 Deadlatches and 8000 Series Exit Devices.
- The 3090P-02 & 3090C-02 are compatible with MS® Series Deadbolts only! **These units are not interchangeable!**
- These instructions, and the fasteners supplied, apply to metal door applications.
- Other door types will need fasteners designed for the given medium.

### TOOLS NEEDED:

Common hand tools such as center punch, drill gun, ¼" drill bit, Phillips screwdriver, pliers, flat tip screwdriver, pencil.

### ADDITIONAL EQUIPMENT NEEDED:


Mortise Cylinder - 1" to 1½" in length range with MS cam  
(Note: 1½" cylinders require a 1/8" trim ring).

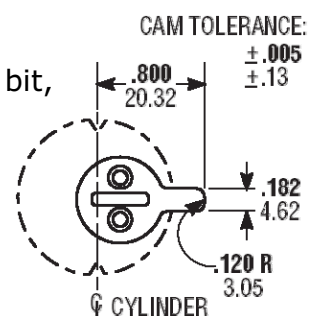

### SUPPLIED PARTS:

Item	Description	Qty.
1	Mounting Bracket (Part # 22-9076)	1
2	#10-32 X 5/8" Phillips Pan Head Screws w/ Lockwasher	4
3	Spindle	1
4	5/64" Allen Key	1
5	Cylinder Locking Ring	1
6	Locking Ring Spanner Tool	1

**NOTE:** A cam plug is supplied for either the 3090P-01 & 3090C-01 latch or 3090P-02 & 3090C-02 lock.

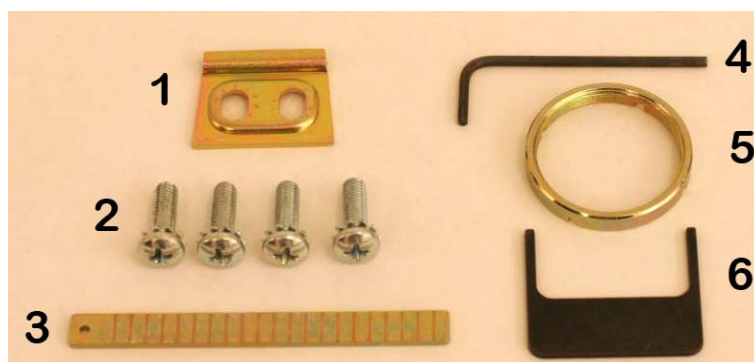


**THIS PRODUCT MUST BE INSTALLED  
ACCORDING TO ALL APPLICABLE  
BUILDING AND LIFE SAFETY CODES**




## **STEP 1 DOOR PREPARATION**

(Fig. 1)

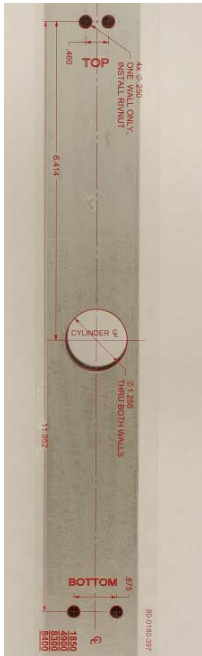

- Select the stick-on template to match the application.
- Mark the backset and horizontal centerlines.
- Apply clear template over the centerline marks. (Fig. 1)
- Center-punch four (4) referenced mounting holes and remove template.
- Drill holes at center-punch locations using a 1/4" drill bit.
- Install Rivnuts. Refer to instructions supplied in Rivnut kit.
- Install mounting bracket (Item 1) with two (2) each of #10-32 x 5/8" (Item 2) pan head screws. (Fig. 2)

(Fig. 2)

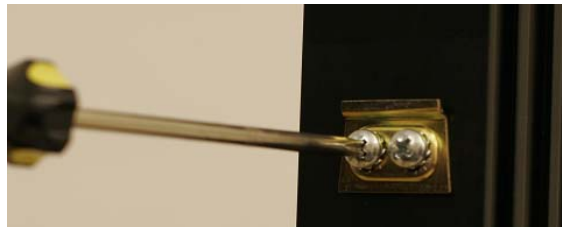

## **STEP 2 SPINDLE PREPARATION (For 1-3/4" doors)**

For MS1850 Deadbolts, 4500/4900 Deadlatches, & 8000 Series Mortise Exit Devices, snap-off spindle at third notch as shown in Fig. 3. For 2" thick door add one notch.




Fig. 3

For 8600 Concealed Vertical Rod Exit Devices snap-off spindle at fourth notch as shown in Fig. 4. For 2" thick doors add two notches.




Fig. 4

For 8000 Series Surface Vertical Rod & Rim Exit Devices, snap-off spindle at sixteenth notch as shown in Fig. 5. For 2" thick doors add two notches.



Fig. 5

### **STEP 3      CONFIGURE FOR LOCK SERIES**

#### **Mortise Latch Application – 3090P-01 & 3090C-01 for 4500/4900 (including 8300/8400 Exit Devices)**

Configure the supplied cam plug to match the hand of door and insert into latch case with notch on the cam pug aligned with latch case setscrew. Tighten setscrew and secure with the two brass cam plug screws.



Left Hand Reverse (LHR)  
Fig. 6



Right Hand Reverse (RHR)  
Fig. 7



#### **CVR Exit Device Application – 3090P-01 & 3090C-01 for 8500/8600**

Install Tailpiece adapter on shaft of the vertical rod and fasten with Phillips screw as shown. (Fig. 8)


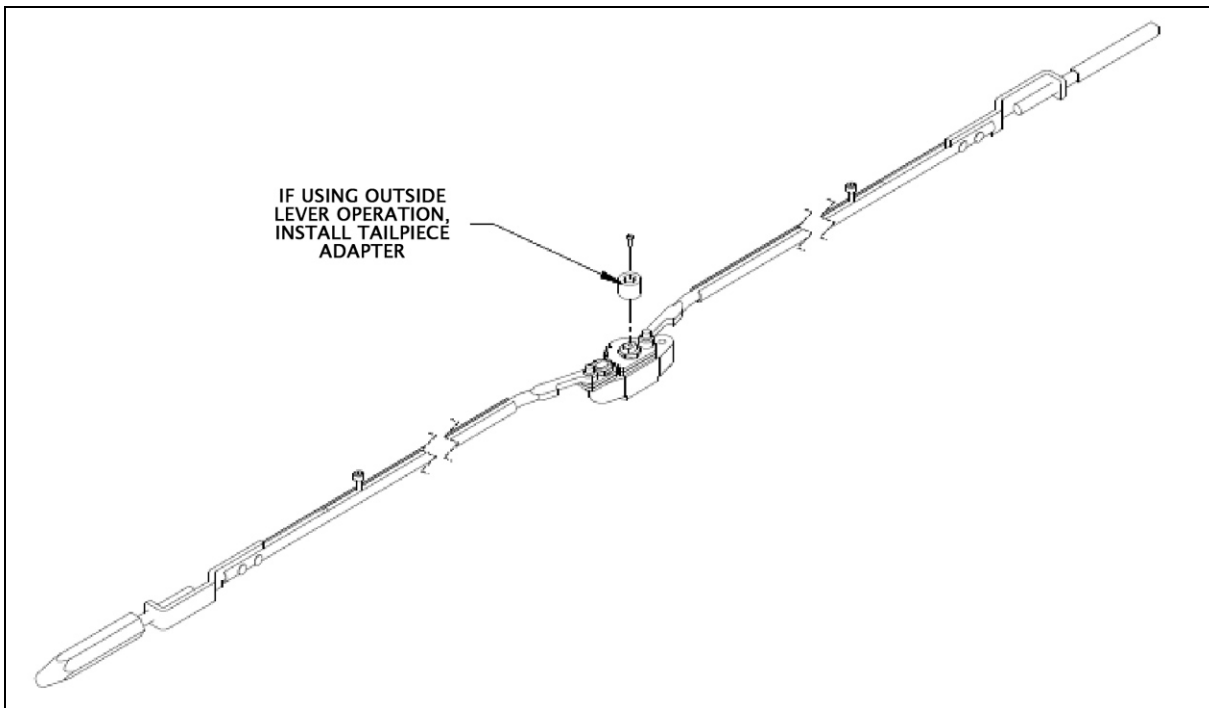


Fig. 8

### RIM Exit Device Application – 3090P-01 & 3090C-01 for 8700/8800

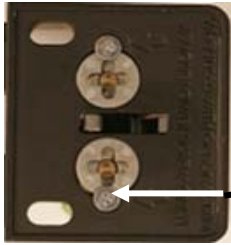

- On the back side of the exit device, remove only the lower Phillips head screw, depending on hand of door, to free up the cylinder actuator for use. (Fig. 9)

CYLINDER ACTUATOR SCREW

Fig. 9

### MS1850 Application – 3090P-02 & 3090C-02 for MS® Series Deadbolt



- Two (2) brass hex head screws and the set screw from the MS1850 will fasten the cam plug to the MS1850. (Fig. 10)
- For MS® Deadbolt, insert Cam Plug into lock case with notch on the cam plug aligned with lock case setscrew.
- Tighten setscrew and secure with the two (2) brass cam plug screws. Cam Plug must be positioned below door surface.

Fig. 10

#### **STEP 4 HANDING THE eForce® Prox & iCLASS**



- The eForce® is shipped in a non-handed neutral position with the access cover off as shown.
- To hand the eForce®, rotate the handle into the desired position until two detent clicks are completed.
- **Proceed to step 5 if installing the 3090P-02 & 3090C-02**

The output hub, located on the back of the eForce®, is shipped with a clockwise rotation as viewed from rear. In some instances, this rotation must be changed to match the device and/or hand of the door (refer to Handing Setup Chart). To change rotation, insert a flat screwdriver into the output hub (Fig. 11) located on the back of the eForce® and turn approximately 270° Clockwise or Counter-Clockwise. This will reconfigure the unit to the opposite rotation.

HANDING SETUP CHART		
DEVICE TYPE	LEFT HAND REVERSE ROTATION	RIGHT HAND REVERSE ROTATION
SVR	CLOCKWISE	CLOCKWISE
Mortise Latch	COUNTER-CLOCKWISE	CLOCKWISE
CVR	CLOCKWISE	CLOCKWISE
Rim	COUNTER-CLOCKWISE	COUNTER-CLOCKWISE



Fig. 11

## **STEP 5 MORTISE CYLINDER INSTALLATION**



Fig. 12

- Using a Philips Head Screwdriver, remove the eight (8) #10-32 x 5/8" screws on the back of the eForce® and gently lift the back plate off the housing.

**CAUTION!** There are wires connecting the housing and back plate assembly. Handle with care.



Fig. 13

- Install Cylinder into housing. Secure and fasten with supplied locking ring using locking ring spanner tool. (Fig. 13)
- Gently place back plate back on housing and secure with eight (8) #10-32 x 5/8" screws.

### Mounting the eForce®



Fig. 14

- Insert the properly dimensioned spindle into the output hub.
- Mount eForce® onto mounting bracket and guide spindle into Cam Plug (MS 1850 configuration shown). (Fig. 14)
- The eForce® must sit flush on the door surface.



Fig. 15

- Secure with two (2) #10-32 x 5/8" screws as shown. (Fig. 15)

# **LIMITED WARRANTY**

Adams Rite Manufacturing Co. (hereinafter ADAMS RITE) manufactures its products in a manner to be free of defects. Should any defect of manufacture (in material or workmanship) occur in its products, ADAMS RITE, upon prompt notification and proof to its satisfaction that the product was defective in manufacture for the use intended by ADAMS RITE, will at its option, exchange the product, repair the defect or refund the price charged by ADAMS RITE, FOB factory based on the following schedule:

- All mechanical products for five (5) years from the date of manufacture;
- All electrical products (including EL and ED exit devices) for three (3) years from the date of manufacture;
- The RITE Door® for five (5) years from the date of manufacture;
- UltraLine Electric Strikes for five (5) years from the date of manufacture.

**Limitations and exclusions:** This is a limited warranty and is in lieu of all other warranties including the implied warranties of merchantability and fitness for use) and under no circumstances shall ADAMS RITE be liable for any incidental or consequential damages or losses.

This warranty covers products as outlined above manufactured from May 1, 2003 forward.

This warranty does not cover damages from such causes as abuse, accident, neglect, fire or freight damage.

## **WARRANTY CONDITIONS**

The selling dealer from who this exit device was purchased is responsible for advising the purchaser of the period of no charge warranty exchange, repair or refund. Replacement parts under the terms of the warranty must be furnished by the Adams Rite dealer or agency.

## **FACTORY ASSISTANCE**

If the purchaser is unable to locate a service agency, or if the purchaser does not receive satisfaction from the source of which the exit device was purchased, or from local dealer, write or contact Adams Rite at the following address:

Adams Rite Manufacturing Co.  
260 Santa Fe Street  
Pomona, CA 91767  
Phone: 800-872-3267  
Fax: 800-232-7329