


MIS-200BE

INTRALOT Scanner

User's Guide

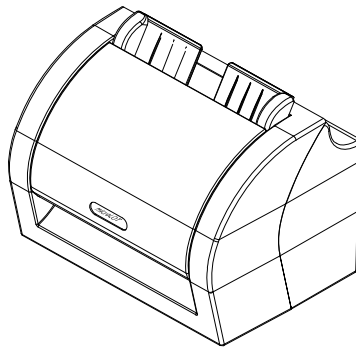

WITEK SYSTEM
INC

NOTICE

1. Witek System Inc. reserves the right to make changes to the contents of this publication without prior notice.
2. Witek System Inc. reserves the right to make changes to equipment and specifications without obligation or notification.
3. Some equipment nomenclature and abbreviations used here may differ from that contained in other Witek publications
4. Witek System Inc. will not be held responsible for any accidents for damage caused by procedures not in compliance with those in this publication, or by actions that did not heed to the cautions.
5. This publication, or parts thereof, may not be reproduced in any form without prior written permission of Witek System Inc. Unauthorized use or distribution of this publication is prohibited.

(c) Witek System Inc. 2009

Information to the user

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Important safety Instructions



This manual describes important details for users to use this product safely and correctly. Read this manual thoroughly before you start using this product. Be sure to read and fully understand the Safety Precautions in this manual, in particular. In addition, keep this manual handy during use of this product, so that you can refer to it quickly when necessary.

The following instructions pertain to the risk of fire, electric shock or bodily injury. Please read all of these instructions carefully.

- 1 Save these instructions for later use.
- 2 Follow all of the instructions and warnings marked on this product or included in this manual.
- 3 Do not use this scanner on an unstable cart, stand or table. The product may fall, causing serious damage to the product.
- 4 Don't use this product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat register.
- 5 Never push objects of any kind into the scanner through the case openings, as they may touch dangerous voltage points or short out parts that could result in a fire or electrical shock. Never spill liquid of any kind on the product.
- 6 This scanner should only be connected to the + 24V / min. 2.5A DC power source or designated power adapter indicated on your scanner information label. If you are not sure of the type of power source available, consult your dealer or local power company. Only connect this scanner to a power outlet that matches the power requirements of this scanner.
- 7 Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 8 Do not use this scanner near water.
9. Do not touch the power plug or USB bus power cable with wet hands. Doing so might cause electric shock.
10. A damaged power cable or USB bus power cable may cause fire or electric shock. Do not place heavy objects on the power or USB bus power cable, or pull, bend, twist, heat, damage or modify the cable. Do not use damaged power or USB bus power cables or power plugs. Do not use the power cable when the wall socket is loose.
11. Use only the specified Power, USB bus power, and interface cables. Failure to use the correct cables might cause electric shock and equipment failure.

12. If you detect heat coming from the device or detect other problems such as smoke, strange smells or noises, immediately turn off the scanner and then disconnect its power plug from the power outlet, or unplug the USB bus power cable from the computer. Make sure that the smoking has stopped, and then contact an authorized Witek scanner service provider.
13. Do not place heavy objects on the scanner or use the top surface of the scanner for performing other work. Improper installation might cause injuries.
14. When the scanner is not used for a long period, be sure to disconnect the power plug from the power outlet, or disconnect the USB bus power cable from the computer for safety. Not doing so might cause electric shock or fire.
15. Do not insert or drop metal or flammable foreign objects in to the scanner. Do not scan wet documents or documents with paper clips or staples. Do not splash or allow the scanner to get wet.
16. To avoid injuries, do not place the scanner in an area where small children may be able to reach.
17. Do not move the scanner with the power and interface cables connected as this might damage the cables, causing fire, electric shock or injuries. Before moving the scanner, be sure to disconnect the power plug from the power outlet, and disconnect interface cables as well. Also, make sure that the floor is free of obstructions.
18. Avoid getting a sleeve, necktie, or hair caught up in any scanner mechanism when scanning as this may cause injuries.
19. Install the scanner away from strong magnetic fields and other sources of electronic noise. Also, protect the scanner from static electricity as this might cause the scanner to malfunction.
20. Do not use the scanner immediately after moving it from a cold place into a warm room. This may cause condensation, which might lead to scanning errors. Let the device dry about one or two hours before you use it.

Maintenance



Repairs should be done by properly trained repair technicians. When this product needs servicing, please contact the authorized Witek Image Scanner service provider.

If the product does not operate normally, adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and may require extensive repair work to restore the product to normal operation.

Unplug this product from the main power outlet and call for service under any of the following conditions:

- a If the power cord or plug is damaged or frayed.
- b If liquid has been spilled into the product.
- c If the product has been exposed to rain or water.
- d If the product has been dropped.
- e If the product exhibits a distinct change in performance, indicating a need for service.

Stop



If you ever have to remove the scanner cover, observe the following precautions :

- a The power supply cord must be unplugged before the scanner cover is removed.
- b Once removed, the cover must be replaced and screwed in position before the power supply cord is plugged back in.

1. Before you start using the scanner

- 1.1 Unpacking
- 1.2 Part Identifications
- 1.3 Connecting the Cables
- 1.4 Driver Installation

2. Installation Specifications

3. Using the scanner

- 3.1 Basic Flow of Operations

4. Troubleshooting

- 4.1 Clearing Paper Jams
- 4.2 Troubleshooting check list

5. Cleaning the inside of the Scanner

6. Dimension

7. Repair

1. Before you start using the scanner


1.1 Unpacking

When you unpack the scanner package, find the packaging list first, and then make sure that the MIS-200BE and all items in the packaging list are present. If anything is missing or damaged, contact the dealer where you purchased the product.


1.2 Part Identifications

This section describes the names of parts and their functions.



■ Front View

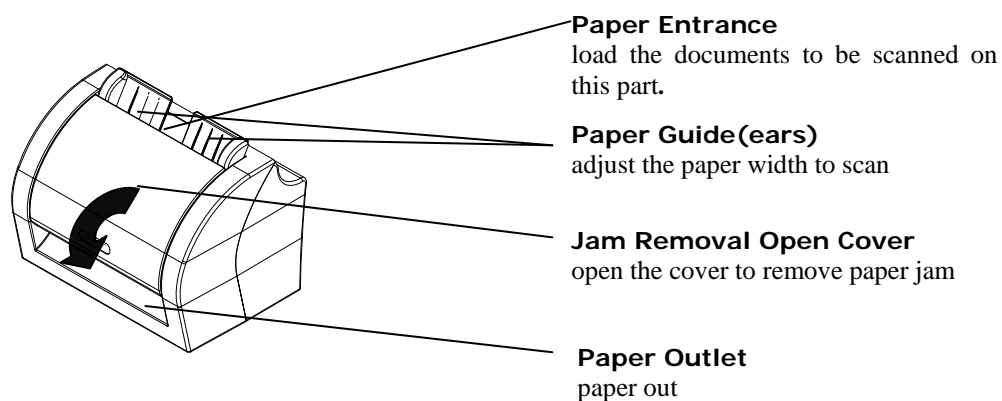

■ Rear View

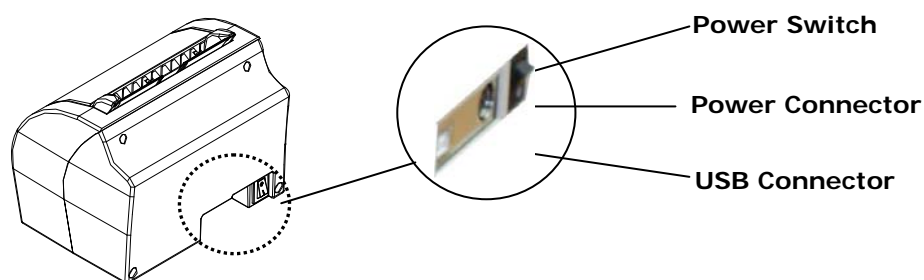


■ Use the following cables(Options)
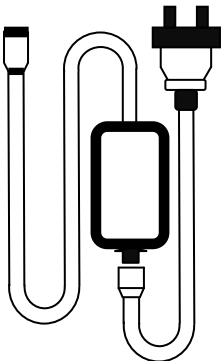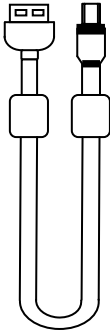
<p>The Power cable (Option) is a combination of the AC adapter and AC cable.</p>	
<p>USB bus power cable(Option)</p>	

* additional cable option : Power Y cable (compatible with microlot power source)


■ USB Interface

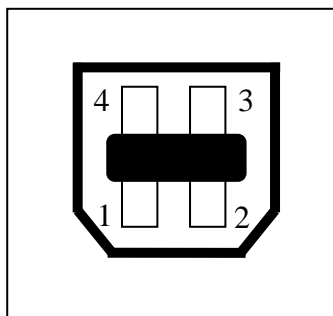

Pin	Signal	Descriptions
1	+5V	+5V
2	Data -	Scanner transmit data line
3	Data +	Scanner transmit data line
4	GND	System Ground

1.3 Connecting the cables

Connect the MIS-200BE scanner to a power supply in either of two ways below: First, connect to a power supply, and then connect to a host terminal with the USB cable.

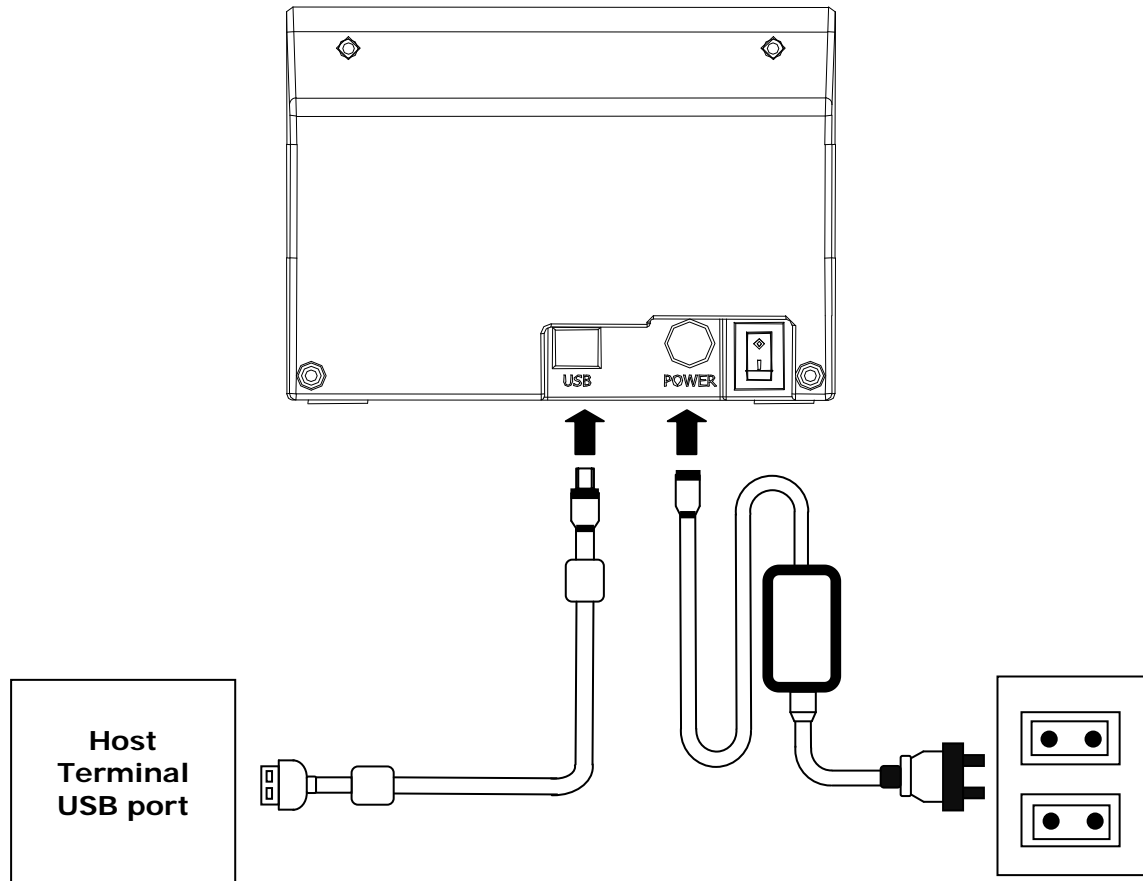

Attention

- Be sure to use the supplied AC adapter and AC cable.
- Be sure to use the supplied USB cable. The operation with any commercially available USB cable is not guaranteed.
- If only the USB cable is used, the MIS-200BE does not operate. Be sure to use two types of cables, the power and USB cables, to connect the MIS-200BE to a host terminal.
- Connect the Power cable before connecting the USB cable
- When connecting to a USB hub, be sure to use the first stage USB hub that is closest to the computer. If you use the second or later hub stages, the scanner may not operate properly.
- When connecting with a USB 2.0 cable, make sure that the USB port to connect to and hub must be USB 2.0-compliant.

1.4 Driver Installation

■ Before Installing the SDK & Driver for MIS-200BE

Before Installing the SDK & Driver for MIS-200BE, perform the following preparations. :

1. Check your system

The system requirements for the MIS-200BE are as follows

One of the following operating system is required :

Windows 2000

Windows XP

Embedded XP

Linux

◆ Host terminal

* For Windows 2000, Windows XP and Linux :

Recommended: Intel® Celeron® M 430 1.73 GHz or higher

Minimum: Intel® Pentium® III 600 MHz or higher

* USB port (USB 2.0/1.1)

◆ RAM

* For Windows 2000 and Windows XP:

Recommended: 512 MB or more

Minimum: 256 MB or more

◆ Free disk space

Minimum 100 MB


2. Make sure that the MIS-200BE is not yet connected to your host terminal.
3. Start your computer.
Log on as a user with "Computer administrator" privileges.
4. Exit all programs and close all windows.

■ Installing the (“MIS-200BE _setup.exe”) and the Driver for MIS-200BE

Attention These instructions are for Windows XP (which we highly recommend with our USB Interfaces). Installation under Windows 2000 and embedded XP are similar, but not necessarily identical. If you are using Linux, then you should contact your dealer or Witek Technical team, We may send you Linux driver.

SDK Installation

1. Make sure you have a “MIS-200BE _setup.exe” that dealer or Witek distributor provided. If not, You may download “MIS-200BE _setup.exe” from Witek website as www.witek.co.kr
2. Execute “MIS-200BE _setup.exe”.

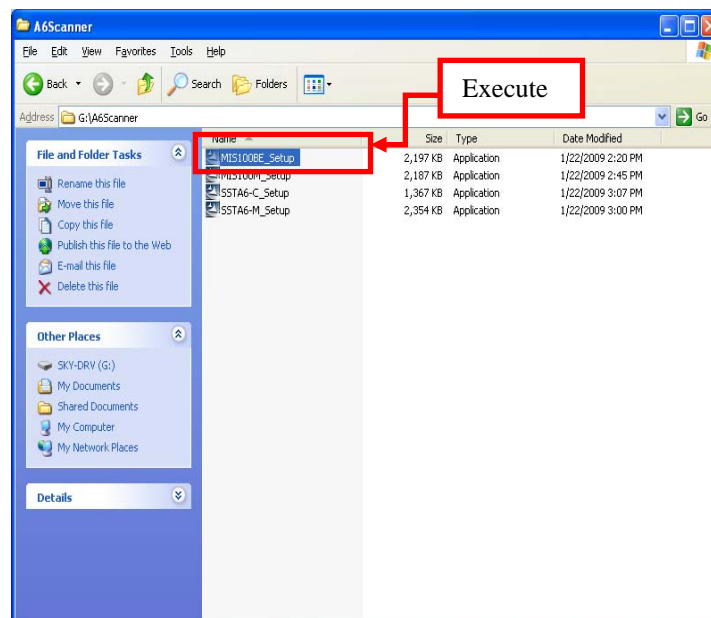


3. Click the [Next >] button
4. The following dialog should appear;



You should select typical and then click “next” button

5. The following dialog should appear ;

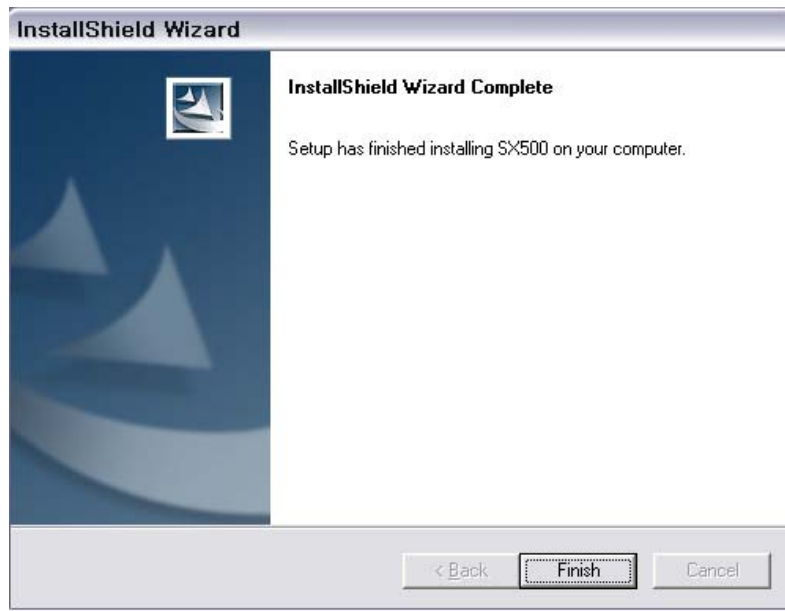

6. Click the [**Finish**] button to complete the installation

Note After installation of MIS-200BE _setup.exe. You may find the following folders under

```
C:\Witek\Driver
  \ MIS-200BE \
    \branding image
    \firmware
    \cfg
    \program
```

You may execute MIS-200BE.exe in the ..\program folder.

The Driver Installation

7. Plug MIS-200BE Scanner USB Interface to your host terminal USB port . A message like this should appear on your terminal PC's Taskbar:




- Attention** If the new Hardware Found Wizard popup does not appear when you plug in your interface, go into Device Manager and look for the interface. In Windows XP, you can typically find the Device Manager by **RIGHT-CLICKING** on My Computer then selecting Manage. Your Witek CIS SCANNER USB Interface should be under **Universal Serial Bus (USB) Controllers** or under **Other Devices**. If it's there, Right-Click it and then select **Update Driver**. Then you can start at Step 3 in the instructions below.

8. The New Hardware Found Wizard should appear:



On the screen left, select "**Install from a list or specific location (Advanced)**" then click the [**Next >**] button


9. The following dialog should appear:

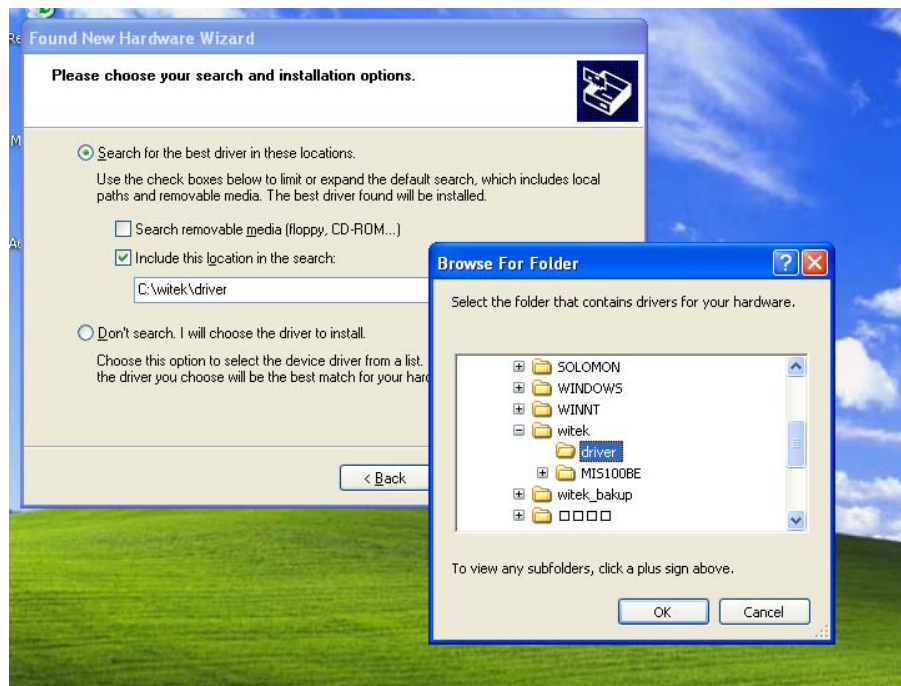


10. On the screen above:

Select "**Search for the best driver in these locations**"
Check "**Include this location in the search:**"
Use the [Browse] button to find the MIS-200BE folder
(Usually **C:\Program Files\ MIS-200BE \driver**)
Click [OK]

11. The following dialog should appear:

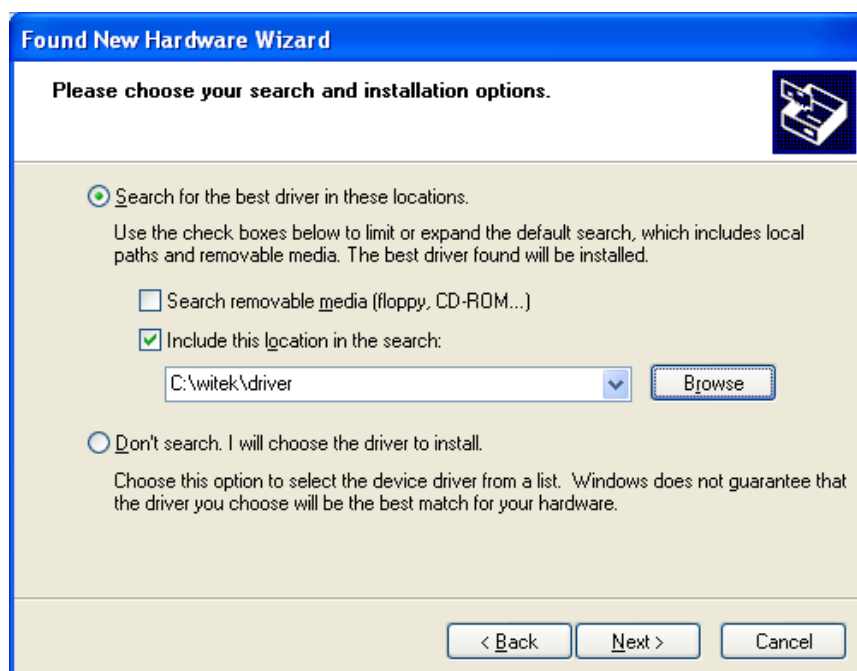

12. Click the [**Next >**] button
13. The following dialog should appear:

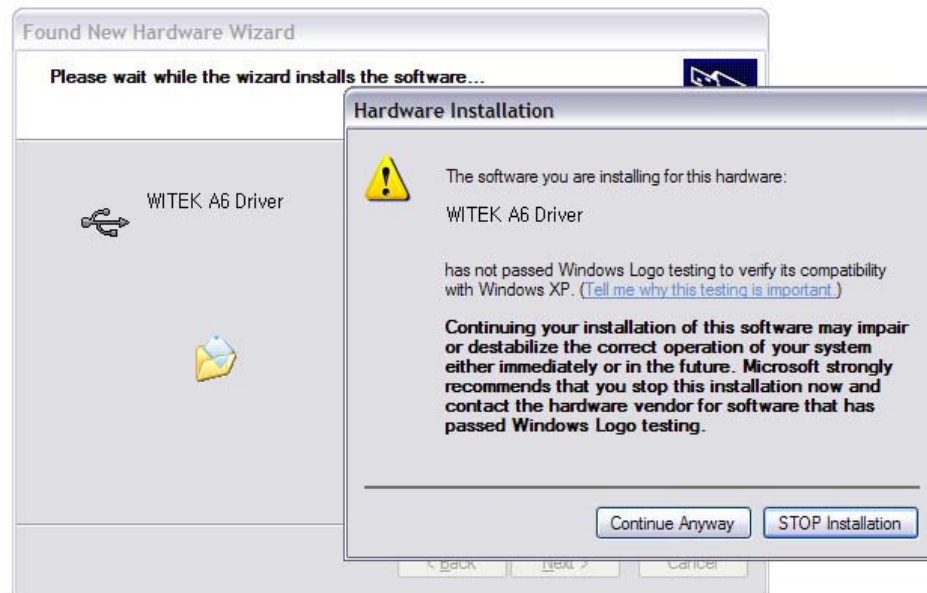

1

14. This dialog warns you that we haven't paid Microsoft a pound of flesh to certify the driver. You're going to have to click the [**Continue Anyway**] button...:-)
15. The following dialog should appear:



16. Click the [**Finish**] button to complete the installation

2. Installation Specifications


The following table summarizes the installation specifications of this scanner.

Scan	Descriptions
Scan source	Single sided Contact Image Sensing
Scan size	Width: up to 104 mm (lottery application : 82.55 mm) Length: up to 290 mm
Scanning Resolution	200 dpi
Scanning Speed	Max. 400 mm/sec at B/W, 256 gray
Out put Format	1 bit (b/w), 4 bit (16 gray), 8 bit (256 gray)
Image format	Bmp, jpg, tif and raw image data
Interface	USB 2.0 & 1.1 (WINDOW, LINUX DRIVER SUPPORT)
Paper thickness	0.1 mm ~ 0.2 mm
Power	+24 VDC/2.5 A or 2.7 A
MTBF	50,000 hours (CIS only)
Dimension	162 mm (W) x 110.5 mm (H) x 155 mm (D)
Weight	1.7 kg
Temperature / Humidity	Temp.: -20 °C ~ 60 °C Humidity: 10 % R.H. ~ 90 % R.H. non-condensing
Scanner SDK	API Programming support(library files) Linux/window available
Option	Thermal Brander Dual CIS Sensor(Dual Scan) Shade free Scan Image processing Library OMR Library Barcode Recognition Library UV Sensor light for counterfeit detection

3. Using the scanner

3.1 Basic flow of Operations

With the document, such as check, omr card, loaded on the MIS-200BE, simply insert the the document, and you can save the scanned documents to files via your program using Witek SDK or test program (MIS-200BE)

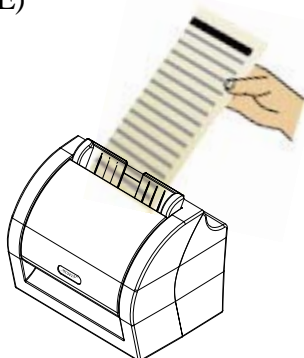

Attention ■ Make sure that the Power cable or USB bus power cable is connected to the MIS-200BE scanner

Note ■ Do not scan the following types of documents:


- Document with paper clips and/or staples (Remove clips and staples to scan these documents.)
- Documents folded in half
- Materials other than paper such as the fabric, metal foil, transparency, or plastic card

4. Troubleshooting


4.1 Clearing Paper Jams

If a paper jam occurs during scanning, follow the procedure below to remove the jammed document.

Jam Removal Open Cover

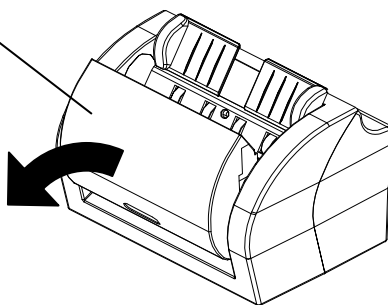

1. Open the Jam removal cover
2. Remove the jammed paper in the scanner

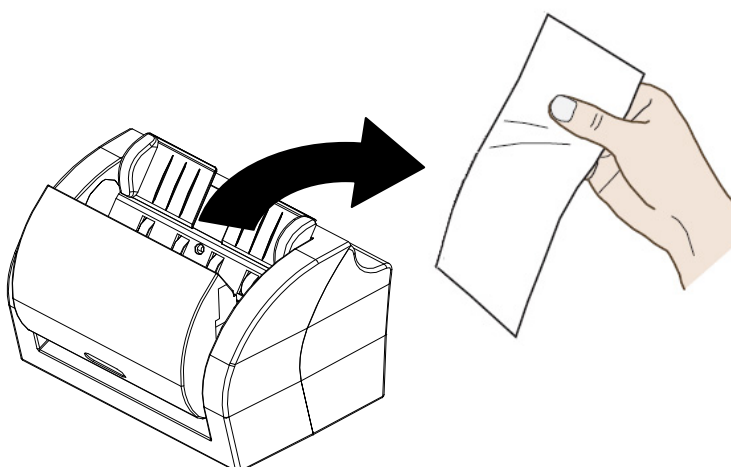

3. Close the Jam removal cover

4.2 Troubleshooting check list

This section describes common problems that may occur during usage of the MIS-200BE and how to solve the problems. Before you call a repair service, perform simple troubleshooting steps in the table below. If performing these troubleshooting steps does not resolve your problem, contact an authorized Witek scanner service provider or dealer.

Symptom	Check this item	Resolution
The scanner cannot be turned on	Are the power or USB bus power cable and the USB cable connected correctly?	Correctly connect the power or USB cable and USB bus power cable to the computer. When using a hub, check the hub's power supply. If you connect to a non-powered hub, the scanner may not work properly.
		Disconnect and then re-connect the power
Scanning does not start.	Is the USB cable connected correctly?	Connect the USB cable correctly.
	Is the device driver installed correctly?	Re-install the MIS-200BE device driver
The document is not fed properly or gets jammed.	Is the inside of the scanner dirty? Or, did you insert any paper that is torn, or bent?	Clean the dirty locations. Do not insert the paper that is torn or bent
Black lines are produced on the scanned document.	Is the scanned document written with a pencil?	Black lines may be produced on scanned documents written with a pencil, making the rollers dirty or causing improper paper feeding. To avoid such troubles, clean rollers as often as possible.
For more information, You may contact a authorized Witek service provider or dealer		




5. Cleaning the inside of the Scanner

Clean inside of the scanner with a soft lint-free cloth. In an alternating succession of scanning documents, the accumulated paper-powder and dust inside the scanner causes a scanning error.

Attention

- Do not use water or neutral detergent to clean the inside of the scanner.
- Do not use aerosol sprays to clean the scanner. Aerosol sprays cause dirt and dust to enter the scanner, resulting scanner failure and malfunction.
- When cleaning the scanner parts, dampen a cloth with modest quantities of the cleaner. In addition, wipe off the cleaner completely with a soft lint-free cloth to leave no residue on the surface of the cleaned parts.

6. Dimension

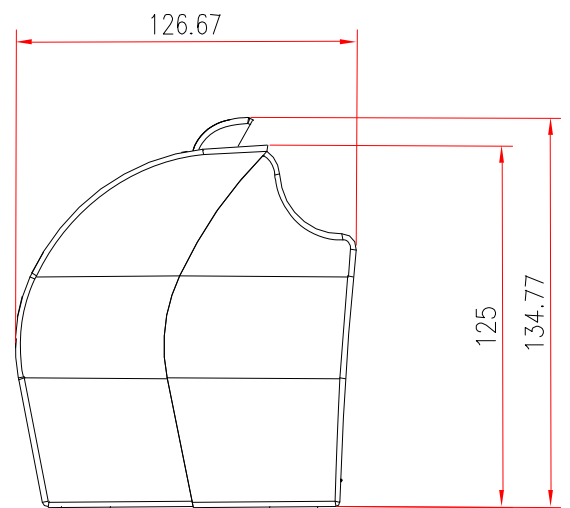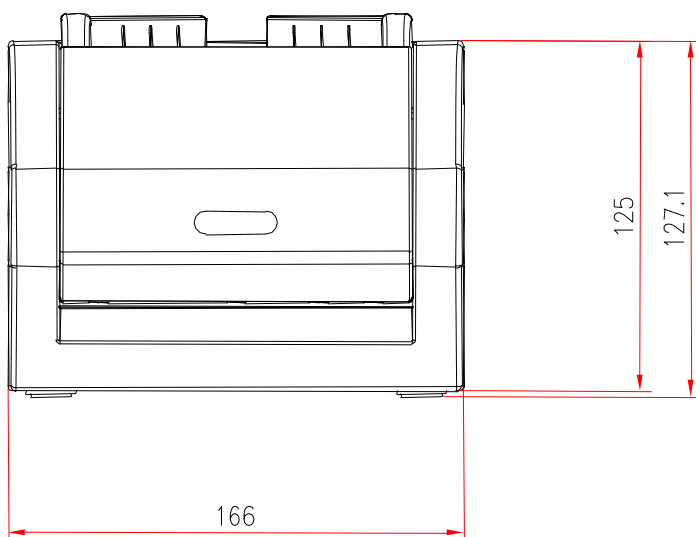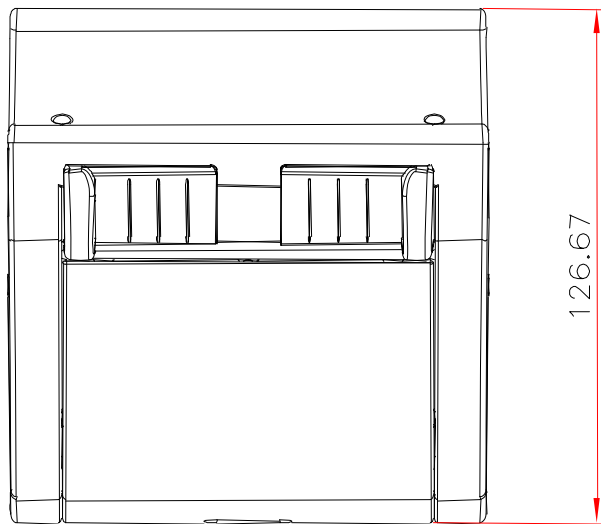

7. Repair

Contact the dealer or distributor where you purchased your MIS-200BE or an authorized service provider for performing repairs on this product.

MIS-200BE User's Guide
1-A105- MIS-200BE -090123-1
Issue date: Jan, 2009
Issued by: Witek System Inc.

The contents of this manual are subject to change without notice. Witek System Inc. assumes no liability for incidental or consequential damages arising from the use of this manual, and any claims by a third party. Copying of the contents of this manual in whole or in part and copying of the scanner applications are prohibited under the copyright law.