

## Pluto Manager - Global Parameter Listing

File=C:\...\OneDrive\UPF\projects\recif\workspace\PlutoManager\PL-005\PL-005\_rev06v01\PL-005\_rev06v01.sps

Name=<FILENAME>

File date=22/03/2023 13:51:18 Print date=22/03/2023 13:53:19 PLC CRC=12A8



Project name=<FILENAME>

Electric diagram:

recif\studies\PL-005-schema\_electrique\_CAB-2\rev06\PL-005\_rev06.pdf

Pinout description:

\recif\workspace\PlutoManager\PL-005\PL-005\_rev06v01\PL-005\_rev06v01.xlsx

Pluto password:

recif

Author: Franco FERRUCCI

Created: 06/01/2023

Last modification: 22/03/2023

System function library include=func06.fps

User function library include=

Can Baudrate=Default (400kbit/s)

Pluto 0: 30 networks

safety: 20 networks

non\_safety: 10 networks

## Pluto Manager - Parameter listing Pluto 0

File=C:\...\OneDrive\UPF\projects\recif\workspace\PlutoManager\PL-005\PL-005\_rev06v01\PL-005\_rev06v01.sps

Name=<FILENAME>

File date=22/03/2023 13:51:18 Print date=22/03/2023 13:53:19 PLC CRC=12A8



IDFIX no=00001E40E4C3

CanBus cycle time=Default

CanBus timeout=Default

PLC cycle time=Default

IO.0: Input, A\_Pulse, Non\_Inv

IO.1: Input, A\_Pulse, Non\_Inv

IO.2: Input, B\_Pulse, Non\_Inv

IO.3: Input, C\_Pulse, Non\_Inv

IO.4: Input, Static

IO.5: Input

IO.6: Input, B\_Pulse, Non\_Inv

IO.7: Input, B\_Pulse, Non\_Inv

IO.10: Undefined

IO.11: Undefined

IO.12: Undefined

IO.13: Undefined

IO.14: Undefined

IO.15: Undefined

IO.16: Undefined

IO.17: Undefined

IO.20: Undefined

IO.21: Undefined

IO.22: Undefined

IO.23: Undefined

IO.24: Undefined

IO.25: Undefined

IO.26: Undefined

IO.27: Undefined

IO.30: Input, B\_Pulse, Non\_Inv

IO.31: Input, B\_Pulse, Non\_Inv

IO.32: Input, Static

IO.33: Input, A\_Pulse, Non\_Inv

IO.34: Input, C\_Pulse, Non\_Inv

IO.35: Input, Static

IO.36: Input, Static

IO.37: Input, Static

IO.40: Input, C\_Pulse, Non\_Inv

IO.41: Input, Static

IO.42: Input, A\_Pulse, Non\_Inv

IO.43: Undefined

IO.44: Undefined

IO.45: Undefined

IO.46: Undefined

IO.47: Undefined

IQ0.10: Output, A\_Pulse

IQ0.11: Output, B\_Pulse

IQ0.12: Output, C\_Pulse

IQ0.13: Output, Static

IQ0.14: Output, Static

IQ0.15: Output, Static

IQ0.16: Output, Static

IQ0.17: Output, Static

IQ0.20: Output, Static

IQ0.21: Output, Static

IQ0.22: Output, Static

IQ0.23: Output, Static

IQ0.24: Output, Static

IQ0.25: Output, Static

IQ0.26: Undefined

IQ0.27: Undefined

## Pluto Manager - Variable listing Pluto 0

File=C:\...\OneDrive\UPF\projects\recif\workspace\PlutoManager\PL-005\PL-005\_rev06v01\PL-005\_rev06v01.sps

Name=<FILENAME>

File date=22/03/2023 13:51:18 Print date=22/03/2023 13:53:19 PLC CRC=12A8



### Pluto 0

I0.0=in_nh3_detector_open	;NH3 gas detector, NC contact. Open when no gas is detected.
I0.1=in_nh3_detector_closed	;NH3 gas detector, NO contact. Closed when no gas is detected.
I0.2=in_h2_detector1_closed	;H2 gas detector central (GfG). Closed when no gas is detected.
I0.3=in_h2_detector2_open	;H2 gas detector 2 (Dega). Open when no gas or error is detected.
I0.4=in_h2_detector2_closed	;H2 gas detector 2 (Dega). Closed when no gas or error is detected.
I0.5=h2_detector2_analog	;H2 gas detector 2 (Dega) analog input. 4..20mA to 1..5V through a 250 Ohm resistor. 1 count = 0.1V.
I0.6=in_stop_button_container_NC	;Stop button inside container. Closed when button is not pressed.
I0.7=in_stop_button_container_NO	;Stop button inside container. Open when button is not pressed.
I0.30=in_supervision_relay_NC	;"Supervision-Safety" interface relay. Closed when relay is de-energized.
I0.31=in_supervision_relay_NO	;"Supervision-Safety" interface relay. Open when relay is de-energized.
I0.32=in_extractor1_command_NO	;Extractor 1 command. Open when user wants to turn it OFF. Closed when user wants to turn it ON.
I0.33=in_extractor1_pressure_NO	;Extractor 1 pressure sensor. Closed when underpressure is detected (extractor ON). Open when no underpressure is detected (extractor OFF).
I0.34=in_extractors_available	;Extractors 1 and 2 availability. Closed when both extractors are available. Open when thermal protections are triggered or 3-phase power is not available.
I0.35=in_reset_sound_alarm_NO	;Reset "safety action 1" (gas sound alarm). Closed when button is pressed. Note: the button is in series with several feedback NC contacts.
I0.36=in_reset_extractors_NO	;Reset "safety action 2" (extractors and visual alarm). Closed when button is pressed. Note: the button is in series with several feedback NC contacts.
I0.37=in_reset_shutdown_container_NO	;Reset "safety action 3" (container power shutdown). Closed when button is pressed. Note: the button is in series with several feedback NC contacts.
I0.40=in_stop_button_cabinet_NC	;Stop button installed on CAB-2 door. Closed when button is not pressed.
I0.41=in_test_extractors_NO	;Test extractors 1 & 2. 0: No test. 1: Test activated.
I0.42=in_h2_detector1_fault_closed	;H2 gas detector central (GfG). Closed when no default is detected.
Q0.2=out_safety_shutdown1	;Safety action #3. It commands: H2 electrovalve, electrolyzer, PV panels.
Q0.3=out_safety_shutdown2	;Safety action #3. It commands: container 3-phase power, fuel-cell Li-ion batteries.
Q0.4=out_safety_sound_alarm	;Safety action #1. It commands sound alarm.
Q0.5=out_safety_extractors	;Safety action #2. It commands extractors and visual alarm.
Q0.10=A_pulse_out	;Dynamic output signal. Pulse train type A (marked as red-black cable in PL-005_rev04v01).
Q0.11=B_pulse_out	;Dynamic output signal. Pulse train type B (marked as blue-black cable in PL-005_rev04v01).
Q0.12=C_pulse_out	;Dynamic output signal. Pulse train type C (marked as magenta-black cable in PL-005_rev04v01).
Q0.13=LED_system_online	;Indication light. Light ON: safety PLC is online. Light OFF: PLC is offline (power cut).
Q0.14=LED_H2_alarm_non_latched	;Indication light. Light ON: at least one of the two H2 gas sensors is detecting a gas leak. Light OFF: none of the H2 gas sensors is detecting a gas leak.
Q0.15=LED_H2_alarm_latched	;Indication light. Latched version of 'LED_H2_alarm_not_latched' signal.
Q0.16=LED_NH3_alarm_non_latched	;Indication light. Light ON: NH3 gas sensor is detecting a gas leak. Light OFF: NH3 gas sensor is not detecting a gas leak.
Q0.17=LED_NH3_alarm_latched	;Indication light. Latched version of 'LED_NH3_alarm_non_latched' signal.
Q0.20=LED_extractors_out_of_service	;Indication light. Light ON: at least one extractor is out of service. Light OFF: both extractors are available.
Q0.21=out_non_safety_gas_OK	;Indication. Activated: gas leak has been detected or safety system is out of service. Non activated: no gas has been detected and safety system is online.
Q0.22=out_non_safety_reset_ready_sound_alarm	;Indication. Reset "safety action 1" (gas sound alarm) is ready to be reseted by pressing 'reset_sound_alarm_NO' button.
Q0.23=out_non_safety_reset_ready_extractors	;Indication. Reset "safety action 2" (extractors) is ready to be reseted by pressing 'reset_extractors_NO' button.
Q0.24=out_non_safety_reset_ready_shutdown	;Indication. Reset "safety action 3" (container power shutdown) is ready to be reseted by pressing 'reset_shutdown_container_NO' button.
Q0.25=out_non_safety_fault_alarm	;'OR' logic combination of all positive-logic fault variables.
M0.0=var_system_online	;1: System is online
M0.1=var_H2_H2_OK	;1: No gas detection or error in either of the H2 gas detectors (not latched).
M0.2=var_H2_H2_OK_latched	;1: No gas detection or error in either of the H2 gas detectors. Latched variable (i.e. it needs to be reset after been triggered).
M0.3=var_NH3_detector_OK	;1: No gas detection or error in NH3 detector (not latched).
M0.4=var_H2_detector1_OK	;1: No gas detection or error in H2 detector 1 (not latched).
M0.5=var_H2_detector2_contacts_OK	;1: NO and NC contacts operate in opposition. 0: they are simultaneously open or closed.
M0.6=var_H2_H2_reset_ready	;1: Both H2 gas detectors indicate no detection or error, so the latched variable can be reset.
M0.7=var_fault_NH3	;1: Fault, NO and NC contacts are either open or closed simultaneously. 0: No fault.

## Pluto Manager - Variable listing Pluto 0

File=C:\...\OneDrive\UPF\projects\recif\workspace\PlutoManager\PL-005\PL-005\_rev06v01\PL-005\_rev06v01.sps

Name=<FILENAME>

File date=22/03/2023 13:51:18 Print date=22/03/2023 13:53:19 PLC CRC=12A8



M0.8=var_NH3_detector_OK_latched	;1: No gas detection or error in NH3 gas detector. Latched variable (i.e. it needs to be reset after been triggered).
M0.9=var_NH3_reset_ready	;1: NH3 gas detector indicates no detection or error, so the latched variable can be reset.
M0.10=var_stop_container_OK	;1: Stop button inside container is OK (not pressed and without error).
M0.11=var_fault_stop_container	;1: Stop button inside container is in error state (contacts are simultaneously open or closed).
M0.12=var_STOP_STOP_OK	;1: Both stop buttons are OK (none of them is pressed or in error).
M0.13=var_extractor1_pressure_OK	;1: (extractor 1 is activated AND under-pressure is detected) OR (extractor 1 is not activated AND under-pressure is not detected). Not filtered variable.
M0.14=var_supervision_OK	;1: Supervision input is OK (not triggered and no error).
M0.15=var_fault_supervision	;1: Fault, NO and NC contacts are either open or closed simultaneously. 0: No fault.
M0.16=var_fault_H2_detector2_contacts	;1: Fault, NO and NC contacts are either open or closed simultaneously. 0: No fault.
M0.17=var_H2_detector2_analog_OK	;1: The analog input coming from H2 detector 2 indicates a value greater than or equal to 0.6V (2.4mA with a 250 Ohm resistor).
M0.18=var_extractor1_pressure_OK_filtered_negated	;Filtered and negated version of 'var_extractor1_pressure_OK' variable (to avoid glitches). This is an auxiliary variable in order to use a 'TON' block as filter.
M0.19=var_extractor1_pressure_OK_filtered	;Filtered version of 'var_extractor1_pressure_OK' variable (to avoid glitches).
M0.20=var_shutdown_OK	;1: Container shutdown is OK (Safety action #3) (not latched).
M0.21=var_shutdown_OK_latched	;1: Container shutdown is OK (Safety action #3). Latched variable (i.e. it needs to be reset after been triggered).
M0.22=var_lamp_test	;1: lamp test is activated. All alarms LEDs will turn on, overriding momentarily the states of the LEDs. 0: lamp test is not activated.
SM0.5=SM_FastFlash	;Flash 0.17s/0.33s (on/off)
SR0.41=SR_I5_Volt	;Voltage at analogue input I5 (x10 volt)
SR0.41=SR_I5_Volt	;Voltage at analogue input I5 (x10 volt)
SR0.41=SR_I5_Volt	;Voltage at analogue input I5 (x10 volt)
SR0.41=SR_I5_Volt	;Voltage at analogue input I5 (x10 volt)
SR0.41=SR_I5_Volt	;Voltage at analogue input I5 (x10 volt)

## Pluto 0 safety

1

Start

Safety sequence. Program start-up. Not handled by the user.

2

H2 gas detector 1 (brand: GfG):

in\_h2\_detector1\_closed in\_h2\_detector1\_fault\_closed  
I0.2 I0.42

var\_H2\_detector1\_OK  
M0.4

I0.2=in\_h2\_detector1\_closed H2 gas detector central (GfG). Closed when no gas is detected.

I0.42=in\_h2\_detector1\_fault\_closed H2 gas detector central (GfG). Closed when no default is detected.

M0.4=var\_H2\_detector1\_OK 1: No gas detection or error in H2 detector 1 (not latched).

3

H2 gas detector 2 (brand: Dega):

in\_h2\_detector2\_open  
I0.3

TC2S

var\_H2\_detector2\_contacts\_OK  
M0.5

in\_h2\_detector2\_closed  
I0.4

In1

Q

In2

TCfault

var\_fault\_H2\_detector2\_contacts  
M0.16

Start

I0.3=in\_h2\_detector2\_open H2 gas detector 2 (Dega). Open when no gas or error is detected.

I0.4=in\_h2\_detector2\_closed H2 gas detector 2 (Dega). Closed when no gas or error is detected.

M0.16=var\_fault\_H2\_detector2\_contacts 1: Fault, NO and NC contacts are either open or closed simultaneously. 0: No fault.

M0.5=var\_H2\_detector2\_contacts\_OK 1: NO and NC contacts operate in opposition. 0: they are simultaneously open or closed.

4

H2 gas detector 2, analog input (Note: if SR\_I5\_Volt &gt;= 6, then vIN &gt;= 0.6V, then iIN &gt;= 0.6V/250Ohm = 2.4mA)

SR\_I5\_Volt>=6  
SR0.41>=6

var\_H2\_detector2\_analog\_OK  
M0.17

M0.17=var\_H2\_detector2\_analog\_OK 1: The analog input coming from H2 detector 2 indicates a value greater than or equal to 0.6V (2.4mA with a 250 Ohm resistor).

SR0.41=SR\_I5\_Volt Voltage at analogue input I5 (x10 volt)

5

H2 gas detectors 1 and 2:

var\_H2\_detector1\_OK var\_H2\_detector2\_contacts\_OK var\_H2\_detector2\_analog\_OK  
M0.4 M0.5 M0.17

var\_H2\_H2\_OK  
M0.1


M0.1=var\_H2\_H2\_OK 1: No gas detection or error in either of the H2 gas detectors (not latched).

M0.17=var\_H2\_detector2\_analog\_OK 1: The analog input coming from H2 detector 2 indicates a value greater than or equal to 0.6V (2.4mA with a 250 Ohm resistor).

M0.4=var\_H2\_detector1\_OK 1: No gas detection or error in H2 detector 1 (not latched).

M0.5=var\_H2\_detector2\_contacts\_OK 1: NO and NC contacts operate in opposition. 0: they are simultaneously open or closed.

## 6 H2 gas detectors 1 and 2, latching:

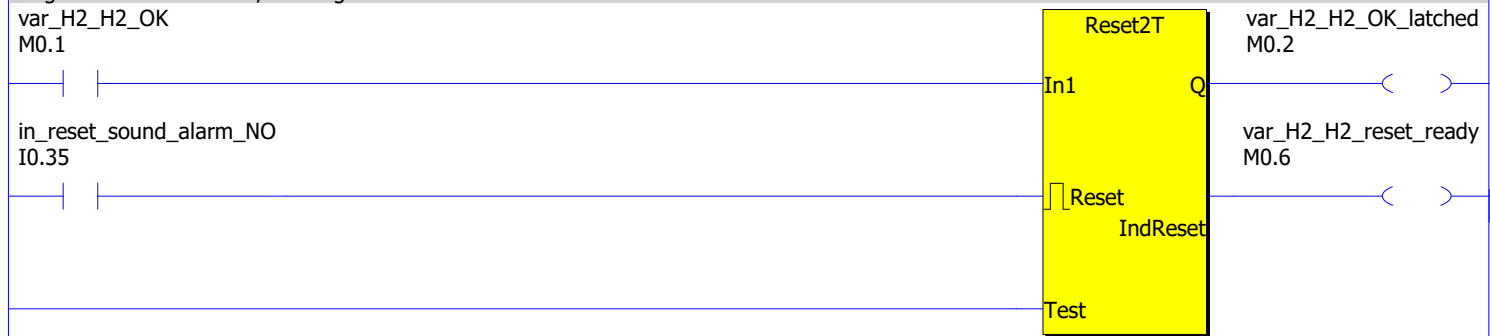


*I0.35=in\_reset\_sound\_alarm\_NO*      Reset "safety action 1" (gas sound alarm). Closed when button is pressed. Note: the button is in series with several feedback NC contacts.

*M0.1=var\_H2\_H2\_OK*      1: No gas detection or error in either of the H2 gas detectors (not latched).

*M0.2=var\_H2\_H2\_OK\_latched*      1: No gas detection or error in either of the H2 gas detectors. Latched variable (i.e. it needs to be reset after been triggered).

*M0.6=var\_H2\_H2\_reset\_ready*      1: Both H2 gas detectors indicate no detection or error, so the latched variable can be reset.

## 7 NH3 gas detector:

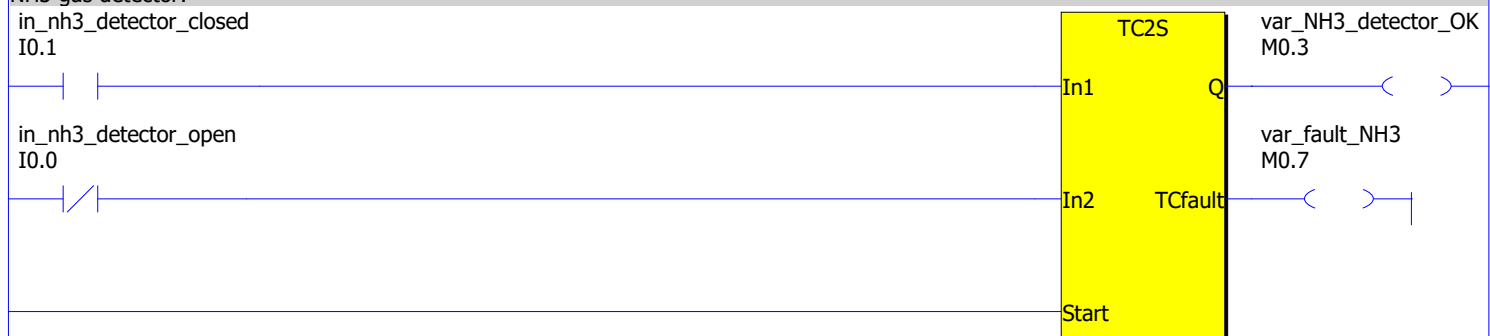


*I0.0=in\_nh3\_detector\_open*      NH3 gas detector, NC contact. Open when no gas is detected.

*I0.1=in\_nh3\_detector\_closed*      NH3 gas detector, NO contact. Closed when no gas is detected.

*M0.3=var\_NH3\_detector\_OK*      1: No gas detection or error in NH3 detector (not latched).

*M0.7=var\_fault\_NH3*      1: Fault, NO and NC contacts are either open or closed simultaneously. 0: No fault.

## 8 NH3 gas detector, latched:

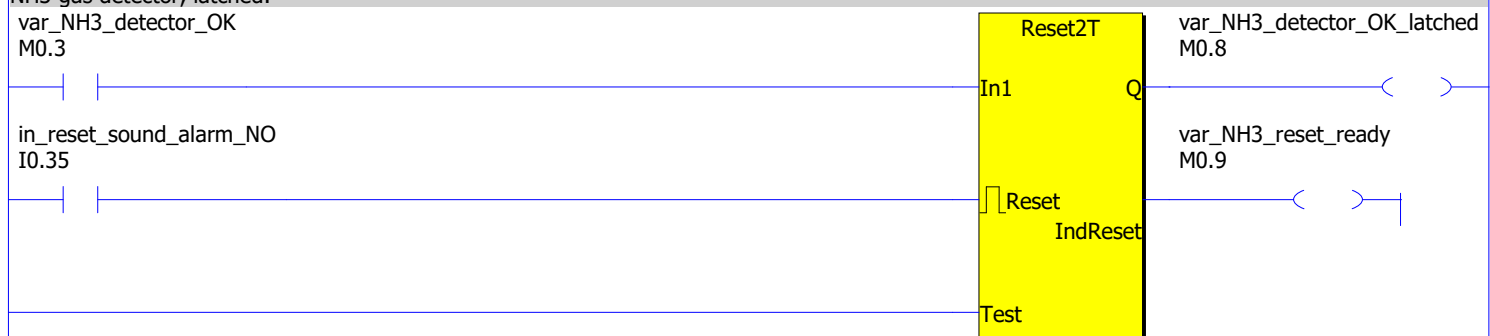

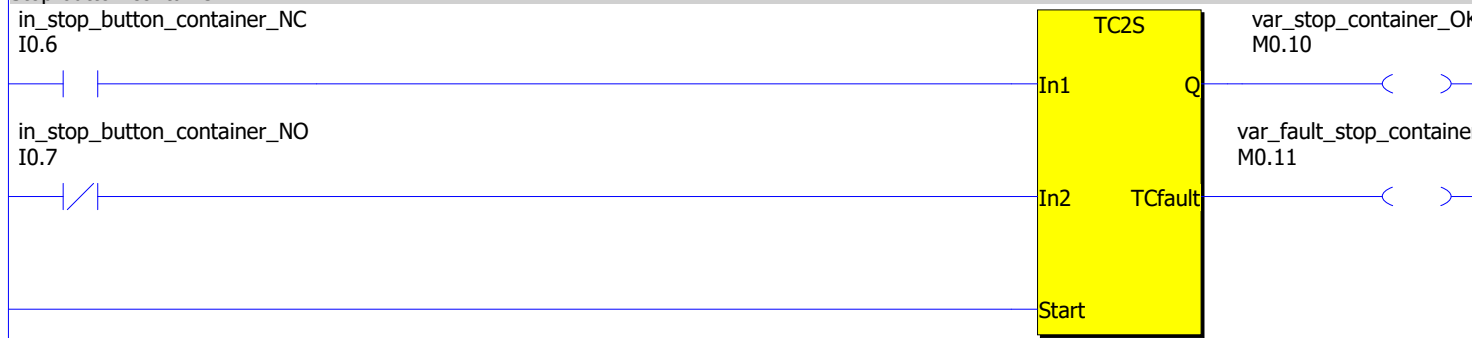
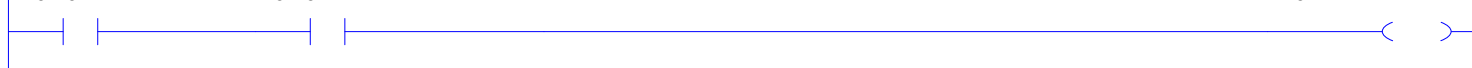


*I0.35=in\_reset\_sound\_alarm\_NO*      Reset "safety action 1" (gas sound alarm). Closed when button is pressed. Note: the button is in series with several feedback NC contacts.


*M0.3=var\_NH3\_detector\_OK*      1: No gas detection or error in NH3 detector (not latched).

*M0.8=var\_NH3\_detector\_OK\_latched*      1: No gas detection or error in NH3 gas detector. Latched variable (i.e. it needs to be reset after been triggered).

*M0.9=var\_NH3\_reset\_ready*      1: NH3 gas detector indicates no detection or error, so the latched variable can be reset.

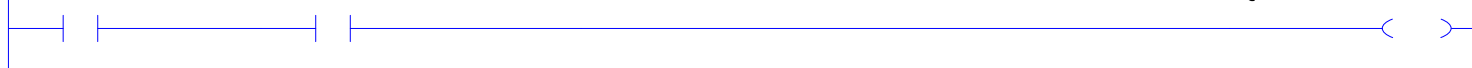- 9 **Safety action #1: sound alarm:**  
var\_H2\_H2\_OK\_latched var\_NH3\_detector\_OK\_latched out\_safety\_sound\_alarm  
M0.2 M0.8 Q0.4
- 
- M0.2=var\_H2\_H2\_OK\_latched 1: No gas detection or error in either of the H2 gas detectors. Latched variable (i.e. it needs to be reset after been triggered).*
- M0.8=var\_NH3\_detector\_OK\_latched 1: No gas detection or error in NH3 gas detector. Latched variable (i.e. it needs to be reset after been triggered).*
- Q0.4=out\_safety\_sound\_alarm Safety action #1. It commands sound alarm.*
- 10 **Safety action #1 (sound alarm) reset.**  
Only resetable when all three gas detectors (H2, H2, NH3) indicate no leak:  
var\_H2\_H2\_reset\_ready out\_non\_safety\_reset\_ready\_sound\_alarm  
M0.6 Q0.22
- 
- M0.6=var\_H2\_H2\_reset\_ready 1: Both H2 gas detectors indicate no detection or error, so the latched variable can be reset.*
- M0.9=var\_NH3\_reset\_ready 1: NH3 gas detector indicates no detection or error, so the latched variable can be reset.*
- Q0.22=out\_non\_safety\_reset\_ready\_sound\_alarm*
- Indication. Reset "safety action 1" (gas sound alarm) is ready to be reseted by pressing 'reset\_sound\_alarm\_NO' button.*
- 11 **Stop button container:**  
in\_stop\_button\_container\_NC TC2S var\_stop\_container\_OK  
I0.6 In1 Q M0.10
- 
- I0.6=in\_stop\_button\_container\_NC Stop button inside container. Closed when button is not pressed.*
- I0.7=in\_stop\_button\_container\_NO Stop button inside container. Open when button is not pressed.*
- M0.10=var\_stop\_container\_OK 1: Stop button inside container is OK (not pressed and without error).*
- M0.11=var\_fault\_stop\_container 1: Stop button inside container is in error state (contacts are simultaneously open or closed).*
- 12 **Stop button container and CAB-2 front:**  
var\_stop\_container\_OK in\_stop\_button\_cabinet\_NC var\_STOP\_STOP\_OK  
M0.10 I0.40 M0.12
- 
- I0.40=in\_stop\_button\_cabinet\_NC Stop button installed on CAB-2 door. Closed when button is not pressed.*
- M0.10=var\_stop\_container\_OK 1: Stop button inside container is OK (not pressed and without error).*
- M0.12=var\_STOP\_STOP\_OK 1: Both stop buttons are OK (none of them is pressed or in error).*

## 13 'Supervision-safety' interface relay:

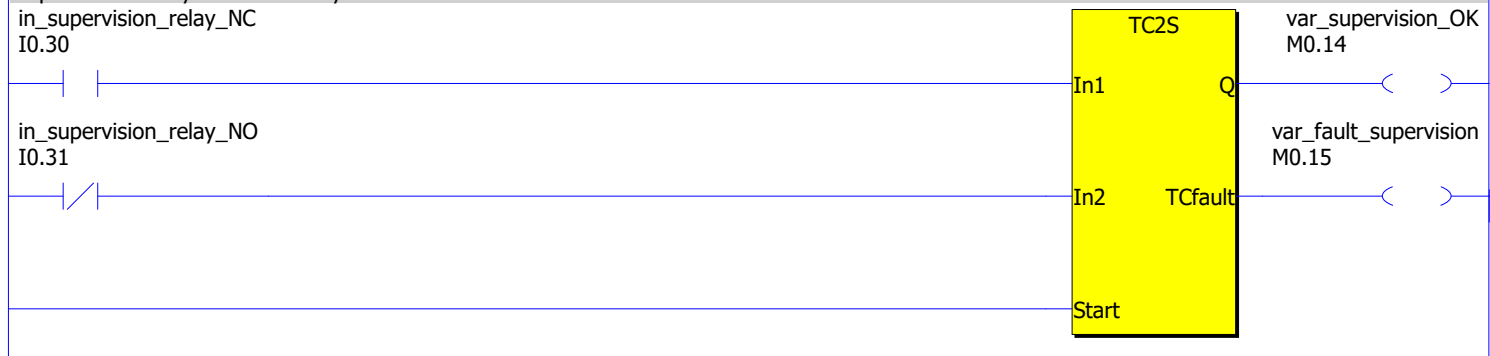

I0.30=in\_supervision\_relay\_NC

*"Supervision-Safety" interface relay. Closed when relay is de-energized.*

I0.31=in\_supervision\_relay\_NO

*"Supervision-Safety" interface relay. Open when relay is de-energized.*


M0.14=var\_supervision\_OK

*1: Supervision input is OK (not triggered and no error).*

M0.15=var\_fault\_supervision

*1: Fault, NO and NC contacts are either open or closed simultaneously. 0: No fault.*

## 14 Safety action #2: extractors

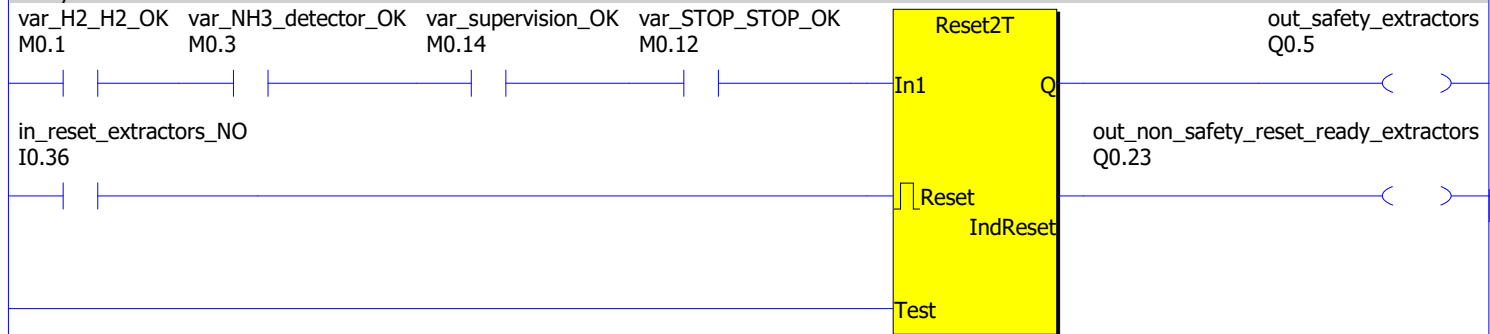

I0.36=in\_reset\_extractors\_NO

*Reset "safety action 2" (extractors and visual alarm). Closed when button is pressed. Note: the button is in series with several feedback NC contacts.*

M0.1=var\_H2\_H2\_OK

*1: No gas detection or error in either of the H2 gas detectors (not latched).*

M0.12=var\_STOP\_STOP\_OK

*1: Both stop buttons are OK (none of them is pressed or in error).*

M0.14=var\_supervision\_OK

*1: Supervision input is OK (not triggered and no error).*

M0.3=var\_NH3\_detector\_OK

*1: No gas detection or error in NH3 detector (not latched).*

Q0.23=out\_non\_safety\_reset\_ready\_extractors

*Indication. Reset "safety action 2" (extractors) is ready to be reseted by pressing 'reset\_extractors\_NO' button.*

Q0.5=out\_safety\_extractors

*Safety action #2. It commands extractors and visual alarm.*




15

Extractor 1 under-pressure detection when extractor is turned on (either in air-renewal mode or emergency mode):

Note: this variable will have glitches in the transitions of 'in\_extractor1\_command\_NO' and 'out\_safety\_extractors'.

For this reason, it will be filtered by a delay block later.

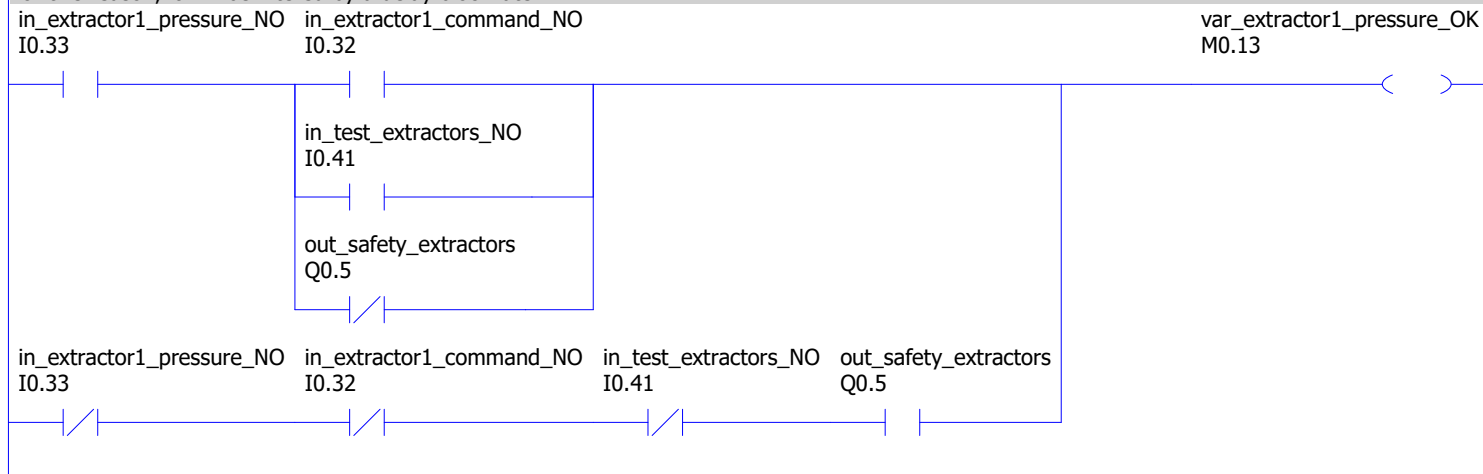

I0.32=in\_extractor1\_command\_NO

Extractor 1 command. Open when user wants to turn it OFF. Closed when user wants to turn it ON.

I0.33=in\_extractor1\_pressure\_NO

Extractor 1 pressure sensor. Closed when underpressure is detected (extractor ON). Open when no underpressure is detected (extractor OFF).

I0.41=in\_test\_extractors\_NO

Test extractors 1 &amp; 2. 0: No test. 1: Test activated.

M0.13=var\_extractor1\_pressure\_OK


1: (extractor 1 is activated AND under-pressure is detected) OR (extractor 1 is not activated AND under-pressure is not detected). Not filtered variable.

Q0.5=out\_safety\_extractors

Safety action #2. It commands extractors and visual alarm.

16

Extractor 1 under-pressure detection, filtered (to avoid glitches) (1 of 2):

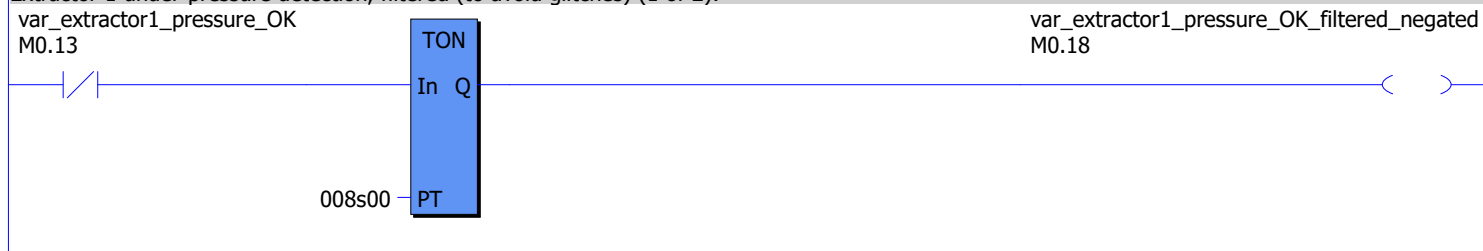

M0.13=var\_extractor1\_pressure\_OK


1: (extractor 1 is activated AND under-pressure is detected) OR (extractor 1 is not activated AND under-pressure is not detected). Not filtered variable.

M0.18=var\_extractor1\_pressure\_OK\_filtered\_negated

Filtered and negated version of 'var\_extractor1\_pressure\_OK' variable (to avoid glitches). This is an auxiliary variable in order to use a 'TON' block as filter.

17

Extractor 1 under-pressure detection, filtered (to avoid glitches) (2 of 2):

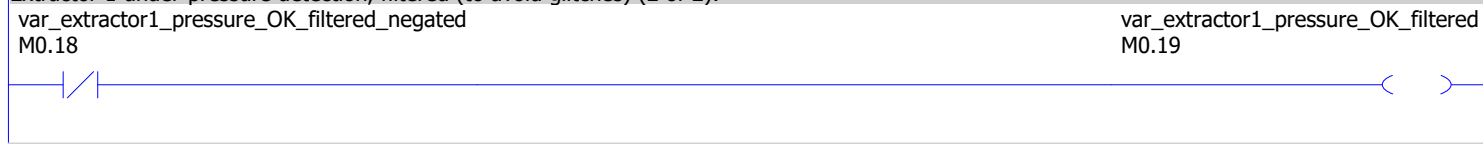

M0.18=var\_extractor1\_pressure\_OK\_filtered\_negated

Filtered and negated version of 'var\_extractor1\_pressure\_OK' variable (to avoid glitches). This is an auxiliary variable in order to use a 'TON' block as filter.

M0.19=var\_extractor1\_pressure\_OK\_filtered

Filtered version of 'var\_extractor1\_pressure\_OK' variable (to avoid glitches).

# Pluto Manager - Program listing Pluto 0 safety

File=C:\...\UPF\projects\recif\workspace\PlutoManager\PL-005\PL-005\_rev06v01\PL-005\_rev06v01.sps

Name=<FILENAME>

File date=22/03/2023 13:51:18 Print date=22/03/2023 13:53:19 PLC CRC=12A8



18

## Container shutdown, 1 of 3:

var_STOP_STOP_OK M0.12	var_H2_H2_OK M0.1	var_NH3_detector_OK M0.3	var_extractor1_pressure_OK_filtered M0.19	in_extractors_available I0.34	var_shutdown_OK M0.20
---------------------------	----------------------	-----------------------------	--	----------------------------------	--------------------------

*I0.34=in\_extractors\_available*      *Extractors 1 and 2 availability. Closed when both extractors are available. Open when thermal protections are triggered or 3-phase power is not available.*

*M0.1=var\_H2\_H2\_OK*      *1: No gas detection or error in either of the H2 gas detectors (not latched).*

*M0.12=var\_STOP\_STOP\_OK*      *1: Both stop buttons are OK (none of them is pressed or in error).*

*M0.19=var\_extractor1\_pressure\_OK\_filtered*      *Filtered version of 'var\_extractor1\_pressure\_OK' variable (to avoid glitches).*


*M0.20=var\_shutdown\_OK*      *1: Container shutdown is OK (Safety action #3) (not latched).*

*M0.3=var\_NH3\_detector\_OK*      *1: No gas detection or error in NH3 detector (not latched).*

19

## Container shutdown, 2 of 3:

Note: This is the latched version of previous result.

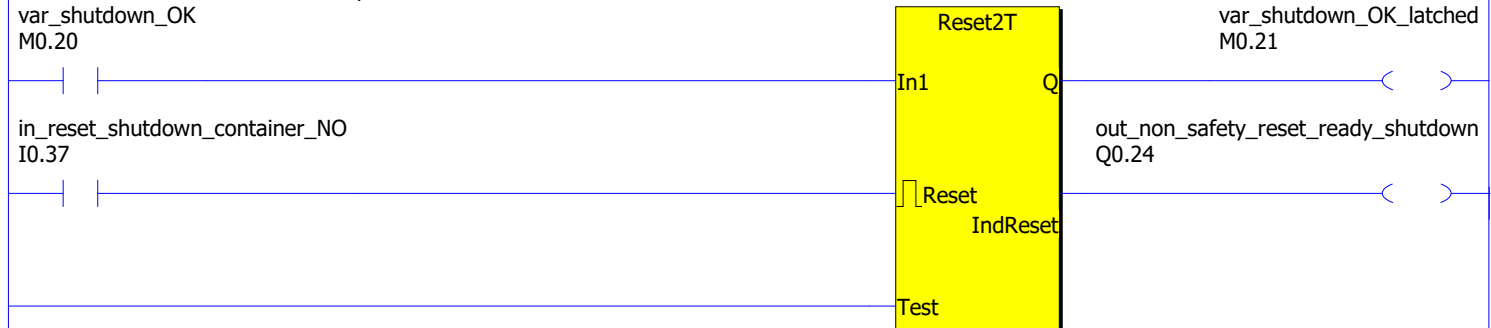

*I0.37=in\_reset\_shutdown\_container\_NO*      *Reset "safety action 3" (container power shutdown). Closed when button is pressed. Note: the button is in series with several feedback NC contacts.*

*M0.20=var\_shutdown\_OK*      *1: Container shutdown is OK (Safety action #3) (not latched).*

*M0.21=var\_shutdown\_OK\_latched*      *1: Container shutdown is OK (Safety action #3). Latched variable (i.e. it needs to be reset after been triggered).*


*Q0.24=out\_non\_safety\_reset\_ready\_shutdown*      *Indication. Reset "safety action 3" (container power shutdown) is ready to be reseted by pressing 'reset\_shutdown\_container\_NO' button.*

20

## Safety action #3: container shutdown, 3 of 3:

Note: the input 'in\_extractor1\_command\_NO' is excluded from the latched variable 'var\_shutdown\_OK\_latched'.

This is to avoid the need to reset the variable after turning off the air-renewal extractor.

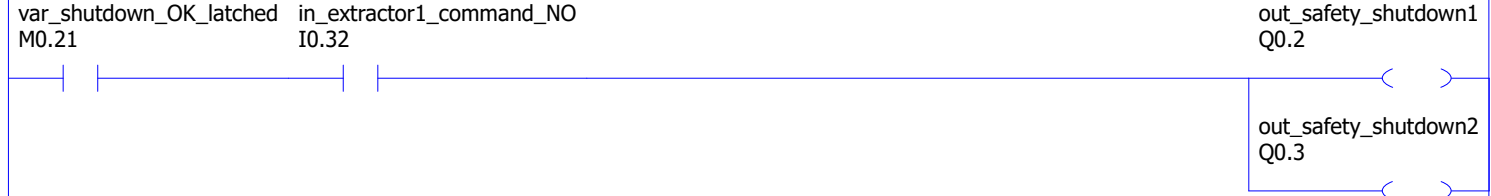

*I0.32=in\_extractor1\_command\_NO*      *Extractor 1 command. Open when user wants to turn it OFF. Closed when user wants to turn it ON.*

*M0.21=var\_shutdown\_OK\_latched*      *1: Container shutdown is OK (Safety action #3). Latched variable (i.e. it needs to be reset after been triggered).*

*Q0.2=out\_safety\_shutdown1*      *Safety action #3. It commands: H2 electrovalve, electrolyzer, PV pannels.*

*Q0.3=out\_safety\_shutdown2*      *Safety action #3. It commands: container 3-phase power, fuel-cell Li-ion batteries.*

## Pluto 0 non\_safety


1

Start

Non-safety sequence. Program start-up. Not handled by the user.

2

Lamp test enabling signal (temporized):

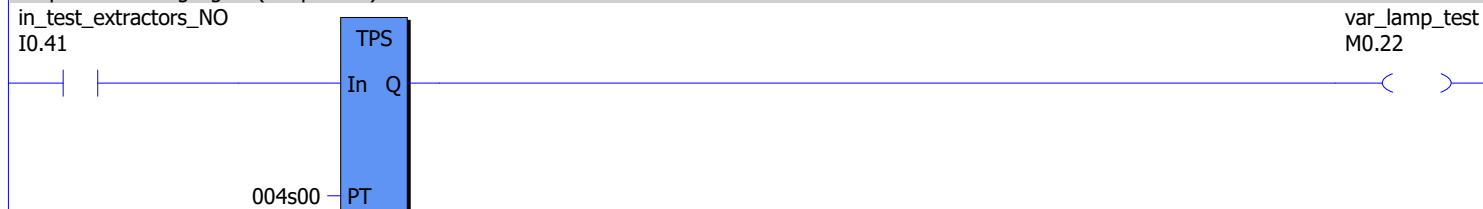

I0.41=in\_test\_extractors\_NO

Test extractors 1 &amp; 2. 0: No test. 1: Test activated.

M0.22=var\_lamp\_test

1: lamp test is activated. All alarms LEDs will turn on, overriding momentarily the states of the LEDs. 0: lamp test is not activated.

3

System is online:


LED\_system\_online  
Q0.13

Q0.13=LED\_system\_online

Indication light. Light ON: safety PLC is online. Light OFF: PLC is offline (power cut).

4

H2 alarm indication, not latched:

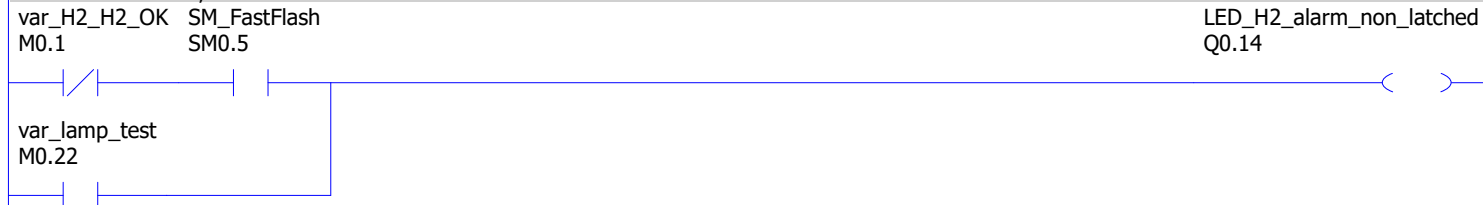

M0.1=var\_H2\_H2\_OK

1: No gas detection or error in either of the H2 gas detectors (not latched).

M0.22=var\_lamp\_test

1: lamp test is activated. All alarms LEDs will turn on, overriding momentarily the states of the LEDs. 0: lamp test is not activated.

Q0.14=LED\_H2\_alarm\_non\_latched


Indication light. Light ON: at least one of the two H2 gas sensors is detecting a gas leak. Light OFF: none of the H2 gas sensors is detecting a gas leak.

SM0.5=SM\_FastFlash

Flash 0.17s/0.33s (on/off)

5

H2 alarm indication, latched:

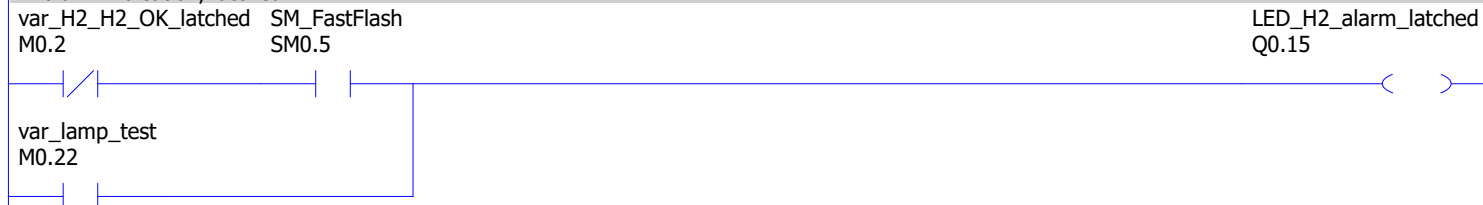

M0.2=var\_H2\_H2\_OK\_latched

1: No gas detection or error in either of the H2 gas detectors. Latched variable (i.e. it needs to be reset after been triggered).

M0.22=var\_lamp\_test

1: lamp test is activated. All alarms LEDs will turn on, overriding momentarily the states of the LEDs. 0: lamp test is not activated.

Q0.15=LED\_H2\_alarm\_latched


Indication light. Latched version of 'LED\_H2\_alarm\_not\_latched' signal.

SM0.5=SM\_FastFlash

Flash 0.17s/0.33s (on/off)

## 6 NH3 alarm indication, not latched:

var\_NH3\_detector\_OK SM\_FastFlash LED\_NH3\_alarm\_non\_latched  
M0.3 SM0.5 Q0.16

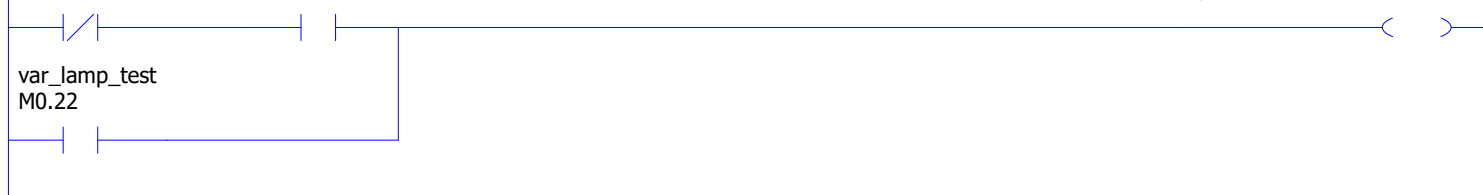

M0.22=var\_lamp\_test 1: lamp test is activated. All alarms LEDs will turn on, overriding momentarily the states of the LEDs. 0: lamp test is not activated.


M0.3=var\_NH3\_detector\_OK 1: No gas detection or error in NH3 detector (not latched).

Q0.16=LED\_NH3\_alarm\_non\_latched Indication light. Light ON: NH3 gas sensor is detecting a gas leak. Light OFF: NH3 gas sensor is not detecting a gas leak.

SM0.5=SM\_FastFlash Flash 0.17s/0.33s (on/off)

## 7 NH3 alarm indication, latched:

var\_NH3\_detector\_OK\_latched SM\_FastFlash LED\_NH3\_alarm\_latched  
M0.8 SM0.5 Q0.17

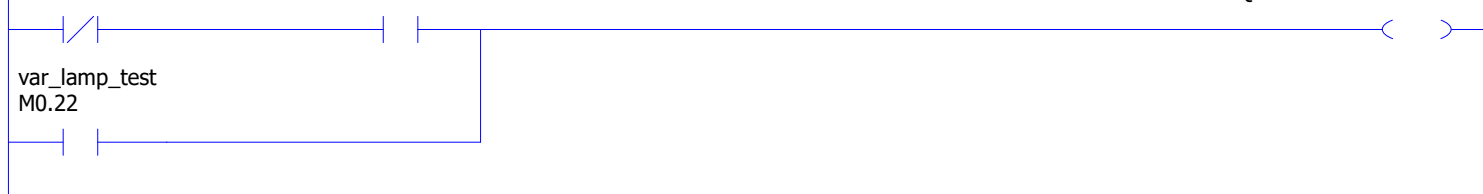

M0.22=var\_lamp\_test 1: lamp test is activated. All alarms LEDs will turn on, overriding momentarily the states of the LEDs. 0: lamp test is not activated.

M0.8=var\_NH3\_detector\_OK\_latched 1: No gas detection or error in NH3 gas detector. Latched variable (i.e. it needs to be reset after been triggered).

Q0.17=LED\_NH3\_alarm\_latched Indication light. Latched version of 'LED\_NH3\_alarm\_non\_latched' signal.

SM0.5=SM\_FastFlash Flash 0.17s/0.33s (on/off)

## 8 Extractors alarm:

var\_extractor1\_pressure\_OK\_filtered SM\_FastFlash LED\_extractors\_out\_of\_service  
M0.19 SM0.5 Q0.20



I0.34=in\_extractors\_available Extractors 1 and 2 availability. Closed when both extractors are available. Open when thermal protections are triggered or 3-phase power is not available.

M0.19=var\_extractor1\_pressure\_OK\_filtered Filtered version of 'var\_extractor1\_pressure\_OK' variable (to avoid glitches).

M0.22=var\_lamp\_test 1: lamp test is activated. All alarms LEDs will turn on, overriding momentarily the states of the LEDs. 0: lamp test is not activated.

Q0.20=LED\_extractors\_out\_of\_service Indication light. Light ON: at least one extractor is out of service. Light OFF: both extractors are available.

SM0.5=SM\_FastFlash Flash 0.17s/0.33s (on/off)

## 9 'Gas detection' or 'safety system out of service' alarm indication to University fire alarm system:

out\_safety\_sound\_alarm out\_non\_safety\_gas\_OK  
Q0.4 Q0.21



Q0.21=out\_non\_safety\_gas\_OK Indication. Activated: gas leak has been detected or safety system is out of service. Non activated: no gas has been detected and safety system is online.

Q0.4=out\_safety\_sound\_alarm

Safety action #1. It commands sound alarm.

10

