

MANUAL LINEAMETEO STAZIONE



LineaMeteoStazione is a complete weather station which can be interfaced with professional sensors from Sensirion as well as some Davis Instrument component (Rain Gauge, Anemometer)

The project is aimed as DIY weather station but just requiring the assembly part, because the boards will already be given programmed by me as well as the complete PCB. The code will be shared Opensource for the people who wants to try to do it from the beginning or modify it!

List of components

It works with a combination of ESP8266 and ESP32 development boards and is composed mainly of 3 devices:

1. DEVICE 1: WEMOS D1 MINI PRO(New Version) + designed PCB (Need to be installed OUTSIDE) AND SOLAR PANEL

This is the part which will be outside and it consist in one development board and the PCB. It is used to collect the weather data which will be sent to the Firebase of Google. The data is collected in real time from each sensor, but the upload time is selectable in the settings of the weather station which will be explained in the manual after. The maximum and minimum temperature will be collected in real time. Below the photo of the complete unit:




2. DEVICE 2: WEMOS D1 MINI PRO + BMP180 Pressure(Old Version)

This is the part that handle all the network communications and it also collect the data from the Firebase of Google.

The duties of the board consist in:

- *Collecting the data*
- *Sharing some data to an IP Address in a format ready to be used to communicate with LineaMeteo weather network.*
- *Send Data to weathercloud*
- *Send Data to wunderground*
- *Send Data to Thingspeak*
- *Pressure Sensor*


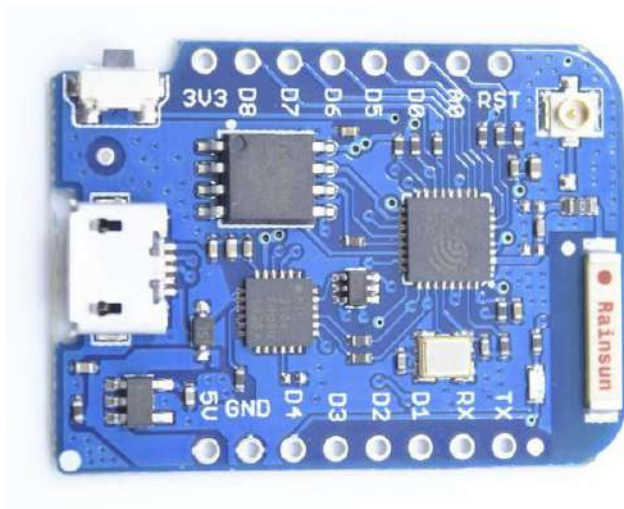


The case is 3D printed from <https://www.thingiverse.com/thing:4081064>

3. DEVICE 3: LOLIND32 ESP32 + PCB designed + INK Display + BME680

This is the part that just handle the visualization of the data on the display and it has also a sensor that collects data of air quality, temperature and humidity.

The display used is a 4.2 Inch ink display, can be used a WaweShare or GoodDisplay brands.

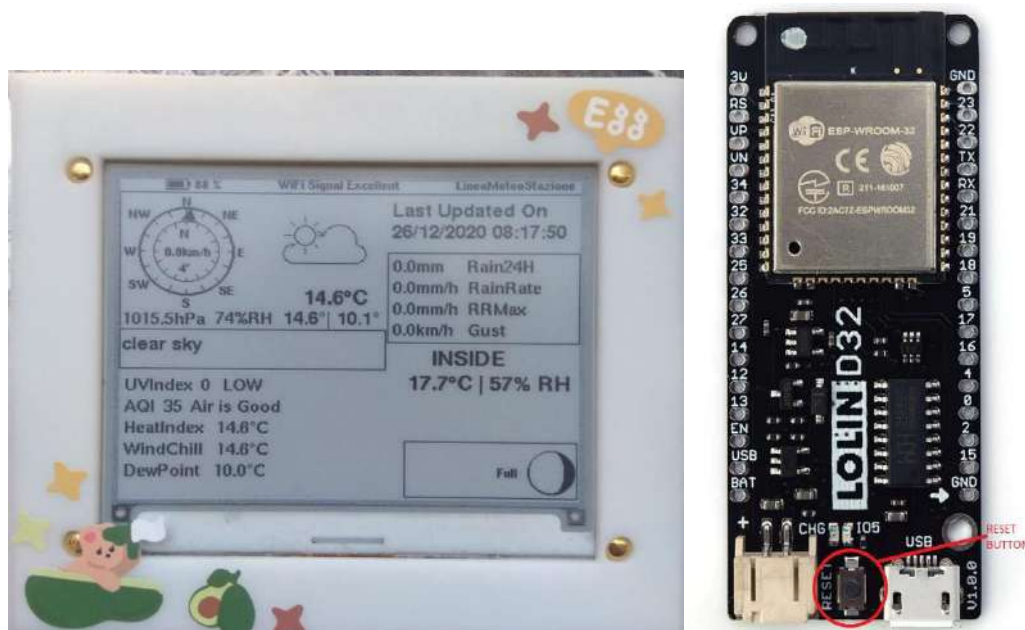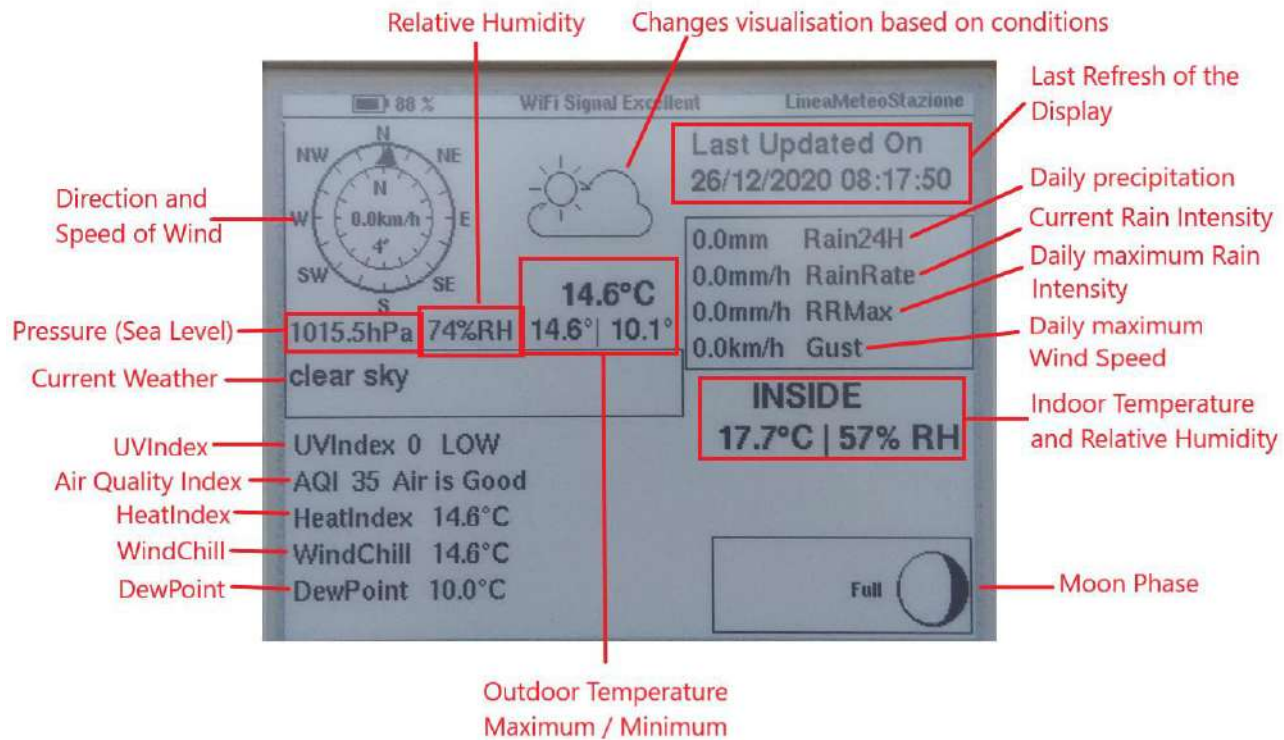

The case is 3D printed from:

[Box for ePaper + ESP32 Information Display by sidoh10 - Thingiverse](#)


SETUP WEATHER STATION STEP BY STEP

DEVICE 2: Interface to Wi-Fi and Firebase Google


First of all we need to create a Firebase account. To do that you will need an account Google which you can create [HERE](#) if you don't already have one.

To setup the Firebase account you need to follow the following steps:

1. Go to [FIREBASE](#) and click on 'Get Started'

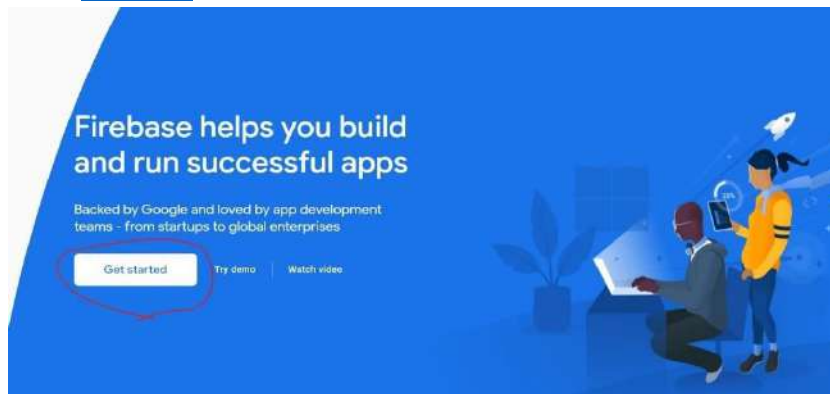


2. Sign IN to your Google account

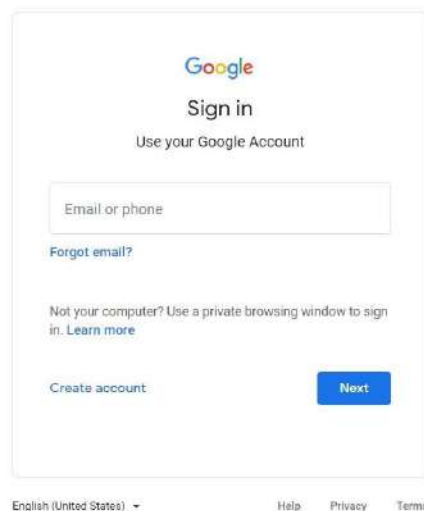


3. Click on 'Add a project' 'Aggiungi progetto'




4. Give a name to your project! Click 'Continue' 'Continua'. Follow the steps and Create the project. Use the default account for Firebase.

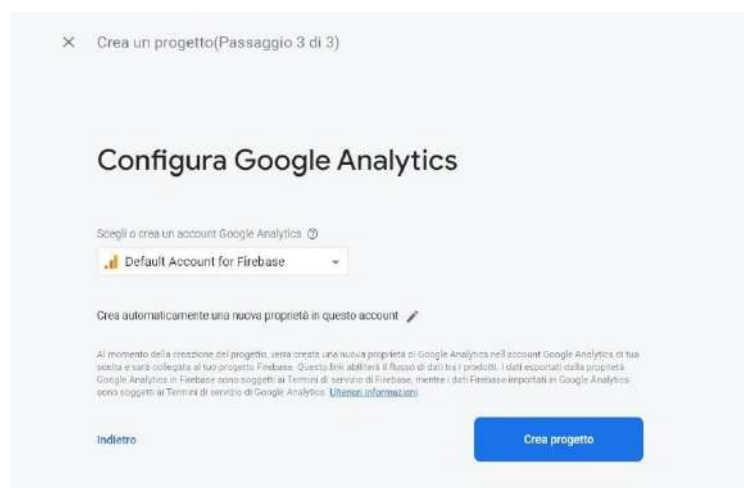


5. 'Go on 'project overview' 'Panoramica del progetto' on top and select 'project settings' 'Impostazioni progetto'

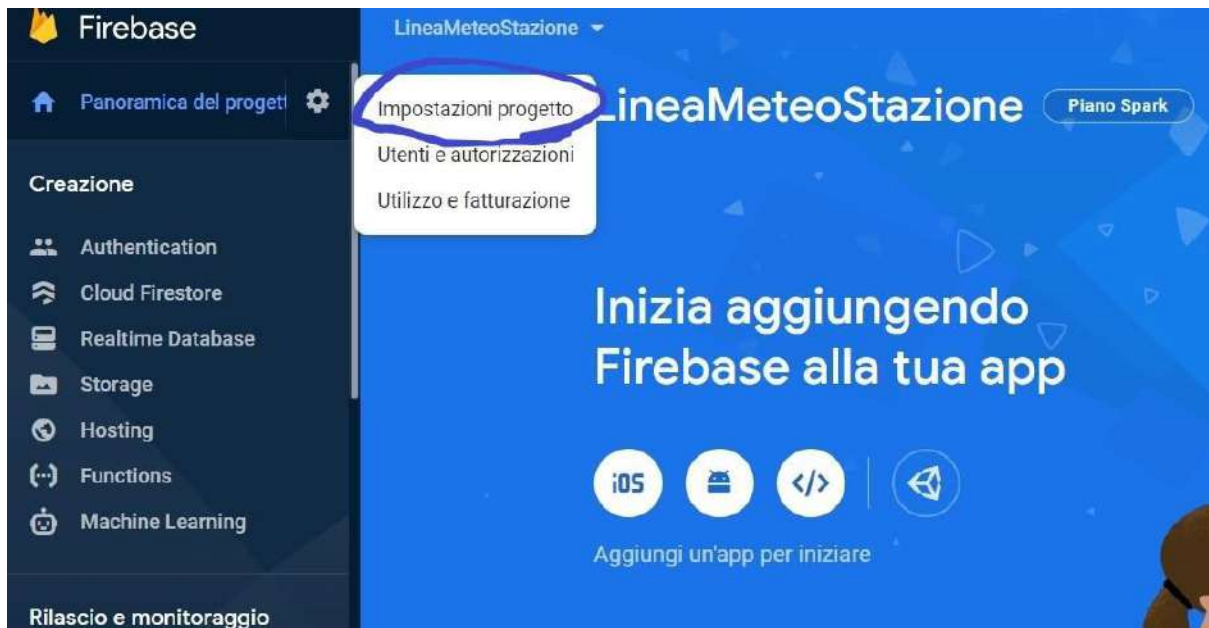

6. Click on 'Service Account' 'Account di Servizio' and 'Create Service Account' 'Crea account di servizio'


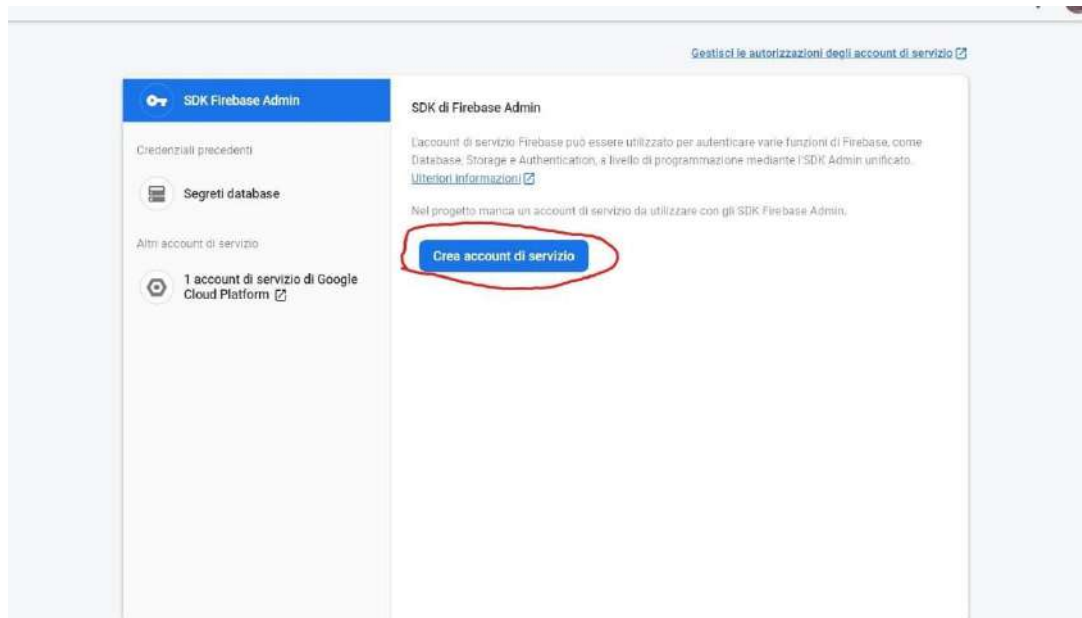


7. Go back to 'Project Overview' and Create Realtime Database 'Crea database' and follow the steps and select the nearest location for the database.

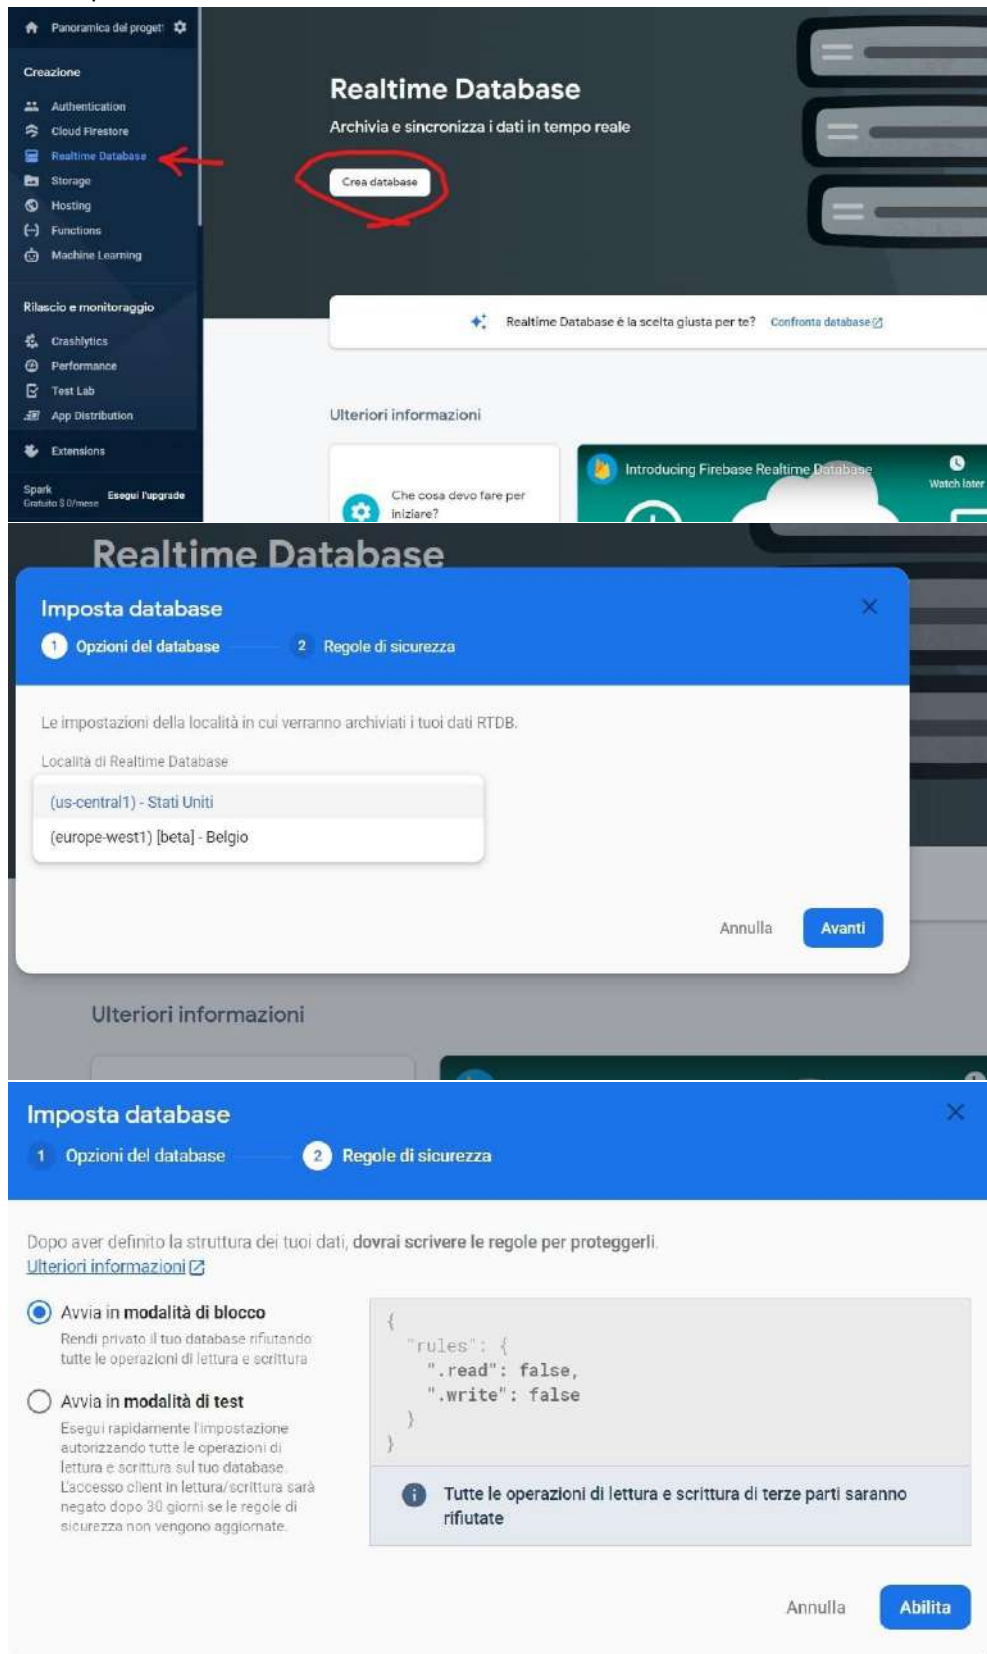

8. ALL DONE! Now save your project link that you can find in the real time database and also the secret that you can find 'Service Account' 'Account di servizio' under 'Database Secret' 'Segreti Database'


You will need just the one highlighted in the picture below and the database secret to program the weather station! To send you the board already programmed I will need those credentials.

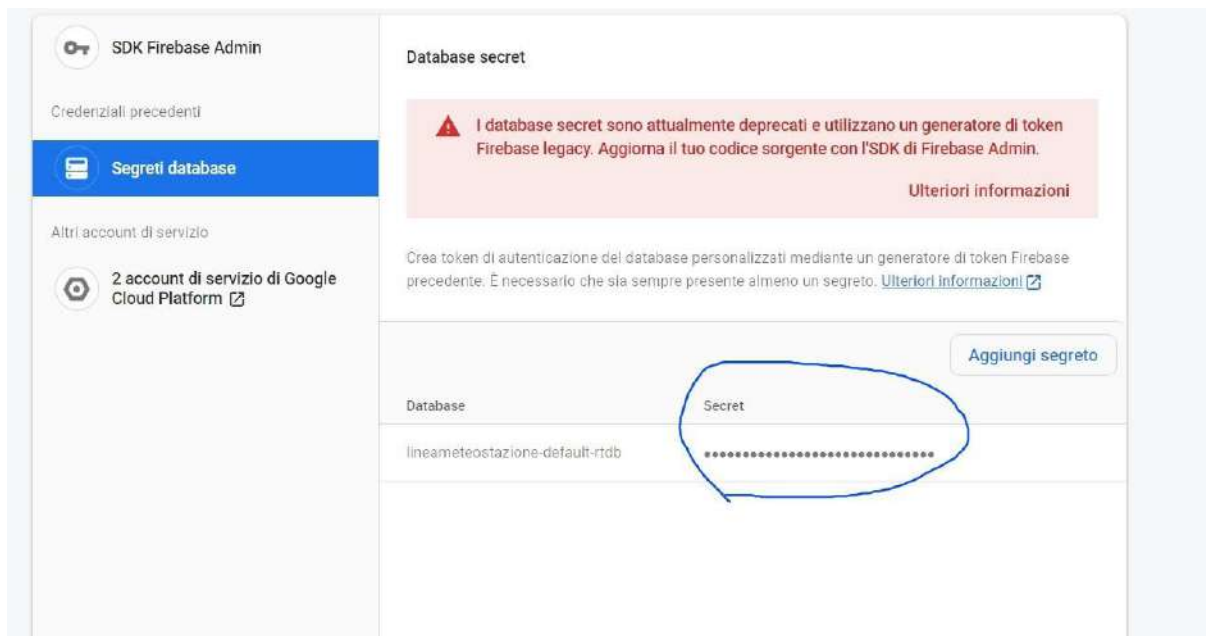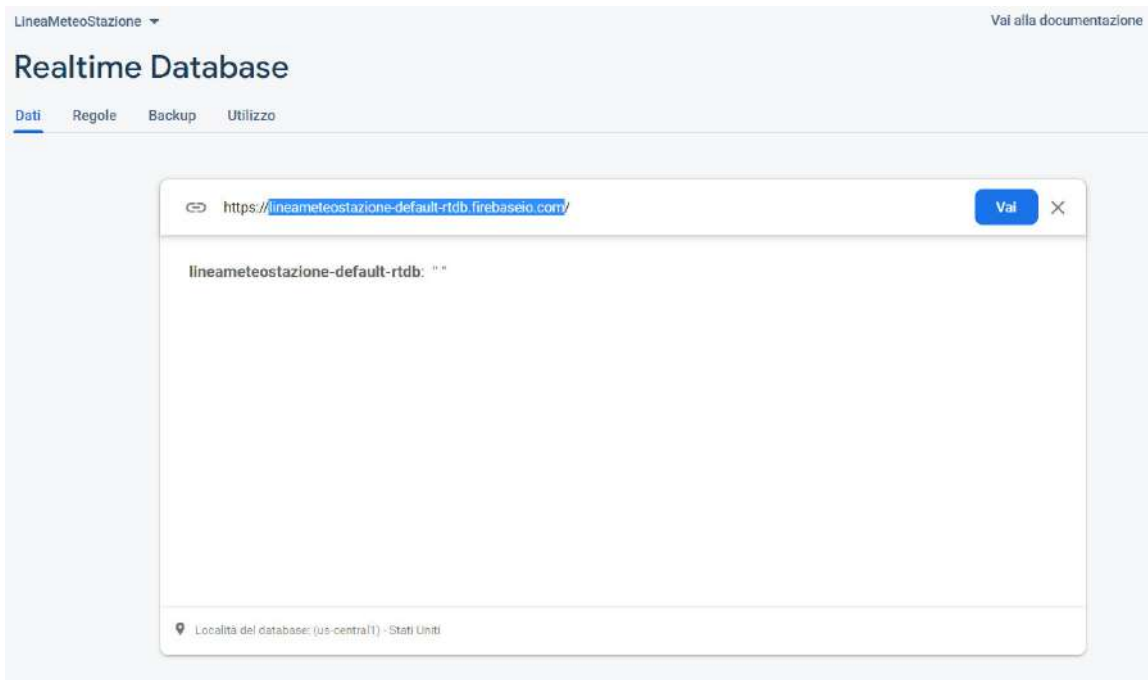

SETUP WI-FI

To setup the Wi-Fi connection follow the following steps:


- Plug the USB cable from **DEVICE 2** into a USB port (you can use a normal charger for your phone or whatever USB port available, for example on your router(recommended option))
- Once **DEVICE 2** is ON you will find it in the Wi-Fi connections available on your smartphone or computer with the name of LineaMeteoStazioneR.

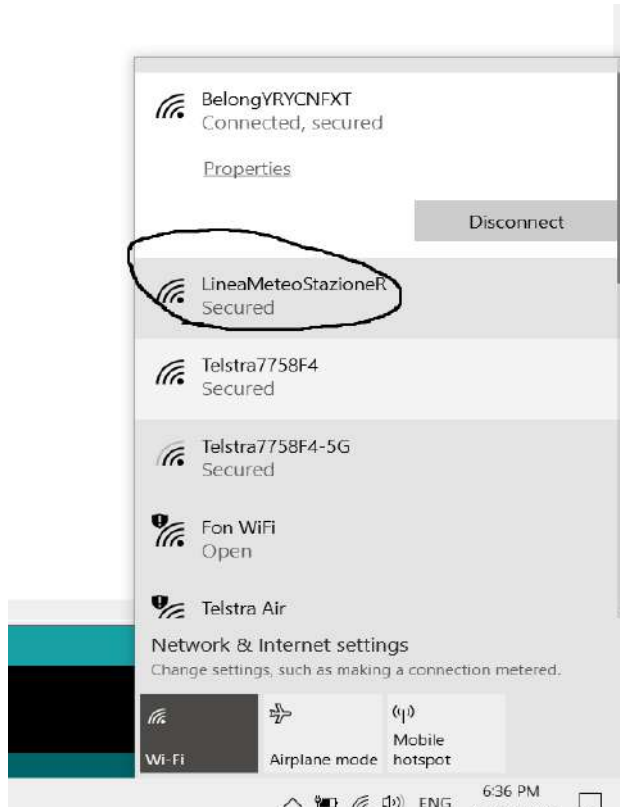

- Try to connect and it will ask a password. **PASSWORD: LaMeteo2005**
After that it will prompt you in a page as the following:

LineaMeteoStazioneR

WiFiManager

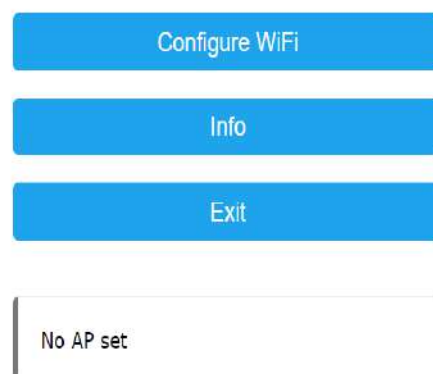

- Click on configure Wi-Fi and select your Wi-Fi network and enter your password and click **Save**. Now the **DEVICE 2** will try to connect and if fails you will be required to start again the procedures followed before.

BelongYRYCNFXT	
Telstra7758F4	
Fon WiFi	
Telstra Air	
NetComm 4612	
BelongA4BB85	

SSID


Password

Save

Refresh

No AP set

- After the **DEVICE 2** is connected, go back to your Realtime database and you will see that many information have appeared. It will looks similar to this:

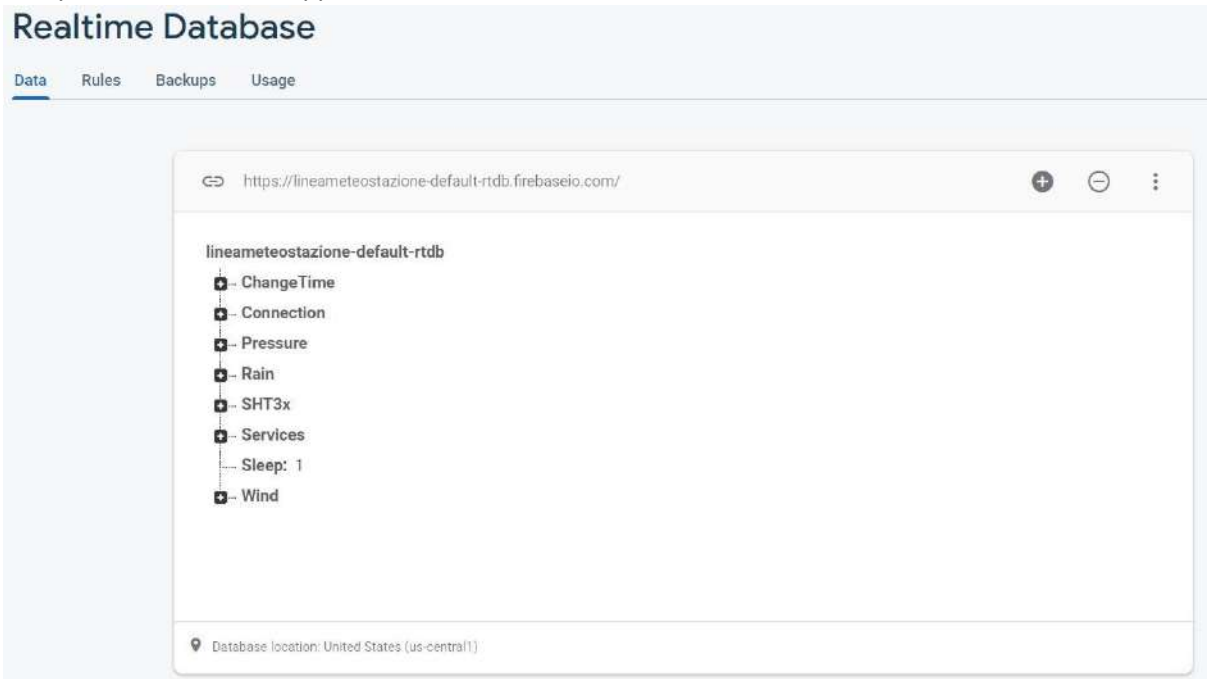


Setup DEVICE 1(Outside)

This is the installation which requires to secure the weather station outside. A solar radiation shield is required for the ambient temperature and humidity sensor. Is also required a weather proof box for the correct storage of the battery and PCB.

OVERVIEW

Below the photo to describes the board:

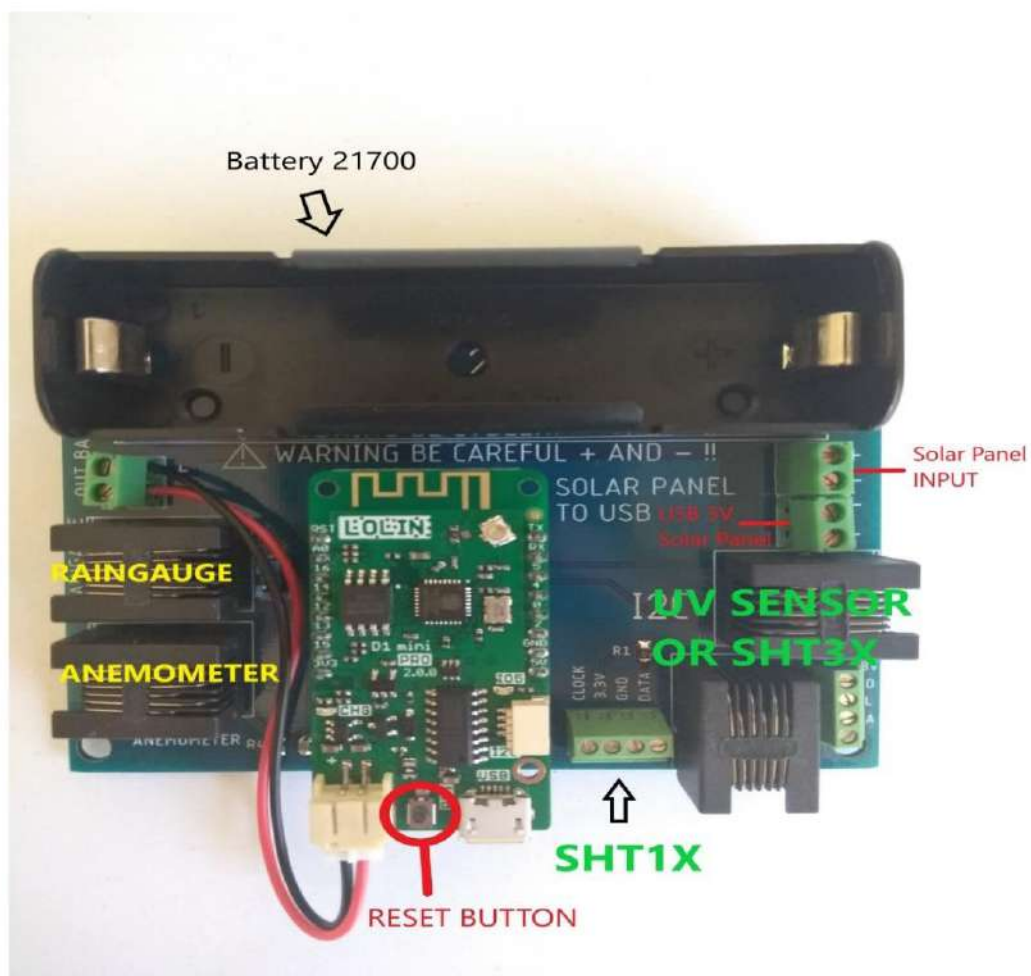

1. Install the board in weather proof box as example below and install the battery (**BE CAREFUL + AND – AND BATTERY SHOULD BE 100% CHARGED BEFORE FIRST START**):



2. Connect all the available sensor on the board using the RJ12 connectors or the screw terminal, depending on the type of sensor used. *(Refer to the list of 'Compatible sensor and specification) (SENSORS ARE CONNECTED WITH AN ADAPTOR BOARD DESIGNED SPECIFICALLY FOR THE SHT3X AND UV SENSORS AND ALSO ONE FOR THE [SHT35 ON TINDIE](#)) SEE PHOTOS*



3. Plug IN the battery connector into the Wemos D1 Mini Pro and setup the Wi-Fi connection same as **DEVICE 2**. Name of the network will be 'LineaMeteoStazioneS'


After that plug in also the USB from the solar panel converter. (The photo is just representative of a prototype and the USB converter will be already connected for you, you will just need to connect the solar panel)



Configure Weather Station settings with Firebase

EVERY SETTINGS MADE REQUIRES TO DISCONNECT FROM POWER DEVICE 2 AND RECONNECT TO POWER

After followed the procedures above you will find that your real time database will look like this(if UV index sensor is connected it **won't** shows 655):

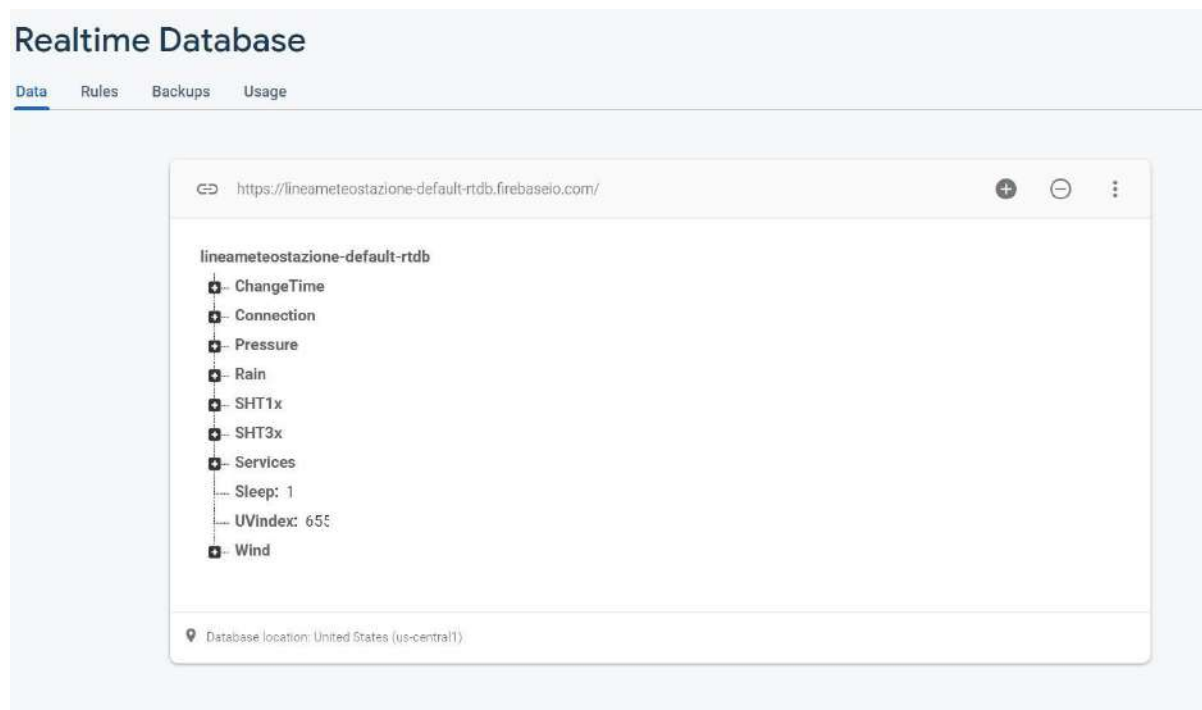


The database is categorized as following:

- **ChangeTime**

This option is used to set your **TIMEZONE** which will be your time (need to modified when day light saving apply) and to set the **SendDataTime**. It is recommended to don't upload the data faster than 90 seconds to save the battery life of **DEVICE 1**

CurrentDay and **RESETDATA** don't need to be touched. To reset all data in database enter **0** in **RESETDATA**.

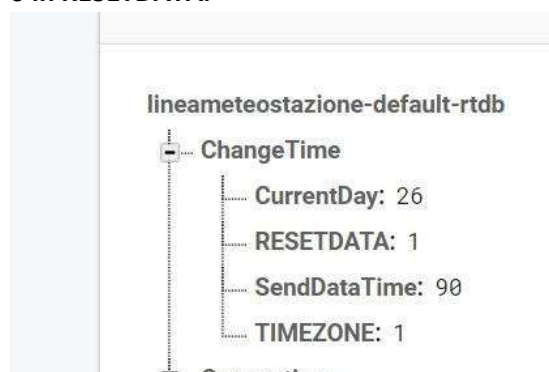

- **Connection**

Connection is used to know your current IP address of **DEVICE 2** and to monitor the Wi-Fi signal strength of **DEVICE 1**. **Try to keep DEVICE 1 with at least -75 or more of signal strength.**

IPAddress can be used to port forwarding the IP in order to setup your devices in the LineaMeteo weather network. (PortForwarding can be done in the router, but every router is different, so you need to know yours. External port should be 4600 and internal port should be 80, example below)



NAT -- Port Forwarding Setup


Port Forwarding allows you to direct incoming traffic from WAN side (identified by Protocol and External port) to the Internal server with private IP address on the LAN side. The Internal port is required only if the external port needs to be converted to a different port number used by the server on the LAN side. A maximum 32 entries can be configured.

Add Remove

Server Name	External Port Start	External Port End	Protocol	Internal Port Start	Internal Port End	Server IP Address	WAN Interface	Remove
WeatherStation	4600	4600	TCP	80	80	10.0.0.5	eth0.1	<input type="checkbox"/>

- **Pressure**

Here is stored the value of the Pressure and also is possible to Calibrate it based on sea level. Refer to some near weather station or looking the current atmospheric pressure on the forecast. Every number means 1Pa

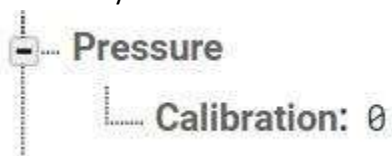


- **Rain**

Here is stored the value of the rain in 24H and also other values related to the rain. You can use every tipping bucket rain gauge so this means that you will need to calibrate how much every tipping count for. Modify 'mmGoccia' to change the tipping count in **mm**. **Default is 0.2mm**



- **SHT1x**
This contain the data of the Sensirion SHT1x or SHT7x series.
- **SHT3x**
This contain the data of the Sensirion SHT3x series.
- **Services**
This contain all the services available to use with this weather station.

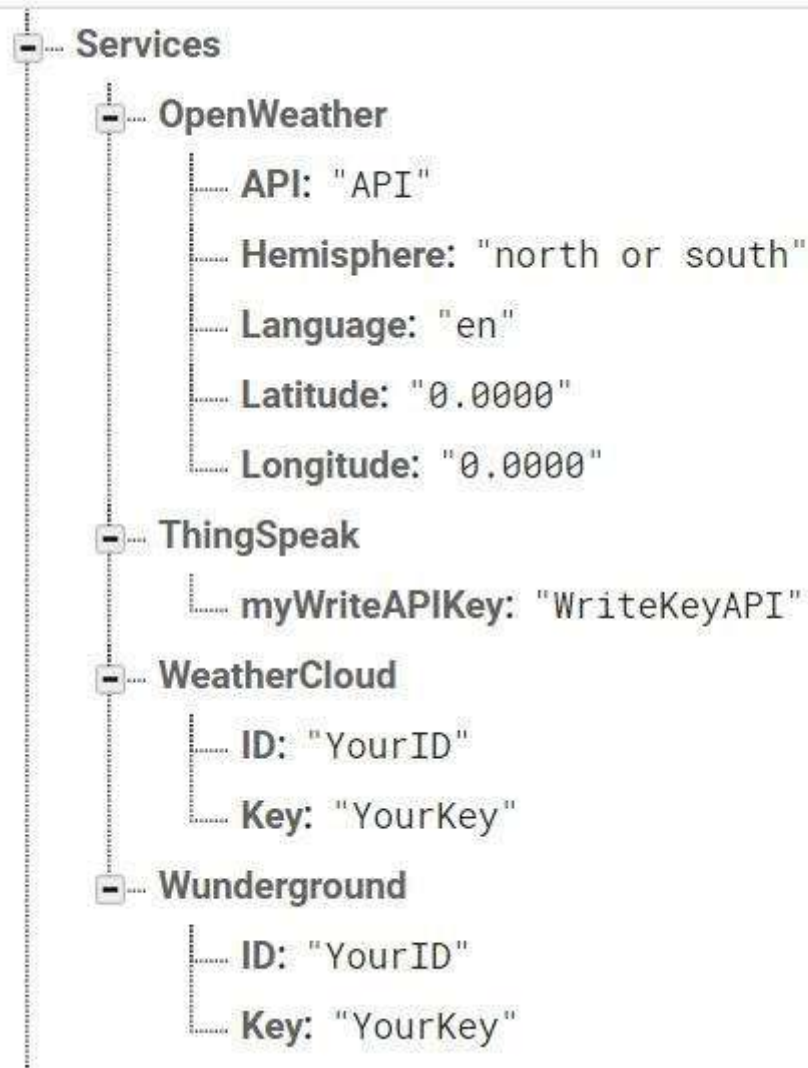

OPENWEATHER

You can setup your own account on [OpenWeather](https://openweathermap.org/api) for current condition weather description on **DEVICE 3** (find My API Keys and copy in the **API in Services, OpenWeather.**)

Hemisphere type north if you live in northern hemisphere or south in southern hemisphere to display correct astronomy section on display.

Language 'en' or 'it' to change from English to Italian on **DEVICE 3**.

Latitude and longitude to display correct weather condition description on **DEVICE 3**

If from southern hemisphere it will be a negative number on Latitude.

THINGSPEAK

Create an account on [ThingSpeak](#) and find the WriteAPIkey and copy in **myWriteAPIKey**, to see the difference with graphics between the SHT1x and SHT3x series if connected the 2 sensors or to just monitor the SHT1x

WeatherCloud

You can link the weather station to Weather Cloud network using this option. Go to Settings on your devices and select 'Link', it will give you the ID and Key that you can copy in the database.

Your devices + New

Status	Name	Model	Location	Pictures			
	LineaMeteoStazione December 26, 2020, 2:38 AM	Other Other	Clayton South 37° 56' 19" S 145° 7' 43" E 52.0 m		1 followers 33 views		Settings ▾
	ClaytonSouthWeather November 24, 2020, 5:06 AM	Other Other	Clayton South 37° 56' 20" S 145° 7' 46" E 52.0 m		0 followers 0 views		Settings ▾

WunderGround

You can link the weather station to WunderGround using this option.
Find the ID and Key on My Devices and copy it to the database.

EMAIL & PASSWORD HOME & FAVORITES **MY DEVICES** API KEYS

Manage Devices Add New Device

1 DEVICES TOTAL

Quality	Name	Location	Status	ID	Key	Type	Manage
	ClaytonSouthWeather	Melbourne (Clayton South), AU	Online			PWS	Edit Delete Copy credentials

Items per page: 10 1 - 1 of 1

- **Sleep**
By default is set to 1 but can be changed to 0 to enable the sleep mode. **In sleep mode the rain gauge and anemometer will not work so they have to be disconnected from PCB**
Sleep mode if used on battery will last average of 6 months without recharging the battery with the solar panel.
- **UVIndex**
This contain the value of the current UVindex.

- **Wind**


This contain the values of the Wind, like degrees of the Wind Direction and also the Wind Speed and the Gust. **It can be adjusted the Offset here, in order to point the right direction of the Wind Direction. 0 degrees or 360 degrees should be point North.**

```

Wind
  Offset: 0
  WindDirection: 4
  WindSpeed: 0
  
```

Setup DEVICE 3 DISPLAY

The **DEVICE 3** is powered up with one single battery 18650, which can be recharged trough USB as shown in photo (The photo doesn't represent the final project but just the prototype, inside it will have a proper PCB design.) The little circle shows the BME680 sensor.

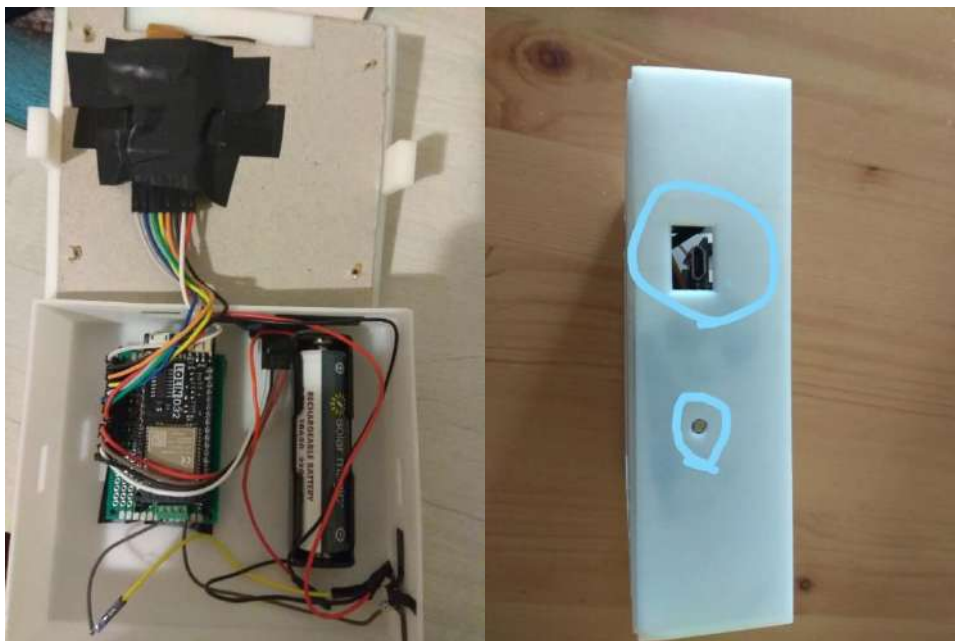

The display refresh every 20 minutes automatically and every 1 hour after midnight and until 7AM. But It can be refreshed manually clicking on the button on the right side of the box.



ONCE REFRESHED IT WILL ALSO CHANGE THE LANGUAGE SELECTED IN SETTINGS IN FIREBASE

After the battery has been installed follow the same procedures of **DEVICE 2** to connect to Wi-Fi.

Name of the network will be 'LineaMeteoStazioneVisual'

The battery should be sufficient charged before start.

Compatible sensor

- **Temperature/humidity MAIN:** SHT3x series Sensirion. Accuracy refer to [datasheet](#) of each sensor.
- **Temperature/humidity SECOND (can be used for soil temperature and moist) :** [SHT1x](#) and [SHT7x](#) series Sensirion. Accuracy refer to datasheet of each sensor.
- **Temperature, Humidity, Air quality Inside:** [BME680](#)
- **Pressure:** [BMP180](#)
- **Rain Gauge:** Every tipping bucket rain gauge, adjustable resolution. WHEN ADJUSTED RESOLUTION IT MAY TAKES UP TO 3 HOURS TO CHANGE THE SETTINGS ON DEVICE 1. This is because the device goes to sleep every 3 hours to save energy if no rain is detected. When it wakes up, it will check the settings again. You can also manually reset by clicking the reset button as shown in photo before.
- **Anemometer:** Davis Anemometer
- **UVIndex:** [SI1145](#)

Specifications

- Battery **DEVICE 1:** 3.7V 21700 Battery lithium (Recommended 5000mAh)(Autonomy without sun 8days*)
WARNING: Be careful with lithium battery with high temperature(more than 45C), weatherproof box should be putt in the shade. Furthermore if negative temperature -10C occur often or condition below 0 persist for long or extreme negative temperature occur (example -20C) a specific battery for cold temperature will be required.
In this case PCB will need to be modified for a 18650 battery resistant to cold weather -40C with less capacity(2900mAh). Autonomy without sun will be 5 days.

***Without sun means completely darkness, a light cloudy day doesn't means no sun energy at all but it also can't be counted as sunny day.**

- Battery **DEVICE 3**: 3.7V 18650 Battery lithium (Recommended 3000mAh)(Autonomy without recharging 6 weeks)
- Solar Panel 6-20V (6V strongly recommended)

Watt depending on your location from [Global Solar Atlas](#). **With less than 1500 kWh/m2 the weather station can't work autonomously. If sleep mode is used a smaller solar panel less than the minimum would be enough.**

GTI opta per day	Less than 2000kWh/m2 and 1500kWh/m2	10W (minimum)
GTI opta per day	2000kWh/m2	6W (minimum)
GTI opta per day	2500kWh/m2	6W (minimum)
GTI opta per day	3000kWh/m2	4.5W (minimum)
GTI opta per day	3500kWh/m2	3.5W (minimum)
GTI opta per day	4000kWh/m2	3W (minimum)
GTI opta per day	4500kWh/m2	3W (minimum)
GTI opta per day	5000kWh/m2	2.5W (minimum)
GTI opta per day	5500kWh/m2 or more	2W (minimum)

- Length of cable for SHT3x series should not exceed 3m
- Length of cable for SHT1x and SHT7x series should not exceed 10m

Troubleshooting

- If one of **DEVICES** is not working as expected a RESET would be required. Take off the battery connector or remove the battery and restart the device if RESET doesn't work. For **DEVICE 1, ALWAYS** put the battery first and then the solar panel connector.
- If **DEVICE 3** shows 100% while recharging, that's normal for the moment, because the board doesn't have a specific IC for the state of charge, so it is influenced by the internal resistance of the cell.
- Other questions regarding problems please contact me.

CONTACTS

To discuss about ordering the weather station or source of the material please email me Eugenio eugenioiaquinta@outlook.it

LineaMeteo topic forum:

[Strumenti meteo :: Stazione Meteo Completa WiFi Con ESP8266 E ESP32 E Arduino! \(lineameteo.it\)](#)

Instructables

[Professional Weather Station Using ESP8266 and ESP32 DIY : 9 Steps \(with Pictures\) - Instructables](#)

[GitHubLINK](#)