

Kexx_drv_lib KE04 Sample Code Guide for CodeWarrior

Board configuration, software, and development tools

Rev.0.1

Contents

1 Purpose	3
2 Getting to know the board	3
3 OpenSDA Overview	4
3.1 MSD Application	4
3.2 Debug Application	4
4 Download and Install Software and Tools	4
4.1 Downloading and Installing OpenSDA Drivers	4
4.2 Downloading and Installing Code Warrior 10.5 and Tools	4
4.2.1 Downloading and Installing the Code Warrior 10.5	4
5 Freescale Sample Code	5
5.1 Baremetal Sample Code (kexx_drv_lib)	5
5.1.1 Baremetal Sample Code Folder Structure	5
5.1.2 Using the Freescale Baremetal Sample Code to Jumpstart your Design	8
6 Configure Hardware	8
7 Terminal Program Configuration	8
8 Loading and Running the Demos into CW 10.5	8
9 Explore Further	9


1 Purpose

This Sample Code Guide will familiarize you with `kexx_drv_lib`, FRDM-KE04Z board and development tools. You will learn the features of the FRDM-KE04Z board, the features of the OpenSDA standard, and how to access the source code examples using CodeWarrior (CW). In addition, instructions are provided to download a precompiled binary file to your board.

2 Getting to know the board

The Freedom board (FRDM-KE04Z) features the Kinetis KE04Z8VFK4 microcontroller and comes with the following features (which are highlighted in the figure below):

- Tri-color LED
- 8Mhz crystal
- MMA8451Q Inertial Sensor
- OpenSDA connection
- Touch Pad (Slider)
- IrDA(infrared)
- Thermistor

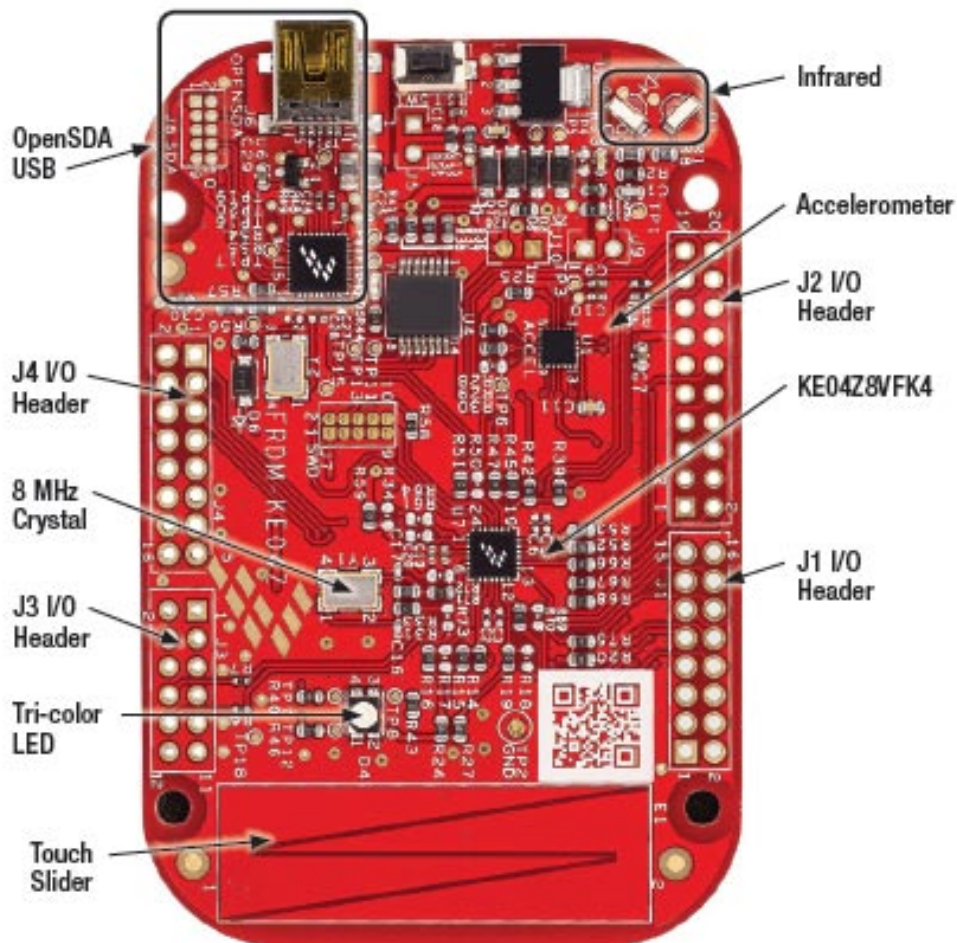

3 OpenSDA Overview

OpenSDA is an open-standard serial and debug adapter. It bridges serial and debug communications between a USB host and an embedded target processor. OpenSDA features a mass storage device bootloader that offers a quick and easy mechanism for loading applications such as flash programmers, run-control debug interfaces, serial-to-USB converters, and more, onto your Tower or Freedom board. Currently, P&E Micro offers two different applications: an MSD application and a debug application.

3.1 MSD Application

This OpenSDA application was developed by P&E Micro and allows the Freedom board to instantiate as a mass storage device on your computer. Once this application properly enumerates, you may program the KE04Z8 on your Freedom board with a binary or SREC file by simply “dragging and dropping” one of these files into FRDM-KE04Z drive that is installed when your Freedom board enumerated. In addition, you will also have serial communication with the KE04Z8.

3.2 Debug Application

This OpenSDA application was also developed by P&E Micro and allows you to program and debug your KE04Z8 on your Freedom board just as any other debugger module would allow. With this application loaded onto your Freedom board, you will also have serial communication with the KE04Z8 available.

4 Download and Install Software and Tools

4.1 Downloading and Installing OpenSDA Drivers

Before you begin, you will need the latest OpenSDA serial drivers installed on your development computer and on your FRDM-KE04Z. The latest OpenSDA drivers should already be installed on either of these, and your system should be able to automatically find the latest Windows CDC drivers (as they should be pre-installed on the Freedom board). If they are not, navigate to www.pemicro.com/opensda/index.cfm and follow the directions on this page to download the correct OpenSDA files. You may also refer to the OpenSDA user’s guide which can be found in your Quick Start Package.

4.2 Downloading and Installing Code Warrior 10.5 and Tools

4.2.1 Downloading and Installing the Code Warrior 10.5

To download Code Warrior 10.5, follow these instructions:

1. Navigate to the Code Warrior download page at www.freescale.com/codewarrior.

CodeWarrior Development Tools

CodeWarrior Development Studio is a complete Integrated Development Environment (IDE) that provides a highly visual and automated framework to accelerate development of the most complex embedded applications.

[Choosing the right CodeWarrior Suite](#)

CodeWarrior Development Tools

- CodeWarrior Development Suites
 - Development Studio - Professional Suite
 - Development Studio - Standard Suite
 - Development Studio - Basic Suite
 - Development Studio - Special Suite (free trial)
- CodeWarrior Development Studios



CodeWarrior Development Studio for Microcontrollers v10.4

Freescale's CodeWarrior Development Studio for Microcontrollers v10.4 is a new full product release with major enhancements including C++ support for DSC devices, 64-bit floating point support for S12Z devices and MQX-Lite - a lightweight kernel for Kinetis L and K MCU families

[Start debugging](#)

2. Click the link in the red line coming into the download page

CodeWarrior for MCUs (Eclipse IDE) - ColdFire, 56800/E DSC, Kinetis, Qorivva 56xx, RS08/S08, S12Z ☆



3. Select the version you want.

4.2.2 Installing the SP for Code Warrior

Install Service pack for KE04

"com.freescale.mcu10_5.Kinetis_KE04_KE06_KEA128_48Mhz.win.sp.v1.0.2.zip".


5 Freescale Sample Code

The Freescale kexx_drv_lib sample code provided for KE04Z8 is a baremetal code.


5.1 Baremetal Sample Code (kexx_drv_lib)

5.1.1 Baremetal Sample Code Folder Structure


The Baremetal sample code folder contains three folders at the top level: build folder and SRC (source) folder.

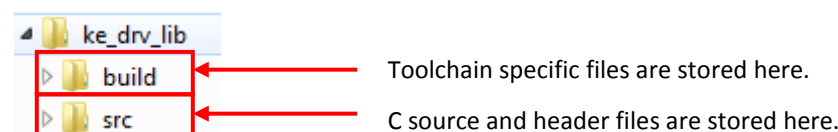

The build folder is structured as follows:

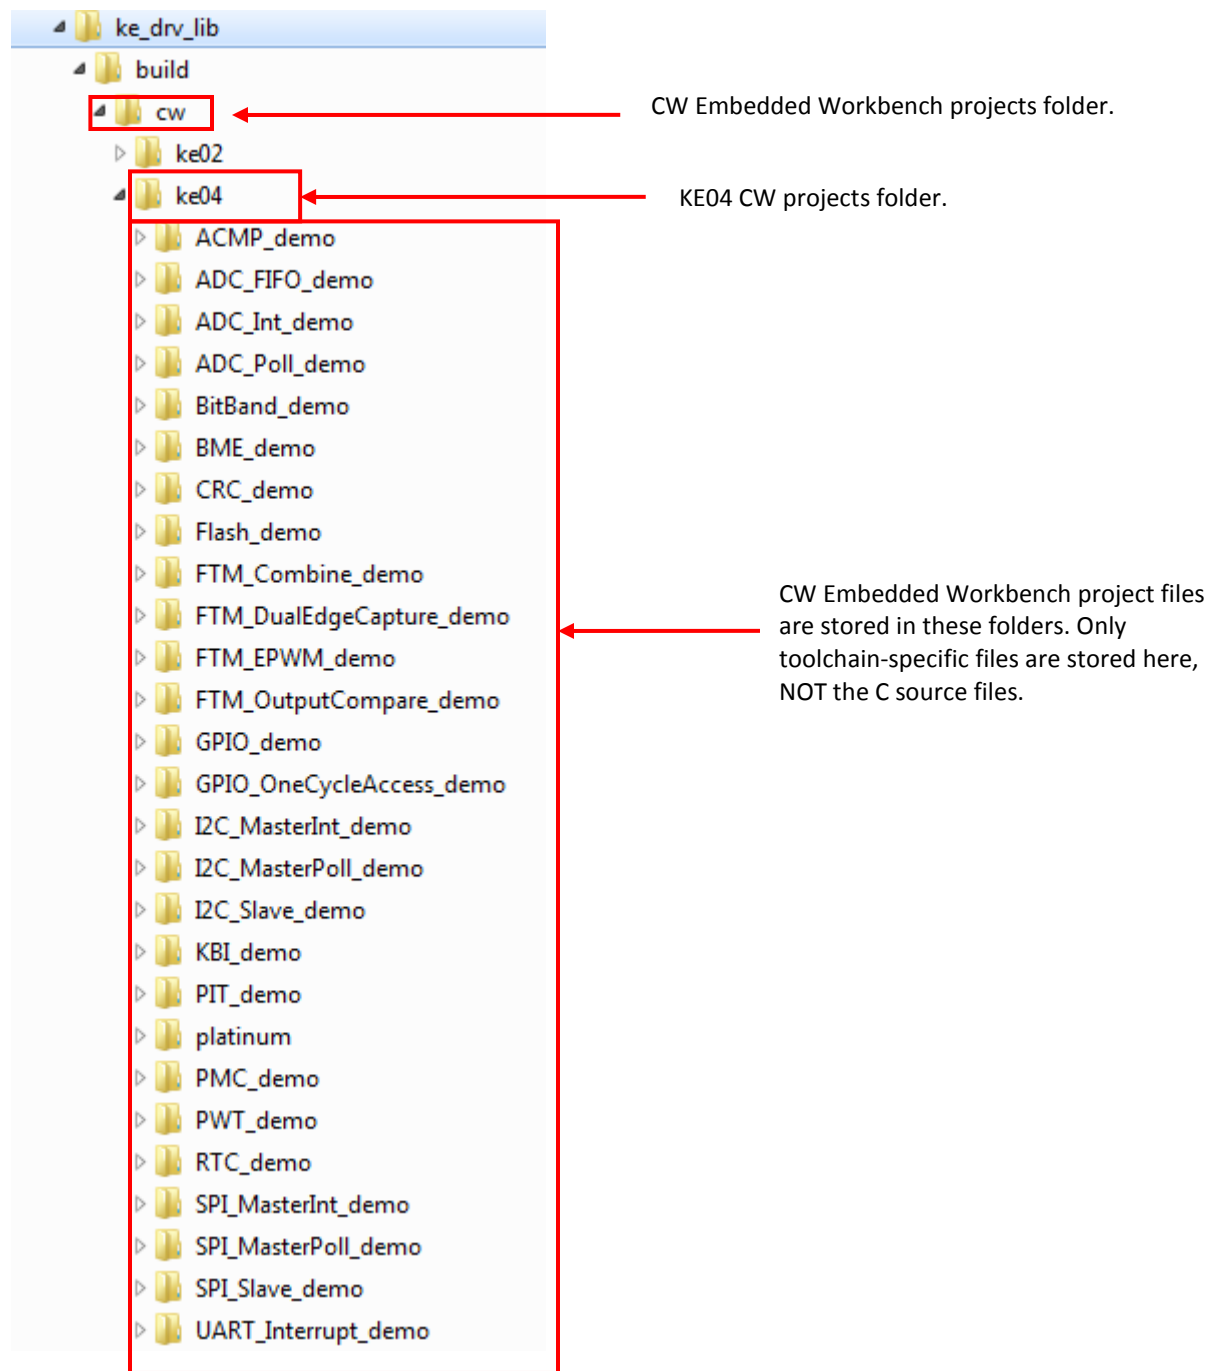

The source folder structure is as follows:

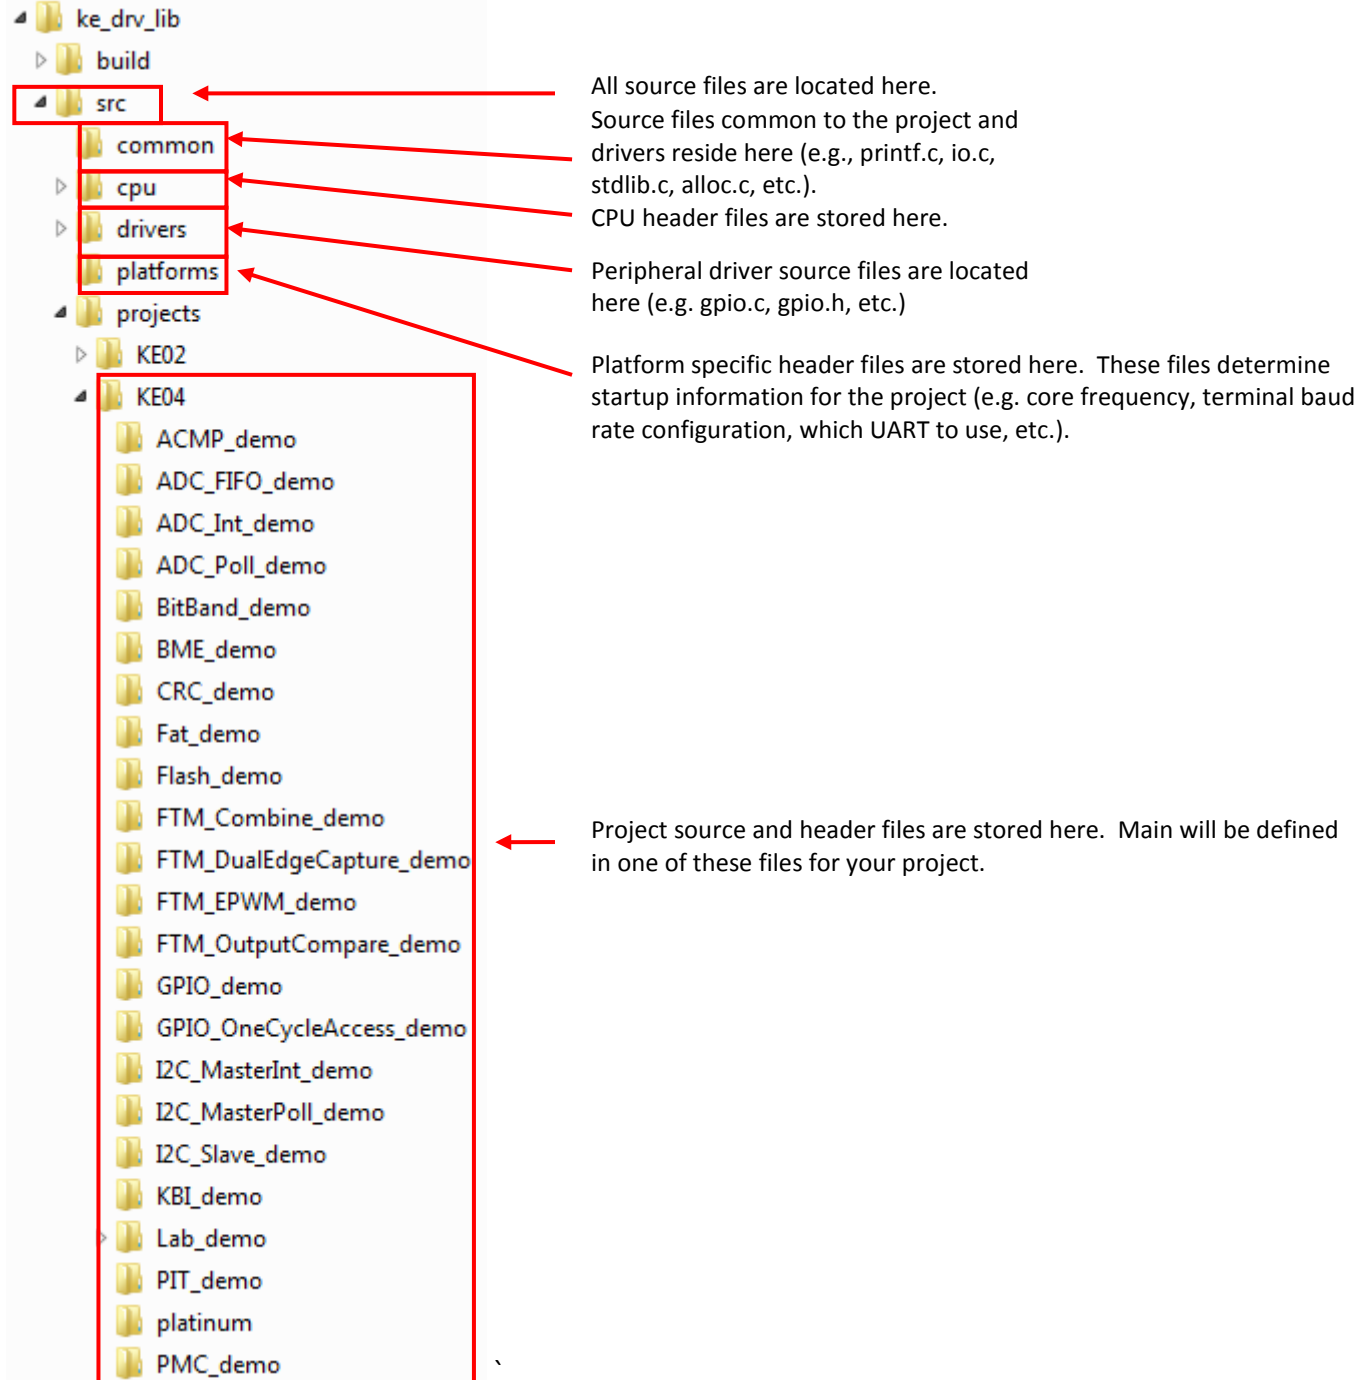

5.1.2 Using the Freescale Baremetal Sample Code to Jumpstart your Design

The kexx_drv_lib library is provided as a jump start for your design and come with code examples. We have provided a script that will copy our platinum project and rename it to your desired project name. This script is a single executable that resides in the \build\iar\ke04 folder.



UART_Poll_demo



WDOG_Feed_demo



make_new_project_ke04.exe

Simply double-click make_new_project_ke04.exe file and a command prompt pop-up window will prompt you for a project name. Copy the platinum project and rename all of the necessary files for your new project to work correctly.

6 Configure Hardware

- 1) Using a Mini-B to A USB cable, connect your FRDM-KE04Z board to your development computer. Be sure to plug the Mini-B connection into the OpenSDA port of the FRDM-KE04Z board.
- 2) No special hardware configuration is necessary to run the demo applications in the code examples unless otherwise specified by the “readme.txt” file located in the project folder.

7 Terminal Program Configuration

The OpenSDA serial port is designed to enumerate just as any other USB to serial converter. Therefore, you will need to open a serial terminal utility (Tera Term, Hyperterm, etc.) and configure your terminal as follows:


- 115200 baud
- 8 data bits
- 1 stop bit
- no parity
- no flow control

8 Loading and Running the Demos into CW 10.5

The following instructions describe how to build and debug the platinum demo using CW 10.5. This document is targeted for users who choose to use the OpenSDA programming and debugging capabilities and it is assumed that you have loaded the P&E Micro Debug application onto your FRDM-KE04Z. If you need assistance in loading this application onto your tower board, see the OpenSDA user’s guide provided in your Quick Start Package.

- 1) Open CodeWarrior IDE.
- 2) Drag the .project file into CW and it will open.
- 3) Clean the project first and then recompile it.

- 4) After compilation completes, download the code to the board and start the debugger by pressing the “Debug Session” button.
- 5) The code will download, and the debugger screen will come up and pause at the first instruction. Hit the “Run” button to start running.
- 6) On the terminal you should see the following message:

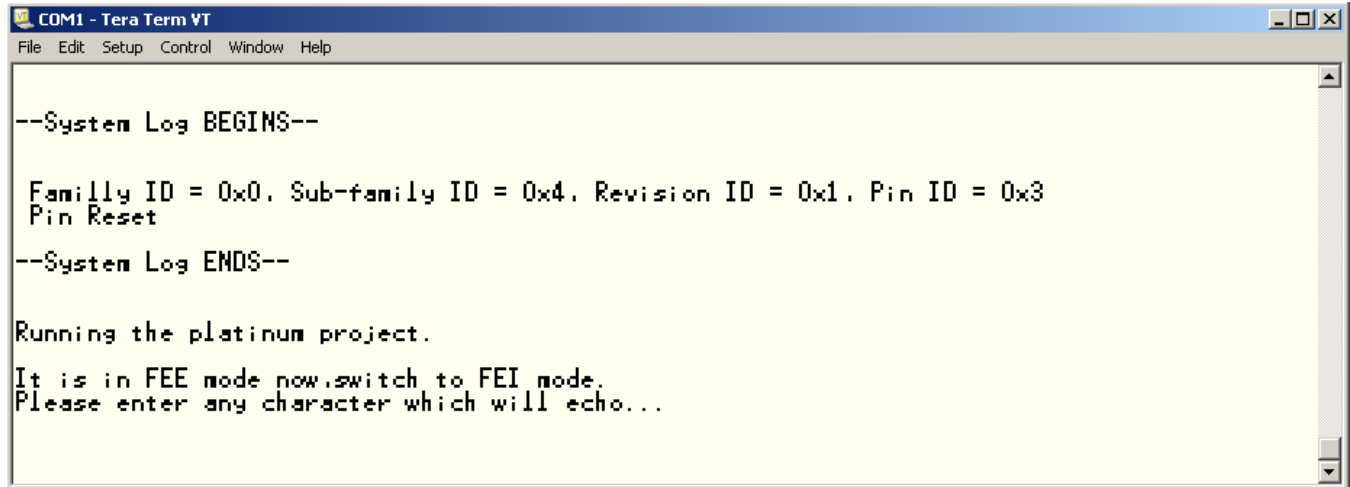

```
COM1 - Tera Term VT
File Edit Setup Control Window Help

--System Log BEGINS--

Family ID = 0x0, Sub-family ID = 0x4, Revision ID = 0x1, Pin ID = 0x3
Pin Reset

--System Log ENDS--

Running the platinum project.
It is in FEE mode now, switch to FEI mode.
Please enter any character which will echo...
```

- 7) The tri-color LED will start blinking. Enter any character which will be echoed to the terminal.

9 Explore Further

Additional software and lab guides are available at www.freescale.com/FRDM-KE04Z.

How to Reach Us:**Home Page:**

freescale.com

Web Support:

freescale.com/support

Information in this document is provided solely to enable system and software implementers to use Freescale products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits based on the information in this document.

Freescale reserves the right to make changes without further notice to any products herein. Freescale makes no warranty, representation, or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale data sheets and/or specifications can and do vary in different applications, and actual performance may vary over time. All operating parameters, including "typicals," must be validated for each customer application by customer's technical experts. Freescale does not convey any license under its patent rights nor the rights of others. Freescale sells products pursuant to standard terms and conditions of sale, which can be found at the following address: freescale.com/SalesTermsandConditions.

Freescale, Freescale logo, CodeWarrior, and Kinetis are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. All other product or service names are the property of their respective owners.

© 2014 Freescale Semiconductor, Inc.