



AIASS - SIDBlaster Control Plugin for Ableton Live

Programming and UI design by Andreas Schumm

Copyright © 2020

www.crazy-midi.de

English manual by Magnus Hansson


Version 1.1

Index

Hardware installation	2
Voltage Jumper settings on the SIDBlaster hardware	2
Other Jumpers on the hardware	3
USB and audio connections	3
General information	4
Software installation	4
File paths	5
AIASS Mono version	6
Mono Master section	6
Oscillator and envelope section	7
Filter section	9
AIASS Poly version	10
Poly Master section	11
Tips	12
Links	14
Thanks to	14

Hardware installation

SID-chip installation

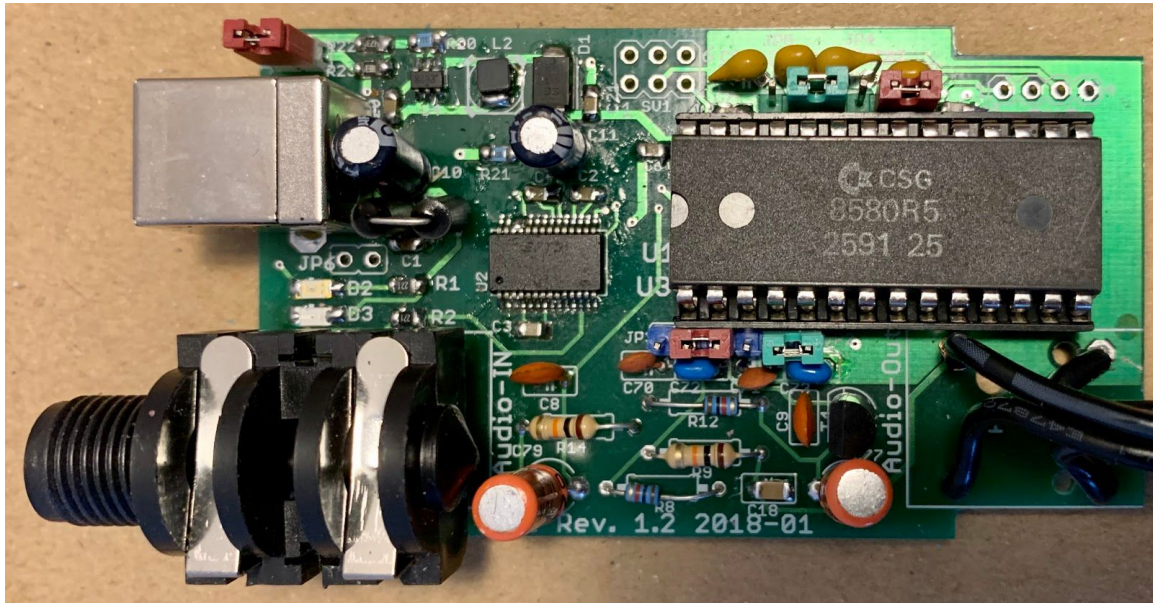

SIDBlaster with an 8580 SID-chip correctly installed.

Voltage Jumper settings on the SIDBlaster hardware

For the 6581 SID-chip - J1 must be open (12V). Place all jumpers on the left side (pins 1-2).

For the 8580 SID-chip - J1 must be closed (9V). Place all jumpers on the right side (pins 2-3).

Warning! Double check the voltage settings on the SIDBlaster hardware. If you set them incorrectly, for example sending 12V into an 8580 SID-chip which runs at 9V, you will destroy the chip. If you have a multimeter, check the voltage at the SID chip socket to be sure.


Always use an anti static bracelet to avoid damaging the SID-chip and other electrical components when installing it in the SIDBlaster.

Other jumpers on the hardware

JP2 & JP3 (blue) are for switching the filter capacitors.

JP4 & JP5 (green) are for the optional paddle capacitors.

JP6 (White) From Rev. 1.2 and on. Experimental, connects USB shield to ground; you may try it to counteract interfering noise.

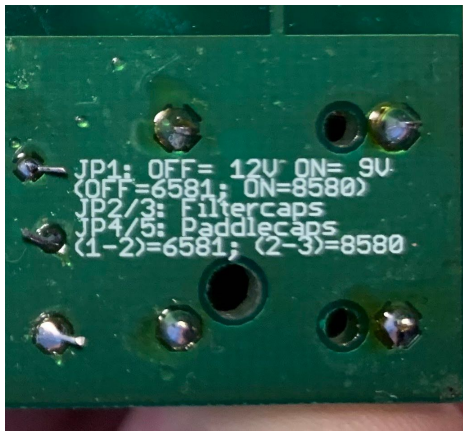

Text on reverse side of SIDBlaster PCB with jumper settings.

USB and audio connections

Connect the SIDBlaster hardware to a USB port using a type A-B USB cable of good quality. Avoid using USB-hubs since they are known to cause problems.

The SIDBlaster needs to do a digital "handshake" the first time it is connected via USB. This requires an internet connection. The handshake will not work if your internet connection is set to "Metered Connection" in Windows. To solve this, temporarily disable "Metered Connection", wait a moment for the SIDBlaster to do the handshake, and then re enable "Metered Connection".

Connect the audio output of the SIDBlaster to your mixer or audio interface using an unbalanced (mono) cable. The second audio jack on the SIDBlaster is an audio input and is also an unbalanced connection. If you are unsure which connector is which, the connectors are marked on the PCB. Be careful about what you connect to the input of the SID-chip. These chips are old and very sensitive to electrical spikes and too high voltages.

General information

When you are not using the SIDBlaster it is recommended to unplug the USB-connection since this prolongs the life of the SID-chip.

Since a SID-chip produces heat, use a heatsink on the chip if possible and make sure there is sufficient ventilation.

Software installation

Download the AIASS software package from:

<https://github.com/gh0stless/AIASS-for-MAX4LIVE>

The SIDBlaster is recognised by Windows as a "USB Serial Converter". It may be recognized as a COMx device with ports (in Device Manager). In this case, you can deactivate VCP in "Expanded".

With older versions of Windows, installation of a driver by FTDI may be necessary, available at:

<http://www.ftdichip.com/Drivers/D2XX.htm>

File paths

Extract the content from the AIASS software package and copy the relevant files to the following locations. File paths will depend on what version of Ableton Live you are using and where you have chosen to install your software.

Ableton Live 9 32 Bit version:

Copy SID.mxe to:

C:\Documents\Max 7\Library

Copy the 32 Bit version of the hardsid.dll to:

C:\Program Files (x86)\Cycling '74\Max 7

Ableton Live 9 64 Bit version:

Copy SID.mxe64 to:

C:\Documents\Max 7\Library

Copy the 64 Bit Version of the hardsid.dll to:

C:\Program Files\Cycling '74\Max 7

Ableton Live 10 64 Bit

Copy SID.mxe64 to:

C:\Documents\Max 8\Library


Copy the 64 Bit version of the hardsid.dll to:

C:\Program Files\Ableton\Live 10\Resources\Max

AIASS Mono version



Mono Master section:

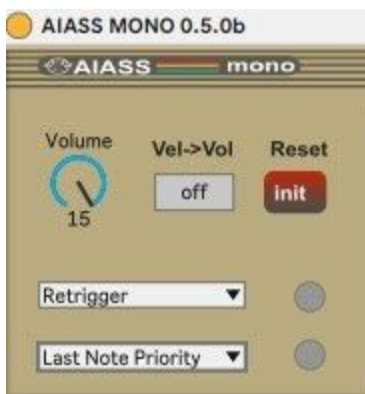

Volume = Master volume. To get the best possible signal to noise ratio, it is best to leave it a 15.

Vel->Vol = When activated velocity will control Master volume.

Reset/Init = Resets AIASS to its default setting. Warning! All unsaved settings will be lost when pressing "Reset/Init".

Play Mode =

- *Retrigger* - Notes are retriggered every time a key is pressed, but if more than one key is held, the note will return to its previous pitch after the second key is released,
- *Legato* - Notes are played Legato, i.e. the pitch "glides" between notes.


- *Last step* - Notes are retriggered every time a key is pressed, and if more than one key is held the previous note will be cut off.

Activity LEDs = Indicates notes on and off

Oscillator and envelope section:

There are 3 oscillators on a SID chip, each with its own ADSR envelope hardwired to the VCA (Voltage Controlled Amplifier), i.e. creating a volume envelope. The filter is not connected to an envelope on the SID chip by design. However, there are ways around this as described in the tips section.

Osc Pitch

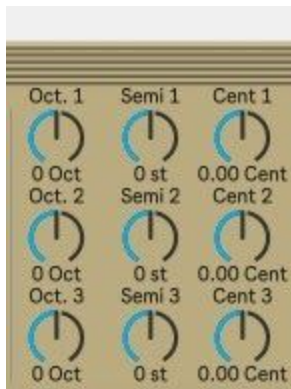

The oscillator pitch can be changed using the:

Oct = Changes the oscillator pitch up or down in one octave steps

Semi = Changes the oscillator pitch up or down in semitone steps

Cent = Fine tunes the oscillator pitch

ADSR envelope and Pulse Width



ADSR = As mentioned above, each oscillator has its own ADSR envelope. It allows control of the Attack, Decay, Sustain and Release time of each oscillators VCA (Volume envelope).

Pulsew. = This controls the Pulse Width for each oscillator. It is particularly useful when using the Pulse waveform.

Waveforms and Noise



Each oscillator has three waveforms, **Pulse**, **Saw** and **Triangle**, plus **Noise**. Several waveforms can be selected at the same time. However, the noise can not be combined with the other waveforms.

Ringmod = Ring modulation. This effect is most audible when the Triangle wave is activated but experiment with different settings to create different timbres.

Sync. = Syncs the oscillators to each other. This will only work in mono mode, not in poly.

Filter section



Filter activation buttons = The filter is activated for each oscillator separately (oscillator 1-3). You also have to select which filter type to use:

LP = Low Pass

BP = Band Pass

HP = High Pass

All filter types can be freely combined.

External input button = There is also an option to activate the filter for the external input. This will raise the noise level since the input of a SID-chip is quite noisy by design. Actually, the SID-chip in whole is pretty noisy, but that is part of the charm. As mentioned above, please be careful about what you connect to the input of the SID-chip. SID-chips are old and very sensitive to electrical spikes and too high voltages.

3off = When activated, this disconnects Oscillator 3 from the audio path. If you also bypass Oscillator 3 in the filter section it can instead be used for modulation purposes.

SID-chip model button = There are two main types of SID-chip, the 6581-version and the newer 8580-version. The main difference is the filter. The 8580-version has an updated filter where the resonance control is more effective. The cutoff characteristics are also different between the two chips. If the button shows "6581", AIASS is in 8580 mode and vice versa. Try both modes, it might sound nice.

Freq. = Changes the filter Cutoff Frequency for all oscillators which have their filter activated.

Res. = Changes the Resonance amount for all oscillators which have their filter activated.


AIASS Poly version



Since the SID-chip has three oscillators, it is possible to use it in Poly mode (Paraphonic to be exact, because all oscillators go through the same filter) and be able to play three simultaneous notes. To use SIDBlaster in Poly mode, load the AIASS Poly instrument in Ableton Live.

The Poly instrument looks and functions the same as the Mono version, except for the Master section.

Poly Master section:

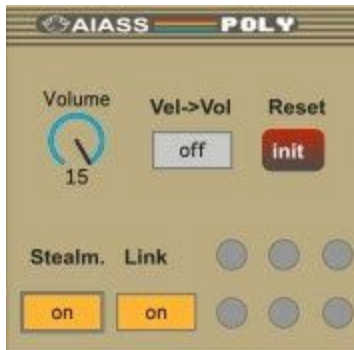

Incoming Midi notes are "rotated". The first note triggers oscillator 1, the second note triggers oscillator 2 and the third note triggers oscillator 3, after that, the fourth note triggers oscillator 1 again and so on.

Stealm. = Steal Mode that cuts off old notes as new are played.

Link = Links the controls for oscillator tuning, ADSR and Pulse Width, which is helpful when adjusting the sound for all oscillators at the same time. If unchecked, all controls are edited one by one.

Volume, Vel->Vol, Reset/Init and the **Activity LEDs** have the same function as in the Mono version.

Tips

- Add as many LFO's as you want to SIDBlaster with Midi LFO's.



Download MAX for Live Essentials from Ableton's webpage.
After installing the package, the Midi LFO is found under:

*MAX for Live Essentials->Max Midi Effect->Control Devices
MIDI*

Click "Map" on the LFO and then click on the parameter you would like to control. You can add as many LFO's as you like.

One classic example is to map the LFO to the Pulse Width of an oscillator and set the waveform to Pulse, in order to get some PWM.

- Add as many ADSR-envelopes as you want to SIDBlaster with Midi Envelopes.



The Envelope is also included in MAX for Live Essentials. After installing the package, the Midi Envelope is found under:

*MAX for Live Essentials->Max Midi Effect->Control Devices
MIDI*

Click "Map" on the Envelope and then click on the parameter you would like to control. Now, everytime a note is played, the Envelope is triggered. You can add as many Envelopes as you like.

One example would be to add an ADSR to AIASS Filter Cutoff parameter. This way you can control the envelope of the filter.

- Lower the AIASS own ADSR envelope settings if you get internal distortion. The SID-chip distorts quite easily, especially when playing all oscillators at the same time.
- If you put Ableton's External Audio Effect after AIASS, you can route the audio output of the SIDBlaster to the same track in Ableton. "Audio out" routing in the External Audio Effect can be omitted.



- Try an Arpeggiator with a fast tempo on the Mono version of AIASS to get classic Commodore C64 arpeggiated "chords".

- You can map a Midi controller to any AIASS parameter, for example: Mod Wheel to Cutoff Frequency.

Links

<https://github.com/gh0stless/AIASS-for-MAX4LIVE>

<http://crazy-midi.de/>

Thanks to

Davey (The Phantom) for creating the SIDBlaster.

Wilfred Bos for tips and helping.

Stein Pedersen for assistance and the sidblaster.dll.

Rico Frenzel for help and testing.

Karl-Werner Riedel for his help with designing the TicTac hardware.

Magnus Hansson for ideas, testing and writing this nice manual.

Borjana Konstantinowa for her patience with me.

-Andreas