

SIDBLASTER-USB

TIC TAC EDITION

– A REAL SID CHIP ON PC OR MAC

USER MANUAL

BY ANDREAS SCHUMM, REV. 1.2

INDEX

1. Introduction.....	1
1.1 Improvements.....	1
2. General information.....	2
3. Hardware installation.....	3
3.1 SID-chip installation.....	3
3.2 Jumper settings.....	4
3.2.1 For the 6581 SID-chip:.....	4
3.2.2 For the 8580 SID-chip:.....	4
3.3 Other jumpers on the hardware.....	5
3.3.1 JP6 (White).....	5
3.3.2 SV2:Paddle connector (yellow).....	5
3.3.3 SV1: ISP Connector.....	6
3.4 USB and audio connections.....	6
3.4.1 USB jack.....	6
3.4.2 Audio-out jack.....	7
3.4.3 Audio-in jack.....	7
4. Software.....	8
4.1 The FTDI D2XX driver.....	8
4.1.1 Windows.....	8
4.1.2 Linux.....	9
4.1.3 MacOS.....	9
4.2 The hardsid library.....	10
4.2.1 Windows.....	10
4.2.2 Linux.....	11
4.2.3 MacOS.....	11
4.2.4 SIDBLASTERUSB_WRITEBUFFER.....	11
4.2.4.1 Windows.....	11
4.2.4.2 Linux/MacOS.....	11

4.2.5 The SIDBlasterTool.....	12
4.2.6 Notes for developers.....	12
4.3 Applications.....	12
4.3.1 Vice64.....	12
4.3.2 ACID64 Player.....	13
4.3.3 SidPlay2.....	13
4.3.4 GoatTracker.....	13
4.3.5 JSIDPlay2.....	13
4.3.5.1 JSIDPlay2 Android app.....	13
4.3.6 Cloando's C64 Forever.....	14
4.3.7 AIASS.....	14
4.3.7.1 sid-object for Max/MSP & Max4Live.....	14
4.3.7.2 AIASS – Max4Live device(s).....	14
4.3.7.3 AIASS – VST.....	14
5. Multiple device operation.....	15
6. Community.....	16
7. Links.....	16
8. Thanks to.....	17

1. INTRODUCTION

The SIDBlaster-USB Tic Tac comprises premium "open-source" hardware for using a genuine "SID"-sound chip for C64 emulation, playback of SID tunes and music production as a little box on the USB port of a personal computer or Mac.

SIDBlaster-USB Tic Tac is based upon "SIDBlaster-USB", and is 100% compatible with it.

1.1 IMPROVEMENTS


- Good value universal current supply 9V or 12V
- Original C64-audio wiring
- Optional connection facility for two Paddles.
- Switchable filter capacitors
- Switchable capacitors for Paddle
- Precisely fitting printed circuit board for assembly into a Tic Tac candy box
- Audio-In
- Professional 6,3mm mono audio jack sockets
- Cozy blue power LED
- (Rev.1.2:) red TX/RX-LED
- (Rev. 1.2 white jumper to connect GND and shield (experimental).
- prepared for read access (firmware 1.1)

2. GENERAL INFORMATION

- Plug and play is not possible, the SIDBlaster must be plugged in before using in an application. Also, do not unplug the SIDBlaster before you have finished the application.
- When you are not using the SIDBlaster it is recommended to unplug the USB-connection since this prolongs the life of the SID-chip.
- Since a SID-chip produces heat, use a heat-sink on the chip if possible and make sure there is sufficient ventilation (leave the flap of the Tic Tac candy box open).

3. HARDWARE INSTALLATION

3.1 SID-CHIP INSTALLATION

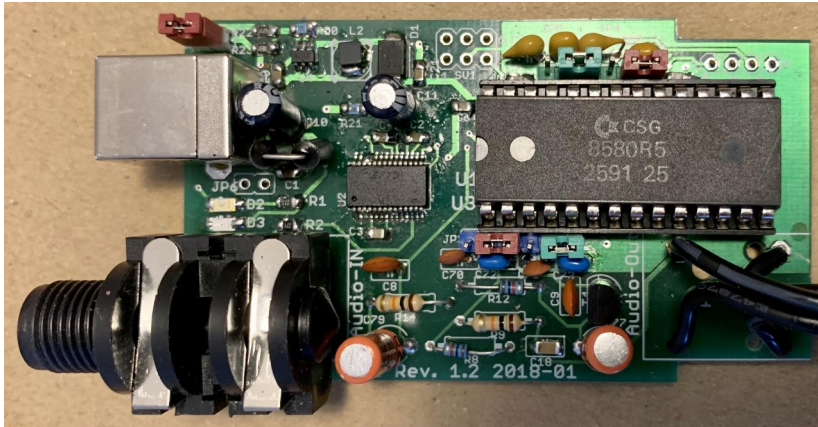

A SIDBlaster-USB with correct installed 8580


Warning! Double check the voltage settings on the SIDBlaster hardware. If you set them incorrectly, for example sending 12V into an 8580 SID-chip which runs at 9V, you will destroy the chip. If you have a multi-meter, **check the voltage** at the SID chip socket to be sure.

Always use an anti static bracelet to avoid damaging the SID-chip and other electrical components when installing it in the SIDBlaster.

To **remove a SID** chip, for example, use a screwdriver, lever it out alternately, be careful not to damage the circuit board or components.

Before **inserting a SID**, bend the legs straight with a pair of pliers, press carefully, check that none of the legs bend over.

3.2 JUMPER SETTINGS

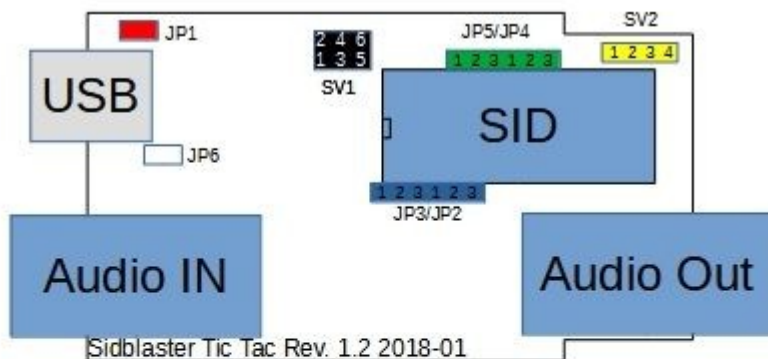

JP1		Voltage selector	SV1		ISP connector
JP3/JP2		Filter caps	SV2		Paddle connector
JP5/JP4		Paddle caps	JP6		Shield2GND

3.2.1 FOR THE 6581 SID-CHIP:

- JP1: must be open (12V).
- JP2-JP5: Place all jumpers on the left side (pins 1-2).

3.2.2 FOR THE 8580 SID-CHIP:

- JP1: must be closed (9V).
- JP2-JP5: Place all jumpers on the right side (pins 2-3).

3.3 OTHER JUMPERS ON THE HARDWARE


3.3.1 JP6 (WHITE)

From Rev. 1.2 and on. Experimental, connects USB shield to ground; you may try it to counteract interfering noise.

3.3.2 SV2:PADDLE CONNECTOR (YELLOW)

Here you have access to the two A/D converters of the SID chip. For example, you can connect 2 rotary potentiometers as paddles. This is of interest for programmers. You can also use the function with the SID object for Max/MSP.


- 1 +5V
- 2 POTX
- 3 POTY
- 4 GND

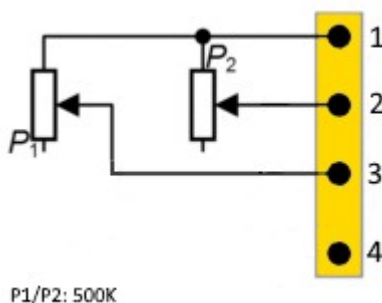

3.3.3 SV1: ISP CONNECTOR

Use a Picit 3 programmer to flash the microcontroller. MPLAB IPE is used as software.

1	MCLR/VPP
2	+5V
3	GND
4	PGD (ICSPDAT)
5	PGC (ICSPCLK)
6	n.c.

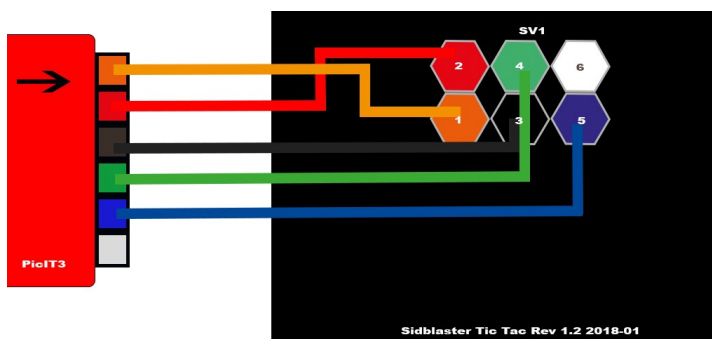

3.4 USB AND AUDIO CONNECTIONS

3.4.1 USB JACK

Connect the SIDBlaster hardware to a USB port using a type A-B USB cable of good quality. It can also work with a good quality USB-hub.

3.4.2 AUDIO-OUT JACK

The audio output is designed as a professional 1/4 "jack socket. Connect the audio output of the SIDBlaster to your mixer or audio interface using an unbalanced (mono) cable.

3.4.3 AUDIO-IN JACK

The second audio jack on the SIDBlaster is an audio input and is also an unbalanced connection. If you are unsure which connector is which, the connectors are marked on the PCB. Be careful about what you connect to the input of the SID-chip. These chips are old and very sensitive to electrical spikes and too high voltages.

4. SOFTWARE

4.1 THE FTDI D2XX DRIVER

4.1.1 WINDOWS

The SIDBlaster needs to do a digital "handshake" the first time it is connected via USB. This requires an internet connection. The handshake will not work if your internet connection is set to "Metered Connection" in Windows. To solve this, temporarily disable "Metered Connection", wait a moment for the SIDBlaster to do the handshake, and then re-enable "Metered Connection".

The latest Windows versions provide the FTDI driver via the update function. So check: Settings / Updates / Optional Updates.

The SIDBlaster is recognized by Windows as a "USB Serial Converter". It may be recognized as a COMx device with ports (in Device Manager). Edit: Your SIDBlaster have to be flashed correctly with the FTDI prog tool and the template from the SIDBlaster project in this case. The actual hardsid.dll don't accept incorrect flashed SIDBlasters.

With older versions of Windows, installation of a driver by FTDI may be necessary, available at:

<http://www.ftdichip.com/Drivers/D2XX.htm>.

4.1.2 LINUX

Download D2XX driver from: <https://ftdichip.com/drivers/d2xx-drivers/>

Please install FTDI drivers explained in chapter '2 Installing the D2XX driver' from here:

https://www.ftdichip.com/Support/Documents/AppNotes/AN_220_FTDI_Drivers_Installation_Guide_for_Linux.pdf

If device still cannot be used, please install a workaround mentioned in chapter '1.1 Overview' :

```
$ sudo vi /etc/udev/rules.d/91-  
sidblaster.rules
```

```
ACTION=="add", ATTRS{idVendor}=="0403",  
ATTRS{idProduct}=="6001", MODE="0666",  
RUN+="/bin/sh -c 'rmmod ftdi_sio && rmmod  
usbserial'"
```

```
$ sudo udevadm control --reload-rules &&  
udevadm trigger
```

4.1.3 MACOS

Note: it may be necessary to switch off the security monitoring in MacOS or to authorize all developers.

```
sudo spctl --master-disable
```

Could also work:

```
sudo xattr -rd com.apple.quarantine / Your  
software path.app
```

Download and install D2XX Driver from:

<https://ftdichip.com/drivers/d2xx-drivers/>

use the instructions from:

https://ftdichip.com/wp-content/uploads/2020/08/AN_134_FTDI_Drivers_Installation_Guide_for_MAC_OSX-1.pdf

Download and install D2XXHelper from the same site.

4.2 THE HARDSID LIBRARY

Is the “driver” of the SIDBlaster, so to say. Under windows it comprises a reprogrammed DLL of the Hardsid, thus, software programmed for the Hardsid becomes compatible for the SIDBlaster. Later the DLL was ported to linux and macos. The DLL is made and maintained by Stein Pedersen. Linux/Mac port was made by Ken Händel.

4.2.1 WINDOWS

- Download from:
https://github.com/gh0stless/SIDBlaster-USB-Tic-Tac-Edition/tree/master/hardsid_library
- Copy the right hardsid.dll into the program directory of the program with which you want to use it.
- The 64 bit version is required by the 64 bit version of vice and also by the 64 bit versions of AIASS.

4.2.2 LINUX

- Download from:
https://github.com/gh0stless/SIDBlaster-USB-Tic-Tac-Edition/tree/master/hardsid_library
- copy libhardsid.so to /usr/local/lib/
- apply chmod 0755 on libhardsid.so
- copy hardsid.hpp to /usr/local/include/

4.2.3 MACOS

- Download from:
https://github.com/gh0stless/SIDBlaster-USB-Tic-Tac-Edition/tree/master/hardsid_library
- copy libhardsid.dylib to /usr/local/lib/
- copy hardsid.hpp to /usr/local/include/

4.2.4 SIDBLASTERUSB_WRITEBUFFER

Depending on your system, tunes with high data rates (multi speed tunes or digitunes) may play slower if the latency of the USB driver is too high. This can be remedied by setting the driver write buffer size to a larger value, for instance. Even down to 0, works on fast machines.

4.2.4.1 WINDOWS

```
set SIDBLASTERUSB_WRITEBUFFER_SIZE=8
```

4.2.4.2 LINUX/MACOS

```
export SIDBLASTERUSB_WRITEBUFFER_SIZE=8
```

4.2.5 THE SIDBLASTERTOOL

With SIDBlasterTool you can check if library and device communication works.

You can also set the SID type and change the serial number. The type is saved as part of the device description and evaluated by applications such as JSIDPlay.

4.2.6 NOTES FOR DEVELOPERS

For developers who want to write applications using the hardsid library, I refer to hardsid.hpp. You can find a few more tips in the AIAS-VST repository in the doc folder. Do not forget to call the destructor method manually when exiting under MacOS and Linux.

Detailed instructions on how to create the hardsid library can be found here (thanks to Ken Handel):

<https://haendel.ddns.net/~ken/sidblaster.html>

4.3 APPLICATIONS

4.3.1 VICE64

The famous C64 emulator supports up to 3 SIDBlasters. In the simplest case, you now have a C64 with original sound. But you can also use the SIDBlaster with Vice64 as a MIDI expander, by activating the MIDI emulation, and load a synthesizer program like Station64. Windows only.

4.3.2 ACID64 PLAYER

Best SIDBlaster support, if you have several devices you can even play stereo and 3SID tunes. Only Windows. Version 4 no longer supports the SIDBlaster.

4.3.3 SIDPLAY2

Good SID player, suitable as a jukebox because of playlists. Windows only.

4.3.4 GOATTRACKER

Tracker. Support one or two SIDPlasters, Windows only.

4.3.5 JSIDPLAY2

JSIDPlay2 is a fantastic C64 content media player. In the current version it has the best SIDBlaster support. It may not be as handy as ACID64, but once you have familiarized yourself with it, it is a very powerful and comprehensive program. Available for Windows, MacOS and Linux.

JSIDPlay2 supports the SIDBlaster natively, only Java is required. You don't need to install any D2XX drivers or the hardsid library.

4.3.5.1 *JSIDPLAY2 ANDROID APP*

Get this app to turn your phone into a mobile SIDPlayer. Connect your SIDBlaster to your mobile phone. You will need an OTG USB adapter and probably a mono to stereo adapter for the headphones.

4.3.6 CLOANTO'S C64 FOREVER

Just copy the hardsid.dll in the directory of Vice (Help/About/VICE Plugin, Open File Location). Then, enter "-sidenginemodel hardsid" in the "Custom parameters" field (in Tools/Options/Emulation, under Plugins/VICE/Custom parameters...)

4.3.7 AIASS

AIASS Is A SID Synthesizer

4.3.7.1 *SID-OBJECT FOR MAX/MSP & MAX4LIVE*

Is a Max/MSP C-external for the SIDBlaster-USB

4.3.7.2 *AIASS – MAX4LIVE DEVICE(S)*

The AIASS for MAX4LIVE project is a set of max4live devices to control one or more SIDBlaster-USB as a synthesizer application. This makes it possible to produce music with an original SID chip MOS 6581 or MOS 8580 from the Commodore 64, in a modern DAW.

4.3.7.3 *AIASS – VST*

AIASS as VST (on all systems)

5. MULTIPLE DEVICE OPERATION.

You can use multiple SIDBlaster-USB at the same time.

ACID Player, JSIDPlay2, Vice, Goattracker and AIASS support this.

The benefit lies in the playback of stereo or 3Sid tunes, fake stereo, automatic selection of the correct SID type with JSIPlay2 (set type with the SIDBlastertool), or several instruments with AIASS (not yet VST).

6. COMMUNITY

Meet us on Facebook in our Facebook group for discussion and news. („SIDBlaster-USB“ on Facebook)

7. LINKS

- <http://crazy-midi.de/>
- <https://github.com/gh0stless/SIDBlaster-USB-Tic-Tac-Edition>
- <https://github.com/gh0stless/SIDBlasterTool>
- <https://github.com/gh0stless/sid-object>
- <https://github.com/gh0stless/AIASS-for-MAX4LIVE>
- <https://github.com/gh0stless/AIASS-Mono-VST>
- https://github.com/Galfodo/SIDBlasterUSB_HardSID-emulation-driver
- <https://vice-emu.sourceforge.io/>
- <https://www.acid64.com>
- <http://www.gsldata.se/c64/spw/> (SIDPlay2)
- <https://haendel.ddns.net/~ken/> (JSIDPlay2)
- <https://sourceforge.net/projects/goattracker2/>
- <https://www.facebook.com/groups/2305052182957954/>

8. THANKS TO

- Davey (The Phantom) for creating the original SIDBlaster.
- Stein Pedersen for assistance and the sidblaster.dll.
- Wilfred Bos for his ACID Player and tips and helping.
- Ken Händel for his JSIDPlay2 and his work on the library
- Karl-Werner Riedel for his help with designing the Tic Tac hardware.
- Magnus Hansson for writing some original parts of this manual.
- Borjana Konstantinowa for her patience with me.

Coswig, Saxon 22/06/01