



NAVIXY SPT100

Protocol Document

Version: 1.12

General Notes:

All materials contained on this documentation is protected by the copyright law and may not be reproduced, transmitting, published or broadcast without the prior obtaining authorization of NAVIXY. The documentation is provided for testing, evaluation, integration and product information purpose and it may contain deficiencies or inadequacies information of products. This product is not intended for use in life support appliance, devices or systems where a malfunction of the product can reasonably be expected to result personal injury. NAVIXY or its supplier will not be liable for any consequential, direct, indirect, incidental, punitive or other damages including without limitation, damages for loss of business profits, business interruption, loss of business information or other pecuniary loss that arising out the use of or inability to use the documentation or product, even if NAVIXY has been advised of the possibility of such damages. The customers using or reselling the product in such application do so at their own risk and agree to full indemnify NAVIXY for any damages resulting from illegal use or resale. Subject to change without notice at any time.

Copyright

Reproduction, dissemination, edition of this document, or utilization of the content and communication format as well as giving to other without authorization are prohibited. Offenders will be held liable for payment of damages.

Copyright ©NAVIXY 2009. All right are reserved.

Table of Content

1. Introduction to NAVIXY SPT100 Protocol Document:	4
2. Version History:	4
3. Related Documents:	6
4. Syntax of “\$WP” Commands:	6
5. Supported Communication Types:	7
6. Parameter Format for Returning Messages:.....	8
7. Command List of WP Commands:	9
8. Command Description:	10
9. Appendices:.....	57
9.1 Event ID Description:	57
9.2 Returning Command Error List:	58
9.3 CMS Error List:	59
9.4 CME Error List:	62
10. About NAVIXY:.....	64

1. Introduction to NAVIXY SPT100 Protocol Document:

This document describes the protocol of the NAVIXY SPT100 devices. This document is used for all communications information between the base station/controller center and the SPT100 devices. The document includes command syntax with full acknowledgement of sending/receiving messages upon request, also the features/functionalities of each command. Hence, this document covers all information which you need to design/build application/software that uses the SPT100 as the devices.

2. Version History:

Version	Description	Supported Firmware Version	Supported Hardware Version
1.00	Initial commands	V0.006 or above	V1 or above
1.01	Modified Event ID Description	V0.006 or above	V1 or above
1.02	Added hardware version information to the \$WP+VER command	V1.002 or above	V1 or above
1.03	Modified the effective range for Sync. message	V1.002 or above	V1 or above
1.04	Added querying number of logs in the memory for \$WP+DLREC command	V1.003 or above	V1 or above
	Modified the length of GSM SMS alert messages for \$WP+EMOV and \$WP+EMSMS command	V1.003 or above	V1 or above
	Modified the command format for \$WP+PSM (Power Saving Mode): - adding the "power down delay" and "Sleeping Priority") - Add mode 2 for deep sleeping mode	V1.003 or above	V3 or above
1.05	Add the \$WP+ROAMING command	V1.003 or above	V3 or above
1.06	- Correction of the Sync header definition - Add "CommSelect" and "Heading" conditions for the \$WP+TRACK command - Add "Heading" condition for \$WP+REC command	V1.006 or above	V3 or above
1.07	Add the \$WP+SETMILE command	V1.007 or above	V3 or above

1.08	- Added mode 3 to \$WP+PSM command - Added \$WP+LOWBATT command	V1.007 or above	V3 or above
1.09	-Added \$WP+GSMINFO command	V1.007 or above	V3 or above
1.10	- Modified \$WP+PSM command	V1.008 or above	V3 or above
1.11	- Modified \$WP+PSM command (Illustration)	V1.008 or above	V3 or above
1.12	- Modified \$WP+PSM command (Note-5)	V1.008 or above	V3 or above

3. Related Documents:

1. SPT100 Operation User Manual.

4. Syntax of “\$WP” Commands:

- In order to successfully communicate with SPT100 device, the “\$WP” or “\$wp” prefix is required when issuing command and the <CR> is required for terminating the command line. Throughout this document, the <CR> char is omitted intentionally.
- The response of the command is usually followed by the <CR><LF> in the end of responding message. Throughout this document, the <CR><LF> chars are omitted intentionally.
- There are two types of the commands and responses will be seen through this documents as following:

1. Two types of command acknowledgement:

Ex 1: Issuing commands (configure the parameters for a command):

Issuing command:

\$WP+<Command>+<Tag>=<Password>,<Para>,<Para>,<Para>,...<CR><LF>

Returning acknowledgement:

\$OK:<Command>+<Tag>=<Para>,<Para>,<Para>,...<CR><LF>

Ex 2: Querying command parameters (read command parameters):

Issuing command:

\$WP+<Command>+<Tag>=<Pwd>,<?><CR><LF>

Returning acknowledgement:

\$OK:<Command>+<Tag>=<Para>,<Para>,<Para>,<Para>....<CR><LF>

2. Ask for positioning information:

The returning positioning string (for \$WP+GETLOCATION or \$WP+TRACK) will **NOT** include the “+<command>+<Tag>” in the beginning of the string message.

The positioning data will be displayed as described in the chapter 6.

Please note:

All characters of returning acknowledgement will be in upper case.

- Entering a Series of \$WP commands on Separate Lines:

In order to successfully enter series commands through separate lines, a “pause” is suggested to add between each command (preceding and following commands) until the final responses appears such as “\$OK:<Command>”. This action will avoid sending too many \$WP commands at the same time but without receiving the responses for each issuing command to ensure the device receiving all command correctly and successfully.

- Default parameters for each command are underlined in this document for reference.
- There are two types of data transmission formats
 - Hex format:
For GPRS_Keep_Alive packet.
 - ASCII format:
For all data transmission except the GPRS_Keep_Alive message.

5. Supported Communication Types:

The SPT100 device supports GSM frequency of 850MHz, 900MHz, 1800MHz, and 1900MHz. The device could be communicated with the base station via several communication ways such as following:

- Direct connection (via USB communication port): Auto-adjustable baud rate.
- GSM SMS messages
- GSM CS Data (GSM Circuited Switch Data): **(Reserved)**
- GPRS UDP: Static IP address is required for controller center software.
- GPRS TCP/IP: Static IP address is required for controller center.

Please note:

SPT100 currently does not support CDMA communication.

6. Parameter Format for Returning Messages:

The returning position string includes a series parameters indicating as following:

Device ID, DateTime, Longitude, Latitude, Speed, Heading, Altitude, Satellite, Event ID, (Mileage)

Format for each returning messages:

Device ID: The ID of the device. (Maximum length is 10 digits)

DateTime: YYYYMMDDhhmmss (GMT)

Longitude: WGS-84 coordinate system

Latitude: WGS-84 coordinate system

Speed: 0~65535 km/h

Heading: 0~360 degrees

Altitude: Parameter column is Reserved, currently showing '0'.

Satellite: 0~12

Event ID: xxx. Different event ID indicates different meaning of each returning message,
Please refer to appendix for detailed description.

(Mileage): the mileage value in kilometer. Can be appeared when the SETMILE function enable.

Please Note:

- The above information is only for the returning string with "Event ID" parameter.

7. Command List of WP Commands:

Command	Description
\$WP+UNCFG	Set/Read device ID, Password, and PIN Code of the SIM card
\$WP+COMMTYPE	Set/Read device communication type and its parameters
\$WP+ROAMING	Enable/Disable GPRS roaming function
\$WP+GETLOCATION	Get current position of the device
\$WP+TRACK	Enable/disable/read tracking function to the device
\$WP+REC	Enable/disable/read logging function to the device
\$WP+CLREC	Erase all logging data from the memory of the device
\$WP+DLREC	Download entire/selective logging data from the memory of the device
\$WP+SPDLREC	Stop downloading logging data from the device.
\$WP+REBOOT	Restart up the device
\$WP+RESET	Reset all parameters to the manufactory default settings
\$WP+PSM	Enable/disable "Power Saving Mode"
\$WP+SETEVT	Enable (set)/disable/read user defined Geo-fencing event(s)
\$WP+CLEVT	Clear the user defined Geo-Fencing event(s)
\$WP+IMEI	Query the IMEI number of the internal GSM module
\$WP+SIMID	Query the identification of the SIM card
\$WP+VWT	Activate Voice monitoring function
\$WP+TEST	Device hardware diagnostic function
\$WP+VER	Query the current firmware version.
\$WP+NMEA	Enable/disable outputting GPS strings via USB port (NMEA-0183 format)
\$WP+SPD	Enable/disable/read over-speed event
\$WP+EMOV	Enable/disable unauthorized movement
\$WP+EMSMS	Set the emergency contact number for sending emergency GSM SMS messages
\$WP+QDSET	Set the quick dial number for function keys.
\$WP+SETTZ	Set the time zone information
\$WP+SETMILE	Set/Reset/Query mileage
\$WP+LOWBATT	Set/Read the internal battery low alert
\$WP+GSMINFO	Query the information about the GSM communication information

8. Command Description:

\$WP+UNCFG		
Description	Execute this command to configure the device ID, device password, and PIN code of the SIM card.	
Format	Write	\$WP+UNCFG+[Tag]=[Password],[Devicie ID],[New Password],[PIN code]
	Read	\$WP+UNCFG+[Tag]=[Password],?
Response	\$OK:UNCFG+[Tag]=[Device ID],[New Password],[PIN code]	
Error Response	\$ERR:UNCFG+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
	Device ID	Device identification number. The maximum length is 10 digits. Only integer can be used. Default device ID is 1000000001 Note: The most left digit is reserved in which must be '1'.
	New Password	New password of the device
	PIN Code	The PIN code of the SIM card. The maximum length is 8 digits. 0: Disable
Example	Ex: Issue command: \$WP+UNCFG=0000,1000000002, Response: \$OK:UNCFG=1000000002,	
Note	The SIM card will be locked by the TELCO if enter incorrect PIN code for 3 times then the PUK code is required. Please contact the local TELCO to unlock the SIM card.	

\$WP+COMMTYPE		
Description	Execute this command to set the primary communication type and its related parameters.	
Format	Write	\$WP+COMMTYPE+[Tag]=[Password],[CommSelect],[SMS Base Phone No.],[CSD Base Phone No.],[GPRS_APN],[GPRS_Username],[GPRS_Password],[GPRS_Server_IP_Address],[GPRS_Server_Port],[GPRS_Keep_Alive Packet_Interval],[GPRS_DNS IP address]
	Read	\$WP+COMMTYPE+[Tag]=[Password],?
Response	\$OK:COMMTYPE=[CommSelect],[SMS Base Phone No.],[CSD Base Phone No.],[GPRS_APN],[GPRS_Username],[GPRS_Password],[GPRS_Server_IP_Address],[GPRS_Server_Port],[GPRS_Keep_Alive Packet_Interval],[GPRS_DNS IP address]	
Error Response	\$ERR:COMMTYPE+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
	CommSelect	Set primary communication type: 0: USB communication Note: Support COM numbers: COM 1~ COM 199 auto detectable. 1: GSM SMS communication 2: CSD: Circuit Switched Data communication (Reserved, currently not support) 3: GPRS UDP communication 4: GPRS TCP/IP communication
	SMS Base Phone No	Base phone number for the GSM SMS base station. Maximum length is 16 digits (could be ignored if uses GPRS communication). Note: Please use "" to clear the parameter

	CSD Base Phone No. (Reserved)	Base phone number for the GSM Circuit Switched Data communication. Maximum length is 16 digits (could be ignored if uses GPRS communication). Note: Please use "" to clear the parameter
	GPRS_APN	Access Point Name for GPRS service (required for GPRS communication) The maximum length is 40 characters. Note: Please use "" to clear the parameter
	GPRS_User name	User name for GPRS service if applicable. The maximum length is 20 characters. Note: Please use "" to clear the parameter
	GPRS_Password	Password for GPRS service if applicable. The maximum length is 20 characters Note: Please use "" to clear the parameter
	GPRS_Server_IP_ Address	Default setting: 0.0.0.0 1. Static IP address: format xxx.xxx.xxx.xxx (Please do not use virtual IP address) 2. Host/Domain Name (GPRS_DNS server must be defined) for the base station. The maximum length is 40 characters.
	GPRS_Server_Port	The port IP of the computer which the control center software is operating. The available range is from 1000~65535. Default setting: 1000
	GPRS_Keep_Alive Packet Interval	GPRS Keep_Alive Packet is used to establish the GPRS connection and maintain the GPRS connectivity between the device and the base station. The range is between 0~65535 seconds. Default setting: 30 seconds Note: Set to '0' to disable sending GPRS Keep_Alive Packet. This parameter will not send any Keep_Alive Packet to the control center.
	GPRS_DNS Server	Domain Name System IP address. Please contact local ISP for the IP address of DNS server. Please use the xxx.xxx.xxx.xxx as the format for this parameter. Default setting: 168.95.1.1

Examples

Ex1: GPRS TCP/IP with static IP address

Issue command:

\$WP+COMMTYPE=0000,4,,,internet,,,60.210.45.68,1050,30,168.95.1.1

Response:

	<p>\$OK:COMMTYPE=4,,,internet,,,60.210.45.68,1050,30,168.95.1.1</p> <p>Ex2: If the control center use DNS name(Domain Name System) server</p> <p>Issue command:</p> <p>\$WP+COMMTYPE=0000,4,,,internet,,,serverDNSNAME,6080,30,168.95.1.1</p> <p>Response:</p> <p>\$OK:COMMTYPE=4,,,internet,,,serverDNSNAME,6080,30,168.95.1.1</p>
Notes	<ol style="list-style-type: none"> 1) If primary communication is GPRS then both parameters "SMSPhone No." and "CSD Phone No." are not required. 2) The port number of GPRS_Server_Port parameter must be opened for the control center software and not conflict with others port which is occupied by OS or other software. 3) Please enable the GPRS service for the SIM card before start GPRS configuration. Also, please obtain related information such as "Access Point Name" (APN), user name (if applicable), and password (if applicable) for GPRS configuration (\$WP+COMMTYPE command). 4) The Static IP address is required for the GPRS communication. Sometimes the failure of GPRS connection is caused by the firewall setting enabled. 5) The software developer must implement the function in the control center software in which must echo back exact GPRS Keep_Alive packet back to the device once the base station receives the GPRS Keep_Alive packet which was sent from the device to confirm the GPRS connection. 6) The performance of the GPRS connectivity might be affected by the Keep_Alive packet interval due to the TELCO policy for the dynamic IP address source control. The optimized Keep_Alive Packet interval needs to be tested in the local area in order to obtain the optimized interval (cost effective).

7) Keep_Alive message format (Data transmission by Hex format)

```
typedef struct
```

```
{
```

```
    unsigned short Keep_Alive_Header;
```

```
    unsigned short Keep_Alive_ID;
```

```
    unsigned long Keep_Alive_Device_ID;
```

```
} Keep_Alivestruct;
```

Keep_Alive_Header is **always** 0xD7D0

Keep_Alive_ID is the sequence number for the Keep_Alive message

Keep_Alive_Device_ID is the device identification number. The base station could use this information to recognize the current holding dynamic IP for each device.

Ex:, received Synchronization message following:

0xD0 0xD7 0x1A 0x01 0xC7 0x54 0x44 0x3C

Keep_Alive_Header = 0xD7 0xD0

Keep_Alive_ID = 0x01 0x1A (Decimal = 282)

Keep_Alive_DeviceID = 0x3C 0x44 0x54 0xC7 (Decimal = 1011111111)

8) If the control center software is installed in a computer which is located in the "Intranet" then the parameter "GPRS_Server_IP" address should be the external one which connects to the router and the parameter "GPRS_Server_Port" should be the port number of the computer which is assigned by the router. If the parameter "GPRS_Server_IP" address is using "Virtual IP address" in the intranet then it will lead to the GPRS connection failure.

9) If the device is configured under GPRS mode (GPRS UDP/TCP), the device will send the acknowledgement for the receiving command or returning message back to the GMS SMS base phone number once the device receives the command from a GSM SMS phone number other than GSM SMS base phone number. If the GSM SMS base phone number is not set then the device will take the parameters but will not returning any message back to GSM SMS base phone number or GPRS server.

- | | |
|--|--|
| | <p>10) Please be aware that if the GSM base phone number is not set, the device has following behaviors:</p> <ul style="list-style-type: none">- If the device receives any valid incoming command via GSM SMS, the device will execute the command, but all acknowledgements or returning message will NOT be sent and will be ignored.- If the device is configured under GPRS mode (GSM base phone number is set), if the device receives any valid incoming GSM command from a phone number other than GSM base phone number then the device will execute this command and return all acknowledgements and returning messages back to the GSM base phone number. <p>11) If this command is issued over GSM SMS, please be aware the text length limitation of the GSM message.</p> |
|--|--|

\$WP+ROAMING		
Description	Execute this command to enable/disable GPRS roaming function. This command does not affect GSM SMS roaming service. If GPRS roaming function is disabled, the device will automatically closed the GPRS session and all undelivered messages would be stored in the queue buffer. Those undelivered messages would be sent out whenever the device returns the non-GPRS roaming network.	
Format	Write	\$WP+ROAMING+[Tag]=[Password],[Enable/Disable]
	Read	\$WP+ROAMING+[Tag]=[Password],?
Response	\$OK:ROAMING+[Tag]=[Enable/Disable]	
Error Response	\$ERR:ROAMING+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
	[Enable/Disable]	0: Disable GPRS roaming function 1: Enable GPRS roaming function
Example	Ex: Issue command: \$WP+ROAMING=0000,1 Response: \$OK:ROAMING=1	

\$WP+GETLOCATION		
Description	Execute this command to get current position of the device	
Format	Write	\$WP+GETLOCATION+[Tag]=[Password]
Response	Device ID, DateTime, Longitude, Latitude, Speed, Heading, Altitude, Satellite, Event ID,	
Error Response	\$ERR:GETLOCATION+[Tag]=[Error Code] <i>Please refer to appendix for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
Example	Ex: Issue command: \$WP+GETLOCATION=0000 Response: 1010000001,20070313170020,121.123456,12.654321,45,233,0,9,0	
Note	1) The device returns the last valid GPS information upon request regardless the GPS reception. The parameter of "Number of Satellites" is '0' if there is no GPS reception or GPS is not fixed. Thus the parameter of "number of satellite" could be a reference to check whether there is GPS reception or not.	

\$WP+TRACK		
Description	Execute this command to enable automatically reporting current position to the base station according to the parameter "mode" and related conditions.	
Format	Write	\$WP+TRACK+[Tag]=[Password],[Mode],[Time Interval],[Distance Interval],[Number of Times],[Track Basis],[CommSelect],[Heading]
	Read	\$WP+TRACK+[Tag]=[Password],?
Response	\$OK:TRACK+[Tag]=[Mode],[Time Interval],[Distance Interval],[Number of Times],[Track Basis],[CommSelect],[Heading]	
Error Response	\$ERR:TRACK+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
	Mode	<p>0: Disable (Stop tracking)</p> <p>1. Time mode: The position information is sent to the base station according to the required time interval, only whole number can be used. Effective range for different communication types: Direct Connection: 1~65535 seconds. GSM SMS: 15~65535 seconds GSM CSD: 5~65535 seconds GPRS UDP/TCP/IP: 5~65535 seconds.</p> <p>2. Distance mode: The position information is sent to the base station according to the required distance interval, only whole number can be used. Effective range for different communication types: Direct Connection: 25~65535 meters: GSM SMS: 300 ~65535 meters GSM CSD: 100~65535 meters. GPRS UDP/TCP/IP: 100~65535 meters.</p>

	3. Time AND Distance: The position information is sent back to the base station when following BOTH conditions are satisfied: a. "Time Interval" is reached. b. "Distance Interval" is reached.
	4. Time OR Distance The position information is sent to the base station when one of the following condition is satisfied: a. "Time Interval" is reached. b. "Distance Interval" is reached.
	5. Heading mode: The position information is sent when the "Heading (direction)" parameter is changed beyond the assigned degrees. Please enter the required value in the "Heading" column.
	6. Heading OR Time The position information is sent back to the base station when one of the following condition is satisfied: a. "Heading (direction)" parameter is changed beyond the assigned degrees b. Required "Time Interval" is reached.
	7. Heading OR Distance The position information is sent whenever one of the following condition is satisfied: a. "Heading (direction)" parameter is changed beyond assigned degrees b. Required "Distance Interval" is reached.
	8. Heading OR (Time AND Distance) The position information is sent back to the base station when one of the following condition is satisfied: a. "Heading (direction)" parameter is changed beyond assigned degrees b. Required BOTH "Time AND Distance Interval" are satisfied.

		<p>9. Heading OR Time OR Distance</p> <p>The position information is sent whenever one of the following condition is satisfied:</p> <ol style="list-style-type: none"> When the "Heading (direction)" parameter is changed beyond assigned degrees. Required "Time Interval" is reached. Required "Distance Interval" is reached.
	Time Interval	Specify elapsed time interval to report current position. Default value is '0'. The effective range, please refer to the "mode" parameters option '1' => "Time mode".
	Distance Interval	Specify elapsed distance interval to report current position. Default value is '0'. The effective range, please refer to the "mode" parameters option '2' => "Distance mode".
	Number of Times	<p>Frequency (number of times the report needs to be sent). Effective range is from 0~65535.</p> <p>Set '0' indicating "Continuously tracking."</p> <p>Note:</p> <p>The counter of "Times" will be displayed the how many times left while the command is executing when we query the command parameters.</p>
	Track Basis	<p>0: Position information is sent only GPS signal available.</p> <p>1: Position information is sent regardless the GPS signal reception</p>
	CommSelect	<p>Set the output communication channel:</p> <p>0: USB communication</p> <p>Note:</p> <p>Support COM numbers: COM 1~ COM 199 auto detectable.</p> <p>1: GSM SMS communication</p> <p>2: CSD: Circuit Switched Data communication (Reserved, currently not support)</p> <p>3: GPRS UDP communication</p> <p>4: GPRS TCP/IP communication</p>
	Heading	The effective value is from 10~90 degrees.

Example	<p>Ex:</p> <p>Issue command:</p> <p>\$WP+TRACK=0000,1,5,0,5,0,4,15</p> <p>Response:</p> <p>\$OK:TRACK=1,5,0,5,0,4,15</p> <p>1010000001,20070313170020,121.123456,12.654321,0,233,0,9,2</p> <p>1010000001,20070313170025,121.123456,12.654321,0,233,0,9,2</p> <p>1010000001,20070313170030,121.123456,12.654321,0,233,0,9,2</p> <p>1010000001,20070313170035,121.123456,12.654321,0,233,0,9,2</p> <p>1010000001,20070313170040,121.123456,12.654321,0,233,0,9,2</p>
Notes	<ol style="list-style-type: none"> 1) The mode 2,3,5,7,and 8 require the GPS reception. If the GPS reception is not stable then the accuracy will be decreased. 2) Track Basis can set to 1 when the mode is set to 1,4, 6,and 9.

\$WP+REC		
Description	Execute this command to enable automatically logging current position into the memory of the device according to the parameter "Mode" and corresponding conditions.	
Format	Write	\$WP+REC+[Tag]=[Password],[Mode],[Time interval],[Distance Interval],[Number of Times],[Record Basis],[Heading]
	Read	\$WP+REC+[Tag]=[Password],?
Response	\$OK:REC+[Tag]= [Mode],[Time],[Distance],[Times],[Record basis],[Heading]	
Error Response	\$ERR:REC+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
	Mode	<u>0</u> : Disable (Stop storing position data into flash memory)
		1: Time mode: The position information is logged into the memory of the device according to the required time interval, only integer can be used. Effective parameters: Range: 1~65535 seconds.
		2: Distance mode: The position information is logged into the memory of the device according to the required distance interval, only integer can be used. Range: 25~65535 meters. Note: For the vehicle application, suggest to set 50 meters or above for better performance.

	3 : Time AND Distance
	The position information is logged into the memory of the device according to the required "Time interval" AND "Distance interval"; the position information is not logged if one of the "Time interval" and "Distance interval" does not satisfy.
	4. Time OR Distance
	The position information is sent to the base station when one of the following condition is satisfied:
	a. "Time Interval" is reached.
	b. "Distance Interval" is reached.
	5. Heading mode:
	The position information is sent when the "Heading (direction)" parameter is changed beyond the assigned degrees. Please enter the required value in the "Heading" column.
	6. Heading OR Time
	The position information is sent back to the base station when one of the following condition is satisfied:
	a. "Heading (direction)" parameter is changed beyond the assigned degrees
	b. Required "Time Interval" is reached.
	7. Heading OR Distance
	The position information is sent whenever one of the following condition is satisfied:
	a. "Heading (direction)" parameter is changed beyond assigned degrees
	b. Required "Distance Interval" is reached.
	8. Heading OR (Time AND Distance)
	The position information is sent back to the base station when one of the following condition is satisfied:
	a. "Heading (direction)" parameter is changed beyond assigned degrees
	b. Required BOTH "Time AND Distance Interval" are satisfied.

		<p>9. Heading OR Time OR Distance</p> <p>The position information is sent whenever one of the following condition is reached:</p> <ul style="list-style-type: none"> a. When the "Heading (direction)" parameter is changed beyond assigned degrees. b. Required "Time Interval" is reached. c. Required "Distance Interval" is reached.
	Time Interval	Specify elapsed time interval to report current position. Default value is '0'. The effective range, please refer to the "mode" parameters option 1 "Time mode".
	Distance Interval	Specify elapsed distance interval to report current position. Default value is '0'. The effective range, please refer to the "mode" parameters option 2 "Distance mode".
	Number of Times	Frequency (number of times the report needs to be sent). Effective range is from 0~65535. Set '0' indicating "Continuously logging".
	Record Basis	0: Position information is sent only GPS signal available. 1: Position information is sent regardless the GPS signal reception
	Heading	The effective value is from 10~90 degrees.
Example	<p>Ex:</p> <p>Issue command:</p> <p>\$WP+REC=0000,1,5,0,0,0,15,</p> <p>Response:</p> <p>\$OK:REC=1,5,0,0,0,15</p>	
Notes	<p>1) This function follows the FIFO (first in first out algorithm) algorithm.</p> <p>2) "Record Basis" parameter can be set to 1 when mode is set to 1,4,6,or 9.</p>	

\$WP+CLREC		
Description	Execute this command to erase all logging data from the memory of the device.	
Format	\$WP+CLREC+[Tag]=[Password]	
Response	\$OK:CLREC+[Tag]	
Error Response	\$ERR:CLREC+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
Example	Ex: Issue command: \$WP+CLREC=0000 Response: \$OK:CLREC	

\$WP+DLREC		
Description	Execute this command to download request logging data from the memory of the device	
Format	Write command	\$WP+DLREC+[Tag]=[Password],[Start Date/Time],[End Date/Time]
	Read command	\$WP+DLREC+[Tag]=0000,?
Response	<p>For Write command:</p> <p><u>Command acknowledgement:</u> \$OK:DLREC+[Tag]=[Start Date/Time],[End Date/Time]</p> <p><u>Download task completes:</u> \$Download Completed</p>	
	<p>For Read command:</p> <p>\$OK:DLREC=number of logs (start date~end date)</p> <p>Ex: \$OK:DLREC=388(20070522074235~20070522074907)</p>	
Error Response	<p>\$ERR:DLREC+[Tag]=[Error Code]</p> <p><i>Please refer to appendix 9.2 for detailed error code descriptions.</i></p>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
	Start Date/Time	Format of this parameter: YYYYMMDDHHMMSS or '0' (please refer to the "Note" section for detail)
	End Date/Time	Format of this parameter: YYYYMMDDHHMMSS or '0' (please refer to the "Note" section for detail)

Example	<p>Ex:</p> <p>Issue command:</p> <p>\$WP+DLREC=0000,0,0</p> <p>Response:</p> <p>\$OK:DLREC=0,0</p> <p>1010000001,20070313180520,121.123456,12.654321,45,233,0,8,1</p> <p>1010000001,20070313181020,121.123456,12.654321,45,233,0,7,1</p> <p>1010000001,20070313181520,121.123456,12.654321,45,233,0,8,1</p> <p>1010000001,20070313182020,121.123456,12.654321,45,233,0,8,1</p> <p>1010000001,20070313182520,121.123456,12.654321,45,233,0,8,1</p> <p>1010000001,20070313183020,121.123456,12.654321,45,233,0,8,1</p> <p>1010000001,20070313183520,121.123456,12.654321,45,233,0,8,1</p> <p>\$Download Completed</p>															
Notes	<p>1) If the download process is interrupted by any insertion command/message then the error message "\$ERR:7" is sent back to the base station.</p> <p>2) This command does not support resume function.</p> <p>3) The value '0' can be used for both parameters "Start Date/Time" and "End Date/Time". The corresponding actions are following:</p> <table><tr><td>Start Date/Time</td><td>End Date/Time</td><td>Corresponding data will be downloaded</td></tr><tr><td>0</td><td>0</td><td>Get entire logging data from the flash memory</td></tr><tr><td>Start Date/Time</td><td>0</td><td>Download selective logging data from the "Start Date/Time" to the last logging data in the flash memory</td></tr><tr><td>0</td><td>End Date/Time</td><td>Download selective logging data from the first logging position data to the "End Date/Time" logging data</td></tr><tr><td>Start Date/Time</td><td>End Date/Time</td><td>Download selective logging data from the "Start Date/Time" to the "End Date/Time"</td></tr></table> <p>4) This command supports "Resume" function in the GPRS TCP/IP mode. The downloading task could be resumed once the GPRS connection is re-established.</p>	Start Date/Time	End Date/Time	Corresponding data will be downloaded	0	0	Get entire logging data from the flash memory	Start Date/Time	0	Download selective logging data from the "Start Date/Time" to the last logging data in the flash memory	0	End Date/Time	Download selective logging data from the first logging position data to the "End Date/Time" logging data	Start Date/Time	End Date/Time	Download selective logging data from the "Start Date/Time" to the "End Date/Time"
Start Date/Time	End Date/Time	Corresponding data will be downloaded														
0	0	Get entire logging data from the flash memory														
Start Date/Time	0	Download selective logging data from the "Start Date/Time" to the last logging data in the flash memory														
0	End Date/Time	Download selective logging data from the first logging position data to the "End Date/Time" logging data														
Start Date/Time	End Date/Time	Download selective logging data from the "Start Date/Time" to the "End Date/Time"														

\$WP+SPDLREC		
Description	Execute this command to stop downloading process	
Format	\$WP+SPDLREC+[Tag]=[Password],	
Response	\$OK:SPDLREC+[Tag]	
Error Response	\$ERR:SPDLREC+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
Example	Ex: Issue command: \$WP+SPDLREC=0000 Response: \$OK:SPDLREC	
Note	1) Once the downloading process gets interrupted, the \$ERR:7 message will be sent out to the base station.	


\$WP+REBOOT		
Description	Execute this command to reboot the device. All settings will be remained.	
Format	\$WP+REBOOT+[Tag]=[Password]	
Response	\$OK:REBOOT+[Tag]	
Error Response	\$ERR:REBOOT+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
Example	Ex: Issue command: \$WP+REBOOT=0000 Response: \$OK:REBOOT	
Note	1) Please re-establish the direct connection after issuing the \$WP+REBOOT command. The physically unplug and re-plug in the USB cable might be necessary.	

\$WP+RESET		
Description	Execute this command to reset the device to factory default settings or pre-set settings	
Format	Write	\$WP+RESET+[Tag]=[Password]
Response	\$OK:RESET+[Tag]	
Error Response	\$ERR:RESET+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
Example	Ex: Issue command: \$WP+RESET=0000 Response: \$OK:RESET	
Notes	1) The "Device ID" parameter will remain the same after executing this command. Other settings will be set back to factory default. 2) If the password is forgotten then the device can accept the last 6 digits of IMEI No. as password in order to reset the device successfully.	

\$WP+PSM		
Description	Execute this command to enable the “Power Saving Function” of the device.	
Format	\$WP+PSM+[Tag]=[Password],[Mode],[Power Down Delay Interval],[Sleeping Mode Mask],[Enable /Disable Sleeping Report]	
Response	\$OK:PSM+[Tag]= [Mode],[Power Down Delay],[Sleeping Mask],[Enable /Disable Sleeping Report]	
Error Response	\$ERR:PSM+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is “0000”
	Mode	0: Disable 1: GPS off; GSM on; GPRS on; LCD on, G-sensor on 2. GPS off; GSM on; GPRS off; LCD off, G-sensor on 3. GPS off, GSM on, GPRS off, LCD off, G-sensor off
	Power Down Delay	60~65535 seconds
	Sleeping Mask	0: Device will not go to sleeping mode while the \$WP+TRACK and \$WP+REC command are executing. 1: Device goes to sleeping mode regardless the execution of \$WP+TRACK and \$WP+REC command
	Enable /Disable Sleeping Report	0: Disable - Device will not connect to the GPRS Server while it performs the task of “Update GPS ephemeris” every 60 minutes. - No “Entering-sleeping event (ID 37)” is sent. 1: - Device will connect to GPRS server while it performs the task of “Update GPS ephemeris” every 60 minutes. - No “Entering-sleeping event (ID 37)” is sent. 2: - Device will <u>not</u> connect to GPRS server while it performs the task of “Update GPS ephemeris” every 60 minutes. - An “Entering-sleeping event (ID 37)” is sent.

	<p>3. - Device will connect to GPRS server while it performs the task of "Update GPS ephemeris" every 60 minutes.</p> <p>- An "Entering-sleeping event (ID 37)" is sent.</p>
Example	<p>Ex:</p> <p>Issue command:</p> <p>\$WP+PSM=0000,1,120,1,0</p> <p>Response:</p> <p>\$OK:PSM=1,120,1,0</p>
Notes	<p>1) The device will periodically wake up to update the GPS ephemeris every 60 minutes after entering sleeping mode.</p> <p>2) Conditions for entering sleep mode (<u>AND</u> algorithm):</p> <ol style="list-style-type: none"> 1. No movement within "Power Down Delay" duration. 2. Not receive any command within "Power Down Delay" seconds 3. No button is pressed within "Power Down Delay" seconds 4. No undelivered messages exist <p>3) Condition for device waking up (<u>OR</u> algorithm):</p> <ol style="list-style-type: none"> 1. Movement detected (Mode 1 and Mode 2) 2. Any button is pressed 3. Receive a command form GSM message (All Modes) or GPRS server (Mode 1) <p>4) If device wakes up and completes the required task, it goes to sleeping mode according to the "Power Down Delay" interval if all conditions of "entering sleeping mode" remaining true.</p> <p>5) If "Sleeping Mask 0" is selected, the device will not enter sleeping mode until the \$WP+TRACK or \$WP+REC command is disabled or finish execution.</p>

6) Please refer to the power saving mode diagram as following:

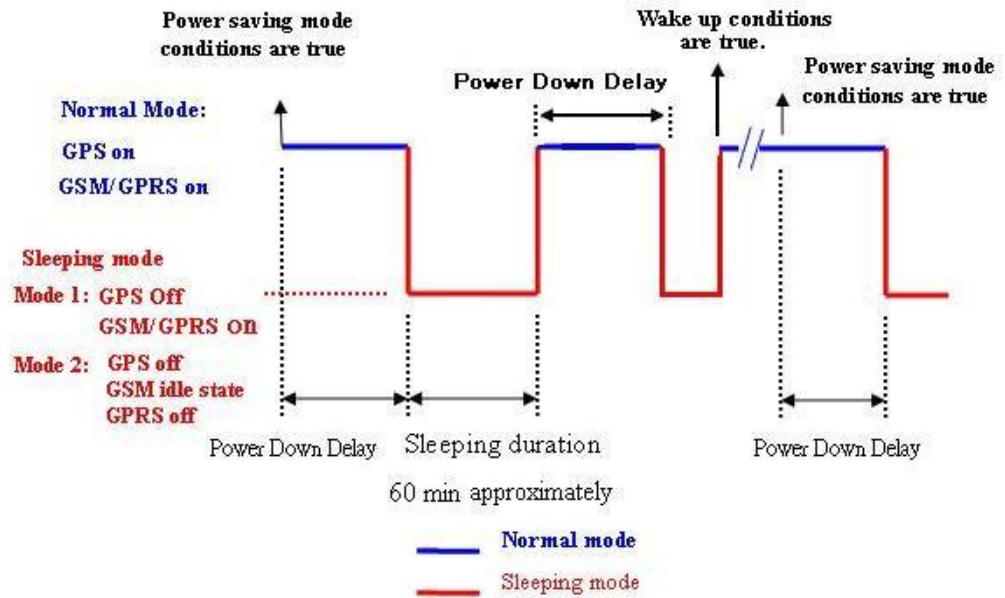

\$WP+SETEVT		
Description	Execute this command to set GEO-Fencing event	
Format	Write	\$WP+SETEVT+[Tag]=[Password],[Event ID],[Enable/Disable],[Longitude],[Latitude],[Radius],[Zone Control],[Actions]
	Read	\$WP+SETEVT+[Tag]=[Password],[Event ID],?
Response	\$OK:SETEVT+[Tag]= [Event ID],[Enable/Disable],[Longitude],[Latitude],[Radius],[Zone Control],[Actions]	
Error Response:	\$ERR:SETEVT+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
	Event ID	The identifier of individual event. The event ID only can be assigned by the integers. The device supports up to 50 event settings and the effective Id number is from 50~99.
	Enable/Disable	0: Disable 1: Enable
	Longitude	The longitude of the circle zone center point.
	Latitude	The latitude of the circle zone center point.
	Radius	The radius of the circle zone. The effective range is from 50 to 65535 meters.
	Zone Control	1: Inside Zone The event will be sent when the GPS coordinate is inside the defined zones. 2. Outside Zone The event will be sent when the GPS coordinate is outside the defined zones.

	Actions	<p>This parameter is to define the actions when the conditions become true. The following actions are available:</p> <ol style="list-style-type: none"> 1. Logging: When the conditions of the defined event are true then the device will store the current GPS position information for the specify event into the memory. 2. Polling: When the conditions of the defined event are true then the device will send the current GPS position information for the specify event back to the base station. 3. Logging and Polling: When the conditions of the defined event are true then the device will store the current GPS position information for specific event into memory and send the event back to the base station as well.
Examples	<p>Ex 1: Issue command: \$WP+SETEVT=0000,50,1,120.167453,28.649871,200,1,3 Response: \$OK:SETEVT=50,1,120.167453,28.649871,200,1,3</p> <p>Ex 2: Issue command: \$WP+SETEVT=0000,51,? Response: \$OK:SETEVT=51,1,120.145634,25.764956,500,2,1</p>	

\$WP+CLEVT		
Description	Execute this command to clear single/all event settings	
Format	Write	\$WP+CLEVT+[Tag]=[Password],[Event ID]
Response	\$OK:CLEVT+[Tag]= [Event ID]	
Error Response	\$ERR:CLEVT+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
	Event ID	Specify the event identifier which will be cleared. The effective identifier range is from 50~99. 255: clear all \$WP+SETEVT settings.
Examples	<p>Ex1: Issue command: \$WP+CLEVT=0000,50 Response: \$OK:CLEVT=50</p> <p>Ex2: Issue command: \$WP+CLEVT=0000,255 Response: \$OK:CLEVT=255</p>	

\$WP+IMEI		
Description	Execute this command to query the IMEI No. for the internal GSM module	
Format	\$WP+IMEI+[Tag]=[Password]	
Response	\$OK:IMEI+[Tag]=IMEI No.	
Error Response	\$ERR:IMEI+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
Example	Ex: Issue command: \$WP+IMEI=0000 Response: \$OK:IMEI=357258004284081	

\$WP+SIMID		
Description	Execute this command to query the identification number of the SIM card	
Format	\$WP+SIMID+[Tag]=[Password]	
Response	\$OK:SIMID+[Tag]=SIM card Identification No.	
Error Response	\$ERR:SIMID+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
Example	Ex: Issue command: \$WP+SIMID=0000 Response: \$OK:SIMID=87109834789209748618	

\$WP+VWT		
Description	Execute this command to enable voice wiretapping function. Once the device receives this command then it will call out to the assigned phone number automatically. The device will enable microphone and disable speaker function once the phone line is connected. Thus, the user's conversation will be monitored by the assigned phone number. This function will be disabled automatically once the phone line has been hung up.	
Format	\$WP+VWT+[Tag]=[Password],[Phone number]	
Response	\$OK:VWT+[Tag]=[Phone number]	
Error Response	\$ERR:VWT+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
	Phone number	The specific phone number which the device will call out. This phone number supports the international phone calls.
Example	Ex: Issue command: \$WP+VWT=0000,+886932400821 Response: \$OK:VWT=+886932400821	
Note	1) If the device fails to establish the phone line (i.e. gets the "busy tone") for 5 times, the device will stop executing this function automatically.	

\$WP+TEST			
Description	Execute this command to test major modules status and the voltage level of the device		
Command Format	Write	\$WP+TEST+[Tag]=[Password]	
Response	\$OK:TEST+[Tag]=[Status], [Voltage Level of internal battery]		
	Parameters	Status	0: No Error occurs. 1: GSM Error. 2: GPS Error
		Voltage Level	The voltage level of the internal backup battery.
Error Response	\$ERR:TEST+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>		
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)	
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is “0000”	
Example	Ex: Issue command: \$WP+TEST+12345=0000 Response: \$OK:TEST+12345=3,3.9		
Notes	1) If the device connect to a computer by USB cable then the voltage level always shows 4.2V (approximate value) 2) In order to get actual voltage level of the interval backup battery, this command must be issued via remotely communication such as GSM/GPRS without the device connecting to a computer.		

\$WP+VER		
Description	Execute this command to query the current firmware and hardware version of the device.	
Format	\$WP+VER+[Tag]=[Password]	
Response	\$OK:VER+[Tag]=firmware version, hardware version	
Error Response	\$ERR:VER+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
Example	Ex: Issue command: \$WP+VER=0000 Response: \$OK:VER=1.001,3	

\$WP+NMEA		
Description	Execute this command to enable the outputting the NMEA string through USB port. The NMEA format is "NMEA-0183" –\$GPGGA, \$GPGSA, \$GPGSV, \$GPRMC, and \$GPVTG.	
Format	\$WP+NMEA+[Tag]=[Password],[Enable/Disable]	
Response	\$OK:NMEA+[Tag]	
Error Response	\$ERR:NMEA+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
	[Enable/Disable]	0: Disable 1: Enable
Example	<p>Ex:</p> <p>Issue command:</p> <p>\$WP+NMEA=0000,1</p> <p>Response:</p> <p>\$OK:NMEA</p> <p>\$GPGGA,094307.000,2503.6251,N,12138.9153,E,1,10,1.0,169.9,M,15.3,M,,0000*56</p> <p>\$GPGSA,A,3,18,05,22,12,30,09,21,14,31,24,,,1.9,1.0,1.6*3B</p> <p>\$GPRMC,094307.000,A,2503.6251,N,12138.9153,E,0.00,,110407,,,A*79</p> <p>\$GPGGA,094308.000,2503.6251,N,12138.9153,E,1,10,1.0,169.9,M,15.3,M,,0000*59</p> <p>\$GPGSA,A,3,18,05,22,12,30,09,21,14,31,24,,,1.9,1.0,1.6*3B</p> <p>\$GPRMC,094308.000,A,2503.6251,N,12138.9153,E,0.00,,110407,,,A*76</p> <p>\$GPGGA,094309.000,2503.6251,N,12138.9153,E,1,10,1.0,169.9,M,15.3,M,,0000*58</p> <p>\$GPGSA,A,3,18,05,22,12,30,09,21,14,31,24,,,1.9,1.0,1.6*3B</p> <p>\$GPRMC,094309.000,A,2503.6251,N,12138.9153,E,0.00,,110407,,,A*77</p> <p>\$WP+NMEA=0000,0</p> <p>\$OK:NMEA=0</p>	

Note

- 1) While NMEA string is outputted via USB port of the device, the error message will not come out via USB port. Please disable output the NMEA string before doing any diagnostic for the device.

\$WP+SPD		
Description	Execute this command to enable the speeding event. If the vehicle speed is in the defined speeding range (between minimum and maximum speed) for the certain time period (Duration) then it will trigger the speeding event.	
Format	Write	\$WP+SPD=[Password],[Mode],[Minimum Speed],[Maximum Speed],[Duration]
	Read	\$WP+SPD+[Tag]=[Password],?
Response	\$OK:SPD+[Tag]= [Mode],[Minimum Speed],[Maximum Speed],[Duration]	
Error Response	\$ERR:SPD+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
	Mode	<u>0</u> : Disable 1: Logging: 2: Polling: 3: Logging and Polling
	Minimum Speed	Set Minimum Speed. Valid range: <u>0</u> ~255 km/hr.
	Maximum Speed	Set Maximum Speed. Valid range: <u>0</u> ~255 km/hr
	Duration	The parameter defined the time duration to activate the speeding event. Valid range: <u>15</u> ~65535 seconds
Example	Ex: Issue command: \$WP+SPD=0000,3,100,200,15 Response: \$OK:SPD=3,100,200,15	

\$WP+EMOV		
Description	Execute this command to set up the contact number for detecting unauthorized movement (Activation/deactivation by depressing the "Function Key 1" for 3 seconds). This command takes effect after 3 minutes of function activation. If this function has not been disabled after 1 minute of event triggering, selective actions will be executed. The receiving message format for the control center and contact phone numbers please refer to the "Note" section.	
Format	Write	\$WP+EMOV+[Tag]=[Password],[SMS1],[SMS2],[SMS3],[SMS4],[SMS5],[EMOV Mask]
	Read	\$WP+EMOV+[Tag]=[Password],?
Response	\$OK:EMOV+[Tag]=[SMS1],[SMS2],[SMS3],[SMS4],[SMS5],[EMOV Mask]	
Error Response	\$ERR:EMOV+[Tag]=[Error Code] <i>Please refer to appendix for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
	SMS 1	Set the contact phone number 1, use "" to clear the parameter
	SMS 2	Set the contact phone number 2, use "" to clear the parameter
	SMS 3	Set the contact phone number 3, use "" to clear the parameter
	SMS 4	Set the contact phone number 4, use "" to clear the parameter
	SMS 5	Set the contact phone number 5, use "" to clear the parameter
	EMOV Mask	This setting is based on the bitwise operation. This parameter can specify which pre-defined phone number will receive the moving alert message. The bitwise definitions are following: 0: Disable 1: SMS 1

	<p>2: SMS 2</p> <p>4: SMS 3</p> <p>8: SMS 4</p> <p>16: SMS 5</p> <p>32: Send a message to Control Center (base on the primary communication type).</p> <p>64: Store this event into the device memory.</p> <p>Ex:</p> <p>Set to '36' means control center will receive the string with event ID '5' and the phone number of SMS 3 will receive a SMS alert when the unauthorized movement alert is triggered.</p>
Examples	<p>Ex1:</p> <p>Issue command:</p> <p>\$WP+EMOV=0000,+886123456789,0933733456,+886987654321,+886932400821,+886910777777,38</p> <p>Response:</p> <p>\$OK:EMOV=+886123456789,0933733456,+886987654321,+886932400821,+886910777777,38</p> <p>Ex2:</p> <p>Issue command:</p> <p>\$WP+EMOV=0000, +886123456789,0933733456,,,,,1</p> <p>Response:</p> <p>\$OK:EMOV=+886123456789,0933733456,,,,,1</p>
Notes	<p>1) If control center option is selected in the "EMOV Mask" parameter then the control center server will receive the following string with event ID '5'.</p> <p>1010000001,20070313170020,121.123456,12.654321,45,233,0,9,5</p> <p>2) The format for the SMS message to contact phone number is following:</p> <p>Moving Alert</p> <p>Unit ID: 1XXXXXXXXX</p> <p>Date/Time: (YYYYMMDDHHMMSS)</p> <p>Lon:XXX.XXXXXX</p> <p>Lat: XXX.XXXXXX</p> <p>Speed: XXX Km/h</p> <p>Satellites: XX</p>

- | | |
|--|---|
| | <p>3) The “Moving Alert” event only sends one time once it is triggered, this function will be disabled automatically. If we need to enable the “Parking” function, then we need to re-enable the function by pressing and holding the “Function Key 1 (Button P)” for 3 seconds.</p> |
|--|---|

\$WP+EMSMS		
Description	Execute this command to set the emergency contact phone number up to 5 different numbers. Once the emergency button is pressed then the emergency GSM message will be sent to the pre-defined contact phone number. The receiving message format for the contact phone numbers please refer to the “Note” section.	
Format	Write	\$WP+EMSMS+[Tag]=[Password],[SMS1],[SMS2],[SMS3],[SMS4],[SMS5],[EMSMS Mask]
	Read	\$WP+EMSMS+[Tag]=[Password],?
Response	\$OK:EMSMS+[Tag]=[SMS1],[SMS2],[SMS3],[SMS4],[SMS5],[EMSMS Mask]	
Error Response	\$ERR:EMSMS+[Tag]=[Error Code] <i>Please refer to appendix for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is “0000”
	SMS 1	Set the emergency contact phone number 1 use “” to clear the parameter
	SMS 2	Set the emergency contact phone number 2 use “” to clear the parameter
	SMS 3	Set the emergency contact phone number 3 use “” to clear the parameter
	SMS 4	Set the emergency contact phone number 4 use “” to clear the parameter
	SMS 5	Set the emergency contact phone number 5 use “” to clear the parameter
	EMSMS Mask	This setting is based on the bitwise operation. This parameter can specify which pre-defined contact phone number will receive the emergency SMS report. The bitwise definitions are following:

	<p>0: Disable</p> <p>1: SMS 1</p> <p>2: SMS 2</p> <p>4: SMS 3</p> <p>8: SMS 4</p> <p>16: SMS 5</p> <p>32: Send a message to Control Center (base on the primary communication type)</p> <p>64: Store this event into the device memory.</p> <p>Ex:</p> <p>Set to '36' means control center will receive the string with event ID '4' and the phone number of SMS 3 will receive the SMS emergency messages when the emergency button (button 5) is pressed.</p>
Examples	<p>Ex1:</p> <p>Issue command:</p> <p>\$WP+EMSMS=0000,+886123456789,0933733456,+886987654321,+886932400821 , +886910777777, 24</p> <p>Response:</p> <p>\$OK:EMSMS=+886123456789,0933733456,+886987654321,+886932400821, ,+886910777777,24</p> <p>Ex2:</p> <p>Issue command:</p> <p>\$WP+EMSMS=0000, +886123456789,0933733456,,,,,2</p> <p>Response:</p> <p>\$OK:EMSMS=+886123456789,0933733456,,,,,2</p>
Notes	<p>1) If control center option is selected in the "EMSMS Mask" parameter then the control center server will receive the following string with event ID '4'.</p> <p>1010000001,20070313170020,121.123456,12.654321,45,233,0,9,4</p> <p>2) The format for the SMS message to contact phone number is following:</p> <p>Emergency Report</p> <p>Unit ID: 1XXXXXXXXX</p> <p>Date/Time: (YYYYMMDDHHMMSS)</p> <p>Lon:XXX.XXXXXX</p> <p>Lat: XXX.XXXXXX</p> <p>Speed: XXX Km/h</p> <p>Satellites: XX</p>

\$WP+QDSET		
Description	Execute this command to set the “Quick Dial” phone numbers for quick dial function.	
Format	Write	\$WP+QDSET+[Tag]=[Password],[QD1],[QD2],[QD3],[QDMask]
	Read	\$WP+QDSET+[Tag]=[Password],?
Response	\$OK:QDSET+[Tag]=[QD1],[QD2],[QD3],[QDMask]	
Error Response	\$ERR:QDSET+[Tag]=[Error Code] <i>Please refer to appendix for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is “0000”
	QD1	Set the quick dial number for the quick dial function button 2.
	QD2	Set the quick dial number for quick dial function button 3
	QD3	Set the quick dial number for quick dial function button 4
	QDMask	This setting is based on the bitwise operation. This parameter can specify which quick dial button is available. The bit definitions are following: 0: Disable 1: QD1 2: QD2 4: QD3 Ex: Set to ‘6’ means QD2 (button 3) and QD3 (button 4) are available. Pressing the button 1 (QD1) will not take any action.
Example	Ex: Issue command: \$WP+QDSET=0000,+886932400821,+886937400841,0933765432,3 Response: \$OK:QDSET=+886932400821,+886937400841,0933765432,3	

\$WP+SETTZ		
Description	Execute this command to setup the local time. The time of returning message will be based on the time zone setting. The default time zone is the GMT time.	
Format	\$WP+SETTZ+[Tag]=[Password],[Sign],[Hour],[Minute]	
Response	\$OK:SETTZ+[Tag]=[Sign],[Hour],[Minute]	
Error Response	\$ERR:SETTZ+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
	Sign	+: ahead GMT time -: behind GMT time
	Hour	Offset hours. Effective range is from <u>00</u> ~13
	Minute	Offset minute (based on 15 minutes basis). Please select one of following: <u>00</u> ,15,30,45
Example	Ex: Issue command: \$WP+SETTZ=0000,+,08,00 Response: \$OK:SETTZ=+,08,00	

\$WP+SETMILE		
Description	Execute this command to initial/read mileage accumulator function.	
Format	Write	\$WP+SETMILE+[Tag]=[Password],[Mode],[Mileage]
	Read	\$WP+SETMILE+[Tag]=[Password],?
Response	\$OK:SETMILE+[Tag]= [Mode],[Mileage]	
Error Response	\$ERR:SETMILE+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
	Mode	<u>0</u> : Disable 1: Enable
	Mileage	Initial the mileage value (Km). Effective range is from <u>0</u> ~4294967.2
Example	Ex: Issue command: \$WP+SETMILE=0000,1,2345.0 Response: \$OK:SETMILE=1,2345.0	
Notes	1) If the mileage function is enabled then this parameter will be added in the end of each returning message with "Event ID" parameter. For example: 1010000001,20070313170020,121.123456,12.654321,45,233,0,9,0, 56734.4 2) If the mileage reaches the maximum value then it returns to '0.0' km. 3) If the SETMILE function is disabled, the parameter of mileage will be disappeared.	

\$WP+LOWBATT		
Description	Execute this command to enable/disable the internal battery low alert	
Format	Write	\$WP+LOWBATT+[Tag]=[Password],[Mask]
	Read	\$WP+LOWBATT+[Tag]=[Password],?
Response	\$OK:LOWBATT+[Tag]= [Mask]	
Error Response	\$ERR:LOWBATT+[Tag]=[Error Code] <i>Please refer to appendix 9.2 for detailed error code descriptions.</i>	
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"
	Mask	0: Display 1: Display+ Buzzer 2: Display+ Logging 3: Display+ Logging + Buzzer 4: Display+ Polling 5: Display+ Polling + Buzzer 6: Display+ Logging + Polling 7: Display+ Buzzer+ Logging+ Polling
Example	Ex: Issue command: \$WP+LOWBATT=0000,3 Response: \$OK:LOWBATT=3	
Notes	1) When the "Mask" sets to '0', the LCD display "Low Battery" message when the voltage level of interval battery is lower than 3.7V 2) When the "Mask" has enabled the "Buzzer", the device will sound a beep every 1 minute if the voltage level of interval battery is lower than 3.75V. The beep will be keep activated until the voltage level is higher than 3.75V. The device will sound 2 beeps before shut down if the device shut down is caused by the battery low.	

\$WP+GSMINFO				
Description	Execute this command to query the Name of the operator, GSM signal strength, GPRS connection status, and Roaming status.			
Format	\$WP+GSMINFO+[Tag]=[Password]			
Response	\$MSG:GSMINFO+[Tag]=[GSM Operator], [GSM signal strength], [GPRS status], [Roaming Status]			
	Parameters	GSM Operator	Name of the Telecommunication corp.	
		GSM signal strength	This parameter indicates the signal strength for GSM network. The closer the value approaches to 31, the stronger the signal is.	
			CSQ	dBm
			0	-113dBm or less
			1	-111dBm
			2..30	-109...-53dBm
			31	-51dBm or greater
		99	not known or not detectable	
	GPRS Status	0: GPRS is not connected 1: GPRS is connected		
Roaming Status	0: Currently is in home GSM/GPRS network. 1: Currently is in roaming GSM/GPRS network			
Error Response	\$ERR:GSMINFO+[Tag]=[Error Code] <i>Please refer to appendix 8.2 for detailed error code descriptions.</i>			
Parameters	Tag	The tag could consist of number or character string which can be defined by user. The returning message will include the same tag and it is helpful to recognize the acknowledgements with corresponding issued commands. This tag could be left as empty if it is not used. (Max. 5 characters)		
	Password	Password of the device. Only correct password can access the device and change the configuration. The minimum length of character is 4 digits; maximum length of character is 10 digits. It supports numerical characters only. Default password is "0000"		
Example	Ex: Issue command: \$WP+GSMINFO=0000 Response: \$MSG:GSMINFO="Chunghwa", 18,1,0			

Notes

1. The command is available after the device registered to the GSM/GPRS network.

9. Appendices:

9.1 Event ID Description:

Event ID	Description	Corresponding command	Remark
0	Position data	\$WP+GETLOCATION	
1	Logging data	\$WP+REC	
2	Track position data	\$WP+TRACK	
3	Over speeding event	\$WP+SPD	
4	Emergency contact number	\$WP+EMSMS	
5	Unauthorized movement event	\$WP+EMOV	
37	Entering-sleeping mode event	\$WP+PSM	
40	Power low report	\$WP+LOWBATT	
50~99	User defined event position	\$WP+SETEVT	

9.2 Returning Command Error List:

The error list will be indicating to “\$ERR: Code number”

Error Code	Description
0	Unknown error
1	Incorrect password
2	Incorrect command parameters
3	GSM SMS base phone number or GPRS Server IP address not set
4	Unable to detect GSM signal
5	GSM Failed
6	Unable to establish the GPRS connection
7	Download process interrupted
8	Voice busy tone

Notes:

1. All error codes can be appeared via USB communication.
2. Error code 1, 2, or 3 could be sent back over the air communication or USB communication.
3. All error code will not be sent back to control center over GSM SMS communication even though the GSM SMS message is the primary communication type..

9.3 CMS Error List:

Error Code	Description
1	Unassigned (unallocated) number
8	Operator determined barring
10	Call barred
21	Short message transfer rejected
27	Destination out of service
28	Unidentified subscriber
29	Facility rejected
30	Unknown subscriber
38	Network out of order
41	Temporary failure
42	Congestion
47	Resources unavailable, unspecified
50	Requested facility not subscribed
69	Requested facility not implemented
81	Invalid short message transfer reference value
95	Invalid message, unspecified
96	Invalid mandatory information
97	Message type non-existent or not implemented
98	Message not compatible with short message protocol state
99	Information element non-existent or not implemented
111	Protocol error, unspecified
127	Interworking, unspecified
128	Telematic interworking not supported
129	Short message Type 0 not supported
130	Cannot replace short message
143	Unspecified TP-PID error
144	Data coding scheme (alphabet) not supported
145	Message class not supported
159	Unspecified TP-DCS error
160	Command cannot be actioned
161	Command unsupported
175	Unspecified TP-Command error

Error code	Description
176	TP DU not supported
192	SC busy
193	No SC subscription
194	SC system failure
195	Invalid SME address
196	Destination SME barred
197	SM Rejected-Duplicate SM
198	TP-VPF not supported
199	TP-VP not supported
208	D0 SIM SMS storage full
209	No SMS storage capability in SIM
210	Error in MS
211	Memory Capacity Exceeded
212	SIM Application Toolkit Busy
213	SIM data download error
255	Unspecified error cause
300	ME failure
301	SMS service of ME reserved
302	Operation not allowed
303	Operation not supported
304	Invalid PDU mode parameter
305	Invalid text mode parameter
310	SIM not inserted
311	SIM PIN required
312	PH-SIM PIN necessary
313	SIM failure
314	SIM busy
315	SIM wrong
316	SIM PUK required
317	SIM PIN2 required
318	SIM PUK2 required
320	Memory failure
321	Invalid memory index
322	Memory full

Error code	Description
330	SMSC address unknown
331	No network service
332	Network timeout
500	Unknown error
512	SIM not ready
513	Unread records on SIM
514	CB error unknown
515	PS busy
516	Invalid length
517	SM BL not ready
528	Invalid (non-hex) char in PDU

9.4 CME Error List:

Error Code	Description
3	Operation not allowed
4	Operation not supported
5	PH-SIM PIN required
6	PH-FSIM PIN required
7	PH-FSIM PUK required
10	SIM not inserted
11	SIM PIN required
12	SIM PUK required
13	SIM failure
14	SIM busy
15	SIM wrong
16	Incorrect password
17	SIM PIN2 required
18	SIM PUK2 required
20	Memory full
21	Invalid index
25	Invalid characters in text string
26	Dial string too long
27	Invalid characters in dial string
30	No network service
31	Network timeout
32	Network not allowed - emergency calls only
40	Network personalization PIN required
41	Network personalization PUK required
42	Network subset personalization PIN required
43	Network subset personalization PUK required
44	Service provider personalization PIN required
45	Service provider personalization PUK required
46	Corporate personalization PIN required
47	Corporate personalization PUK required
100	Unknown

Error Code	Description
103	Illegal MS
106	Illegal ME
107	GPRS services not allowed
111	PLMN not allowed
112	Location area not allowed
113	Roaming not allowed in this location area
132	Service option not supported
133	Requested service option not subscribed
134	Service option temporarily out of order
148	Unspecified GPRS error
149	PDP authentication failure
150	Invalid mobile class

10. About NAVIXY:

Navixy provides advance solution for satellite tracking related solutions including the various components, Automatic Vehicle Location (AVL) device (data logger & real time tracking devices) and tracking platform. Please contact us at the phone and fax number list below or visit our website for further product information.



<http://www.navixy.ru/>