

# Interface S88 Gleisbox Raspberry Pi Manual

Guido de Hek

August 30, 2023

# Contents

<b>1</b>	<b>Introduction</b>	<b>3</b>
<b>2</b>	<b>Setup of CAN-interface</b>	<b>4</b>
2.1	Connection Scheme . . . . .	4
2.2	Oscillator Settings . . . . .	4
2.3	Rocrail Server Settings . . . . .	4
<b>3</b>	<b>Setup of S88n-interface</b>	<b>5</b>
3.1	Connection Scheme . . . . .	6
3.2	S88UDP installation . . . . .	6
<b>4</b>	<b>PCB Description</b>	<b>7</b>

# **1 Introduction**

System for controlling a marklin track using a rpi

## 2 Setup of CAN-interface

t.b.d.

### 2.1 Connection Scheme

The CAN-bus shall be connected to the Gleisbox as depicted in figure 1. The pin 1 (power supply) does not have to be connected.

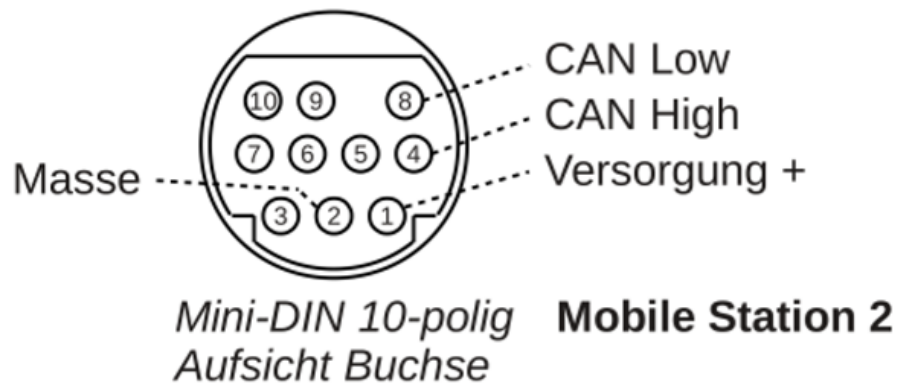


Figure 1: Pinout canbus.

### 2.2 Oscillator Settings

```
sudo ip link set can0 up type can bitrate 250000
```

### 2.3 Rocrail Server Settings

```

GNU nano 5.4 /boot/config.txt
arm_freq=800

# Uncomment some or all of these to enable the optional hardware interfaces
dtparam=i2c_arm=on
dtparam=i2s=on
dtparam=spi=on
dtoverlay=mcp2515-can0,oscillator=16000000,interrupt=25
dtoverlay=spi-bcm2835-overlay

# Uncomment this to enable infrared communication.
dtoverlay=gpio-ir,gpio_pin=17
dtoverlay=gpio-ir-tx,gpio_pin=18

# Additional overlays and parameters are documented /boot/overlays/README

# Enable audio (loads snd_bcm2835)
dtparam=audio=on

# Automatically load overlays for detected cameras
camera_auto_detect=1

```

Figure 2: Pi Oscillator settings.

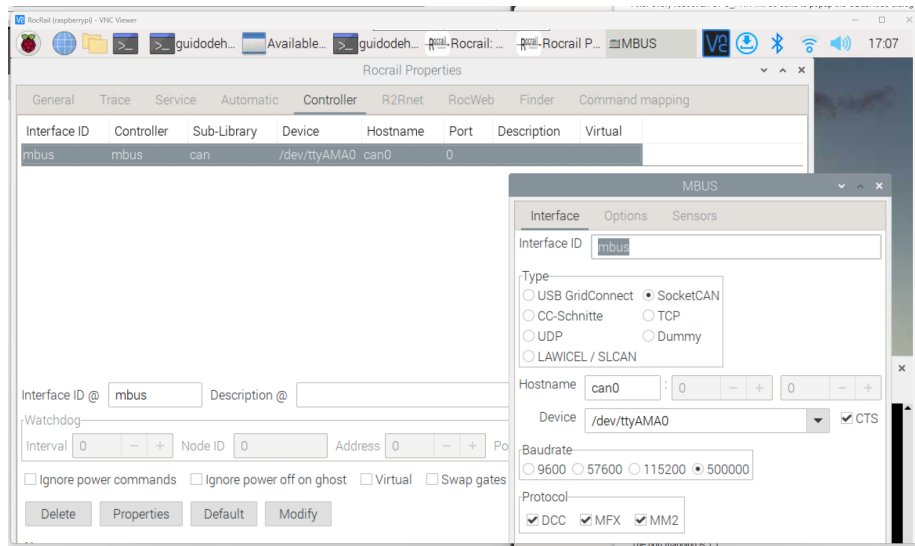


Figure 3: rocrailServerSettings.

### 3 Setup of S88n-interface

t.b.d.

Table 1: S88N pinout and description.

RJ45 pin	Colour in UTP cable	S88N Description
1	Orange-white	+5V (+12V not in this board)
2	Orange	Data
3	Green-white	GND
4	Blue	Clock
5	Blue-white	GND
6	Green	Load
7	Brown-white	Reset
8	Brown	Rail signal (not used in this design)

### 3.1 Connection Scheme

### 3.2 S88UDP installation

Using updated version from GBert (original version from Sigg).

Install (to prevent pcap.h compilation error):

```
sudo apt-get install zlib1g-dev libpcap-dev
```

Download and install S88UDP-rpi:

```
cd git clone https://github.com/GBert/railroad cd railroad/can2udp/src make
```

To start the interface:

```
sudo ./s88udp-rpi -v -f -c "17,22,23,24" -m 1
```

Arguments behind option -c are the gpio ports. The amount of S88 modules is set using option -m.

<http://www.airspayce.com/mikem/bcm2835/bcm2835-1.63.tar.gz> tar zxvf bcm2835-1.63.tar.gz cd bcm2835-1.63

## 4 PCB Description

todo:

- standard 9v input for S88

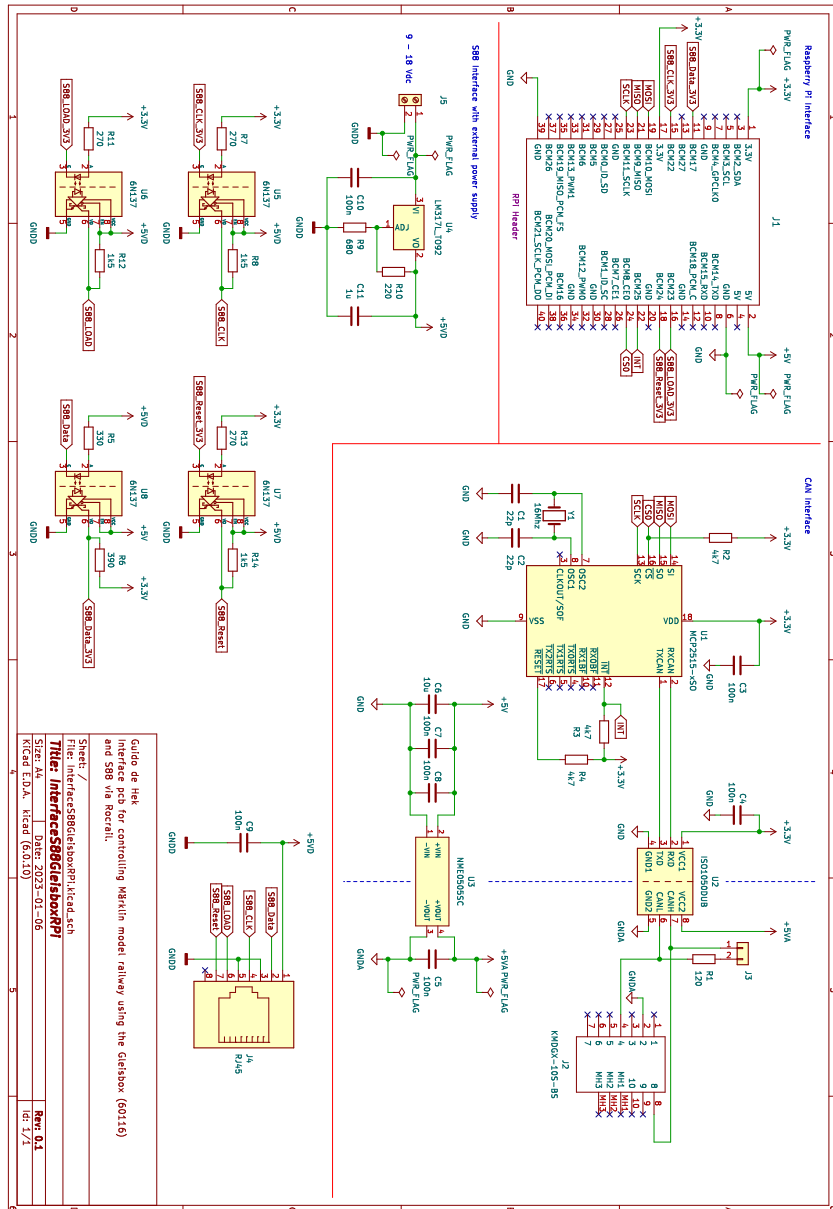


Figure 4: Schematic of the system.