


Portenta H7 LoRa Air Station

Quick Start

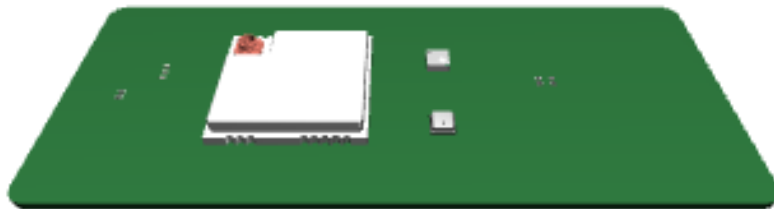

1. Download and install the Arduino IDE.

Please visit the Arduino download page to get the open-source Arduino Software (IDE):

<https://www.arduino.cc/en/software>

2. Add Portenta H7 support in the Boards Manager.

Open the Arduino IDE and the Boards Manager from *Tools > Board > Boards Manager* and search the name of your board (Portenta). Once the right core shows up in the search results, click *Install*.

3. Connect the LoRa Air Station to Portenta H7 and plug into the USB port of your computer.

Navigate to *Tools > Board* and make sure the correct board has been chosen.

4. Find AppKey and AppEUI of your RAK module.

Load an example project for serial connection by clicking *File > Examples > 04. Communication > SerialPassThrough*. Change the baud rate to 115200 bsp and upload the code. Open the Serial Monitor, set to “Both NL & CR” and enter “at+get_config=lora:status”. It will get the channel configuration at the node end including AppKey and AppEUI.

5. Add your device in a LoRaWAN Network Server.

Register your device with its DeviceEUI using the default Over The Air Activation (OTAA). DevEUI is provided on a sticker on the device. To communicate with a device via The Things Network, follow the instruction: <https://www.thethingsnetwork.org/docs/devices/registration/>

6. Use a sample code to get real-time sensor data.

The example code requires “Adafruit_SGP40”, “Adafruit_BME680”, “TheThingsNetwork”, etc. To install a new library into the Arduino IDE, click *Sketch > Include Library > Manage Libraries*.

The Cayenne Low Power Payload (LPP) will be used to encode and decode data from sensors. For more information, please visit <https://www.thethingsnetwork.org/docs/devices/arduino/api/cayennelpp/>.

Open The Things Network Console and change the Payload Formatter type to CayenneLPP.

Upload the following code and check the Serial Monitor or The Things Network Console to watch the real-time data from sensors. Make sure to use the appropriate AppEUI and AppKey.

```

#include <Wire.h>
#include <CayenneLPP.h>
#include <TheThingsNetwork.h>
#include <Adafruit_SGP40.h>
#include <Adafruit_BME680.h>

#define SEALEVELPRESSURE_HPA (1013.25)

// change the frequency plan to TTN_FP_EU868, TTN_FP_US915, TTN_FP_AS920_923,
// TTN_FP_AS923_925 or TTN_FP_KR920_923 depending on the region you deploy in
TheThingsNetwork ttn(Serial1, Serial, TTN_FP_US915);
CayenneLPP lpp(51);
Adafruit_BME680 bme;
Adafruit_SGP40 sgp;

// change the AppKey (16 bytes) and AppEUI (8 bytes)
const char *appEui = "<your-app-eui>";
const char *appKey = "<your-app-key>";

void setup() {
  lpp.reset();
  Serial.begin(115200);
  Serial1.begin(115200);

  while(!Serial);
  sendCommand("at+join\r\n");

  // check sensor connection
  if (!sgp.begin(&Wire)) {
    Serial.println("SGP40 not found");
    while (1) delay(10);
  }
  Serial.println("Sensirion SGP40 Gas Sensor connected successfully");

  if (!bme.begin(0x76)) {
    Serial.println("BME680 not found");
    while (1) delay(10);
  }
  Serial.println("Bosch BME680 Environmental Sensor connected successfully");
  Serial.println("Welcome to Portenta H7 LoRa Air Station!");

  Serial.println("-- SHOW STATUS --");
  ttn.showStatus();
  Serial.println("-- JOIN --");
  ttn.join(appEui, appKey);
  Serial.println("Sending real-time data ... ");
  delay(5000);
}

String response = "";
String command = "";
uint8_t temperature;
uint8_t humidity;

```

```

void loop() {
  if (Serial.available()) {
    Serial1.write(Serial.read());
  }

  if (Serial1.available()) {
    Serial.write(Serial1.read());
  }

  // option 1: use the CayenneLPP class to encode data
  printValues();

  // option 2: send payload manually via at commands
  // available payload formatters:
https://www.thethingsindustries.com/docs/integrations/payload-formatters/
  sendCommand("at+send=lorawan:1:01670110026801\r\n");
  delay(3000);
}

void printValues() {
  // the serial monitor shows real-time sensor data
  Serial.println("SGP40 Measurement: " + String(sgp.measureRaw()));
  Serial.println("Pressure = " + String(bme.readPressure() / 100.0F) + " hPa");
  Serial.println("Approx. Altitude = " +
String(bme.readAltitude(SEALEVELPRESSURE_HPA)) + " m");

  // add data to the CayenneLPP buffer
  temperature = bme.readTemperature();
  Serial.println("Temperature = " + String(temperature) + " °C");
  lpp.addTemperature(1, temperature);
  humidity = bme.readHumidity();
  Serial.println("Humidity = " + String(humidity) + " %");
  lpp.addRelativeHumidity(1, humidity);

  // send a message to the application using raw bytes
  ttn.sendBytes(lpp.getBuffer(), lpp.getSize());
  Serial.println();
  delay(3000);
}

void sendCommand(String atComm){
  response = "";
  Serial1.print(atComm);
  while(Serial1.available()){
    char ch = Serial1.read();
    response += ch;
  }
  Serial.println(response);
}

```