

HF2211S_EW1X_PW1X_Wport-W30

Operation Guide

This document applies to the following series of products, please refer to the user manual for product hardware description.

	<p>Elfin-EW10 Elfin-EW10-0</p>
	<p>Elfin-EW11 Elfin-EW11-0</p>
	<p>HF2211S</p>
	<p>Protoss-PW11</p>
	<p>Wport-W30</p>

1. INTRODUCTION	3
1.1. ELFIN-EW1X EVK	3
1.2. ELFIN-EW10 4PIN CONNECTOR	3
1.3. ELFIN-EW11 4PIN CONNECTOR	4
1.4. ELFIN-EW10 8PIN CONNECTOR	4
1.5. ELFIN-EW11 8PIN CONNECTOR	4
1.6. ELFIN-EW10/EW11 RJ45 CABLE	4
1.7. EW10 INTERFACE CONVERSION CABLE	5
1.8. EW11 INTERFACE CONVERSION CABLE	6
1.9. HF2211S HARDWARE	6
1.10. PROTOSS-PW11 HARDWARE	7
1.11. WPORT-W30 HARDWARE	7
2. HARDWARE INTRODUCTION	8
2.1. POWER SUPPLY	8
2.2. POWER SUPPLY	8
2.3. INTERFACE CONNECTION	8
3. INITIAL SETUP	9
3.1. WEBPAGE SET	9
3.2. IOTSERVICE SET	13
4. SERIAL PORT SETTINGS	16
4.1. SERIAL PORT TOOL SECURECRT	16
4.2. SETTING SERIAL PORT PARAMETERS	16
4.3. CLI INSTRUCTION MODE	16
5. TEST EXAMPLE	19
5.1. AP WIRELESS NETWORKING	19
5.2. TCP SERVER TEST IN AP MODE	20
5.3. STA WIRELESS NETWORKING	24
5.4. TCP SERVER TEST IN STA MODE	29
5.5. STA TCP CLIENT TEST	31
5.6. STA HTTP CLIENT TEST	33
5.7. STA MQTT CLIENT TEST	36
5.8. FIRMWARE UPGRADE	38
5.9. RESTORE TO FACTORY SETTING	39
5.10. MORE APPLICATION CASE	39
APPENDIX A:REFERENCES	40
A.1. IOTSERVICE TEST TOOLS	40
A.2. SMARTLINK V8	40

1. INTRODUCTION

Elfin-EW1X, HF2211S, Protoss-PW1X products software function is the same (integrate our HF-LPT230 module, talk to our sales if need modules only), but with different hardware interface and size. Here has a brief description of these products' hardware, and take EW for example of software introduction.


All tools can be download at following link:

http://www.hi-flying.com/index.php?route=download/category&path=1_4


1.1. Elfin-EW1X EVK

Elfin-EW10/Elfin-EW10-0 is RS232 interface and Elfin-EW11/Elfin-EW11-0 is RS485 interface. The EVK include the following attachment.


- Elfin-E1WX products
- Screw driver
- RJ45 connector(4PIN or 8PIN)

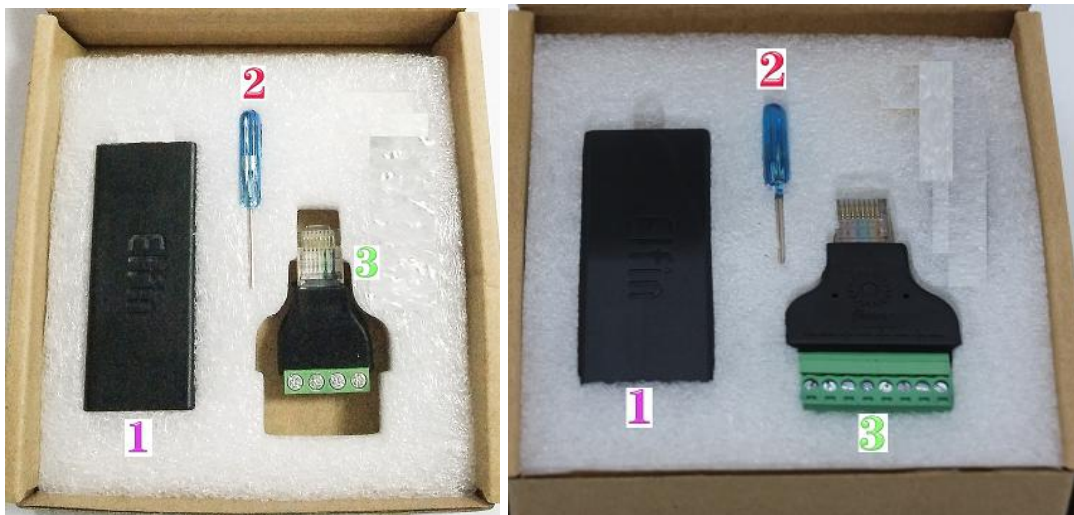

1.2. Elfin-EW10 4PIN Connector

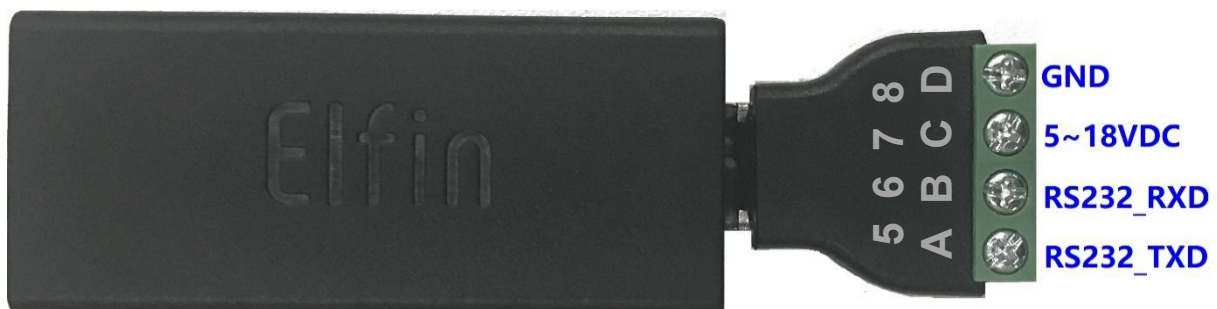

1.3. Elfin-EW11 4PIN Connector

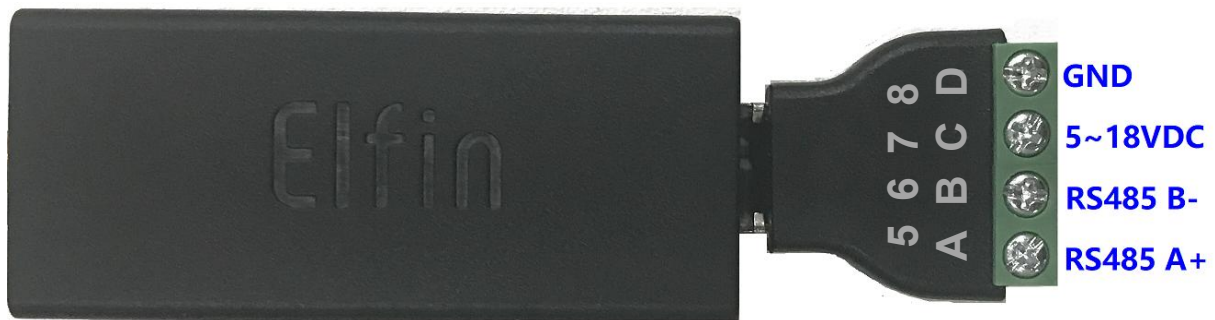

1.4. Elfin-EW10 8PIN Connector




1.5. Elfin-EW11 8PIN Connector



1.6. Elfin-EW10/EW11 RJ45 Cable

The RJ45 cable can be done as following picture.

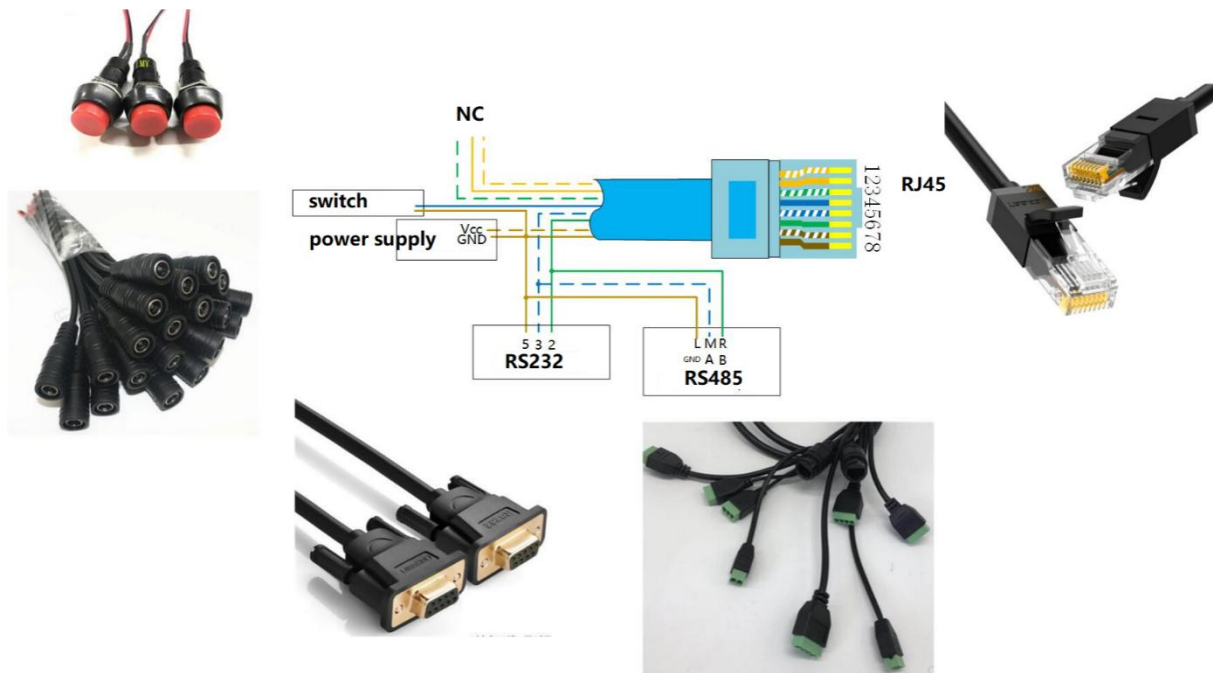

1.7. EW10 Interface Conversion Cable



1.8. EW11 Interface Conversion Cable



1.9. HF2211S Hardware



1.10. Protoss-PW11 Hardware



1.11. Wport-W30 Hardware



2. HARDWARE INTRODUCTION

2.1. Power Supply

- **EW1X**

DC 5~18VDC@5W.

Note: USB is not enough for power supply.

- **HF2211S**

DC 5~36VDC@1A.

- **PW1X**

-H AC Version, 100~240VAC


-M DC Version, 9~48VDC@1A

2.2. Power Supply


See products user manual.

2.3. Interface Connection

Elfin-EW10 is RS232, 7V voltage, need to connect with Pin5(TX), Pin6(RX) and Pin8(GND).

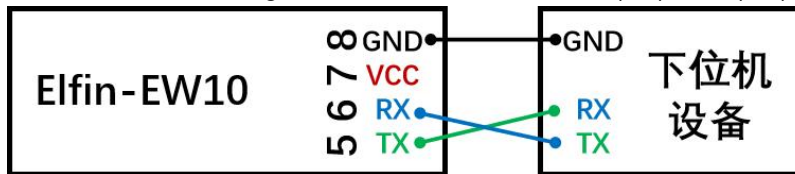

Elfin-EW11 is RS485, use Pin5(A+), Pin6(B-), GND also can be connected in some extreme condition.

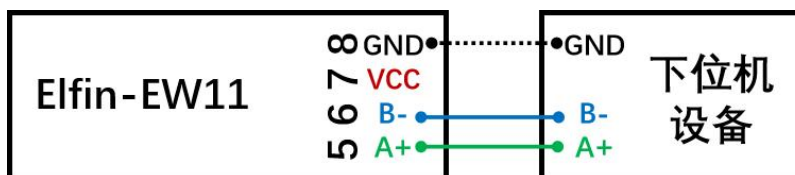

3. INITIAL SETUP

HF Products provide multiple methods to config, webpage and IOTService tools.

Webpage is easy to use, but only for local setup and can not manage multiple device, recommend to use IOTService tools.

3.1. Webpage Set

Power on product:

- EW1X green LED will be repeat flash on 0.3s, then off 0.3s, indicate it works normally.
- HF2211S Link LED will be repeat flash on 0.3s, then off 0.3s, indicate it works normally.
- PW1X Net LED will be repeat flash on 0.3s, then off 0.3s, indicate it works normally.

PC Wi-Fi to search AP, different products with different SSID, XXXX is the end 4 characters of MAC.


- EW1X SSID is EW10_XXXX or EW11_XXXX.
- HF2211S SSID is HF2211S_XXXX
- PW1X SSID is PW11_XXXX

Set PC IP with Auto DHCP.




PC Wi-Fi connect to products and got IP as following picture




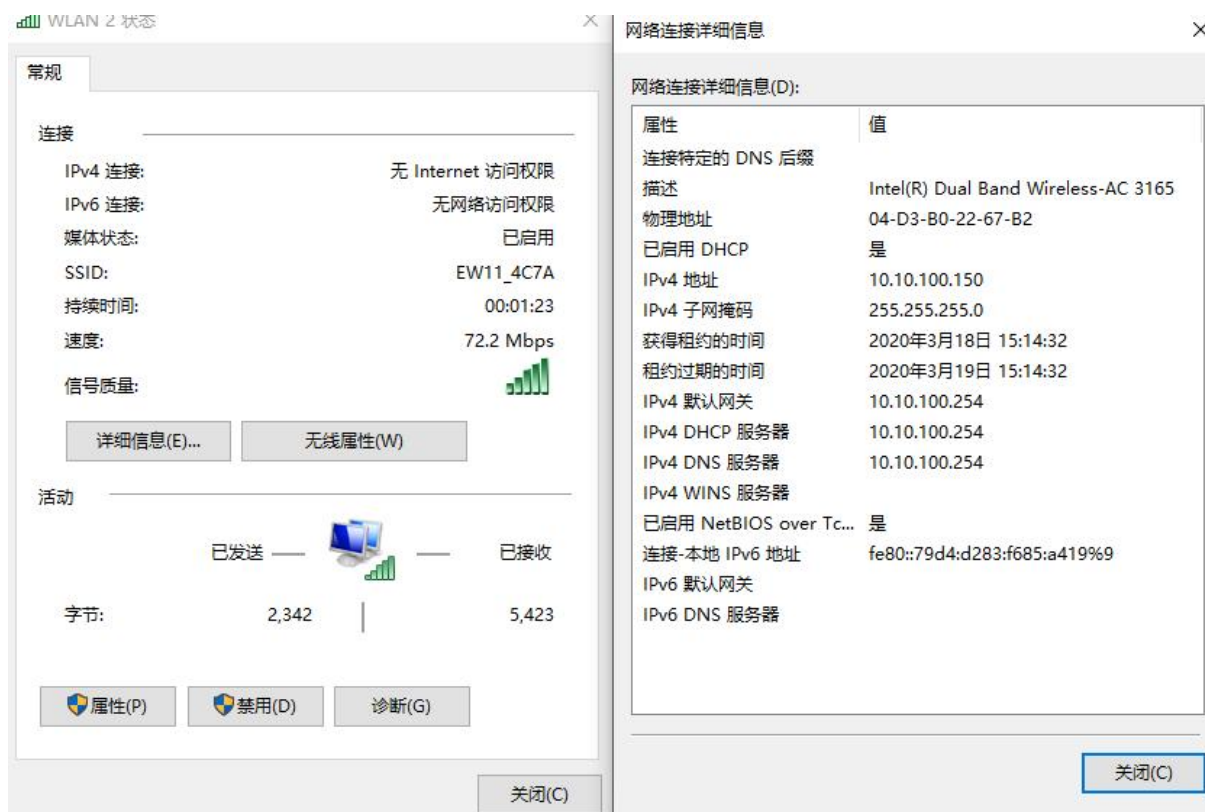

Browser input 10.10.100.254, input default user name and password with admin/admin to login in. The main page is as following.

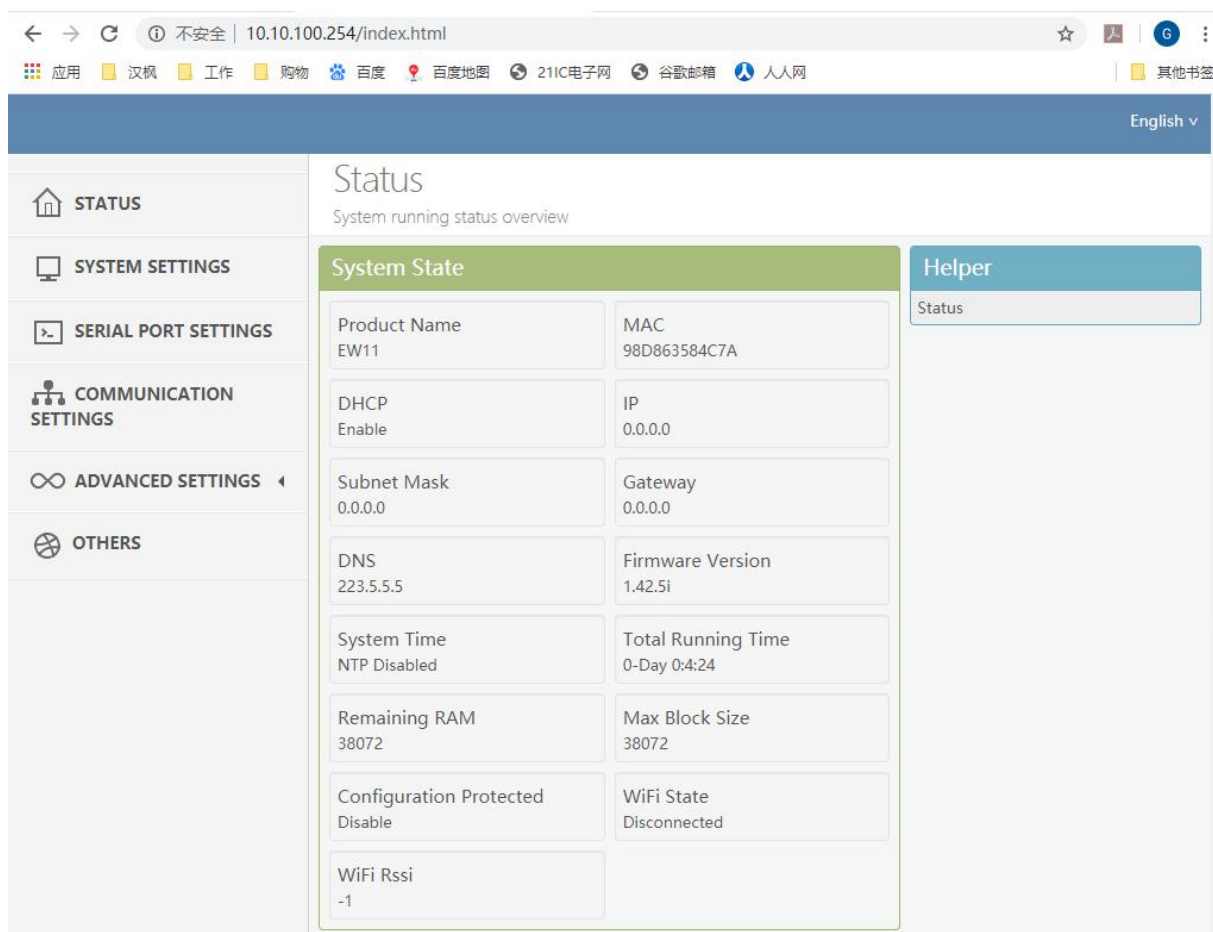


Default UART parameters is as following.

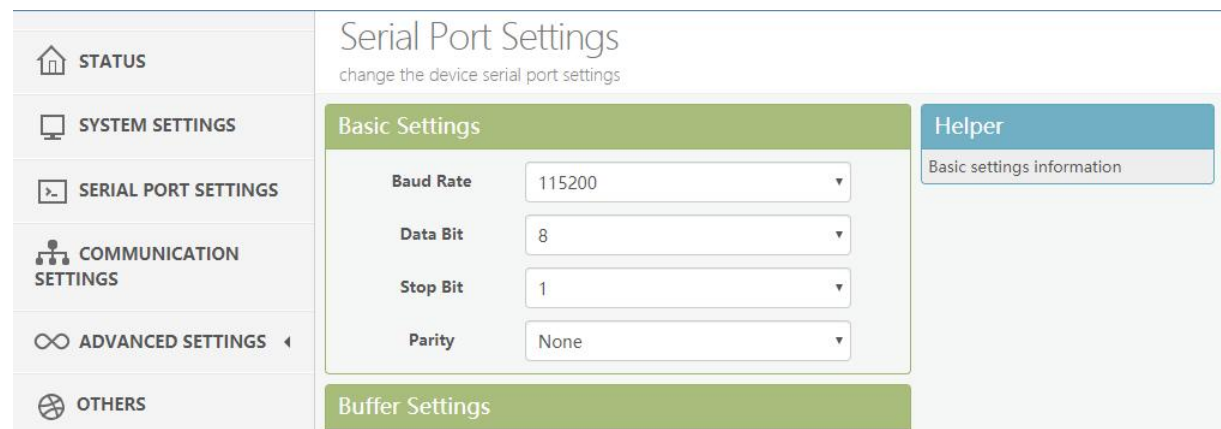

The screenshot shows the 'Serial Port Settings' web interface. On the left is a sidebar with navigation links: STATUS, SYSTEM SETTINGS, SERIAL PORT SETTINGS (highlighted), COMMUNICATION SETTINGS, ADVANCED SETTINGS, and OTHERS. The main content area is titled 'Serial Port Settings' with the subtitle 'change the device serial port settings'. It contains two sections: 'Basic Settings' and 'Buffer Settings'. The 'Basic Settings' section has four dropdown menus: Baud Rate (115200), Data Bit (8), Stop Bit (1), and Parity (None). A 'Helper' button is located on the right side of the interface.

Default socket parameters is as following.

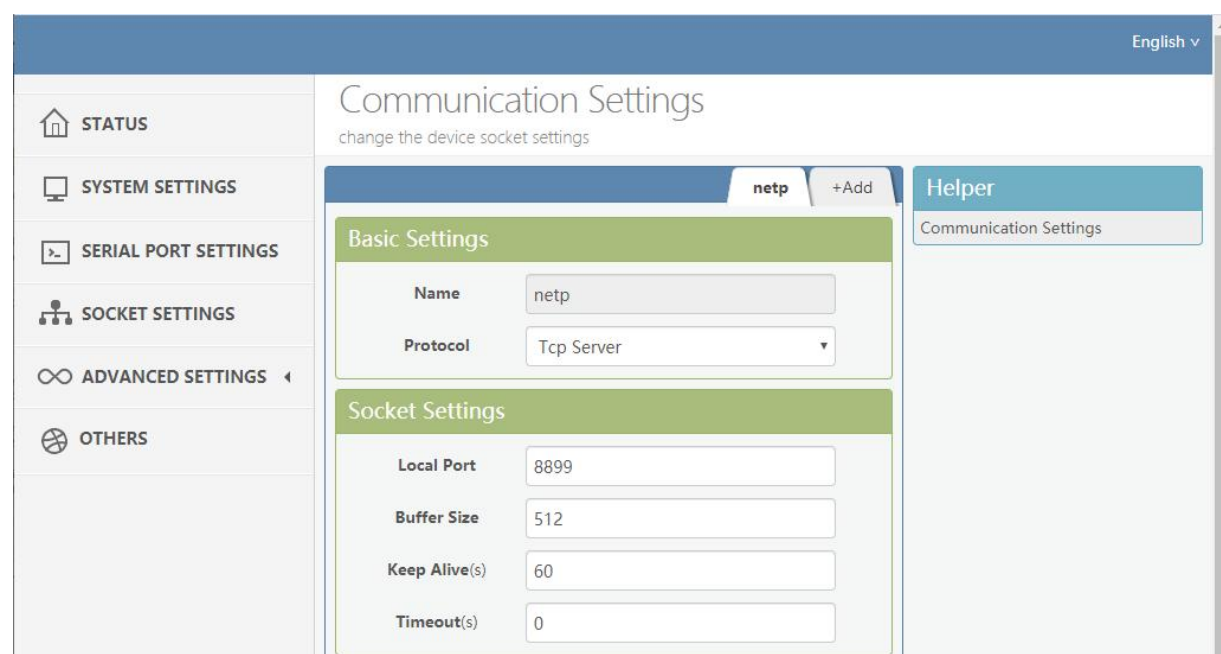

The screenshot shows the 'Communication Settings' web interface. The sidebar on the left includes: STATUS, SYSTEM SETTINGS, SERIAL PORT SETTINGS, SOCKET SETTINGS (highlighted), ADVANCED SETTINGS, and OTHERS. The main content area is titled 'Communication Settings' with the subtitle 'change the device socket settings'. It features a tabbed interface with 'netp' selected and a '+Add' button. The 'Basic Settings' section includes 'Name' (netp) and 'Protocol' (Tcp Server). The 'Socket Settings' section includes 'Local Port' (8899), 'Buffer Size' (512), 'Keep Alive(s)' (60), and 'Timeout(s)' (0). A 'Helper' button on the right is labeled 'Communication Settings'. The top right corner of the interface shows 'English' with a dropdown arrow.


Products by default works as AP mode, if need to set it connect to router, set it to STA or AP+STA working mode as following. Select the scanned list and input the router password.

Note: setting is valid after reboot.

WiFi Settings

WiFi Mode STA

STA SSID EW11

STA KEY STA KEY 

Scan

ID	SSID	Rssi	Channel	Security	Choose
1	UPGRADE-AP_aaaa	100	6	√	<input type="radio"/>
2	111!@#\$%^&**()_+	100	11	√	<input type="radio"/>
3	LAND	98	1	√	<input type="radio"/>
4	UPGRADE-AP	96	11	×	<input type="radio"/>
5	OULUN_TEST	94	6	×	<input type="radio"/>
6	WX-114	92	10	×	<input type="radio"/>
7	kingsir	92	11	√	<input type="radio"/>

If need static IP in STA mode, set DHCP to off and input static IP.

Note: setting is valid after reboot.

System Settings

Change the device system settings

STATUS

SYSTEM SETTINGS

SERIAL PORT SETTINGS


COMMUNICATION SETTINGS

ADVANCED SETTINGS

OTHERS

Authentication

User Name admin

Password 

Basic Settings

Host Name EW11

WAN Settings

DHCP OFF

WAN IP 0.0.0.0
The WAN IP field must contain a valid IP.

Subnet Mask 0.0.0.0
The Subnet Mask field must contain a valid IP.

Gateway 0.0.0.0
The Gateway field must contain a valid IP.


DNS 223.5.5.5

Helper

Basic Settings

If upgrade firmware at the following position.


<http://www.hi-flying.com/>

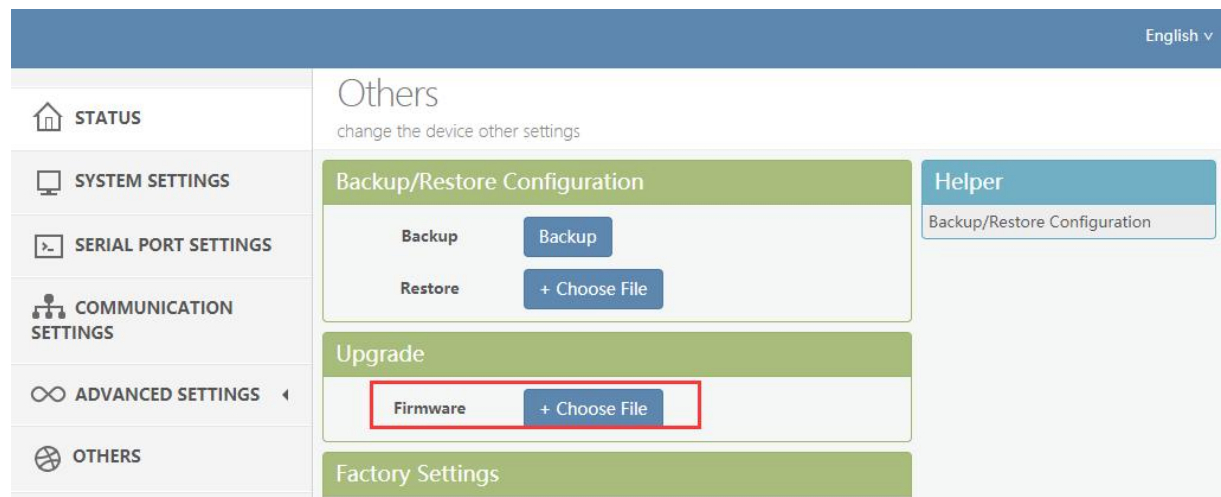

There is another internal webpage for upgrade the firmware and webpage (external config webpage as above, this source code is open at our website for customer to change). Login with IP/hide.

Webpage source file:

<http://www.hi-flying.com/download-center-1/application-notes-1/download-item-iot-device-webpage-source-code>

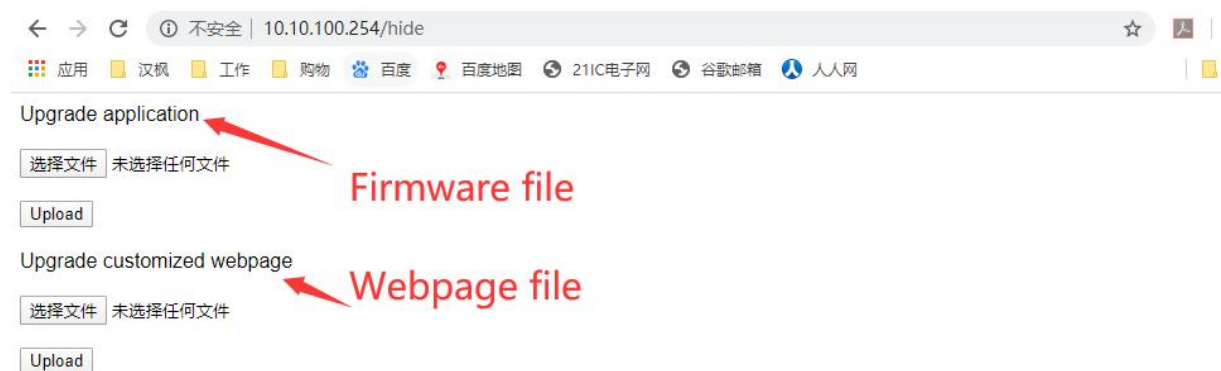

3.2. IOTService Set


IOTService is simple to manage the products, config and even communicate with it.

Download address:

<http://www.hi-flying.com/download-center-1/applications-1/download-item-iot-service>


Install IOTService and register account in the IOTBridge cloud(<http://bridge.iotworkshop.com/>) according to that tools doc.

PC connect to products AP(Same as previous chapter), and open tools, The device will be shown in IOTService.

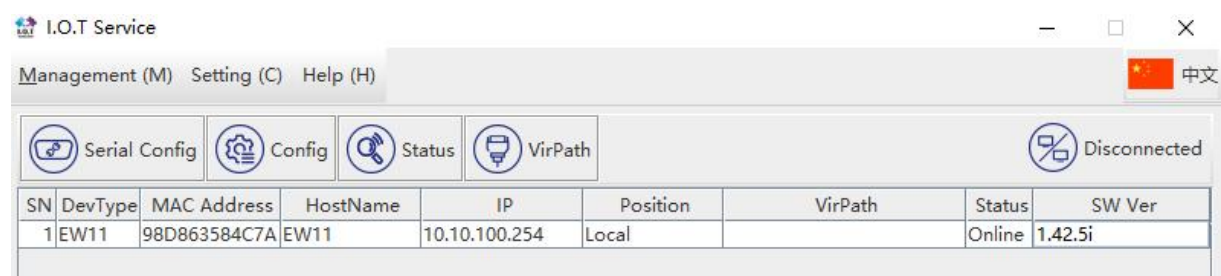

Note: See IOTService doc for more detailed usage, here just simply use it.

Double click the product list to see the device status.

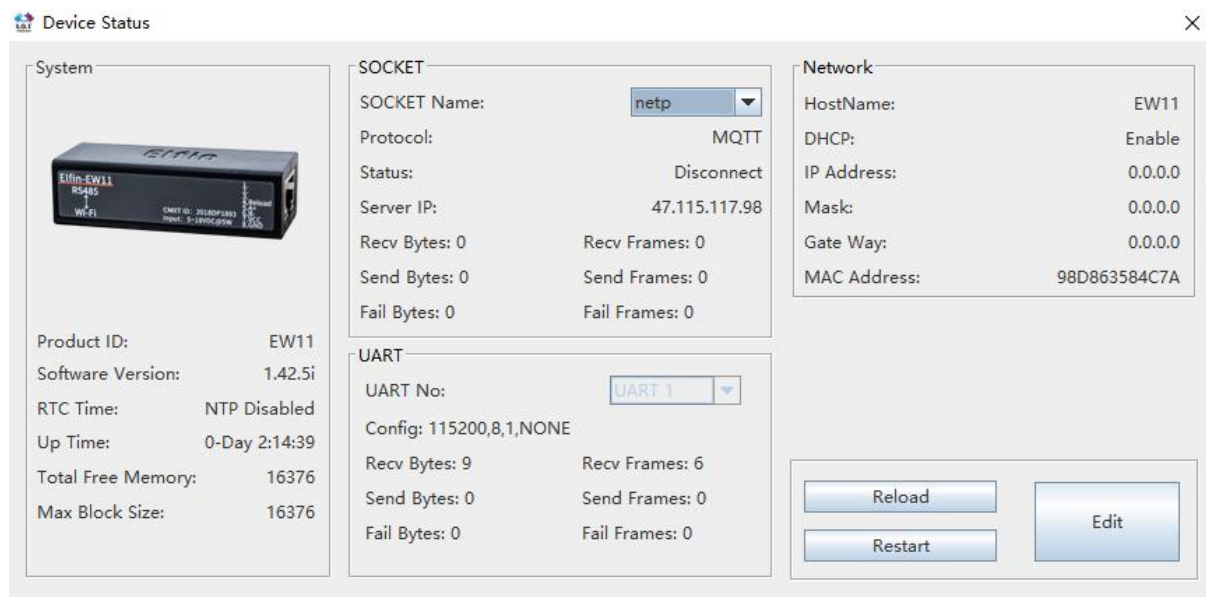

Device Status

System

Product ID: EW11
 Software Version: 1.42.5i
 RTC Time: NTP Disabled
 Up Time: 0-Day 2:14:39
 Total Free Memory: 16376
 Max Block Size: 16376

SOCKET

SOCKET Name: netp
 Protocol: MQTT
 Status: Disconnect
 Server IP: 47.115.117.98
 Recv Bytes: 0 Recv Frames: 0
 Send Bytes: 0 Send Frames: 0
 Fail Bytes: 0 Fail Frames: 0

UART

UART No: UART 1
 Config: 115200,8,1,NONE
 Recv Bytes: 9 Recv Frames: 6
 Send Bytes: 0 Send Frames: 0
 Fail Bytes: 0 Fail Frames: 0


Network

HostName: EW11
 DHCP: Enable
 IP Address: 0.0.0.0
 Mask: 0.0.0.0
 Gate Way: 0.0.0.0
 MAC Address: 98D863584C7A

Buttons: Reload, Restart, Edit

Click Edit to change product setting.

Note: some setting need reboot to be valid. Better do restart operation after setting.

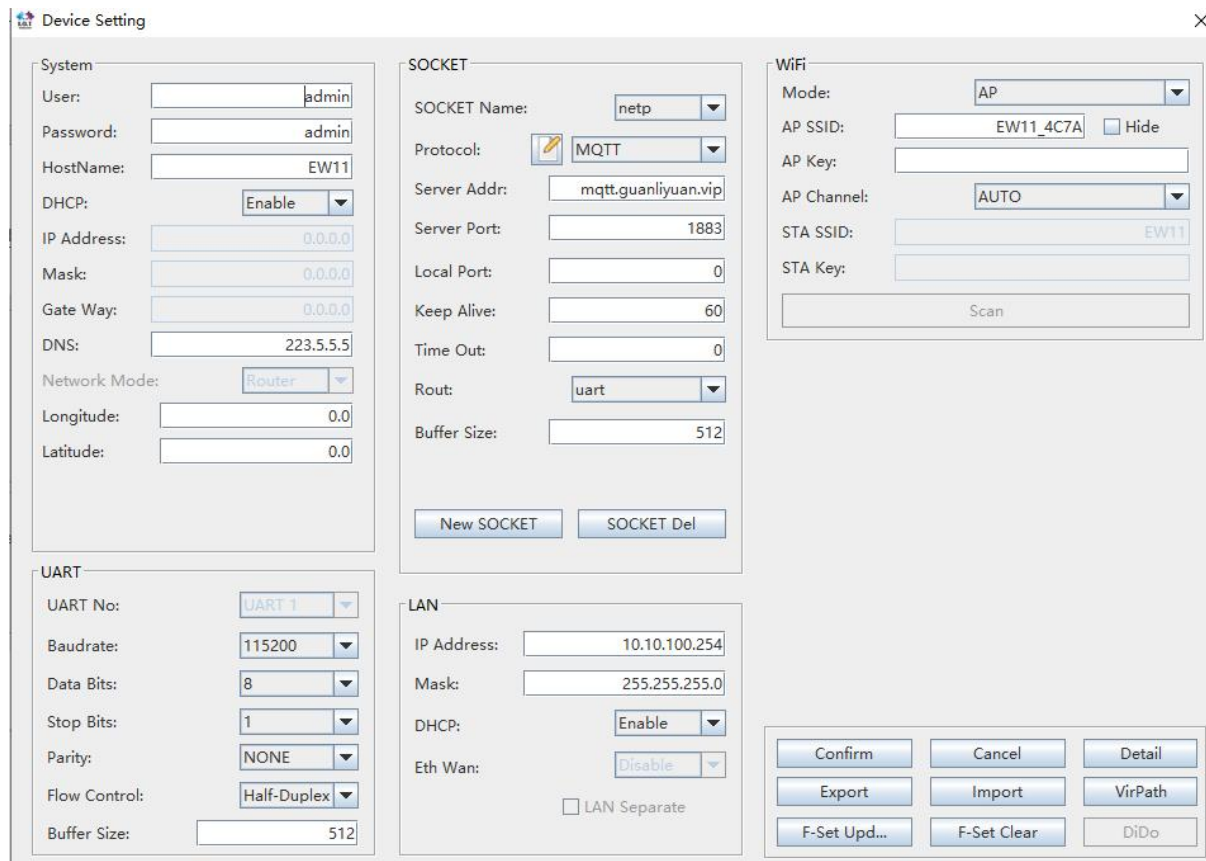

Device Setting

System

User: admin
 Password: admin
 HostName: EW11
 DHCP: Enable
 IP Address: 0.0.0.0
 Mask: 0.0.0.0
 Gate Way: 0.0.0.0
 DNS: 223.5.5.5
 Network Mode: Router
 Longitude: 0.0
 Latitude: 0.0

SOCKET

SOCKET Name: netp
 Protocol: MQTT
 Server Addr: mqtt.guanliyuan.vip
 Server Port: 1883
 Local Port: 0
 Keep Alive: 60
 Time Out: 0
 Rout: uart
 Buffer Size: 512

Buttons: New SOCKET, SOCKET Del

UART

UART No: UART 1
 Baudrate: 115200
 Data Bits: 8
 Stop Bits: 1
 Parity: NONE
 Flow Control: Half-Duplex
 Buffer Size: 512

LAN

IP Address: 10.10.100.254
 Mask: 255.255.255.0
 DHCP: Enable
 Eth Wan: Disable
☐ LAN Separate

WiFi

Mode: AP
 AP SSID: EW11_4C7A
 AP Key:
 AP Channel: AUTO
 STA SSID: EW11
 STA Key:
 Scan

Buttons: Confirm, Cancel, Detail, Export, Import, VirPath, F-Set Upd..., F-Set Clear, DiDo

Set to STA or AP+STA mode to make products connects to router, and may also set static IP.

Device Setting

System

User:

Password:

HostName:

DHCP:

IP Address:

Mask:

Gate Way:

DNS:

Network Mode:

Longitude:

Latitude:

SOCKET

SOCKET Name:

Protocol:

Server Addr:

Server Port:

Local Port:

Keep Alive:

WiFi

Mode:

AP SSID: ☐

AP Key:

AP Channel:

STA SSID:

STA Key:

UART

UART No:

Baudrate:

Data Bits:

Stop Bits:

Parity:

Flow Control:

Buffer Size:

Scan

Select	Channel	SSID	MAC Address	RSSI	Has Key
<input type="radio"/>	6	UPGRADE-AP_aaaa	C8:3A:35:54:B3:70	100	Yes
<input type="radio"/>	11	111!@#\$%^&*() +	78:44:FD:26:9A:7C	100	Yes
<input type="radio"/>	1	LAND	3C:33:00:A8:35:2C	94	Yes
<input type="radio"/>	10	WX-114	28:2C:B2:D2:E5:96	88	No
<input type="radio"/>	5	HF-LPB130	A8:CF:23:FF:88:88	84	No
<input type="radio"/>	1	UPGRADE-AP	04:4A:6C:70:9B:9C	80	No
<input type="radio"/>	6	ChinaNet-xuanyin	78:44:FD:AB:73:76	64	Yes
<input type="radio"/>	3	OPPO R15	D6:1A:3F:68:FB:DB	61	Yes
<input type="radio"/>	13	tp_jiehui	94:D9:B3:73:37:39	59	Yes
<input type="radio"/>	11	HF2211_A990	98:D8:63:11:A9:90	59	No
<input type="radio"/>	11	yongheng	00:0E:E8:B6:57:2C	57	Yes
<input type="radio"/>	6	HF-Demo-Specia	54:75:95:73:88:38	54	Yes
<input type="radio"/>	13	JACK 2G	8C:AB:8E:66:85:F0	52	Yes
<input type="radio"/>	1	zxz	24:69:68:7F:68:6E	49	Yes
<input type="radio"/>	11	TP-LINK_4C6F	34:96:72:19:4C:6F	49	Yes
<input type="radio"/>	8	zxz	E4:28:53:67:D2:FA	47	Yes

☐ LAN Separate

4. SERIAL PORT SETTINGS

4.1. Serial Port Tool SecureCRT

Open SecureCRT find an executable program, click Open.


Click the Quick Connect button to create a connection.



4.2. Setting Serial Port Parameters

Protocol: Serial

Port: The port that the computer is actually connected to (see "My Computer"-> "Device Manager"-> "Ports (COM and LPT)", as shown in the figure.

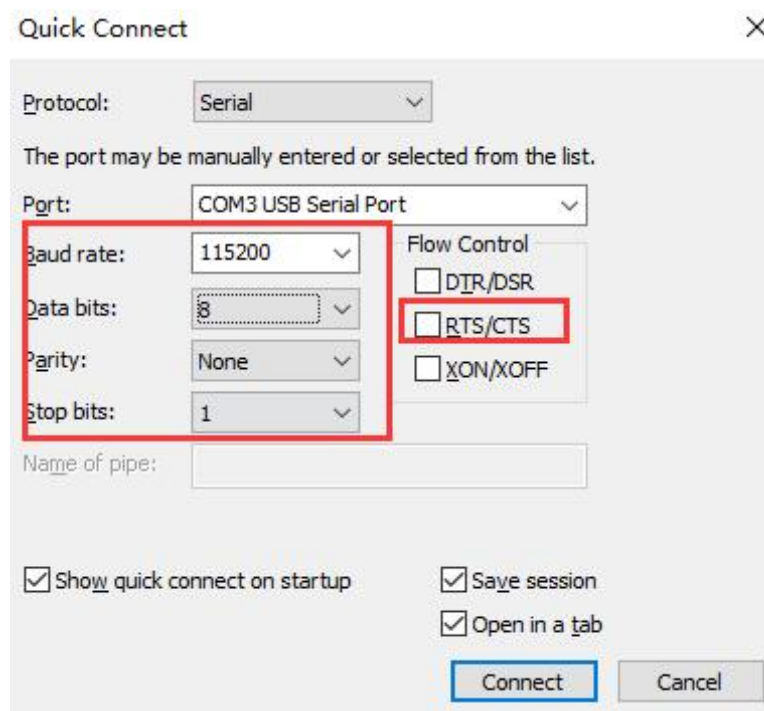

Note: The default serial port data of the device is as shown in the figure above. Users can modify the working parameters of the product by using IOTService.


4.3. Cli Instruction Mode

Data transmission needs to be in the transparent transmission mode (the default transparent transmission mode upon power-on). If you need to enter the Cli command mode for configuration, you can do as follows.

- Serial port mode.

Set the parameters of the SecureCRT serial port software according to the above.

Add "+++" button command to the button bar.

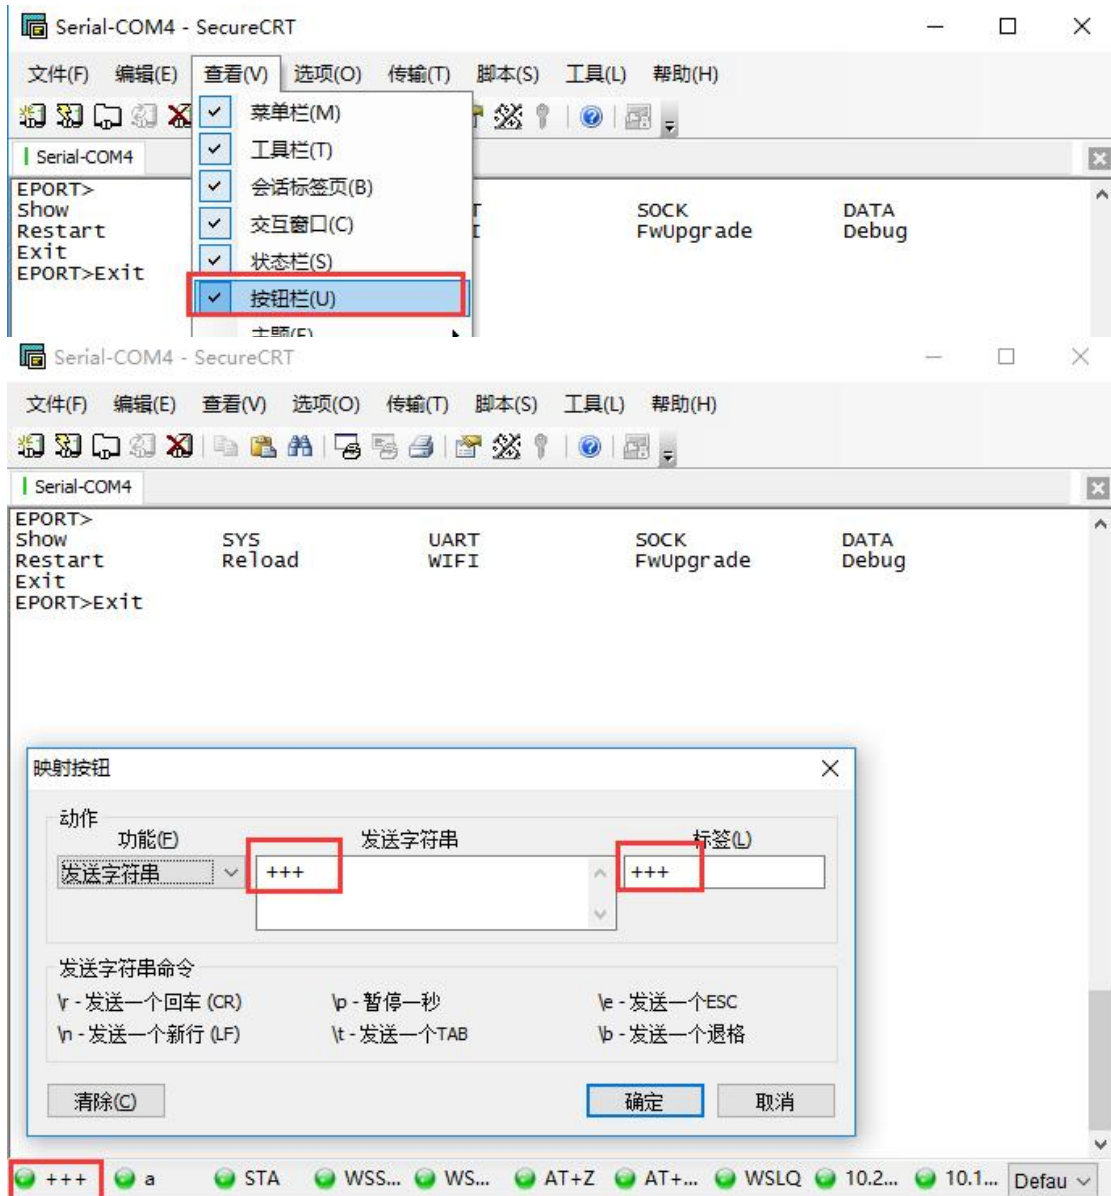

Click the button to send the corresponding data. When the interface displays "EPORT>", you have entered the CLI command mode.




Note:


Any serial tool can do this. Sending "+++" must be a continuous package of data, and there can be no other data before and after (such as carriage return and line feed).

- Telnet mode.

Step 1: Enter the IP address of the device (the IP address can be obtained by searching through the IOTService tool, which will be detailed later), port 23.

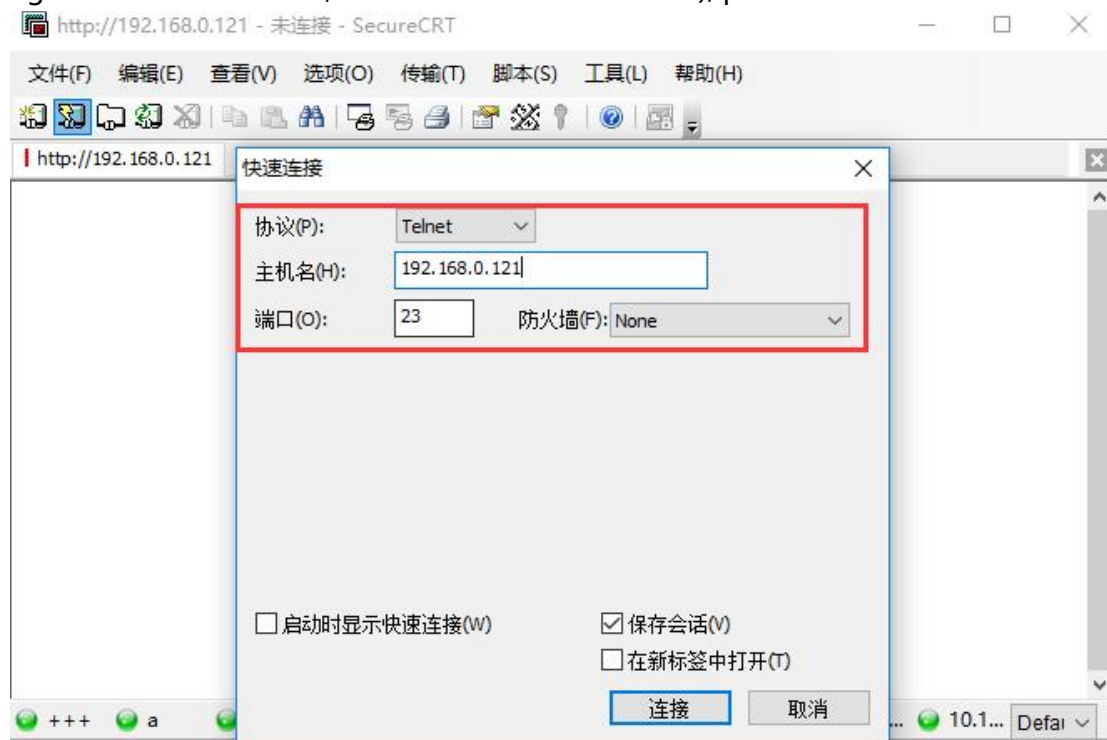

Step 2: The default login name and password are both admin, then "EPORT>" is displayed, and you have logged in to the Cli command mode.

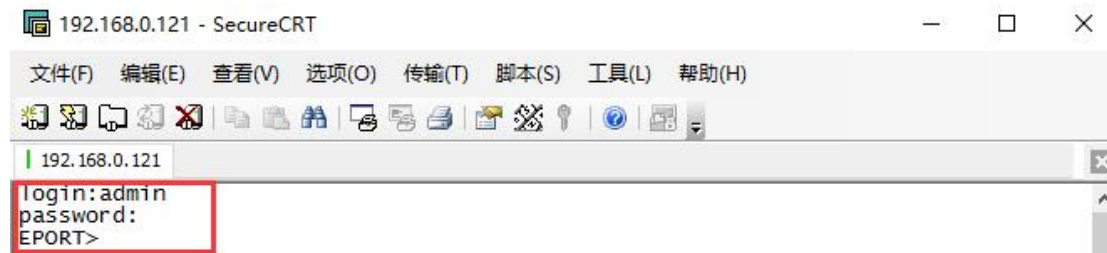


5. TEST EXAMPLE

Elfin-EW1X use TCP/IP protocol for communication. There is two main parameters one for IP address and another for port number.

5.1. AP Wireless Networking

Product works in AP mode. All other STA devices connect to product AP. (Product AP does not support route function, so the STA can not transfer data to each other) The structure is t shown as below:

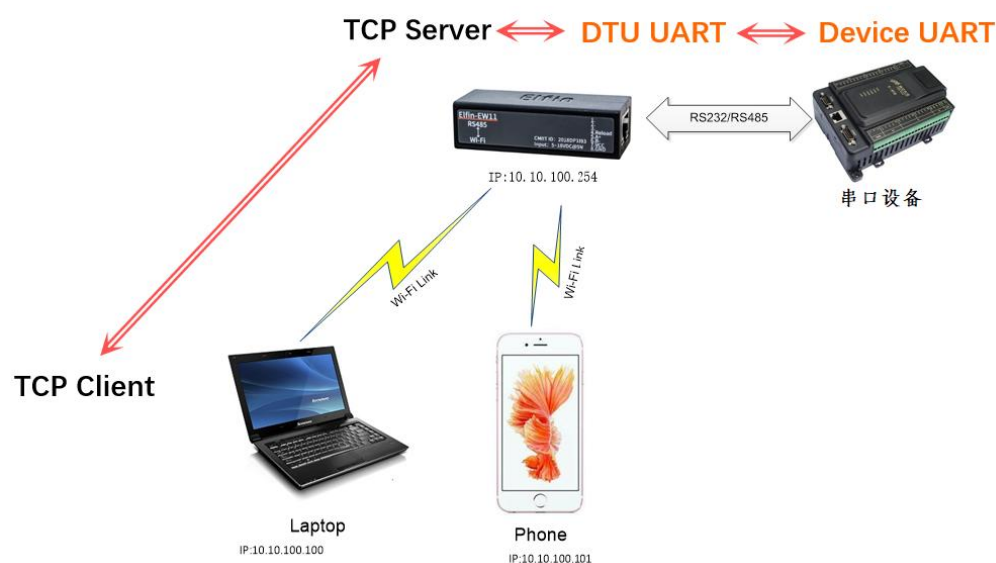

Step 1: The product default AP SSID is "EW1X_+MAC(last 4 characters)". It can also search by cli "Show" command. Figure is as below:

```

===WIFI Status===
Mode:STA
AP SSID:EW10_C69A
Hide AP SSID:off
Disconnected

STA SSID:Upd
Connected,7C:B5:40:4F:B2:CD
EPORT>
  
```

Step 2: Set PC IP to DHCP or static IP with (10.10.100.XXX, subnet:255.255.2550.0, gateway:10.10.100.254), PC connect to product AP as following picture.





Step 3: Open IOTService and find the device. The device will allocate IP address to the STA connected. STA device IP address will be like 10.10.100.XXX.



5.2. TCP Server Test in AP Mode



Step 1: Open TCP&UDP test tool and generate TCP connection as following steps. Device has already created a TCP Server (port 8899) for use. TCP&UDP test tool can be downloaded from our website:


- DestIP: IP address of device which can be found by IOTService.
- Port: Port of TCP Server which can be found by IOTService or set by users own.

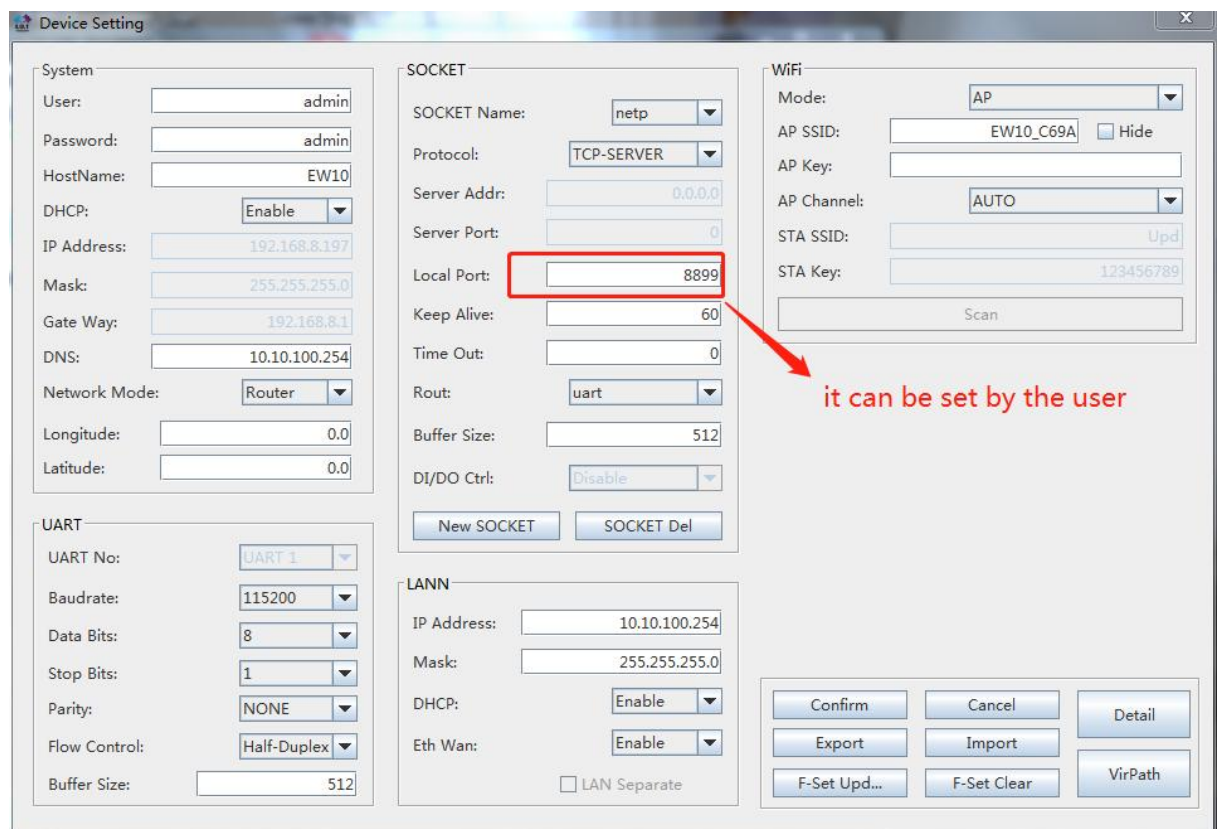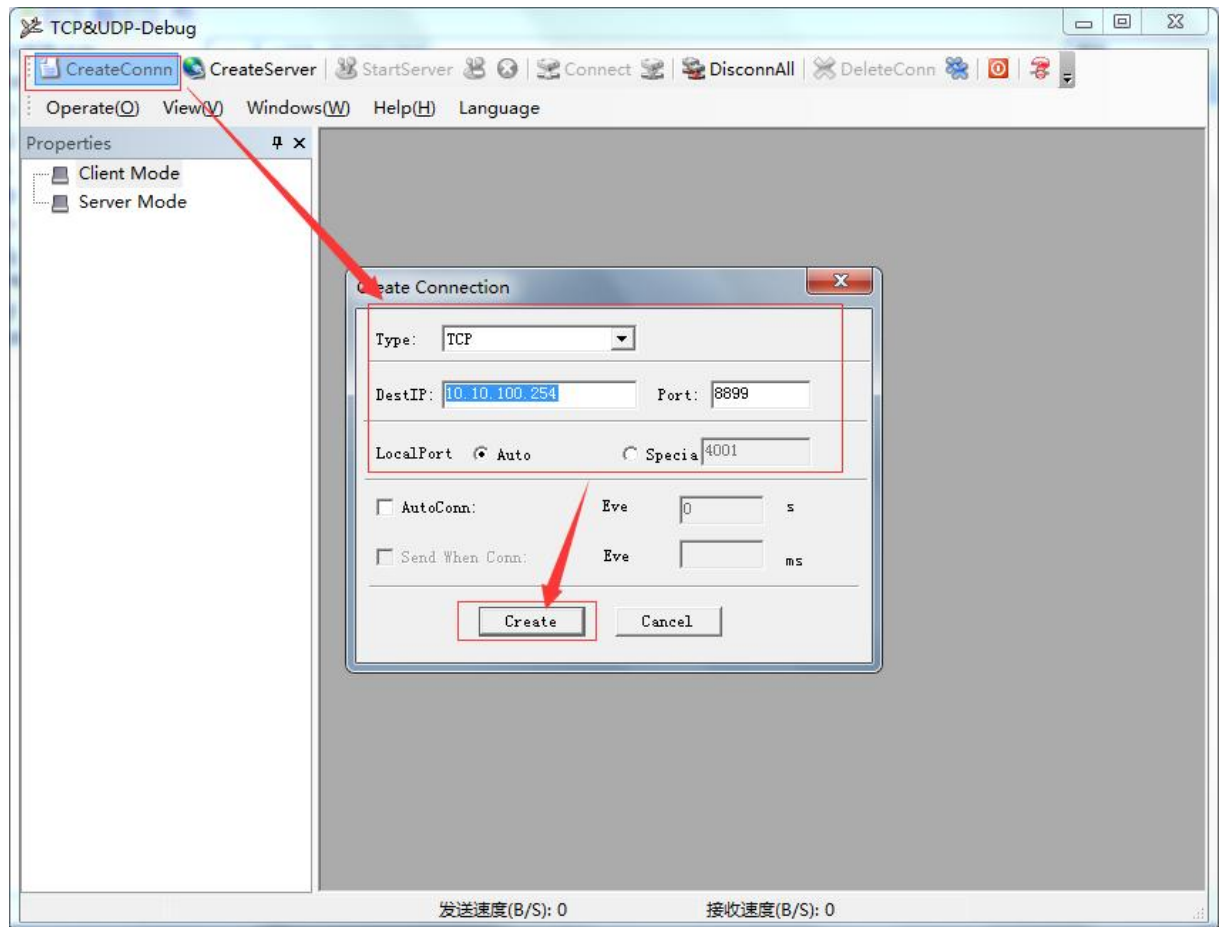


Step 2: Click Connection to generate TCP connection

- After successful connection, the left turns to be green arrow, yellow if fails.

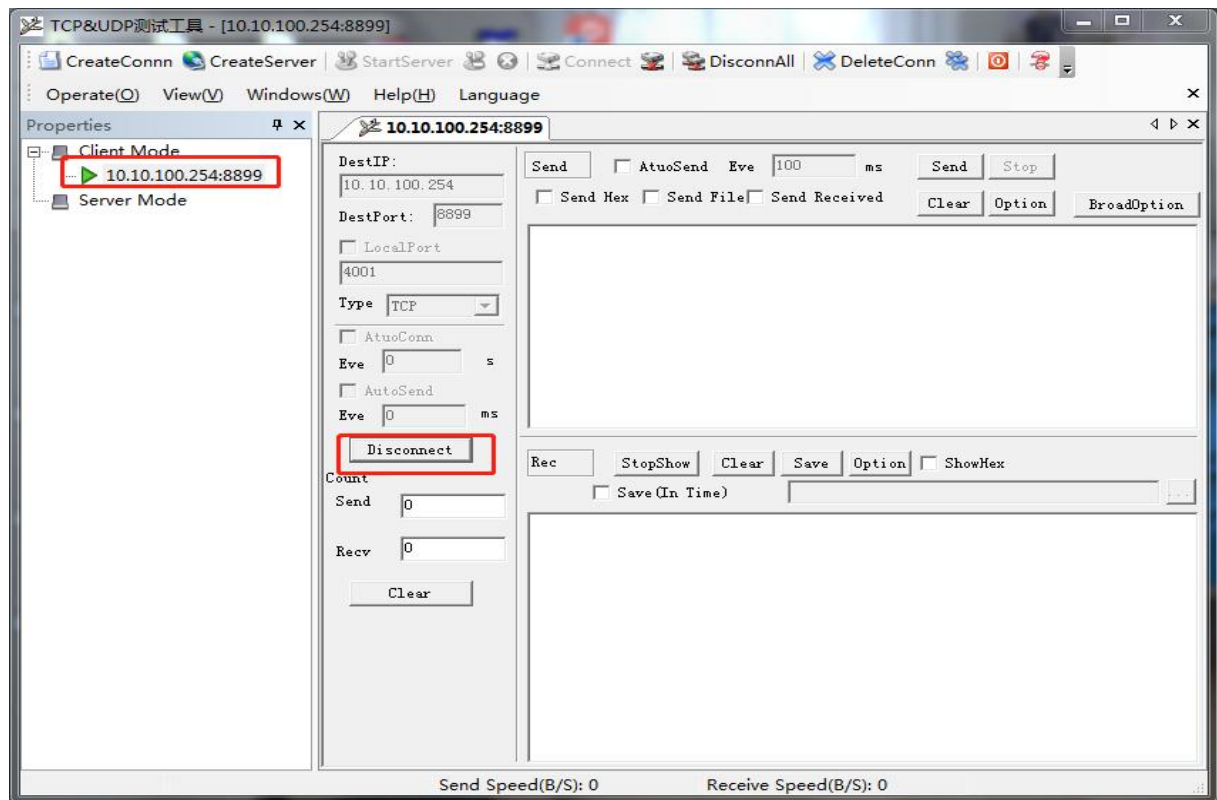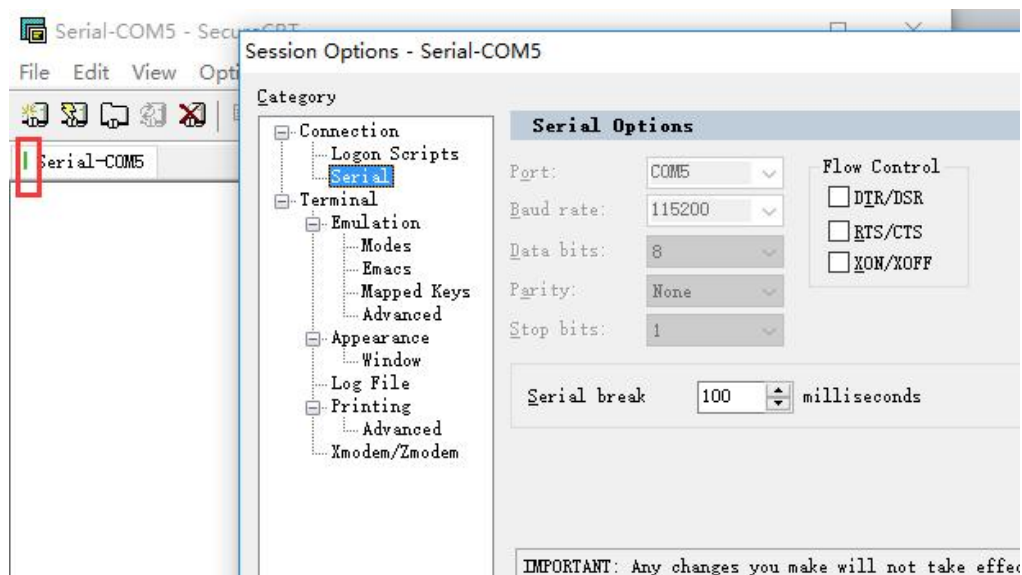
**Step 3: Open serial tool according to following parameters (115200 baud rates as default)****Step 4: Data transmission between TCP and UART is as following.**

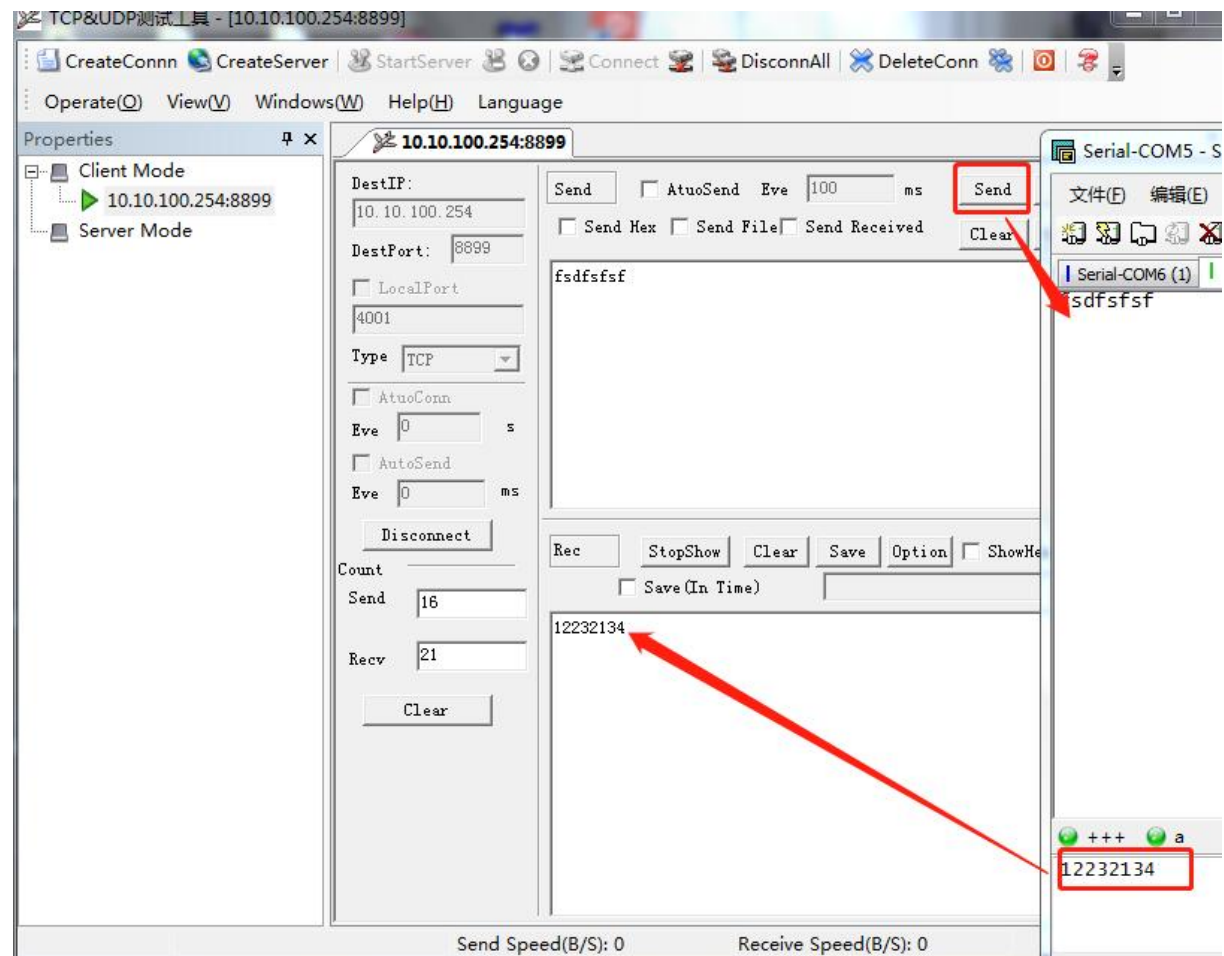

Step 4: Data count in following status.

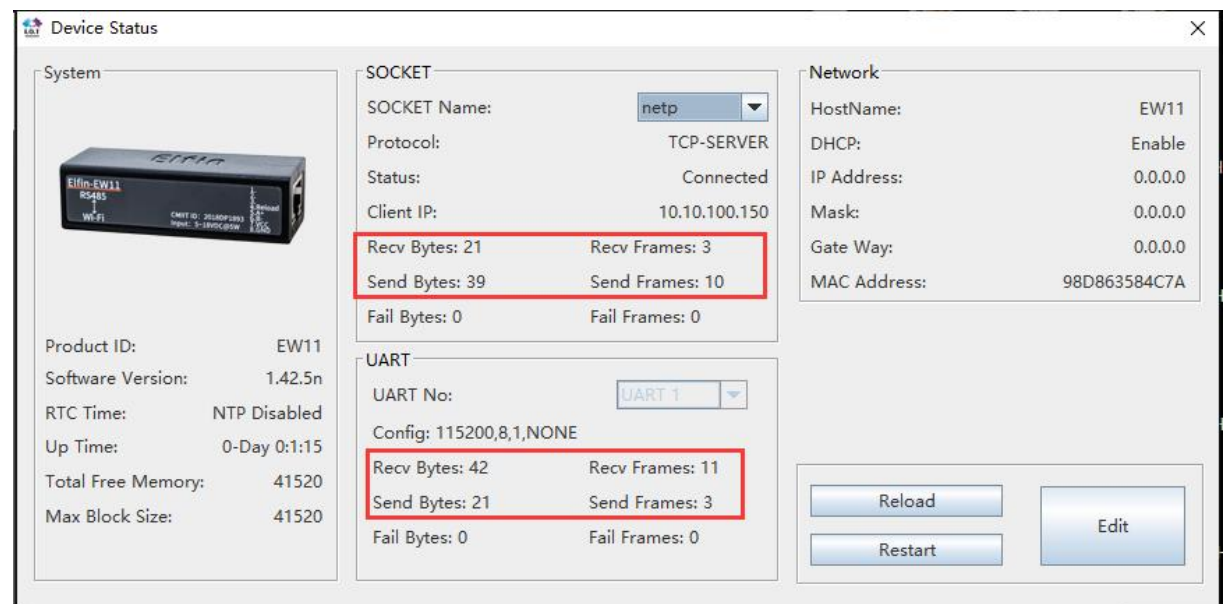


5.3. STA Wireless Networking

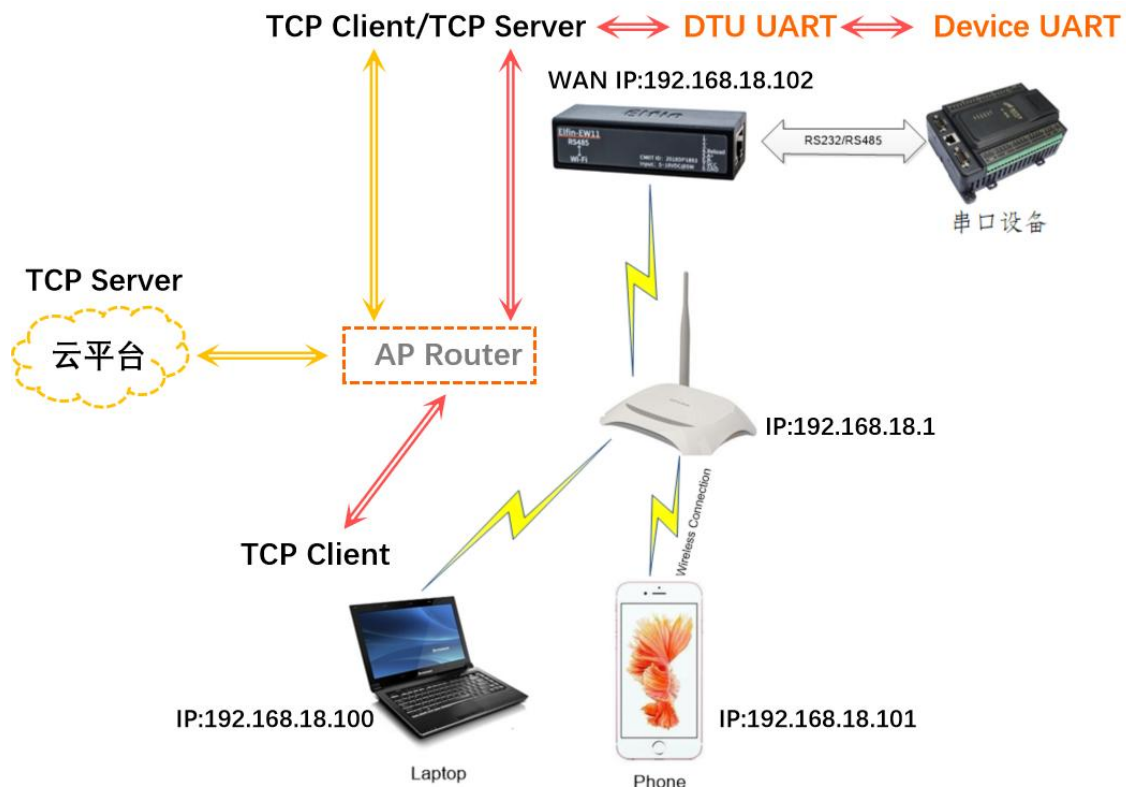

Elfin-EW1X is AP mode by default. If need to work in STA mode connecting to router. There are following ways. Recommend to set to STA mode only ,if AP is not used in mass application ,for test stage, may set to APSTA for convenience

- PC Wi-Fi connect to product AP, open IOTService tools to config.

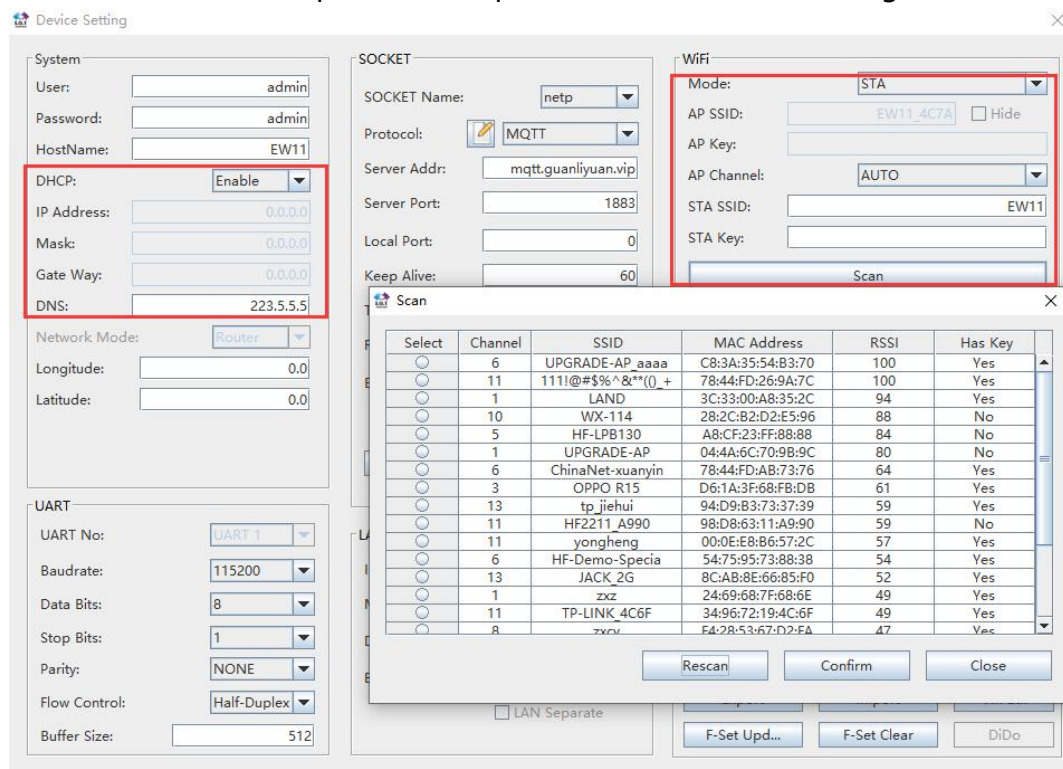

Reboot after setting.

Device Setting

System

User:

Password:

HostName:

DHCP:

IP Address:

Mask:

Gate Way:

DNS:

Network Mode:

Longitude:

Latitude:

SOCKET

SOCKET Name:

Protocol:

Server Addr:

Server Port:

Local Port:

Keep Alive:

Time Out:

Rout:

Buffer Size:

WiFi

Mode:

AP SSID: ☐

AP Key:

AP Channel:

STA SSID:

STA Key:

UART

UART No:

Baudrate:

Data Bits:

Stop Bits:

Parity:

Flow Control:

Buffer Size:

LAN

IP Address:


Mask:

DHCP:

Eth Wan:

☐ LAN Separate

PC also connect to the same router, and it will find the device with products STA WAN IP.

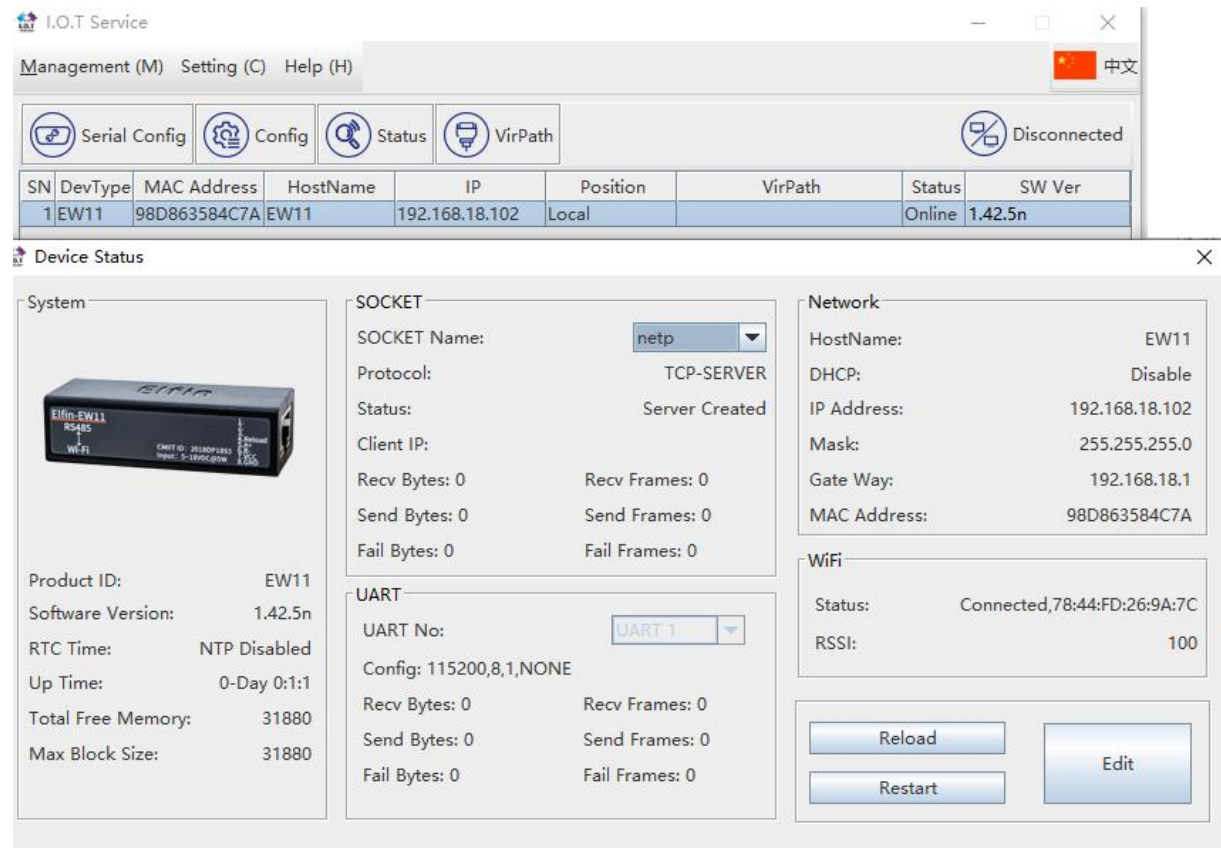

- PC Wi-Fi connect to product AP, login with 10.10.100.254, user and password input admin/admin, open its webpage to config.

WAN Settings

DHCP	<input type="checkbox"/> OFF
WAN IP	<input type="text" value="192.168.18.102"/>
Subnet Mask	<input type="text" value="255.255.255.0"/>
Gateway	<input type="text" value="192.168.18.1"/>
DNS	<input type="text" value="223.5.5.5"/>


LAN Settings

LAN IP	<input type="text" value="10.10.100.254"/>
Mask	<input type="text" value="255.255.255.0"/>
DHCP Server	<input type="checkbox"/> ON



WiFi Settings

WiFi Mode	<input type="text" value="AP+STA"/>
AP SSID	<input type="text" value="EW_XXXX"/>
AP KEY	<input type="text" value="AP KEY"/>
AP Channel	<input type="text" value="AUTO"/>
STA SSID	<input type="text" value="Soneter1"/>
STA KEY	<input type="text" value="Soneter1"/>

After reboot, PC connect to router, and login with the product static IP to confirm connection. If any problem, reconfig the product with its AP.

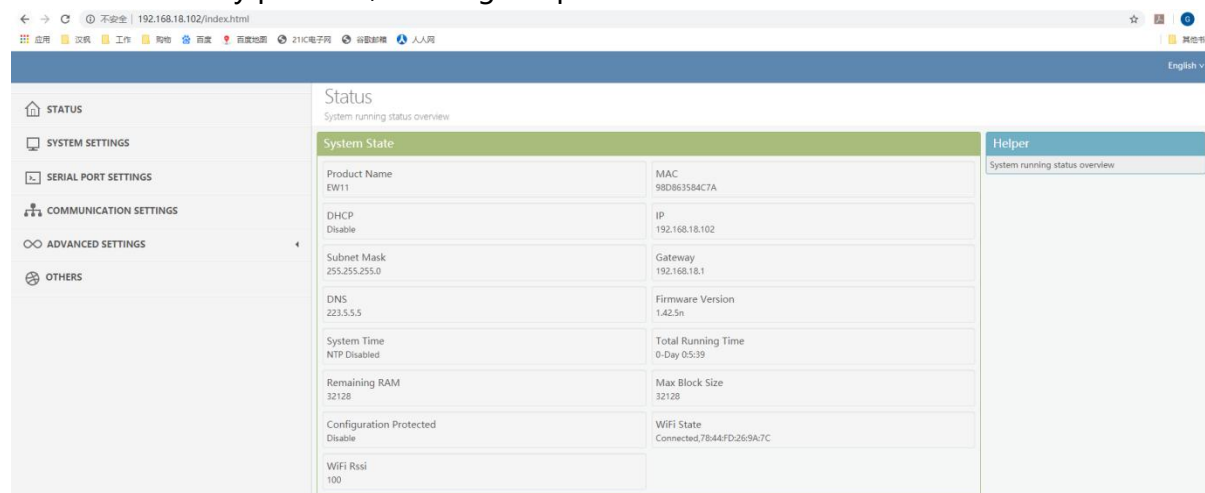

- SmartLinkV8 APP to config, smart phone connect to Router. Set product Reload pin to low for some time(0.2s < time < 1.5s) to make it in Smartlink config mode(green LED will be in fast flash status). See appendix Smartlink V8 APP for detail. The following is the final device find step for IOS and Android. After the Smartlink config succeeded, the product works in STA mode and connect to router.

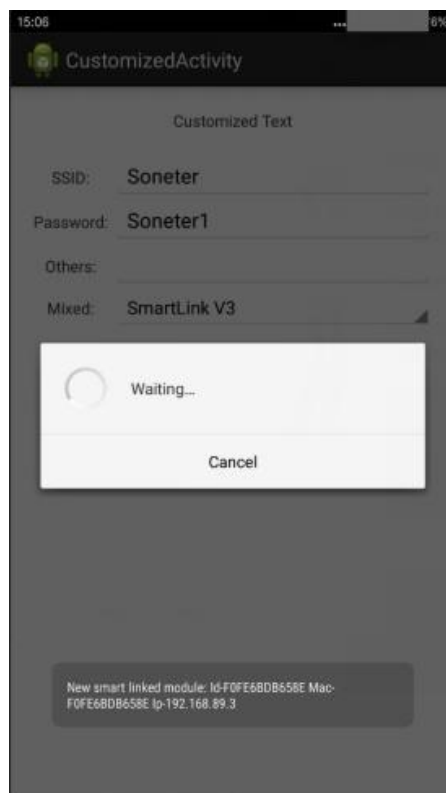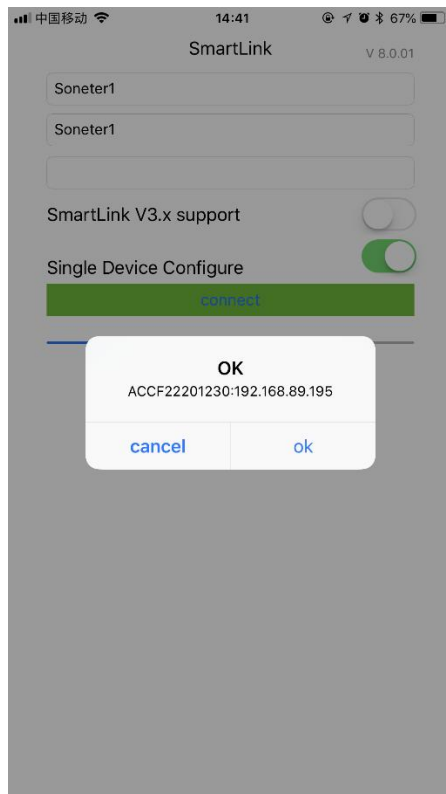

Note: This method is very easy to config, but may encounter failure sometimes.
Do as following to try again.


- Check if phone connect to 2.4G router SSID.
- Set router 2.4G Wi-Fi to 802.11bg



5.4. TCP Server Test in STA Mode


Open TCP&UDP test tool and generate TCP connection as following steps. Device has already created a TCP Server(port 8899) for use. TCP&UDP test tool can be downloaded from the website:

- DestIP: Destination IP address.
- Port: Destination Port.

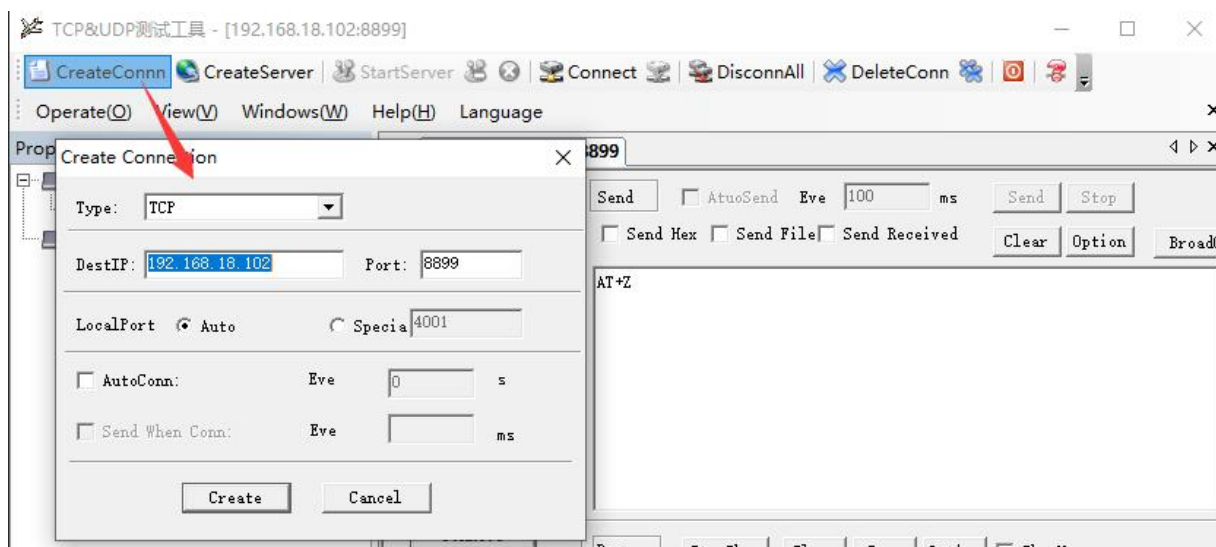


Click Connect to create TCP connection


- After successful connection, the left turns to green arrow.

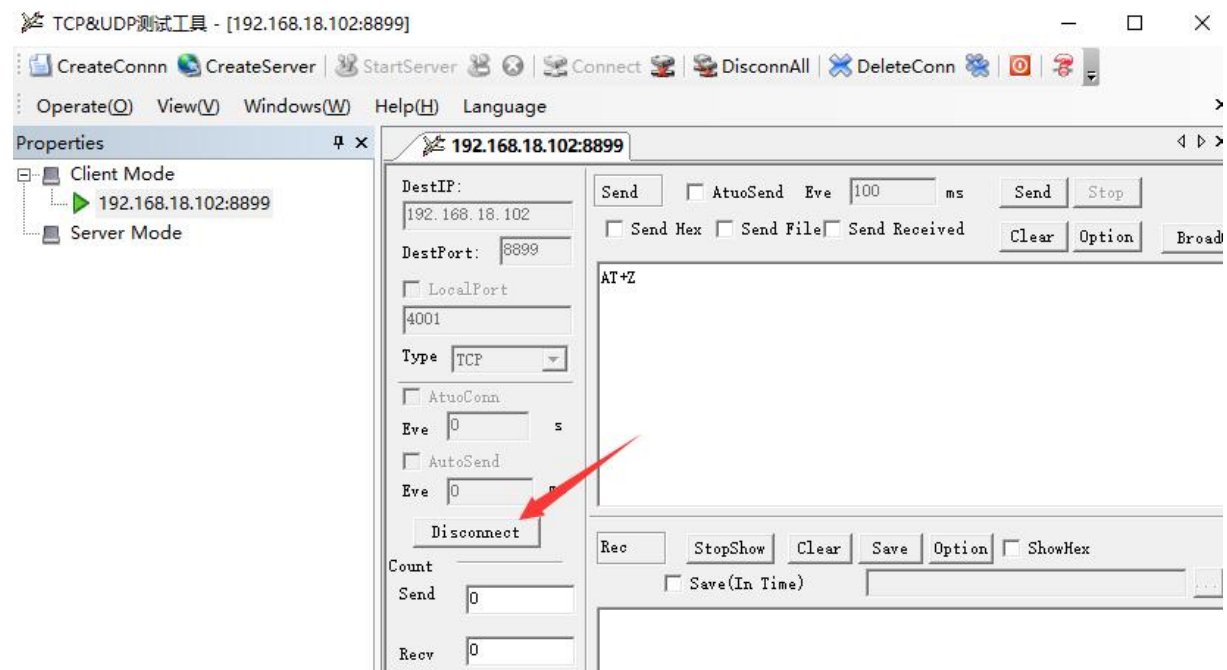

Open serial tool according to following parameters (115200 baud rate as default)

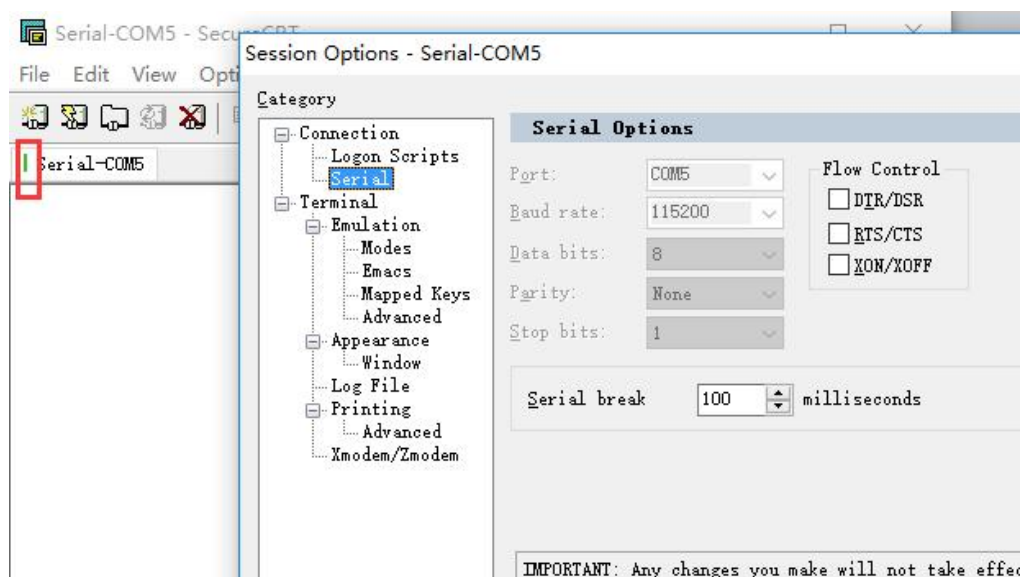

Data transmission between TCP and serial port.

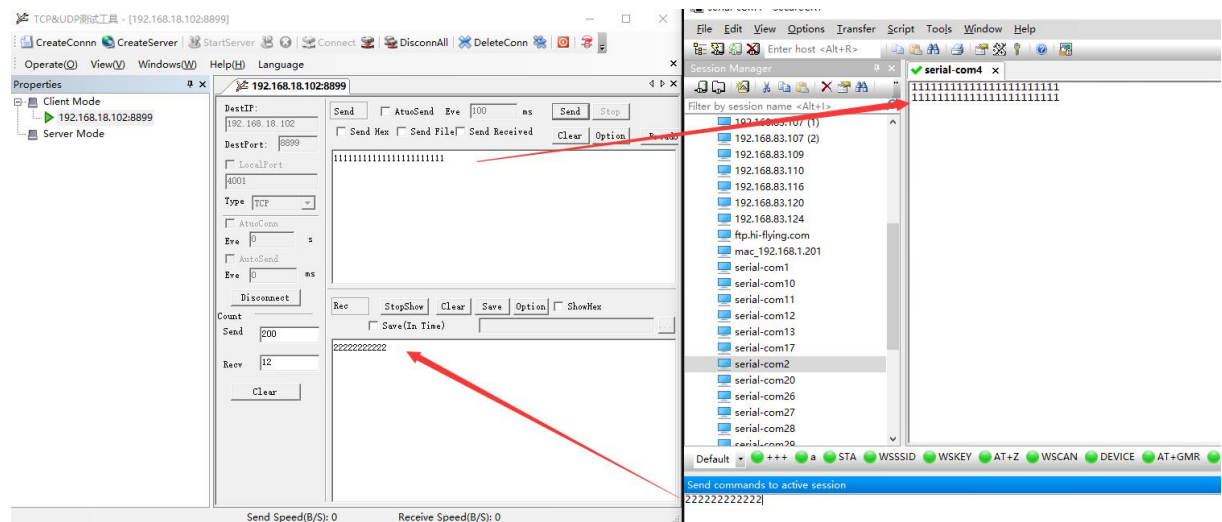

5.5. STA TCP Client Test


Products support 3 channel sockets, default netp socket works as TCP Server, here create another socket working as TCP client.

HF test server: test.server.iotworkshop.com


TCP Port: 40432

UDP Port: 40431



Our test server will send back the received data.

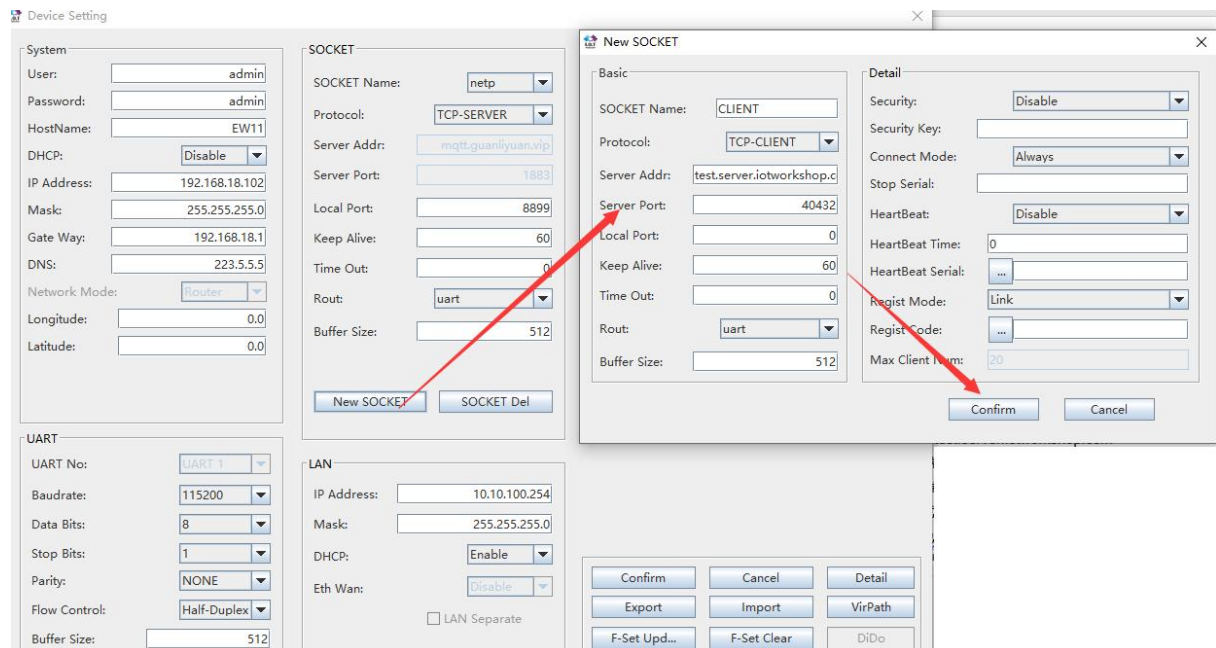

It shows connected.

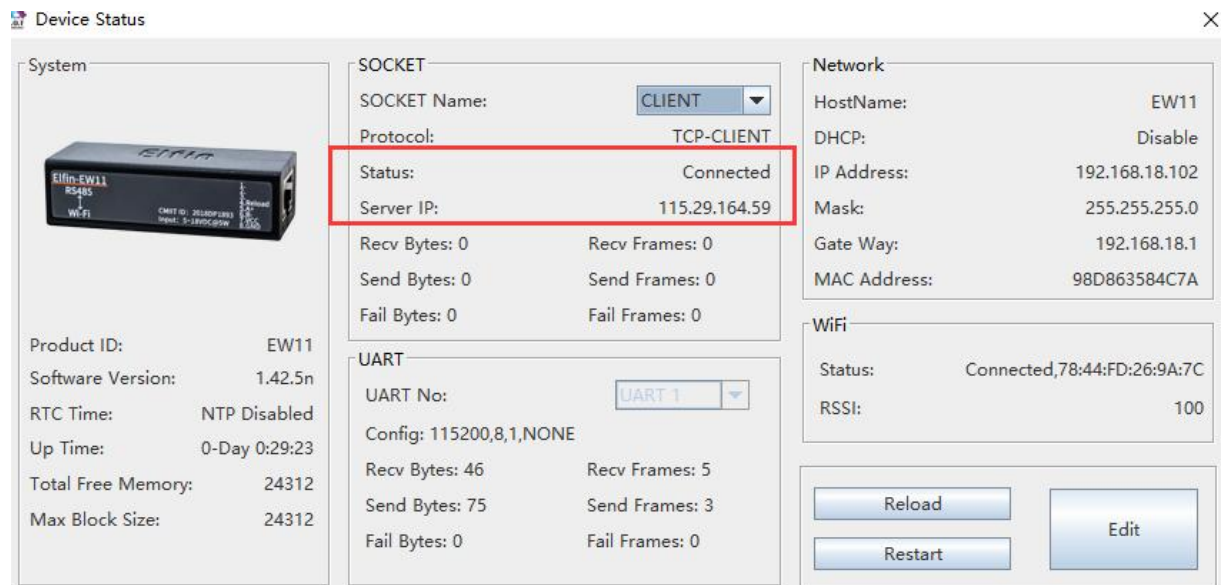


UART received "333333333333" and send to server, the server sent back the packet, so the UART tools shows the received data.

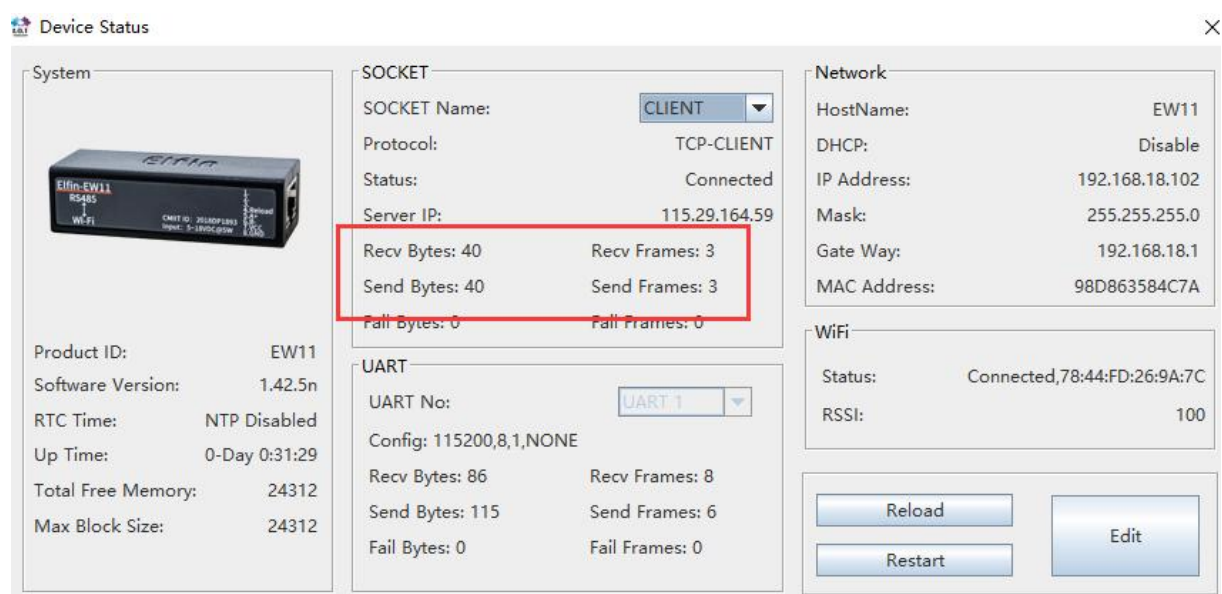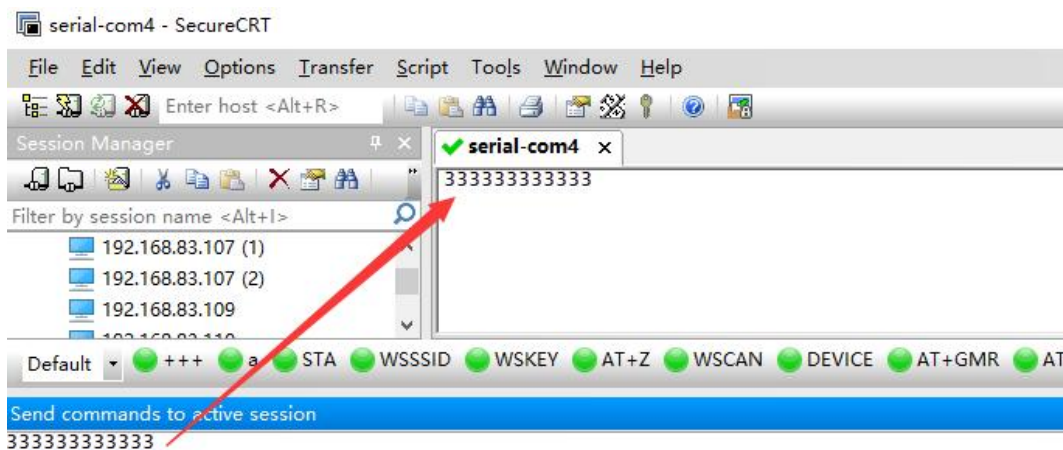

5.6. STA HTTP Client Test

HTTP data flow is as following.

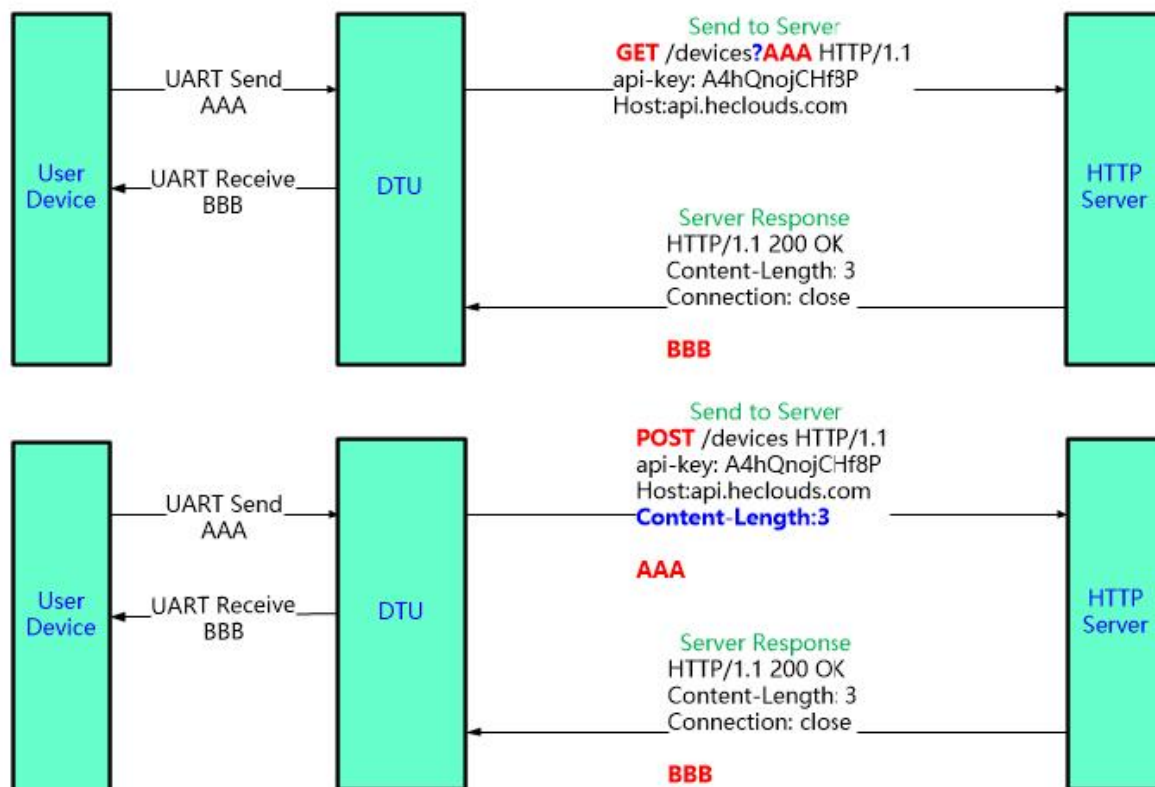

● HTTP GET Test:

Test server address: 115.29.164.59

Test server port: 8432


Path: /iot

Header:


Host:115.29.164.59:8432

Connection: keep-alive


Products setting as following.

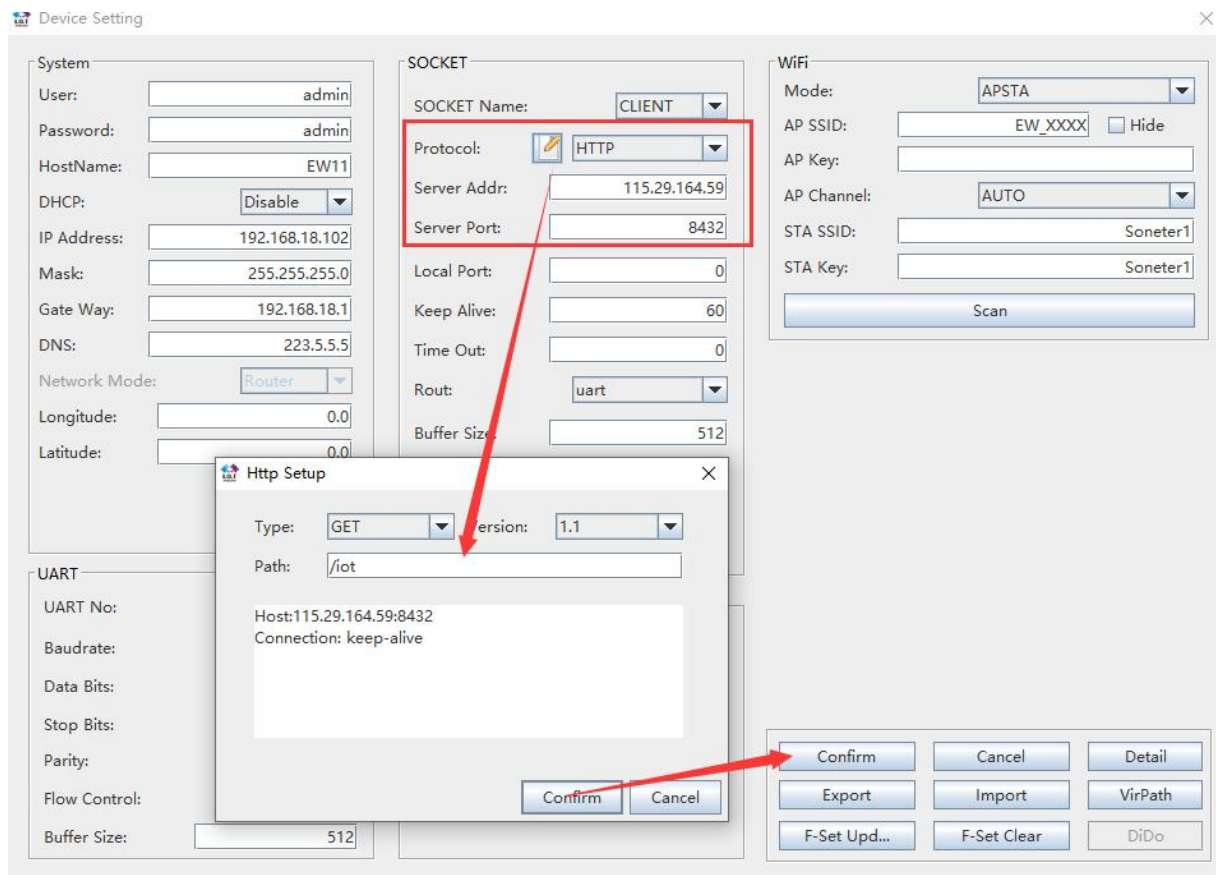

Server response back and products UART output packet. It filter the HTTP response header and only output the header.

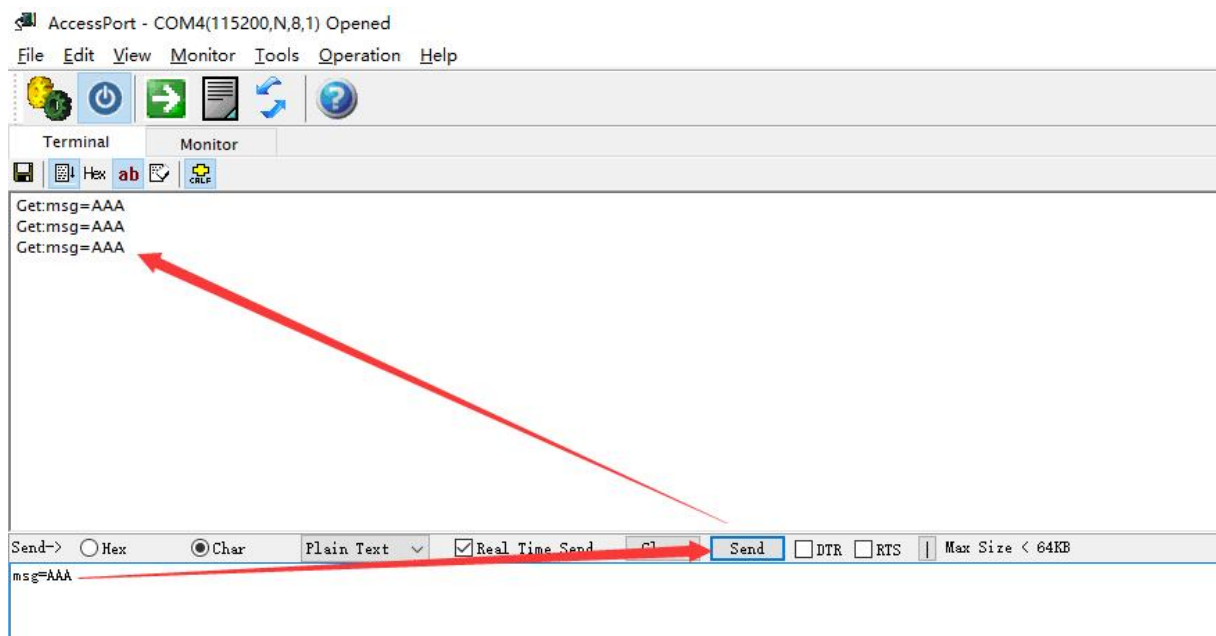

Data flow is as following.

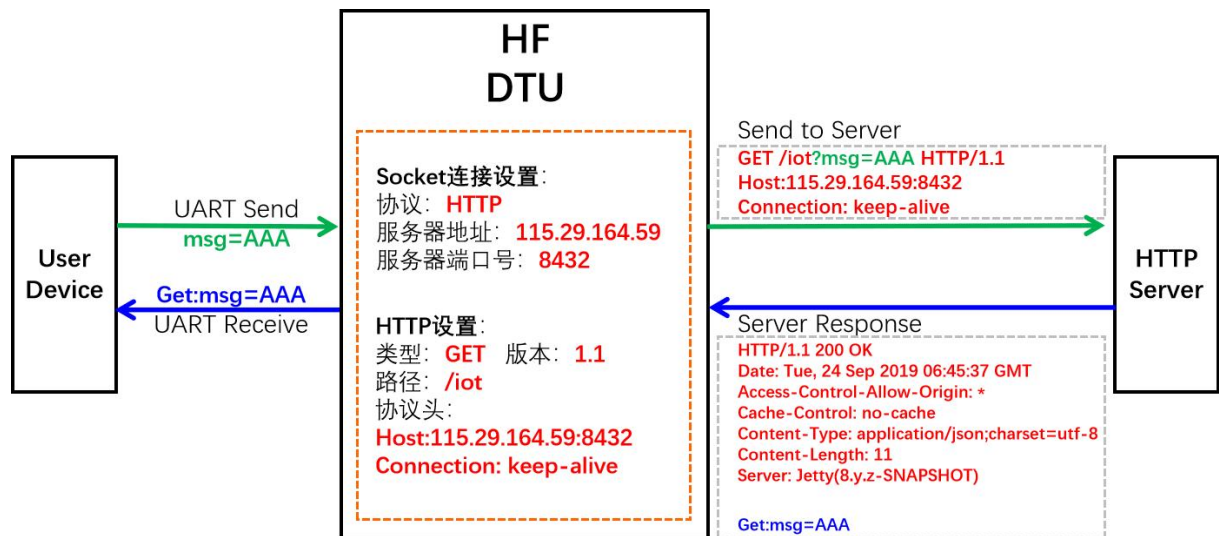

● HTTP POST Test:

Test server address: 115.29.164.59

Test server port: 8432


Path: /iot

Header:


Host:115.29.164.59:8432

Connection: keep-alive


Products setting as following.

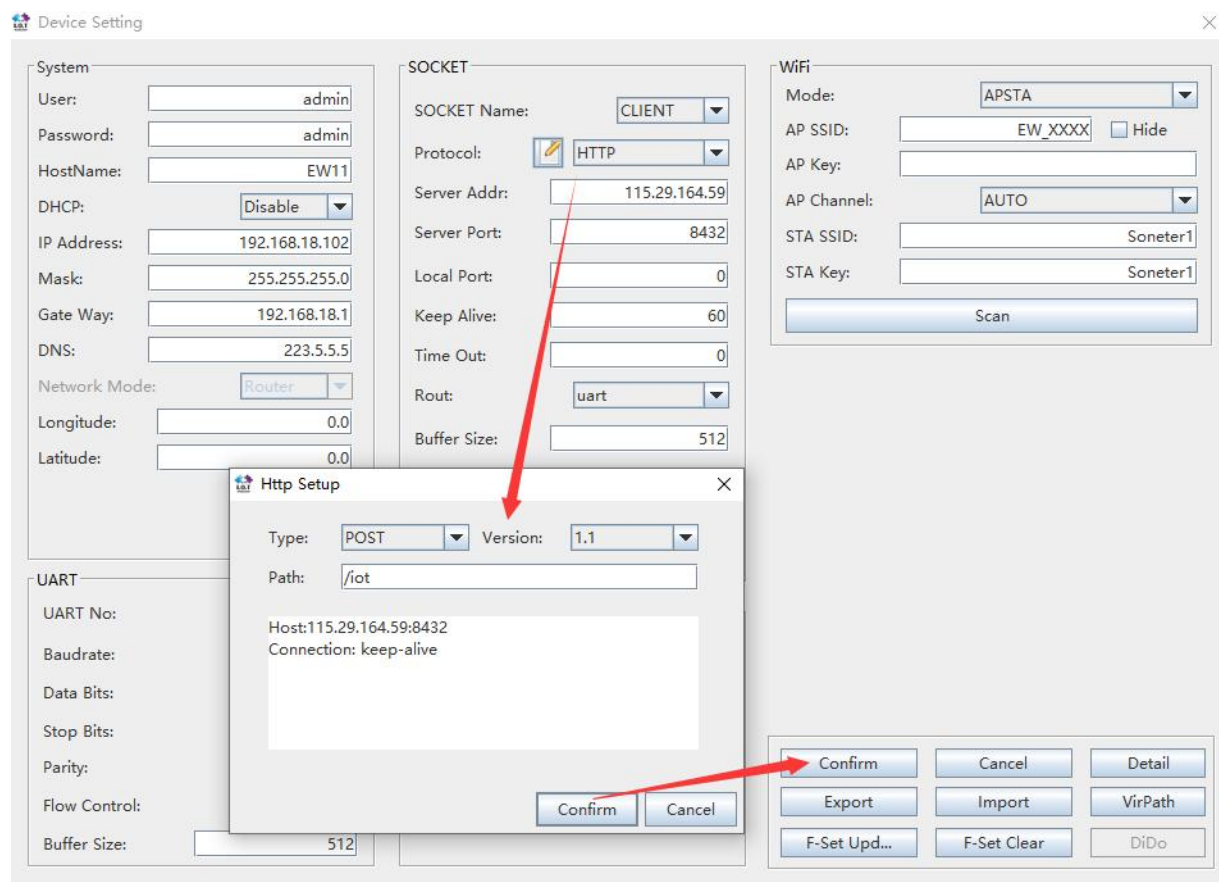

Server response back and products UART output packet. It filter the HTTP response header and only output the header.

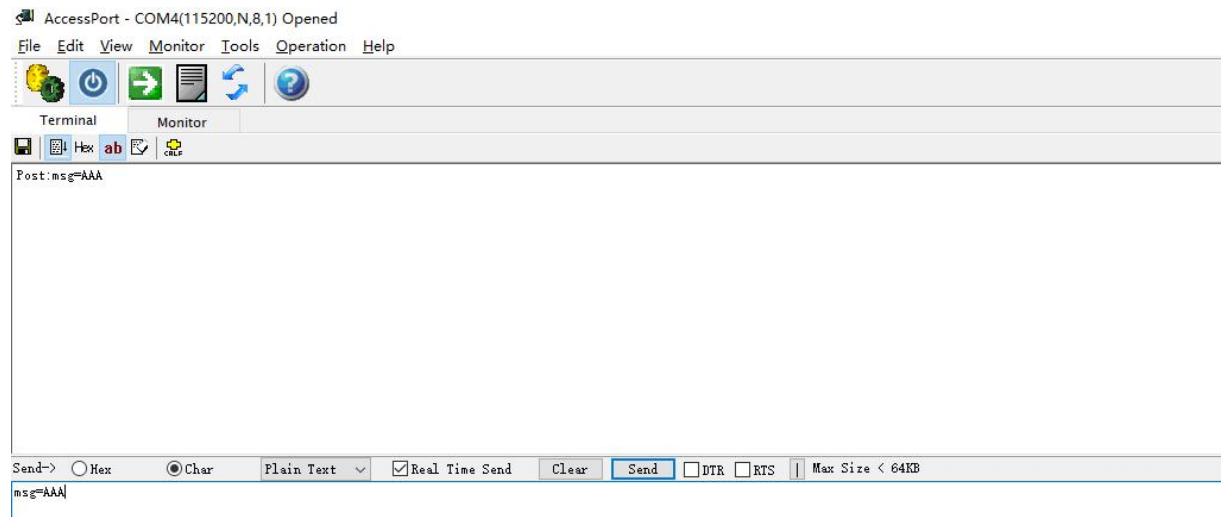

Data flow is as following.

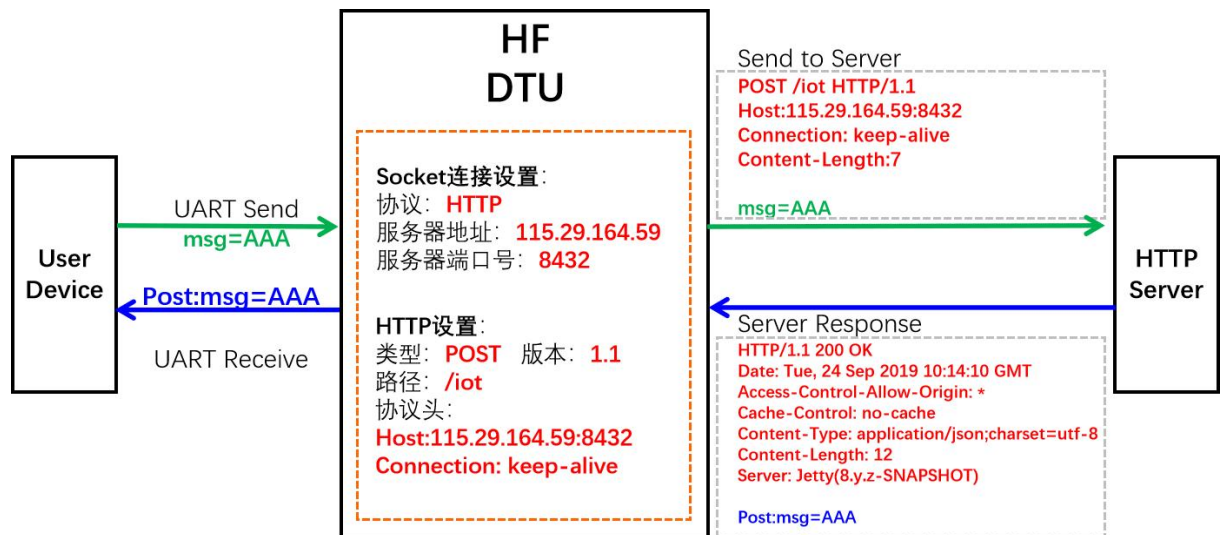


5.7. STA MQTT Client Test


Test server address: 112.124.43.15

Test server port: 1883


Device setting is as following.

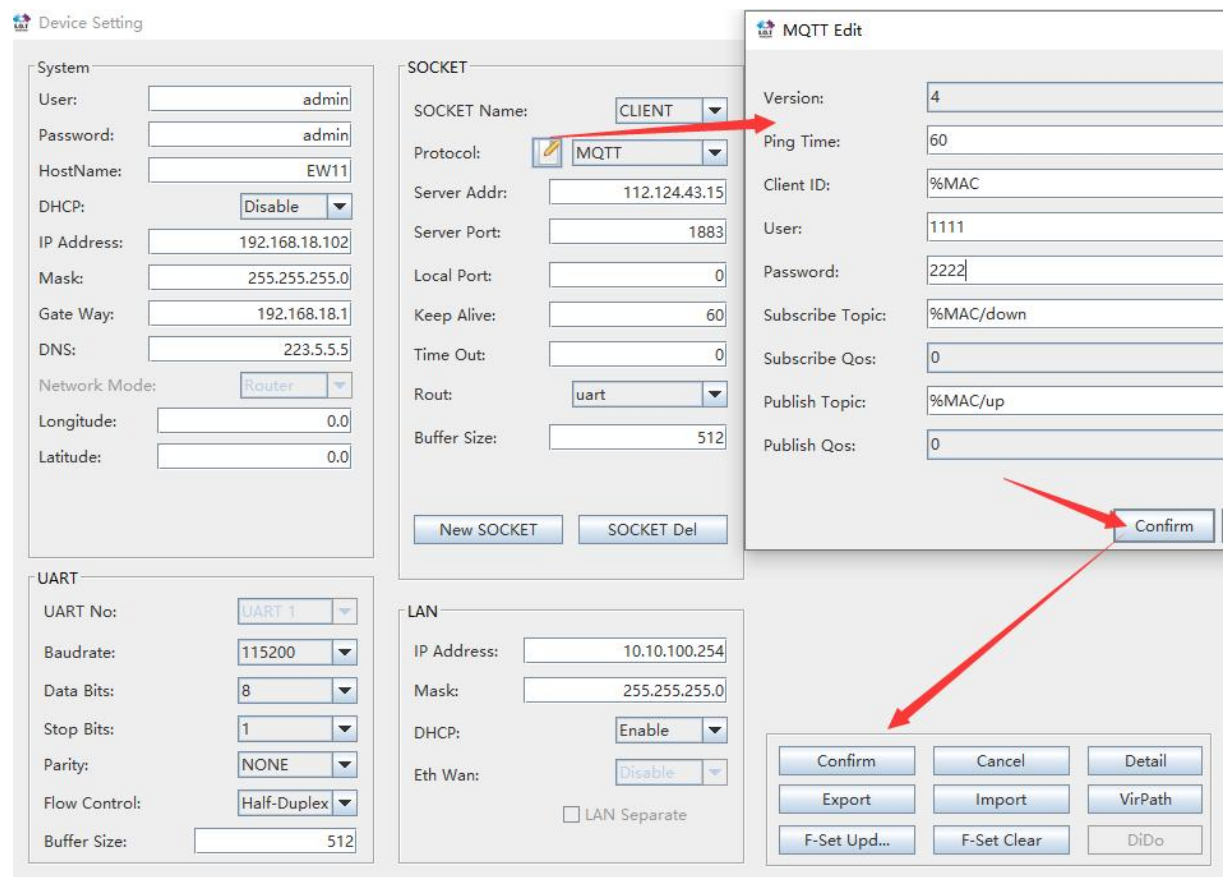

Use MQTT.fx tools to test, set publish topic to the device Subscribe Topic and the publish data will be sent to device UART.

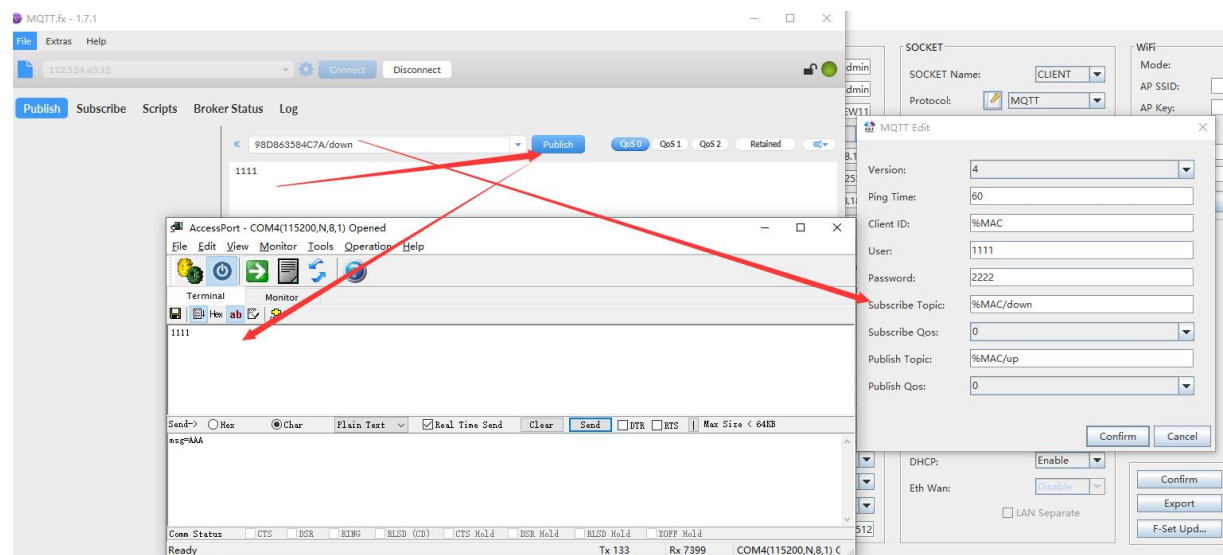

Set tools subscribe topic to the device publish topic and the send UART data, the MQTT.fx tools got the packet.

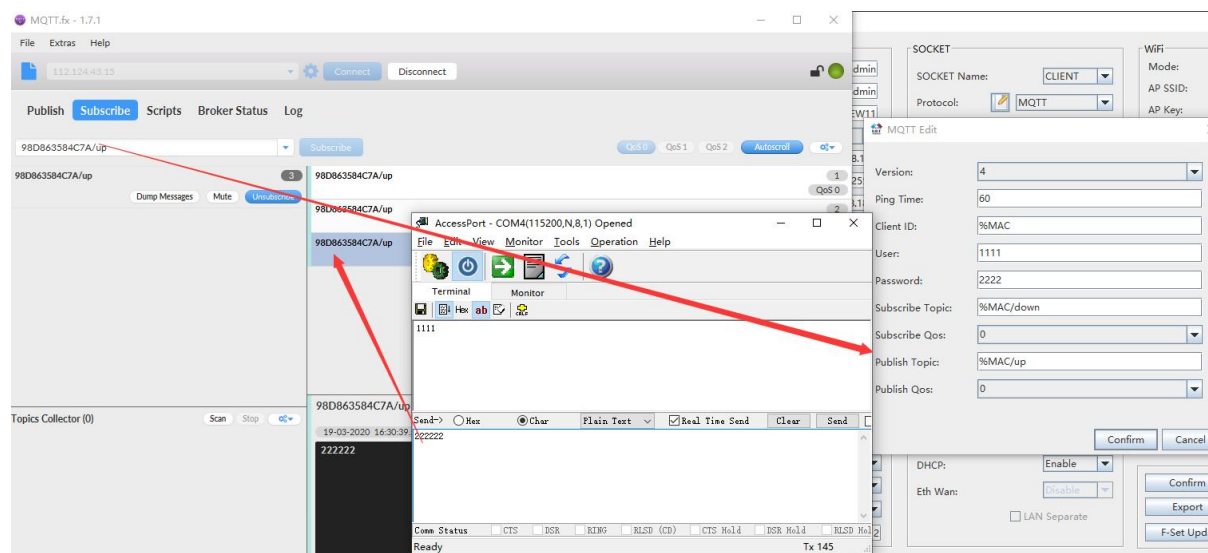


5.8. Firmware Upgrade

Firmware download address:


http://www.hi-flying.com/index.php?route=download/category&path=1_3

● Webpage Local Upgrade:

PC connect to device ,login with device IP(10.10.100.254 or STA IP got from router)

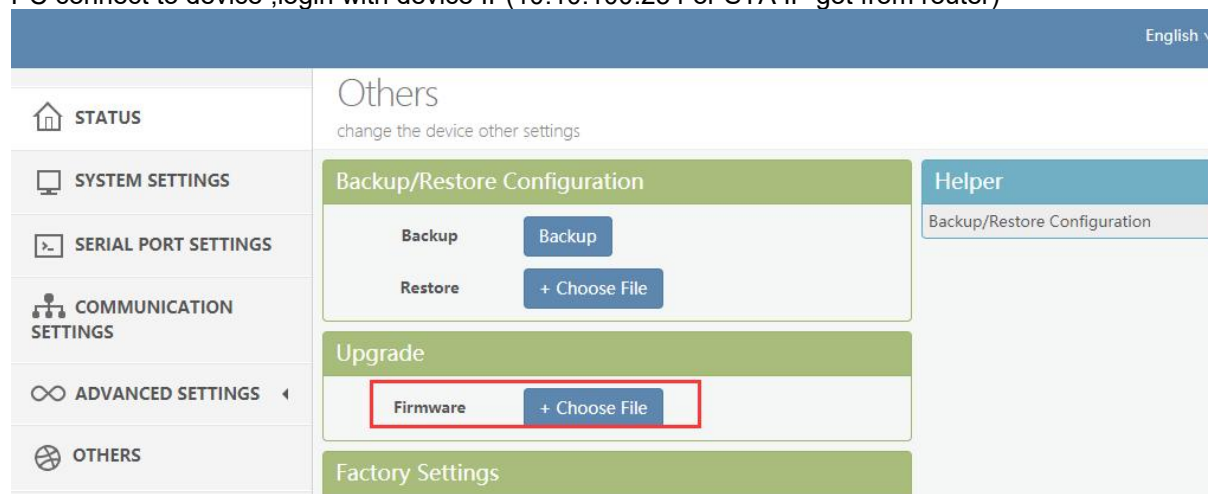

There is another internal webpage for upgrade the firmware and webpage (external config webpage as above, this source code is open at our website for customer to change). Login with IP/hide.

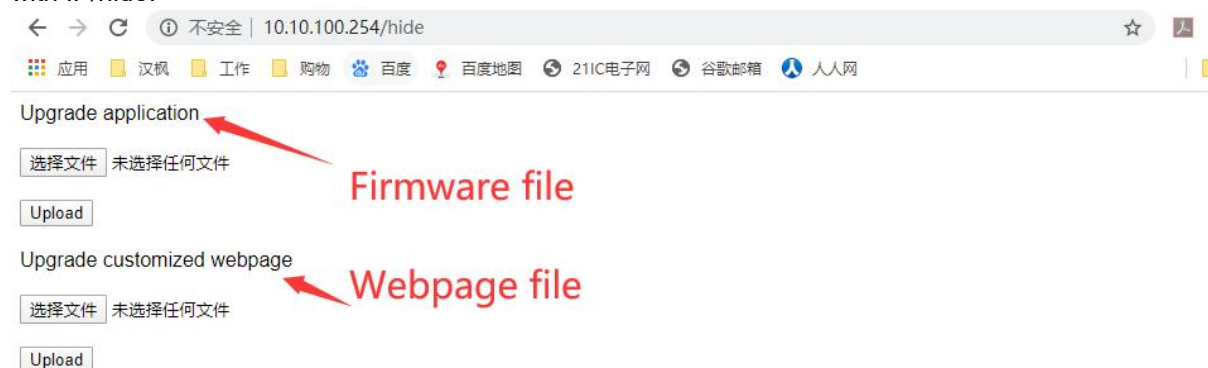

● IOTService Remote Upgrade:

Refer to IOTService doc for remote upgrade.

5.9. Restore to Factory Setting

If device works in STA mode and not yet connect to router AP, do the following operation to recover and reconfig.

- **UART Cli command to reload**



- **nReload button to restore to factory setting.**


nReload Pin (Button) function:

1. After module is powered up, short press this button (0.2s < "Low" < 1.5s) and loose to make the module go into "SmartLink" config mode, waiting for APP to set password and other information. (See Appendix to download SmartLink APP).
2. After module is powered up, long press this button ("Low" > 4s) and loose to make the module recover to factory setting.

5.10. More Application Case

See following for more.

http://www.hi-flying.com/index.php?route=download/category&path=1_7

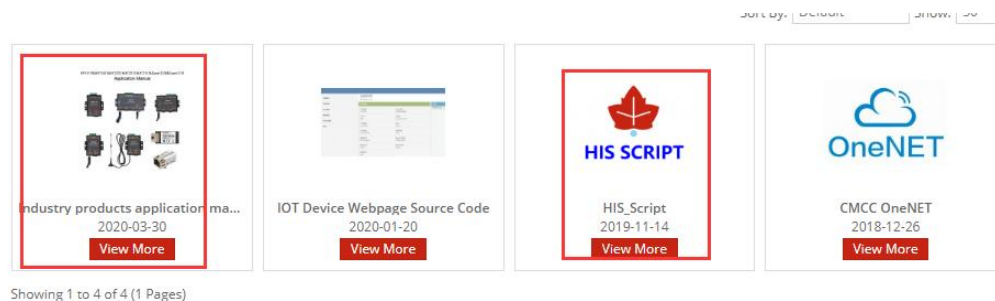

APPENDIX A:REFERENCES

A.1. IOTService Test Tools

IOTService Configure Software:

<http://www.hi-flying.com/download-center-1/applications-1/download-item-iot-service>

A.2. Smartlink V8

<http://www.hi-flying.com/download-center-1/applications-1/download-item-smartlink-v8>