

The logo for Sungrow, featuring the word "SUNGROW" in a bold, orange, sans-serif font. The letters are slightly stylized, with some internal cutouts in the 'S', 'U', 'G', 'R', and 'O'.

SUNGROW

Clean power for all

Connection & Settings Instructions for SEVEN Sensors to Sungrow Dataloggers



1.Introduction

This document is prepared for Sungrow Smart Communication Box COM100D, COM100E and Logger1000A, Logger1000B users. The steps are explained below to connect SEVEN Sensor Box to Sungrow Logger1000A 3000 & 4000.

The following meteorological data are provided by SEVEN the Sensor Box. The communication is provided via RS485 with Modbus RTU protocol.

1. 3S-IS, Solar Irradiance Sensor (W/m²)
2. 3S-MT-PT1000, Module Temperature Sensor (°C)
3. 3S-AT-PT1000, Ambient Temperature Sensor (°C)
4. 3S-WS-PLS, Wind Speed Sensor (m/s)
5. 3S-WD, Wind Direction Sensor(°)
6. 3S-RH&AT, Relative Humidity Sensor (%)

2. Cable Connections

Connect the green wire (RS485 A / Data(+)) of the output cable of the Sensor Box to COM1 (A1) port of the Logger1000A and connect the yellow wire (RS485 B / Data(-)) of the output cable of the Sensor Box to COM1 (B1) port of the Logger1000A. Another free port also can be used for connection (COM2/COM3) in the same way.

White and brown wires of the output cable of the Sensor Box power up the Sensor Box as shown in Table 1.

Brown	Power (+)
White	Power (-)
Green	RS485 A / Data (+)
Yellow	RS485 B / Data (-)

Table 1: Communication and Power Cable Color Coding



A cable with magnetic field protection must be used as communication and power cable between the sensor and datalogger. Please don't use CAT 6 cable.



SEVEN sensors are supplied with a voltage of 12-30 VDC. The recommended voltage value is 24 VDC. A high quality power supply must be used for the sensor supply. If the datalogger used has 12 or 24V output, it can be used as a power source.



SEVEN has the right to make modifications on this documentation without notice.

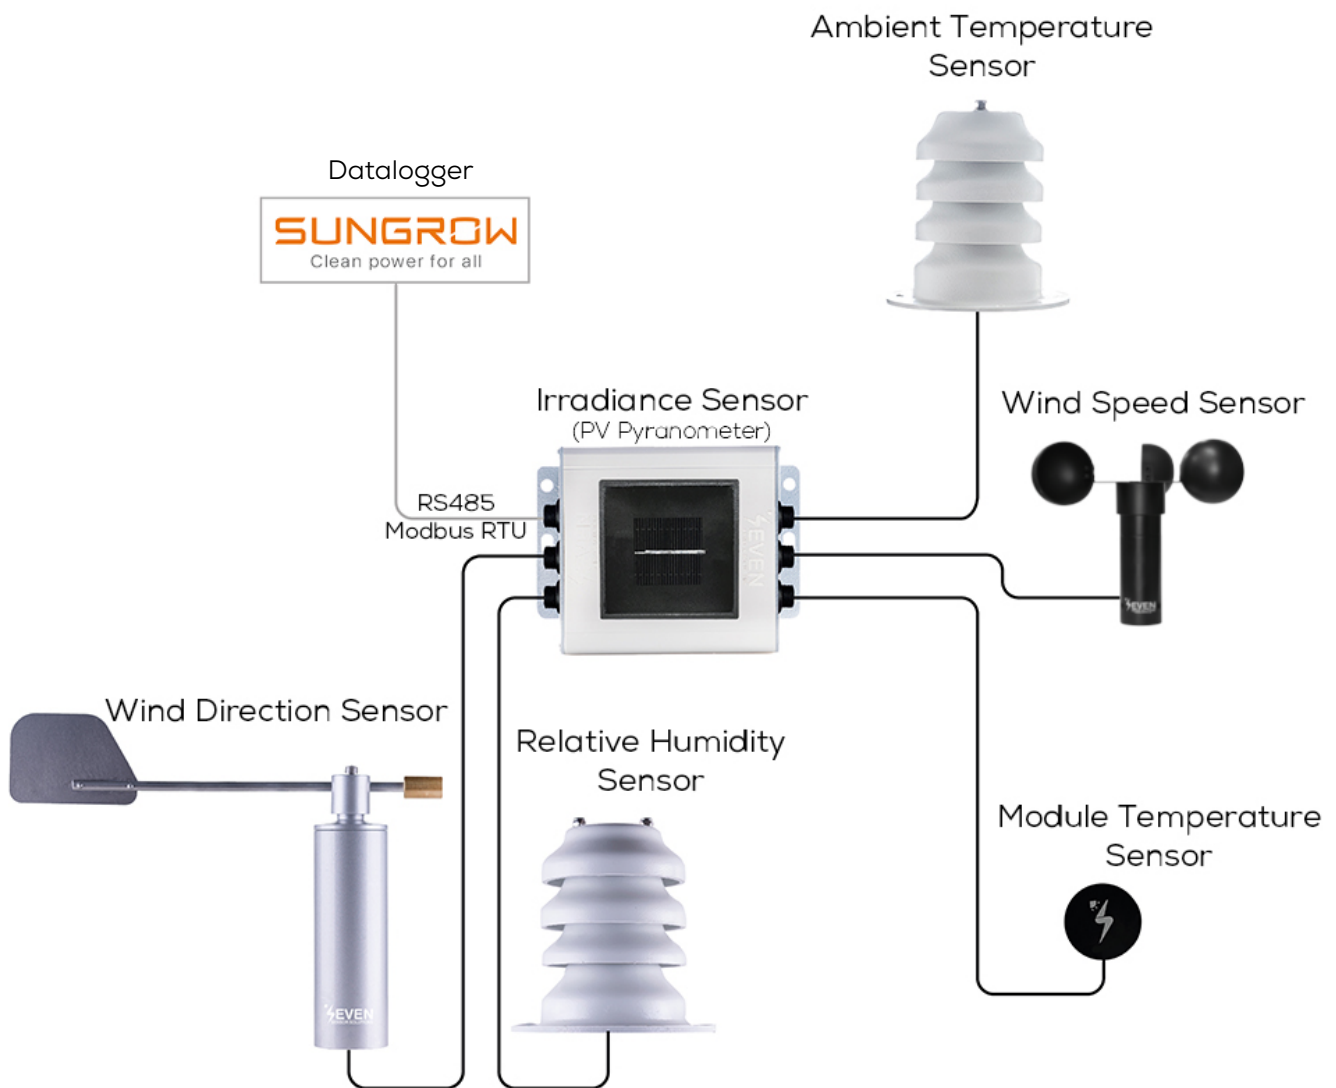


Figure 1: Sungrow Weather Station



The sensor model can be different as per the customer's request.



If your sensor model is 3S-2IS, 3S-3IS, 3S-4IS or 3S-CWS, enter each orientation's module number to the configuration tool to monitor the total effective irradiance and total effective module temperature before configuring in Sungrow Monitoring System..

3. Configuration of PC Network Parameters

The datalogger and the PC can communicate via the Ethernet cable or Wi-Fi. Corresponding configuration of network parameters is as follows.

Communication	Configuration	WEB address
(ETH) Ethernet	Set the IP address of the PC and datalogger to the same network segment. The IP address of the datalogger is 12.12.12.12. Therefore, the IP address of the PC may be set to 12.12.12.125, and the subnet mask is 255.255.255.0.	12.12.12.12
Wi-Fi	Turn on the wireless network setting of the PC. Search for the wireless network name of the internal Logger1000A and connect to it.	11.11.11.1

Table 2: PC Network Parameters



The format of the wireless network name is SG-X. "X" represents the serial number of the Logger1000A and can be obtained from the outer surface of the Logger1000A which is installed inside the main box. Wireless network can be connected without password.

4. Settings

Step 1 and 2 : Enter the IP address (11.11.11.1) of the datalogger in the web browser address bar to access user interface. Click on the button "**Login**" in the upper right corner.

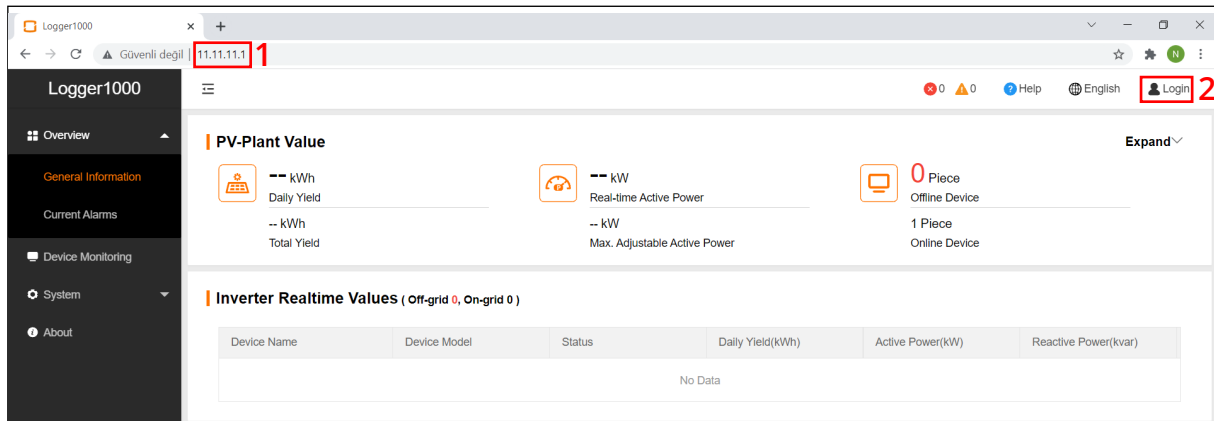


Figure 2: Logger1000 User Interface

Step 3 : Enter the password, and click on **"Login"** button. (Factory default password is pw1111).

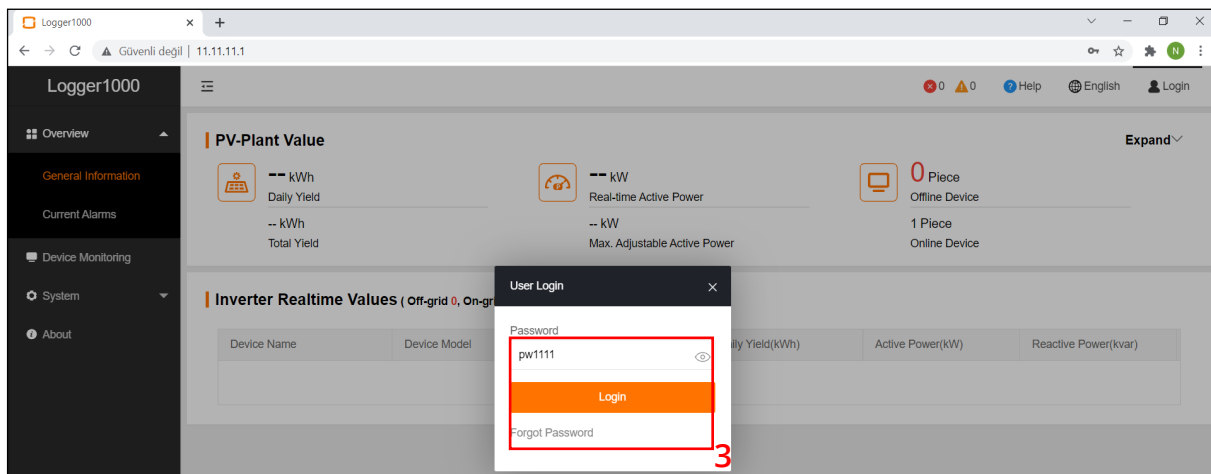


Figure 3: Logger1000 user login screen

SEVEN Sensor Box will not be detected automatically. Settings shall be done manually. Follow the steps below to add SEVEN Sensor Box, after logging into the O&M user interface:

Step 4 and 5 : Click on **"Device List"** in the menu **"Device"**.

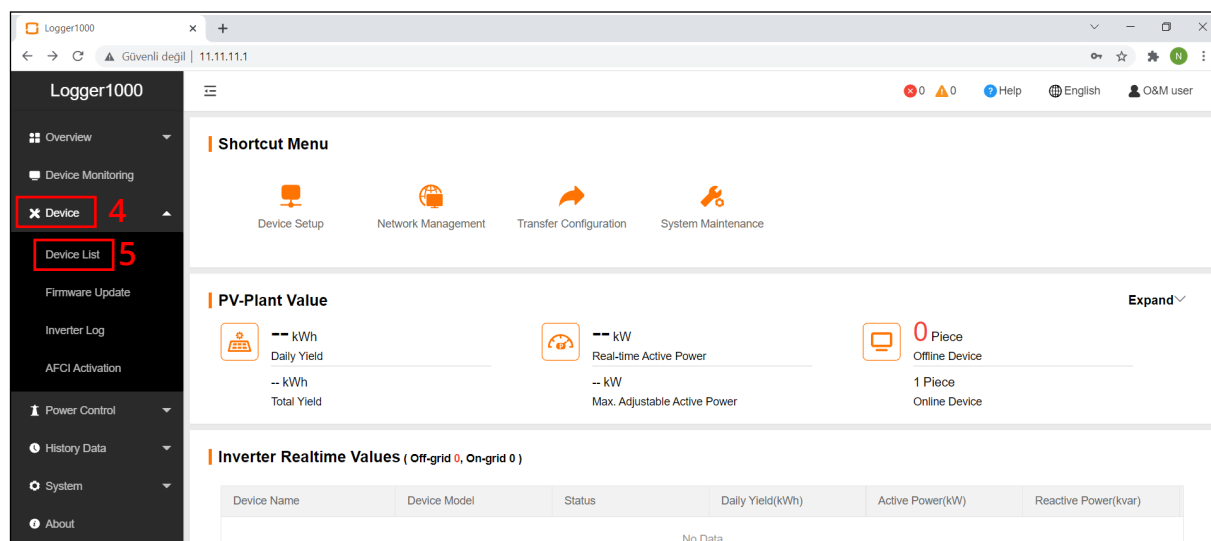


Figure 4: User Interface

Step 6 : Click on "Add Device".

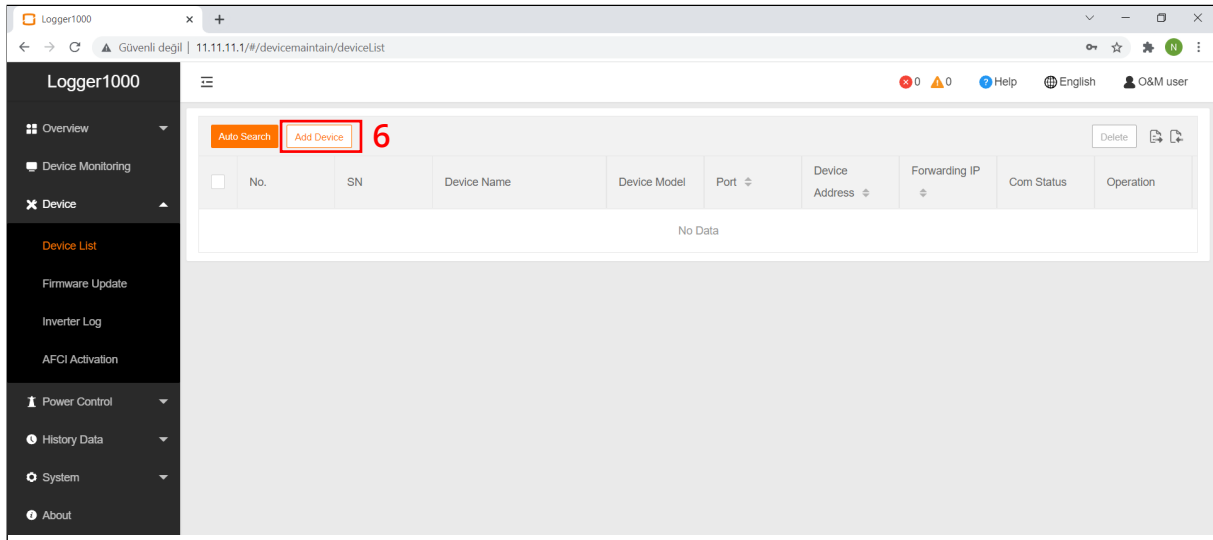


Figure 5: Device List

Step 7 : Make the following definitions in the opened window.

- *Device : Meteo Station*
- *Port : COM 1 (or another port which the sensor is connected).*
- *Device Model : Others*
- *Configuration Method : Custom*



In case more than one device is connected to the port you have connected the sensor to, device ID's must be different while baudrate and parity values must be some. You can change the device ID via SEVEN configuration tool.

Step 8 : Then click on "Next" button.

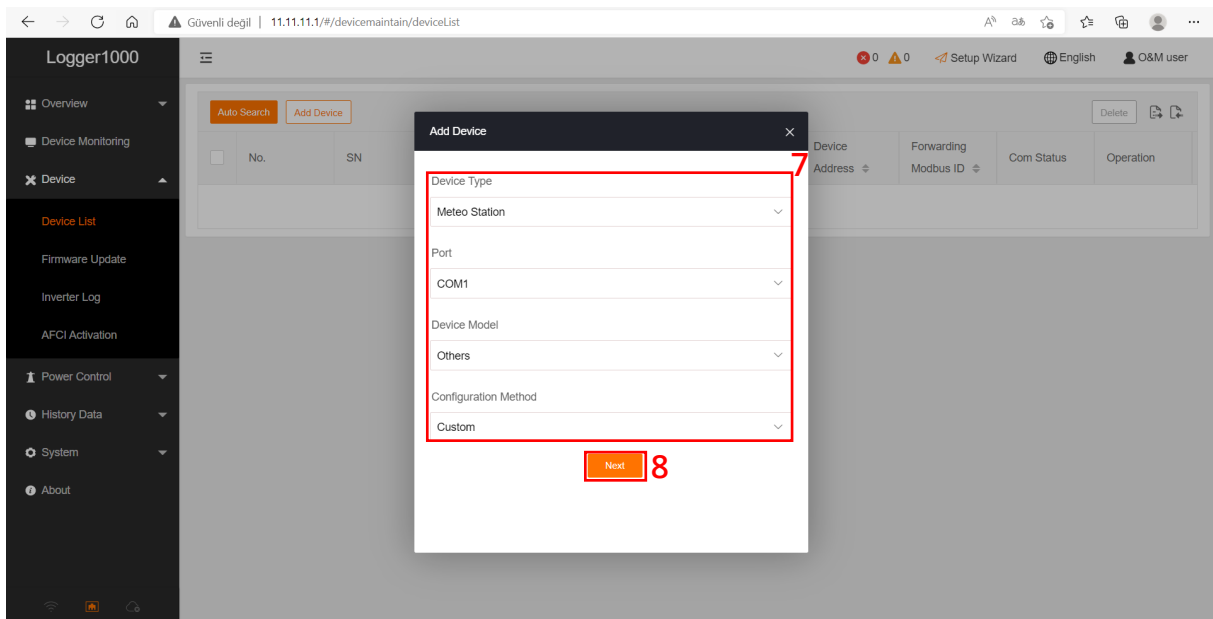


Figure 6: Seven Sensor Box Settings

Step 9,10 and 11 : Choose the sensors which data will be followed and make definitions of sensors.

Step 12 : Click on **"Confirm"** button.

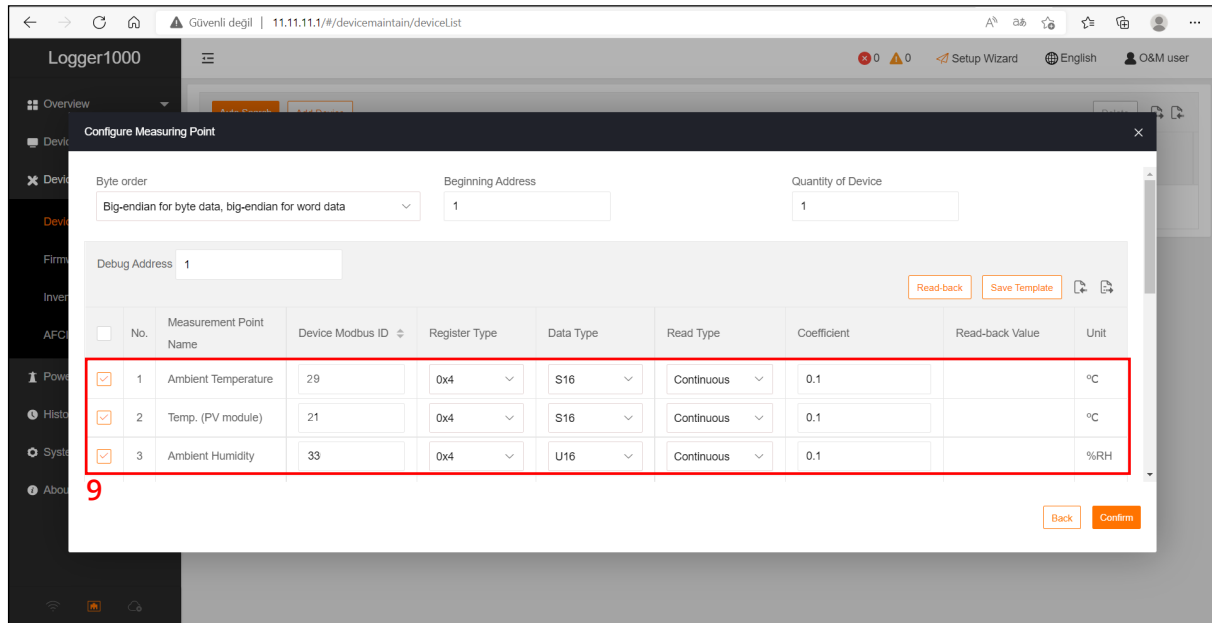


Figure 7: Logger1000 Sensor Configuration Tool


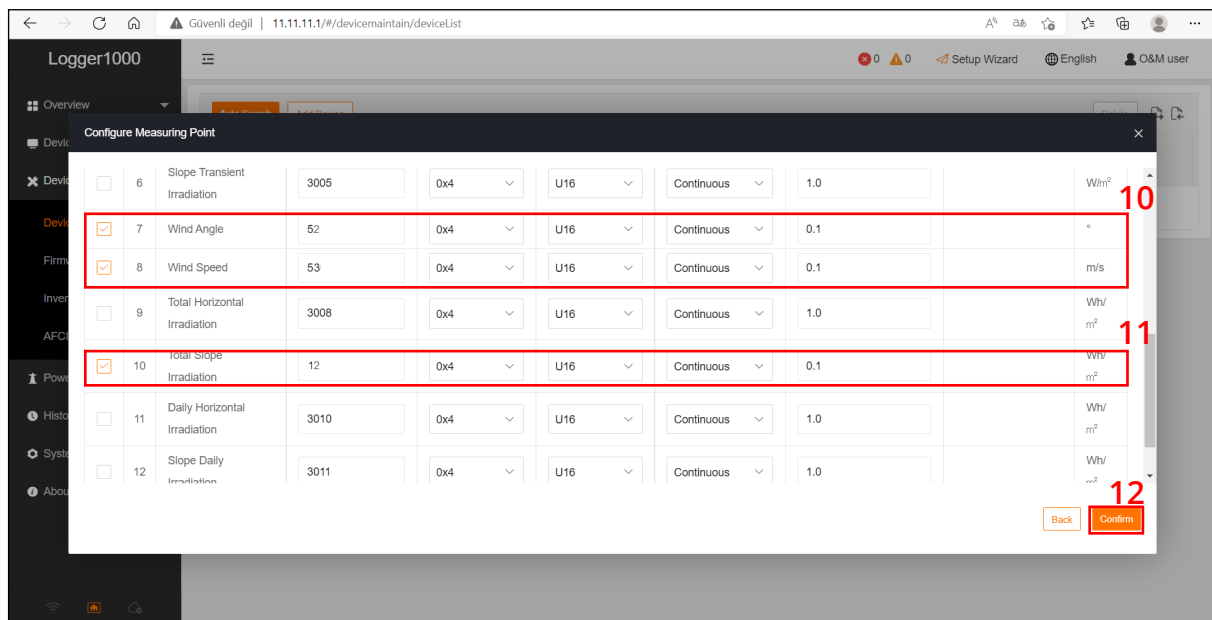


Figure 8: Logger1000 Sensor Configuration Screen

*The register addresses can be different as per the software version of the sensor.

Step 13 and 14 : After completing all settings, the meteorological data will be shown in the “**Device Monitoring**” page.

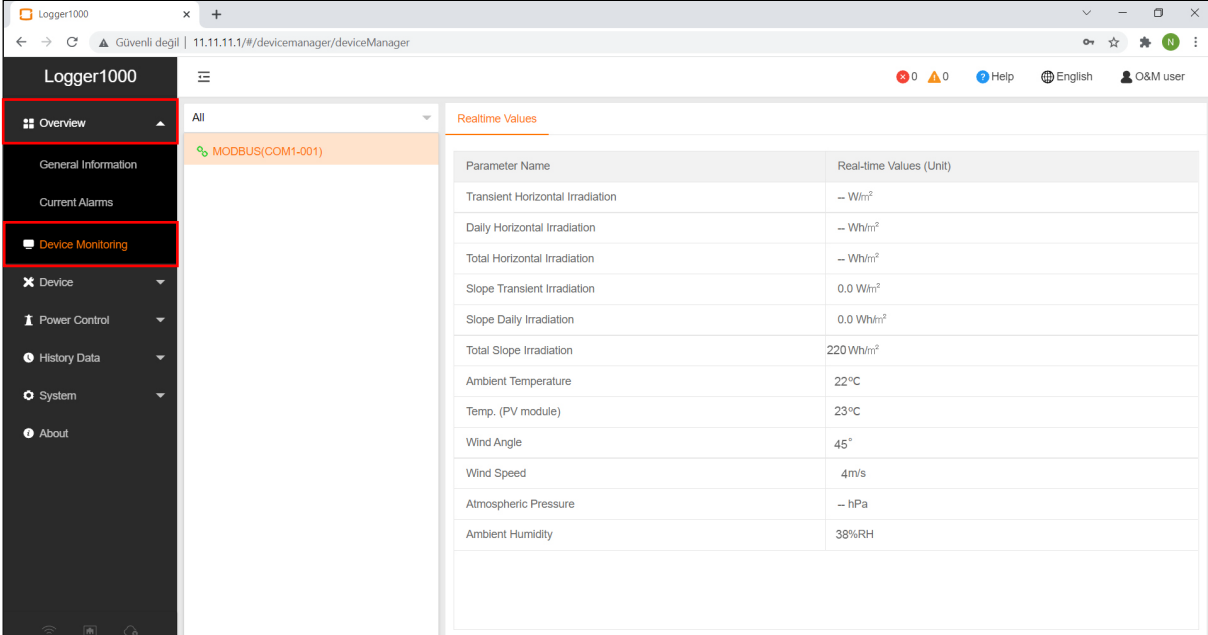

The screenshot shows the Logger1000 web interface. The left sidebar contains a menu with 'Overview' (13) and 'Device Monitoring' (14) highlighted. The main area displays a table of real-time values for various parameters.

Parameter Name	Real-time Values (Unit)
Transient Horizontal Irradiation	-- W/m ²
Daily Horizontal Irradiation	-- Wh/m ²
Total Horizontal Irradiation	-- Wh/m ²
Slope Transient Irradiation	0.0 W/m ²
Slope Daily Irradiation	0.0 Wh/m ²
Total Slope Irradiation	220 Wh/m ²
Ambient Temperature	22°C
Temp. (PV module)	23°C
Wind Angle	45°
Wind Speed	4m/s
Atmospheric Pressure	-- hPa
Ambient Humidity	38%RH

Figure 9: Device Monitoring

Modbus RTU Specifications

Supported Bus Protocol

BaudRate: 3800, 9600, 19200, 38400

Parity: None, Even, Odd

Stop Bit: 1, 2 (only at no parity)

Factory Default: 9600 Baud, 8N1, Address: 1

Transmission mode: MODBUS RTU

Supported function codes: 0x04: Read Input Register

Register Map:

The following Modbus data can be read individually or in blocks.

ID-Dec.	ID-Hex	Value	Data Type
53	0x35	Wind Speed, 0...6000, 1/100 m/s	US
12	0x0C	Temperature Compensated Irradiance Value, 0...1600 in 0.1 W/m ²	US
15	0x0F	Cell Temperature, -400 ... +850 [range -40 ... +85°C] in 0.1°C	S
21	0x1D	External Temperature 1, -400 ... +850 [range -40 ... +85°C] in 0.1°C	S
29	0x15	External Temperature 2, -400 ... +850 [range -40 ... +85°C] in 0.1°C	S
33	0x21	Relative Humidity, 0...100 [%] in 1%	US
52	0x34	Wind Direction, 0...359 in 1°	US

Table 2: Modbus Map*

*This Modbus Map is valid for Software 8 and newer versions.

Contact Information:

Please feel free to contact our technical team if you face any difficulties during setting.

Can GÜNDÜZ

Cep: +90 530 425 33 19

E-mail: teknik@sevensensor.com