

Building your own system
based on the open and free
64-bit “Microwatt”
OpenPOWER ISA processor.

H. Peter Hofstee

Paul Mackerras

Goal for Today's Session

- Provide you with an easy to follow set of instructions on how to build your own MicroWatt based linux system on the Arty A7-100T FPGA
- All instructions (and a recording of this session) are available at

<https://github.com/hofstee-hp/>

MicroWatt Summary

Tiny in-order single issue powerpc core

<https://github.com/antonblanchard/microwatt>

<https://youtu.be/uEAoMCE6IKo>


Power ISA compliant

<https://openpowerfoundation.org/>

<https://youtu.be/CnMwCrtz6MA>

Small enough to fit on a small FPGA and be used as a microcontroller,
but capable enough to run linux!

Arty A7-100T

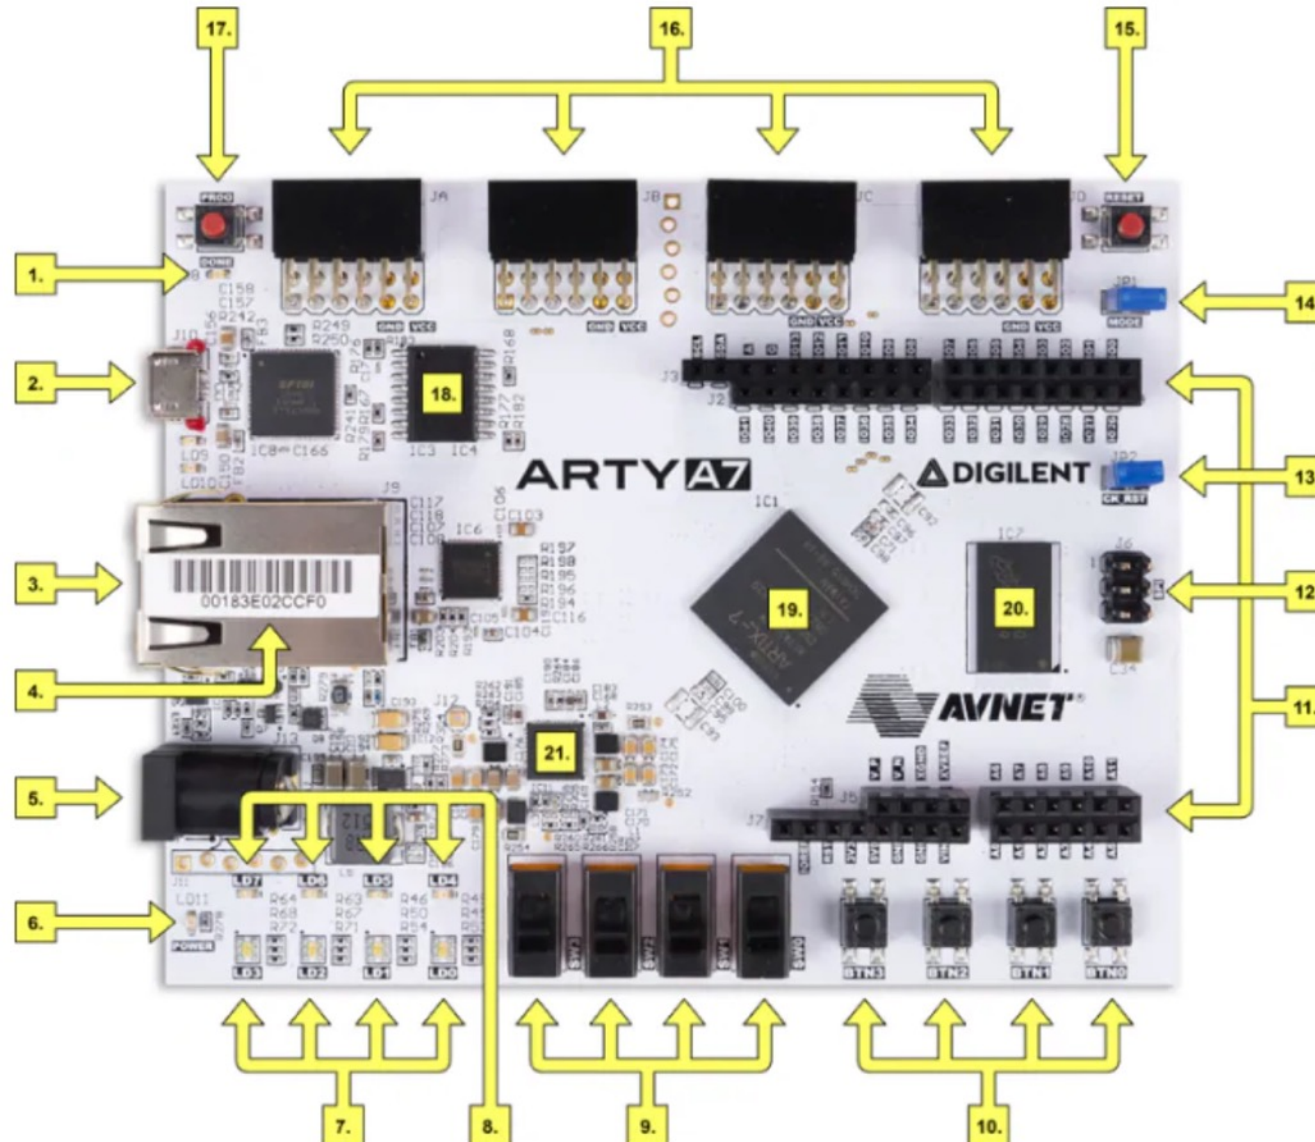

Callout	Description
1	FPGA programming <u>DONE</u> LED
2	Shared USB JTAG / UART port
3	Ethernet connector
4	MAC address sticker
5	Power jack for optional external supply
6	Power good <u>LED</u>
7	User LEDs
8	User RGB LEDs
9	User slide switches
10	User push buttons
11	Arduino/chipKIT shield connectors
12	Arduino/chipKIT shield SPI connector
13	chipKIT processor reset jumper
14	FPGA programming mode
15	chipKIT processor reset
16	Pmod connectors
17	FPGA programming reset button
18	SPI flash memory
19	Artix FPGA
20	Micron DDR3 memory
21	Dialog Semiconductor DA9062 power supply

What this project depends on

- Ubuntu 22.04.4 system (x86-64 connected to network)
 - Recommend at least 8GB RAM and 100GB storage
 - Tested w. 16GB / 1TB storage (but less than 100GB storage used)
 - Instructions assume only a minimal install
 - Only thing needed if you want to simulate MicroWatt
- Vivado 2024.1
 - Installed for CDAC VMs, install instructions included if you have your own Ubuntu 22.04.4 system
- Arty A7-100T

Dependencies

```
$ sudo apt-get update  
$ sudo apt-get upgrade  
$ sudo apt-get install build-essential git ghdl-common ghdl ghdl-llvm gnat  
$ sudo apt-get install binutils-powerpc64le* gcc-powerpc64le-* g++-powerpc64le-*
```

The `build-essential` package typically includes:

1. *GNU Compiler Collection (GCC)*: The essential compiler for C, C++, and other programming languages.
2. *GNU Make*: A build automation tool that manages the build process of a project.
3. *libc6-dev*: Development libraries and header files for the C library.
4. *dpkg-dev*: Tools for building Debian source packages.
5. *GNU Binutils*: A collection of binary tools, including the linker and assembler.

Dependencies (cont.)

```
$ sudo apt-get update  
$ sudo apt-get upgrade  
$ sudo apt-get install build-essential git ghdl-common ghdl ghdl-llvm gnat  
$ sudo apt-get install binutils-powerpc64le* gcc-powerpc64le-* g++-powerpc64le-*
```

GHDL is an open-source simulator for the VHDL language. GHDL allows you to compile and execute your VHDL code directly in your PC.

GHDL fully supports the 1987, 1993, 2002 versions of the IEEE 1076 VHDL standard, and partially the latest 2008 revision (well enough to support `fixed_generic_pkg` or `float_generic_pkg`).

By using a code generator ([llvm](#), [GCC](#) or a builtin one), GHDL is much faster than any interpreted simulator. GHDL runs on Linux, Windows and Apple OS X. You can freely download a binary distribution for your OS or try to compile GHDL on your own machine.


Go to [GitHub](#) to get releases or to get the sources!

© 2017 - [Tristan Gingold](#)

gnat is the GNU Ada compiler

Dependencies (cont.)

```
$ sudo apt-get update  
$ sudo apt-get upgrade  
$ sudo apt-get install build-essential git ghd1-common ghd1 ghd1-llvm gnat  
$ sudo apt-get install binutils-powerpc64le* gcc-powerpc64le-* g++-powerpc64le-*
```

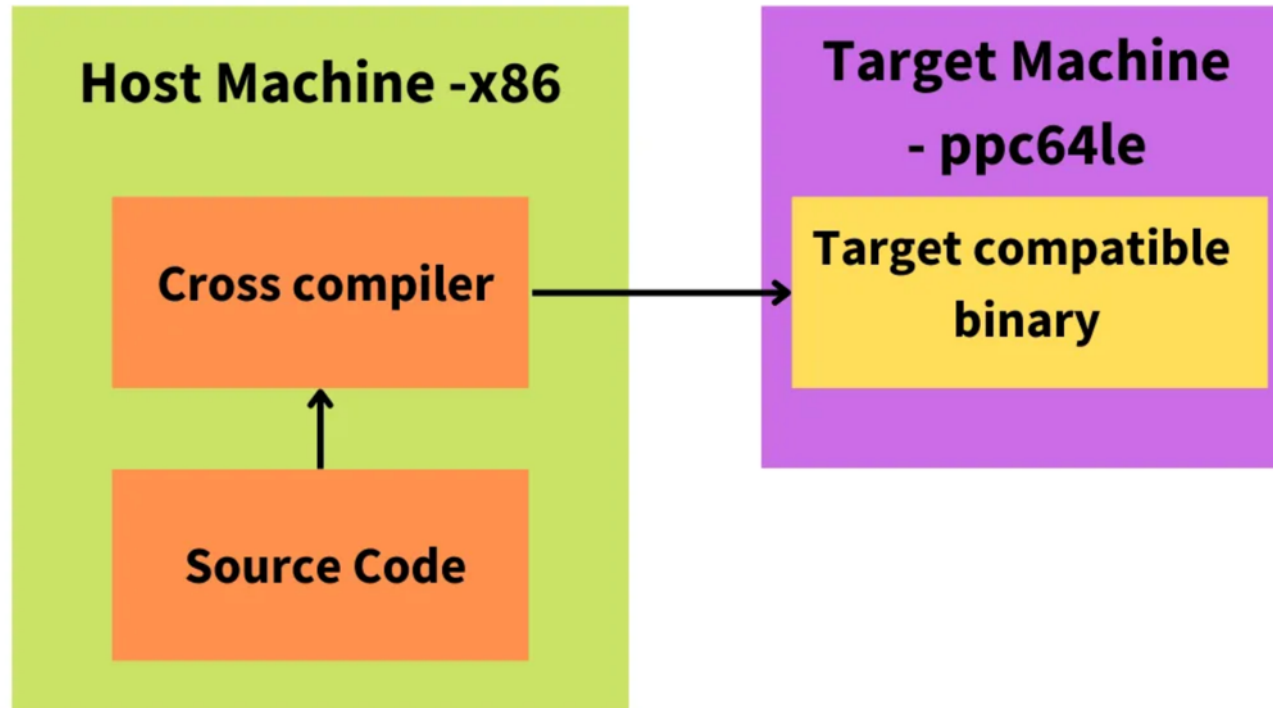


Cross compiler operation

Building Micropython

```
$ cd ~  
$ git clone https://github.com/micropython/micropython.git  
$ cd ~/micropython  
$ cd ports/powerpc  
$ make
```

The MicroPython project

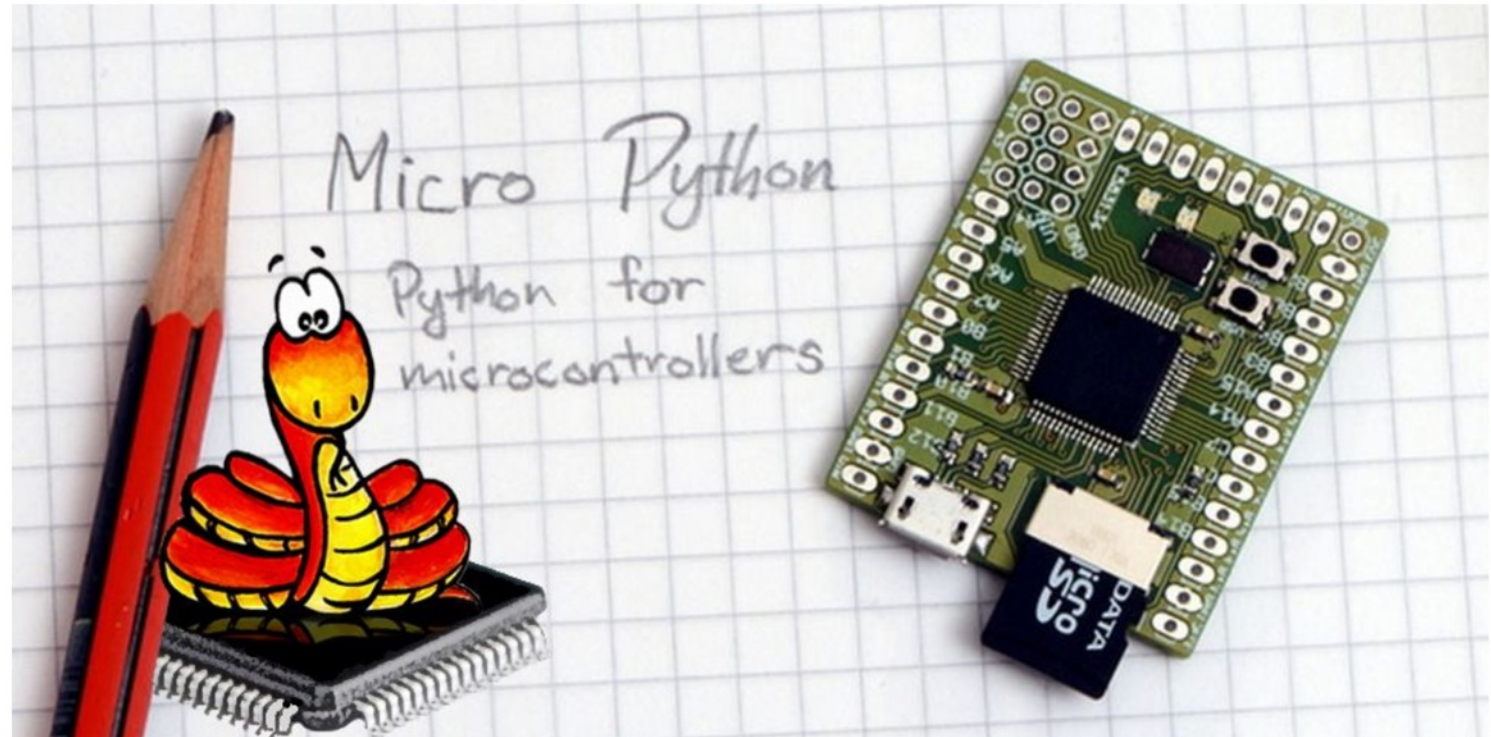

This is the MicroPython project, which aims to put an implementation of Python 3.x on microcontrollers and small embedded systems. You can find the official website at micropython.org.

Building MicroWatt and Compiling MicroPython w. GHDL

```
$ cd ~
```

```
$ git clone https://github.com/antonblanchard/microwatt
```


```
$ cd ~/microwatt
```

```
$ make
```

Top-level source is **core_tb.vhd**

UNDER CONSTRUCTION

High-Level SoC Structure

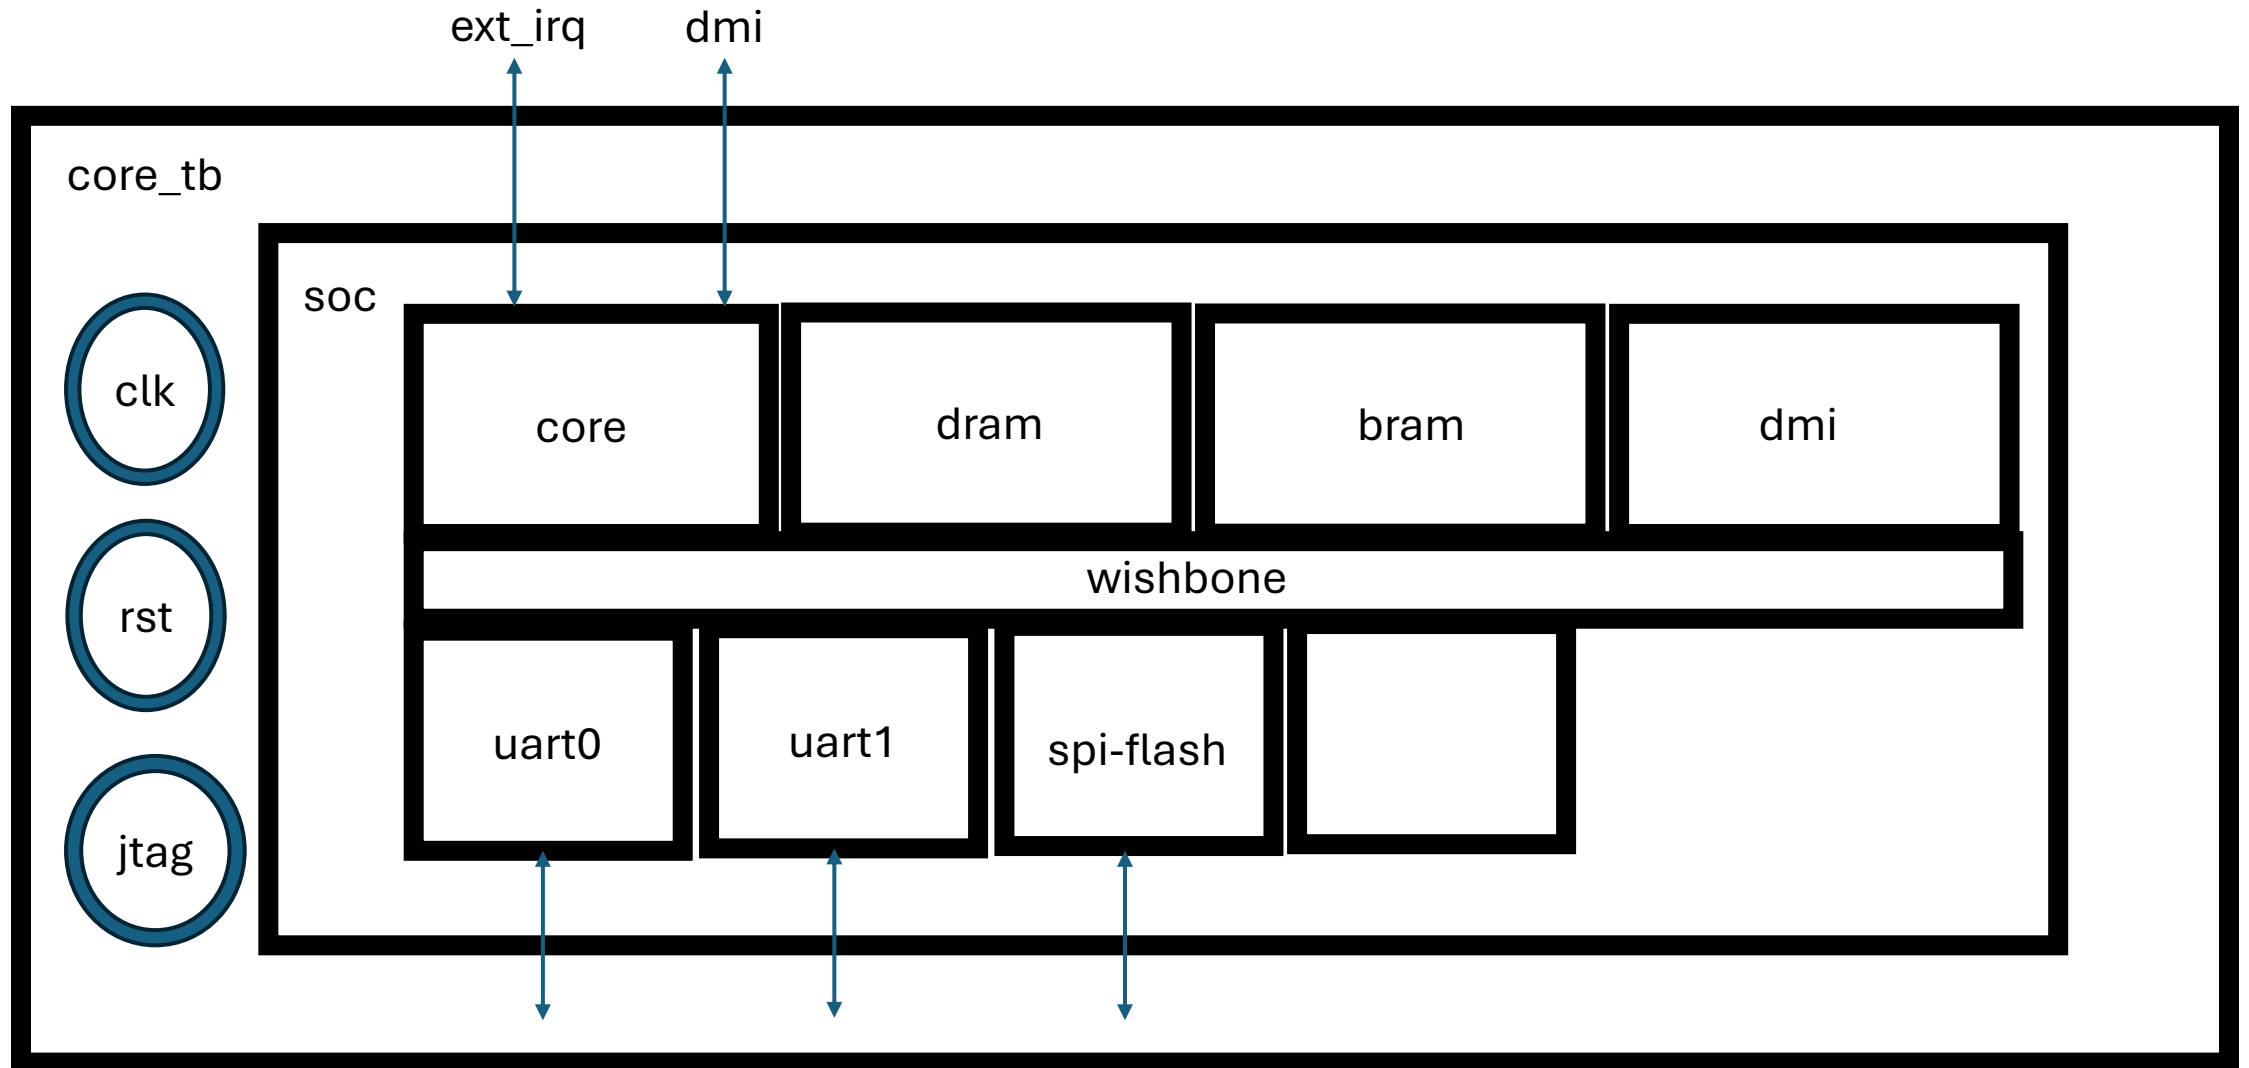

Running GHDL-compiled MicroWatt



Building BuildRoot / Linux Kernel

- The default linux kernel for ppc64le has a dependency on library functions that use instructions that operate on the 128b VMX registers, and these instructions are not included in the subset that MicroWatt (currently) implements, hence a special build is required
- Detailed steps on how to build the kernel are included on the github page
- It is not difficult to do, but it takes a long time
- Instead you can download a pre-built kernel from google drive


Installing Vivado 24.01

- This project has been tested with Vivado 24.01
 - Older versions may also work
- Vivado is pre-installed in the CDAC build environment
 - You do not have to install Vivado yourself
 - If you prefer to use your own system to run Vivado, detailed instructions can be found on the github page

FuseSoC

FuseSoC is an award-winning package manager and a set of build tools for HDL (Hardware Description Language) code.

Its main purpose is to increase reuse of IP (Intellectual Property) cores and be an aid for creating, building and simulating SoC solutions.

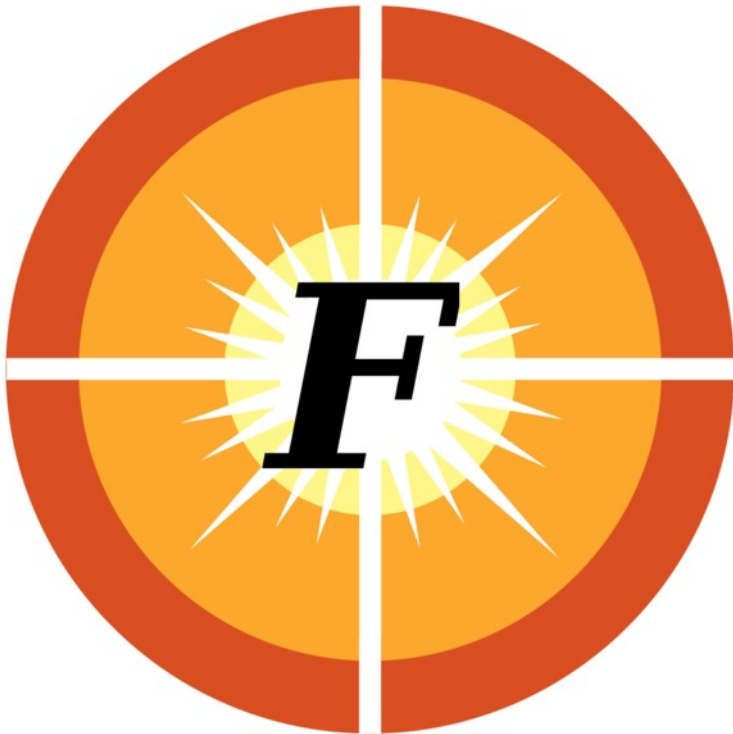

FuseSoC makes it easier to

- › reuse existing cores
- › create compile-time or run-time configurations
- › run regression tests against multiple simulators
- › Port designs to new targets
- › let other projects use your code
- › set up continuous integration

<https://github.com/fusesoc/fusesoc.github.io>

Install FuseSoC

```
$ cd ~  
$ sudo ln -s /usr/bin/python3 /usr/local/bin/python  
$ sudo apt-get install -y python3-pip  
$ pip3 install --user -U fusesoc  
$ export PATH=$PATH:~/.local/bin
```


Building the MicroWatt Bitfile

```
----- Update paths  
$ cd <Xilinx install dir>/Xilinx/Vivado/2024.1  
$ source settings64.sh
```

Import the required elements and build the bitfile for the MicroWatt on Arty

```
$ fusesoc library add microwatt microwatt  
$ fusesoc fetch uart16550  
$ fusesoc run --build --target=arty_a7-100 microwatt --no_bram --memory_size=0  
$ cp build/microwatt_0/arty_a7-100-vivado/microwatt_0.bit ~/arty
```

Tools Needed to Program and Run Microwatt

```
----- If you are installing on a system that has the board attached  
$ sudo apt-get install openocd  
$ sudo apt-get install putty  
$ sudo apt-get install gtkterm  
$ cd <Xilinx install dir>/Xilinx/Vivado/2024.1/data/xicom/cable_drivers/  
$ cd lin64/install_scripts/install_drivers  
$ ./install_drivers  
$ sudo adduser $USER dialout
```

And Finally ... Run Linux on MicroWatt

- Get the linux buildroot elf file if you did not build it yourself, the second "gdown" command allows you to get the bitfile if you did not build it yourself

```
$ pip3 install gdown
$ cd ~/arty
$ gdown https://drive.google.com/uc?id=1JRmkKseXCFwHaXCmdC5NrvXIwwQXpkey
$ gdown https://drive.google.com/uc?id=1v7KqhiqnXxnyWRlK-5k4L4S6MJzLmkW3
```



This next operation will overwrite the contents of the flash on the Arty board .

```
$ cd ~/arty
$ ~/microwatt/openocd/flash-arty -f a100 microwatt_0.bit
$ ~/microwatt/openocd/flash-arty -f a100 dtbImage.microwatt.elf -t bin -a 0x400000
```



See it boot!

Connect to the second USB TTY device exposed by the FPGA


```
$ gterm -p /dev/ttyUSB1
```




Run Linux



Pictures

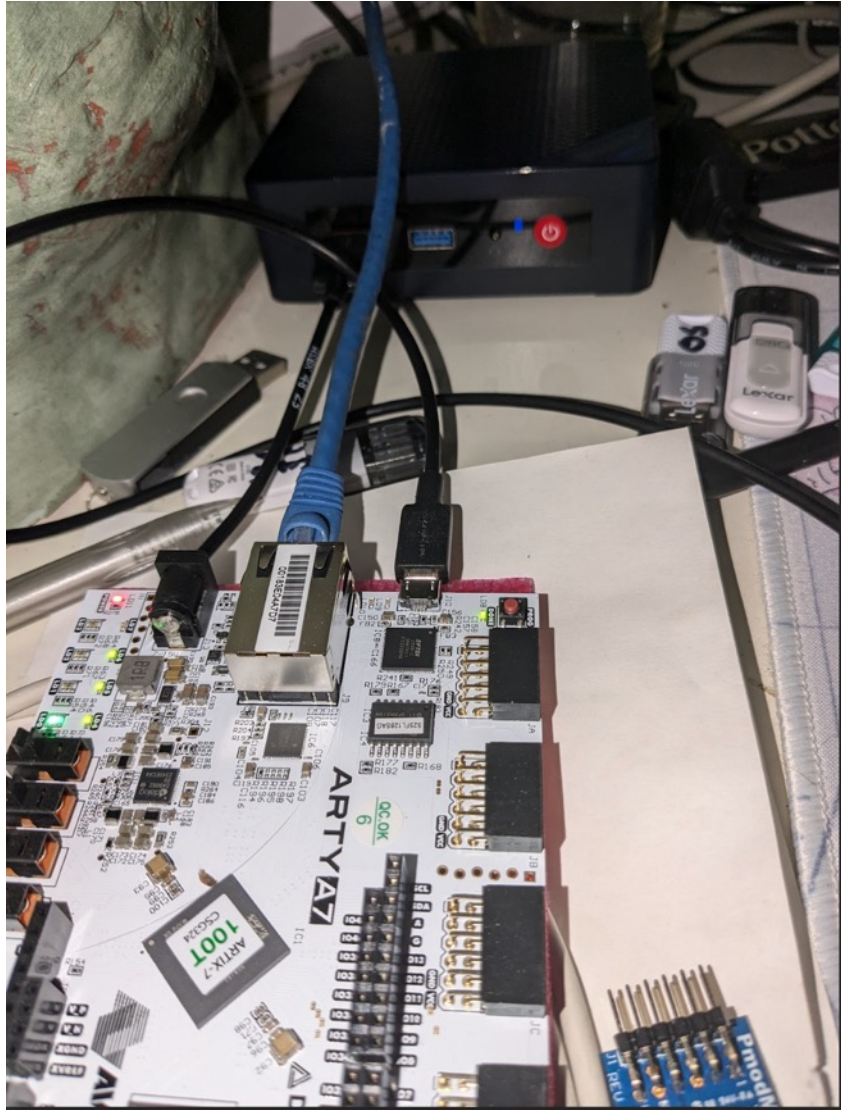

No power cable ... board is powered through USB

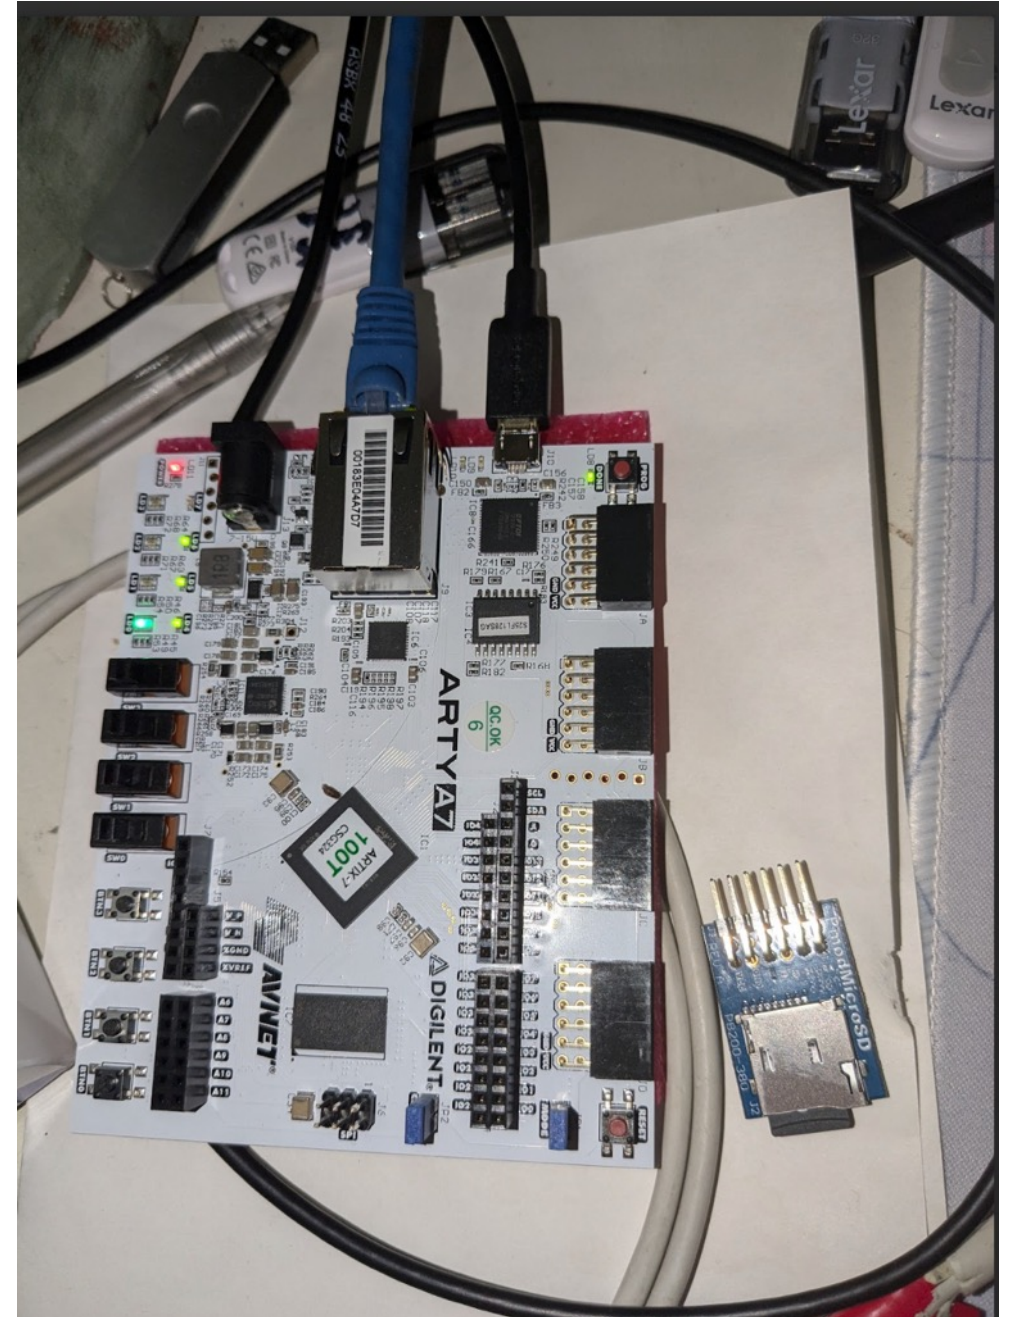

Using Arty as an Edge Device

If you want to use Arty in an edge type environment, you will likely want to enable remote access over the Ethernet. To do this you'll need to connect your Arty to an Ethernet router.

In your gtkterm terminal after the system boots you should see



```
Welcome to Buildroot
microwatt login: ( enter "root" – without quotes )
# passwd root
# udhcpc -i eth0
```

If you look at the output while Linux is booting you'll see the IP address (lease obtained for ...)
Connect to Arty from a network connected device

ssh [root@x.y.z.u](ssh://root@x.y.z.u)

Using Arty as an Edge Device

```
0.491552] serial0250.0: tty at MMIO 0xc0002000 irq = 16, base baud = 6250000, tx & rx enabled
0.511036] printk: legacy console [tty50] enabled
0.511036] printk: legacy console [tty50] enabled
0.520946] printk: legacy bootconsole [udbg0] disabled
0.520946] printk: legacy bootconsole [udbg0] disabled
0.565615] printk: legacy console [tty50] disabled
0.585272] printk: legacy console [tty50] enabled
0.796974] brd: module loaded
0.910622] loop: module loaded
0.934422] liteeth c8021000.ethernet eth0: irq 17 slots: tx 2 rx 2 size 2048
0.956646] NET: Registered PF_INET6 protocol family
0.973388] litex-mmc c8042800.mmc: can't get voltage, defaulting to 3.3V
1.010268] Segment Routing with IPv6
1.021684] In-situ OAM (IOAM) with IPv6
1.026801] sit: IPv6, IPv4 and MPLS over IPv4 tunneling driver
1.033195] litex-mmc c8042800.mmc: LiteX MMC controller initialized.
1.057996] NET: Registered PF_PACKET protocol family
1.331732] clk: Disabling unused clocks
1.663709] Freeing unused kernel image (initmem) memory: 6276K
1.679983] Run /init as init process

Starting syslogd: OK
Starting klogd: OK
Running sysctl: OK
Saving random seed: [ 5.880758] random: crng init done
OK
Starting network: udhcpc: started, v1.35.0
udhcpc: broadcasting discover
udhcpc: broadcasting select for 192.168.1.72, server 192.168.1.254
udhcpc: lease of 192.168.1.72 obtained from 192.168.1.254, lease time 86400
deleting routers
adding dns 192.168.1.254
OK
Starting dropbear sshd: OK

Welcome to Buildroot
microwatt login: root
# cat - > hello
hello
# ls
hello
# p
```


Using Arty as an Edge Device



Still to come ...

- Adding a MicroSD to Arty
 - Support should already be there, will update the github page with detailed instructions once it works
- Example of using MicroWatt as a microcontroller (for something on or attached to the board)
- Example of adding a custom instruction to MicroWatt
- **Instructions on how to prepare the MicroWatt SoC for tapeout to a semiconductor fab (or two)**