



Home CSP Inc. Trackers and electronics for home solar energy

www.homecsp.com

csp@homecsp.com


TinyTracker

version 1.06 revG

Thanks for purchasing your TinyTracker from Home CSP Inc. The TinyTracker provides a simple but effective solution for single-axis solar tracking with common satellite linear actuators and other various small DC motors. **When first turned on, the TinyTracker will momentarily run the connected motor west, then east. Reverse motor leads if necessary to obtain proper behavior. The unit will pause for 10 seconds to read the light levels before beginning regular tracking operation.**

Specifications

Voltage:	35v dc max, 12-30 recommended, up to 60V with separate logic power supply
Tracking Period:	3 minutes
Max Motor Run:	3 minutes
Sample Period:	0.5 seconds
East Return Delay:	10 minutes
Max Motor Wattage:	30 watts, <15 recommended)

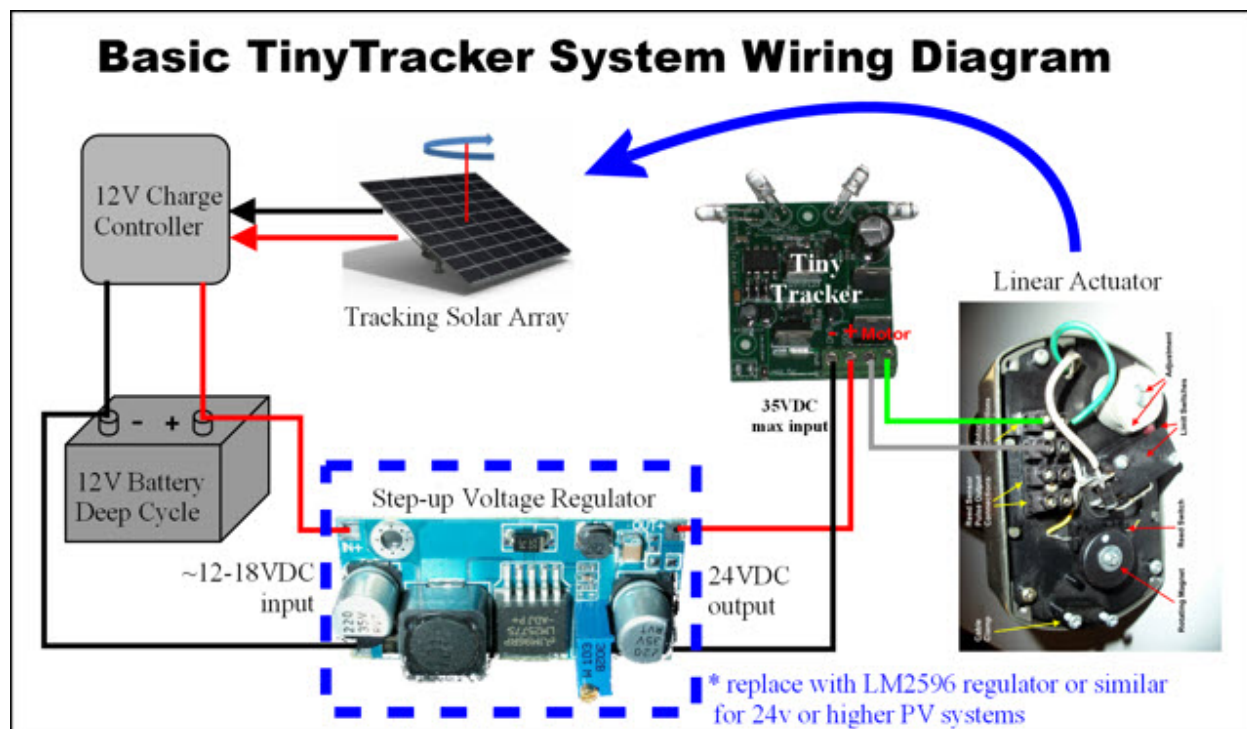

Firmware notes

The RevC and later firmware incorporates a special algorithm to limit extraneous motor operation caused from “seeking” in cloudy/partial-sun conditions. When first started up, the firmware will allow the motor to run for up to 3 minutes, this run time decreases over the next half an hour till only 3 seconds of motor operation is allowed each tracking period. Just in case something happens like the sun comes out from clouds in the afternoon, once per hour a 4x longer motor period is allowed. These features result in a much more plant like heliotropic motion in a wide variety of conditions, and result in less wear and tear on actuator components for extended actuator life.

Theory

The TinyTracker is named after the ATtiny85 microprocessor which controls its operation. The ATtiny85 is an 8 bit microprocessor with 8K of program memory, and is configured to run on its internal clock at only 1MHz to save power. The microprocessor is equipped with 10 bit analog to digital converters (ADC) which read the voltage produced by light striking the LEDs. Two digital outputs are utilized to control a standard H-Bridge motor driver circuit based on TIP-12X Darlington transistors. This allows the microprocessor to control the direction of the current through the motor in an attempt to achieve a position where the voltage produced by the East and West LEDs is equal.

While it is commonly known that LEDs produce light from electricity, hence their name, it is less commonly known that they also produce a voltage in response to normal light striking the diode. Due to their size, LEDs produce an insignificant amount of power, but the voltage is easily read by a microcontroller. Two LEDs at a 90 degree angle to each other form the core of the light sensor, while two additional side LEDs provide a wider field of off-center light detection to help enable solar target acquisition.

Use of a microcontroller allows a minimum of electrical components and also enables the TinyTracker to be extremely energy efficient. The ATtiny85 chip draws less than 0.5 mA when the motor is not operating. By updating the motor position according to the Tracking Period, extraneous motor movements are avoided: reducing wear and also conserving energy.

TinyTracker operation may be affected by various environmental factors such as trees, clouds, ground color, reflections, and other extraneous light factors. The voltage from the LEDs and the 10bit resolution of the ADCs limit the theoretical resolution to slightly better than 0.5 degrees. The TinyTracker is primarily intended for PV tracking, and due to the factors mentioned, no minimum accuracy is appropriate.


Once light levels have fallen to “nighttime” levels, the TinyTracker will wait about 10 minutes (to make sure it's not a solar eclipse or something else transitory), and then engage the “east-return” function. This causes the motor to run in an eastern direction until the limit switch is tripped. As the microprocessor has no knowledge of the actual array position, the east-return function runs for the specified Max Motor Run period. As long as your motor can at least return 50% from its western limit in this time, the TinyTracker should be able to reacquire the sun the following day.

Also note that the pulse output connections for positional sensing common to many linear actuators are not used by the TinyTracker. It is completely dependent upon limit switches stopping the flow of current to the motors when mechanical constraints prevent the unit from achieving the desired orientation, and the LEDs for determining what that orientation is.

In practice the TinyTracker often tends to return itself to a middle azimuth position (and horizontal panel position when used for elevation control) following sunset, and will acquire the sun the next day without

issue. However, depending on the power and arrangement of your PV panels, the TinyTracker may go to sleep at various degrees of return from western maximum if battery power is not also supplied in order to enable the east-return function, if needed.

Implementation

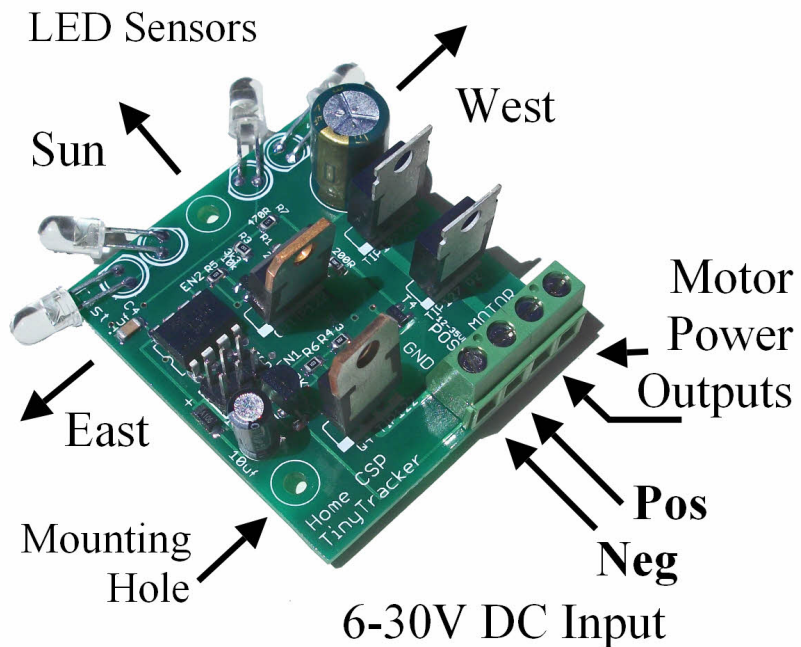

Connections should be made as per the illustrations for your system. Note that a fuse and/or power switch may be desirable or required in many applications. Much of the documentation contains qualified statements because there are so many different situations with multiple solutions available.

There are many types of tracking mounts where the TinyTracker can be used here are just a few:

Azimuth – these are the most common type of pole tracker. Rotation is about the vertical axis, and the PV panel is usually set at a fixed angle. The TinyTracker should preferably be positioned at the same angle as the panel, but may also be positioned vertically as best appropriate for your application.

Altitude-Azimuth – a second TinyTracker can be added to an Azimuth tracker to create a dual-axis tracker where the panel elevation angle is adjusted throughout the day as needed.

Polar – the axis of rotation is tilted from horizontal to match your latitude and point at the celestial North Pole. This is ideal for the TinyTracker.

Horizontal – this is a simplified version of the polar mount with a horizontal north-south axis. These are popular on flat rooftops and along north-south roof ridges. These work best at lower latitudes.

New Features in Firmware Revision G

The RevG firmware includes nearly all the features of our previous custom firmware configurations, and stores all tracking parameters in EEPROM so that it can be customized for almost any application.

Tracking parameters stored in EEPROM:

- **BALANCE** – used to adjust East/West balance
- **DAYLIGHT** – used to control night park light threshold
- **SUNLIGHT** – defines minimum light level for tracking, minimizes seeking in cloudy conditions
- **MAX_TRACK** – maximum run time during normal tracking event
- **MAX_RUN** – maximum motor run for actuator reset, east-return, etc.
- **TRACK_PERIOD** – interval between tracking updates
- **EAST_INHIBIT** – prevents Eastward movement during normal tracking updates.
- **PWM** – pulse width modulation for adjusting motor speed
- **ALT_AXIS** – for elevation axis use, this reverses the normal east-return direction to make the elevation axis park in a horizontal position at night.

The firmware incorporates a special tracking algorithm to limit extraneous motor operation caused from “seeking” in cloudy/partial-sun conditions. When first started up, the firmware will allow the motor to run for up to 3 minutes (MAX_RUN), this run time decreases over the next ten tracking updates till only 3 seconds (MAX_TRACK) of motor operation is allowed each tracking period. Just in case something happens like the sun comes out from clouds in the afternoon, once per hour a 4x longer motor period is allowed. These features result in a much more plant like heliotropic motion in a wide variety of conditions, and result in less wear and tear on actuator components for extended actuator life.

Details

Light Vane: Use of light vane is optional according to your requirements. A properly designed external light vane can increase tracking accuracy. A longer vane will cause more of a shadow to fall on the LEDs which will increase sensitivity. A simple and effective light vane can be created by placing a piece of electrical tape on the enclosure in the middle between the East and West LEDs.

LEDs: the two LEDs that are 180 degrees apart (East and West) are intended to help increase the effective field of vision. This can help the tracker re-orient itself in the morning if the east-return function did not work due to lack of power after sunset (if the tracker is powered by PV instead of batteries); however, in some circumstances this may not be desirable. For instance: with a dual-axis controller using the TinyTracker for elevation control (rather than Azimuth or Right Ascension angle), movement will be 90 degrees maximum. In this situation using a piece of tape to cover the outside LEDs will improve performance.

Supply Voltage: The TinyTracker is designed to handle a wide range of input voltage to allow operation from unregulated 12v PV panel output; however, unregulated 24v PV output may exceed the maximum rating (35vdc) for the LM78L05 voltage regulator used for the logic portion of the board. The actual voltage used will depend upon the requirements of your motor.

The TinyTracker features a blocking diode to prevent damage from accidentally reversed DC polarity. A 24vdc output 1 to 2 amp rated AC power supply is recommended when not using direct PV or battery.

Motor Amperage: The motor driver is limited to 5A maximum under ideal conditions. Inside a hot enclosure in the sun is not ideal, and obviously those conditions will vary. More important than actual amps, are the watts used by your motor (Volts x Amps = Watts) as this will determine the actual heat dissipation factor for the electronics. The maximum wattage recommended is 32. Remember we're trying to make more energy, not use it all up with the tracker! The PMA linear actuators sold by HomeCSP draw slightly less than 0.4A at 24vdc, and the TinyTracker easily handles twice that load. Solar tracking motors should move slowly. Your motor should take at least a minute to go from one side to the other


PWM versions of the TinyTracker firmware are available by request. Pulse Width Modulation is used to control motor speed and also reduces the average current level. PWM is typically set at 50% and 490Hz..

Enclosure: Painted or opaque enclosures with a clear window tend to function as small solar ovens and increase the temperature for the electronics, and are not recommended. The recommended enclosure for the TinyTracker is a clear PET plastic jar or similar container. The TinyTracker is easily fastened to the lid with a small stand-off, and this provides excellent weather protection and visibility for the tracker. The board is coated with a special acrylic conformal coating designed to protect from moisture and corrosion, but it is not waterproof! Make sure the enclosure is water tight: silicone sealant may be required. Waterproof conduit fittings are recommended, and a small desiccant package of silica gel may help prevent dew point condensation on the inside of the enclosure. For adjustment and alignment, rotate the enclosure as needed about the axis parallel to that which the TinyTracker will be controlling.

Location: For a south facing panel in the northern hemisphere, the north-east corner of the array is the generally preferred location to mount the TinyTracker. In the southern hemisphere, this becomes the south-east corner.

Limit Switches: Most linear actuators come with built in limit switches. These prevent the motor from destroying itself or the mechanical components by moving the actuator too far. Rocker switches are normally used and are configured in a Normally Closed manner. They are also used in conjunction in blocking diodes to allow the motor to reverse direction while the limit switch is open. If you are using a motor without built-in limit switches it is essential that you incorporate these into your design.

A basic limit switch schematic is shown below for reference purposes

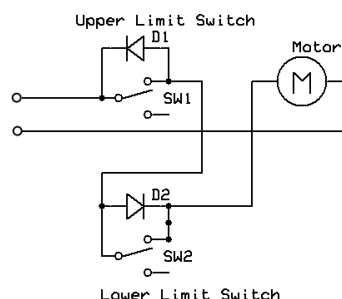

I. Software Updates

New software updates and versions may be released from time to time by Home CSP. These binary releases will be made available to registered TinyTracker owners for free in the Home CSP website store (use voucher code FIRMAT85), and may be installed through the 6 pin ISP header. An AVR ISP programmer and AVRdude software is required to upload the new firmware. AVRdude is freely available, and is part of the Arduino development environment. AVR ISP programmers are commonly available on eBay and other from other sources such as www.adafruit.com. Visit the Home CSP website for firmware upload instructions.

II. Circuit Schematic Diagram:

