

HPB MainNet User Manual

V2.1

HPB

August 2018

Table of Contents

Chapter 1: Overview	3
1.1 Applicable Versions	3
1.2 Terms Description	3
1.3 Target users	3
1.4 Reading Guide	3
1.5 Preparation for BOE Installation.....	5
1.6 Example of NTP Installation:	6
Chapter 2: Go Environment Setup	8
2.1 Installation Steps	8
2.2 Example Setup.....	9
Chapter 3: Preoperational Detection of BOE	13
3.1 Steps for BOE Detection	13
3.2 Example of BOE Detection	13
Chapter 4: BOE Node Setup	16
4.1 Node Setup Steps Through Source Code	16
4.2 Example of Node Setup Through Source Code	17
4.3 Setup Through executable File	21
4.4 Example of Setting Up the executable File.....	22
4.5 Check Node Status	26
Chapter 5 Synchronized Node Setup.....	28
5.1 Steps of Setup Through Source Code.....	28
5.2 Example of Node Setup Through Source Code	30
5.3 SetUp Through executable File	33
5.4 Example of Setup Through executable File	35
5.5 Check Node Status	38
Chapter 6 Account Management and Transactions	40
6.1 Common Commands.....	40
6.2 Examples of Common Commands	40
Chapter 7 BOE Firmware Update Instructions	42
7.1 Steps for an Online Update	42
7.2 Examples of an Online Update	42
7.3 Steps to Update Via SD Card	44
7.4 Detailed Steps to an Update VIA SD Card	44
Annex Technical Support.....	46

Chapter 1: Overview

1.1 APPLICABLE VERSIONS

The Manual applies to the HPB BOE100 hardware unit and MainNet Software. See details below:

Name	Model	Versions
BOE	BOE100	Hardware: v1.1
		Firmware: v1.0.0.0
MainNet Software	——	V1.0.0.0

1.2 TERMS DESCRIPTION

Please see the table below for description of HPB specific terms:

No.	Name	Description
1	BOE node	Refers to both Candidate Node and High-Performance node.
2	Synchronization Node	Refers to nodes that are without a BOE hardware unit and only used to synchronize blocks.
3	Candidate node	A Candidate-Node can become a HP-Node through consensus algorithm election.
4	High performance node	High Performance-Node responsible for block generation and synchronization.
5	Genesis file	File that contains information of genesis blocks.
6	Boot mode configuration	Changes the boot mode of the BOE hardware unit.
7	Flash boot mode	Switching to this mode can start the BOE hardware unit by reading programs from flash.
8	SD Card boot mode	Switching to this mode can start the BOE hardware unit by reading programs from SD card.

1.3 TARGET USERS

The Manual is targeted at following users:

- (1) Node owners: Individuals or organizations run the HPB MainNet and receive block rewards for verifying transactions
- (2) DApp developers: Individuals and developer teams who develop distributed applications on the HPB blockchain.
- (3) Regular users: HPB account owners who are able to manage, initiate and process HPB transactions through HPB Wallet and download and use HPB MainNet DApp.

The Manual aims at providing guidance of HPB MainNet Node installation and regular maintenance to Node Owners.

1.4 READING GUIDE

HPB MainNet Nodes consist of Node owners' self-configured servers that are required to install the BOE100 hardware unit provided by HPB. Node owners are required to follow the following steps for installation and daily maintenance.

No.	Steps	Target User	Descriptions
1	BOE100 hardware unit installation	BOE Node owners	To set up the BOE hardware and the server, please refer to the “BOE100 Installation Manual”, or visit HPB’s official website for video instructions.
2.	Prerequisites to the MainNet software installation	All users	Please check 1.4 Preparation for BOE Hardware Installation and complete NTP installation in order to synchronize the local time with the internet.
3.	Go Environment setup (optional)	All users	Two options for installing the HPB MainNet software: <u>1. Compiling the source code:</u> Download the latest HPB source code on GitHub and compile it to generate an executable file for MainNet software installation. Go Environment setup is required (see chapter 2 for details). <u>2. Using the available executable file:</u> Download the compiled the executable file from GitHub for direct installation of the MainNet software (skip chapter 2).
4.	Preoperational detection of BOE	BOE Node owners	Detect the BOE hardware unit prior to the node operation to ensure the functionality of the hardware unit. See chapter 3 for detailed instructions on BOE hardware detection .
5	BOE Node Setup	BOE Node owners	Download process and operation of the MainNet application, running the BOE node and accessing the MainNet. See chapter 4 for detailed node setup instructions. This step is targeted at BOE Node owners.
6	Synchronization Node Setup	Regular users/DApp developers	Download process and operation of the MainNet application, running the synchronization node and accessing the MainNet. See chapter 5 for detailed synchronization node setup instruction.
7	Account management and transactions	All users	Account management and transaction order provided by the MainNet software. See chapter 6 for more details.
8	BOE Firmware update	BOE Node owners	For HPB BOE Firmware update. See chapter 7 for BOE Firmware update guidance.

For more information please contact our HPB staff referencing to Technical Support.

1.5 PREPARATION FOR BOE INSTALLATION

Users are required to complete NTP installation in order to synchronize the local time with the Internet time server.

No.	Contents	Steps	Descriptions
Step 1	Download	Download the installation package	Command: wget <i>http://www.eecis.udel.edu/~ntp/ntp_spool/ntp4/ntp-4.2/ntp-4.2.8p12.tar.gz</i>
Step 2	Decompress	Decompress the installation package	Command: tar zxf ntp-4.2.8p12.tar.gz
Step 3	Set up	Switch root user	Command: su root Enter root password as prompted
		Enter the directory	Command: cd ntp-4.2.8p12/
		Compile and install	Command: ./configure && make -j8 && make install
Step 4	Configuration	Configure DNS server	Command: echo "nameserver 8.8.8.8" >> /etc/resolv.conf
		Configure synchronous clock	Command: ntpdate cn.pool.ntp.org Tip: 'cn.pool.ntp.org' is the NTP server. Users outside China are required to choose other NTP servers based on their location.
		Write in hardware	Command: hwclock --systohc
		Exit	Command: exit

A more detailed example of the preparation process is outlined below.

1.6 EXAMPLE OF NTP INSTALLATION:

1) Download NTP

Enter `wget http://www.eecis.udel.edu/~ntp/ntp_spool/ntp4/ntp-4.2/ntp-4.2.8p12.tar.gz`. Wait until the process shows 100% for successful download;

```
hpb@dell-PowerEdge-R730:~$ wget http://www.eecis.udel.edu/~ntp/ntp_spool/ntp4/ntp-4.2/ntp-4.2.8p12.tar.gz
--2018-08-27 20:39:08-- http://www.eecis.udel.edu/~ntp/ntp_spool/ntp4/ntp-4.2/ntp-4.2.8p12.tar.gz
Resolving www.eecis.udel.edu (www.eecis.udel.edu)... 128.4.31.8
Connecting to www.eecis.udel.edu (www.eecis.udel.edu)|128.4.31.8|:80... connected.
HTTP request sent, awaiting response... 302 Moved Temporarily
Location: https://www.eecis.udel.edu/~ntp/ntp_spool/ntp4/ntp-4.2/ntp-4.2.8p12.tar.gz [following]
--2018-08-27 20:39:09-- https://www.eecis.udel.edu/~ntp/ntp_spool/ntp4/ntp-4.2/ntp-4.2.8p12.tar.gz
Connecting to www.eecis.udel.edu (www.eecis.udel.edu)|128.4.31.8|:443... connected.
HTTP request sent, awaiting response... 200 OK
Length: 7079642 (6.8M) [application/x-gzip]
Saving to: 'ntp-4.2.8p12.tar.gz'
```

2) Decompress

Enter `tar xzf ntp-4.2.8p12.tar.gz` to decompress NTP;

```
hpb@dell-PowerEdge-R730:~$ tar xzf ntp-4.2.8p12.tar.gz
```

3) Installation

Enter `su root` to switch to root user, and enter root password as prompted;

```
hpb@dell-PowerEdge-R730:~$ su root
Password:
```

Enter `cd ntp-4.2.8p12/` before you enter `./configure && make -j8 && make install` to compile and install;

```
root@dell-PowerEdge-R730:/home/hpb# cd ntp-4.2.8p12/
root@dell-PowerEdge-R730:/home/hpb/ntp-4.2.8p12# ./configure && make -j8 && make install
checking for a BSD-compatible install... /usr/bin/install -c
checking whether build environment is sane... yes
checking for a thread-safe mkdir -p... /bin/mkdir -p
checking for gawk... no
.....
Installing stand-alone HTML documentation
make[3]: Leaving directory '/home/hpb/ntp-4.2.8p12'
make[2]: Leaving directory '/home/hpb/ntp-4.2.8p12'
make[1]: Leaving directory '/home/hpb/ntp-4.2.8p12'
```

4) Configuration

Enter `echo "nameserver 8.8.8.8" >> /etc/resolv.conf` before you enter `ntpd -c cn.pool.ntp.org`. If the time returned by the command corresponds to local time, the NTP is successfully synchronized;

Tip: 'cn.pool.ntp.org' is the NTP server. Users outside of mainland China are required to choose other NTP servers based on their locations.

```
root@dell-PowerEdge-R730:/home/hpb/ntp-4.2.8p12# echo "nameserver 8.8.8.8" >> /etc/resolv.conf
root@dell-PowerEdge-R730:/home/hpb/ntp-4.2.8p12# ntpdate cn.pool.ntp.org
27 Aug 21:40:37 ntpdate[6335]: adjust time server 193.228.143.23 offset 0.013402 sec
```

Enter '**hwclock --systohc**' before you enter '**exit**' to finish.

```
root@dell-PowerEdge-R730:/home/hpb/ntp-4.2.8p12# hwclock --systohc
root@dell-PowerEdge-R730:/home/hpb/ntp-4.2.8p12# exit
exit
```

Chapter 2: Go Environment Setup

Ensure the Go Environment is ready if the source code was manually compiled for the MainNet installation and the Node setup. **If the compiled source code executablethe executable file provided by HPB will be used for the MainNet installation skip this step.**

This compiled version of the HPB MainNet application is based on Go 1.9.0+.

2.1 INSTALLATION STEPS

The following table is a simplified step-by-step guide on the Go Environment set up. Please refer to section 2.2 for a demonstration.

Note: Please ensure your server has been connected to the internet prior to the following steps.

No.	Contents	Steps	Descriptions
Step 1	Set up GIT	Update apt-get source	Command: sudo apt-get update
		Set up GIT	Command: sudo apt-get install -y git
Step 2	Set up GO	Set up GO	Command: sudo apt-get install -y golang-1.9
		Enter the file 'profile'	Command: sudo vi /etc/profile
Step 3	Set environment variables	Revise the 'profile' file	Add the following at the end of the file: export GOPATH=/usr/share/go-1.9 export GOROOT=/usr/lib/go-1.9 export PATH=\$GOROOT/bin:\$GOPATH/bin:\$PATH
		Save 'profile'	Press the [Esc] key Enter: wq
		Enforce the 'profile'	Command: source /etc/profile
		Enter file 'bash.bashrc'	Command: sudo vi /etc/bash.bashrc
		Edit 'bash.bashrc' path	Add the following at the end of the file: export GOPATH=/usr/share/go-1.9 export GOROOT=/usr/lib/go-1.9 export PATH=\$GOROOT/bin:\$GOPATH/bin:\$PATH
		Save 'bash.bashrc'	Press the [Esc] key Enter: wq
		Enforce 'bash.bashrc'	Command: source /etc/bash.bashrc
Step 4	Check GO environment	Check go environment	Command: go env

	setup	setup	Command: go version
		Check go version	

2.2 EXAMPLE SETUP

Unless stated otherwise, press [Enter] after each command.

(1) Update apt-get Source:

Enter the following on the console to get a password prompt, and fill in the password: 'sudo apt-get update'. Wait until you see 'Reading package lists...Done', meaning the apt-get source is successfully updated. Once done (example shown below), proceed to the next step;

```
hpb@ dell-PowerEdge-R730:~$ sudo apt-get update
[sudo] password for hpb:
Get:1 http://security.ubuntu.com/ubuntu xenial-security InRelease [107 kB]
Hit:2 http://cn.archive.ubuntu.com/ubuntu xenial InRelease
Get:3 http://cn.archive.ubuntu.com/ubuntu xenial-updates InRelease [109 kB]
Hit:4 http://cn.archive.ubuntu.com/ubuntu xenial-backports InRelease
Get:5 http://cn.archive.ubuntu.com/ubuntu xenial-updates/main amd64 Packages [839 kB]
Get:6 http://cn.archive.ubuntu.com/ubuntu xenial-updates/main i386 Packages [757 kB]
Get:7 http://cn.archive.ubuntu.com/ubuntu xenial-updates/universe amd64 Packages [678 kB]
Get:8 http://cn.archive.ubuntu.com/ubuntu xenial-updates/universe i386 Packages [620 kB]
Fetched 3,109 kB in 5s (615 kB/s)
Reading package lists... Done
```

(2) Setup GIT

Enter '**sudo apt-get install -y git**', wait until you see the notes (example below) suggesting 'git' has been successfully set up, then proceed to the next step;

```
hpb@ dell-PowerEdge-R730:~$ sudo apt-get install -y git
Reading package lists... Done
Building dependency tree
Reading state information... Done
The following additional packages will be installed:
  git-man liberror-perl
.....
Unpacking git (1:2.7.4-0ubuntu1.4) ...
Processing triggers for man-db (2.7.5-1) ...
Setting up liberror-perl (0.17-1.2) ...
Setting up git-man (1:2.7.4-0ubuntu1.4) ...
Setting up git (1:2.7.4-0ubuntu1.4) ...
```

(3) Install Go

Enter '**sudo apt-get install -y golang-1.9**', wait until you see 'Setting up', suggesting the download and installation is successful, then proceed to the next step;

```
hpb@ dell-PowerEdge-R730:~$ sudo apt-get install -y golang-1.9
Reading package lists... Done
Building dependency tree
Reading state information... Done
.....
Setting up golang-1.9 (1.9.2-3ubuntu1~16.04.1) ...
Setting up golang-1.9-race-detector-runtime (0.0+svn285455-0ubuntu1~16.04.1) ...
```

(4) Go to 'profile'

Enter 'sudo vi /etc/profile' and then enter password as prompted;

```
hpb@ dell-PowerEdge-R730:~$ sudo vi /etc/profile
```

(5) Set Environment Variables

Move your pointer to the final line, press the [o] key (lowercase O), then enter the following three lines of codes:

```
export GOPATH=/usr/share/go-1.9
export GOROOT=/usr/lib/go-1.9
export PATH=$GOROOT/bin:$GOPATH/bin:$PATH
```

```
if [ -d /etc/profile.d ]; then
  for i in /etc/profile.d/*.sh; do
    if [ -r $i ]; then
      . $i
    fi
  done
unset i
fi
export GOPATH=/usr/share/go-1.9
export GOROOT=/usr/lib/go-1.9
export PATH=$GOROOT/bin:$GOPATH/bin:$PATH
```

(6) Save 'profile'

Type ':' (colon, shift+;) after pressing the [ESC] key, and press the [Enter] key after inputting 'wq' to save the file, then proceed to the next step as illustrated here:

```
: wq
```

(7) Enforce 'profile'

Enter '__source /etc/profile' to enforce the 'profile', then proceed to the next step;

```
hpb@ dell-PowerEdge-R730:~$ source /etc/profile
```

(8) Enter 'bash.bashrc'

Enter 'sudo vi /etc/bash.bashrc', and enter the permissions password as prompted;

```
hpb@ dell-PowerEdge-R730:~$ sudo vi /etc/bash.bashrc
```

(9) Set Environment Variables

Move your pointer to the final line, press the [o] key (lowercase O), then enter the following three lines of codes:

```
export GOPATH=/usr/share/go-1.9
export GOROOT=/usr/lib/go-1.9
export PATH=$GOROOT/bin:$GOPATH/bin:$PATH
```

```
if [ -x /usr/lib/command-not-found -o -x /usr/share/command-not-found/command-not-found ];
then
    function command_not_found_handle {
        # check because c-n-f could've been removed in the meantime
        if [ -x /usr/lib/command-not-found ]; then
            /usr/lib/command-not-found -- "$1"
            return $?
        elif [ -x /usr/share/command-not-found/command-not-found ]; then
            /usr/share/command-not-found/command-not-found -- "$1"
            return $?
        else
            printf "%s: command not found\n" "$1" >&2
            return 127
        fi
    }
fi
export GOPATH=/usr/share/go-1.9
export GOROOT=/usr/lib/go-1.9
export PATH=$GOROOT/bin:$GOPATH/bin:$PATH
```

(10) Save 'bash.bashrc'.

Type ':' (colon, shift+;) after pressing the [ESC] key, and press the [Enter] key after inputting 'wq' to save the file, then proceed to the next step as illustrated here:

```
: wq
```

(11) Enforce 'bash.bashrc'

Enter '**source /etc/bash.bashrc**' to enforce 'bash.bashrc', and proceed to the next step;

```
hpb@ dell-PowerEdge-R730:~$ source /etc/bash.bashrc
```

Check the GO Environment

Enter '**go env**' to check GO environment; proceed to the next step once the console returns the following;

```
hpb@ dell-PowerEdge-R730:~$ go env
GOARCH="amd64"
GOBIN=""
GOEXE=""
GOHOSTARCH="amd64"
GOHOSTOS="linux"
GOOS="linux"
GOPATH="/usr/share/go-1.9"
GORACE=""
GOROOT="/usr/lib/go-1.9"
GOTOOLDIR="/usr/lib/go-1.9/pkg/tool/linux_amd64"
GCCGO="gccgo"
CC="gcc"
GOGCCFLAGS="-fPIC -m64 -pthread -fmessage-length=0 -fdebug-prefix-map=/tmp/go-build421459249=/tmp/go-build -gno-record-gcc-switches"
CXX="g++"
CGO_ENABLED="1"
CGO_CFLAGS="-g -O2"
CGO_CPPFLAGS=""
CGO_CXXFLAGS="-g -O2"
CGO_FFLAGS="-g -O2"
CGO_LDFLAGS="-g -O2"
PKG_CONFIG="pkg-config"
```

(12) Check Go Version

Enter '**go version**'. If it shows your version as GO 1.9 or above, your Go installation is

complete!

```
hpb@ dell-PowerEdge-R730:~$ go version  
go version go1.9.2 linux/amd64
```

Chapter 3: Preoperational Detection of BOE

Commands below are intended to be operated on the server with the BOE hardware unit installed. Unless stated otherwise, please press [Enter] after each command.

ATTENTION: HPB program operation must be based on ROOT permission.

3.1 STEPS FOR BOE DETECTION

The following steps for the preoperational detection of BOE is to ensure a working communication channel between the server and the BOE hardware unit. Please ensure the BOE hardware self-detection is successful prior to proceeding to these steps.

No.	Contents	Steps	Descriptions
Step 1	Preparation	Prepare for detection	Ensure the self-detection of the BOE hardware unit is successful, then connect the power cable to the server. Connect the BOE hardware unit with the GE-cable, and lastly turn on the server.
Step 2	GIT setup	Set up GIT	Command: <code>sudo apt-get install git</code>
Step 3	HPB MainNet software installation	Download HPB executable	Command: <code>sudo git clone https://github.com/hpb-project/hpb-release</code>
		Check HPB MainNet software	Command: <code>ls</code> Executed under current path, you can see 'hpb-release' being downloaded.
		Decompress HPB MainNet software	Command: <code>cd hpb-release/bin</code> Enter directory 'bin' Command: <code>sudo tar zxvf File</code> Note: <i>File</i> is the HPB MainNet file name, e.g. ghpb-v0.0.0.1.tar.gz
Step 4	Change file permission	Change file permission	Command: <code>sudo chmod +x ghpb-v0.0.0.1 -R</code>
Step 5	Program testing process	Start program testing process	Go to directory 'ghpb-v0.0.0.1' and start testing process. Command: <code>sudo ./ghpb boecheck</code>

Skip Step 2- GIT Installation if it has been previously set up.

3.2 EXAMPLE OF BOE DETECTION

(1) GIT Setup

Enter 'sudo apt-get install git' in the console to test the environment, then enter the permission password for ROOT as prompted;

```
hpb@dell-PowerEdge-R730:/$ sudo apt-get install git
[sudo] password for hpb:
Reading package lists... Done
Building dependency tree
Reading state information... Done
git is already the newest version (1:2.7.4-0ubuntu1.4).
0 upgraded, 0 newly installed, 0 to remove and 180 not upgraded.
```

(2) Download the HPB MainNet Software

Check and enter the HPB MainNet Download directory, then enter '**sudo git clone <https://github.com/hpb-project/hpb-release>**' to download the testing program. The download of the MainNet is complete when you see 'Checking connectivity ... Done'.

```
hpb@dell-PowerEdge-R730:/$ sudo git clone https://github.com/hpb-project/hpb-release
Cloning into 'hpb-release'...
remote: Counting objects: 18, done.
remote: Compressing objects: 100% (15/15), done.
remote: Total 18 (delta 0), reused 15 (delta 0), pack-reused 0
Unpacking objects: 100% (18/18), done.
Checking connectivity... done.
```

To check other install paths, enter '**sudo git clone <https://github.com/hpb-project/hpb-release> specify the path**'; please update and specify the path manually.

(3) Check if the HPB MainNet Software has been Included:

Go to the directory '*hpb-release/bin*' and enter command '**ls**' to check if you can see the following file: '*ghpb-vx.x.x.x.tar.gz*'. (**Note:** 'x.x.x.x' should refer to the specific version of HPB MainNet when it is launched)

```
hpb@dell-PowerEdge-R730:/$ cd hpb-release/bin
hpb@dell-PowerEdge-R730/hpb-release/bin$ ls
ghpb-v0.0.0.1.tar.gz
```

Users that specify the path should go to the directory of specific paths they choose.

(4) Decompress HPB MainNet

Enter '**sudo tar zxvf ghpb-vx.x.x.x.tar.gz**' to decompress the file '*ghpb-vx.x.x.x.tar.gz*'.

```
hpb@dell-PowerEdge-R730/hpb-release/bin$ sudo tar zxvf ghpb-v0.0.0.1.tar.gz
ghpb-v0.0.0.1/
ghpb-v0.0.0.1/iperf3
ghpb-v0.0.0.1/promfile
ghpb-v0.0.0.1/ghpb
```

(5) Revise File Permission

Enter '**sudo chmod +x ghpb-v0.0.0.1 -R**'

```
hpb@dell-PowerEdge-R730/hpb-release/bin$ sudo chmod +x ghpb-v0.0.0.1 -R
```

(6) Start Testing Procedure

Go to directory 'ghpb-vx.x.x.x', and enter 'ls' to access three files below;

```
hpb@dell-PowerEdge-R730:/hpb-release/bin$ cd ghpv-v0.0.0.1/  
hpb@dell-PowerEdge-R730:/hpb-release/bin/ghpb-v0.0.0.1$ ls  
ghpb  iperf3  promfile
```

Enter '**sudo ./ghpb boecheck**' to run the testing procedure. BOE test is successful and runs properly if the system shows 'HPB: boe board is ok'.

```
hpb@dell-PowerEdge-R730:/hpb-release/bin/ghpb-v0.0.0.1$ sudo ./ghpb boecheck  
INFO [08-28|15:55:18] HPB : boe board is ok.
```

Chapter 4: BOE Node Setup

In order to proceed to operations of mining, account management, and more, nodes must be set up and HPB's blockchain must be accessed when BOE hardware testing is finished. There are two options as follows:

- (1) Set up the node through source code. Basic software programming and code compiling knowledge is required for this option. You also must complete GO setup (see chapter 2) prior to proceeding to the set up;
- (2) Set up through HPBexecutable executable file. You can follow the steps of the executable fileexecutablesetup for this option.

ATTENTION: HPB program operation should be based on ROOT.

4.1 NODE SETUP STEPS THROUGH SOURCE CODE

Please refer to the following steps for set up the node through source code:

No.	Contents	Steps	Descriptions
Step 1	Confirm the execution path	Create the execution path	Command: sudo mkdir /home/ghpb-bin Tip: /home/ghpb-bin can be changed to a specific path
		Switch to root user	Command: su root Tip: Entering root owner password is required
Step 2	Download HPBexecutable and the genesis file	Choose the download path	Command: cd /home/ Tip: /home/ can be changed to a specific path
		Download HPB MainNet executable	Command: sudo git clone https://github.com/hpb-project/hpb-release
		Check HPB MainNet executable	Command: cd hpb-release/ Command: ls
		Copy the genesis file to the execution path	Command: cd config/ Command: sudo cp genesis.json /home/ghpb-bin/
Step 3	Download and compile 'go-hpb' source code	Go to the download path	Command: cd /home/ Note: /home/ can be changed to a specific path
		Download the 'go-hpb' source code	Command: sudo git clone https://github.com/hpb-project/go-hpb.git
		Compile the 'go-hpb'	Command: cd go-hpb/ Command: make all
		Copy to the execution path	Command: sudo cp build/bin/* /home/ghpb-bin/ Note: 'build/bin/*' is the compile path, '/home/ghpb-

			<i>bin/</i> is the execution path.
Step 4	Initialize the node	Go to the execution path	Command: cd /home/ghpb-bin/ Tip: /home/ghpb-bin/ is the default execution path
		Node Initialization	Command: sudo ./ghpb --datadir node/data init genesis.json
Step 5	Import the account	Export account	Export account information from the HPB Wallet;
		Create 'keystore'	Command: cd node/data/ Command: mkdir keystore Command: ls
		Import the Node	Go to path '/home/ghpb-bin/node/data/ keystore', and copy account information to keystore file.
Step 6	Launch the node	Option 1	Command: cd /home/ghpb-bin/ Command: sudo ./ghpb--datadir node/data - -networkid 100 --port 3004 - console Note: 100 stands for the HPB MainNet network number; 3004 stands for local 'ghpb' port;
		Option 2	Command: cd /home/ghpb-bin/ Command: sudo nohup ./ghpb --datadir node/data --networkid 100 --verbosity 3 --rpc --rpcapi hpb,web3,admin,txpool,debug,personal,net,miner,prometheus & Command: sudo ./ghpb attach http://127.0.0.1:8545 Note: 127.0.0.1 is the local IP, 8545 is the port number.
Step 7	Start mining	Start mining	Command: miner.start()

4.2 EXAMPLE OF NODE SETUP THROUGH SOURCE CODE

(1) Confirm the Execution Path

Enter '**sudo mkdir /home/ghpb-bin**' to create execution path;

'/home/ghpb-bin' can be changed to a specific path;

```
hpb@dell-PowerEdge-R730:/$ sudo mkdir /home/ghpb-bin
```

Switch to root user by entering '**su root**', and enter root account password as prompted;

```
hpb@dell-PowerEdge-R730:/$ su root
Password:
```

(2) Choose the Download Path

Enter '**cd /home/**';

'/home/' can be changed to a specific path;

```
root@dell-PowerEdge-R730:/# cd /home/
```

(3) Download the HPB MainNet Executable

Enter '**sudo git clone <https://github.com/hpb-project/hpb-release>**' to download the MainNet Executable ;

```
root@dell-PowerEdge-R730:/home# sudo git clone https://github.com/hpb-project/hpb-release
Cloning into 'hpb-release'...
remote: Counting objects: 18, done.
remote: Compressing objects: 100% (15/15), done.
remote: Total 18 (delta 0), reused 15 (delta 0), pack-reused 0
Unpacking objects: 100% (18/18), done.
Checking connectivity... done.
```

(4) Check the HPB MainNet Executable

Enter '**cd hpb-release/**' to go to directory 'hpb-release'.

Enter command '**ls**' and you will see three files named 'bin', 'config', and 'README.md'.

```
root@dell-PowerEdge-R730:/home# cd hpb-release/
root@dell-PowerEdge-R730:/home/hpb-release# ls
bin  config  README.md
```

```
root@dell-PowerEdge-R730:/home/hpb-release# sudo chmod +x ghpb-v0.0.0.1 -R
```

(5) Copy the Genesis File to Execution Path

Enter '**cd config/**' to go to directory 'config', then enter '**sudo cp genesis.json /home/ghpb-bin/**';

Note: '/home/ghpb-bin/' stands for the execution path you set.

```
root@dell-PowerEdge-R730:/home/hpb-release# cd config/
root@dell-PowerEdge-R730:/home/hpb-release/config# sudo cp genesis.json /home/ghpb-bin/
```

(6) Go to the Download Path

Enter '**cd /home/**' to download the source code to directory 'home'.

'/home/' can be changed to the source code download path.

```
root@dell-PowerEdge-R730:/home/hpb-release/config# cd /home/
```

(7) Download the 'go-hpb'

Enter '**sudo git clone <https://github.com/hpb-project/go-hpb.git>**'. When the process turns to '100%' and shows 'Checking connectivity ... done', the 'go-hpb' has been successfully downloaded. Proceed to the next step.

```
root@dell-PowerEdge-R730:/home# sudo git clone https://github.com/hpb-project/go-hpb.git
Cloning into 'go-hpb'...
remote: Counting objects: 10813, done.
remote: Compressing objects: 100% (118/118), done.
remote: Total 10813 (delta 86), reused 108 (delta 47), pack-reused 10647
Receiving objects: 100% (10813/10813), 14.09 MiB | 395.00 KiB/s, done.
Resolving deltas: 100% (6075/6075), done.
Checking connectivity... done.
```

(8) Compile the 'go-hpb'

Enter '**cd go-hpb/**', then enter '**make all**'; Compile 'go-hpb';

```
root@dell-PowerEdge-R730:/home# cd go-hpb/
root@dell-PowerEdge-R730:/home/go-hpb# make all
build/env.sh go run build/ci.go install ./cmd/ghpb
>>> /usr/lib/go-1.9/bin/go install -ldflags -X
main.gitCommit=04fa6c874b447f0de0a4296b9e573119e1997fcc -v ./cmd/ghpb
github.com/hpb-project/go-hpb/vendor/github.com/mitchellh/go-wordwrap
.....
^Done building.
Run "/home/go-hpb/build/bin/promfile" to launch promfile.
cp "/home/go-hpb/network/iperf3/iperf3" "/home/go-hpb/build/bin/iperf3"
cp "/home/go-hpb/network/p2p/binding.json" "/home/go-hpb/build/bin/binding.json"
cp "/home/go-hpb/network/p2p/config.json" "/home/go-hpb/build/bin/config.json"
```

(9) Copy to the Execution Directory

Enter `'sudo cp build/bin/* /home/ghpb-bin/';`

`'/home/ghpb-bin/'` stands for the execution directory;

```
root@dell-PowerEdge-R730:/home/go-hpb# sudo cp build/bin/* /home/ghpb-bin/
```

(10) Node Initialization

Enter `'cd /home/ghpb-bin/'` to go to the execution path, then enter `'sudo ./ghpb --datadir node/data init genesis.json'`.

Proceed to the next step when the screen displays 'Successfully wrote genesis state database=chaindata';

Note: `'/home/ghpb-bin/'` is the execution path;

```
root@dell-PowerEdge-R730:/home/go-hpb# cd /home/ghpb-bin/
root@dell-PowerEdge-R730:/home/ghpb-bin# sudo ./ghpb --datadir ndoe/data init genesis.json
INFO [08-28|17:46:29] HPB : Create New HpbConfig object
INFO [08-28|17:46:29] HPB : Allocated cache and file handles database=/home/ghpb-
bin/ndoe/data/ghpb/chaindata cache=16 handles=16
INFO [08-28|17:46:29] HPB : Writing custom genesis block
INFO [08-28|17:46:29] HPB : Successfully wrote genesis state database=chaindata
hash=6a068f...3e45f1
```

(11) Export Your Account

Export your account information from the HPB Wallet;

(12) Create 'keystore'

Enter `'cd node/data/'`, then enter `'mkdir keystore';`

Enter `'ls'` so that you can see files `'ghpb'` and `'keystore'`;

```
root@dell-PowerEdge-R730:/home/ghpb-bin# cd node/data/
root@dell-PowerEdge-R730:/home/ghpb-bin/node/data# mkdir keystore
root@dell-PowerEdge-R730:/home/ghpb-bin/node/data# ls
ghpb keystore
```

(13) Import the Node

Go to the path `'/home/ghpb-bin/node/data/ keystore'`, and copy your account information to the file holder `'keystore'`;

(14) Node Launch

Option 1: Enter '`cd /home/ghpb-bin/`' to go to the directory '**ghpb-bin**', then enter '`sudo ./ghpb --datadir node/data --networkid 100 --port 3004 console`' and enter account password as prompted;

The node has been successfully launched when the screen displays 'Welcome to the GHPB JavaScript console!'.

CAUTION: If the user exits the remote server or turns off the terminal, the node launch will be terminated for this option.

```
root@dell-PowerEdge-R730:/home/ghpb-bin/node/data# cd /home/ghpb-bin/
root@dell-PowerEdge-R730:/home/ghpb-bin# sudo ./ghpb --datadir node/data --networkid 100 --port 3004 console
INFO [08-28|13:44:11] HPB : Create New HpbConfig object
INFO [08-28|13:44:11] HPB : Initialising Hpb node          network=100
.....
Welcome to the GHPB JavaScript console!

instance:
coinbase: 0x84b5113ca960ce72d2b8ff7a239ff22a575703b0
at block: 0 (Tue, 07 Aug 2018 10:30:01 CST)
datadir: /home/ghpb-bin/node/data
modules: admin:1.0 debug:1.0 hpb:1.0 miner:1.0 net:1.0 personal:1.0 prometheus:1.0 rpc:1.0 txpool:1.0 web3:1.0
```

Option 2: Enter '`cd /home/ghpb-bin/`' to go to the directory '**ghpb-bin**', then enter '`sudo nohup ./ghpb --datadir node/data --networkid 100 --verbosity 3 --rpc --rpcapi hpb,web3,admin,txpool,debug,personal,net,miner,prometheus --nodetype synnode &`' press the [Enter] key twice;

```
root@dell-PowerEdge-R730:/home/ghpb-bin/node/data# cd /home/ghpb-bin/
root@dell-PowerEdge-R730:/home/ghpb-bin# sudo nohup ./ghpb --datadir node/data --networkid 100 --verbosity 3 --rpc --rpcapi hpb,web3,admin,txpool,debug,personal,net,miner,prometheus --nodetype synnode &
[1] 5406
root@dell-PowerEdge-R730:/home/ghpb-bin# nohup: ignoring input and appending output to 'nohup.out'
```

Wait for 10 seconds, then enter Command: '`sudo ./ghpb attach`

<http://127.0.0.1:8545>'.

The node has been successfully launched when the screen displays 'Welcome to the GHPB JavaScript console!'.

```
root@dell-PowerEdge-R730:/home/ghpb-bin# sudo ./ghpb attach http://127.0.0.1:8545
Welcome to the GHPB JavaScript console!

instance:
coinbase: 0x84b5113ca960ce72d2b8ff7a239ff22a575703b0
at block: 0 (Tue, 07 Aug 2018 10:30:01 CST)
datadir: /home/ghpb-bin/node/data
modules: admin:1.0 debug:1.0 hpb:1.0 miner:1.0 net:1.0 personal:1.0 prometheus:1.0 rpc:1.0 txpool:1.0 web3:1.0
```

(15) Start Mining

Enter '`miner.start()`' and start mining

```
>miner.start()
true
```

4.3 SETUP THROUGH EXECUTABLE FILE

Steps of setting up the executable file:

No.	Contents	Steps	Descriptions
Step 1	Confirm execution path	Create the execution path	Command: sudo mkdir /home/ghpb-bin Tip: /home/ghpb-bin can be changed to a specific path
		Switch to root user	Command: su root Tip: Entering the root owner password is required
Step 2	Download HPB the executable file and the genesis file	Choose the download path	Command: cd /home/ Tip: /home/ can be changed to a specific path
		Download HPB MainNet executable program	Command: sudo git clone hpb-release-address Note: hpb-release-address is the HPB MainNet address in github, e.g. https://github.com/hpb-project/hpb-release
		Check the HPB MainNet executable program	Command: cd hpb-release/ Command: ls
		Copy the genesis file to execution path	Command: cd config/ Command: sudo cp genesis.json /home/ghpb-bin/
Step 3	Download the executable file	Decompress HPB MainNet	Command: ' cd .. ' Command: cd bin/ Command: sudo tar zxvf File Note: File stands for HPB MainNet file, e.g. 'ghpb-v0.0.0.1.tar.gz'
		Change the file permission	Command: sudo chmod +x ghpv-v0.0.0.1 -R
		Copy to the execution	Command: sudo cp ghpv-vX.X.X.X/* /home/ghpb-bin/

		path	
Step 4	Initialize the node	Go to the execution path	Command: cd /home/ghpb-bin/ Tip: /home/ghpb-bin/ is the program execution path you set
		Node initialization	Command: sudo ./ghpb --datadir node/data init gensis.json
Step 5	Import the account	Export the account	Export your account information from HPB Wallet;
		Create 'keystore'	Command: cd node/data/ Command: mkdir keystore Command: ls
		Import the node	Go to path 'home/ghpb-bin/node/data/keystore', and copy the account information to file holder 'keystore'
Step 6	Node Launch	Option 1	Command: cd /home/ghpb-bin/ Command: sudo ./ghpb -datadir node/data --networkid 100 --port 3004 console 100 stands for the HPB MainNet network number; 3004 stands for the local 'ghpb' port;
		Option 2	Command: cd /home/ghpb-bin/ Command: sudo nohup ./ghpb --datadir node/data --networkid 100 --verbosity 3 --rpc --rpcapi hpb,web3,admin,txpool,debug,personal,net,miner,prometheus & Command: sudo ./ghpb attach http://127.0.0.1:8545 Note: 127.0.0.1 is the local IP, 8545 is the port number;
Step 7	Start mining	Start mining	Command: miner.start()

4.4 EXAMPLE OF SETTING UP THE EXECUTABLE FILE

(1) Confirm the Execution Path

Enter '**sudo mkdir /home/ghpb-bin**' to create execution path;

'/home/ghpb-bin' can be changed to specific path

```
hpb@dell-PowerEdge-R730:/$ sudo mkdir /home/ghpb-bin
```

(2) Switch to Root User

Enter '**su root**', and enter root account password as prompted;

```
hpb@dell-PowerEdge-R730:/$ su root
Password:
```

(3) Choose the Downloading Path

Enter '`cd /home/`';

Note: '/home/' can be changed to specific path;

```
root@dell-PowerEdge-R730:/# cd /home/
```

(4) Download the HPB MainNet Executable program

Enter '`sudo git clone https://github.com/hpb-project/hpb-release`' to download MainNet executable program;

```
root@dell-PowerEdge-R730:/home# sudo git clone https://github.com/hpb-project/hpb-release
Cloning into 'hpb-release'...
remote: Counting objects: 18, done.
remote: Compressing objects: 100% (15/15), done.
remote: Total 18 (delta 0), reused 15 (delta 0), pack-reused 0
Unpacking objects: 100% (18/18), done.
Checking connectivity... done.
```

(5) Check HPB HPB MainNet executable

Enter '`cd hpb-release/`' to go to directory 'hpb-release'.

Enter command '`ls`' and you will see three files named 'bin', 'config', and 'README.md'.

```
root@dell-PowerEdge-R730:/home# cd hpb-release/
root@dell-PowerEdge-R730:/home/hpb-release# ls
bin  config  README.md
```

```
hpb@dell-PowerEdge-R730:/hpb-release/bin$ sudo chmod +x ghpb-v0.0.0.1 -R
```

(6) Copy the Genesis File to Execution Path

Enter '`cd config/`' to go to directory 'config', then enter '`sudo cp genesis.json /home/ghpb-bin/`';

Note: '/home/ghpb-bin/' stands for the execution path you set.

```
root@dell-PowerEdge-R730:/home/hpb-release# cd config/
root@dell-PowerEdge-R730:/home/hpb-release/config# sudo cp genesis.json /home/ghpb-bin/
```

(7) Decompress HPB MainNet

Enter '`cd ..`', then '`cd bin/`' to get to the download directory.

```
root@rootroot:/home/hpb-release/config# cd ..
root@rootroot:/home/hpb-release# cd bin/
```

To decompress HPB MainNet, enter '`sudo tar zxvf File`'

Note: *File* stands for HPB MainNet file, e.g. 'ghpb-v0.0.0.1.tar.gz'

```
root@rootroot:/home/hpb-release/bin# sudo tar zxvf ghpb-v0.0.0.1.tar.gz
ghpb-v0.0.0.1/
ghpb-v0.0.0.1/iperf3
ghpb-v0.0.0.1/promfile
ghpb-v0.0.0.1/ghpb
```

Change the file permission

Enter '**sudo chmod +x ghpb-v0.0.0.1 -R**'.

Copy to the Execution Path

Enter '**sudo cp ghpb-vX.X.X.X/* /home/ghpb-bin/**'.

'/home/ghpb-bin/' stands for the execution path you set;

```
root@rootroot:/home/hpb-release/bin# sudo cp ghpb-v0.0.0.1/* /home/ghpb-bin/
```

(8) Node Initialization

Enter '**cd /home/ghpb-bin/**' to go to the execution path, then enter '**sudo ./ghpb --datadir node/data init genesis.json**'.

Proceed to the next step when the screen displays "Successfully wrote genesis state database=chaindata";

Note: '/home/ghpb-bin/' stands for the execution path you set;

```
root@dell-PowerEdge-R730:/home/go-hpb# cd /home/ghpb-bin/
root@dell-PowerEdge-R730:/home/ghpb-bin# sudo ./ghpb --datadir ndoe/data init genesis.json
INFO [08-28|17:46:29] HPB : Create New HpbConfig object
INFO [08-28|17:46:29] HPB : Allocated cache and file handles database=/home/ghpb-
bin/ndoe/data/ghpb/chaindata cache=16 handles=16
INFO [08-28|17:46:29] HPB : Writing custom genesis block
INFO [08-28|17:46:29] HPB : Successfully wrote genesis state database=chaindata
hash=6a068f...3e45f1
```

(9) Export the Account

Export your account information from HPB Wallet;

(10) Create 'keystore'

Enter '**cd node/data/**' before entering '**mkdir keystore**'; Enter '**ls**' so that you can see files 'ghpb' and 'keystore'.

```
root@dell-PowerEdge-R730:/home/ghpb-bin#
root@dell-PowerEdge-R730:/home/ghpb-bin/node/data#
root@dell-PowerEdge-R730:/home/ghpb-bin/node/data#
ghpb keystore
```

(11) Import the Node

Enter the path '**/home/ghpb-bin/node/data/ keystore**' and copy your account information to the file holder 'keystore';


```
root@rootroot:/home/ghpb-bin# echo "111" > pwd
root@rootroot:/home/ghpb-bin# cat pwd
111
```

(12) Node Launch

Option 1: Enter '`cd /home/ghpb-bin/`' to go to directory '`ghpb-bin`'. Then enter '`sudo ./ghpb --datadir node/data --networkid 100 --port 3004 --unlock "account address" console`' and enter account password as prompted;

The node has been successfully launched when the screen displays 'Welcome to the GHPB JavaScript console!'.

CAUTION: If the user exits the remote server or turns off the terminal, the node launch will be terminated for this option.

```
root@dell-PowerEdge-R730:/home/ghpb-bin# sudo ./ghpb --datadir node/data --networkid 100 --port 3004 console
INFO [08-28|13:44:11] HPB : Create New HpbConfig object
INFO [08-28|13:44:11] HPB : Initialising Hpb node          network=100
.....
Welcome to the GHPB JavaScript console!

instance:
coinbase: 0x84b5113ca960ce72d2b8ff7a239ff22a575703b0
at block: 0 (Tue, 07 Aug 2018 10:30:01 CST)
datadir: /home/ghpb-bin/node/data
modules: admin:1.0 debug:1.0 hpb:1.0 miner:1.0 net:1.0 personal:1.0 prometheus:1.0 rpc:1.0
txpool:1.0 web3:1.0
```

r

Option 2: Enter '`cd /home/ghpb-bin/`' to go to directory '`ghpb-bin`'. Then enter '`sudo nohup ./ghpb --datadir node/data --networkid 100 --verbosity 3 --rpc --rpcapi hpb,web3,admin,txpool,debug,personal,net,miner,prometheus &`' press the [Enter] key twice;;

```
root@dell-PowerEdge-R730:/home/ghpb-bin# sudo nohup ./ghpb --datadir node/data --networkid 100 --verbosity 3 --rpc --rpcapi hpb,web3,admin,txpool,debug,personal,net,miner,Prometheus &
[1] 5406
root@dell-PowerEdge-R730:/home/ghpb-bin# nohup: ignoring input and appending output to 'nohup.out'
```

Wait 10 seconds, then enter Command: '`sudo ./ghpb attach http://127.0.0.1:8545`'.

The node has been successfully launched when the screen displays "Welcome to the GHPB JavaScript console!".

```
root@dell-PowerEdge-R730:/home/ghpb-bin# sudo ./ghpb attach http://127.0.0.1:8545
Welcome to the GHPB JavaScript console!

instance:
coinbase: 0x84b5113ca960ce72d2b8ff7a239ff22a575703b0
at block: 0 (Tue, 07 Aug 2018 10:30:01 CST)
datadir: /home/ghpb-bin/node/data
modules: admin:1.0 debug:1.0 hpb:1.0 miner:1.0 net:1.0 personal:1.0 prometheus:1.0 rpc:1.0
txpool:1.0 web3:1.0
```

(13) Start Mining

Enter '`miner.start()`' and start mining

```
>miner.start()  
true
```

4.5 CHECK NODE STATUS

You may check the node status when it is launched;

Enter the following commands only after the node has successfully launched.

No.	Purpose	Command	Descriptions
1	Check if the node is connected to the MainNet	net	Check the current peerCount of the node
2	Check node status	admin.nodeInfo	Check the type of the node (candidate node or high-performance node)
3	Check mining status	hpb.mining	Check if the node is mining

(1) Check Connection Status

Enter '`net`', and wait a moment to check if it can be connected to the MainNet.

'peerCount' stands for the number of the node's servers connected to the MainNet.

e.g.

```
> net  
{  
  listening: true,  
  peerCount: 5,  
  version: "100",  
  getListening: function(callback),  
  getPeerCount: function(callback),  
  getVersion: function(callback)  
}
```

Note: The example above shows a peerCount of 5, indicating that 5 servers are currently connected to the network. Nodes must have a **peerCount of no less than 5** for a successful connection to the MainNet.

Version stands for the current network number which is 100.

(2) Check Node Type

Enter '`admin.nodeInfo`' to check the node information. 'Prenode' in 'local' stands for the Candidate Node, and Hpnod represents the High-Performance Node.

Note: The type of nodes is set as 'prenode' when first launched and will change after elected through the software.

e.g.

```
>admin.nodeInfo
{
  id:
    "df787c4c04a6c9307cefedbc857010e5306be9096153adf3b1351964a27d0ac607464cf28ba3d93
    c42c5e7a371d7281bdb1a9e5d19a16e30b24d1c3595e2180a",
  ip: "::",
  listenAddr: "[::]:3001",
  local: "PreNode",
  name: "",
  ports: {
    tcp: 3001,
    udp: 3001
  }
}
```

In this case, 'id' stands for the node's ID number; 'PreNode' means the node type is Candidate Node; 'listenAddr' represents the listening port address number ; 'ports' stands for the local port number;

(3) Check Mining Status

Enter 'hpb.mining' to check the mining status of the node. Returning 'true' means it is mining, 'false' means not. To start mining, enter 'miner.start()';

e.g.

```
>hpb.mining
true
```

Chapter 5 Synchronized Node Setup

Akin to light nodes, the synchronized node can start transactions and synchronize blocks. Its limitations are that it cannot proceed to the election of candidate nodes, or high-performance nodes, nor can it become a block producer. They can however, serve as access nodes for DAPPs. There are two options for a synchronized node setup, listed below:

- (1) Set up the node through source code. Basic software programming and code compiling knowledge is required for this option. You also must complete GO setup (see chapter 2) prior to proceeding to the set up;
- (2) Set up through HPBexecutable. You can follow the steps of the executable setup for this option.

ATTENTION: HPB program operation should be based on ROOT.

5.1 STEPS OF SETUP THROUGH SOURCE CODE

The following are the steps for a setup through the source code option.

No.	Contents	Steps	Descriptions
Step 1	Confirm the execution path	Create the execution path	Command: sudo mkdir /home/ghpb-bin Tip: /home/ghpb-bin can be changed to a specific path
		Switch to root user	Command: su root Tip: Entering root owner password is required
Step 2	Download HPBexecutable file and the genesis file	Choose the download path	Command: cd /home/ Tip: /home/ can be changed to a specific path
		Download HPB MainNet executable	Command: sudo git clone https://github.com/hpb-project/hpb-release
		Check HPB MainNet executable	Command: cd hpb-release/ Command: ls
		Copy the genesis file to execution path	Command: cd config/ Command: sudo cp genesis.json /home/ghpb-bin/
Step 3	Download and compile the 'go-hpb' source code	Go to the download path	Command: cd /home/ Note: /home/ can be changed to a specific path
		Download the 'go-hpb' source code	Command: sudo git clone https://github.com/hpb-project/go-hpb.git
		Compile the	Command: cd go-hpb/

		'go-hpb'	Command: make all
		Copy to execution path	Command: sudo cp build/bin/* /home/ghpb-bin/ Note: 'build/bin/*' is the compile path, '/home/ghpb-bin/' is the execution path.
Step 4	Initialize the node	Go to the execution path	Command: cd /home/ghpb-bin/ Tip: /home/ghpb-bin/ is the execution path you set
		Node Initialization	Command: sudo ./ghpb --datadir node/data init genesis.json
Step 5 (a)	Import the account	Export account	Export account information from the HPB Wallet;
		Create 'keystore'	Command: cd node/data/ Command: mkdir keystore Command: ls
		Import the node	Go to path 'home/ghpb-bin/node/data/keystore', and copy account information to 'keystore' file
Step 5 (b)	Create an account	Create an account	Command: ./ghpb --datadir node/data account new Please set your account password, and record the Address you receive after re-entering your password;
Step 6	Launch the Node	Option 1	Command: cd /home/ghpb-bin/ Command: sudo ./ghpb -datadir node/data --networkid 100 --port 3004 console 100 stands for the HPB MainNet network number; 3004 stands for local 'ghpb' port;
		Option 2	Command: cd /home/ghpb-bin/ Command: sudo nohup ./ghpb --datadir node/data --networkid 100 --verbosity 3 --rpc --rpcapi hpb,web3,admin,txpool,debug,personal,net,miner,prometheus --nodetype synnode & Command: sudo ./ghpb attach http://127.0.0.1:8545 Note: 127.0.0.1 is local IP, 8545 is port number;

5.2 EXAMPLE OF NODE SETUP THROUGH SOURCE CODE

(1) Confirm the Execution Path

Enter '**sudo mkdir /home/ghpb-bin**' to create execution path;

'/home/ghpb-bin' can be changed to a specific path;

```
hpb@ dell-PowerEdge-R730:~$ sudo mkdir /home/ghpb-bin
```

(2) Switch to Root User

Switch to root user by entering 'su root', and enter root account password as prompted;

```
hpb@ dell-PowerEdge-R730:~$ su root
Password:
```

(3) Choose the Download Path

Enter '**cd /home/**';

'/home/' can be changed to a specific path;

```
root@ dell-PowerEdge-R730: ~$ cd /home/
```

(4) Download HPB HPB MainNet executable

Enter '**sudo git clone <https://github.com/hpb-project/hpb-release>**' to download HPB MainNet executable;

```
root @ dell-PowerEdge-R730:/home$ sudo git clone https://github.com/hpb-project/hpb-release
Cloning into 'hpb-release'...
remote: Counting objects: 18, done.
remote: Compressing objects: 100% (15/15), done.
remote: Total 18 (delta 0), reused 15 (delta 0), pack-reused 0
Unpacking objects: 100% (18/18), done.
Checking connectivity... done.
```

(5) Check the HPB HPB MainNet executable

Enter '**cd hpb-release/**' to go to directory 'hpb-release'.

Enter command '**ls**' and you will see three files named "bin", "config", and "README.md".

```
root @ dell-PowerEdge-R730:/home$ cd hpb-release/
root @dell-PowerEdge-R730:/home/hpb-release$ ls
bin  config  README.md
```

```
hpb@dell-PowerEdge-R730:/hpb-release/bin$ sudo chmod +x ghpb-v0.0.0.1 -R
```

(6) Copy the Genesis File to Execution Path

Enter '**cd config/**' to go to directory 'config', then enter '**sudo cp genesis.json /home/ghpb-bin/**';

Note: '/home/ghpb-bin/' stands for the execution path you set.

```
root @ dell-PowerEdge-R730:/home/hpb-release$ cd config/
root @ dell-PowerEdge-R730:/home/hpb-release/configs$ sudo cp genesis.json /home/ghpb-bin/
```

(7) Go to the Download Path

Enter '`cd /home/`' to download the source code to directory 'home'.

'/home/' can be changed to the source code download path.

```
root @ dell-PowerEdge-R730:/home/hpb-release/config$ cd /home/
```

(8) Download the 'go-hpb'

Enter '`sudo git clone https://github.com/hpb-project/go-hpb.git`'. When the process turns to "100%" and shows "Checking connectivity ... done", '_go-hpb' has been successfully downloaded. Proceed to the next step.

```
root @ dell-PowerEdge-R730:/home$ sudo git clone https://github.com/hpb-project/go-hpb.git
Cloning into 'go-hpb'...
remote: Counting objects: 10813, done.
remote: Compressing objects: 100% (118/118), done.
remote: Total 10813 (delta 86), reused 108 (delta 47), pack-reused 10647
Receiving objects: 100% (10813/10813), 14.09 MiB | 4.15 MiB/s, done.
Resolving deltas: 100% (6075/6075), done.
Checking connectivity... done.
```

(9) Compile the 'go-hpb'

Enter '`cd go-hpb/`', then enter '`make all`'; Compile 'go-hpb';

```
root@ dell-PowerEdge-R730:/home# cd go-hpb/
root@ dell-PowerEdge-R730:/home/go-hpb# make all
build/env.sh go run build/ci.go install ./cmd/ghpb
>>> /usr/lib/go-1.9/bin/go install -ldflags -X
main.gitCommit=04fa6c874b447f0de0a4296b9e573119e1997fcc -v ./cmd/ghpb
github.com/hpb-project/go-hpb/vendor/github.com/prometheus/procfs/internal/util
github.com/hpb-project/go-hpb/common/bitutil
.....
Done building.
Run "/home/go-hpb/build/bin/promfile" to launch promfile.
```

(10) Copy to the Execution Directory

Enter '`sudo cp build/bin/* /home/ghpb-bin/`';

'/home/ghpb-bin/' stands for execution directory;

```
root@ dell-PowerEdge-R730:/home/go-hpb# sudo cp build/bin/* /home/ghpb-bin/
```

(11) Node Initialization

Enter '`cd /home/ghpb-bin/`' to go to the execution path, then enter '`sudo ./ghpb --datadir node/data init genesis.json`'.

Proceed to the next step when the screen displays "Successfully wrote genesis state database=chaindata";

Note: '/home/ghpb-bin/' is the execution path;

```
root@ dell-PowerEdge-R730:/home/go-hpb# cd /home/ghpb-bin/
root@ dell-PowerEdge-R730:/home/ghpb-bin# sudo ./ghpb --datadir node/data init genesis.json
INFO [08-28|13:29:05] HPB : Create New HpbConfig object
INFO [08-28|13:29:05] HPB : Allocated cache and file handles database=/home/ghpb-
bin/node/data/ghpb/chaindata cache=16 handles=16
INFO [08-28|13:29:05] HPB : Writing custom genesis block
INFO [08-28|13:29:05] HPB : Successfully wrote genesis state database=chaindata
hash=6a068f...3e45f1
```

(12) a. Export Your Account

Export your account information from the HPB Wallet;

Create 'keystore'

Enter '**cd node/data/**', then enter '**mkdir keystore**';

Enter '**ls**' so that you can see files '**ghpb**' and '**keystore**';

```
root@dell-PowerEdge-R730:/home/ghpb-bin#
root@dell-PowerEdge-R730:/home/ghpb-bin/node/data#
root@dell-PowerEdge-R730:/home/ghpb-bin/node/data#
ghpb keystore
```

or Import the Node

Go to the path '/home/ghpb-bin/node/data/ keystore', and copy your account information to file holder 'keystore';

b. Create a new account

Enter '**./ghpb --datadir node/data account new**', and wait until prompted to set password for your new account.

Record the address returned to your new account after re-entering the password;

```
root@ dell-PowerEdge-R730:/home/ghpb-bin# ./ghpb --datadir node/data account new
INFO [08-28|13:30:47] HPB : Create New HpbConfig object
INFO [08-28|13:30:47] HPB : Initialising Hpb node network=1
GetBindAccount ecode:101,
emsg:[%!s(boe._Ctype_char=105) %!s(boe._Ctype_char=110) %!s(boe._Ctype_char=105) %!s(boe._Ct
ype_char=116) %!s(boe._Ctype_char=32) %!s(boe._Ctype_char=102) %!s(boe._Ctype_char=97) %!s(b
oe._Ctype_char=105) %!s(boe._Ctype_char=108) %!s(boe._Ctype_char=101) %!s(boe._Ctype_char=1
.....
) %!s(boe._Ctype_char=0) %!s(boe._Ctype_char=0) %!s(boe._Ctype_char=0) %!s(boe._Ctype_char=0)]
WARN [08-28|13:30:57] HPB : Get coinbase from boe fail, and set coinbase with account[0]
INFO [08-28|13:30:57] HPB : Allocated cache and file handles database=/home/ghpb-
bin/node/data/ghpb/chaindata cache=128 handles=1024
Your new account is locked with a password. Please give a password. Do not forget this password.
Passphrase:
Repeat passphrase:
Address: {84b5113ca960ce72d2b8ff7a239ff22a575703b0}
```

(13) Launch the Node

Option 1: Enter '**cd /home/ghpb-bin/**' to go to directory '**ghpb-bin**'. Enter '**sudo ./ghpb --datadir node/data --networkid 100 --port 3004 console**';

The node has been successfully launched when the screen displays "Welcome to the GHPB JavaScript console!".

CAUTION: If the user exits the remote server or turns off the terminal, the node launch will be terminated for this option.

```
root@dell-PowerEdge-R730:/home/ghpb-bin# sudo ./ghpb --datadir node/data --networkid 100 --port
3004 --nodetype synnode console
INFO [08-28|13:44:11] HPB : Create New HpbConfig object
INFO [08-28|13:44:11] HPB : Initialising Hpb node network=100
.....
Welcome to the GHPB JavaScript console!

instance:
coinbase: 0x84b5113ca960ce72d2b8ff7a239ff22a575703b0
at block: 0 (Tue, 07 Aug 2018 10:30:01 CST)
datadir: /home/ghpb-bin/node/data
modules: admin:1.0 debug:1.0 hpb:1.0 miner:1.0 net:1.0 personal:1.0 prometheus:1.0 rpc:1.0
txpool:1.0 web3:1.0
```

Option 2: Enter '`cd /home/ghpb-bin/`' to go to directory '`ghpb-bin`'. After entering '`sudo nohup ./ghpb --datadir node/data --networkid 100 --verbosity 3 --rpc --rpcapi hpb,web3,admin,txpool,debug,personal,net,miner,prometheus --nodetype synnode &`', press the [Enter] key twice;

```
root@dell-PowerEdge-R730:/home/ghpb-bin# sudo nohup ./ghpb --datadir node/data --networkid 100
--verbosity 3 --rpc --rpcapi hpb,web3,admin,txpool,debug,personal,net,miner,prometheus --nodetype
synnode &
[1] 5406
root@dell-PowerEdge-R730:/home/ghpb-bin# nohup: ignoring input and appending output to
'nohup.out'
```

Wait 10 seconds, then enter Command: '`sudo ./ghpb attach`
<http://127.0.0.1:8545>'.

The node has been successfully launched when the screen displays "Welcome to the GHPB JavaScript console!".

```
root@dell-PowerEdge-R730:/home/ghpb-bin# sudo ./ghpb attach http://127.0.0.1:8545
Welcome to the GHPB JavaScript console!

instance:
coinbase: 0x84b5113ca960ce72d2b8ff7a239ff22a575703b0
at block: 0 (Tue, 07 Aug 2018 10:30:01 CST)
datadir: /home/ghpb-bin/node/data
modules: admin:1.0 debug:1.0 hpb:1.0 miner:1.0 net:1.0 personal:1.0 prometheus:1.0 rpc:1.0
txpool:1.0 web3:1.0
```

5.3 SETUP THROUGH EXECUTABLE FILE

No.	Contents	Steps	Descriptions
Step 1	Confirm the execution path	Create the execution path	Command: <code>sudo mkdir /home/ghpb-bin</code> Tip: <code>/home/ghpb-bin</code> can be changed to A specific path
		Switch to root user	Command: <code>su root</code> Tip: Entering root owner password is required
Step	Download	Choose the	Command: <code>cd /home/</code>

2	HPBexecutable and the genesis file	download path	Tip: <i>/home/</i> can be changed to A specific path
		Download HPB MainNet Executable	Command: sudo git clone https://github.com/hpb-project/hpb-release
		Check HPB MainNet Executable	Command: cd hpb-release/ Command: ls
		Change file permission	Command: sudo chmod +x ghpb-v0.0.0.1 -R
		Copy the genesis file to execution path	Command: cd config/ Command: sudo cp genesis.json /home/ghpb-bin/
Step 3	Download the executable file	Decompress HPB MainNet	Command: cd .. Command: cd bin/ Command: sudo tar zxvf File Note: <i>File</i> stands for the HPB MainNet file, e.g. 'ghpb-v0.0.0.1.tar.gz'
		Copy to the execution path	Command: sudo cp ghpb-vX.X.X.X/* /home/ghpb-bin/
Step 4	Node Initialization	Go to the execution path	Command: cd /home/ghpb-bin/ Tip: <i>/home/ghpb-bin/</i> is the program execution path set
		Node initialization	Command: sudo ./ghpb --datadir node/data init genesis.json
Step 5 (a)	Import the account	Export the account	Export your account information from the HPB Wallet;
		Create 'keystore'	Command: cd node/data/ Command: mkdir keystore Command: ls
		Import the node	Go to path ' <i>home/ghpb-bin/node/data/ keystore</i> ', and copy the account information to file holder 'keystore'
Step 5 (b)	Create a new account	Create a new account	Command: ./ghpb --datadir node/data account new Please set your account password (e.g.123), and record the Address you receive after re-entering your password;
Step	Node Launch	Option 1	Command: cd /home/ghpb-bin/

6			Command: sudo ./ghpb -datadir node/data --networkid 100 --port 3004 console 100 stands for the HPB MainNet network number; 3004 stands for the local 'ghpb' port;
		Option 2	Command: cd /home/ghpb-bin/ Command: sudo nohup ./ghpb --datadir node/data --networkid 100 --verbosity 3 --rpc --rpcapi hpb,web3,admin,txpool,debug,personal,net,miner,prometheus & Command: sudo ./ghpb attach http://127.0.0.1:8545 Note: 127.0.0.1 is the local IP, 8545 is the port number;

5.4 EXAMPLE OF SETUP THROUGH EXECUTABLE FILE

(1) Confirm Execution Path

Enter '**sudo mkdir /home/ghpb-bin**' to create execution path;

'/home/ghpb-bin' can be changed to a specific path;

```
hpb@ dell-PowerEdge-R730:~$ sudo mkdir /home/ghpb-bin
```

(2) Switch To Root User

Enter 'su root', and enter root account password as prompted;

```
hpb@dell-PowerEdge-R730:~$ su root
Password:
```

(3) Choose Download Path

Enter '**cd /home/**';

'/home/' can be changed to a specific path;

```
root@ dell-PowerEdge-R730: ~$ cd /home/
```

(4) Download HPB MainNet Executable

Enter '**sudo git clone <https://github.com/hpb-project/hpb-release>**' to

download HPB MainNet Executable;

```
root @ dell-PowerEdge-R730:/home$ sudo git clone https://github.com/hpb-project/hpb-release
Cloning into 'hpb-release'...
remote: Counting objects: 18, done.
remote: Compressing objects: 100% (15/15), done.
remote: Total 18 (delta 0), reused 15 (delta 0), pack-reused 0
Unpacking objects: 100% (18/18), done.
Checking connectivity... done.
```

(5) Check HPB MainNet Executable

Enter '`cd hpb-release/`' to go to directory 'hpb-release'.

Enter command '`ls`' and you will see three files named "bin", "config", and "README.md".

```
root@dell-PowerEdge-R730:/home$ cd hpb-release/  
root@dell-PowerEdge-R730:/home/hpb-release$ ls  
bin  config  README.md
```

(6) Change File Permissions

Enter '`sudo chmod +x ghpv-v0.0.0.1 -R`'

```
hpb@dell-PowerEdge-R730:/hpb-release/bin$ sudo chmod +x ghpv-v0.0.0.1 -R
```

(7) Copy the Genesis File To Execution Path

Enter '`cd config/`' to go to directory 'config', then enter '`sudo cp genesis.json /home/ghpb-bin/`';

Note: '/home/ghpb-bin/' stands for the execution path you set.

```
root@dell-PowerEdge-R730:/home/hpb-release$ cd config/  
root@dell-PowerEdge-R730:/home/hpb-release/config$ sudo cp genesis.json /home/ghpb-bin/
```

(8) Decompress HPB MainNet

Enter '`cd ..`', then '`cd bin/`' to get to the download directory.

```
root@dell-PowerEdge-R730:/home/hpb-release/config# cd ..  
root@dell-PowerEdge-R730:/home/hpb-release# cd bin/
```

Enter '`sudo tar xzvf ghpv-vx.x.x.x.tar.gz`' to command to decompress file 'ghpv-vx.x.x.x.tar.gz'

Note: 'x.x.x.x' stands for the version number of HPB software.

```
root@dell-PowerEdge-R730:/home/hpb-release/bin# sudo tar xzvf ghpv-v0.0.0.1.tar.gz  
ghpv-v0.0.0.1/  
ghpv-v0.0.0.1/iperf3  
ghpv-v0.0.0.1/promfile  
ghpv-v0.0.0.1/ghpv
```

(9) Copy to the Execution Path

Enter '`sudo cp ghpv-vX.X.X.X/* /home/ghpb-bin/`',

'/home/ghpb-bin/' stands for the execution path you set;

```
root@dell-PowerEdge-R730:/home/hpb-release/bin# sudo cp ghpv-v0.0.0.1/* /home/ghpb-bin/
```

(10) Node Initialization

Enter '`cd /home/ghpb-bin/`' to go to the execution path, then enter '`sudo ./ghpv -
-datadir node/data init genesis.json`'.

Proceed to the next step when the screen displays 'Successfully wrote genesis state database=chaindata';

Note: '/home/ghpb-bin/' stands for the execution path you set;

```
root@ dell-PowerEdge-R730:/home/go-hpb# cd /home/ghpb-bin/
root@ dell-PowerEdge-R730:/home/ghpb-bin# sudo ./ghpb --datadir node/data init genesis.json
INFO [08-28|13:29:05] HPB : Create New HpbConfig object
INFO [08-28|13:29:05] HPB : Allocated cache and file handles database=/home/ghpb-
bin/node/data/ghpb/chaindata cache=16 handles=16
INFO [08-28|13:29:05] HPB : Writing custom genesis block
INFO [08-28|13:29:05] HPB : Successfully wrote genesis state database=chaindata
hash=6a068f...3e45f1
```

(11) a. Export the Account

Export your account information from HPB Wallet;

Create 'keystore'

Enter '**cd node/data/**', then enter '**mkdir keystore**';

Enter '**ls**' so that you can see files '**ghpb**' and '**keystore**';

```
root@dell-PowerEdge-R730:/home/ghpb-bin#
root@dell-PowerEdge-R730:/home/ghpb-bin/node/data#
root@dell-PowerEdge-R730:/home/ghpb-bin/node/data#
ghpb keystore
```

or Import the Node

Enter the path '**home/ghpb-bin/node/data/ keystore**' and copy your account information to the file holder '**keystore**';

b. Create a New Account

Enter '**./ghpb --datadir node/data account new**', wait until prompted for a password for the new account. Record the new address returned to your new account after re-entering the password;

```
root@dell-PowerEdge-R730:/home/ghpb-bin/node/data# cd /home/ghpb-bin/
root@dell-PowerEdge-R730:/home/ghpb-bin# sudo ./ghpb --datadir node/data --networkid 100 --port
3004 --nodetype synnode console
INFO [08-28|13:44:11] HPB : Create New HpbConfig object
INFO [08-28|13:44:11] HPB : Initialising Hpb node network=100
.....
Welcome to the GHPB JavaScript console!

instance:
coinbase: 0x84b5113ca960ce72d2b8ff7a239ff22a575703b0
at block: 0 (Tue, 07 Aug 2018 10:30:01 CST)
datadir: /home/ghpb-bin/node/data
modules: admin:1.0 debug:1.0 hpb:1.0 miner:1.0 net:1.0 personal:1.0 prometheus:1.0 rpc:1.0
txpool:1.0 web3:1.0
```

(12) Node Launch

Option 1: Enter '**cd /home/ghpb-bin/**' to go to directory '**ghpb-bin**'. Enter

'sudo ./ghpb --datadir node/data --networkid 100 --port 3004 --unlock
"account address" --nodetype synnode console' and enter account password as prompted;

The node has been successfully launched when the screen displays 'Welcome to the GHPB JavaScript console!'.

CAUTION: If the user exits the remote server or turns off the terminal, the node launch will be terminated for this option.

```
root@dell-PowerEdge-R730:/home/ghpb-bin# sudo ./ghpb --datadir node/data --networkid 100 --port
3004 --nodetype synnode console
INFO [08-28|13:44:11] HPB : Create New HpbConfig object
INFO [08-28|13:44:11] HPB : Initialising Hpb node                network=100
.....
Welcome to the GHPB JavaScript console!

instance:
coinbase: 0x84b5113ca960ce72d2b8ff7a239ff22a575703b0
at block: 0 (Tue, 07 Aug 2018 10:30:01 CST)
datadir: /home/ghpb-bin/node/data
modules: admin:1.0 debug:1.0 hpb:1.0 miner:1.0 net:1.0 personal:1.0 prometheus:1.0 rpc:1.0
txpool:1.0 web3:1.0
```

Option 2: Enter '**cd /home/ghpb-bin/**' to go to directory '**ghpb-bin**'. After entering '**sudo nohup ./ghpb --datadir node/data --networkid 100 --verbosity 3 --rpc --rpcapi hpb,web3,admin,txpool,debug,personal,net,miner,prometheus --nodetype synnode &**', press the [Enter] key twice;

```
root@dell-PowerEdge-R730:/home/ghpb-bin/node/data# cd /home/ghpb-bin/
root@dell-PowerEdge-R730:/home/ghpb-bin# sudo nohup ./ghpb --datadir node/data --networkid 100
--verbosity 3 --rpc --rpcapi hpb,web3,admin,txpool,debug,personal,net,miner,prometheus --nodetype
synnode &
[1] 5406
root@dell-PowerEdge-R730:/home/ghpb-bin# nohup: ignoring input and appending output to
'nohup.out'
```

Wait 10 seconds, then enter Command: '**sudo ./ghpb attach <http://127.0.0.1:8545>**'.

The node has been successfully launched when the screen displays 'Welcome to the GHPB JavaScript console!'.

```
root@ dell-PowerEdge-R730:/home/ghpb-bin# sudo ./ghpb attach http://127.0.0.1:8545
Welcome to the GHPB JavaScript console!

instance:
coinbase: 0x84b5113ca960ce72d2b8ff7a239ff22a575703b0
at block: 0 (Tue, 07 Aug 2018 10:30:01 CST)
datadir: /home/ghpb-bin/node/data
modules: admin:1.0 debug:1.0 hpb:1.0 miner:1.0 net:1.0 personal:1.0 prometheus:1.0 rpc:1.0
txpool:1.0 web3:1.0
```

5.5 CHECK NODE STATUS

You may check the node status when it is launched;

Enter the following commands only after the node has successfully launched.

No.	Contents	Command	Descriptions
1	Check if it is connected to MainNet	net	Check the current peerCount of the node.

2	Check the Node status	admin.nodeInfo	Check the type of the node
----------	-----------------------	----------------	----------------------------

(1) Check Connection Status

Enter 'net', and wait a few moments to check if it can be connected to the MainNet.

'peerCount' stands for the number of the Node's servers connected to the MainNet.

e.g.

```
> net
{
  listening: true,
  peerCount: 5,
  version: "100",
  getListening: function(callback),
  getPeerCount: function(callback),
  getVersion: function(callback)
}
```

Note: The example above shows a peerCount of 5, indicating that 5 servers are currently connected to the server. Nodes must have a **peerCount of no less than 5** for a successful connection to MainNet.

Version stands for the current network number which is 100.

(2) Check the Node type

Enter 'admin.nodeInfo' to check the Node's information.

'Synnode' in 'local' represents the synchronized Node.

e.g.

```
>admin.nodeInfo
{
  id:
    "df787c4c04a6c9307cefedbc857010e5306be9096153adf3b1351964a27d0ac607464cf28ba3d93
    c42c5e7a371d7281bdb1a9e5d19a16e30b24d1c3595e2180a",
  ip: "::",
  listenAddr: "[::]:3001",
  local: "SynNode",
  name: "",
  ports: {
    tcp: 3001,
    udp: 3001
  }
}
```

In this case, 'id' stands for the node's only ID number; 'SynNode' means the current node type is synchronized node; 'listenAddr' represents the listening port address number; 'ports' stands for the local port number.

Chapter 6 Account Management and Transactions

6.1 COMMON COMMANDS

Node users may enter commands on the console and access functions such as an information search. Please find the spreadsheet below for command examples.

Module	Function	Number of Commands
Account	Account management	4
Transaction	Transaction management	2
Node	Node information management	5

(1) Account

- `personal.newAccount()`: Create new account
- `hpb.accounts`: Get account address
- `hpb.getBalance (account address)`: Check balance
- `personal.getListAccounts`: Get account list

(2) Transactions

- `hpb.sendTransaction({from:" My address", to: "Receiving address",value:web3.toWei(amount,"currency")})` : Send transaction request and transfer the amount to the receiving account.
- `txpool.status`: Check transaction status

(3) Node

- `hpb.blockNumber`: Check the highest block number
- `hpb.getBlock(block number)`: Check the block information according to the block number
- `prometheus.getCandidateNNodes()`: Get candidate Nodes list
- `Prometheus.getHpbNodes()`: Get high-performance Nodes list
- `net`: Check the peer count

6.2 EXAMPLES OF COMMON COMMANDS

(1) Create account

Enter '`personal.newAccount()`' to set up a new account. You will be returned to new account address after setting your password;

e.g.

```
> personal.newAccount()
Passphrase:
Repeat passphrase:
"0x101e04724a52e214ec49b950964a707c4725042c"
```


In this example, the account "0x101e04724a52e214ec49b950964a707c4725042c" is successfully created after entering password twice.

(2) Check balance

Enter 'hpb.getBalance("Account address")'.

The value returned is the balance of your account.

e.g.

```
> hpb.getBalance("0x6fa696461c8583dd389a331b38bd2fa5a0cb73ce")
184637
```

The example shows a balance of 184,637 HPB in the account
"0x6fa696461c8583dd389a331b38bd2fa5a0cb73ce"

(3) Transfer

Enter 'hpb.sendTransaction'({from:"My address",to:"Receiving address",value:web3.toWei(amount,"currency")})

Send transaction request to transfer the amount to the receiving address. The transaction hash returned suggests successful transfer;

Note: Please check your balance if the transfer failed and confirm whether there are enough funds available.

e.g.

```
> hpb.sendTransaction({from:"0x6fa696461c8583dd389a331b38bd2fa5a0cb73ce",to:"0x5c1fd922380e4d2dc1d31018a133cf3d629172a4",value:web3.toWei(1,"hpb")})
"0x74fda2724a713322abc60f7f7bf67ec72af5f84b3bafb9903e4aff954ea97cc6"
```

Example shows 1hpb was transferred from "0x6fa696461c8583dd389a331b38bd2fa5a0cb73ce" to "0x5c1fd922380e4d2dc1d31018a133cf3d629172a4".

"0x74fda2724a713322abc60f7f7bf67ec72af5f84b3bafb9903e4aff954ea97cc6" represents the hash value for this transaction.

Chapter 7 BOE Firmware Update Instructions

If you are a BOE Node owner, you may update your BOE hardware unit through an online update or an SD card update when prompted by HPB system. Switching to the SD card update is recommended if the online update fails.

7.1 STEPS FOR AN ONLINE UPDATE

No.	Contents	Steps	Descriptions
Step 1	Stop All ghpB processes	Stop all ghpB Processes	Command: sudo killall ghpB
Step 2	Start to update	Start to update	Command: sudo ./ghpB boeupdate
Step 3	Start node	Option 1	Command: cd /home/ghpB-bin/ Command: sudo ./ghpB --datadir node/data --networkid 100 --port 3004 console 100 represents the HPB MainNet network number; 3004 represents the local 'ghpB' port;
		Option 2	Command: cd /home/ghpB-bin/ Command: sudo nohup ./ghpB --datadir node/data --networkid 100 --verbosity 3 --rpc --rpcapi hpb,web3,admin,txpool,debug,personal,net,mine r,prometheus & Command: sudo ./ghpB attach http://127.0.0.1:8545 Note: 127.0.0.1 is the local IP, 8545 is the port number;

7.2 EXAMPLES OF AN ONLINE UPDATE

Please follow the instructions below to update your BOE Firmware:

(1) Stop All 'ghpB' Processes

Execute the command '**sudo killall ghpB**' in the console. Make sure you stop all 'ghpB' programs before updating.

Then enter '**sudo killall ghpB**'. If prompted '**_ghpB: no process found_**', all 'ghpB' processes have been stopped;

```
root@ dell-PowerEdge-R730:/home/ghpB-bin# sudo killall ghpB
root@ dell-PowerEdge-R730:/home/ghpB-bin# sudo killall ghpB
ghpB: no process found
```

(2) Start the Update

Enter '**sudo ./ghpB boeupdate**', and wait until prompted '**_Upgrad 100%,upgrade succeeded_**', confirming a successful update;

```
root@dell-PowerEdge-R730:/home/ghpb-bin# sudo ./ghpb boeupdate
tmkdir : /tmp/hpbupgrade331425344
json download ok.
.....
Upgrade 80%, msg:receive finished
Upgrade 88%, msg:flash erase finished
Upgrade 95%,msg: flash write finished
upgrade succeeded
upgrade succeeded.
```

(3) Node Launch

Option 1: Enter `'cd /home/ghpb-bin/'` to go to directory `'ghpb-bin'`. Enter `'sudo ./ghpb --datadir node/data --networkid 100 --port 3004 console'`;

The Node has been launched successfully if you see `'Welcome to the GHPB JavaScript console!'`.

CAUTION: If the user exits the remote server or turns off the terminal, the node launch will be terminated for this option.

```
root@dell-PowerEdge-R730:/home/ghpb-bin/node/data# cd /home/ghpb-bin/
root@dell-PowerEdge-R730:/home/ghpb-bin# sudo ./ghpb --datadir node/data --networkid 100 --port
3004 console
INFO [08-28|13:44:11] HPB : Create New HpbConfig object
INFO [08-28|13:44:11] HPB : Initialising Hpb node                network=100
.....
Welcome to the GHPB JavaScript console!

instance:
coinbase: 0x84b5113ca960ce72d2b8ff7a239ff22a575703b0
at block: 0 (Tue, 07 Aug 2018 10:30:01 CST)
datadir: /home/ghpb-bin/node/data
modules: admin:1.0 debug:1.0 hpb:1.0 miner:1.0 net:1.0 personal:1.0 prometheus:1.0 rpc:1.0
txpool:1.0 web3:1.0
```

Option 2: Enter `'cd /home/ghpb-bin/'` to go to directory `'ghpb-bin'`. After entering `'sudo nohup ./ghpb --datadir node/data --networkid 100 --verbosity 3 --rpc --rpcapi hpb,web3,admin,txpool,debug,personal,net,miner,prometheus &'`, press the [Enter] key twice;

```
root@dell-PowerEdge-R730:/home/ghpb-bin/node/data# cd /home/ghpb-bin/
root@dell-PowerEdge-R730:/home/ghpb-bin# sudo nohup ./ghpb --datadir node/data --networkid 100
--verbosity 3 --rpc --rpcapi hpb,web3,admin,txpool,debug,personal,net,miner,Prometheus &
[1] 5406
root@dell-PowerEdge-R730:/home/ghpb-bin# nohup: ignoring input and appending output to
'nohup.out'
```

Wait 10 seconds, then enter Command: `'sudo ./ghpb attach http://127.0.0.1:8545'`

When you see `'Welcome to the GHPB JavaScript console!'` the Node has been successfully launched.

```
root@ dell-PowerEdge-R730:/home/ghpb-bin# sudo ./ghpb attach http://127.0.0.1:8545
Welcome to the GHPB JavaScript console!

instance:
coinbase: 0x84b5113ca960ce72d2b8ff7a239ff22a575703b0
at block: 0 (Tue, 07 Aug 2018 10:30:01 CST)
datadir: /home/ghpb-bin/node/data
modules: admin:1.0 debug:1.0 hpb:1.0 miner:1.0 net:1.0 personal:1.0 prometheus:1.0 rpc:1.0
txpool:1.0 web3:1.0
```

```
root@ dell-PowerEdge-R730:/home/ghpb-bin# sudo ./ghpb attach http://127.0.0.1:8545
Welcome to the GHPB JavaScript console!

instance:
coinbase: 0x84b5113ca960ce72d2b8ff7a239ff22a575703b0
at block: 0 (Tue, 07 Aug 2018 10:30:01 CST)
datadir: /home/ghpb-bin/node/data
modules: admin:1.0 debug:1.0 hpb:1.0 miner:1.0 net:1.0 personal:1.0 prometheus:1.0 rpc:1.0
txpool:1.0 web3:1.0
```


7.3 STEPS TO UPDATE VIA SD CARD

Switch to the Update via SD Card if an online update fails.

No.	Steps	Descriptions
Step 1	Switch to SD Card boot mode	(1) Turn off and power off the server (2) Change the boot mode switch to SD Card boot mode
Step 2	Restore Factory Settings	Restart the server and automatically restore factory settings
Step 3	Switch to Flash boot mode	(1) Turn off and power off the server; (2) Change the boot mode switch to Flash boot mode
Step 4	Update online	Execute the steps for Update Online

7.4 DETAILED STEPS TO AN UPDATE VIA SD CARD


- (1) Turn off and power off the server. Change the boot mode switches 1/2/3/4 below to switch the starting mode to SD Card boot mode;




- (2) Ensure the memory card has been inserted securely into the SD card slot in the BOE hardware unit before restarting the server;

- (3) When the server has restarted, wait several minutes until all system lights are blinking (once per second). This indicates a successful factory settings restore;


ATTENTION: The factory settings restoration has failed if the system lights are blinking fast (with an interval of 300ms).



- (4) Turn off the server and pull out the power cable. Reset the dip switch to its original position to switch the boot mode to Start via Flash;

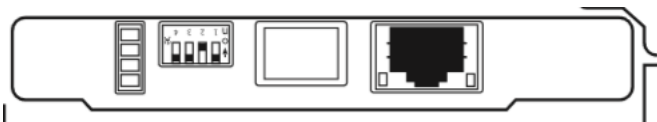

- (5) Plug in the power cable and turn on the server. The board functions properly if there is only one green system light that blinks;

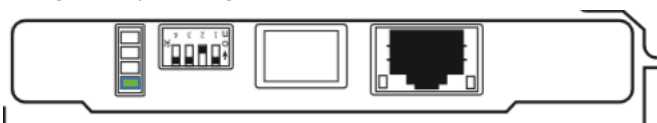

- (6) Execute the steps for an online update. If the update doesn't work, please contact HPB staff for technical support.

Annex Technical Support

If you require further technical assistance, please contact our HPB Staff by one of the following methods:

Hot-line service: +86 021-5895 9195 (China)

E-mail: node@hpb.io

HPB Official Website: <http://www.hpb.io/>

Telegram: <https://t.me/hpbglobal>

Facebook: HPB Blockchain

Twitter: @HPB_Global

Reddit: r/HPB_Global

Alternatively, you may scan the QR code below to contact our HPB community associates:



HPB Global