

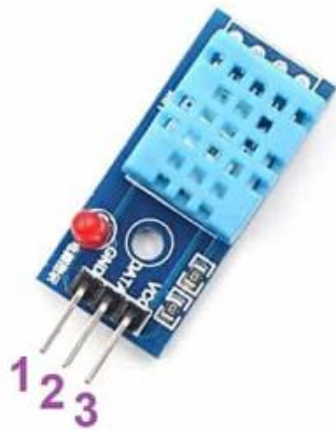
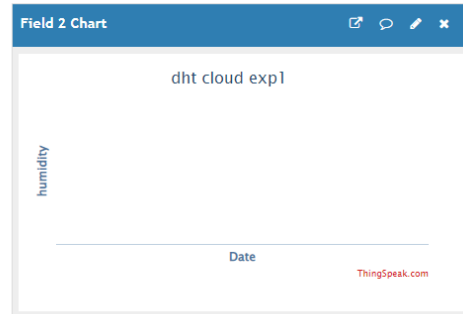
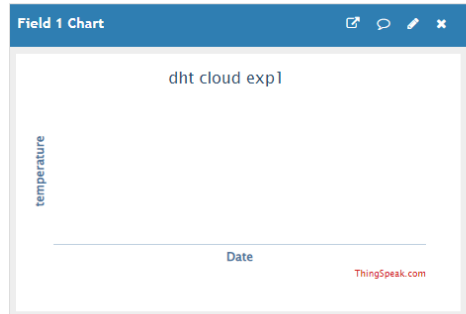




5CSM2 - U18A1508 – IoT Lab – Experiment-VI (unit-II) KITSW

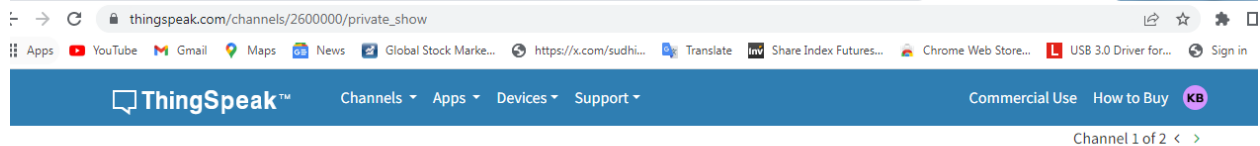


Pin 1- GND
Pin 2- DATA
Pin 3- VCC

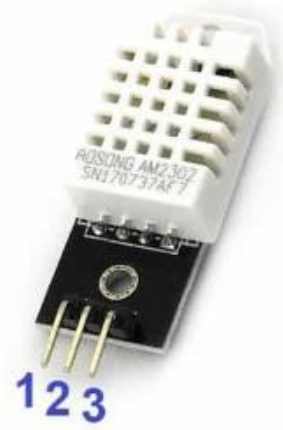

Pin 1- VCC
Pin 2- Data
Pin 3- GND

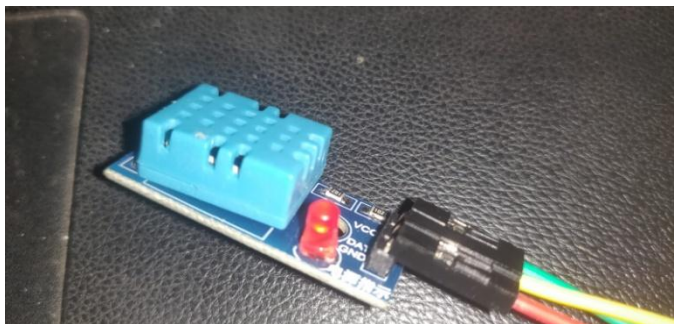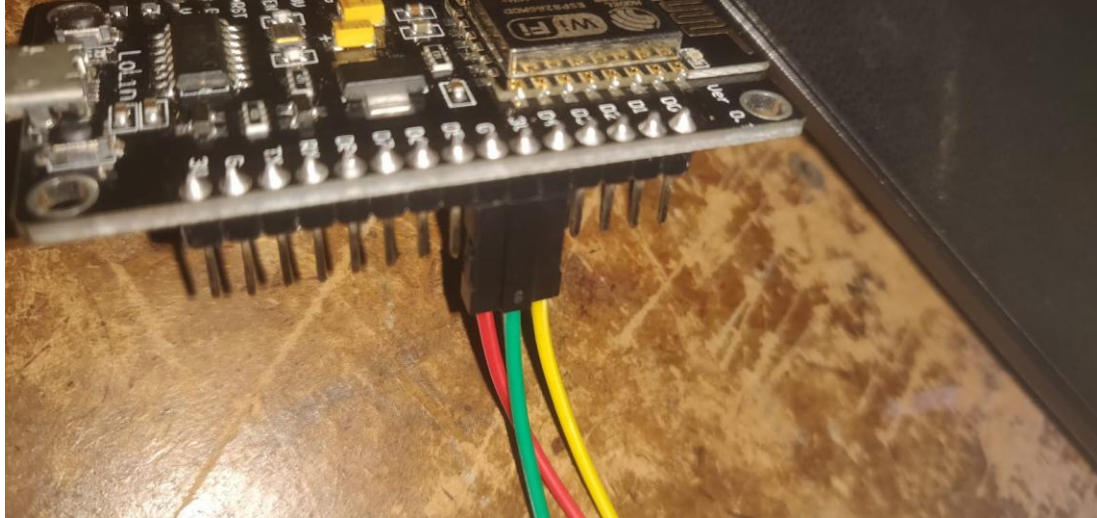

DHT 11 SENSOR MODEL


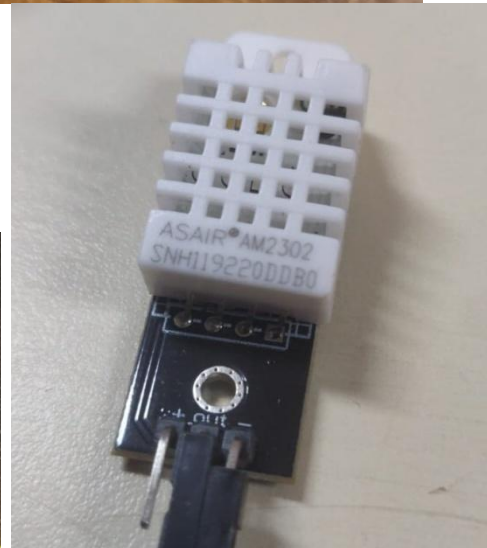



DHT 22 SENSOR MODULE

Channel Stats

Created: 17 days ago

Entries: 1

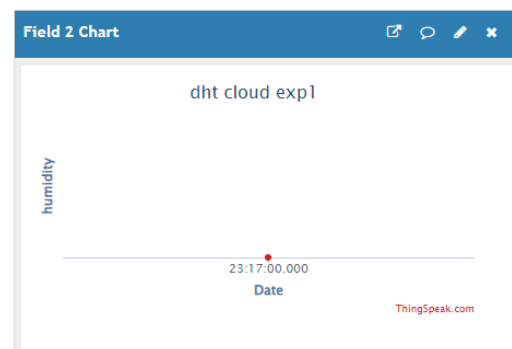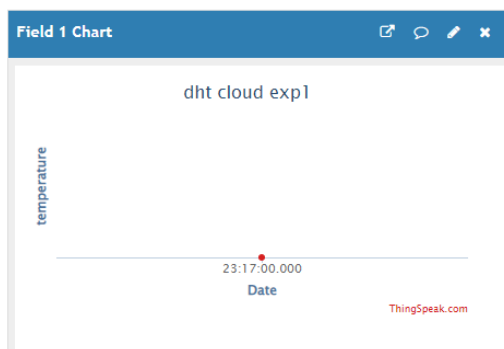

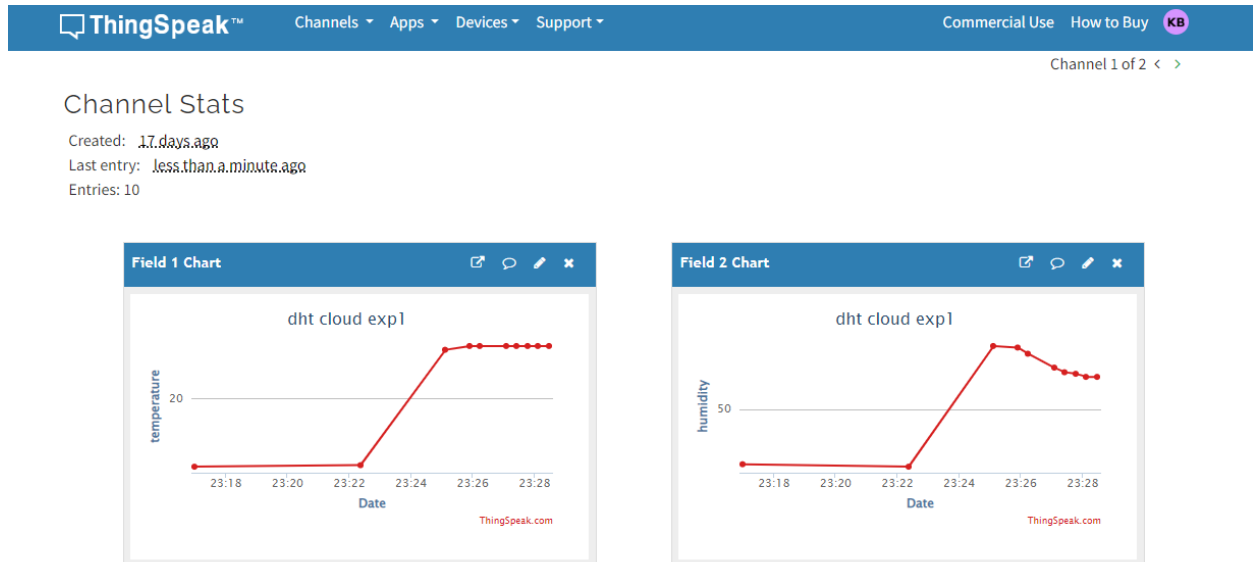

```
#include <ESP8266WiFi.h>
```

```
#include <Adafruit_Sensor.h>
```

```
#include <DHT.h>
```

```
// Replace with your network credentials
```

```
const char *ssid = "OnePlus 6"; // Replace with your Wi-Fi SSID
```

```
const char *password = "12345678"; // Replace with your Wi-Fi password
```

```
// Replace with your ThingSpeak Channel details
```

```
const char* server = "api.thingspeak.com";
```

```
const char* apiKey = "6PDYBUJL3R6NRWFZ";
```

```
#define DHTPIN D4 // DHT11 data pin connected to D4
```

```
#define DHTTYPE DHT11 // Define sensor type
```

```
DHT dht(DHTPIN, DHTTYPE);
```

```
void setup() {  
    Serial.begin(115200);  
    delay(10);  
    dht.begin();  
  
    // Connect to Wi-Fi  
    WiFi.begin(ssid, password);  
    Serial.print("Connecting to WiFi");  
    while (WiFi.status() != WL_CONNECTED) {  
        delay(500);  
        Serial.print(".");  
    }  
    Serial.println("\nConnected to WiFi");  
}  
  
void loop() {  
    float h = dht.readHumidity();  
    float t = dht.readTemperature();  
  
    // Check if any reads failed and exit early (to retry).  
    if (isnan(h) || isnan(t)) {  
        Serial.println("Failed to read from DHT sensor!");  
        return;  
    }  
  
    // Connect to ThingSpeak  
    WiFiClient client;  
    if (client.connect(server, 80)) {
```

```
String url = String("/update?api_key=") + apiKey + "&field1=" + String(t) + "&field2=" + String(h);
client.print(String("GET ") + url + " HTTP/1.1\r\n" +
    "Host: " + server + "\r\n" +
    "Connection: close\r\n\r\n");

// Read and print the response from ThingSpeak
while(client.available()){
    String line = client.readStringUntil('\r');
    Serial.print(line);
}
Serial.println();
client.stop();
} else {
    Serial.println("Connection to ThingSpeak failed!");
}

delay(20000); // Update every 20 seconds
}
```

step-by-step guide to get input from a DHT11 sensor and upload it to ThingSpeak using a LoLin NodeMCU V3 (ESP8266).

Step-by-Step Instructions

1. Gather Materials

- LoLin NodeMCU V3 (ESP8266)
- DHT11 Sensor
- Breadboard and Jumper Wires

- USB cable to connect NodeMCU to your computer

2. Connect the DHT11 Sensor to NodeMCU

1. DHT11 Connections:

- **VCC (DHT11) to 3V3 (NodeMCU)**
- **GND (DHT11) to GND (NodeMCU)**
- **DATA (DHT11) to D4 (NodeMCU)**

3. Prepare Your Computer

1. Install Arduino IDE:

- Download and install the Arduino IDE.

2. Add ESP8266 Board Support:

- Open Arduino IDE.
- Go to **File > Preferences**.
- In the **Additional Boards Manager URLs** field, add:

http://arduino.esp8266.com/stable/package_esp8266com_index.json

- Click **OK**.

3. Install ESP8266 Board:

- Go to **Tools > Board > Boards Manager**.
- Search for **esp8266** and install it.

4. Install Libraries:

- Go to **Sketch > Include Library > Manage Libraries...**
- Search for and install:
 - **DHT sensor library** by Adafruit
 - **Adafruit Unified Sensor** by Adafruit

4. Write and Upload the Code

1. Open Arduino IDE:

- Go to **File > New** to open a new sketch.

2. Copy and Paste the Code:

1.

- Replace YOUR_SSID, YOUR_PASSWORD, and YOUR_API_KEY with your WiFi credentials and ThingSpeak API key.

2. Select the Board and Port:

- Go to **Tools > Board** and select **NodeMCU 1.0 (ESP-12E Module)**.
- Go to **Tools > Port** and select the port your NodeMCU is connected to.

3. Upload the Code:

- Click the **Upload** button (right arrow icon) in the Arduino IDE.

5. Monitor the Output

1. Open Serial Monitor:


- Go to **Tools > Serial Monitor**.
- Set the baud rate to **115200**.
- You should see "Connected to WiFi" once the NodeMCU connects to your WiFi.

2. Check ThingSpeak:

- Go to [ThingSpeak](https://thingspeak.com/).
- Log in and navigate to your channel.
- You should see temperature and humidity data being updated every 20 seconds.

That's it! You've successfully set up your DHT11 sensor with NodeMCU and uploaded data to ThingSpeak.

5CSM2 - U18A1508 – IoT Lab – Experiment-VI (unit-II) KITSW

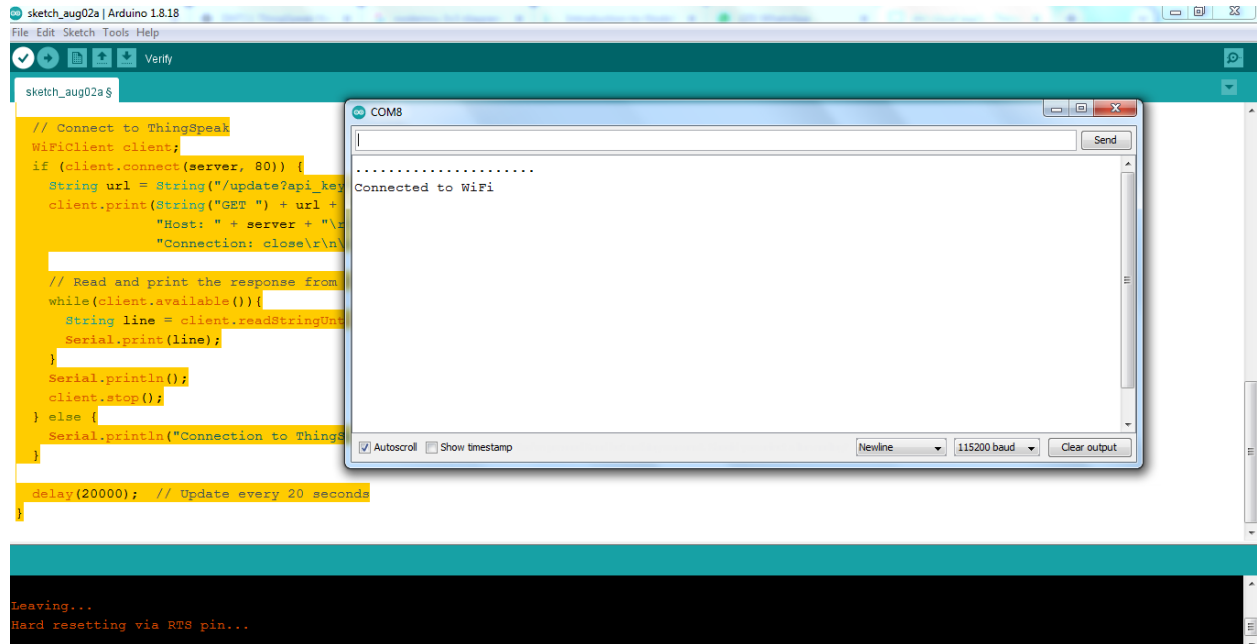

```
#include <ESP8266WiFi.h>
```

```
#include <Adafruit_Sensor.h>
```

```
#include <DHT.h>
```

```
// Replace with your network credentials
```

```
const char *ssid = "OnePlus 6"; // Replace with your Wi-Fi SSID
```

```
const char *password = "12345678"; // Replace with your Wi-Fi password
```

```
// Replace with your ThingSpeak Channel details
```

```
const char* server = "api.thingspeak.com";
```

```
const char* apiKey = "6PDYBUJL3R6NRWFZ";
```

```
#define DHTPIN D4      // DHT11 data pin connected to D4
```

```
#define DHTTYPE DHT11  // Define sensor type
```



```
DHT dht(DHTPIN, DHTTYPE);
```

```
void setup() {
```

```
    Serial.begin(115200);
```

```
    delay(10);
```

```
    dht.begin();
```

```
    // Connect to Wi-Fi
```

```
    WiFi.begin(ssid, password);
```

```
    Serial.print("Connecting to WiFi");
```

```
    while (WiFi.status() != WL_CONNECTED) {
```

```
        delay(500);
```

```
        Serial.print(".");
```

```
    }
```

```
    Serial.println("\nConnected to WiFi");
```

```
}
```

```
void loop() {
```

```
    float h = dht.readHumidity();
```

```
    float t = dht.readTemperature();
```

```
    // Check if any reads failed and exit early (to retry).
```

```
    if (isnan(h) || isnan(t)) {
```

```
        Serial.println("Failed to read from DHT sensor!");
```

```
        return;
```

```
}

// Connect to ThingSpeak

WiFiClient client;

if (client.connect(server, 80)) {

    String url = String("/update?api_key=") + apiKey + "&field1=" + String(t) + "&field2=" + String(h);

    client.print(String("GET ") + url + " HTTP/1.1\r\n" +

        "Host: " + server + "\r\n" +

        "Connection: close\r\n\r\n");

    // Read and print the response from ThingSpeak

    while(client.available()){

        String line = client.readStringUntil('\r');

        Serial.print(line);

    }

    Serial.println();

    client.stop();

} else {

    Serial.println("Connection to ThingSpeak failed!");

}

delay(20000); // Update every 20 seconds

}
```

