

CONFIDENTIAL

ADSP Reference Equalizer Plugin RCG3AHPLN0202ZDO

User's Manual

RCG3AHPLN0202ZDOE

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (<http://www.renesas.com>).

Rev. 0.10 May, 2018

CONFIDENTIAL

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
 2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
 3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
 4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
 5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.
"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.
Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
 6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
 7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
 8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
 9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
 10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
 11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
 12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.
- (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.
- (Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

CONFIDENTIAL

Trademarks

- Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.
- Arm is a registered trademark of Arm Limited (or its subsidiaries) in the US and/or elsewhere.
- Windows and Windows Media are registered trademarks of Microsoft Corporation in the United States and other countries.
- Android is a trademark of Google Inc. Use of this trademark is subject to Google permissions.
- All other company names and product names mentioned in this manual are registered trademarks or trademarks of their respective companies.
- The registered trademark symbol (®) and trademark symbol (™) are omitted in this manual.

How to Use This Manual

1. Purpose and Target Reader

This manual is designed to provide the user with an understanding of the interface specifications of the Software product. It is intended for users designing application systems incorporating the Software product. Please refer to the related documents with this product.

Use this Software after carefully reading the precautions. The precautions are stated in the main text of each section, at the end of each section, and in the usage precaution section.

The revision history summarizes major corrections and additions to the previous version. It does not cover all the changes. For details, refer to this manual.

2. Restrictions on the Use of this Software

This software is MIT license. The certificates from the licensor do not provide any assurances to users that the product performs reliably, intellectual property rights are protected, disputes are resolved by contract, and specifications are not subject to major changes. The user should use this software at his or her own risk.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

3. Related Manuals

4. Technical Terms and Abbreviation

- Table of Contents -

1. OVERVIEW	3
1.1. Overview of this document.	3
1.2. The architecture of the Software and scope of this document	3
1.3. Specification overview	3
1.4. Memory specification	4
1.5. Related documents	4
2. SOFTWARE SPECIFICATIONS	5
2.1. API sepecifications	5
2.2. Command list	6
2.2.1. Startup API	7
2.2.2. Parameters Setting	7
2.2.3. Memory Allocation	8
2.2.4. Initialization	8
2.2.5. Parameters Getting	9
2.2.6. Equalizer executing	9
2.3. The list of structures	10
2.4. Command function specifications	11
2.4.1. XA_API_CMD_GET_LIB_ID_STRINGS command	11
2.4.2. XA_API_CMD_GET_API_SIZE command	13
2.4.3. XA_API_CMD_INIT command	14
2.4.4. XA_API_CMD_SET_CONFIG_PARAM command	18
2.4.5. XA_API_CMD_GET_MEMTABS_SIZE command	28
2.4.6. XA_API_CMD_SET_MEMTABS_PTR command	29
2.4.7. XA_API_CMD_GET_N_MEMTABS command	30
2.4.8. XA_API_CMD_GET_MEM_INFO_SIZE command	31
2.4.9. XA_API_CMD_GET_MEM_INFO_TYPE command	32
2.4.10. XA_API_CMD_GET_MEM_INFO_ALIGNMENT command	33
2.4.11. XA_API_CMD_SET_MEM_PTR command	34
2.4.12. XA_API_CMD_GET_CONFIG_PARAM command	35
2.4.13. XA_API_CMD_SET_INPUT_BYTES command	45
2.4.14. XA_API_CMD_INPUT_OVER command	46
2.4.15. XA_API_CMD_EXECUTE command	47
2.4.16. XA_API_CMD_GET_OUTPUT_BYTES command	49
2.4.17. XA_API_CMD_GET_CURIDX_INPUT_BUF command	50
2.5. Memory Specifications	51
2.5.1. Persistent Area	51
2.5.2. Input Buffer	52
2.5.3. Output Buffer	53
2.6. Structures specification	56
2.6.1. API Structure	56
2.6.2. Persistent Structure	56
2.6.3. Equalizer settings structure	57
2.6.4. Biquad filter structure	58
2.7. Error processing	59
3. PROCESSING FLOW	62
4. NOTES	65
4.1. Function Call	65
4.2. Other notes	65
4.2.1. Allocation of memory	65
4.2.2. Out of range memory access	65
4.2.3. Combination with other applications	65

4.2.4. Monitoring on Performance	65
----------------------------------------	----

- List of Figures -

Figure 1-1 The software architecture.....	3
Figure 2-1 API Command Sequence Overview	6
Figure 2-1 PCM 16-bit Data Access (Little Endian Mode)	54
Figure 2-2 PCM 24-bit Data Access (Little Endian Mode)	54
Figure 2-3 Input (Output) Formats.....	55
Figure 3-1 Application Processing Flow	63

- List of Tables -

Table 1-1 Basic Specifications.....	3
Table 1-2 Supported Specifications	4
Table 1-3 Memory Size Requirements.....	4
Table 1-4 Related documents	4
Table 2-1 API Functions of Equalizer.....	5
Table 2-2 Commands for Initialization	7
Table 2-3 Commands for Parameters Setting.....	7
Table 2-4 Commands for Initial Memory Table Allocation.....	8
Table 2-5 Commands for Memory Allocation	8
Table 2-6 Commands for Equalizer Initialization.....	8
Table 2-7 Commands for Getting Parameters.....	9
Table 2-8 Commands for Equalizer Execution	9
Table 2-9 Structures.....	10
Table 2-10 Input Buffer Description.....	52
Table 2-11 Output Buffer Description.....	53

1. Overview

1.1. Overview of this document.

In this chapter, overview of ADSP Equalizer plugin is explained.

1.2. The architecture of the Software and scope of this document

The architecture of ADSP Equalizer is shown in Figure 1-1. ADSP Equalizer is an ADSP plugin which is controlled by ADSP Framework.

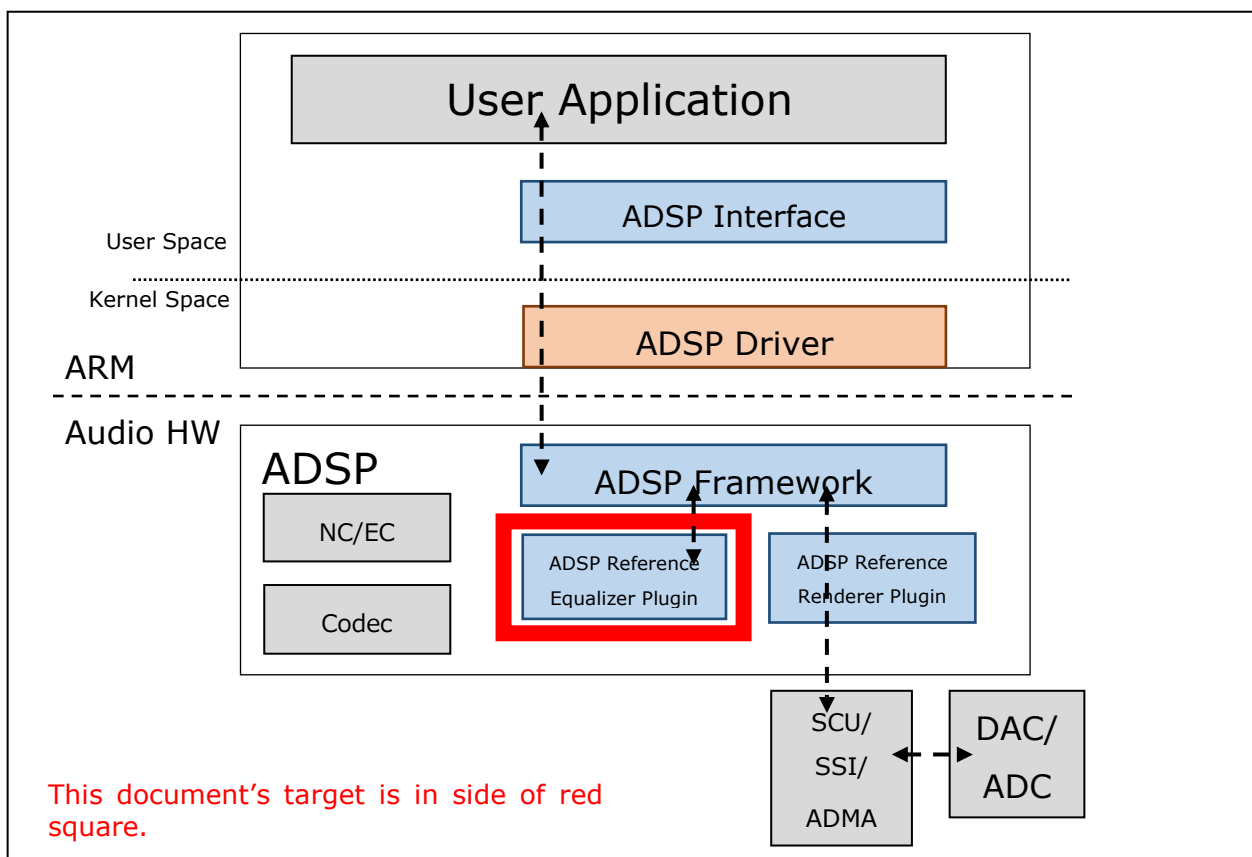


Figure 1-1 The software architecture

1.3. Specification overview

Equalizer changes frequency characteristic of the audio signal based on the parameter that was set and performs sound quality correction. Filter processing is performed for the PCM data which were input, and coordinates ingredient of the specific frequency band.

Table 1-1 shows the basic specification and Table 1-2 shows the support specification of Equalizer.

Table 1-1 Basic Specifications

Item	Description
DSP	Cadence Design Systems, Inc. HiFi2
Compiler	Xtensa C and C++ Compiler (version 12.0.4)

Endian	Little Endian
--------	---------------

Table 1-2 Supported Specifications

Item	Description
Input data format	16-bit / 24-bit linear PCM (fixed point)
Output data format	16-bit / 24-bit linear PCM (fixed point)
Sampling frequency (Hz) supported	48000 / 44100 / 32000
Number of channels supported	Max 2 channels
Filter	Direct form II(second-order IIR digital biquad filter)
Band number of partitions	9 Band
Reentrant	Supported
Other	Coefficient change function

1.4. Memory specification

Table 1-3 Memory Size Requirements

Memory type	Location	Memory area name	Size (in bytes)
Instruction	ROM	Instruction area	16273
		Constant table area	
		Other area(Depend on the compiler)	
	RAM	Persistent area	596
		Input buffer	6144
		Output buffer	6144
		Scratch area	6144
		Structure	240
		Stack	336
		Other area(Depended on the compiler)	0

[Note] Area whose location is shown as ROM in the location column can be included in RAM or ROM.

[Note] Area whose location is shown as RAM in the location column can be included in RAM only.

1.5. Related documents

Table 1-4 Related documents

No.	Name	Published by
[1]	ADSP Framework User's Manual	Renesas Electronics Corporation

2. Software Specifications

2.1. API sepecifications

Because one interface function accesses the procedure that was appointed by a command in equalizer, it is used.

Table 2-1 API Functions of Equalizer

xa_rel_eqz	
Description	This API is the only access function to the equalizer.
Syntax	<pre>XA_ERRORCODE xa_rel_eqz(xa_codec_handle_t p_xa_module_obj, WORD32 i_cmd, WORD32 i_idx, pVOID pv_value)</pre>
Parameters	<p>p_xa_module_obj : Pointer to opaque API structure.</p> <p>i_cmd : Command. (defined in the supplied header files as)</p> <p>i_idx : Command subtype or index. (defined in the supplied header files as)</p> <p>pv_value : Pointer to the variable used to pass in, or get out properties, from state structure.</p>
Returns	Error Code based on the success or failure of API command (defined in the supplied header files as)

2.2. Command list

Using API function of the Table 2-1, it performs each processing by a combination of Command/Subcommand with overview flow chart below

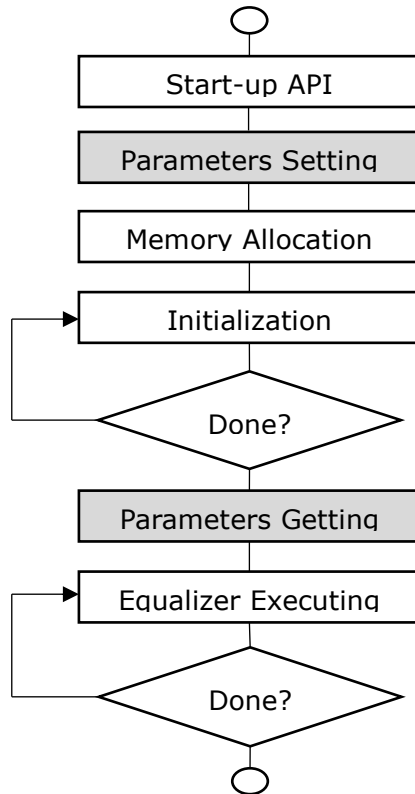


Figure 2-1 API Command Sequence Overview

2.2.1. Startup API

Table 2-2 Commands for Initialization

Upper stage : Command / lower stage :Subcommand		Description
1	XA_API_CMD_GET_LIB_ID_STRINGS	Get the version of the library.
	XA_CMD_TYPE_LIB_VERSION	
2	XA_API_CMD_GET_LIB_ID_STRINGS	Get the version of the API structure.
	XA_CMD_TYPE_API_VERSION	
3	XA_API_CMD_GET_API_SIZE	Get the size of the API structure.
	(NULL)	
4	XA_API_CMD_INIT	Set the default values of all the configuration parameters.
	XA_CMD_TYPE_INIT_API_PRE_CONFIG_PARA MS	

2.2.2. Parameters Setting

Table 2-3 Commands for Parameters Setting

Upper stage : Command / lower stage :Subcommand		Description
1	XA_API_CMD_SET_CONFIG_PARAM	Set the center frequency of a peaking filter or transition frequency of a Bass/Treble filter for filter n.
	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_FC	
2	XA_API_CMD_SET_CONFIG_PARAM	Set type (Peaking, Bass, Treble) for filter n.
	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_TYPE	
3	XA_API_CMD_SET_CONFIG_PARAM	Set bandwidth for filter n.
	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_BW	
4	XA_API_CMD_SET_CONFIG_PARAM	Set gain for filter n.
	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_GA	
5	XA_API_CMD_SET_CONFIG_PARAM	Set base gain for filter n.
	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_BA	
6	XA_API_CMD_SET_CONFIG_PARAM	Set graphic equalizer gain.
	XA_EQZ_CONFIG_PARAM_BAND_<n>_GCOEF_GA	
7	XA_API_CMD_SET_CONFIG_PARAM	Set PCM data width.
	XA_EQZ_CONFIG_PARAM_PCM_WIDTH	
8	XA_API_CMD_SET_CONFIG_PARAM	Set channel numbers.
	XA_EQZ_CONFIG_PARAM_CH	
9	XA_API_CMD_SET_CONFIG_PARAM	Set sampling frequency.
	XA_EQZ_CONFIG_PARAM_FS	
10	XA_API_CMD_SET_CONFIG_PARAM	Select equalizer type.
	XA_EQZ_CONFIG_PARAM_SELECT_EQZ_TYPE	

[Note] <n> is index filter 0 to 8 for Parametric Equalizer and 0 to 4 for Graphic Equalizer. It will be specified in detailed subcommands.

2.2.3. Memory Allocation

Table 2-4 Commands for Initial Memory Table Allocation

Upper stage : Command / lower stage :Subcommand		Description
1	XA_API_CMD_GET_MEMTABS_SIZE	Get the size of the memory structures to be allocated for the memory tables.
	(NULL)	
2	XA_API_CMD_SET_MEMTABS_PTR	Pass the memory structure pointer allocated for the tables.
	(NULL)	
3	XA_API_CMD_INIT	Calculate the required sizes for all the memory blocks based on the equalizer specific parameters.
	XA_CMD_TYPE_INIT_API_POST_CONFIG_PARAMS	
4	XA_API_CMD_GET_N_MEMTABS	Obtain the number of memory blocks required by equalizer.
	(NULL)	

Table 2-5 Commands for Memory Allocation

Upper stage : Command / lower stage :Subcommand		Description
1	XA_API_CMD_GET_MEM_INFO_SIZE	Get the size of the each memory.
	(NULL)	
2	XA_API_CMD_GET_MEM_INFO_ALIGNMENT	Get the alignment information of the memory-type being referred to by the index.
	(NULL)	
3	XA_API_CMD_GET_MEM_INFO_TYPE	Get the type of memory being referred to by the index.
	(NULL)	
4	XA_API_CMD_SET_MEM_PTR	Set the pointer to the memory allocated for the referred index to the input value.
	(NULL)	

2.2.4. Initialization

Table 2-6 Commands for Equalizer Initialization

Upper stage : Command / lower stage :Subcommand		Description
1	XA_API_CMD_INPUT_OVER	Signal the end of bit stream to the library.
	(NULL)	
2	XA_API_CMD_SET_INPUT_BYTES	Set the number of bytes available in the input buffer for initialization.
	(NULL)	
3	XA_API_CMD_INIT	Initialize state and start run-time data process
	XA_CMD_TYPE_INIT_PROCESS	
4	XA_API_CMD_INIT	Check if the initialization process has completed.
	XA_CMD_TYPE_INIT_DONE_QUERY	
5	XA_API_CMD_GET_CURIDX_INPUT_BUF	Get the number of input buffer bytes consumed by the last initialization.
	(NULL)	

2.2.5. Parameters Getting

Table 2-7 Commands for Getting Parameters

Upper stage : Command / lower stage :Subcommand		Description
1	XA_API_CMD_GET_CONFIG_PARAM	Get the center frequency of a peaking filter or transition frequency of a Bass/Treble filter for filter n.
	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_FC	
2	XA_API_CMD_GET_CONFIG_PARAM	Get type (Peaking, Bass, Treble) for filter n.
	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_TYPE	
3	XA_API_CMD_GET_CONFIG_PARAM	Get bandwidth for filter n.
	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_BW	
4	XA_API_CMD_GET_CONFIG_PARAM	Get gain for filter n.
	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_GA	
5	XA_API_CMD_GET_CONFIG_PARAM	Get base gain for filter n.
	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_BA	
6	XA_API_CMD_GET_CONFIG_PARAM	Get graphic equalizer gain.
	XA_EQZ_CONFIG_PARAM_BAND_<n>_GCOEF_GA	
7	XA_API_CMD_GET_CONFIG_PARAM	Get PCM data width.
	XA_EQZ_CONFIG_PARAM_PCM_WIDTH	
8	XA_API_CMD_GET_CONFIG_PARAM	Get channel numbers.
	XA_EQZ_CONFIG_PARAM_CH	
9	XA_API_CMD_GET_CONFIG_PARAM	Get the sampling frequency of input signal.
	XA_EQZ_CONFIG_PARAM_FS	
10	XA_API_CMD_SET_CONFIG_PARAM	Get equalizer type.
	XA_EQZ_CONFIG_PARAM_SELECT_EQZ_TYPE	

2.2.6. Equalizer executing

Table 2-8 Commands for Equalizer Execution

Upper stage : Command / lower stage :Subcommand		Description
1	XA_API_CMD_INPUT_OVER	Signal the end of bit stream to the library.
	(NULL)	
2	XA_API_CMD_SET_INPUT_BYTES	Set the number of bytes available in the input buffer for the execution.
	(NULL)	
3	XA_API_CMD_EXECUTE	This command executes the equalizer.
	XA_CMD_TYPE_DO_EXECUTE	
4	XA_API_CMD_EXECUTE	Check if the end of processing has been reached.
	XA_CMD_TYPE_DONE_QUERY	
5	XA_API_CMD_GET_OUTPUT_BYTES	Get the number of bytes output by the equalizer in the last frame.
	(NULL)	
6	XA_API_CMD_GET_CURIDX_INPUT_BUF	Get the number of input buffer bytes consumed by the last call to equalizer.
	(NULL)	

2.3. The list of structures

Table 2-9 lists the structures for this software. The user should reserve areas required for these structures. For detailed specifications of these input structures, refer to Section 2.5

Table 2-9 Structures

Structure name	Outline
API structure	Store the information of API.
Parametric Equalizer settings structure	Store a parameter to calculate a necessary filter coefficient as Parametric Equalizer.
Graphic Equalizer settings structure	Store a parameter to calculate a necessary filter coefficient as Graphic Equalizer.
Equalizer settings structure	Store the parameters necessary for equalizer.
Biquad filter structure	Store the parameters necessary for Biquad filter.

2.4. Command function specifications

2.4.1. XA_API_CMD_GET_LIB_ID_STRINGS command

Subcommand	XA_CMD_TYPE_LIB_VERSION	
Description	This command obtains the version of the library in the form of a string. The maximum length of the string that the library will provide is 30 bytes. Therefore the application shall pass a pointer to a buffer of a minimum size of 30 bytes.	
Parameter	p_xa_module_obj	NULL
	i_cmd	XA_API_CMD_GET_LIB_ID_STRINGS
	i_idx	XA_CMD_TYPE_LIB_VERSION
	pv_value	Pointer to a character buffer in which the version of the library is returned.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - pv_value is NULL

Example

```
char lib_version[30];
res = (*api_func)(NULL,
                  XA_API_CMD_GET_LIB_ID_STRINGS,
                  XA_CMD_TYPE_LIB_VERSION,
                  (pVOID) lib_version);
```


Subcommand	XA_CMD_TYPE_API_VERSION	
Description	This command obtains the version of the API in the form of a string. The maximum length of the string that the library will provide is 30 bytes. Therefore the application shall pass a pointer to a buffer of a minimum size of 30 bytes.	
Parameter	p_xa_module_obj	NULL
	i_cmd	XA_API_CMD_GET_LIB_ID_STRINGS
	i_idx	XA_CMD_TYPE_API_VERSION
	pv_value	Pointer to a character buffer in which the version of the API is returned.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - pv_value is NULL

Example

```
char api_version[30];  
res = (*api_func)(NULL,  
                 XA_API_CMD_GET_LIB_ID_STRINGS,  
                 XA_CMD_TYPE_API_VERSION,  
                 (pVOID) api_version);
```

2.4.2. XA_API_CMD_GET_API_SIZE command

Subcommand	(None)	
Description	This command is used to obtain the size of the API structure, in order to allocate memory for the API structure.	
Parameter	p_xa_module_obj	NULL
	i_cmd	XA_API_CMD_GET_API_SIZE
	i_idx	NULL
	pv_value	Pointer to API size variable.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - pv_value is NULL
Restrictions	The application shall allocate memory with an alignment of 4 bytes.	

Example

```
WORD32 api_size;
res = (*api_func)(api_obj,
                  XA_CMD_TYPE_API_SIZE,
                  0,
                  &api_size);
```

2.4.3. XA_API_CMD_INIT command

Subcommand	XA_CMD_TYPE_INIT_API_PRE_CONFIG_PARAMS	
Description	This command is used to set the default value of the configuration parameters.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_INIT
	i_idx	XA_CMD_TYPE_INIT_API_PRE_CONFIG_PARAMS
	pv_value	NULL
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes.

Example

```
res = (*api_func)(api_obj,  
                  XA_API_CMD_INIT,  
                  XA_CMD_TYPE_INIT_API_PRE_CONFIG_PARAMS,  
                  NULL);
```

Subcommand	XA_CMD_TYPE_INIT_API_POST_CONFIG_PARAMS	
Description	This command is used to calculate the sizes of all the memory blocks required by the application. It should occur after the equalizer specific parameters have been set.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_INIT
	i_idx	XA_CMD_TYPE_INIT_API_POST_CONFIG_PARAMS
	pv_value	NULL
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy.

Example

```
res = (*api_func)(api_obj,  
                 XA_API_CMD_INIT,  
                 XA_CMD_TYPE_INIT_API_POST_CONFIG_PARAMS,  
                 NULL);
```

Subcommand	XA_CMD_TYPE_INIT_PROCESS	
Description	This command initializes the equalizer. It kicks run-time initialization process.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_INIT
	i_idx	XA_CMD_TYPE_INIT_PROCESS
	pv_value	NULL
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy. XA_EQZ_EXEC_FATAL_STATE - if input, output and scratch memory are not allocated

Example

```
res = (*api_func)(api_obj,  
                 XA_API_CMD_INIT,  
                 XA_CMD_TYPE_INIT_PROCESS,  
                 NULL);
```

Subcommand	XA_CMD_TYPE_INIT_DONE_QUERY	
Description	This command checks to see if the initialization process has completed. If it has, the flag value is set to 1; else, it is set to zero. A pointer to the flag variable is passed as an argument.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_INIT
	i_idx	XA_CMD_TYPE_INIT_DONE_QUERY
	pv_value	Pointer to flag that indicates the completion of initialization process.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj, pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy.

Example

```
WORD32 done;
res = (*api_func)(api_obj,
                  XA_API_CMD_INIT,
                  XA_CMD_TYPE_INIT_DONE_QUERY,
                  &done);
```

2.4.4. XA_API_CMD_SET_CONFIG_PARAM command

[Note] <n> is index filter 0, 1, 2... 8. It will be specified in detailed subcommands.

Subcommand	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_FC	
Description	This command is used to set the center frequency of a peaking filter or transition frequency of a Bass/Treble filter for filter n.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_SET_CONFIG_PARAM
	i_idx	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_FC
	pv_value	Address that stored center/ transition frequency. Value range: <ul style="list-style-type: none"> - Peaking filter: 20-20kHz (or less than Nyquist frequency) - Bass filter: 50-500Hz - Treble filter: 5k - 11kHz
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy. XA_EQZ_CONFIG_NONFATAL_ERR_FC- Outside range for center/ transition frequency.

Example

```
WORD32 coef_fc;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_FC,
                  &coef_fc);
```

Subcommand	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_TYPE	
Description	This command is used to set type (Peaking, Bass, Treble, Through) for filter n.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_SET_CONFIG_PARAM
	i_idx	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_TYPE
	pv_value	Address that stored filter type. Value range: Peaking, Bass, Treble, Through filter Through is default filter type.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy. XA_EQZ_CONFIG_NONFATAL_ERR_TYPE - Outside range for filter type.

Example

```
WORD32 coef_type;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_TYPE,
                  &coef_type);
```


Subcommand	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_BW	
Description	This command is used to set bandwidth for filter n.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_SET_CONFIG_PARAM
	i_idx	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_BW
	pv_value	Address that stored filter bandwidth. Value range: 0.2×2^{27} to 15×2^{27} (fixed point Q5.27)
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy. XA_EQZ_CONFIG_NONFATAL_ERR_BW - Outside range for filter bandwidth.

Example

```
WORD32 coef_bw;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_BW,
                  &coef_bw);
```

Subcommand	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_GA	
Description	This command is used to set gain for filter n.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_SET_CONFIG_PARAM
	i_idx	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_GA
	pv_value	Address that stored filter gain. Value range: $10^{-\frac{15}{20}} \times 2^{28}$ to $10^{\frac{15}{20}} \times 2^{28}$ (fixed point Q4.28)
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy. XA_EQZ_CONFIG_NONFATAL_ERR_GA - Outside range for filter gain.

[Note] Value range: -15dB to 15dB (fixed point Q4.28)

-15dB: $10^{-\frac{15}{20}} \times 2^{28}$

15dB: $10^{\frac{15}{20}} \times 2^{28}$

Example

WORD32 coef_ga;

```
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_GA,
                  &coef_ga);
```

Subcommand	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_BA	
Description	This command is used to set base gain for filter n.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_SET_CONFIG_PARAM
	i_idx	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_BA
	pv_value	Address that stored filter base gain. Value range: $10^{-\frac{10}{20}} \times 2^{28}$ to $10^{\frac{10}{20}} \times 2^{28}$ (fixed point Q4.28)
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy. XA_EQZ_CONFIG_NONFATAL_ERR_BA - Outside range for filter base gain.

Example

```
WORD32 coef_ba;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_BA,
                  &coef_ba);
```

[Note] <m> is index filter 0, 1, 2... 4. It will be specified in detailed subcommands.

Subcommand	XA_EQZ_CONFIG_PARAM_<m>_GCOEF_GA	
Description	This command is used to set graphic equalizer gain.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_SET_CONFIG_PARAM
	i_idx	XA_EQZ_CONFIG_PARAM_BAND_<n>_GCOEF_GA
	pv_value	Address that stored graphic equalizer gain. Value range: $10^{-\frac{10}{20}} \times 2^{28}$ to $10^{\frac{10}{20}} \times 2^{28}$ (fixed point Q4.28)
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy. XA_EQZ_CONFIG_NONFATAL_ERR_GA - Outside range for filter gain.

Example

```
WORD32 gcoef_ga;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_EQZ_CONFIG_PARAM_FILTER_<n>_GCOEF_GA,
                  &gcoef_ga);
```

Subcommand	XA_EQZ_CONFIG_PARAM_PCM_WIDTH	
Description	This command is used to set PCM data width.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_SET_CONFIG_PARAM
	i_idx	XA_EQZ_CONFIG_PARAM_PCM_WIDTH
	pv_value	Address that stored PCM data width. Value range: 16 bits /24 bits
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy. XA_EQZ_CONFIG_FATAL_ERR_PCM_WIDTH - Outside range for PCM width.

Example

```
WORD32 pcm_width;  
res = (*api_func)(api_obj,  
                 XA_API_CMD_SET_CONFIG_PARAM,  
                 XA_EQZ_CONFIG_PARAM_PCM_WIDTH,  
                 &pcm_width);
```

Subcommand	XA_EQZ_CONFIG_PARAM_CH	
Description	This command is used to set channel numbers.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_SET_CONFIG_PARAM
	i_idx	XA_EQZ_CONFIG_PARAM_CH
	pv_value	Address that stored channel numbers. Value range: 1 or 2
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy. XA_EQZ_CONFIG_FATAL_ERR_CH - Outside range for channel numbers.

Example

```
WORD32 ch;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_CONFIG_PARAM,
                  XA_EQZ_CONFIG_PARAM_PARAM_CH,
                  &ch);
```

Subcommand	XA_EQZ_CONFIG_PARAM_FS	
Description	This command is used to set the sampling frequency of input signal.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_SET_CONFIG_PARAM
	i_idx	XA_EQZ_CONFIG_PARAM_FS
	pv_value	Address that stored sampling frequency. Value range: 48kHz / 44.1kHz / 32kHz
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_INVALID_CMD_TYPE - i_idx is incorrect. XA_EQZ_CONFIG_FATAL_ERR_FS - Outside range for sampling frequency.

Example

```
WORD32 param_fs;  
res = (*api_func)(api_obj,  
                  XA_API_CMD_SET_CONFIG_PARAM,  
                  XA_EQZ_CONFIG_PARAM_PARAM_FS,  
                  &param_fs);
```

Subcommand	XA_EQZ_CONFIG_PARAM_SELECT_EQZ_TYPE	
Description	This command is used to select Equalizer type which is Parametric Equalizer or Graphic Equalizer.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_SET_CONFIG_PARAM
	i_idx	XA_EQZ_CONFIG_PARAM_SELECT_EQZ_TYPE
	pv_value	Address that stored index of Equalizer type. Value range: <ul style="list-style-type: none">- Parametric Equalizer: 0- Graphic Equalizer: 1
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_INVALID_CMD_TYPE - i_idx is incorrect. XA_EQZ_CONFIG_NONFATAL_ERR_SELECT_EQZ_TYPE - Equalizer type does not support.

Example

```
WORD32 eqz_type;  
res = (*api_func)(api_obj,  
                  XA_API_CMD_SET_CONFIG_PARAM,  
                  XA_EQZ_CONFIG_PARAM_EQZ_TYPE,  
                  &eqz_type);
```


2.4.5. XA_API_CMD_GET_MEMTABS_SIZE command

Subcommand	None	
Description	This command is used to obtain the size of the table used to hold memory blocks. These blocks required for the equalizer operation. The API returns the total size of the required table.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_GET_MEMTABS_SIZE
	i_idx	NULL
	pv_value	Pointer to memory size variable.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes XA_EQZ_CONFIG_FATAL_STATE - Precondition is incorrect.

Example

```
WORD32 memtab_size;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_MEMTABS_SIZE,
                  0,
                  &memtab_size);
```

2.4.6. XA_API_CMD_SET_MEMTABS_PTR command

Subcommand	None	
Description	This command is used to set the memory structure pointer to the allocated value.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_SET_MEMTABS_PTR
	i_idx	NULL
	pv_value	Allocated pointer
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d or pv_value is not aligned to 4 bytes XA_EQZ_CONFIG_FATAL_STATE - Precondition is incorrect.

Example

```
pVOID memtab_ptr;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_MEMTABS_PTR,
                  0,
                  memtab_ptr);
```

2.4.7. XA_API_CMD_GET_N_MEMTABS command

Subcommand	None	
Description	This command is used to obtain the number of memory blocks the equalizer needs. This value is used as the iteration counter for the allocation of the memory blocks. A pointer to each memory block will be placed in the previously allocated memory tables.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_GET_N_MEMTABS
	i_idx	NULL
	pv_value	Number of memory blocks required to be allocated.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes.

Example

```
WORD32 n_memtab;  
res = (*api_func)(api_obj,  
                  XA_API_CMD_GET_N_MEMTABS,  
                  0,  
                  &n_memtab);
```

2.4.8. XA_API_CMD_GET_MEM_INFO_SIZE command

Subcommand	Memory index	
Description	This command obtains the size of the memory type being referred to by the index. The size in bytes is returned in the variable pointed to by the final argument.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_GET_MEM_INFO_SIZE
	i_idx	Index of the memory 0 - Persistent Area 1 - Input Buffer 2 - Output Buffer 3 - Scratch Area
	pv_value	Pointer to memory size.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy. XA_API_FATAL_INVALID_CMD_TYPE - i_idx is an invalid memory block number.

Example

```
WORD32 mem_size;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_MEM_INFO_SIZE,
                  index,
                  &mem_size);
```

2.4.9. XA_API_CMD_GET_MEM_INFO_TYPE command

Subcommand	Memory index	
Description	This command gets the type of memory being referred to by the index.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_GET_MEM_INFO_TYPE
	i_idx	Index of the memory 0 - Persistent Area 1 - Input Buffer 2 - Output Buffer 3 - Scratch Area
	pv_value	Pointer to memory type variable.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_API_FATAL_INVALID_CMD_TYPE - i_idx is an invalid memory block number.

Example

```
WORD32 mem_type;  
res = (*api_func)(api_obj,  
                  XA_API_CMD_GET_MEM_INFO_TYPE,  
                  index,  
                  &mem_type);
```

2.4.10. XA_API_CMD_GET_MEM_INFO_ALIGNMENT command

Subcommand	Memory index	
Description	This command gets the alignment information of the memory-type referred to by the index. The alignment required in bytes is returned to the application.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_GET_MEM_INFO_ALIGNMENT
	i_idx	Index of the memory 0 - Persistent Area 1 - Input Buffer 2 - Output Buffer 3 - Scratch Area
	pv_value	Pointer to the alignment info variable.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_API_FATAL_INVALID_CMD_TYPE - i_idx is an invalid memory index.

Example

```
WORD32 mem_align;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_MEM_INFO_ALIGNMENT,
                  index,
                  &mem_align);
```

2.4.11. XA_API_CMD_SET_MEM_PTR command

Subcommand	Memory index	
Description	This command passes to the equalizer the pointer to the allocated memory.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_SET_MEM_PTR
	i_idx	Index of the memory 0 - Persistent Area 1 - Input Buffer 2 - Output Buffer 3 - Scratch Area
	pv_value	Pointer to memory buffer allocated.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_INVALID_CMD_TYPE - i_idx is an invalid memory block number. XA_API_FATAL_MEM_ALIGN - d or pv_value is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy.

Example

```
pVOID addr;
res = (*api_func)(api_obj,
                  XA_API_CMD_SET_MEM_PTR,
                  index,
                  addr);
```

2.4.12. XA_API_CMD_GET_CONFIG_PARAM command

Subcommand	XA_EQZ_CONFIG_PARAM_PCM_WIDTH	
Description	This command is used to get PCM width parameter.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_GET_CONFIG_PARAM
	i_idx	XA_EQZ_CONFIG_PARAM_PCM_WIDTH
	pv_value	Pointer to PCM width.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy.

Example

```
WORD32 pcm_width;  
res = (*api_func)(api_obj,  
                  XA_API_CMD_GET_CONFIG_PARAM,  
                  XA_EQZ_CONFIG_PARAM_PCM_WIDTH,  
                  &pcm_width);
```


Subcommand	XA_EQZ_CONFIG_PARAM_CH	
Description	This command is used to get PCM width parameter.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_GET_CONFIG_PARAM
	i_idx	XA_EQZ_CONFIG_PARAM_CH
	pv_value	Pointer to channel numbers.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy.

Example

```
WORD32 ch;  
res = (*api_func)(api_obj,  
                  XA_API_CMD_GET_CONFIG_PARAM,  
                  XA_EQZ_CONFIG_PARAM_CH,  
                  &ch);
```

Subcommand	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_FC	
Description	This command is used to get the center frequency of a peaking filter or transition frequency of a Bass/Treble filter for filter n.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_GET_CONFIG_PARAM
	i_idx	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_FC
	pv_value	Pointer to center / transition frequency
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy.

Example

```
WORD32 coef_fc;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_FC,
                  &coef_fc);
```

Subcommand	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_TYPE	
Description	This command is used to get type (Peaking, Bass, Treble, Through) for filter n.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_GET_CONFIG_PARAM
	i_idx	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_TYPE
	pv_value	Pointer to filter type.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy.

Example

```
WORD32 coef_type;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_TYPE,
                  &coef_type);
```

Subcommand	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_BW	
Description	This command is used to get bandwidth for filter n.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_GET_CONFIG_PARAM
	i_idx	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_BW
	pv_value	Pointer to filter bandwidth.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy.

Example

```
WORD32 coef_bw;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_BW,
                  &coef_bw);
```

Subcommand	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_GA	
Description	This command is used to get gain for filter n.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_GET_CONFIG_PARAM
	i_idx	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_GA
	pv_value	Pointer to filter gain.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy.

Example

```
WORD32 coef_ga;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_GA,
                  &coef_ga);
```

Subcommand	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_BA	
Description	This command is used to get base gain for filter n.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_GET_CONFIG_PARAM
	i_idx	XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_BA
	pv_value	Pointer to filter base gain.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy.

Example

```
WORD32 coef_ba;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_EQZ_CONFIG_PARAM_FILTER_<n>_COEF_BA,
                  &coef_ba);
```

Subcommand	XA_EQZ_CONFIG_PARAM_BAND_<n>_GCOEF_GA	
Description	This command is used to get graphic equalizer gain.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_GET_CONFIG_PARAM
	i_idx	XA_EQZ_CONFIG_PARAM_BAND_<n>_GCOEF_GA
	pv_value	Pointer to graphic equalizer gain.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy.

Example

```
WORD32 gcoef_ga;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_EQZ_CONFIG_PARAM_FILTER_<n>_GCOEF_GA,
                  &gcoef_ga);
```

Subcommand	XA_EQZ_CONFIG_PARAM_FS	
Description	This command is used to get the sampling frequency.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_GET_CONFIG_PARAM
	i_idx	XA_EQZ_CONFIG_PARAM_FS
	pv_value	Pointer to sampling frequency.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy.

Example

```
WORD32 param_fs;  
res = (*api_func)(api_obj,  
                  XA_API_CMD_GET_CONFIG_PARAM,  
                  XA_EQZ_CONFIG_PARAM_PARAM_FS,  
                  &param_fs);
```


Subcommand	XA_EQZ_CONFIG_PARAM_SELECT_EQZ_TYPE	
Description	This command is used to select Equalizer type which is Parametric Equalizer or Graphic Equalizer.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_SET_CONFIG_PARAM
	i_idx	XA_EQZ_CONFIG_PARAM_SELECT_EQZ_TYPE
	pv_value	Address that stored index of Equalizer type. Value range: - Parametric Equalizer: 0 - Graphic Equalizer: 1
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_INVALID_CMD_TYPE - i_idx is incorrect. XA_EQZ_CONFIG_NONFATAL_ERR_SELECT_EQZ_TYPE - Equalizer type does not support. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_CONFIG_FATAL_STATE - precondition does not satisfy.

Example

```
WORD32 eqz_type;
res = (*api_func)(api_obj,
                  XA_API_CMD_GET_CONFIG_PARAM,
                  XA_EQZ_CONFIG_PARAM_EQZ_TYPE,
                  &eqz_type);
```

2.4.13. XA_API_CMD_SET_INPUT_BYTES command

Subcommand	None	
Description	This command is used to set the number of bytes available in the input buffer for the execution.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_SET_INPUT_BYTES
	i_idx	NULL
	pv_value	Pointer to the input byte variable.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - The pointer is incorrectly aligned to the requirements. XA_EQZ_EXEC_FATAL_STATE - Precondition is incorrect. XA_EQZ_EXEC_FATAL_INPUT - pv_value is invalid

Example

```
WORD32 filled;  
res = (*api_func)(api_obj,  
                  XA_API_CMD_SET_INPUT_BYTES,  
                  0,  
                  &filled);
```

2.4.14. XA_API_CMD_INPUT_OVER command

Subcommand	None	
Description	This command is used to tell the equalizer that the end of the input data has been reached. This situation can arise both in the initialization loop and the execute loop.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_INPUT_OVER
	i_idx	NULL
	pv_value	NULL
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj is NULL. XA_API_FATAL_MEM_ALIGN - The pointer is incorrectly aligned to the requirements.

Example

```
res = (*api_func)(api_obj,  
                 XA_API_CMD_SET_INPUT_OVER,  
                 0,  
                 NULL);
```

2.4.15. XA_API_CMD_EXECUTE command

Subcommand	XA_CMD_TYPE_DO_EXECUTE	
Description	This command executes the equalizer.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_EXECUTE
	i_idx	XA_CMD_TYPE_DO_EXECUTE
	pv_value	NULL
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_EXEC_FATAL_STATE - Precondition is incorrect.

Example

```
res = (*api_func)(api_obj,  
                 XA_API_CMD_EXECUTE,  
                 XA_CMD_TYPE_DO_EXECUTE,  
                 NULL);
```

Subcommand	XA_CMD_TYPE_DONE_QUERY	
Description	This command checks to see if the end of processing has been reached. If it is, the flag value is set to 1; else, it is set to zero. The pointer to the flag is passed as an argument. Processing by the equalizer can continue for several invocations of the DO_EXECUTE command after the last input data has been passed to the equalizer, so the application should not assume that the equalizer has finished generating all its output until so indicated by this command.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_EXECUTE
	i_idx	XA_CMD_TYPE_DONE_QUERY
	pv_value	Pointer to the flag variable.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - d is not aligned to 4 bytes. XA_EQZ_EXEC_FATAL_STATE - Precondition is incorrect.

Example

```
WORD32 done;
res = (*api_func)(api_obj,
                  XA_API_CMD_EXECUTE,
                  XA_CMD_TYPE_DONE_QUERY,
                  &done);
```

2.4.16. XA_API_CMD_GET_OUTPUT_BYTES command

Subcommand	None	
Description	This command obtains the number of bytes output by the equalizer during the last execution.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_GET_OUTPUT_BYTES
	i_idx	NULL
	pv_value	Pointer to output bytes variable.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value is NULL. XA_API_FATAL_MEM_ALIGN - The pointer is incorrectly aligned to the requirements. XA_EQZ_EXEC_FATAL_STATE - Precondition is incorrect.

Example

```
WORD32 produced;  
res = (*api_func)(api_obj,  
                  XA_API_CMD_GET_OUTPUT_BYTES,  
                  0,  
                  &produced);
```

2.4.17. XA_API_CMD_GET_CURIDX_INPUT_BUF command

Subcommand	XA_API_CMD_GET_CURIDX_INPUT_BUF	
Description	This command gets the number of input buffer bytes consumed by the equalizer. It is used both in the initialization loop and execute loop.	
Parameter	p_xa_module_obj	Pointer to API Structure.
	i_cmd	XA_API_CMD_GET_CURIDX_INPUT_BUF
	i_idx	NULL
	pv_value	Pointer to bytes consumed variable.
Return value	Normal	XA_NO_ERROR
	Error	XA_API_FATAL_MEM_ALLOC - p_xa_module_obj or pv_value or d->pMem_tabs->pInput is NULL. XA_API_FATAL_MEM_ALIGN - The pointer is incorrectly aligned to the requirements.

Example

WORD32 consumed;

```
res = (*api_func)(api_obj,  
                  XA_API_CMD_GET_CURIDX_INPUT_BUF,  
                  0,  
                  &consumed);
```

2.5. Memory Specifications

This section describes the memory areas used by this software.

2.5.1. Persistent Area

Item	Area which always holds values when this software is used. If the user manipulates this area after initialization, the correct execution of this software is not ensured.
Symbol name	- (freely defined by the user)
Size	Obtain the actually required size with 2.4.8.
Area reservation	The user should reserve this area.
Allocation	This area is included in RAM.
Alignment	Align this area on a 4-byte boundary.

2.5.2. Input Buffer

Table 2-10 Input Buffer Description

Item	Area which stores inputs to this software. The input buffer contains 16/24 bit linear PCM data. If the user manipulates this area during equalize processing, the normal execution of the program cannot be ensured. [Note] This software does not support an input buffer which is a circular buffer.
Symbol name	- (freely defined by the user)
Size	Please secure more than size with 2.4.8.
Area reservation	The user should reserve this area. The user can freely use this area after the equalizing of one block.
Allocation	This area is included in RAM.
Alignment	Align this area on a 4-byte boundary.

2.5.3. Output Buffer

Table 2-11 Output Buffer Description

Item	Area which stores outputs from this software. The output buffer contains 16/24-bit linear PCM data (hereinafter called PCM data). If the user manipulates this area during equalize processing, the normal execution of the program cannot be ensured.
Symbol name	- (freely defined by the user)
Size	Size same as input buffer
Area reservation	The user should reserve this area. The user can freely use this area after the equalizing of one block.
Allocation	This area is included in RAM.
Alignment	Align this area on a 4-byte boundary.

(1) Input and output data storage method

Data is in the formats as shown in Figure 2-4(consecutive buffers are specified for the channels). The input and output buffer (memory) store data in 2-byte (16-bit) units. The byte order for accessing the buffer is little endian (see Figure 2-2).

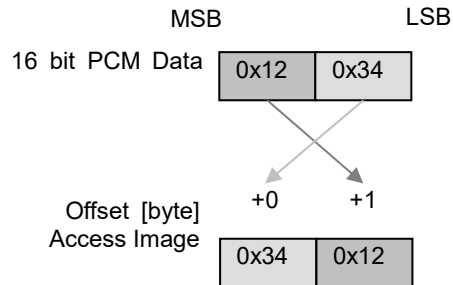


Figure 2-2 PCM 16-bit Data Access (Little Endian Mode)

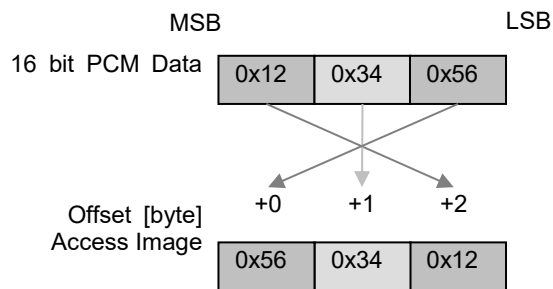


Figure 2-3 PCM 24-bit Data Access (Little Endian Mode)

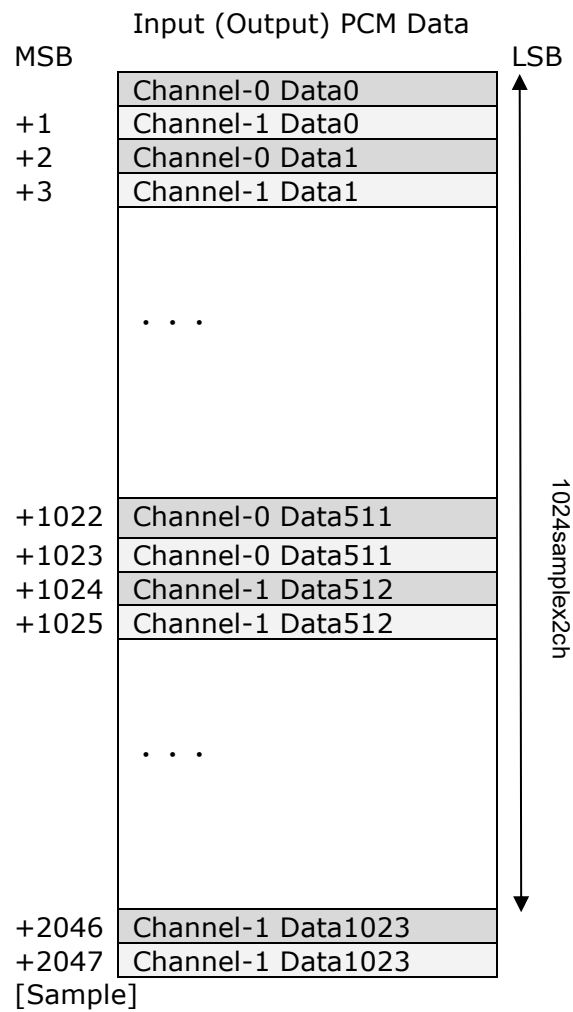


Figure 2-4 Stereo Input (Output) Format
Input (Output) Formats

2.6. Structures specification

2.6.1. API Structure

Name of structure type: XARElEqz

Structure Members:

Type	Name	Description
WORD32	iState	State of API
pVOID	pMem_tabs	Memory table controller
pVOID	iChannels	Number of input channels
WORD32	iPcm_width	Width of PCM data
WORD32	iEqz_type	Number of input channels
WORD32	iFs	Type of Equalizer
WORD32	iSample_size	Sample size
WORD32	iSubmitted	Total submitted samples
WORD32	iConsumed	Current consumed samples
WORD32	iProduced	Produced output samples
releqz_setParametricEqualizerCoef	stEqCoef	Parametric equalizer coefficient
releqz_setGraphicEqualizerCoef	stEqGCoef	Graphic equalizer coefficient

2.6.2. Persistent Structure

Name of structure type: releqz_Persistent

Function: It stores equalizer calculation data buffer.

Structure Members:

Name	Description
Equalizer *stEq	Equalizer calculation data buffer

2.6.3. Equalizer settings structure

Structure name: Equalizer

Function: It stores the parameters necessary for Equalizer object.

Structure Members:

	Name	Description
Biquad	biquad[EQ_FILTER_N]	Biquad filter
WORD32	coef[EQ_FILTER_N][BQ_COEF_N]	Coefficients for each Biquad
WORD32	blockSize	Block size of one equalizer processing
WORD32	sampleStep	Sample step

2.6.4. Biquad filter structure

Structure name: Biquad

Function: It stores the parameters necessary for Biquad filter object.

Structure Members:

Name		Description
WORD32	delay[2]	Store data delay time.
WORD32	*coef	Pointer to biquad filter coefficient.

2.7. Error processing

Status code	Error code (32bit)	Value	Description
Normal	XA_NO_ERROR	0x00000000	The processing results are normal. The process has terminated normally.
Error	XA_API_FATAL_MEM_ALLOC	0xFFFF8000	Abnormality has occurred, which disables process continuation. An address of API structure was specified at the argument is NULL, the program execution is incorrect. Because it becomes the common API error, please check the correct procedure.
Error	XA_API_FATAL_MEM_ALIGN	0xFFFF8001	Abnormality has occurred, which disables process continuation. An address of API structure was specified at the argument does not 4 byte align. Because it becomes the common API error, please check the correct procedure.
Error	XA_API_FATAL_INVALID_CMD	0xFFFF8002	Abnormality has occurred, which disables process continuation. The command was specified at the argument does not support. Because it becomes the common API error, please check the correct procedure.
Error	XA_API_FATAL_INVALID_CMD_TYPE	0xFFFF8003	Abnormality has occurred, which disables process continuation. The subcommand was specified at the argument does not support. Because it becomes the common API error, please check the correct procedure.
Error	XA_EQZ_CONFIG_FATAL_ERR_CH	0xFFFF0800	It is an error for equalizer specifications out of the range. The number of the channels was specified at the argument does not support. Please set a right value.
Error	XA_EQZ_CONFIG_PARAM_ERR_FS	0xFFFF0801	It is an error for equalizer

			<p>specifications out of the range.</p> <p>The number of the sampling frequency was specified at the argument does not support. Please set a right value.</p>
Error	XA_EQZ_CONFIG_PARAM_ERR_SIZE	0xFFFF0802	<p>It is an error for equalizer specifications out of the range.</p> <p>The Input or output buffer size was specified at the argument does not support. Please set an appropriate value. Refer 2.5.2 and 2.5.3.</p>
Error	XA_EQZ_CONFIG_PARAM_ERR_FC	0x00000803	<p>It is an error for equalizer specifications out of the range.</p> <p>The number of the center/transition frequency was specified at the argument does not support. Please set a right value.</p>
Error	XA_EQZ_CONFIG_PARAM_ERR_GA	0x00000804	<p>It is an error for equalizer specifications out of the range.</p> <p>The number of the filter gain was specified at the argument does not support. Please set a right value.</p>
Error	XA_EQZ_CONFIG_PARAM_ERR_BA	0x00000805	<p>It is an error for equalizer specifications out of the range.</p> <p>The number of the filter base gain was specified at the argument does not support. Please set a right value.</p>
Error	XA_EQZ_CONFIG_PARAM_ERR_BW	0x00000806	<p>It is an error for equalizer specifications out of the range.</p> <p>The number of the filter bandwidth was specified at the argument does not support. Please set a right value.</p>
Error	XA_EQZ_CONFIG_PARAM_ERR_TYPE	0x00000807	<p>It is an error for equalizer specifications out of the range.</p> <p>The number of the filter type was specified at the argument does not support. Please set a right value.</p>

Error	XA_EQZ_CONFIG_PARAM_ERR_PCM_WIDTH	0xFFFF0808	It is an error when setting PCM width of input data. This value was specified at the argument does not support. Please set a right value.
Error	XA_EQZ_CONFIG_PARAM_ERR_OVERWRITE	0x00000809	When setting Parametric and Graphic Equalizer currently. The result will be overwritten.
Error	XA_EQZ_CONFIG_PARAM_ERR_SELECT_EQZ_TYPE	0x00000810	It is an error when select equalizer type. This value was specified at the argument does not support. Please set a right value.
Error	XA_EQZ_CONFIG_FATAL_STATE	0x00000811	It is an error when precondition does not satisfy.

3. Processing Flow

Figure 3.1 shows a flow diagram of processing performed by an application which uses this software. These steps are grouped into 6 stages: Startup API, Parameters Setting, Memory Allocation, Initialization, Parameter Getting and Equalizer Executing.

The basic steps executed by the framework are shaded. The steps defined by the user framework are white. Design the process to suit the target system.

[Note] **Set the equalizer parameter** phase performs for only Parametric Equalizer or Graphic Equalizer. If we set them currently it will return error code: (XA_EQZ_CONFIG_NONFATAL_ERR_OVERWRITE).

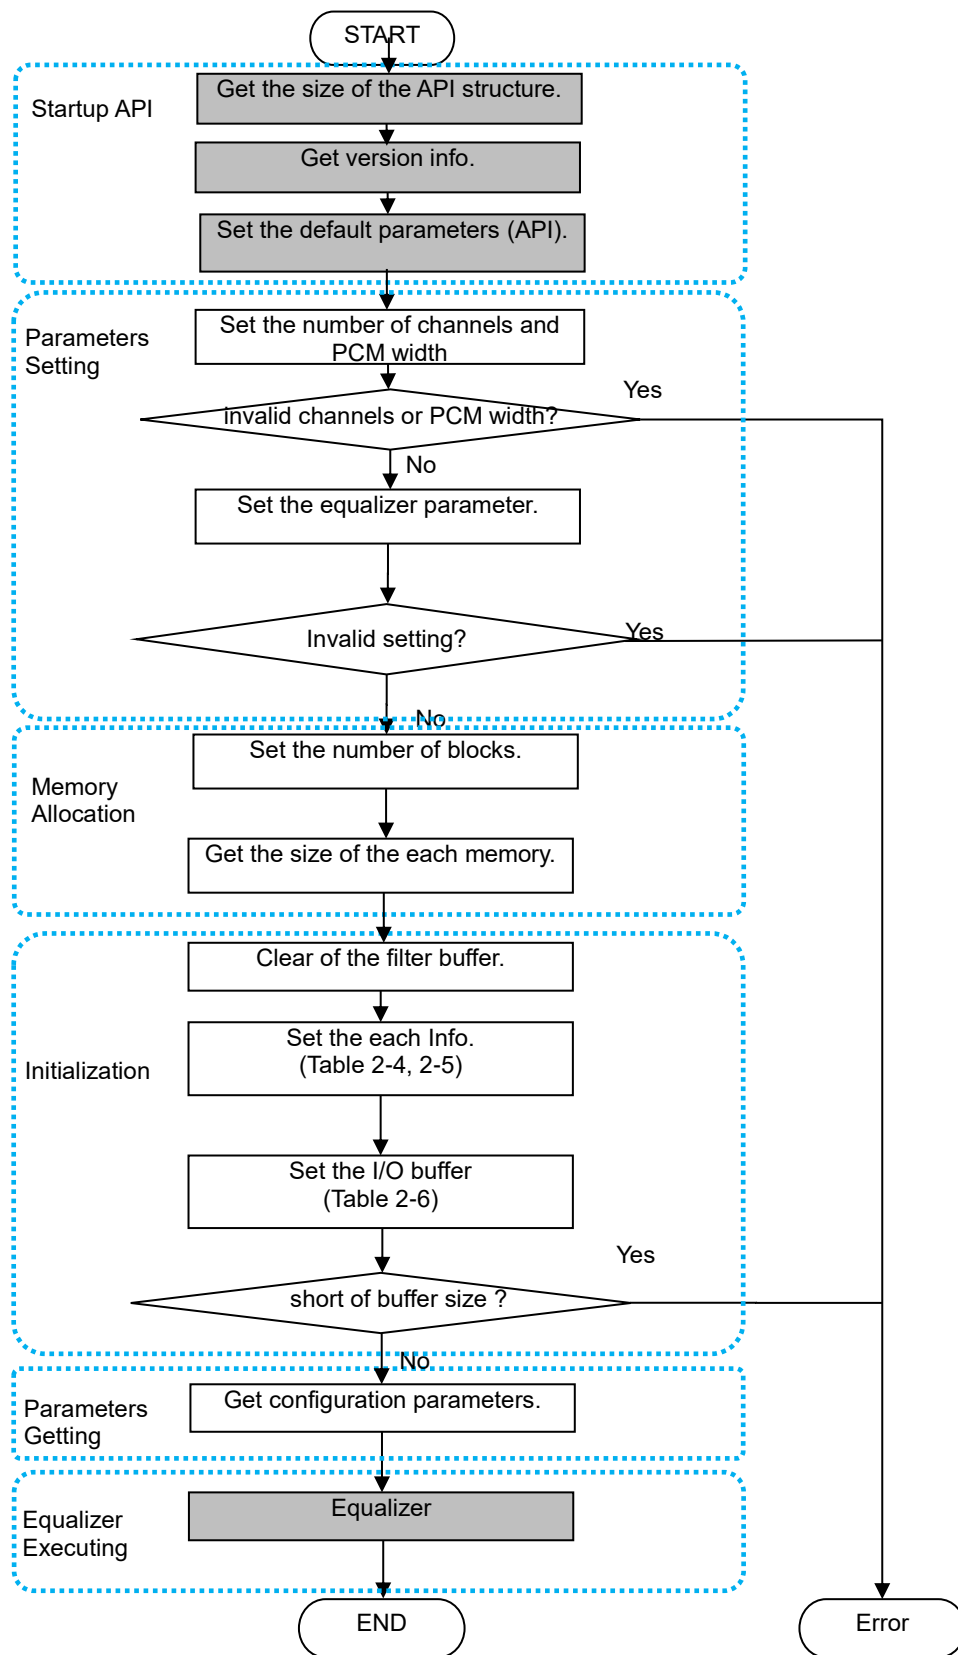


Figure 3-1 Application Processing Flow

4. Notes

This section describes the notice of developing user programs.

4.1. Function Call

User programs which call the functions in this specification should obey the calling rules of compiler.

4.2. Other notes

4.2.1. Allocation of memory

Before calling a function in this software, reserve a persistent area, an input/output buffer area, and areas for structures which should hold the arguments of functions.

4.2.2. Out of range memory access

The functions in this specification never access out of allocated memory or related I/O.

4.2.3. Combination with other applications

Take care not to duplicate symbol names when other applications are combined with other programs.

4.2.4. Monitoring on Performance

The products embedding this Software shall observe performance of the Software periodically with Watch Dog timer or such functions in order not to damage system performance.

CONFIDENTIAL

Revision History	ADSP Reference Equalizer Plugin User's Manual
------------------	-----------------------------------------------

Rev.	Date	Description	
		Page	Summary
0.10	May. 30, 2018	-	New Create

ADSP Reference Equalizer Plugin User's Manual

Publication Date: May. 30, 2018 Rev. 0.10

Published by: Renesas Electronics Corporation



SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

Renesas Electronics America Inc.

1001 Murphy Ranch Road, Milpitas, CA 95035, U.S.A.
Tel: +1-408-432-8888, Fax: +1-408-434-5351

Renesas Electronics Canada Limited

9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3
Tel: +1-905-237-2004

Renesas Electronics Europe Limited

Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K.
Tel: +44-1628-651-700, Fax: +44-1628-651-804

Renesas Electronics Europe GmbH

Arcadiastrasse 10, 40472 Düsseldorf, Germany
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd.

Room 1709 Quantum Plaza, No.27 ZhichunLu, Haidian District, Beijing, 100191 P. R. China
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.

Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, 200333 P. R. China
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

Renesas Electronics Hong Kong Limited

Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong
Tel: +852-2265-6688, Fax: +852 2886-9022

Renesas Electronics Taiwan Co., Ltd.

13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan
Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

Renesas Electronics Singapore Pte. Ltd.

80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949
Tel: +65-6213-0200, Fax: +65-6213-0300

Renesas Electronics Malaysia Sdn.Bhd.

Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

Renesas Electronics India Pvt. Ltd.

No.777C, 100 Feet Road, HAL 2nd Stage, Indiranagar, Bangalore 560 038, India
Tel: +91-80-67208700, Fax: +91-80-67208777

Renesas Electronics Korea Co., Ltd.

17F, KAMCO Yangjae Tower, 262, Gangnam-daero, Gangnam-gu, Seoul, 06265 Korea
Tel: +82-2-558-3737, Fax: +82-2-558-5338



ルネサスエレクトロニクス株式会社

営業お問合せ窓口

<http://www.renesas.com>

営業お問合せ窓口の住所は変更になることがあります。最新情報につきましては、弊社ホームページをご覧ください。

ルネサス エレクトロニクス株式会社 〒135-0061 東京都江東区豊洲3-2-24 (豊洲フォレシア)

技術的なお問合せおよび資料のご請求は下記へどうぞ。
総合お問合せ窓口：<https://www.renesas.com/contact/>

ADSP Reference Equalizer Plugin

RCG3AHPLN0202ZDO