



Application Note

PCIe SDR Card Calibration



Version: 2024-12-13

Table of Contents


1	Introduction	1
2	Frequency Calibration	2
2.1	Frequency Error Measurement	2
2.2	Frequency Calibration Methodology	2
2.3	Frequency Calibration with GPS	3
3	DL Power Calibration.....	5
3.1	DL Power Measurement.....	5
3.2	DL Power Calibration Methodology	5
4	UL Power Calibration	6
5	Additional Information	7

1 Introduction

This application note explains how to calibrate Amarisoft PCIe SDR card.

2 Frequency Calibration

Amarisoft PCIe card has a maximum frequency error less than 2 ppm. The following figure depicts the measured frequency error on a sample of 5 cards.

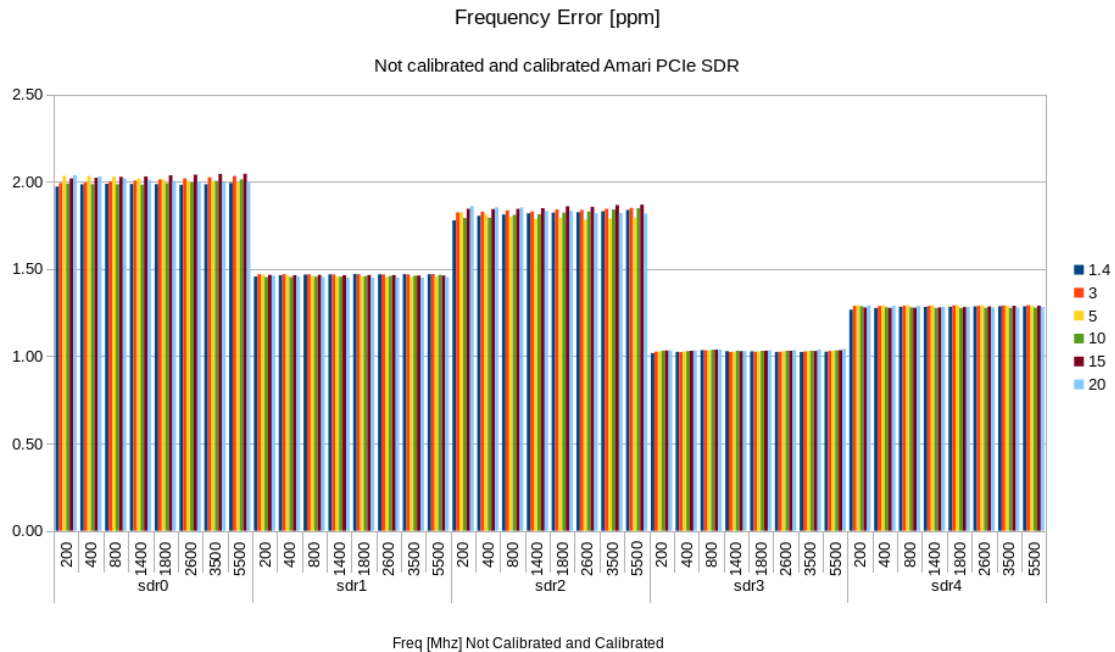

2.1 Frequency Error Measurement

Start `lteenb` with a 10 MHz SISO FDD cell and `dl_eafcn` corresponding to `Fset` MHz. Connect the TX1 SDR connector to an analyzer. Set the `Fset` as central frequency of the signal analyzer. Read `Fmeasured` or `Fmeasured-Fset` from the signal analyzer, then compute:

$$\text{Error} = 10^{-6} * (\text{Fmeasured} - \text{Fset}) / \text{Fset}$$

In general

$$|\text{Error}| < 2 \text{ ppm}$$

This error does not depend on the bandwidth or the frequency. It only depends on the SDR HW.

2.2 Frequency Calibration Methodology

This error can be corrected by using the following command

```
/root/trx_sdr/sdr_util clock_tune -<Error in ppm>
```

As an example, if `Error = 1.6 ppm` then the command to use is


```
/root/trx_sdr/sdr_util clock_tune -1.6
```

if **Error** = -1 ppm then the command to use is

```
/root/trx_sdr/sdr_util clock_tune 1
```

Note that the setting is power cycle persistent. In case you have many SDRs connected to the PC, use the option **-c device_num** to select the device (default = all)

After calibration, you can expect **Error** < 0.1 ppm. The following figure shows the frequency error on a calibrated and non calibrated PCIe SDR cards.

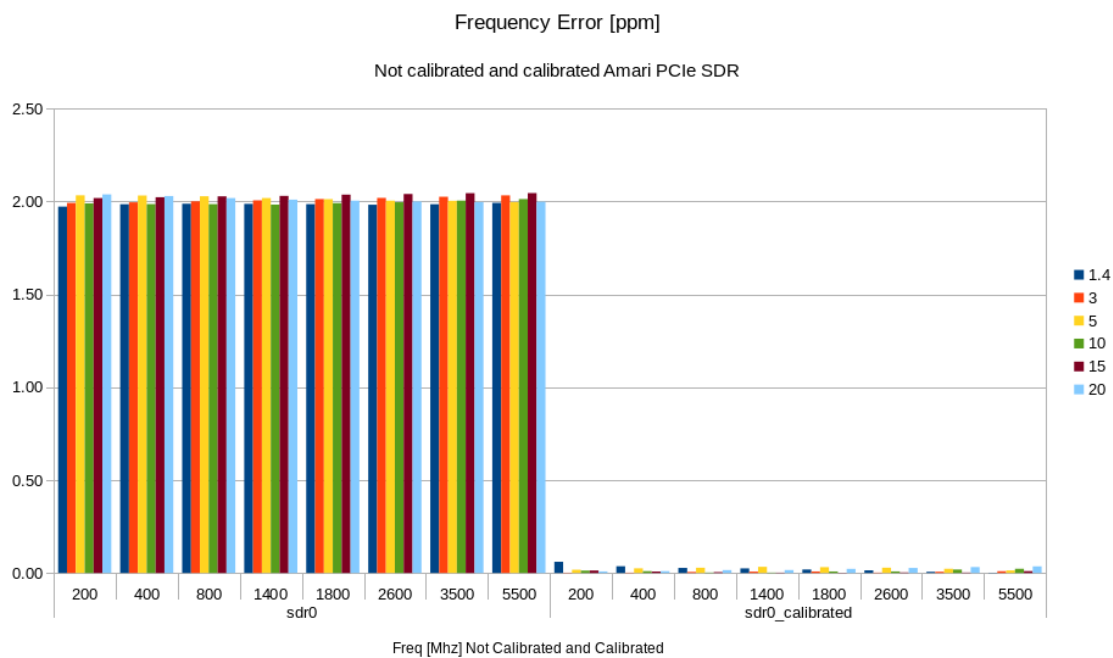

2.3 Frequency Calibration with GPS

Since test release version 2019-10-31, frequency calibration can be performed via GPS signal. To calibrate a SDR card, stop the lte service

```
service lte stop
```

connect a GPS antenna to the GPS SMA connector of the SDR card. Any active GPS antenna accepting a 3.3V DC supply can be used, for example:

<http://www.mouser.fr/Search/ProductDetail.aspx?R=ANT-GPS-SH-SMAvirtualkey59000000virtualkey>

You can check the GPS state with

```
./sdr_util gps_state
```

The GPS might takes a few minutes to lock.

Under /root/trx_sdr/ folder execute

```
./sdr_util -c <n> gps_cal <t> -s
```

where:

<n> sdr device number

<t> GPS clock acquisition time in seconds, 30 seconds is a good value


-s option to store the resulting ppm correction to a flash memory on the card

If you use an Amarisoft product where the master sdr0 provides the clock to the other slave cards, you only need to calibrate the master card

```
./sdr_util -c 0 gps_cal 30 -s
```

3 DL Power Calibration

The channel power is the integrated power over the cell bandwidth. The downlink power of the Amarisoft PCIe SDR card depends on the frequency and varies roughly between +5 dBm and -10 dBm for $f < 3500$ MHz, and can go down to -25 dBm for higher frequencies as can be viewed in the following figure.

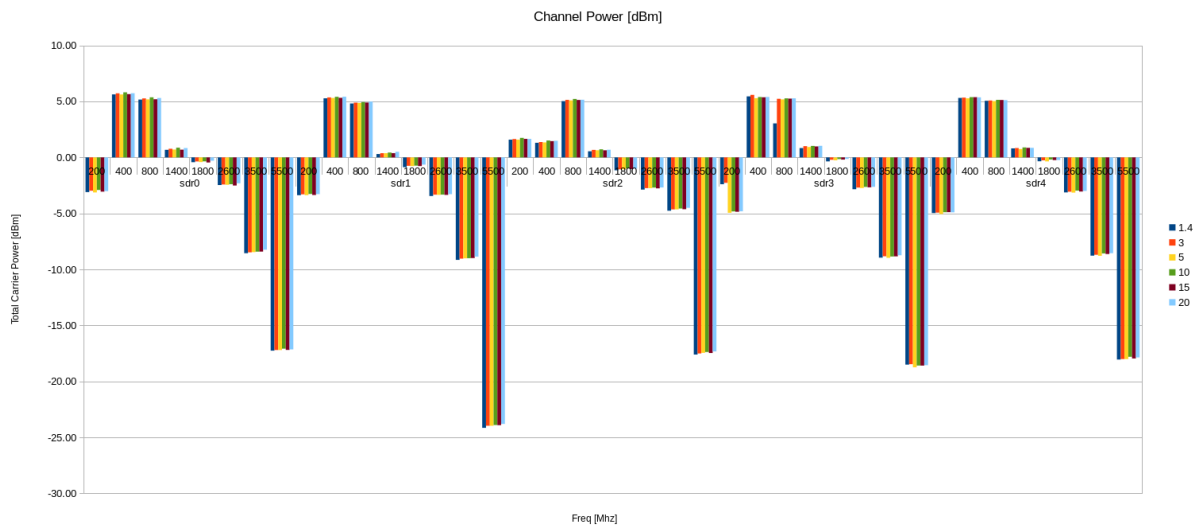

3.1 DL Power Measurement

You can measure the channel power for each frequency using the attached eNodeB config and measuring with a power meter the integrated power over the bandwidth. You can do this for each unit you want to calibrate and keep the value in a table (Channel power for 20 MHz versus Frequency).

```
for f = fmin;f<fmax;f=fdelta
    Set the frequency in the config file to f, and run enb (dl_freq_min parameter in the config file)
    Set the frequency and bandwidth in the power meter
    Capture the channel power from the power meter
end for
```

Note that the measurement shall be taken with a $BW = 20$ MHz and $tx_gain=90$. Note 2 any path loss shall be added to the value read from the power meter. Note 3 The more $fdelta$ is small the more accurate will be the interpolation.

3.2 DL Power Calibration Methodology

To achieve a certain channel power, you know the value for $tx_gain = 90$ from the calibration array (or interpolation of the values), then you can select the right tx_gain to achieve your target channel gain. To achieve a certain RSRP, you have to convert the RSRP value to channel power using the target bw value, then you use the method for channel power.

4 UL Power Calibration

In order to calibrate the UL power of the card, you can split the uplink signal to both eNodeB and power meter. Make sure you add a 3 dB attenuation in the dl path as well to have the same path loss in both directions. Then you can compare the power reported by the eNodeB, with the one reported by the power meter.

The initial value of the `rx_gain` set in the configuration file is taken into account when the eNodeB computes the uplink power. But if you change the value during the execution using the `rx_gain` command line interface, then you have to apply the `rx_gain` delta between the new value and the one in the configuration file by yourself. We recommend not to change the `rx_gain` value dynamically.

5 Additional Information

This document is copyright (C) 2012-2024 Amarisoft. Its redistribution without authorization is prohibited.

This document is available without any express or implied warranty and is subject to change without notice. In no event will Amarisoft be held liable for any damages arising from the use of this document.

For any technical issue, please raise a ticket from our support site at <https://support.amarisoft.com/>.

To learn more about our technology and solutions, e-mail us at customer@amarisoft.com or visit <https://www.amarisoft.com>.