


POWER SOURCE CIRCUIT

CIRCUIT DESCRIPTION


This circuit provides power to the television camera ECU.

WIRING DIAGRAM

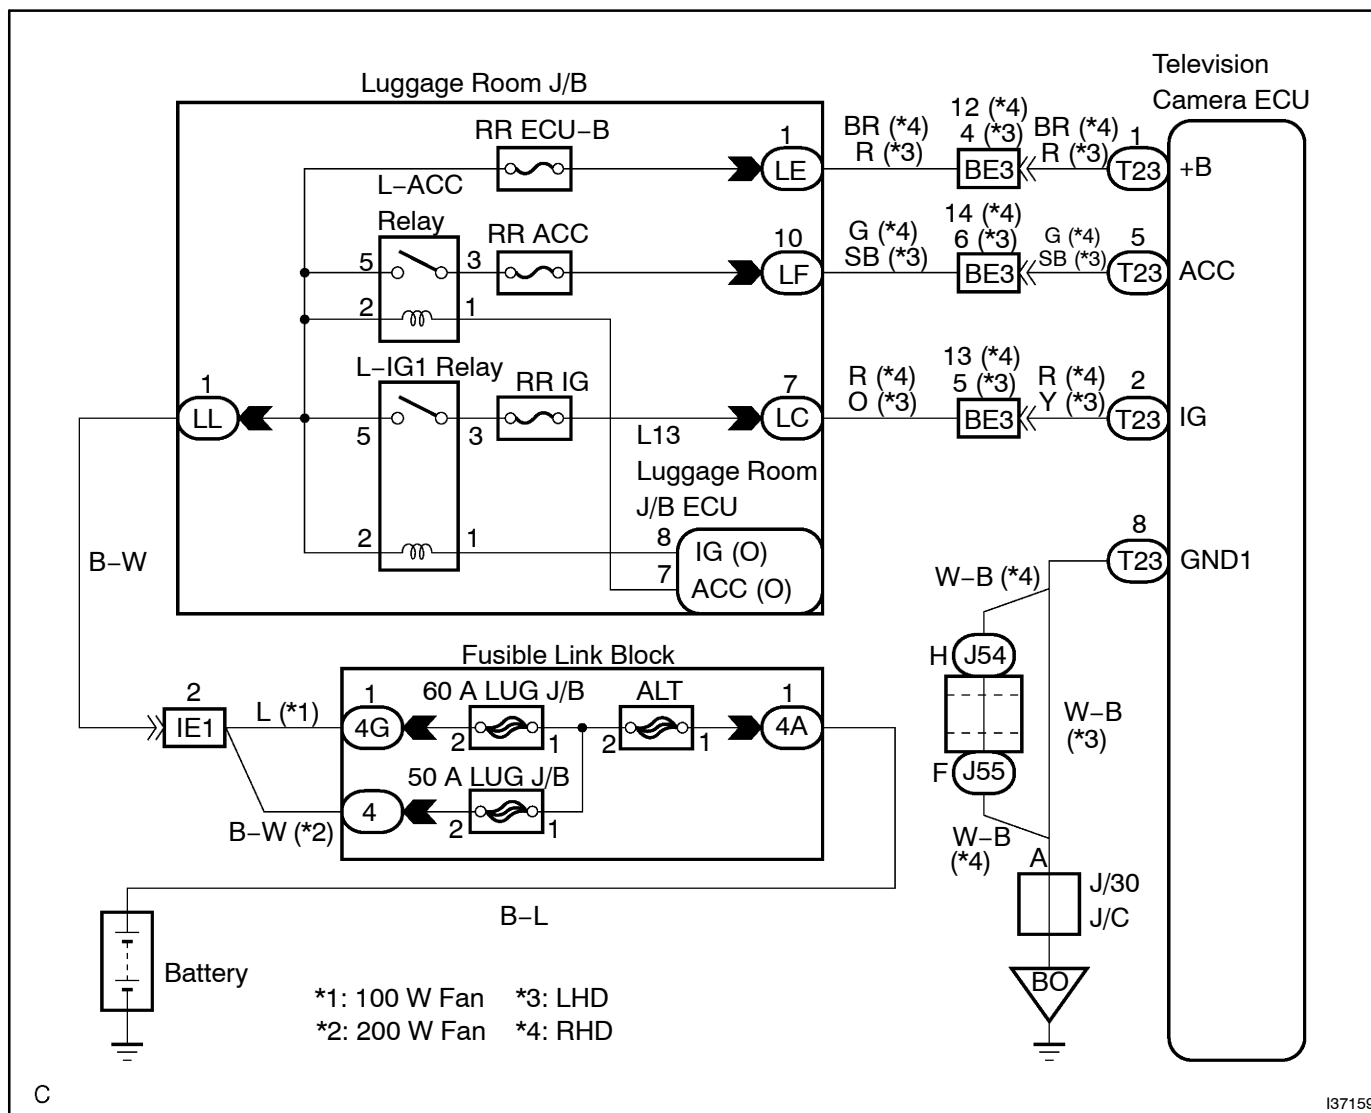

INSPECTION PROCEDURE

1 INSPECT TELEVISION CAMERA ECU(+B,ACC,IG TERMINAL)

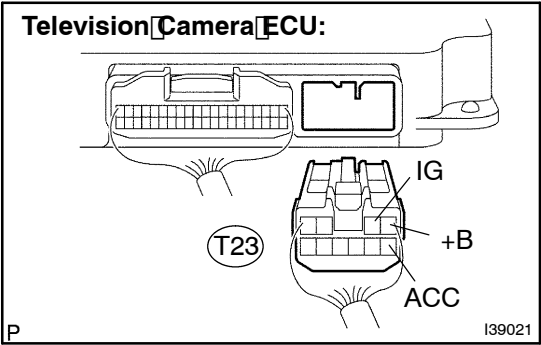

- Disconnect the T23 connector from the television camera ECU.
- Measure the voltage according to the value(s) in the table below.

Standard:


Tester connection	Condition	Specified condition
+B - Body ground	Always	10 to 14 V
ACC - Body ground	Ignition SW ACC	10 to 14 V
IG - Body ground	Ignition SW ON	10 to 14 V

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1950)

NG

2 CHECK HARNESS AND CONNECTOR(TELEVISION CAMERA ECU - BODY GROUND)

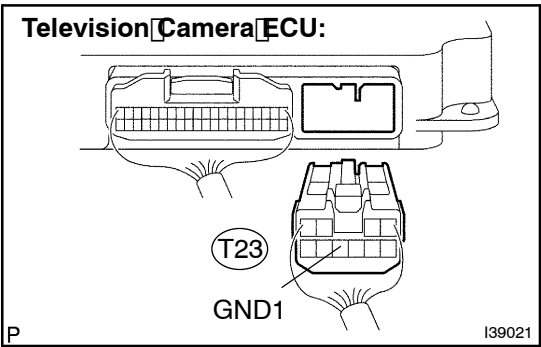

- Disconnect the T23 connector from the television camera ECU.
- Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
GND1 - Body ground	Always	Below 1 Ω

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR (TELEVISION CAMERA ECU - BODY GROUND)

OK

REPAIR OR REPLACE HARNESS OR CONNECTOR(TELEVISION CAMERA ECU - BATTERY)