

FRONT AXLE HUB SUB-ASSY LH REPLACEMENT

300NM-01


HINT:

- COMPONENTS: [SEE PAGE 30-4](#)
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. REMOVE FRONT WHEELS

2. SEPARATE SKID CONTROL SENSOR WIRE


- (a) Disconnect the connector.

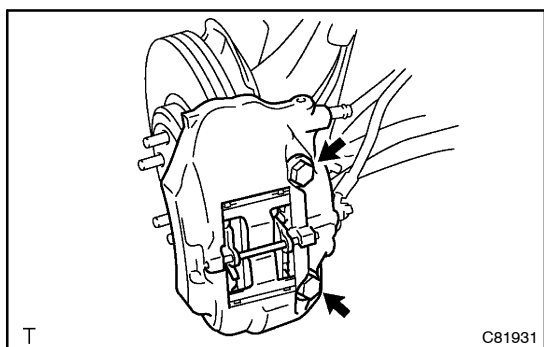

3. REMOVE FRONT DISC BRAKE CALIPER ASSY LH

- (a) Remove the 2 bolts and brake cylinder from the steering knuckle.
- (b) Support the brake caliper securely.

4. REMOVE FRONT DISC

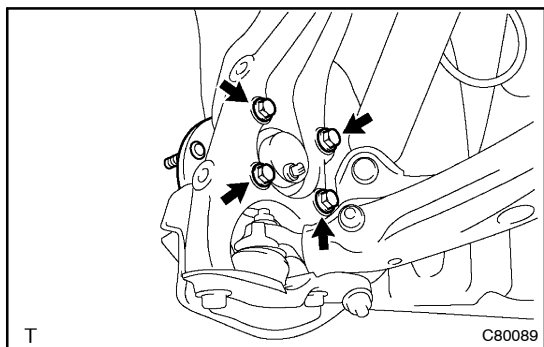

5. REMOVE FRONT AXLE HUB SUB-ASSY LH


- (a) Remove the 4 bolts and axle hub sub-assy LH.

6. REMOVE SKID CONTROL SENSOR FRONT ([SEE PAGE 32-61](#))


SST 09520-00031, 09950-00020

7. INSTALL SKID CONTROL SENSOR FRONT ([SEE PAGE 32-61](#))

SST 09214-76011

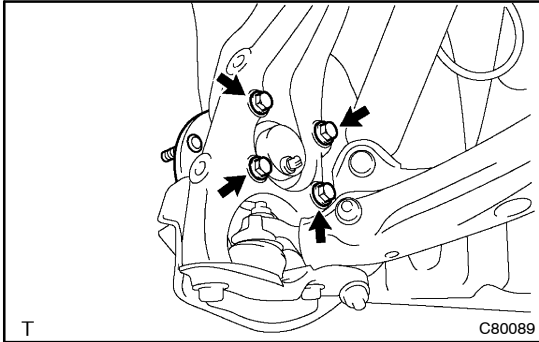**8. INSTALL FRONT AXLE HUB SUB-ASSY LH**

- (a) Install the axle hub sub-assy LH with the 4 bolts.
Torque: 69 N·m (700 kgf·cm, 51 ft·lbf)

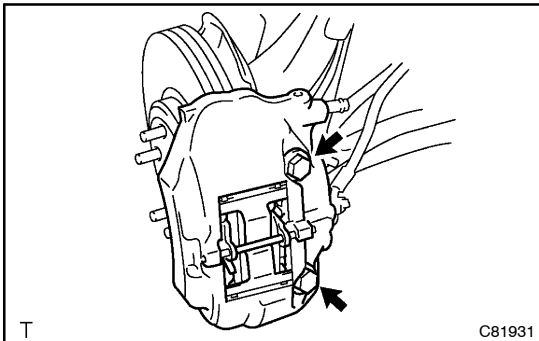9. INSPECT AXLE HUB BEARING LOOSENESS (SEE PAGE 30-2)**10. INSPECT AXLE HUB RUNOUT (SEE PAGE 30-2)****11. INSTALL FRONT DISC (SEE PAGE 32-39)****12. INSTALL FRONT DISC BRAKE CALIPER ASSY LH**

- (a) Install the disc brake caliper with the 2 bolts.
Torque: 78 N·m (800 kgf·cm, 58 ft·lbf)

13. INSTALL SKID CONTROL SENSOR WIRE

- (a) Connect the connector.

14. INSTALL FRONT WHEELS

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

15. INSPECT AND ADJUST FRONT WHEEL ALIGNMENT (SEE PAGE 26-8)**16. CHECK ABS SPEED SENSOR SIGNAL (SEE PAGE 05-389)**