


DISPLAY SIGNAL CIRCUIT (TELEVISION CAMERA ECU – MULTI-DISPLAY)

CIRCUIT DESCRIPTION



This is the display signal circuit from the television camera ECU to the multi-display.

WIRING DIAGRAM

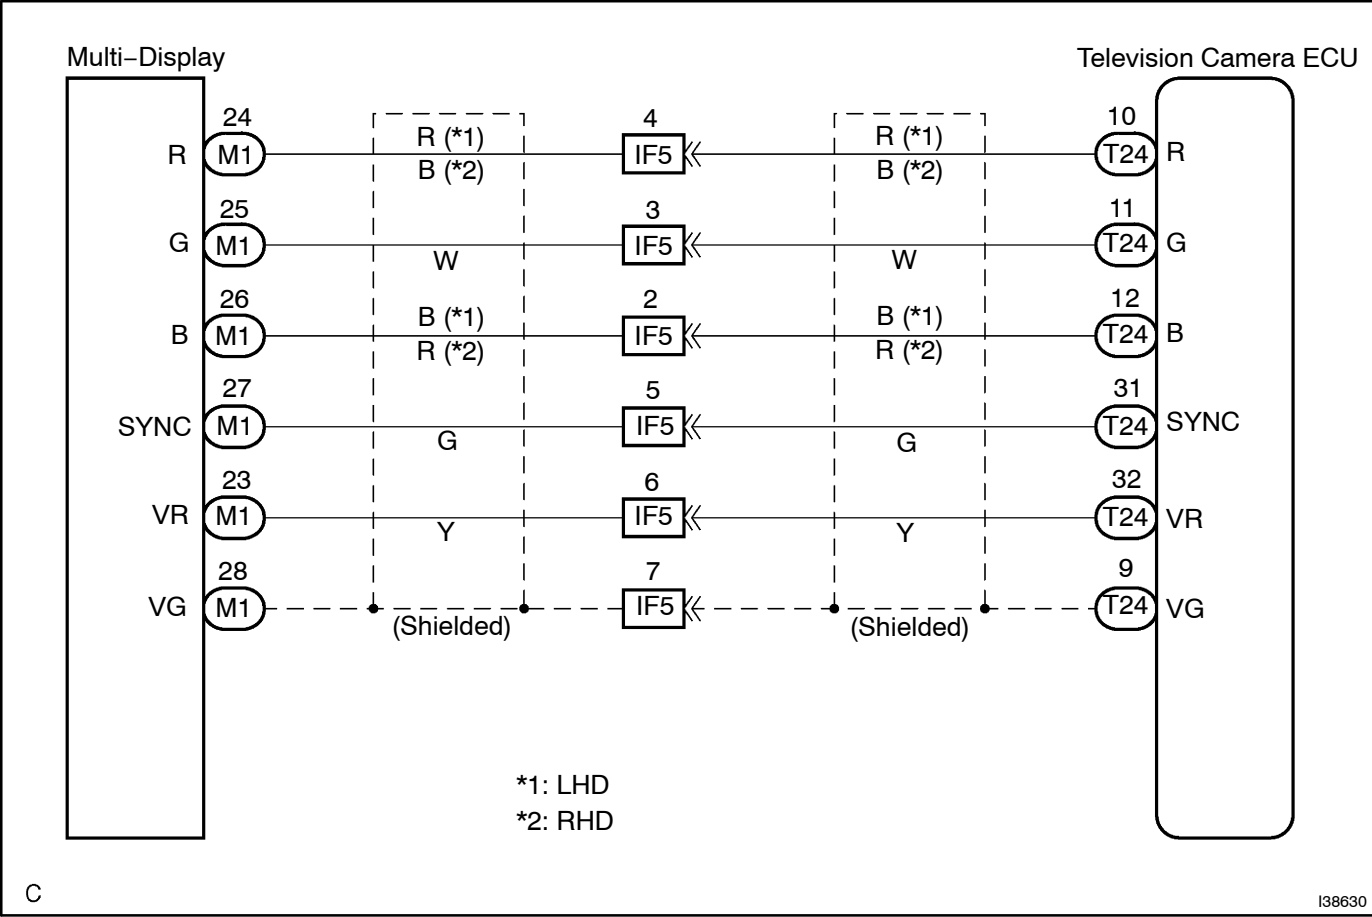

INSPECTION PROCEDURE

1 CHECK HARNESS AND CONNECTOR (TELEVISION CAMERA ECU - MULTI-DISPLAY)

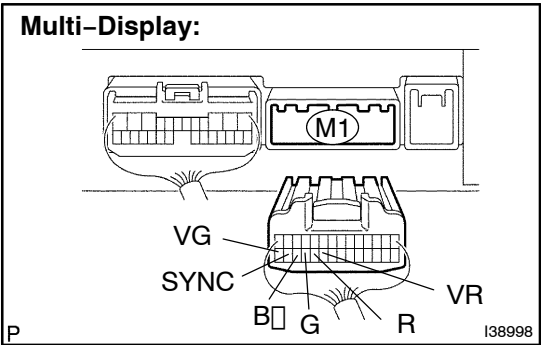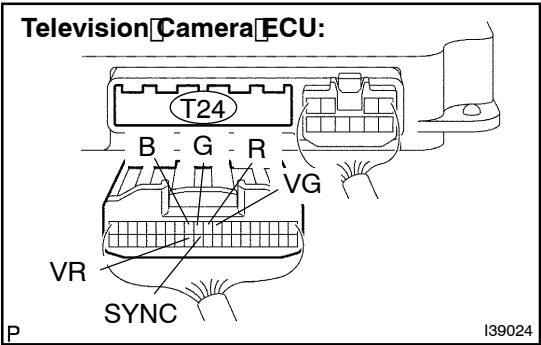

- (a) Disconnect the connector from the television camera ECU T24 and multi-display M1.
- (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester Connection	Condition	Specified Condition
R (T24) - R (M1)	Always	Below 1 Ω
G (T24) - G (M1)	Always	Below 1 Ω
B (T24) - B (M1)	Always	Below 1 Ω
SYNC (T24) - SYNC (M1)	Always	Below 1 Ω
VR (T24) - VR (M1)	Always	Below 1 Ω
VG (T24) - VG (M1)	Always	Below 1 Ω
R (T24 or M1) - Body Ground	Always	10 kΩ or higher
G (T24 or M1) - Body Ground	Always	10 kΩ or higher
B (T24 or M1) - Body Ground	Always	10 kΩ or higher
SYNC (T24 or M1) - Body Ground	Always	10 kΩ or higher
VR (T24 or M1) - Body Ground	Always	10 kΩ or higher

NG REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1771)