


REPLACEMENT


HINT:

- Replace the RH side by using the same procedures as for the LH side.
 - The procedures listed below are for the LH side.
1. REMOVE REAR SEAT CUSHION ASSY (SEE PAGE 72-13 or 72-19)
 2. REMOVE REAR SEAT HEAD REST ASSY (SEE PAGE 72-13 or 72-19)
 3. REMOVE REAR SEATBACK ASSY (SEE PAGE 72-13 or 72-19)
 4. REMOVE REAR WHEEL
 5. REMOVE REAR WHEEL HOUSE LH LINER

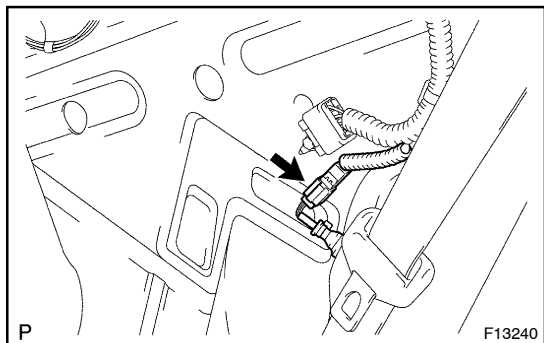


6. REMOVE SPEED SENSOR REAR LH


- (a) Disconnect the speed sensor connector, and pull out the speed sensor wire harness with the grommet.

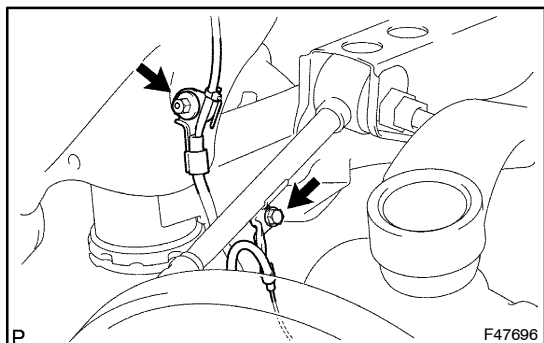

- (b) Remove the nut and bolt and disconnect the speed sensor rear wire harness.

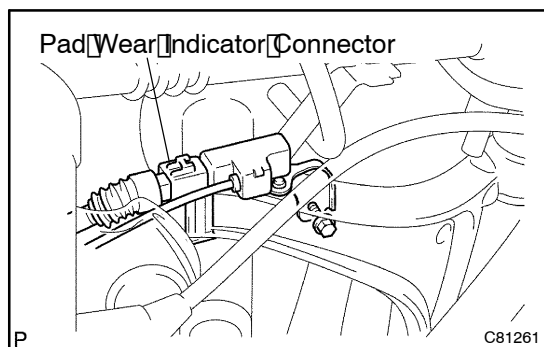

- (c) RH side:
Disconnect the pad wear indicator connector from the speed sensor rear.
- (d) RH side:
Remove the bolt and disconnect the speed sensor rear wire harness.

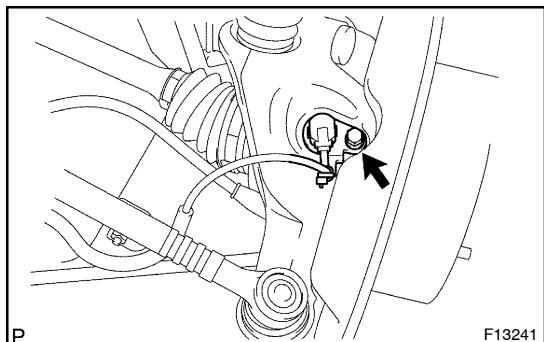

- (e) Remove the bolt and speed sensor rear.

NOTICE:

Prevent foreign matter from attaching to the sensor tip.

7. INSTALL SPEED SENSOR REAR LH**NOTICE:**


Do not twist the sensor wire when installing the sensor.

- (a) Install the speed sensor rear with the bolt.

Torque: 3.0 N·m (82 kgf·cm, 71 in.·lb)

NOTICE:

Prevent foreign matter from attaching to the sensor tip.

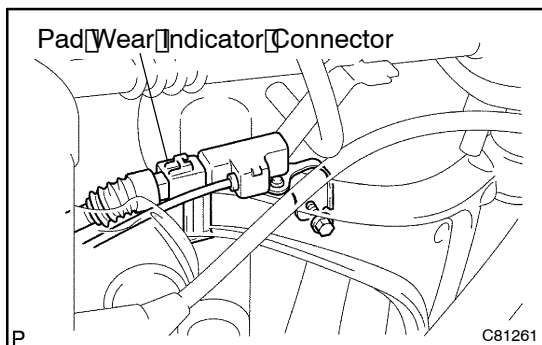


- (b) RH side:

Connect the speed sensor rear wire harness with the bolt.

Torque: 5.0 N·m (51 kgf·cm, 44 in.·lb)

- (c) RH side:


Connect the pad wear indicator connector to the speed sensor rear.

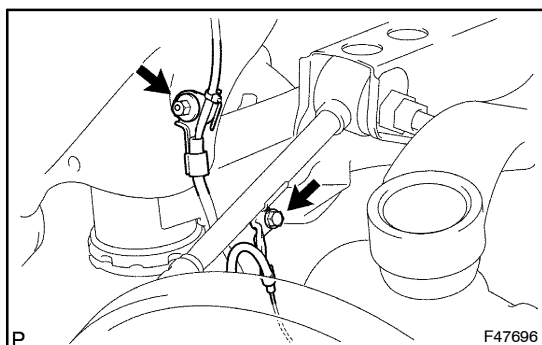

- (d) Connect the speed sensor rear wire harness with the nut and bolt.

Nut Torque: 5.0 N·m (51 kgf·cm, 44 in.·lb)

Bolt Torque: 5.0 N·m (51 kgf·cm, 44 in.·lb)

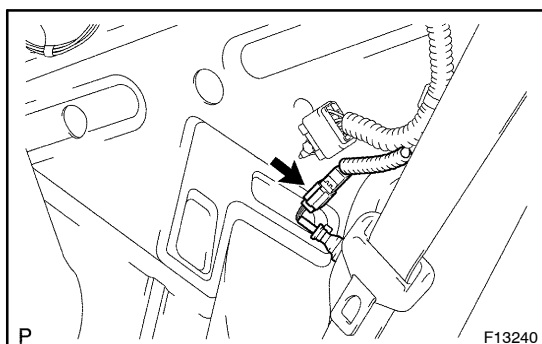

- (e) Connect the grommet and speed sensor rear.

8. INSTALL REAR WHEEL HOUSE LH LINER**9. INSTALL REAR WHEEL****10. INSTALL REAR SEATBACK ASSY (SEE PAGE 72-13 or 72-19)****11. INSTALL REAR SEAT HEADREST ASSY (SEE PAGE 72-13 or 72-19)****12. INSTALL REAR SEAT CUSHION ASSY (SEE PAGE 72-13 or 72-19)****13. CHECK ABS SPEED SENSOR SIGNAL (SEE PAGE 05-389)**