


POWER SOURCE CIRCUIT (DRIVER SIDE J/B ECU)

CIRCUIT DESCRIPTION

This circuit provides power to operate the driver side J/B ECU.


WIRING DIAGRAM

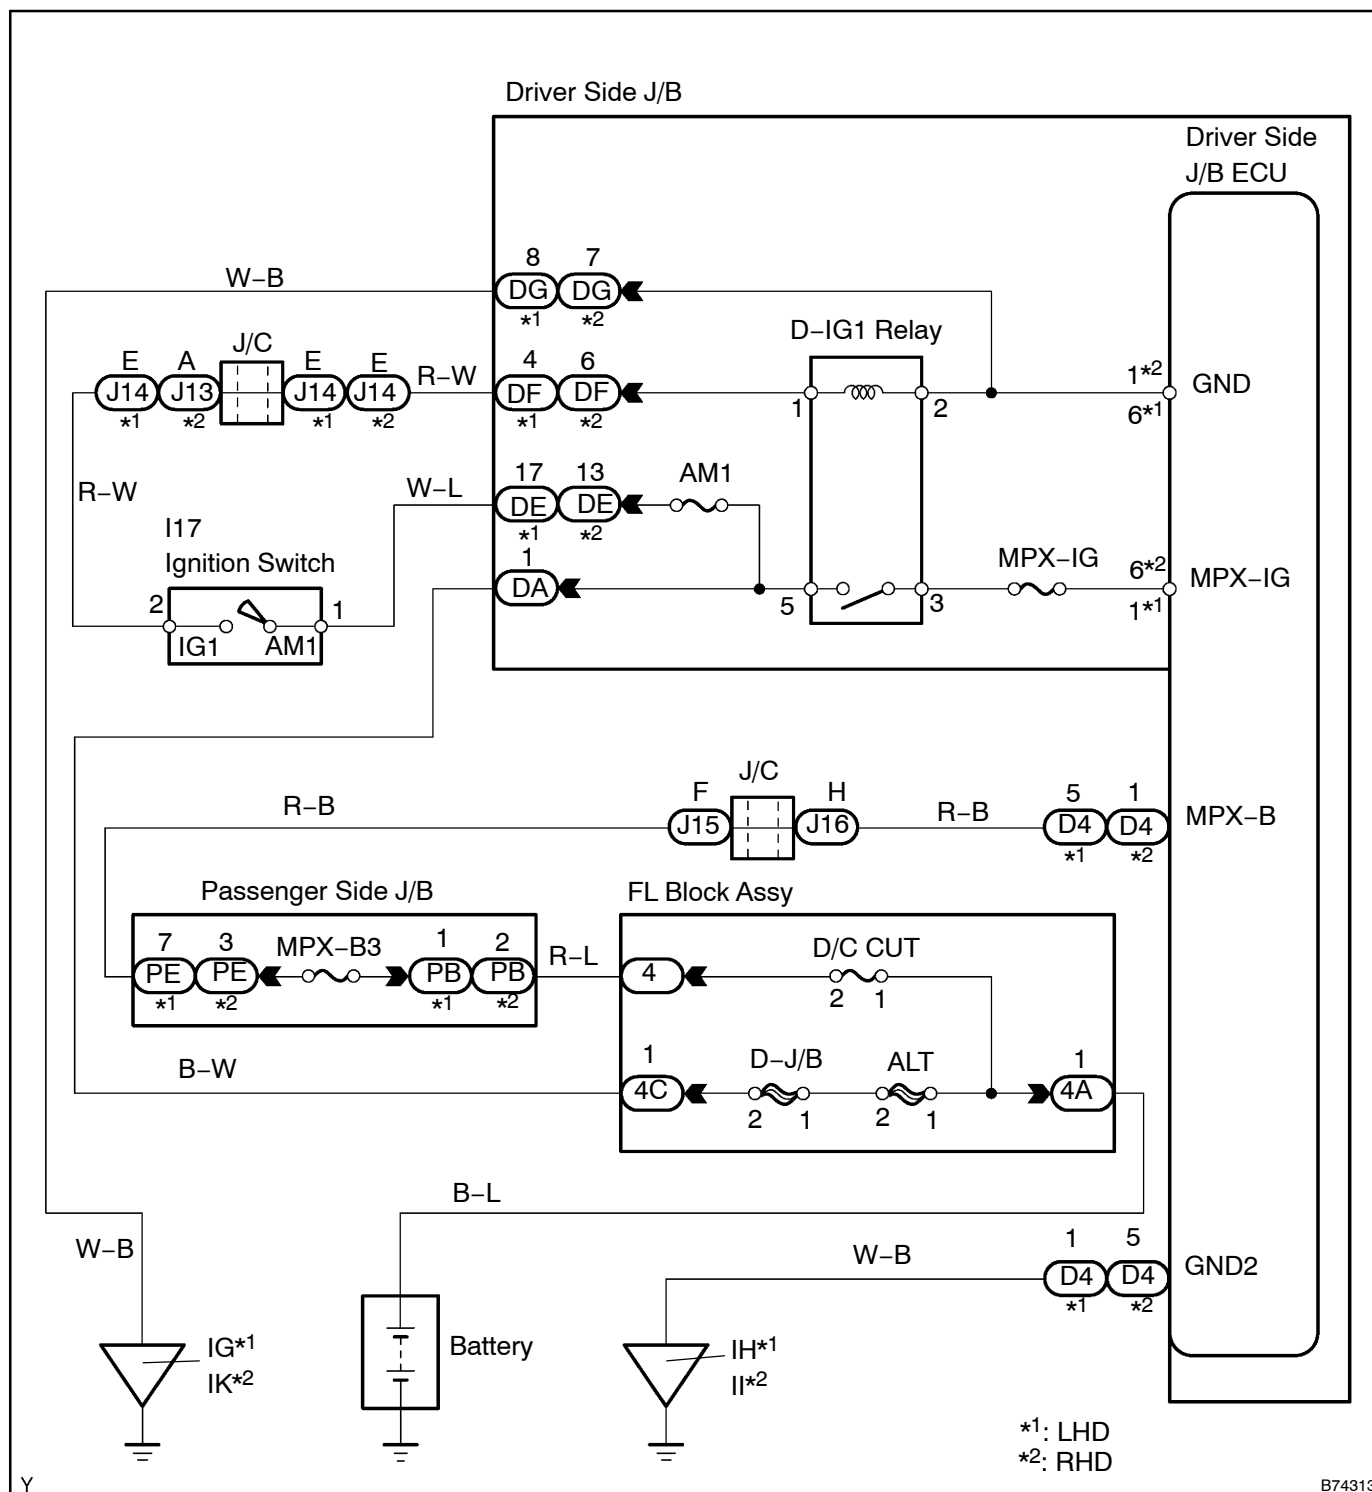

INSPECTION PROCEDURE

1 INSPECT FUSE (AM1, MPX-IG, MPX-B3, D/C CUT)

- (a) Remove the AM1 and MPX-IG fuses from the driver side J/B.
- (b) Remove the MPX-B3 fuse from the passenger side J/B.
- (c) Remove the D/C CUT fuse from the FL block.
- (d) Measure the resistance.

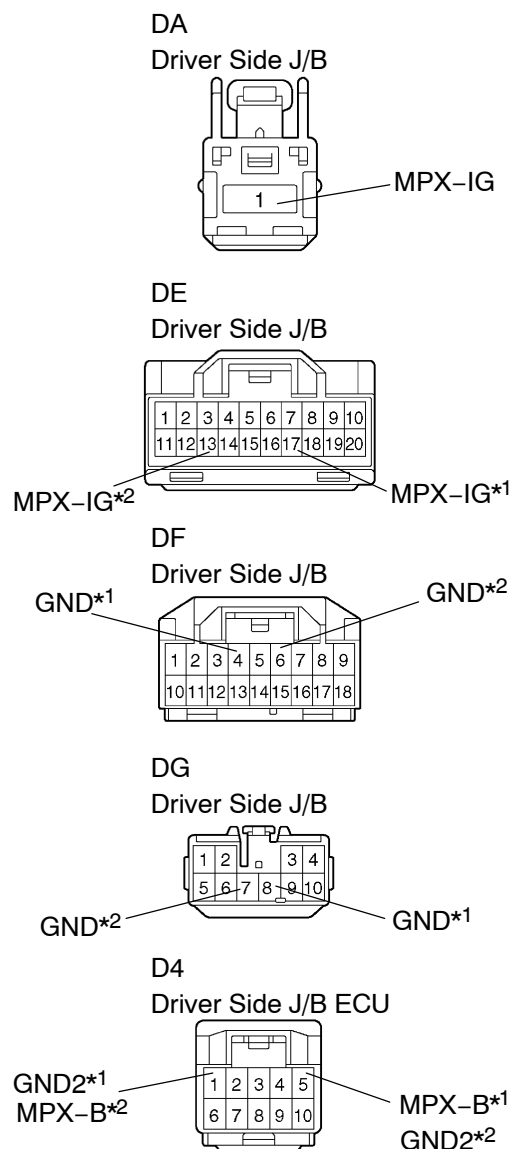Standard: Below 1 Ω **NG****REPLACE FUSE****OK****2 CHECK WIRE HARNESS (DRIVER SIDE J/B AND DRIVER SIDE J/B ECU - BODY GROUND)****Wire Harness Side**

*1: LHD

Y *2: RHD

B74311

- (a) Disconnect the DA, DE, DF, DG J/B and D4 ECU connectors.
- (b) Measure the voltage and resistance of the wire harness side connectors.

Standard:**LHD models**

| Tester Connection | Condition | Specified Condition |
|--------------------------------|--------------------------|--|
| DA-1 (MPX-IG) - Body ground | Constant | 10 to 14 V |
| D4-5 (MPX-B) - Body ground | Constant | 10 to 14 V |
| DG-8 (GND) - Body ground | Constant | Below 1 Ω |
| D4-1 (GND2) - Body ground | Constant | Below 1 Ω |
| DE-17 (MPX-IG - DF-4 (GND)) | Ignition switch OFF → ON | 10k Ω or higher → Below 1 Ω |

RHD models


| Tester Connection | Condition | Specified Condition |
|---------------------------------|--------------------------|--|
| DA-1 (MPX-IG) - Body ground | Constant | 10 to 14 V |
| D4-1 (MPX-B) - Body ground | Constant | 10 to 14 V |
| DG-7 (GND) - Body ground | Constant | Below 1 Ω |
| D4-5 (GND2) - Body ground | Constant | Below 1 Ω |
| DE-13 (MPX-IG) - DF-4 (GND)) | Ignition switch OFF → ON | 10k Ω or higher → Below 1 Ω |

NG

REPAIR OR REPLACE HARNESS AND CONNECTOR

OK

3 INSPECT RELAY (D-IG1)

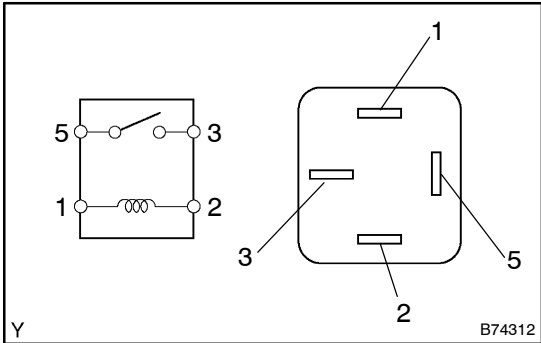

- (a) Remove the D-IG1 relay from the driver side J/B.
(b) Check the resistance.

Standard:

| Tester Connection | Specified Condition |
|-------------------|--|
| 3 - 5 | 10k Ω or higher |
| 3 - 5 | Below 1 Ω (when battery voltage is applied to terminals 1 and 2) |

NG

REPLACE RELAY

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOMS TABLE
(See page 05-2080)