


DISPLAY SIGNAL CIRCUIT (NAVIGATION ECU - TELEVISION CAMERA ECU)

CIRCUIT DESCRIPTION



This is the display signal circuit from the navigation ECU to the television camera ECU.

WIRING DIAGRAM

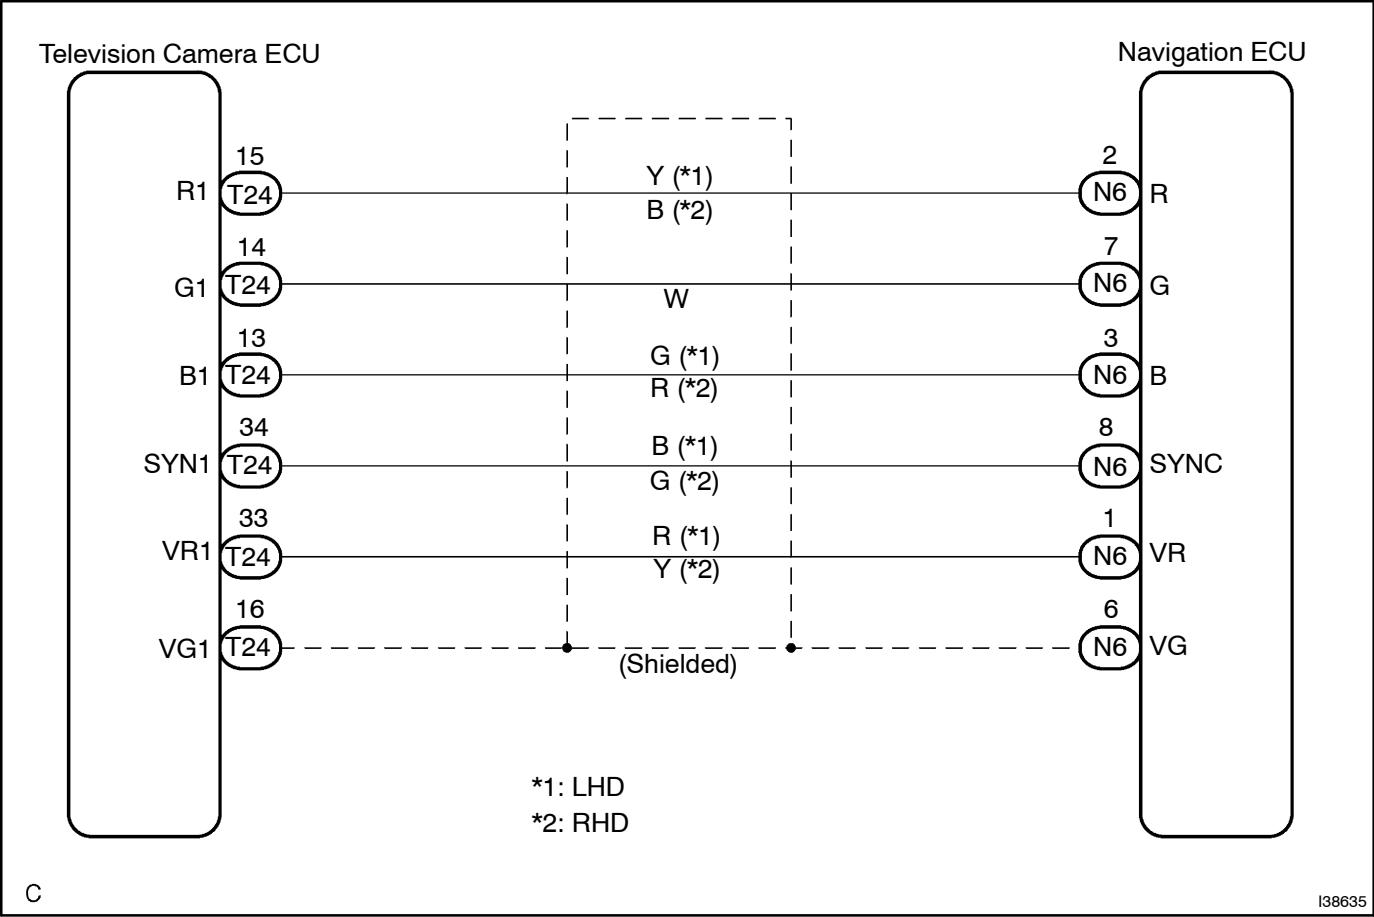

INSPECTION PROCEDURE

1 CHECK HARNESS AND CONNECTOR (NAVIGATION ECU - TELEVISION CAMERA ECU)

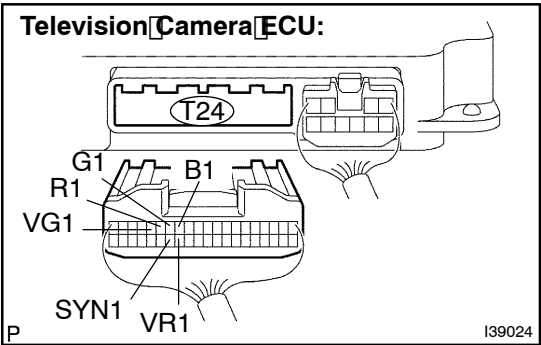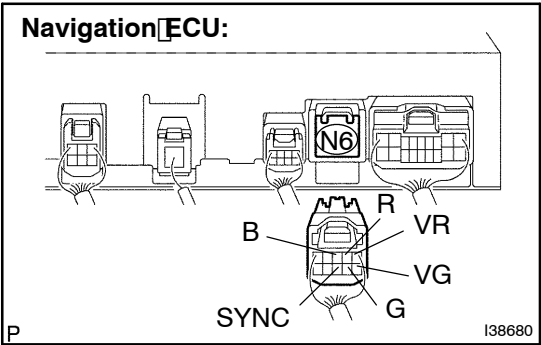

- (a) Disconnect the connector from navigation ECU N6 and television camera ECU T24.
- (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
R - R1	Always	Below 1 Ω
G - G1	Always	Below 1 Ω
B - B1	Always	Below 1 Ω
SYNC - SYN1	Always	Below 1 Ω
VR - VR1	Always	Below 1 Ω
VG - VG1	Always	Below 1 Ω
R - Body ground	Always	10 kΩ or higher
G - Body ground	Always	10 kΩ or higher
B - Body ground	Always	10 kΩ or higher
SYNC - Body ground	Always	10 kΩ or higher
VR - Body ground	Always	10 kΩ or higher

NG REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOMS TABLE (SEE PAGE 05-171)