

AVC-LAN CIRCUIT (RADIO RECEIVER ASSY - STEREO COMPONENT TUNER)


CIRCUIT DESCRIPTION

Each unit of the radio receiver assy system connected to AVC-LAN (communication bus) communicates by transferring the signals from each switch.

When +B short and GND short occur in this AVC-LAN, radio receiver assy system will not function normally as communication is discontinued.


In AVC-LAN, radio receiver assy becomes the communication master, and the radio receiver assy has enough resistance necessary for transmitting the communication.

WIRING DIAGRAM

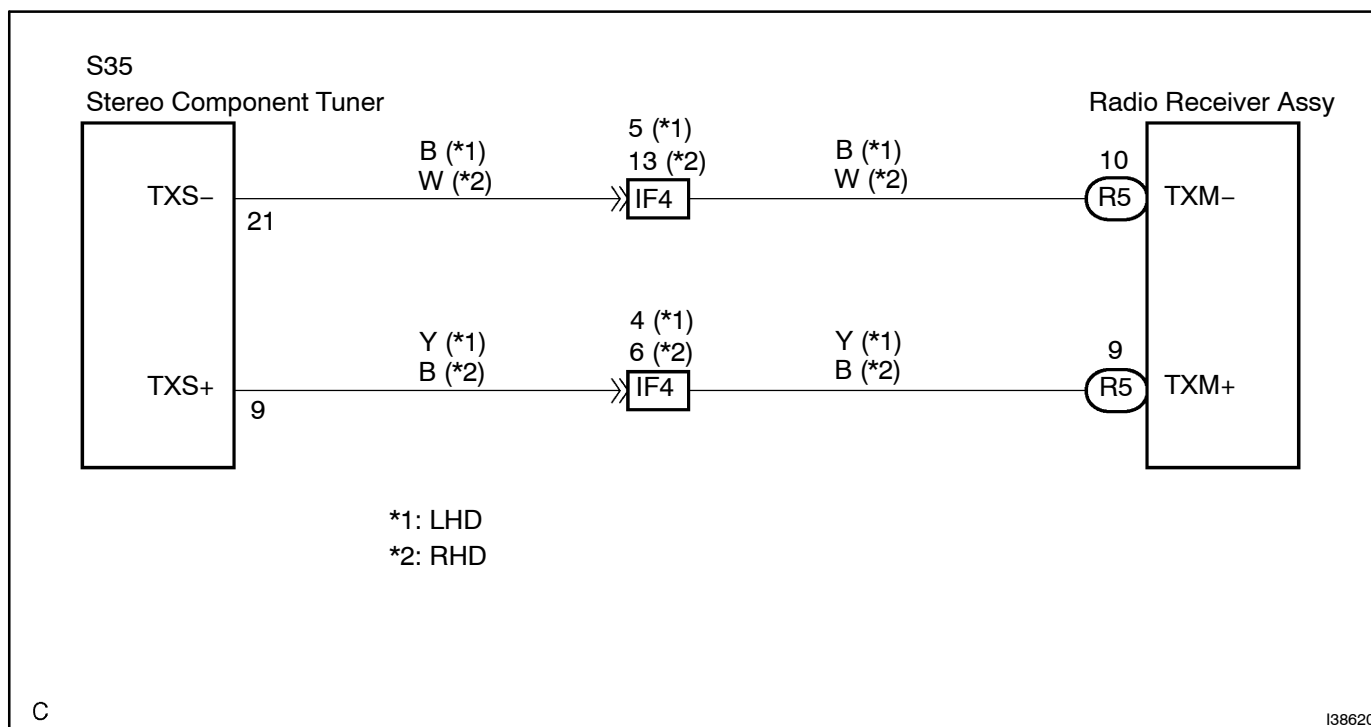

INSPECTION PROCEDURE

1 INSPECT RADIO RECEIVER ASSY

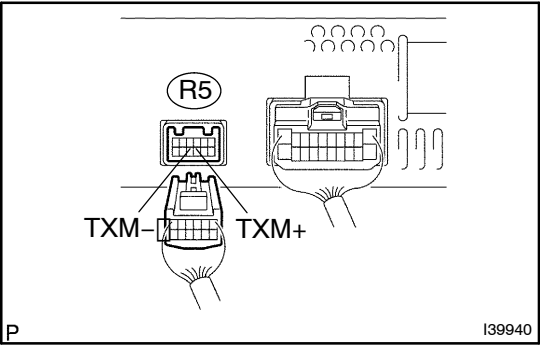

(a) Measure the resistance according to the value(s) in the table below.


Standard:

Tester Connection	Condition	Specified Condition
TXM+ - TXM-	Always	60 to 80 Ω

NG REPLACE RADIO RECEIVER ASSY (SEE PAGE 67-5)

OK

2 CHECK HARNESS AND CONNECTOR (RADIO RECEIVER ASSY - STEREO COMPONENT TUNER)

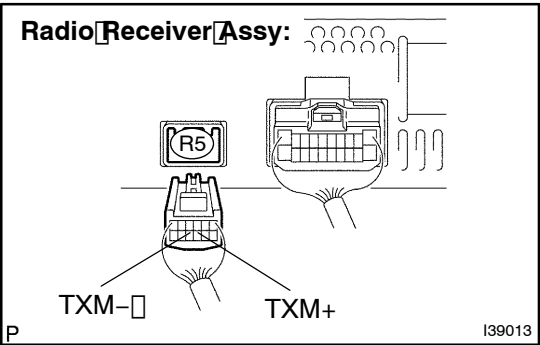


(a) Disconnect the connector from the radio receiver Assy R5 and stereo component tuner S35.

(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester Connection	Condition	Specified Condition
TXM+ - XS+	Always	Below 1 Ω
TXM- - XS-	Always	Below 1 Ω
TXM+ - Body ground	Always	10 k Ω or higher
TXM- - Body ground	Always	10 k Ω or higher

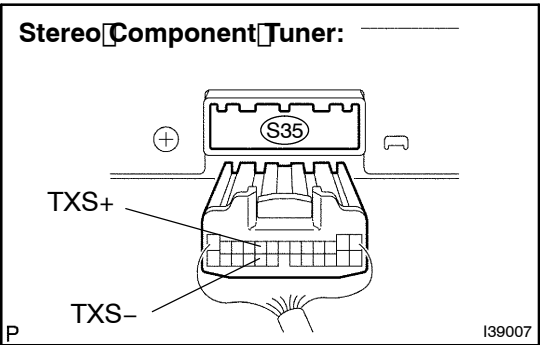

NG REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART (SEE PAGE 05-1673)