

## CHECK CAN BUS LINES FOR SHORT CIRCUIT (LHD, w/ LEXUS Navigation System)


### CIRCUIT DESCRIPTION

There may be a short circuit between the CAN bus lines when the resistance between terminals 6 (CANH) and 14 (CANL) of the DLC3 is below 54  $\Omega$ .

Symptom	Trouble Area
Resistance between terminals 6 (CANH) and 14 (CANL) of the DLC 3 is below 54 $\Omega$ .	<ul style="list-style-type: none"><li>• Short between CAN bus lines</li><li>• Television camera ECU</li><li>• Skid control ECU with actuator</li><li>• Steering sensor</li><li>• Yaw rate sensor</li><li>• Suspension control ECU</li><li>• ECM</li><li>• Gateway ECU</li><li>• Junction connector (LUG-CAN J/C)</li><li>• Junction connector ( P-CAN J/C)</li><li>• Junction connector ( D-CAN J/C)</li></ul>

## WIRING DIAGRAM


## LHD:

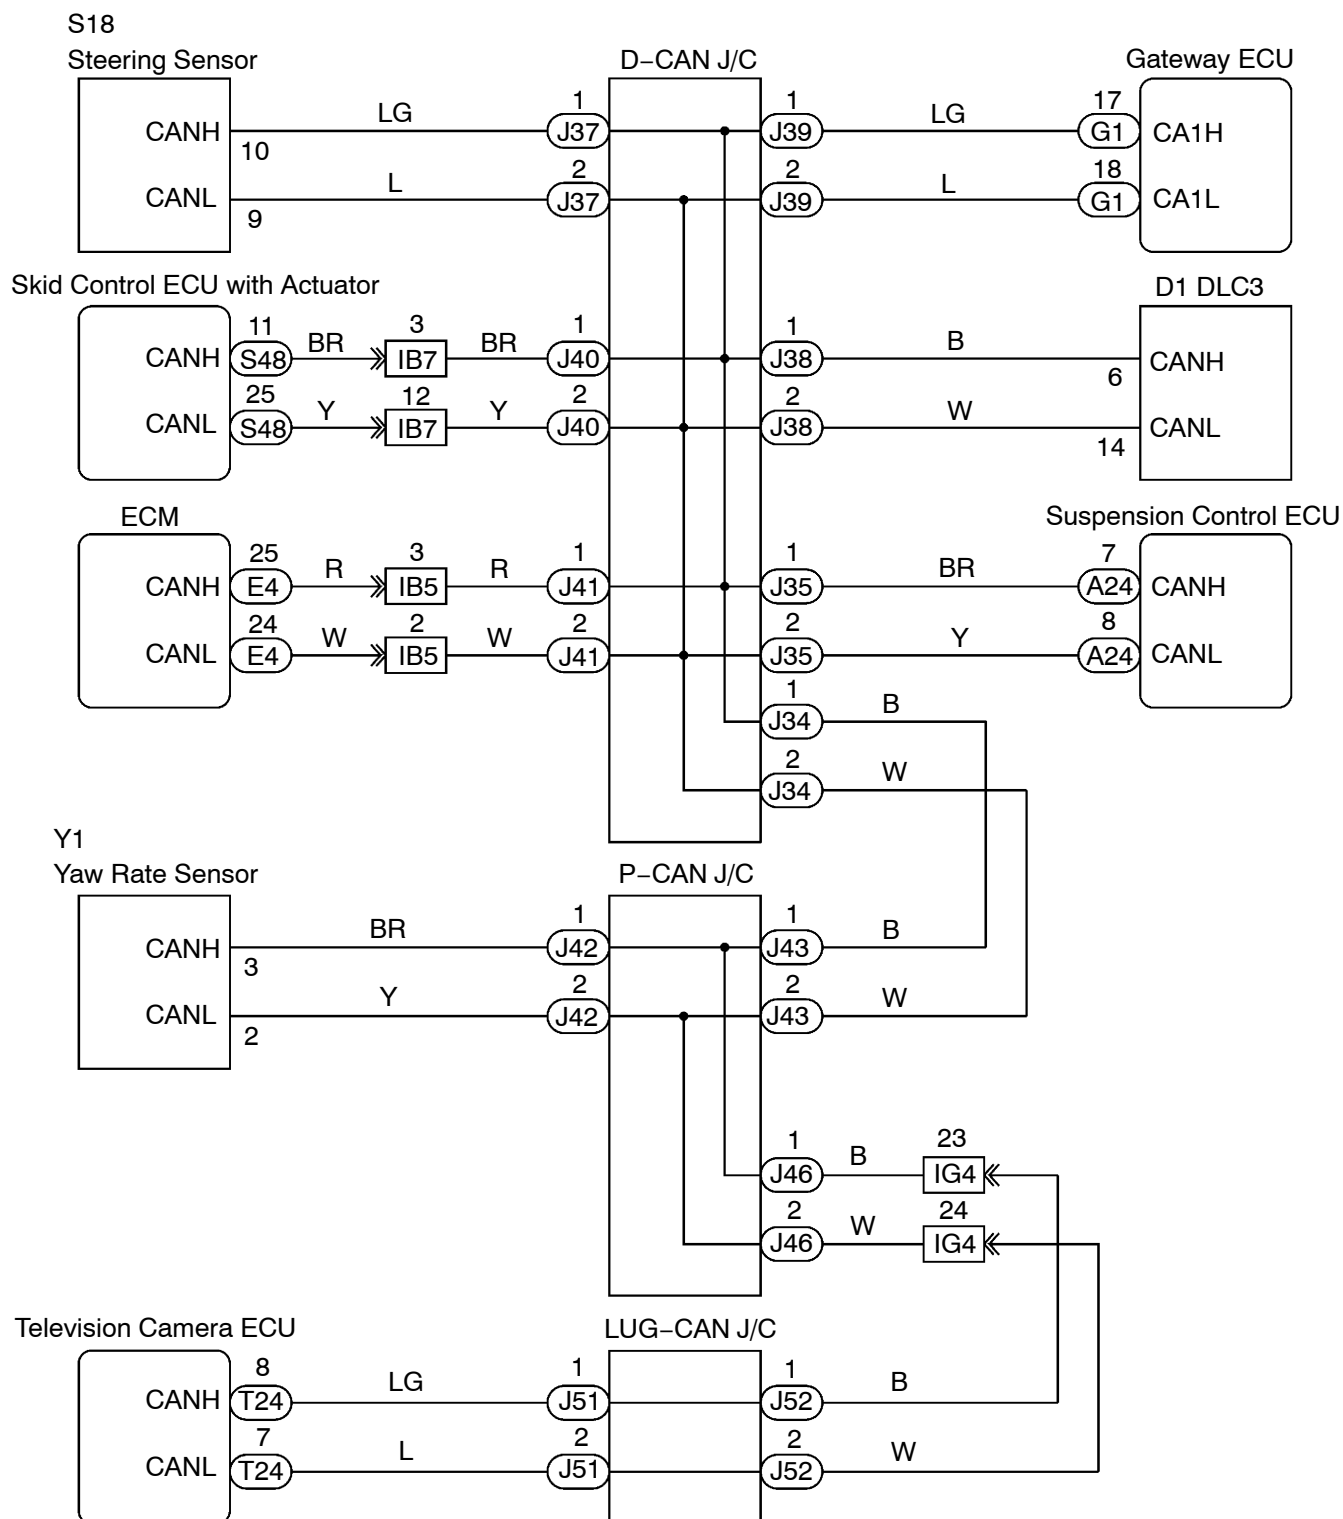

## INSPECTION PROCEDURE

### 1 CHECK CAN BUS LINES FOR SHORT CIRCUIT(DLC3 SUB BUS LINE)

#### D-CAN J/C B Side (w/o Earth Terminal) Wire Harness View:

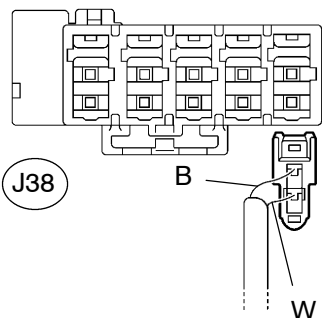


- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the DLC3 sub bus line connector (J38) from the D-CAN J/C B side (w/o earth terminal).

#### NOTICE:

- Before disconnecting the connector, make a note of where it is connected.
- Reconnect the connector to its original position.

#### DLC3:

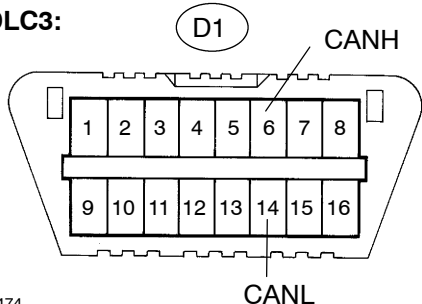

- (c) Measure the resistance according to the value(s) in the table below.

#### Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) - D1-14 (CANL)	Ignition Switch OFF	1 MΩ or more

NG

**REPAIR OR REPLACE DLC3 SUB BUS LINE OR CONNECTOR (CAN-H, CAN-L)**


OK

### 2 CONNECT CONNECTOR

- (a) Reconnect the DLC3 sub bus line connector (J38) to the D-CAN J/C B side (w/o earth terminal).

3 CHECK CAN BUS LINES FOR SHORT CIRCUIT(CAN BUSES TO P-CAN J/C)

P-CAN J/C A Side (w/ Earth Terminal)  
Wire Harness View:

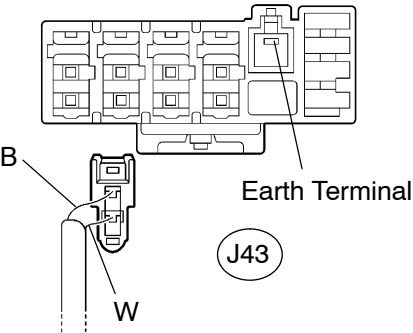

G25695


G31933

- (a) Disconnect the CAN main bus line connector (J43) from the P-CAN J/C A side (w/ earth terminal).

**NOTICE:**

- Before disconnecting the connector, make a note of where it is connected.
- Reconnect the connector to its original position.

**DLC3:**

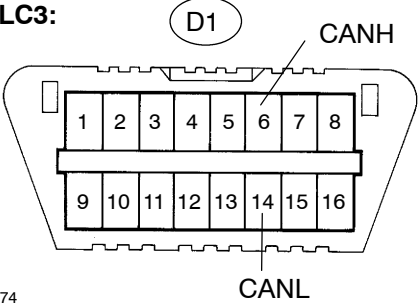

G25474  
C81825

G26206

- (b) Measure the resistance according to the value(s) in the table below.

**Standard:**

Tester connection	Condition	Specified value
D1-6 (CANH) - D1-14 (CANL)	Ignition Switch OFF	108 to 132 Ω

OK

Go to step 26

NG


4 CONNECT CONNECTOR

- (a) Reconnect the CAN main bus line connector (J43) to the P-CAN J/C A side (w/ earth terminal).



## 5 CHECK CAN BUS LINES FOR SHORT CIRCUIT(SUSPENSION CONTROL ECU SUB BUS LINE)

### D-CAN J/C A Side (w/ Earth Terminal) Wire Harness View:

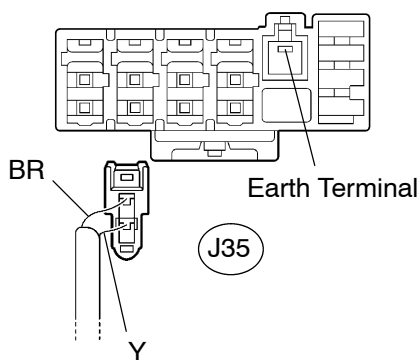

#### NOTICE:


For vehicles without electronic modulated air suspension, go to step 7.

- (a) Disconnect the suspension control ECU sub bus line connector (J35) from the D-CAN J/C A side (w/ earth terminal).

#### NOTICE:

- Before disconnecting the connector, make a note of where it is connected.
- Reconnect the connector to its original position.

### DLC3:

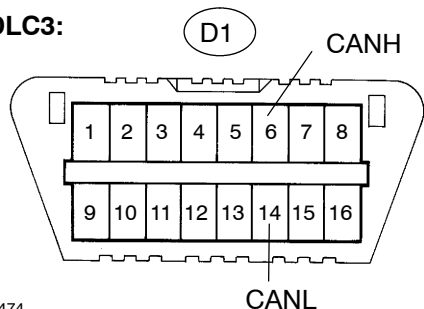

- (b) Measure the resistance according to the value(s) in the table below.

#### Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) – D1-14 (CANL)	Ignition Switch OFF	54 to 69 $\Omega$

OK

Go to step 16


NG

## 6 CONNECT CONNECTOR

- (a) Reconnect the suspension control ECU sub bus line connector (J35) to the D-CAN J/C A side (w/ earth terminal).

**7 CHECK CAN BUS LINES FOR SHORT CIRCUIT(GATEWAY ECU SUB BUS LINE)**

**D-CAN J/C A Side (w/ Earth Terminal)**  
**Wire Harness View:**

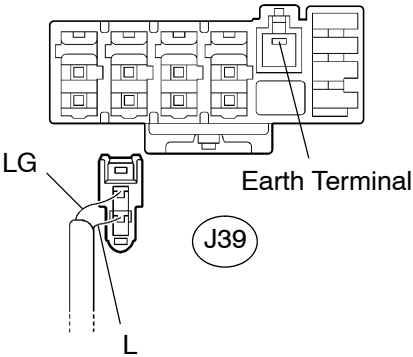

G25695


G31934

- (a) Disconnect the gateway ECU sub bus line connector (J39) from the D-CAN J/C A side (w/ earth terminal).

**NOTICE:**

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

**DLC3:**

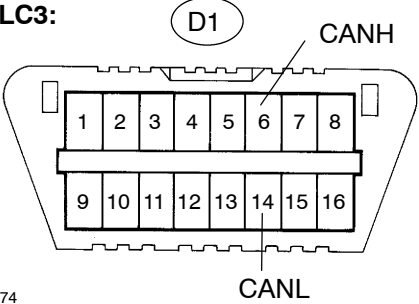

G25474  
C81825

G26206

- (b) Measure the resistance according to the value(s) in the table below.

**Standard:**

Tester connection	Condition	Specified value
D1-6 (CANH) - D1-14 (CANL)	Ignition Switch OFF	54 to 69 $\Omega$

**OK**

**Go to step 18**


**NG**

**8 CONNECT CONNECTOR**

- (a) Reconnect the gateway ECU sub bus line connector (J39) to the D-CAN J/C A side (w/ earth terminal).

9


CHECK CAN BUS LINES FOR SHORT CIRCUIT(ECM SUB BUS LINE)

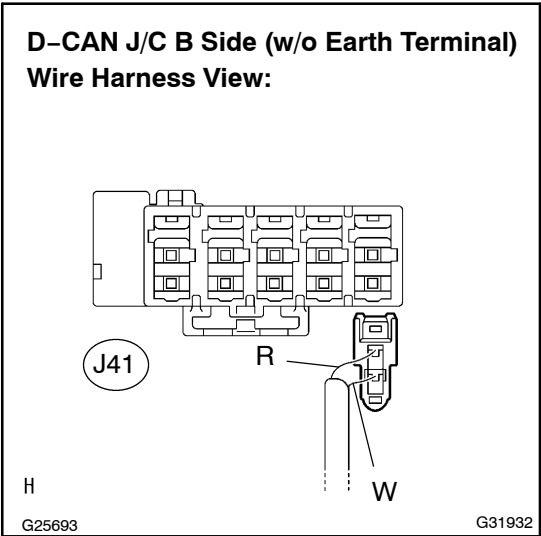

- (a) Disconnect the ECM sub bus line connector (J41) from the D-CAN J/C B side (w/o earth terminal).

**NOTICE:**

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

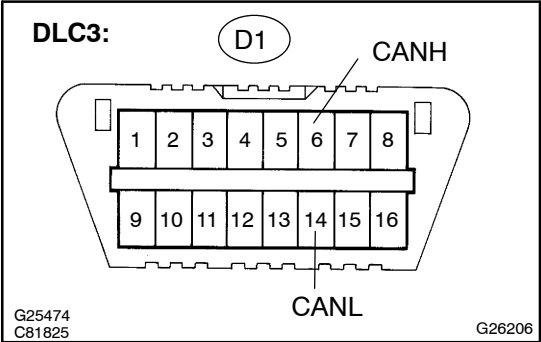

- (b) Measure the resistance according to the value(s) in the table below.

**Standard:**

Tester connection	Condition	Specified value
D1-6 (CANH) – D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

OK

Go to step 20

NG

10


CONNECT CONNECTOR

- (a) Reconnect the ECM sub bus line connector (J41) to the D-CAN J/C B side (w/o earth terminal).



11


CHECK CAN BUS LINES FOR SHORT CIRCUIT(SKID CONTROL ECU SUB BUS LINE)

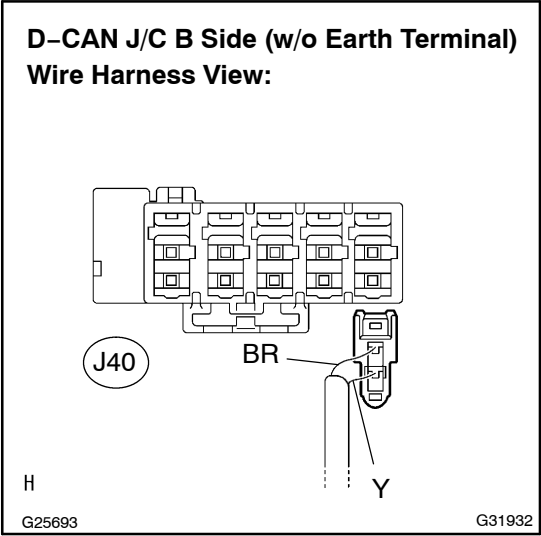

- (a) Disconnect the skid control ECU sub bus line connector (J40) from the D-CAN J/C (w/o earth terminal).

**NOTICE:**

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

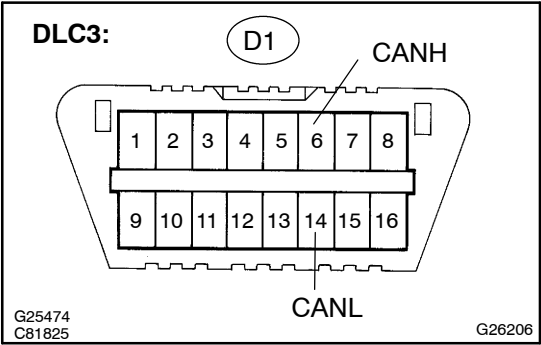

- (b) Measure the resistance according to the value(s) in the table below.

**Standard:**

Tester connection	Condition	Specified value
D1-6 (CANH) - D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

**OK** Go to step 22

**NG**

12

CONNECT CONNECTOR


- (a) Reconnect the skid control ECU sub bus line connector (J40) to the D-CAN J/C B side (w/o earth terminal).





# 13 CHECK CAN BUS LINES FOR SHORT CIRCUIT(STEERING SENSOR SUB BUS LINE)

**D-CAN J/C B Side (w/o Earth Terminal)  
Wire Harness View:**

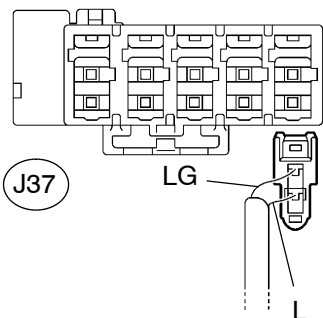

G25693


G31932

- (a) Disconnect the steering sensor sub bus line connector (J37) from the D-CAN J/C B side (w/o earth terminal).

## NOTICE:

- Before disconnecting the connector, make a note of where it is connected.
- Reconnect the connector to its original position.

**DLC3:**

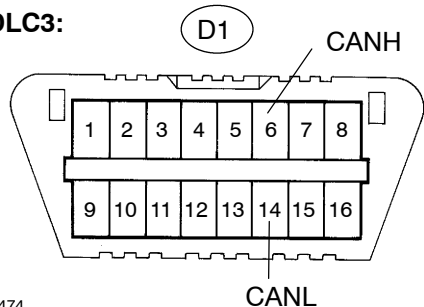G25474  
C81825

G26206

- (b) Measure the resistance according to the value(s) in the table below.

## Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) - D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

OK

Go to step 24


NG

# 14 CONNECT CONNECTOR

- (a) Reconnect the steering sensor sub bus line connector (J37) to the D-CAN J/C B side (w/o earth terminal).




15 CHECK CAN BUS LINES FOR SHORT CIRCUIT(D-CAN J/C)

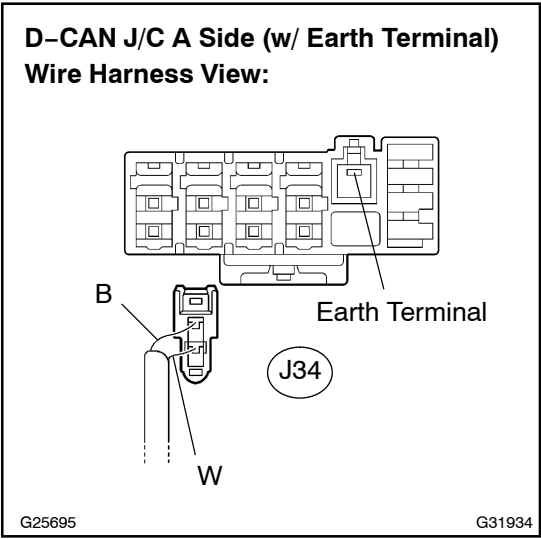

- (a) Disconnect the CAN main bus line connector (J34) from the D-CAN J/C A side (w/ earth terminal).

**NOTICE:**

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

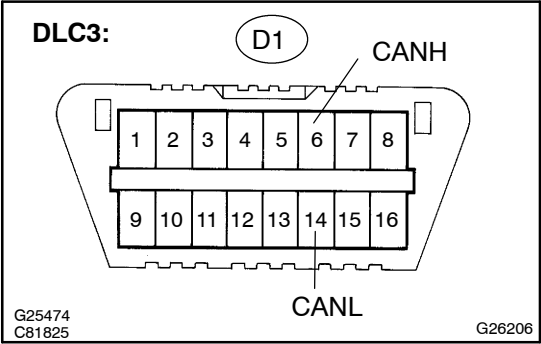

- (b) Measure the resistance according to the value(s) in the table below.

**Standard:**

Tester connection	Condition	Specified value
D1-6 (CANH) - D1-14 (CANL)	Ignition Switch OFF	108 to 132 Ω

NG


**REPLACE JUNCTION CONNECTOR (D-CAN J/C)**

OK

**REPAIR OR REPLACE CAN MAIN BUS LINE OR CONNECTOR (D-CAN J/C - P-CAN J/C)**

**16 CONNECT CONNECTOR**

- (a) Reconnect the suspension control ECU sub bus line connector (J35) to the D-CAN J/C A side (w/ earth terminal).

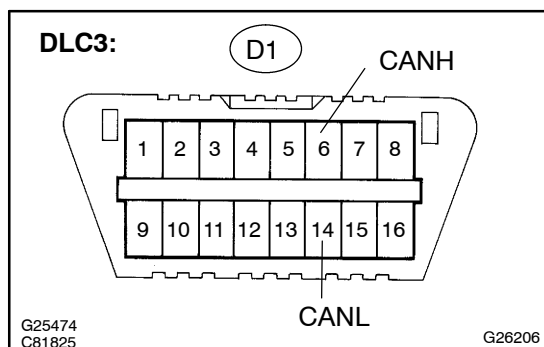**17 CHECK CAN BUS LINES FOR SHORT CIRCUIT(SUSPENSION CONTROL ECU SUB BUS LINE)**


- (a) Disconnect the suspension control ECU connector (A24).  
 (b) Measure the resistance according to the value(s) in the table below.

**Standard:**

Tester connection	Condition	Specified value
D1-6 (CANH) – D1-14 (CANL)	Ignition Switch OFF	54 to 69 $\Omega$

**OK****REPLACE SUSPENSION CONTROL ECU  
(SEE PAGE 25-20)****NG****REPAIR OR REPLACE SUSPENSION CONTROL ECU SUB BUS LINE OR CONNECTOR (CAN-H, CAN-L)****18 CONNECT CONNECTOR**

- (a) Reconnect the gateway ECU sub bus line connector (J39) to the D-CAN J/C (w/ earth terminal).

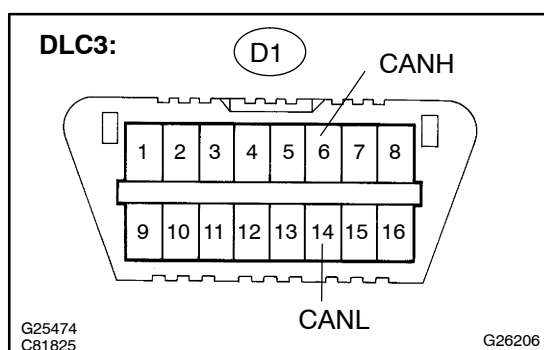**19 CHECK CAN BUS LINES FOR SHORT CIRCUIT(GATEWAY ECU SUB BUS LINE)**

- (a) Disconnect the gateway ECU connector (G1).  
 (b) Measure the resistance according to the value(s) in the table below.


**Standard:**

Tester connection	Condition	Specified value
D1-6 (CANH) – D1-14 (CANL)	Ignition Switch OFF	54 to 69 $\Omega$

**OK****REPLACE GATEWAY ECU****NG****REPAIR OR REPLACE GATEWAY ECU SUB BUS LINE OR CONNECTOR (CAN-H, CAN-L)**

**20 CONNECT CONNECTOR**

- (a) Reconnect the ECM sub bus line connector (J41) to the D-CAN J/CB side (w/o earth terminal).

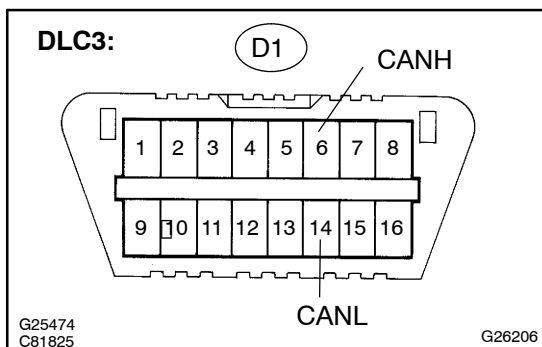**21 CHECK CAN BUS LINES FOR SHORT CIRCUIT (ECM SUB BUS LINE)**


- (a) Disconnect the ECM connector (E4).  
 (b) Measure the resistance according to the value(s) in the table below.

**Standard:**

Tester Connection	Condition	Specified Value
D1-6 (CANH) – D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

**REPLACE ECM (SEE PAGE 10-21)****NG****REPAIR OR REPLACE ECM SUB BUS LINE OR CONNECTOR (CAN-H, CAN-L)****22 CONNECT CONNECTOR**

- (a) Reconnect the Skid control ECU sub bus line connector (J40) to the D-CAN J/CB side (w/o earth terminal).

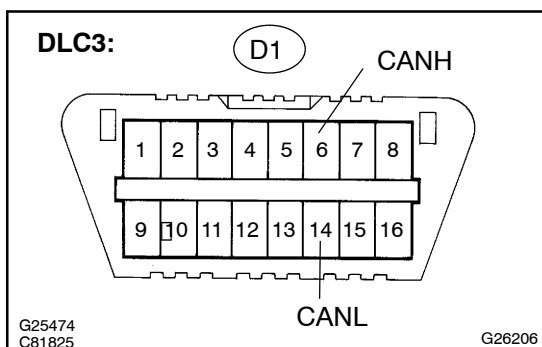**23 CHECK CAN BUS LINES FOR SHORT CIRCUIT (SKID CONTROL ECU SUB BUS LINE)**

- (a) Disconnect the Skid control ECU connector (S48).  
 (b) Measure the resistance according to the value(s) in the table below.

**Standard:**

Tester Connection	Condition	Specified Value
D1-6 (CANH) – D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

**REPLACE SKID CONTROL ECU WITH ACTUATOR (SEE PAGE 32-53)****NG****REPAIR OR REPLACE SKID CONTROL ECU SUB BUS LINE OR CONNECTOR (CAN-H, CAN-L)**

24


CONNECT CONNECTOR

(a) Reconnect the steering sensor sub bus line connector (J37) to the D-CAN/CB side (w/o earth terminal).



25

CHECK CAN BUS LINES FOR SHORT CIRCUIT (STEERING SENSOR SUB BUS LINE)

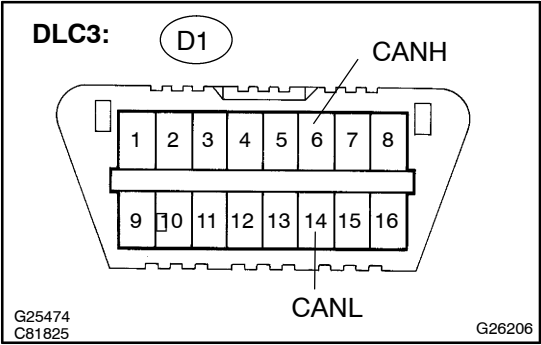

- (a) Disconnect the steering sensor connector (S18).  
(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) – D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

OK

REPLACE STEERING SENSOR  
(SEE PAGE 32-65)



REPAIR OR REPLACE STEERING SENSOR SUB BUS LINE OR CONNECTOR (CAN-H, CAN-L)

26


CONNECT CONNECTOR

- (a) Reconnect the CAN main bus line connector (J43) to the P-CAN J/C A side (w/ earth terminal).



27


CHECK CAN BUS LINES FOR SHORT CIRCUIT(LUG-CAN J/C)

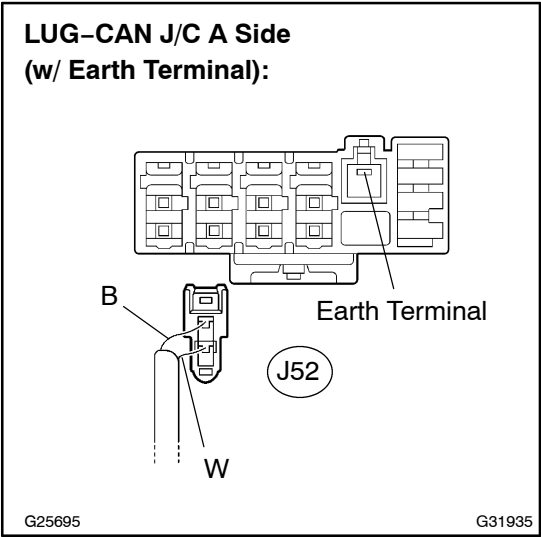

- (a) Disconnect the CAN main bus line connector (J52) from the LUG-CAN J/C A side (w/ earth terminal).

**NOTICE:**

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

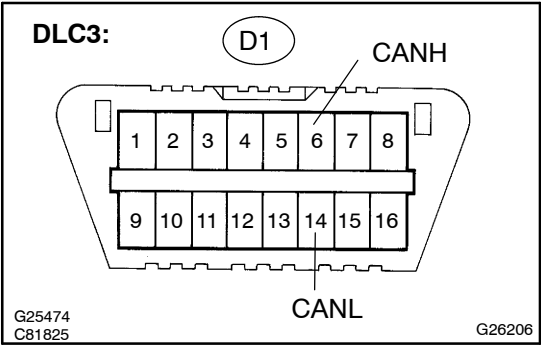

- (b) Measure the resistance according to the value(s) in the table below.

**Standard:**

Tester connection	Condition	Specified value
D1-6 (CANH) - D1-14 (CANL)	Ignition Switch OFF	108 to 132 Ω

OK

Go to step 34

NG

28


CONNECT CONNECTOR

- (a) Reconnect the CAN main bus line connector (J52) to the LUG-CAN J/C A side (w/ earth terminal).



## 29 CHECK CAN BUS LINES FOR SHORT CIRCUIT(YAW RATE SENSOR SUB BUS LINE)

**P-CAN J/C A Side (w/ Earth Terminal)  
Wire Harness View:**

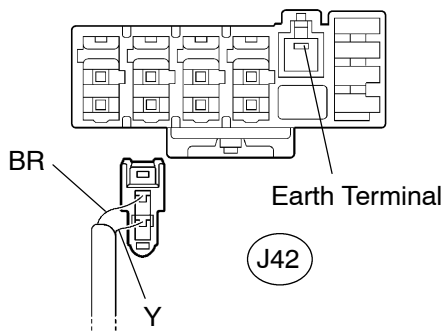

G25695


G31933

- (a) Disconnect the yaw rate sensor sub bus line connector (J42) from the P-CAN J/C A side (w/ earth terminal).

**NOTICE:**

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

**DLC3:**

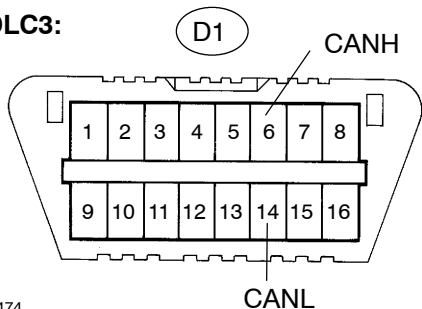G25474  
C81825

G26206

- (b) Measure the resistance according to the value(s) in the table below.

**Standard:**

Tester connection	Condition	Specified value
D1-6 (CANH) - D1-14 (CANL)	Ignition Switch OFF	54 to 69 $\Omega$

**OK**

**Go to step 32**


**NG**

## 30 CONNECT CONNECTOR

- (a) Reconnect the yaw rate sensor sub bus line connector (J42) to the P-CAN J/C A side (w/ earth terminal).




31 CHECK CAN BUS LINES FOR SHORT CIRCUIT(P-CAN J/C- LUG-CAN J/C)

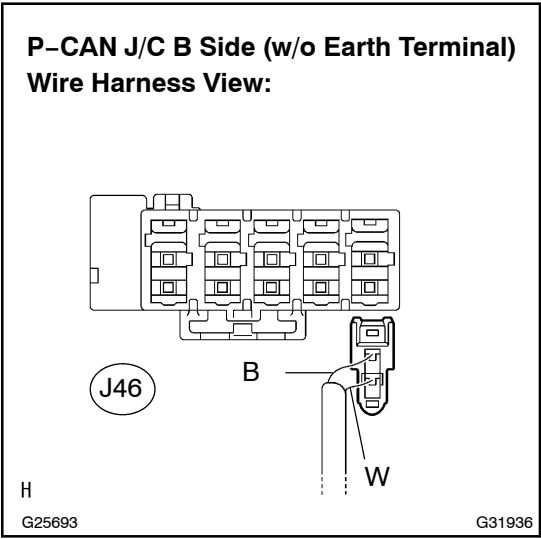

- (a) Disconnect the CAN main bus line connector (J46) from the P-CAN J/C B side (w/o earth terminal).

**NOTICE:**

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

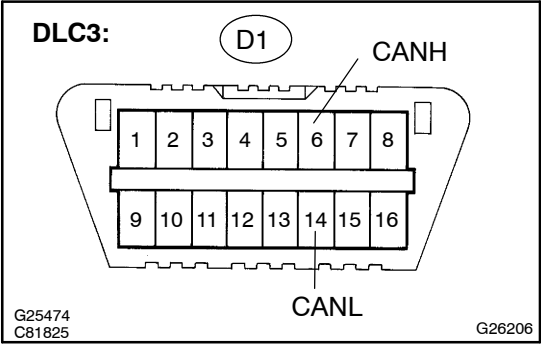

- (b) Measure the resistance according to the value(s) in the table below.

**Standard:**

Tester connection	Condition	Specified value
D1-6 (CANH) - D1-14 (CANL)	Ignition Switch OFF	108 to 132 Ω

**OK** **REPAIR OR REPLACE CAN MAIN BUS LINE OR CONNECTOR (P-CAN J/C - LUG-CAN J/C)**

**NG**

**REPLACE JUNCTION CONNECTOR (P-CAN J/C)**



32


CONNECT CONNECTOR

- (a) Reconnect the yaw rate sensor sub bus line connector (J42) to the P-CAN/CAN side (w/earth terminal).



33

CHECK CAN BUS LINES FOR SHORT CIRCUIT (YAW RATE SENSOR SUB BUS LINE)

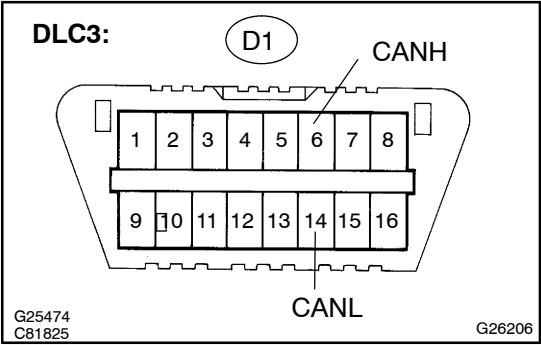

- (a) Disconnect the yaw rate sensor connector (Y1).  
(b) Measure the resistance according to the value(s) in the table below.

**Standard:**

Tester connection	Condition	Specified value
D1-6 (CANH) – D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

OK

REPLACE YAW RATE SENSOR  
(SEE PAGE 32-63)

NG

REPAIR OR REPLACE YAW RATE SENSOR SUB BUS LINE OR CONNECTOR (CAN-H, CAN-L)

34


CONNECT CONNECTOR

- (a) Reconnect the CAN main bus line connector (J52) to the LUG-CAN J/C A side (w/ earth terminal).




35

CHECK CAN BUS LINES FOR SHORT CIRCUIT(TELEVISION CAMERA ECU SUB BUS LINE)

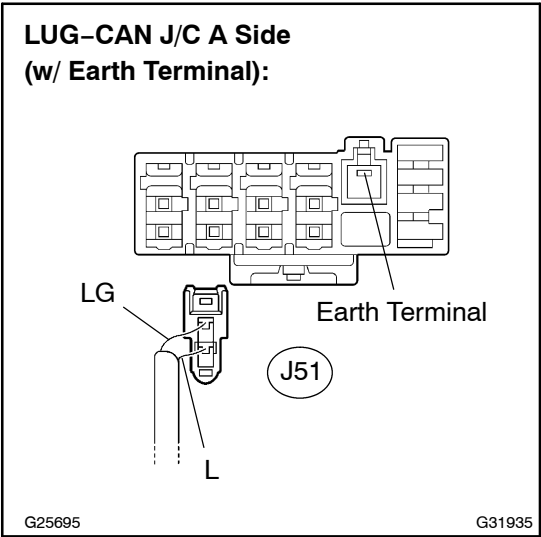

- (a) Disconnect the television camera ECU sub bus line connector (J51) from the LUG-CAN J/C A side (w/ earth terminal).

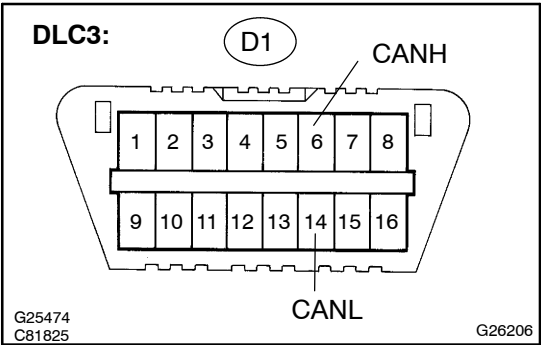

- (b) Measure the resistance according to the value(s) in the table below.

**Standard:**

Tester connection	Condition	Specified value
D1-6 (CANH) – D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

NG

REPLACE JUNCTION CONNECTOR  
(LUG-CAN J/C)

OK

36


CONNECT CONNECTOR

- (a) Reconnect the television camera ECU sub bus line connector (J51) to the LUG-CAN J/C A side (w/ earth terminal).



37

CHECK CAN BUS LINES FOR SHORT CIRCUIT (TELEVISION CAMERA ECU SUB BUS LINE)

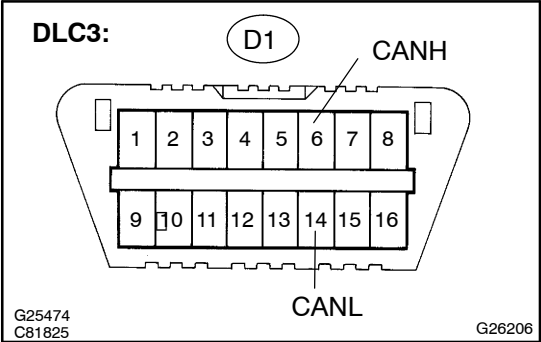

- (a) Disconnect the television camera ECU connector (T24).
- (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) – D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

OK

REPLACE TELEVISION CAMERA ECU (SEE PAGE 67-15)

NG

REPAIR OR REPLACE TELEVISION CAMERA ECU SUB BUS LINE OR CONNECTOR