


CHECK CAN BUS LINES FOR SHORT CIRCUIT (RHD, w/ LEXUS Navigation System)

CIRCUIT DESCRIPTION

There may be a short circuit between the CAN bus lines when the resistance between terminals 6 (CANH) and 14 (CANL) of the DLC3 is below 54 Ω.


Symptom	Trouble Area
Resistance between terminals 6 (CANH) and 14 (CANL) of the DLC 3 is below 54 Ω.	<ul style="list-style-type: none">• Short between CAN bus lines• Cruise control ECU• Television camera ECU• Skid control ECU with actuator• Steering sensor• Yaw rate sensor• Suspension control ECU• ECM• Gateway ECU• Junction connector (LUG-CAN J/C)• Junction connector (P-CAN J/C)• Junction connector (D-CAN J/C)

WIRING DIAGRAM

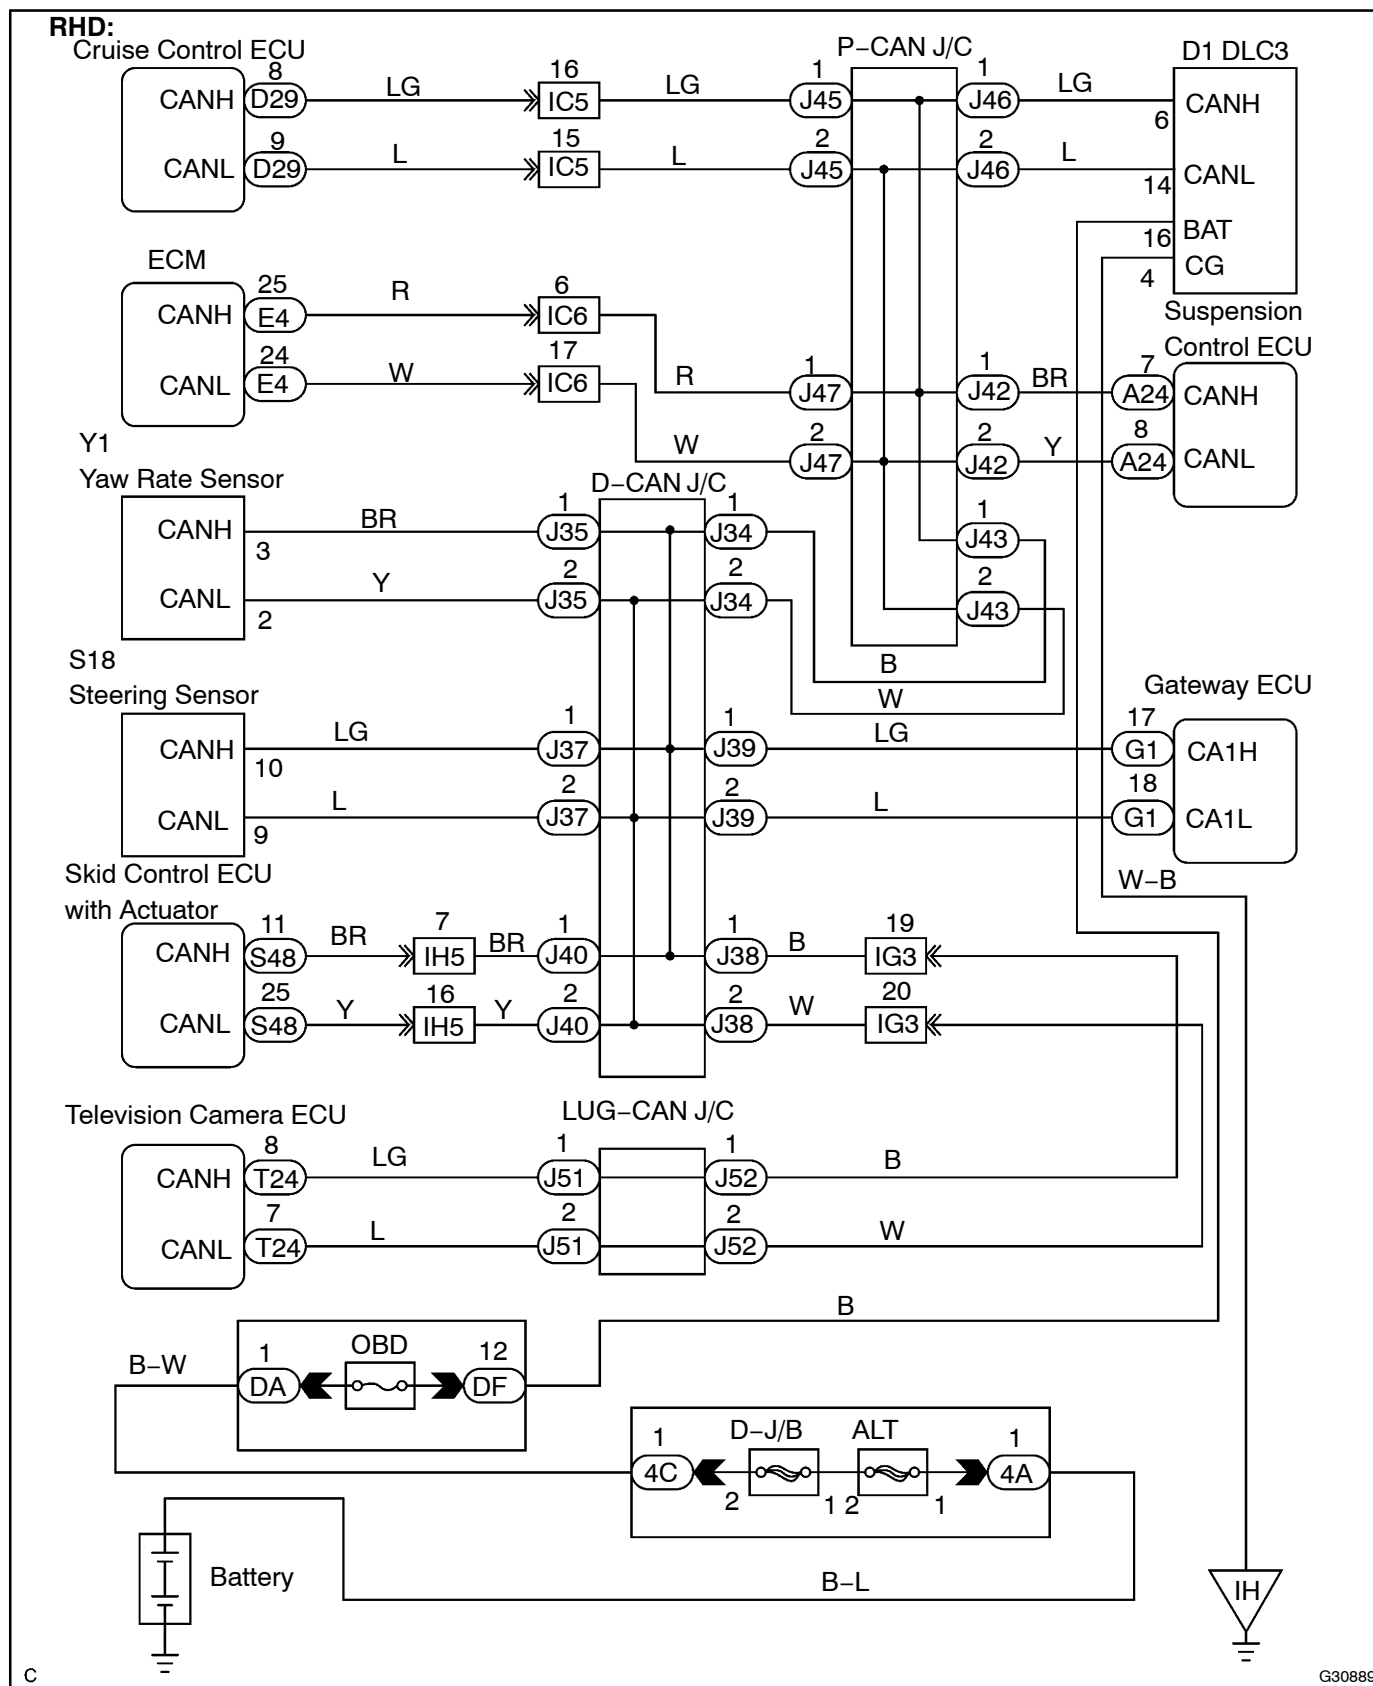

INSPECTION PROCEDURE

1 CHECK CAN BUS LINES FOR SHORT CIRCUIT(DLC3 SUB BUS LINE)

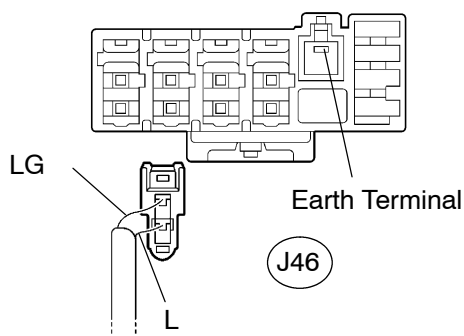P-CAN J/C A Side (w/ Earth Terminal)
Wire Harness View:


G25695

G31933

- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the DLC3 sub bus line connector (J46) from the P-CAN J/C A side (w/ earth terminal).

NOTICE:

- Before disconnecting the connector, make a note of where it is connected.
- Reconnect the connector to its original position.

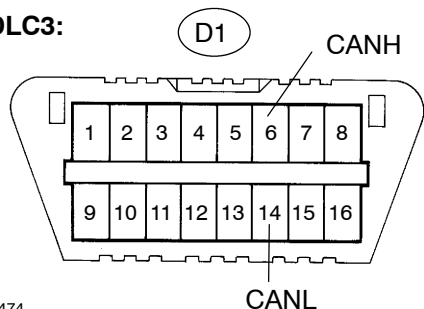DLC3:G25474
C81825

G26206

- (c) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) - D1-14 (CANL)	Ignition Switch OFF	1 MΩ or more


NG**REPAIR OR REPLACE DLC3 SUB BUS LINE OR CONNECTOR (CAN-H, CAN-L)****OK**

2 CONNECT CONNECTOR

- (a) Reconnect the DLC3 sub bus line connector (J46) to the P-CAN J/C A side (w/ earth terminal).

3 CHECK CAN BUS LINES FOR SHORT CIRCUIT(CAN BUSES TO P-CAN J/C)

P-CAN J/C A Side (w/ Earth Terminal)
Wire Harness View:

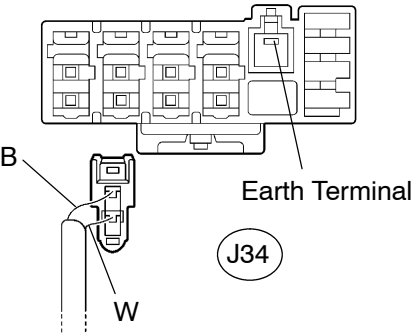

G25695


G31933

- (a) Disconnect the CAN main bus line connector (J34) from the D-CAN J/C A side (w/ earth terminal).

NOTICE:

- Before disconnecting the connector, make a note of where it is connected.
- Reconnect the connector to its original position.

DLC3:

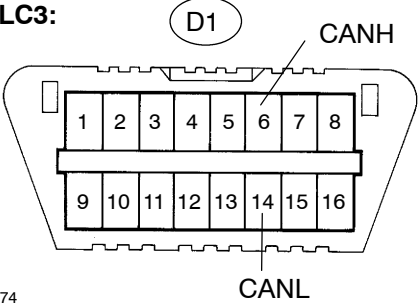

G25474
C81825

G26206

- (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) - D1-14 (CANL)	Ignition Switch OFF	108 to 132 Ω

OK

Go to step 18

NG


4 CONNECT CONNECTOR

- (a) Reconnect the CAN main bus line connector (J34) to the D-CAN J/C A side (w/ earth terminal).



5 CHECK CAN BUS LINES FOR SHORT CIRCUIT(SUSPENSION CONTROL ECU SUB BUS LINE)

P-CAN J/C B Side (w/o Earth Terminal) Wire Harness View:

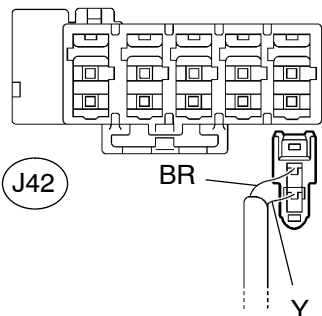

G25693

G31932

NOTICE:


For vehicles without electronic modulated air suspension, go to step 7.

- (a) Disconnect the suspension control ECU sub bus line connector (J42) from the P-CAN J/C B side (w/o earth terminal).

NOTICE:

- Before disconnecting the connector, make a note of where it is connected.
- Reconnect the connector to its original position.

DLC3:

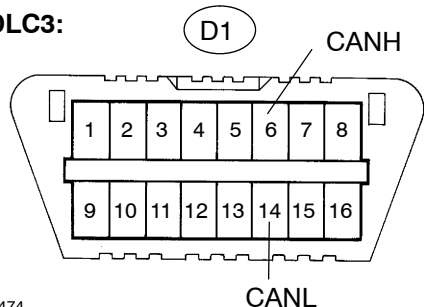G25474
C81825

G26206

- (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) – D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

OK

Go to step 12

NG

6 CONNECT CONNECTOR

- (a) Reconnect the suspension control ECU sub bus line connector (J42) to the P-CAN J/C B side (w/o earth terminal).





7 CHECK CAN BUS LINES FOR SHORT CIRCUIT(CRUISE CONTROL ECU SUB BUS LINE)

NOTICE:
For vehicles without dynamic laser cruise control, go to step 9.

- (a) Disconnect the cruise control ECU sub bus line connector (J45) from the P-CAN J/C B side (w/o earth terminal).

NOTICE:

- Before disconnecting the connector, make a note of where it is connected.
- Reconnect the connector to its original position.

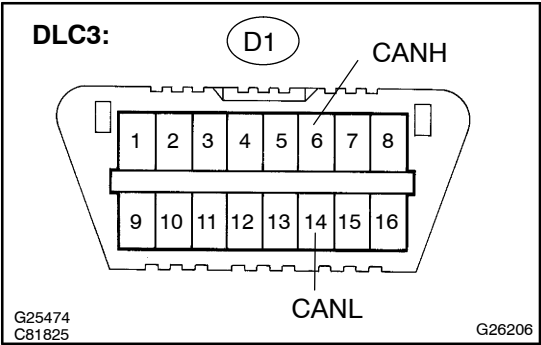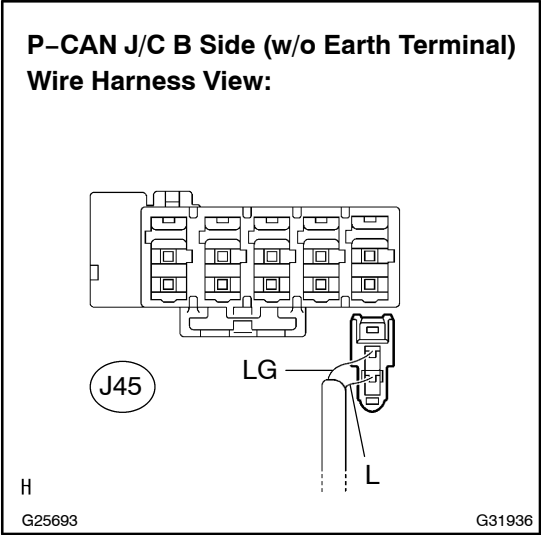

- (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) - D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

OK

Go to step 14

NG


8 CONNECT CONNECTOR

- (a) Reconnect the cruise control ECU sub bus line connector (J45) to the P-CAN J/C B side (w/o earth terminal).



9 CHECK CAN BUS LINES FOR SHORT CIRCUIT(ECM SUB BUS LINE)

P-CAN J/C B Side (w/o Earth Terminal) Wire Harness View:

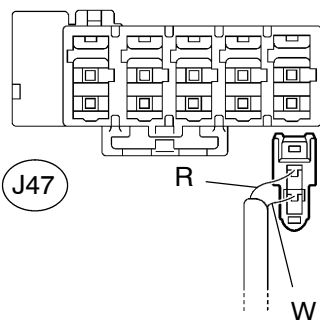

G25693


G31932

- (a) Disconnect the ECM sub bus line connector (J47) from the P-CAN J/C B side (w/o earth terminal).

NOTICE:

- Before disconnecting the connector, make a note of where it is connected.
- Reconnect the connector to its original position.

DLC3:

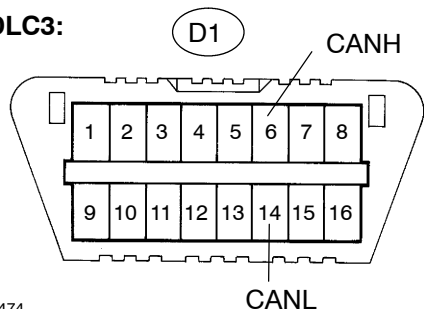G25474
C81825

G26206

- (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) - D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

OK

Go to step 16

NG

10


CONNECT CONNECTOR

- (a) Reconnect the ECM sub bus line connector (J47) to the D-CAN J/C B side (w/o earth terminal).



11


CHECK CAN BUS LINES FOR SHORT CIRCUIT(P-CAN J/C)

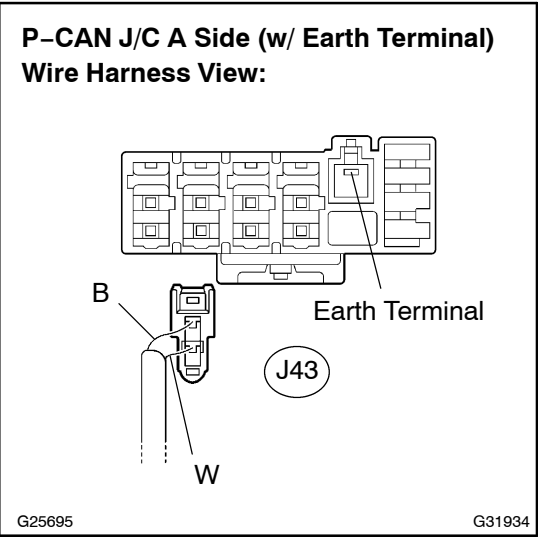

- (a) Disconnect the CAN main bus line connector (J43) from the P-CAN J/C A side (w/ earth terminal).

NOTICE:

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

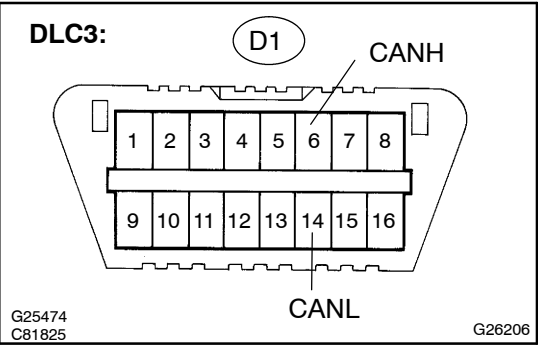

- (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) – D1-14 (CANL)	Ignition Switch OFF	108 to 132 Ω

NG


REPLACE JUNCTION CONNECTOR (P-CAN J/C)



REPAIR OR REPLACE CAN MAIN BUS LINE FOR DISCONNECTION (D-CAN J/C – P-CAN J/C)

12 CONNECT CONNECTOR

- (a) Reconnect the suspension control ECU sub bus line connector (J42) to the P-CAN/J/CB side (w/o earth terminal).

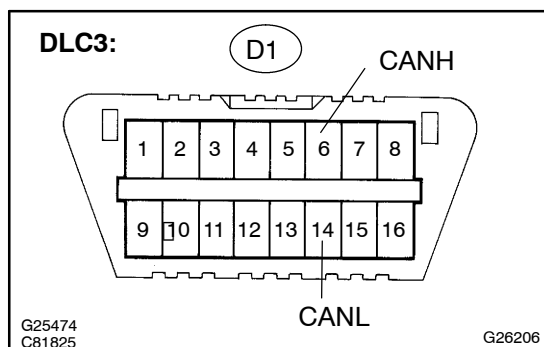**13 CHECK CAN BUS LINES FOR SHORT CIRCUIT (SUSPENSION CONTROL ECU SUB BUS LINE)**

- (a) Disconnect the suspension control ECU connector (J42).
 (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) – D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω


OK

REPLACE SUSPENSION CONTROL ECU (SEE PAGE 25-20)

NG

REPAIR OR REPLACE SUSPENSION CONTROL ECU SUB BUS LINE OR CONNECTOR (CAN-H, CAN-L)**14 CONNECT CONNECTOR**

- (a) Reconnect the cruise control ECU sub bus line connector (J45) to the P-CAN/J/CB side (w/o earth terminal).

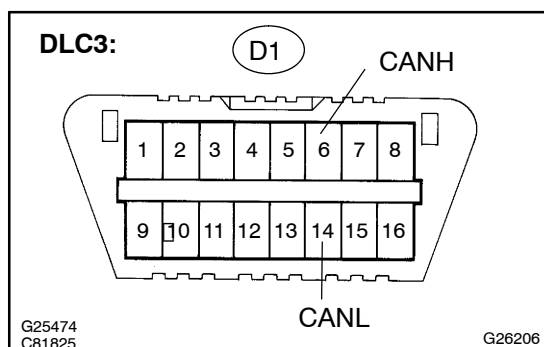**15 CHECK CAN BUS LINES FOR SHORT CIRCUIT (CRUISE CONTROL ECU SUB BUS LINE)**

- (a) Disconnect the cruise control ECU connector (D29).
 (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) – D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

OK

REPLACE CRUISE CONTROL ECU ASSY (SEE PAGE 32-2)

NG


REPAIR OR REPLACE CRUISE CONTROL ECU SUB BUS LINE OR CONNECTOR (CAN-H, CAN-L)

16 CONNECT CONNECTOR

(a) Reconnect the ECM sub bus line connector (J47) to the P-CAN/J/CB side (w/o earth terminal).



17 CHECK CAN BUS LINES FOR SHORT CIRCUIT (ECM SUB BUS LINE)

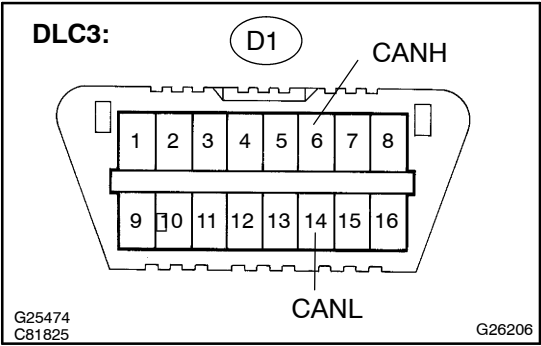

- (a) Disconnect the ECU connector (E4).
(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) – D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

OK → REPLACE ECM (SEE PAGE 10-21)

NG

REPAIR OR REPLACE ECM SUB BUS LINE OR CONNECTOR (CAN-H, CAN-L)


18 CONNECT CONNECTOR

- (a) Reconnect the CAN main bus line connector (J34) to the D-CAN J/C A side (w/ earth terminal).



19 CHECK CAN BUS LINES FOR SHORT CIRCUIT(CAN BUSES TO LUG-CAN J/C)

LUG-CAN J/C A Side (w/ Earth Terminal):

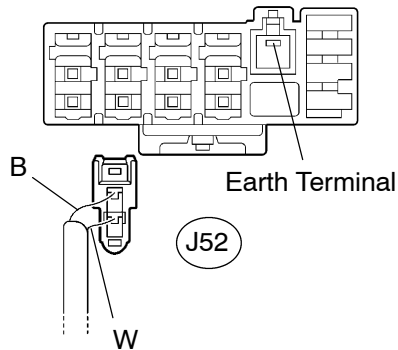

G25695


G31935

- (a) Disconnect the CAN main bus line connector (J52) from the LUG-CAN J/C A side (w/ earth terminal).

NOTICE:

- Before disconnecting the connector, make a note of where it is connected.
- Reconnect the connector to its original position.

DLC3:

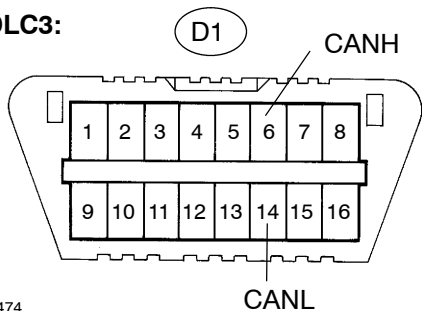G25474
C81825

G26206

- (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) - D1-14 (CANL)	Ignition Switch OFF	108 to 132 Ω

OK

Go to step 38

NG

20


CONNECT CONNECTOR

- (a) Reconnect the CAN main bus line connector (J52) to the LUG-CAN J/C A side (w/ earth terminal).



21


CHECK CAN BUS LINES FOR SHORT CIRCUIT(YAW RATE SENSOR SUB BUS LINE)

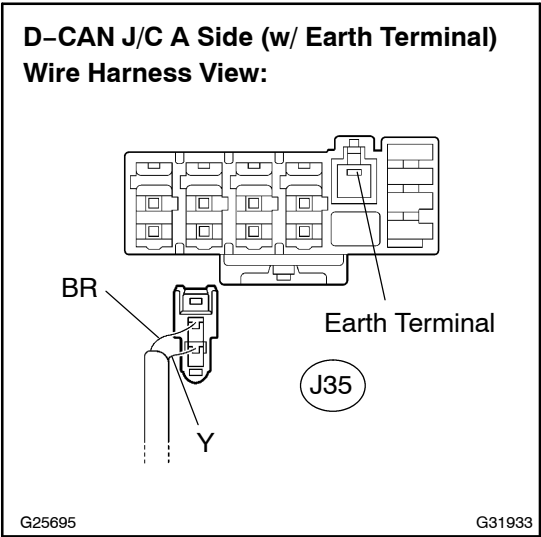

- (a) Disconnect the yaw rate sensor sub bus line connector (J35) from the D-CAN J/C A side (w/ earth terminal).

NOTICE:

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

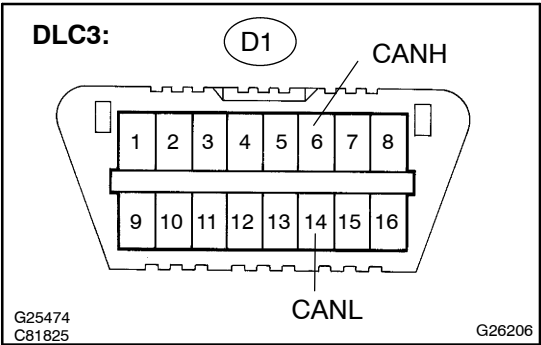

- (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) - D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

OK

Go to step 30

NG

22


CONNECT CONNECTOR

- (a) Reconnect the yaw rate sensor sub bus line connector (J35) to the D-CAN J/C A side (w/ earth terminal).



23 CHECK CAN BUS LINES FOR SHORT CIRCUIT(STEERING SENSOR SUB BUS LINE)

D-CAN J/C A Side (w/ Earth Terminal)
Wire Harness View:

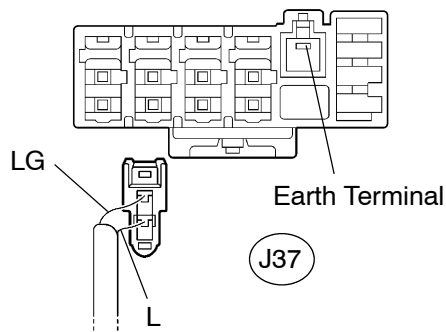

G25695


G31933

- (a) Disconnect the steering sensor sub bus line connector (J37) from the D-CAN J/C A side (w/ earth terminal).

NOTICE:

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

DLC3:

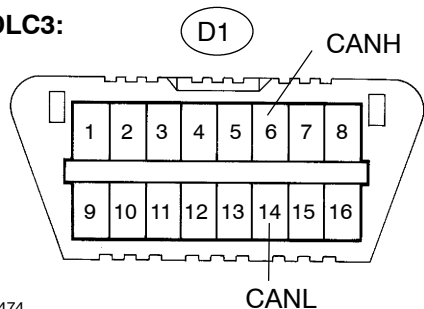G25474
C81825

G26206

- (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) - D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

OK

Go to step 34

NG


24 CONNECT CONNECTOR

- (a) Reconnect the steering sensor sub bus line connector (J37) to the D-CAN J/C A side (w/ earth terminal).



25


CHECK CAN BUS LINES FOR SHORT CIRCUIT(SKID CONTROL ECU SUB BUS LINE)

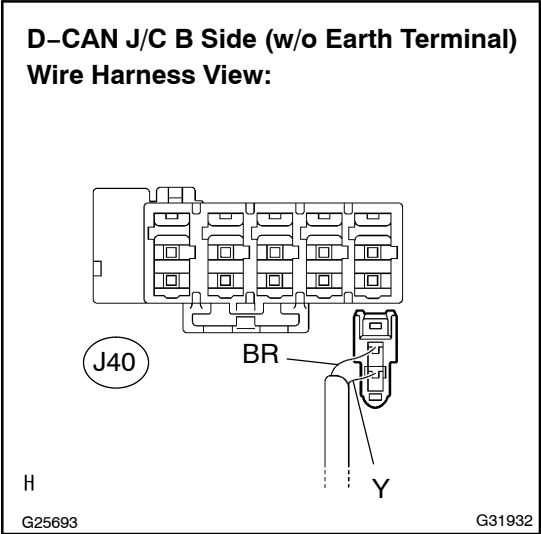

- (a) Disconnect the skid control ECU sub bus line connector (J40) from the D-CAN J/C B side (w/o earth terminal).

NOTICE:

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

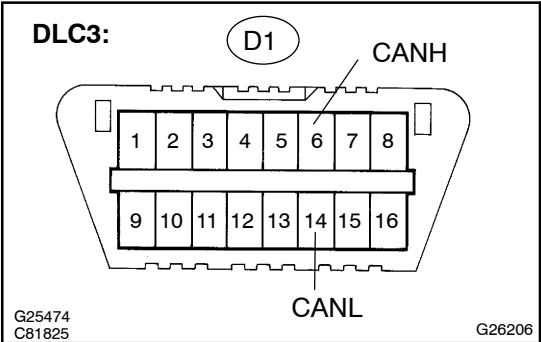

- (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) - D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

OK

Go to step 32

NG

26


CONNECT CONNECTOR

- (a) Reconnect the skid control ECU sub bus line connector (J40) to the D-CAN J/C B side (w/o earth terminal).



27


CHECK CAN BUS LINES FOR SHORT CIRCUIT(GATEWAY ECU SUB BUS LINE)

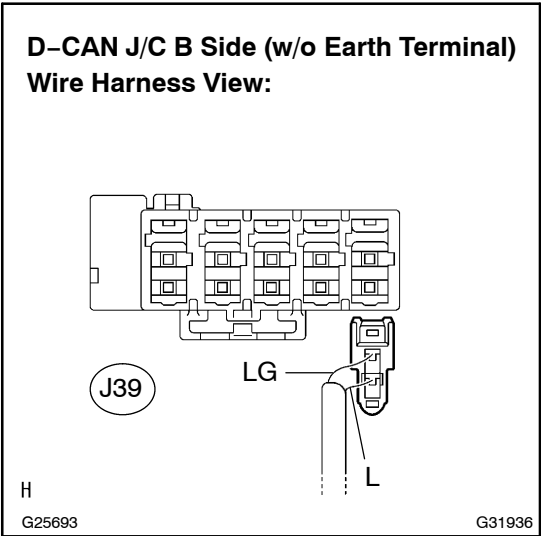

- (a) Disconnect the gateway ECU sub bus line connector (J39) from the D-CAN J/C B side (w/o earth terminal).

NOTICE:

- Before disconnecting the connector, make a note of where it is connected.
- Reconnect the connector to its original position.

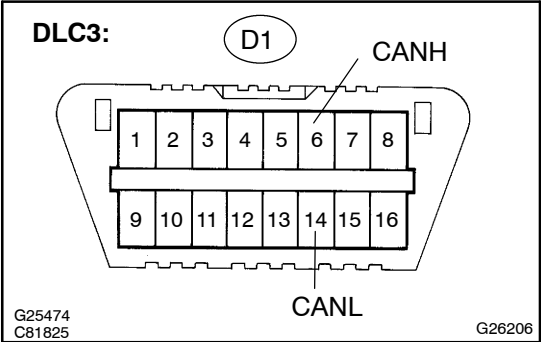

- (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) - D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

OK

Go to step 36

NG

28


CONNECT CONNECTOR

- (a) Reconnect the gateway ECU sub bus line connector (J39) to the D-CAN J/C B side (w/o earth terminal).



29


CHECK CAN BUS LINES FOR SHORT CIRCUIT(D-CAN J/C)

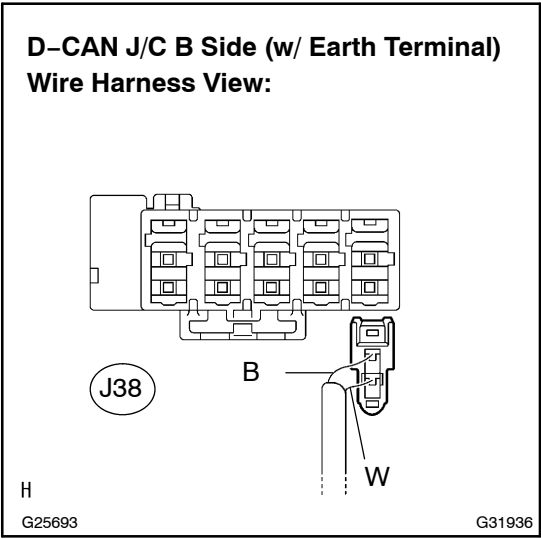

- (a) Disconnect the CAN main bus line connector (J38) from the D-CAN J/C B side (w/ earth terminal).

NOTICE:

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

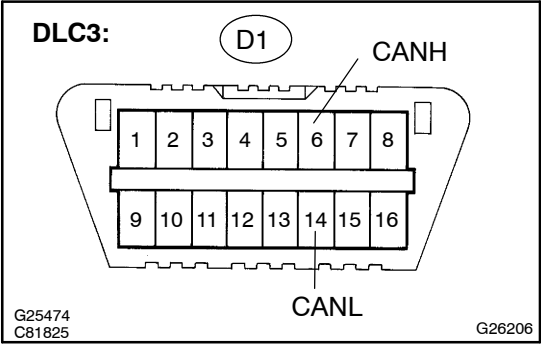

- (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) - D1-14 (CANL)	Ignition Switch OFF	108 to 132 Ω

NG


**REPLACE JUNCTION CONNECTOR
(D-CAN J/C)**

OK

REPAIR OR REPLACE CAN MAIN BUS LINE OR CONNECTOR (D-CAN J/C - LUG-CAN J/C)

30 CONNECT CONNECTOR

- (a) Reconnect the yaw rate sensor sub bus line connector (J35) to the D-CAN/CAN side (w/earth terminal).

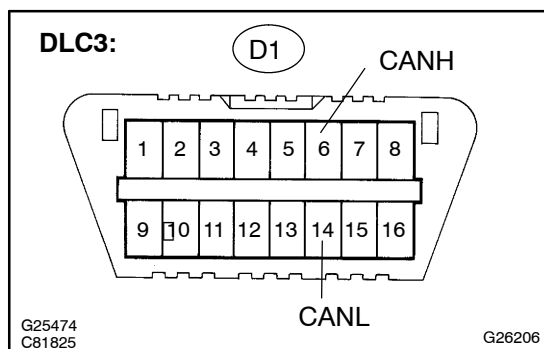**31 CHECK CAN BUS LINES FOR SHORT CIRCUIT (YAW RATE SENSOR SUB BUS LINE)**


- (a) Disconnect the yaw rate sensor connector (Y1).
 (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) – D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

OK**REPLACE YAW RATE SENSOR (SEE PAGE 32-63)****NG****REPAIR OR REPLACE YAW RATE SENSOR SUB BUS LINE OR CONNECTOR (CAN-H, CAN-L)****32 CONNECT CONNECTOR**

- (a) Reconnect the skid control ECU sub bus line connector (J40) to the D-CAN/CAN side (w/earth terminal).

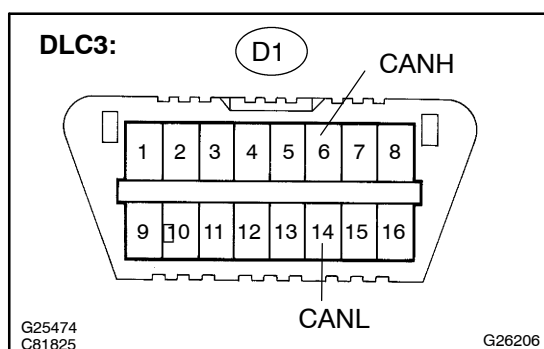**33 CHECK CAN BUS LINES FOR SHORT CIRCUIT (SKID CONTROL ECU SUB BUS LINE)**

- (a) Disconnect the skid control ECU connector (S48).
 (b) Measure the resistance according to the value(s) in the table below.


Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) – D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

OK**REPLACE SKID CONTROL ECU WITH ACTUATOR (SEE PAGE 32-53)****NG****REPAIR OR REPLACE SKID CONTROL ECU SUB BUS LINE OR CONNECTOR (CAN-H, CAN-L)**

34 CONNECT CONNECTOR

- (a) Reconnect the steering sensor sub bus line connector (J37) to the D-CAN J/C A side (w/earth terminal).

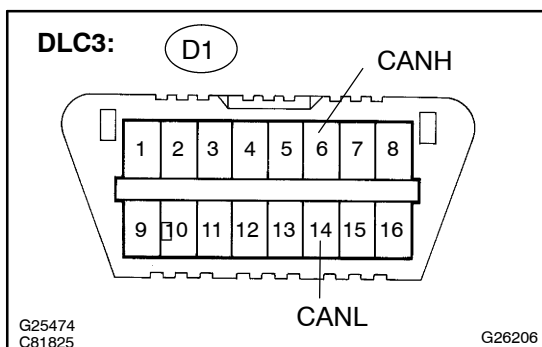**35 CHECK CAN BUS LINES FOR SHORT CIRCUIT (STEERING SENSOR SUB BUS LINE)**


- (a) Disconnect the steering sensor connector (S18).
 (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) – D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

OK**REPLACE STEERING SENSOR (SEE PAGE 32-65)****NG****REPAIR OR REPLACE STEERING SENSOR SUB BUS LINE OR CONNECTOR (CAN-H, CAN-L)****36 CONNECT CONNECTOR**

- (a) Reconnect the gateway ECU sub bus line connector (J39) to the D-CAN J/C B side (w/o earth terminal).

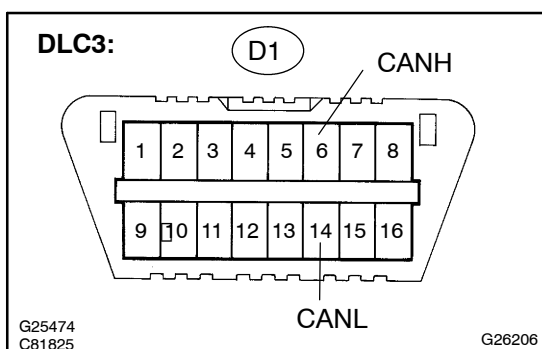**37 CHECK CAN BUS LINES FOR SHORT CIRCUIT (GATEWAY ECU)**

- (a) Disconnect the gateway ECU connector (G1).
 (b) Measure the resistance according to the value(s) in the table below.


Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) – D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

OK**REPLACE GATEWAY ECU****NG****REPAIR OR REPLACE GATEWAY ECU SUB BUS LINE OR CONNECTOR (CAN-H, CAN-L)**

38 CONNECT CONNECTOR


- (a) Reconnect the CAN main bus line connector (J52) to the LUG-CAN J/C A side (w/ earth terminal).

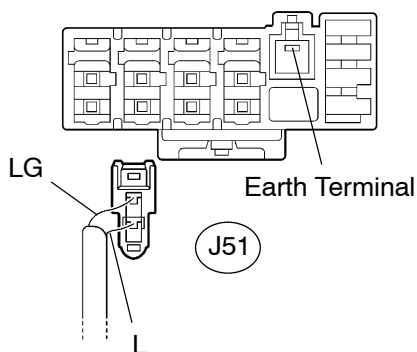**39 CHECK CAN BUS LINES FOR SHORT CIRCUIT(TELEVISION CAMERA ECU SUB BUS LINE)****LUG-CAN J/C A Side
(w/ Earth Terminal):**

G25695

G31935

- (a) Disconnect the television camera ECU sub bus line connector (J51) from the LUG-CAN J/C A side (w/ earth terminal).

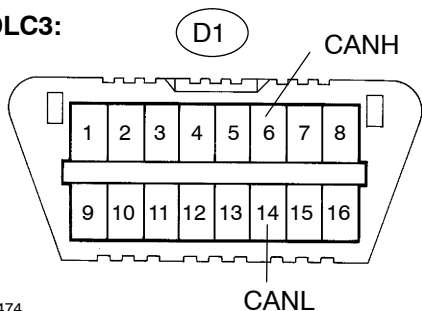DLC3:G25474
C81825

G26206

- (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) - D1-14 (CANL)	Ignition Switch OFF	108 to 132 Ω

NG**REPLACE JUNCTION CONNECTOR
(LUG-CAN J/C)****OK**

40


CONNECT CONNECTOR

- (a) Reconnect the television camera ECU sub bus line connector (J51) to the LUG-CAN/C/A side (w/ earth terminal).



41

CHECK CAN BUS LINES FOR SHORT CIRCUIT (TELEVISION CAMERA ECU SUB BUS LINE)

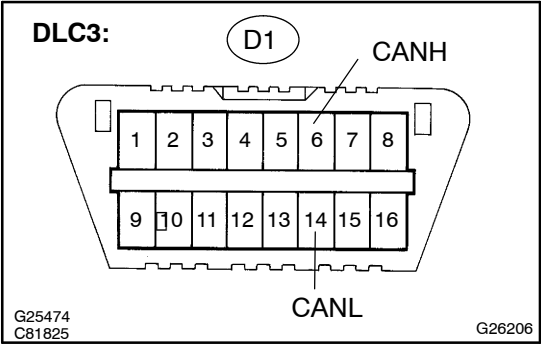

- (a) Disconnect the television camera ECU connector (T24).
(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1-6 (CANH) – D1-14 (CANL)	Ignition Switch OFF	54 to 69 Ω

OK

REPLACE TELEVISION CAMERA ECU (SEE PAGE 67-15)

NG

REPAIR OR REPLACE TELEVISION CAMERA ECU SUB BUS LINE OR CONNECTOR (CAN-H, CAN-L)