

DTC	B1803	SHORT IN D SQUIB CIRCUIT (TO B+)
-----	-------	----------------------------------

CIRCUIT DESCRIPTION

The D squib circuit consists of the airbag sensor assy center, the spiral cable sub-assy and the horn button assy.

The circuit instructs the SRS to deploy when deployment conditions are met.

DTC B1803 is recorded when a short to B+ is detected in the D squib circuit.

DTC No.	DTC Detecting Condition	Trouble Area
B1803	<ul style="list-style-type: none">• When the airbag sensor assy center receives a B+ short signal in the D squib circuit for 0.5 seconds.• D squib malfunction• Spiral cable sub-assy malfunction• Airbag sensor assy center malfunction	<ul style="list-style-type: none">• Instrument panel wire• Spiral cable sub-assy• Horn button assy (D squib)• Airbag sensor assy center

WIRING DIAGRAM

See page 05-1038.


INSPECTION PROCEDURE

CAUTION:

Be sure to perform the following procedures before troubleshooting to avoid unexpected airbag deployment.

- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- (c) Disconnect the connectors from the airbag sensor assy center.
- (d) Disconnect the connectors from the horn button assy.
- (e) Disconnect the connector from the front passenger airbag assy.
- (f) Disconnect the connector from the instrument panel airbag assy lower No.1.
- (g) Disconnect the connector from the instrument panel airbag assy lower No.2.
- (h) Disconnect the connector from the front seat airbag assy LH.
- (i) Disconnect the connector from the front seat airbag assy RH.
- (j) Disconnect the connector from the curtain shield airbag assy LH.
- (k) Disconnect the connector from the curtain shield airbag assy RH.
- (l) Disconnect the connector from the front seat outer belt assy LH.
- (m) Disconnect the connector from the front seat outer belt assy RH.
- (n) Disconnect the connectors from the rear seat 3 point type outer belt assy.

1 CHECK D SQUIB CIRCUIT(AIRBAG SENSOR ASSY CENTER - HORN BUTTON ASSY)

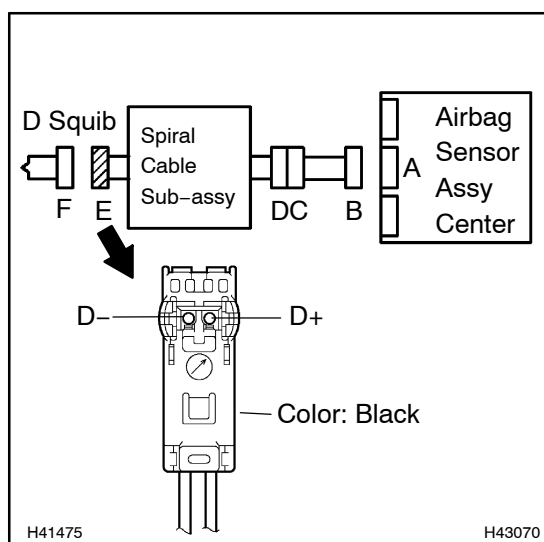

- (a) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- (b) Turn the ignition switch to the ON position.
- (c) Measure the voltage according to the value(s) in the table below.

Standard:


Tester connection	Condition	Specified condition
D+ - Body ground	Ignition switch ON	Below 1 V
D- - Body ground	Ignition switch ON	Below 1 V

NG

Go to step 4

OK

2 CHECK AIR BAG SENSOR ASSY CENTER

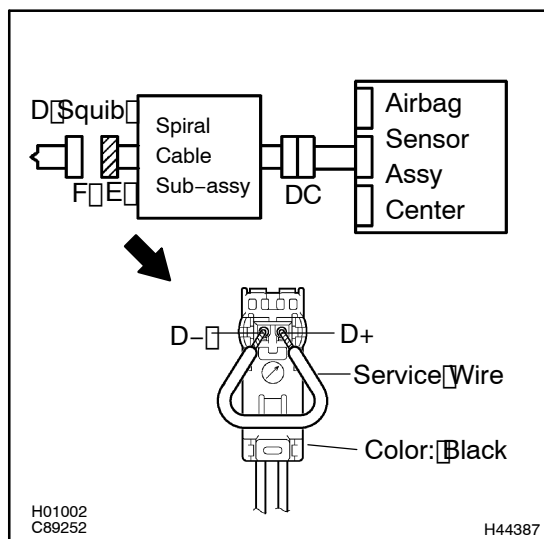

- Turn the ignition switch to the LOCK position.
- Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- Connect the connectors to the airbag sensor assy center.
- Using a service wire, connect D+ and D- of connector "E".

NOTICE:

- Twist the end of the service wire in order to insert it into the connector.
 - Do not forcibly insert the twisted service wire into the terminals of the connector when connecting.
- Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
 - Turn the ignition switch to the ON position, and wait for at least 60 seconds.
 - Clear the DTCs stored in memory (see page 05-959).
 - Turn the ignition switch to the LOCK position.
 - Turn the ignition switch to the ON position, and wait for at least 60 seconds.
 - Check the DTCs (see page 05-959).

OK:

DTC B1803 is not output.

HINT:


Codes other than code B1803 may be output at this time, but they are not related to this check.

NG

**REPLACE AIR BAG SENSOR ASSY CENTER
(SEE PAGE 60-74)**

OK

3 CHECK HORN BUTTON ASSY (D Squib)

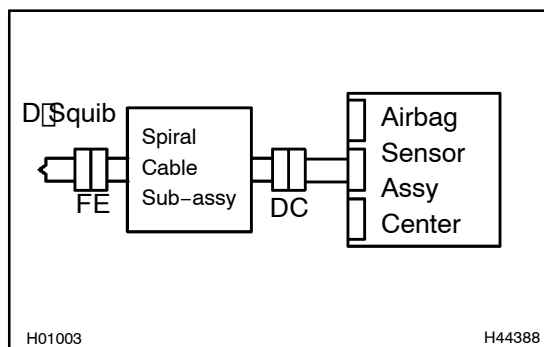

- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- (c) Disconnect the service wire from connector "E".
- (d) Connect the connectors to the horn button assy.
- (e) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- (f) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- (g) Clear the DTCs stored in memory (see page 05-959).
- (h) Turn the ignition switch to the LOCK position.
- (i) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- (j) Check the DTCs (see page 05-959).

OK:

DTC B1803 is not output.

HINT:

Codes other than code B1803 may be output at this time, but they are not related to this check.

NG


**REPLACE HORN BUTTON ASSY
(SEE PAGE 60-22)**

OK

USE SIMULATION METHOD TO CHECK (SEE PAGE 05-954)

HINT:


- Perform the simulation method by selecting the check mode with the Intelligent Tester II (see page 05-960).
- After selecting the check mode, perform the simulation method by wiggling each connector of the airbag system or driving the vehicle on a city or rough road (see page 05-960).

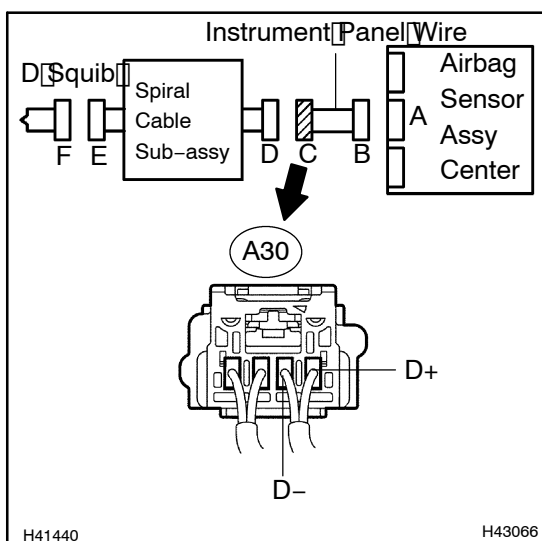4 CHECK INSTRUMENT PANEL WIRE

- Turn the Ignition switch to the LOCK position.
- Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- Disconnect the instrument panel wire connector from the spiral cable sub-assy.
- Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- Turn the Ignition switch to the ON position.
- Measure the voltage according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
A30-1 (D+) - Body ground	Ignition switch ON	Below 1V
A30-2 (D-) - Body ground	Ignition switch ON	Below 1V

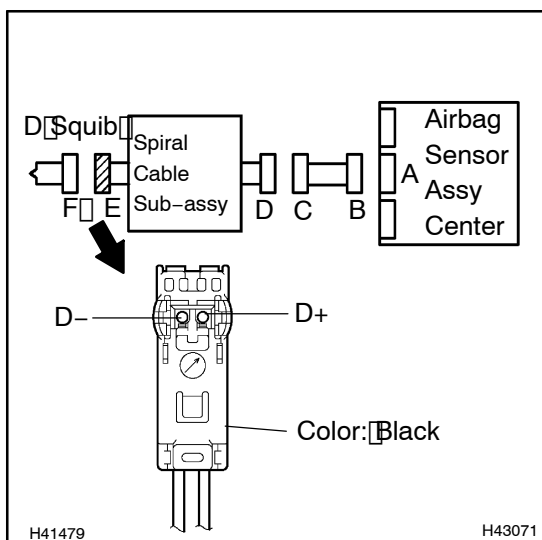NG**REPAIR OR REPLACE INSTRUMENT PANEL WIRE****OK****5 CHECK SPIRAL CABLE SUB-ASSY**

- Measure the voltage according to the value(s) in the table below when the Ignition switch remains in the ON position.

Standard:

Tester connection	Condition	Specified condition
D+ - Body ground	Ignition switch ON	Below 1V
D- - Body ground	Ignition switch ON	Below 1V

NG**REPLACE SPIRAL CABLE SUB-ASSY (SEE PAGE 60-31)****OK****USE SIMULATION METHOD TO CHECK (SEE PAGE 05-954)****HINT:**

- Perform the simulation method by selecting the check mode with the intelligent tester (see page 05-960).
- After selecting the check mode, perform the simulation method by wiggling each connector of the airbag system or driving the vehicle on a city or rough road (see page 05-960).