

Qeedji

User manual

SBL10e smart_office_obs

1.12.10 002A



Legal notice

SBL10e smart_office_obs 1.12.10 (002A_en)

© 2024 Qeedji

Rights and Responsibilities

All rights reserved. No part of this manual may be reproduced in any form or by any means whatsoever, or by any means whatsoever without the written permission of the publisher. The products and services mentioned herein may be trademarks and/or service marks of the publisher, or trademarks of their respective owners. The publisher and the author do not claim any rights to these Marks.

Although every precaution has been taken in the preparation of this document, the publisher and the author assume no liability for errors or omissions, or for damages resulting from the use of the information contained in this document or the use of programs and source code that can go with it. Under no circumstances can the publisher and the author be held responsible for any loss of profits or any other commercial prejudice caused or alleged to have been caused directly or indirectly by this document.

Product information

Product design and specifications are subject to change at any time and `Qeedji` reserves the right to modify them without notice. This includes the hardware, the embedded software and this manual, which should be considered as a general guide to the product. The accessories supplied with the product may differ slightly from those described in this manual, depending on the developments of the various suppliers.

Precautions for use

Please read and heed the following warnings before turning on the power: - installation and maintenance must be carried out by professionals. - do not use the device near water. - do not place anything on top of the device, including liquids (beverages) or flammable materials (fabrics, paper). - do not expose the device to direct sunlight, near a heat source, or in a place susceptible to dust, vibration or shock.

Warranty clauses

The `Qeedji` device is guaranteed against material and manufacturing defects for a certain duration. Check the device warranty duration value at the end of the document. These warranty conditions do not apply if the failure is the result of improper use of the device, inappropriate maintenance, unauthorized modification, operation in an unspecified environment (see operating precautions at the beginning of the manual) or if the device has been damaged by shock or fall, incorrect operation, improper connection, lightning, insufficient protection against heat, humidity or frost.

WEEE Directive



This symbol means that your appliance at the end of its service life must not be disposed of with household waste, but must be taken to a collection point for waste electrical and electronic equipment or returned to your dealer. Your action will protect the environment. In this context, a collection and recycling system has been set up by the European Union.

Table of contents

Part I : Description and installation

Introduction	1.1
Device dimensions	1.1.1
Labelling	1.1.2
Installation	1.1.3
Uninstallation	1.1.4
Smart Busy Light applications	1.2

Part II : Applicative console Web user interface

Applicative console web user interface	2.1
--	-----

Part III : Administration console Web user interface

Device configuration console web user interface	3.1
Configuration > Administrator	3.1.1
Configuration > LAN	3.1.2
Configuration > Servers	3.1.3
Configuration > Date and time	3.1.4
Configuration > Tasks	3.1.5
Maintenance > Firmware	3.1.6
Maintenance > Preferences	3.1.7
Maintenance > Logs	3.1.8
Maintenance > Tools	3.1.9
Maintenance > Files	3.1.10
Information > Device	3.1.11
Information > Network	3.1.12

Part IV : Technical information

Technical specifications	4.1
Conformities	4.2

Part V : Contacts

Contacts	5.1
----------	-----

Part VI : Appendix

Appendix: web services	6.1
Appendix: Qether	6.2
Appendix: Device configuration with TFTP server (+ DHCP server code 66)	6.3
Appendix: Devices configuration using Powershell	6.4

Part I | Description and installation

1.1 Introduction

This manual explains how to install and configure your device SBL10e device.

Recommendations and warnings

This device is designed for indoor use only.

To ensure better rendering of the SBL10e, the device should not be installed under direct sunlight.

The SBL10e device is designed to be illuminated 12 hours a day, 7 days a week.


Package Contents

Articles	Description
Device	SBL10e device with the default <code>regular</code> ¹ application embedded.

¹ It is possible to easily update the device with the `smart_office_obs` application afterwards.

■ In this documentation, the unit of measurement for dimensions is done in millimeters followed by its equivalent value in inches.


1.1.1 Device dimensions

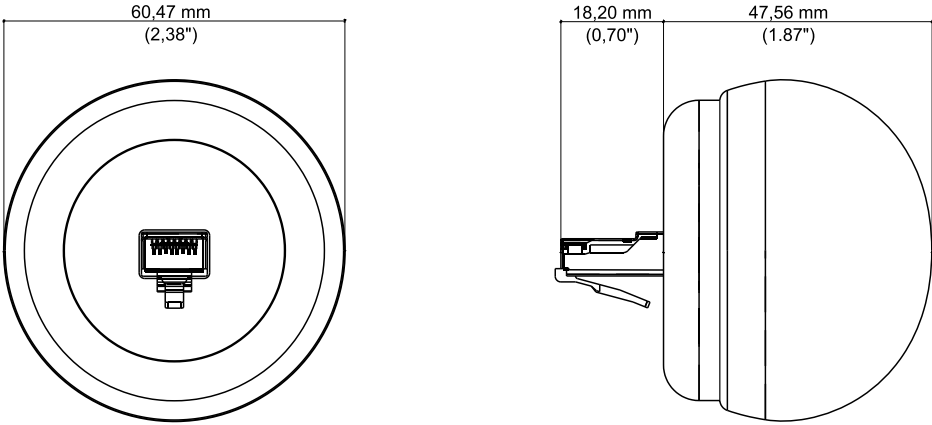

1.1.2 Labelling

Product label

The model of the device, the power supply characteristics, the serial number (PSN) and the MAC address are written on a label stuck on the case.

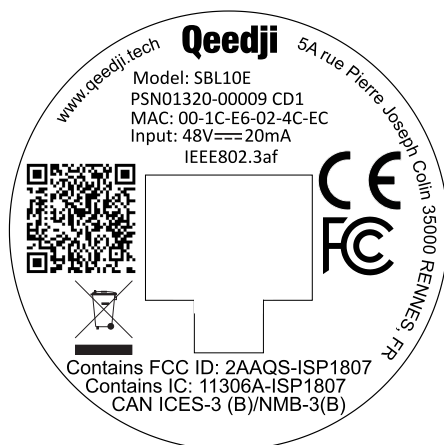


☛ This is an example of registration QR code URL:

`i.qeedji.tech?model=SBL10e&sn=01320-00009&mac.Lan1=00-1C-E6-02-4C-EC&mac.wpan1=DF-27-83-3C-8A-90.`

Packingbox label

This is the label stuck also on the packingbox. It is showing:

- the device model,
- the product serial number (PSN) (embedded also in the QR code),
- the manufacturer Website.

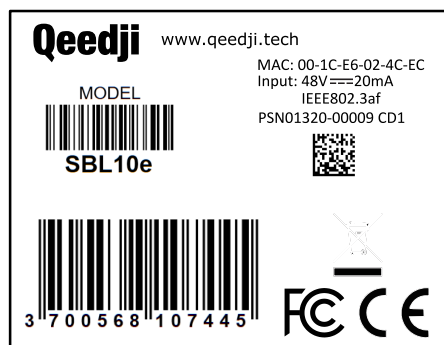

☛ The QR code on the packingbox label is corresponding to the product PSN, for example:


`PSN01320-00009 CD1.`

☛ The serial number of the device may be requested in case of technical support.

1.1.3 Installation

■ Install the SBL10e device on the Ethernet wall plugs of the buildings following the installation map given by your IT department.

The SBL10e device has to be plugged to an Ethernet wall plug supporting PoE IEEE802.3af.

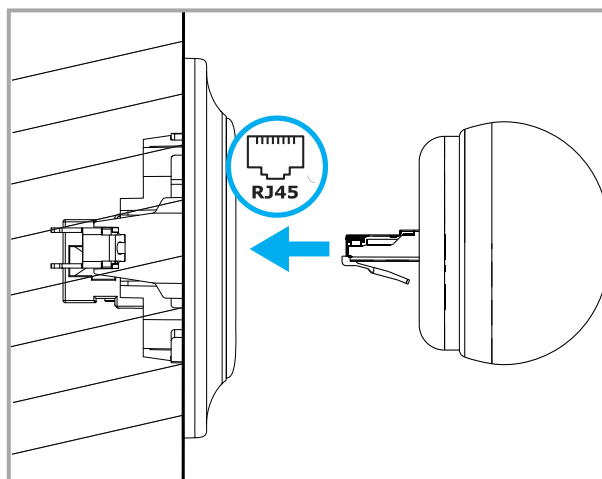

Given the device footprint, it is preconised to use Ethernet wall plug plastron with a right insertion.




Consequently, the Ethernet wall plug whose plastron is angled is not supported.



■ Thanks to the lock pin of its Ethernet connector, the SBL10e device can be installed on vertical surfaces, like walls as well as horizontal surfaces, like ceilings.

1.1.4 Uninstallation

With a screw driver, hold down the pin of the Ethernet connector ① of the SBL10e device at the same time you are releasing with the hand ② the SBL10e device from the Ethernet wall plug.

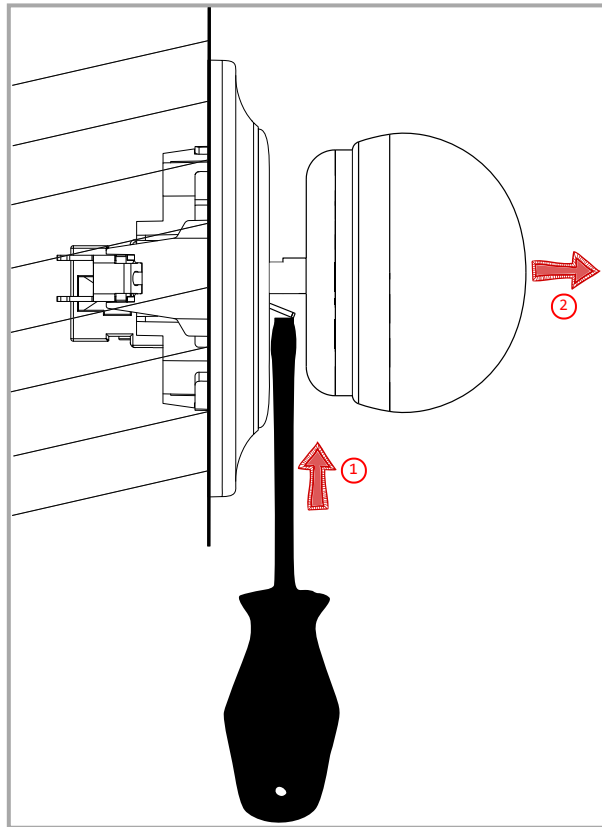

1.2 Smart Busy Light applications

To display the appropriate light state and color, the `smart_office_obs` application periodically connects to a web server supporting a database of the different state and color values for each SBL10e installed in the organization.

Server datasource


The server datasource must fill these requirements in terms of web service and data format.

web service:

This is the format of the HTTP request sent by application running on device to the datasource server to get its appropriate light state and color:

`GET /flexoffice-gatewayapi/v1/leds/light/ <SLB10e_PSN> HTTP/1.0`

`Host: <server_address>`

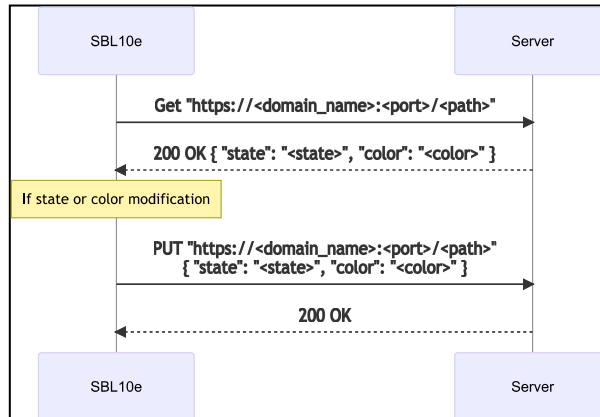

For example:

`GET /flexoffice-gatewayapi/v1/leds/light/00900-01504 HTTP/1.0`

`Host: 192.168.158.247`

Data format:

The body of the data returned for each device by the server datasource must be formatted in JSON format. The JSON body is built with the following way:

```
{ "state": "<state>", "color": "<color>" }
```

These are the supported values for each variable:

- `<state>` : *off*, *steady* or *flashing*,
- `<color>` : *red*, *orange*, *blue*, *yellow* or *green*

Example:

```
{ "state": "steady", "color": "red" }
```

Light states and colors

The device can support the states and colors values showed below.

Color	State
	OFF
Red	ON steady OR ON flashing
Green	ON steady OR ON flashing
Blue	ON steady OR ON flashing
Orange	ON steady OR ON flashing
Yellow	ON steady OR ON flashing

▮ The *ON flashing* state is flashing with this sequence: *ON* for 0,5 seconds then *OFF* for 0,5 seconds every one second.

▮ Depending on the application running on it, some color/state may be never used.

■ The light color and state values are stored in the volatile memory (RAM). That means that in case the SBL10e device is unplugged from the Ethernet wall plug then plugged back again, the light comes back to its default state: **OFF** until its state is then modified by the App or by the user.

Configuration

The `Smart Busy Light` application supports the configuration update:

- by connecting to the device configuration console web user interface `http://<device-ip-addr>/` and changing parameters,
- by pushing, from a WebDAV client or with the device console web user interface, a `prefs.json` configuration file on the device WebDAV directory `http://<device-ip-addr>/conf/`,
- by pushing, from a WebDAV client or with the device console web user interface, a `.js` configuration script on the device WebDAV directory `http://<device-ip-addr>/conf/`,
- by receiving a `configure` command with an appropriate `.js` configuration script from the `Qether` tool (Qether V1.12.10 or above).

Firmware upgrade

The `Smart Busy Light` application supports the firmware upgrade:

- by connecting to the device configuration console web user interface `http://<device-ip-addr>/` and loading an appropriate `bm0032_smart_office_obs-sbl10e-xx.yy.zz.bin`¹ firmware file,
- by pushing a new `bm0032_smart_office_obs-sbl10e-xx.yy.zz.bin`¹ firmware file at the root of the device WebDAV directory `http://<device-ip-addr>/` with a WebDAV client,
- by receiving an `install` command with an appropriate `bm0032_smart_office_obs-sbl10e-xx.yy.zz.bin`¹ firmware file from the `Qether` tool.

¹ Can work also with any other `bm0032_<custom>-sbl10e-xx.yy.zz` compatible firmware.

☛ After a firmware upgrade, the device is rebooting once.

☛ When the `configuration` command or the `install` command has been processed, the last `Smart Busy Light` state and color are restored.

Preprogrammed flashing sequence

The SBL10e device has two modes:

- **Nominal mode**: the `Smart Busy Light` application runs properly and sets the light state and color as expected. When a configuration or a firmware upgrade is in progress, the light illumination can be temporarily inconsistent and follows the light flashing sequence shown in the table hereafter.
- **Recovery mode**: the `Smart Busy Light` application can not be executed. The light state or color can not be modified anymore. It is required to update the firmware to return to the `nominal mode`.

Depending on these modes, the Smart Busy Light applications can fall into one of these preprogrammed flashing sequences:

Mode	Smart Busy light behaviour	Information
Recovery	2 very short and consecutive blue flashes (250 ms) with a 4,5 seconds periodicity	The Smart Busy Light application can not be executed. It should never happen. The device console web user interface is so not available. This sequence is displayed until a new firmware update is done with Qether tool. For further information, contact support@qeedji.tech .
Recovery	3 very short and consecutive blue flashes (250 ms) with a 5 seconds periodicity	The software resource of the SBL10e device set at factory are not valid. It should never happen. For further information, contact support@qeedji.tech .
Nominal or recovery	4 very short and consecutive blue flashes (250 ms) with a 5,5 seconds periodicity	A SBL10e device Firmware update is in progress. Please wait a couple of seconds.
Nominal	5 very short and consecutive blue flashes (150 ms)	A SBL10e device configuration is in progress. Please wait a couple of seconds.
Nominal	6 very short and consecutive blue flashes (150 ms)	The datasource is not consistent because some of the parameters are missing or have a wrong value. For further information about the datasource form, refer to the chapter § Configuration > Servers . For further information about the reporting of the problems faced with some datasource parameters, refer to the chapter § Maintenance > Logs .

Part II | **Applicative console Web user interface**

2.1 Applicative console web user interface

The SBL10e device supports a console web user interface that can be accessed with a web browser. The supported web browsers are: Google Chrome , Mozilla Firefox , MS-Edge (Chromium) .

It is available from the URL: `http://<device_IP_addr>/` .

The URL falls into the `smart_office_obs` applicative user interface: `http://<device_IP_addr>/webui/` . This pane allows to:

- watch the current LED light color ,
- watch the current LED light state .



Part III

Administration console Web user interface

3.1 Device configuration console web user interface

The SBL10e device supports a device configuration console web user interface that can be accessed with a web browser. The supported web browsers are: Google Chrome, Mozilla Firefox and MS-Edge (Chromium).

It is available from the URL: `http://<device_IP_addr>/`.

The default credentials values, put at factory, to access to the device console web user interface are:


- login: `admin`,
- password: `admin`.

The URL falls automatically into the applicative user interface¹. At the top right corner, click on the `Administration Console` button.

Administration console

¹ For further information, refer to the chapter § [Applicative console web user interface](#).

This is the device configuration console web user interface.

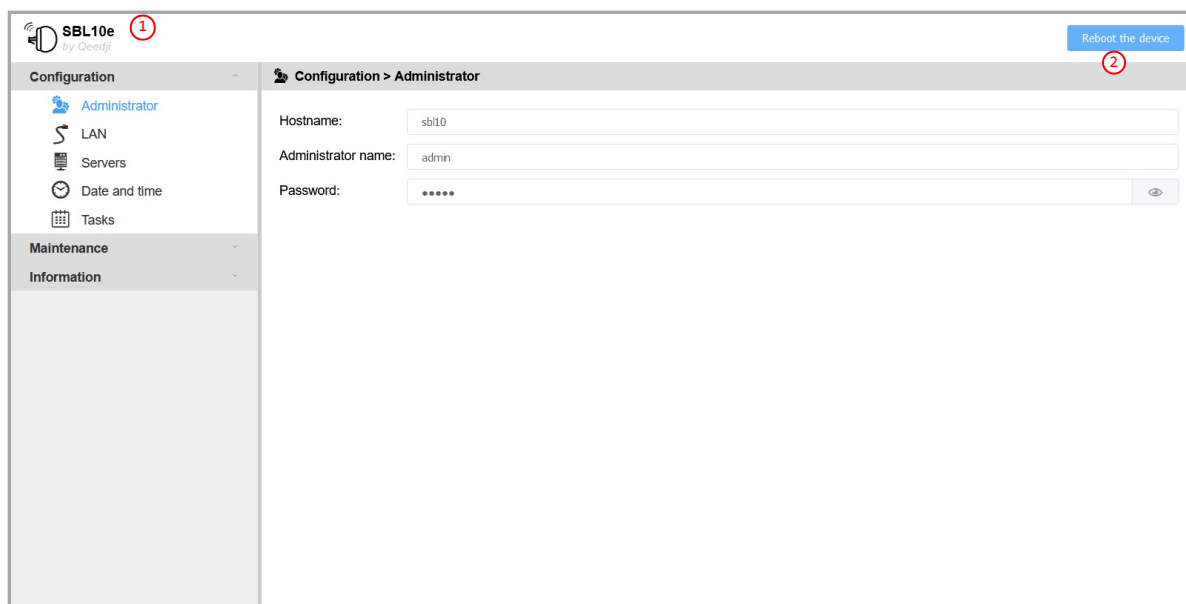

⚠ After you have changed and saved all your settings in the different panes, be sure to perform a device restart by clicking on the `Reboot the device` button so that your changes are fully reflected.

Click on the device logo ① at the left top corner to return to the applicative user interface.

3.1.1 Configuration > Administrator

In the **Configuration** tab, select the **Administrator** menu to change:

- the **Hostname** ,
- the login credentials:
 - Administrator name ,
 - Password .

The screenshot shows the SBL10e web interface. The top left corner displays the SBL10e logo and the text "by Qeeq". The top right corner has a "Reboot the device" button. The left sidebar contains a "Configuration" menu with sub-items: Administrator (selected), LAN, Servers, Date and time, and Tasks. Below these are "Maintenance" and "Information" sections. The main content area is titled "Configuration > Administrator" and contains three input fields: "Hostname:" with the value "sbl10", "Administrator name:" with the value "admin", and "Password:" with masked characters "*****" and a toggle icon to show/hide the password.

It is recommended that you enter one unique **Hostname** value for each device. In case several SBL10e devices are located in different buildings or geographical locations, we recommend that you enter hostname values with information about the building and the location (e.g. *Hall-RD-Paris-1*).

For security reasons, it may be useful to change the login credentials values. Please keep them in a safe place afterwards.

The same login credentials are used to access to the WebDAV server and to use web services.

3.1.2 Configuration > LAN

In the **Configuration** tab, select the **LAN** menu to set up the network configuration of the **LAN** interface of your device.

The screenshot shows the SBL10e web interface. On the left is a sidebar with a 'Configuration' section containing 'Administrator', 'LAN' (selected), 'Servers', 'Date and time', and 'Tasks'. Below this is a 'Maintenance' section with 'Information'. The main content area is titled 'Configuration > LAN'. It features two radio buttons: 'Obtain IP address automatically by DHCP:' (selected) and 'Use the following IP address:'. Under the DHCP option, there is a checked checkbox for 'Time for attempts:' with a value of 600 seconds. Under the static IP option, there are input fields for 'IP address:' (192.168.0.2), 'Subnet mask:' (255.255.255.0), and 'Default gateway:' (192.168.0.6). A 'Reboot the device' button is located in the top right corner.

- The device supports the UPnP and can be for example detected automatically in the local network environment of your computer.
- By default, the device is configured with *Obtain an IP address automatically by DHCP* activated and *Time for attempts* deactivated. As soon as the DHCP server becomes available, the device ends by getting back a valid IP address given by the DHCP server within less than one minute.
- After a device reboot, when the device is configured with *Obtain an IP address automatically by DHCP* activated and *Time for attempts* is activated, in case the DHCP server is unavailable after the *Time for attempts* duration (ten minutes for the maximum and default value) has expired, the device ends up using the static IP address entered in the LAN configuration. The default static IP address is 192.168.0.2 when it has never been changed yet by the user. It is recommended to set an appropriate IP address, netmask and gateway if this case would happen. In case a daily reboot task is programmed, the device will restart this operation every days.
- When only the *Time for attempts* value is modified, press on TAB key of your keyboard to make appear the *Validate* button.

3.1.3 Configuration > Servers

In the `Configuration` tab, select the **Servers** menu to enter the configuration to connect to the servers peripheral to your device.

The screenshot shows the SBL10e configuration interface. On the left is a sidebar with a menu: Configuration (selected), Maintenance, and Information. Under Configuration, there are sub-items: Administrator, LAN, Servers (selected), Date and time, and Tasks. The main area is titled 'Configuration > Servers'. It contains four sections: 1. 'Datasource server' with fields for Address (192.168.2.17), Port (443), and Heartbeat (10 seconds). 2. 'HTTPS proxy server' with a checkbox and fields for Address and Port (8080). 3. 'DNS servers' with radio buttons for 'Obtain DNS server address automatically' and 'Use the following DNS server address:'. The latter is selected, with fields for Preferred DNS server (192.168.0.4) and Alternate DNS server (192.168.0.4). 4. 'NTP time server' with a checked checkbox and a field for the server address (fr.pool.ntp.org). A 'Reboot the device' button is in the top right corner.

The `Datasource Server` is the server machine having the dynamic information of the current state and color to apply to your busylight:

- `Datasource Server` :
 - `Address` : enter the IPv4 address, or the domain name of your `Datasource Server` ,
 - `Port` : enter the operating port of your `Datasource Server` ,
 - `Heartbeat` : periodicity of the connection to the `Datasource Server` , from 10 (default value) to 120 seconds.
- `HTTPS proxy server` :
 - `Address` : enter the IPv4 address, or the domain name of your `proxy server`,
 - `Port` : enter the operating port of your `proxy server`.
- `DNS servers` .
- `NTP time server` .

▮ The `smart_office_obs` application can work even though the `NTP time server` is not set.

▮ The login credentials for `datasource server` are not supported.

▮ If the server is not available after 20 (default value stored in the `appli.network.datasource.nb_retries_before_cache_reset` user preference) consecutive unsuccessful connection attempts, the light is switched Off until the next successful connection attempt.

▮ When only the `Port` or the `Heartbeat` value is modified, press on TAB key of your keyboard to make appear the `Validate` button.

▮ With the `smart_office_obs` application, when a proxy server is used, the DNS server can not be used. To work around, the DNS feature must be implemented in the proxy server.

⚠ Upgrading the SBL10e device with another application type will clear the current `datasource` configuration data. When the SBL10e is properly configured, it is advised to build and save an appropriate SBL10e configuration script (`.js`) by using the configuration script template or save at least the `prefs.json` configuration file of your SBL10e device. For further information, refer to the chapter § [Maintenance > Files](#).

3.1.4 Configuration > Date and time

In the **Configuration** tab, select the **Date and Time** menu to check the time configuration:


- timezone,
- system date of your device (day and time).

The screenshot displays the SBL10e configuration web interface. The top header shows the device name 'SBL10e by Qeedji' and a 'Reboot the device' button. The left sidebar contains a 'Configuration' section with links for 'Administrator', 'LAN', 'Servers', and 'Date and time' (which is highlighted). Below this are 'Maintenance' and 'Information' sections. The main content area is titled 'Configuration > Date and time' and shows the following settings: 'Timezone' is set to 'Europe / Paris' in a dropdown menu; 'UTC date and time' is '2021-08-12, 09:21'; and 'Local date and time' is '2021-08-12, 11:21'.

▮ The application can work even though the device is not on time. Anyway, in case the **Reboot** task is activated, it is advised to set an appropriate date and time, synchronized with a NTP server, to control exactly when the SBL10e must reboot. For further information, refer to the chapter § [Configuration > Servers](#).

3.1.5 Configuration > Tasks

In the `Configuration` tab, select the **Tasks** menu to activate a device `reboot manager` task and adjust the `reboot manager` task time.

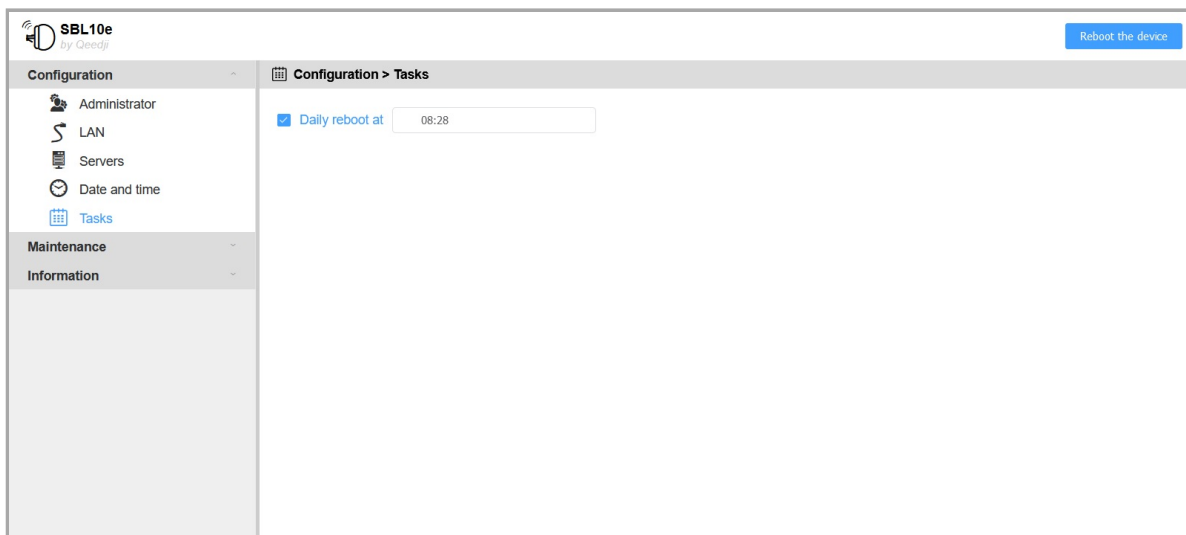


- During the reboot task, the light state is `off` for a couple of seconds until the next data source server connection.
- If the NTP server set by the user is not available anymore and the `system.task.reboot.enable` user preference is true, the device is rebooting automatically every days, 24 hours after the last device reboot.

3.1.6 Maintenance > Firmware

In the **Maintenance** tab, select the **Firmware** menu to view the version of the application installed on your device.



Corrective and evolutive maintenance software versions are regularly made available in the support tab of the official **Qeedji** website http://www.qeedji.tech/en/support/index.php?SBL10e/Smart_office_OBS. It is therefore advised to regularly update the device firmware. From this website, download the appropriate latest firmware version available for your device model (**.bin** file). For further information, contact support@qeedji.tech.

Drop your **.bin** file in the  Drop file here or click to add one location or click on it to add one, then click on the **Send** button to update the firmware version of your device. Wait a couple of seconds, the time to load and install the new firmware version. Connect again to the device configuration console web user interface and check the new firmware version.


The user preferences common to the applications are kept when upgrading from **regular** application to another application (and reciprocally) meaning:

- network configuration,
- file system,
- hostname,
- web user interface credentials.

 Do not electrically disconnect the device during the firmware upgrade.

3.1.7 Maintenance > Preferences

In the Maintenance tab, select the Preferences menu to view all the preferences.

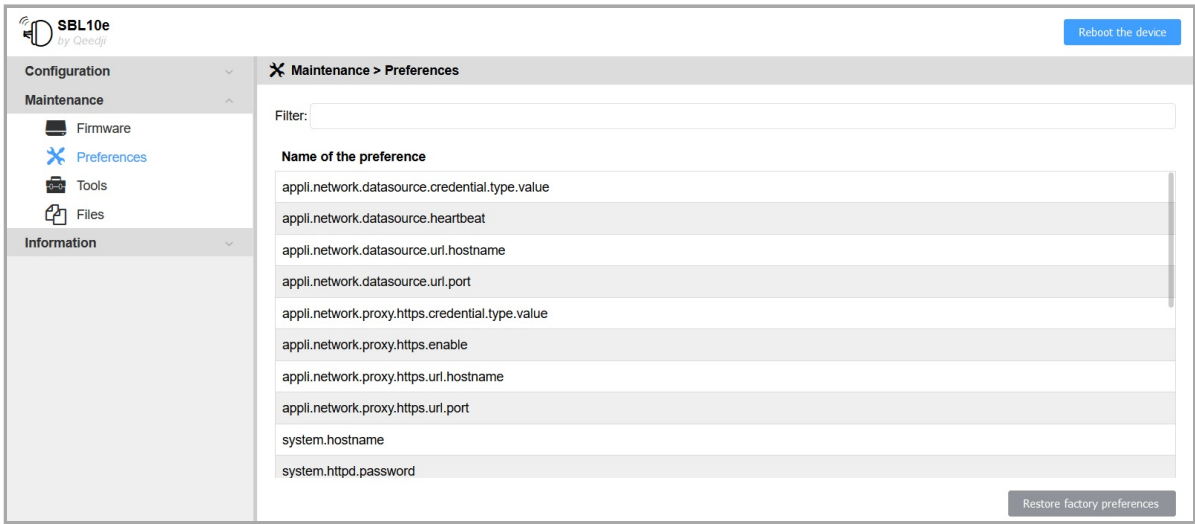

The filter allows to display only the preferences whose name contains the string entered in the filter. All the preferences have optimal default values.

Double click on a preference to change its value.

At the bottom right of the page, the Restore factory preferences button allows to reset a subset of preferences allowing the device to reprogram its factory preferences. In this case, the LAN network configuration returns to DHCP.

Click on the Reboot the device button so that the modifications are taken into account.

⚠ After a user preference restoration, in case a .js configuration script, suitable for the application of this SBL10e device, is available on the TFTP server, the user preference system.tftp.enable is set to true. Consequently, the SBL10e device is rebooting once again to take into account the .js configuration script available on the TFTP server.

Timezone

Continent	Country/Town pair values supported for the system.datetime.timezone preference
Africa	Africa/Brazzaville, Africa/Cairo, Africa/Casablanca, Africa/Harare, Africa/Lagos, Africa/Nairobi, Africa/Onitsha, Africa/Windhoek
America	America/Anchorage, America/Argentina/Buenos_Aires, America/Barbados, America/Bogota, America/Boston, America/Caracas, America/Chicago, America/Chihuahua, America/Costa_Rica, America/Dallas, America/Denver, America/Godthab, America/Halifax, America/Houston, America/Los_Angeles, America/Manaus, America/Mexico_City, America/Montevideo, America/New_York, America/Phoenix, America/Recife, America/Regina, America/Rio_de_Janeiro, America/San_Francisco, America/Santiago, America/Sao_Paulo, America/St_Johns, America/Tijuana, America/Washington_D.C.
Asia	Asia/Ahmedabad, Asia/Almaty, Asia/Amman, Asia/Baghdad, Asia/Baku, Asia/Bangalore, Asia/Bangkok, Asia/Beijing, Asia/Beirut, Asia/Chengdu, Asia/Chennai, Asia/Chongqing, Asia/Colombo, Asia/Delhi, Asia/Dongguan, Asia/Dubai, Asia/Guangzhou, Asia/Hangzhou, Asia/Hanoi, Asia/Ho_Chi_Minh, Asia/Hong_Kong, Asia/Hyderabad, Asia/Irkutsk, Asia/Jakarta, Asia/Jerusalem, Asia/Kabul, Asia/Karachi, Asia/Kathmandu, Asia/Kolkata, Asia/Krasnoyarsk, Asia/Kuala_Lumpur, Asia/Kuwait, Asia/Lahore, Asia/Magadan, Asia/Mumbai, Asia/Nagoya, Asia/Nanjing, Asia/Oral, Asia/Osaka, Asia/Pune, Asia/Quanzhou, Asia/Seoul, Asia/Shanghai, Asia/Shenyang, Asia/Shenzhen, Asia/Surat, Asia/Taipei, Asia/Tbilisi, Asia/Tehran, Asia/Tianjin, Asia/Tokyo, Asia/Vladivostok, Asia/Wuhan, Asia/Xi'an, Asia/Yakutsk, Asia/Yangon, Asia/Yekaterinburg, Asia/Yerevan, Asia/Zhengzhou
Atlantic	Atlantic/Azores, Atlantic/Cape_Verde, Atlantic/South_Georgia
Australia	Australia/Adelaide, Australia/Brisbane, Australia/Darwin, Australia/Hobart, Australia/Perth, Australia/Sydney
Europe	Europe/Amsterdam, Europe/Athens, Europe/Belgrade, Europe/Berlin, Europe/Brussels, Europe/Dusseldorf, Europe/Helsinki, Europe/Istanbul, Europe/London, Europe/Madrid, Europe/Minsk, Europe/Moscow, Europe/Paris, Europe/Sarajevo, Europe/Warsaw
Pacific	Pacific/Auckland, Pacific/Fiji, Pacific/Guam, Pacific/Honolulu, Pacific/Majuro, Pacific/Midway, Pacific/Noumea, Pacific/Tongatapu
UTC	Etc/UTC

3.1.8 Maintenance > Logs


In the Maintenance tab, select the **Logs** menu to view the logs.

In the example, there is no error raised in the logs except the warning for the time which is not set.


When the `system.tftp.server` user preference is `true`:

- in case there is some available `.js` configuration script on the TFTP server with the appropriate file name pattern, this message is printed: TFTP client enable: matching configuration script available on TFTP server (<IP address>).
- in case there is no `.js` configuration script on the TFTP server with the appropriate file name pattern, this message is printed: TFTP client enable: no configuration script available on TFTP server for this device (<IP address>).
- in case the TFTP server is not available, this message is printed: TFTP client enable: error server did not respond (<IP address>).

⚠ To be successfully taken into account, the content of the `.js` configuration script available on the TFTP server must also be suitable for the SBL10e application.

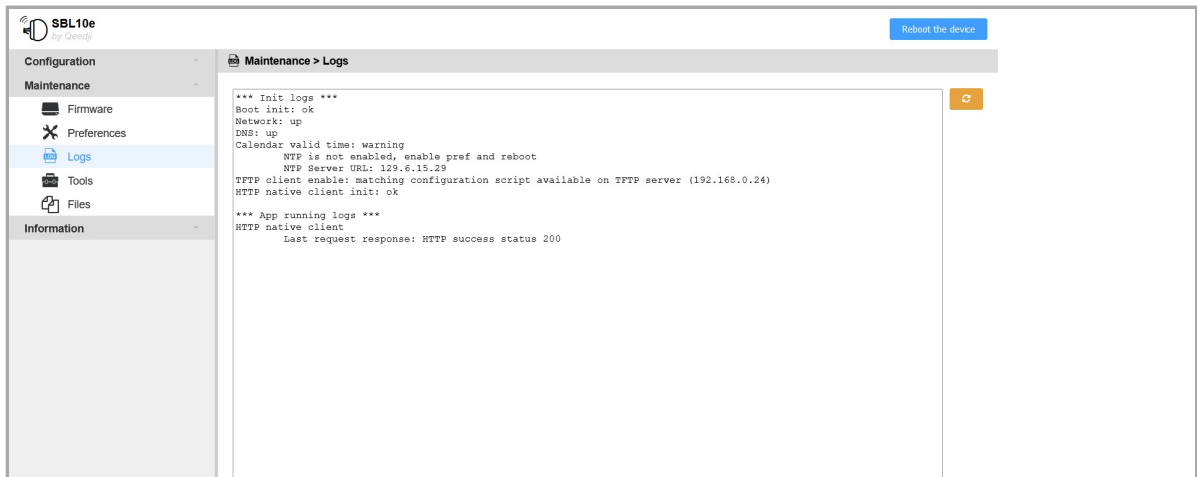

In the example, when the NTP is set and the NTP server available, there is no error or warning at all raised in the logs.

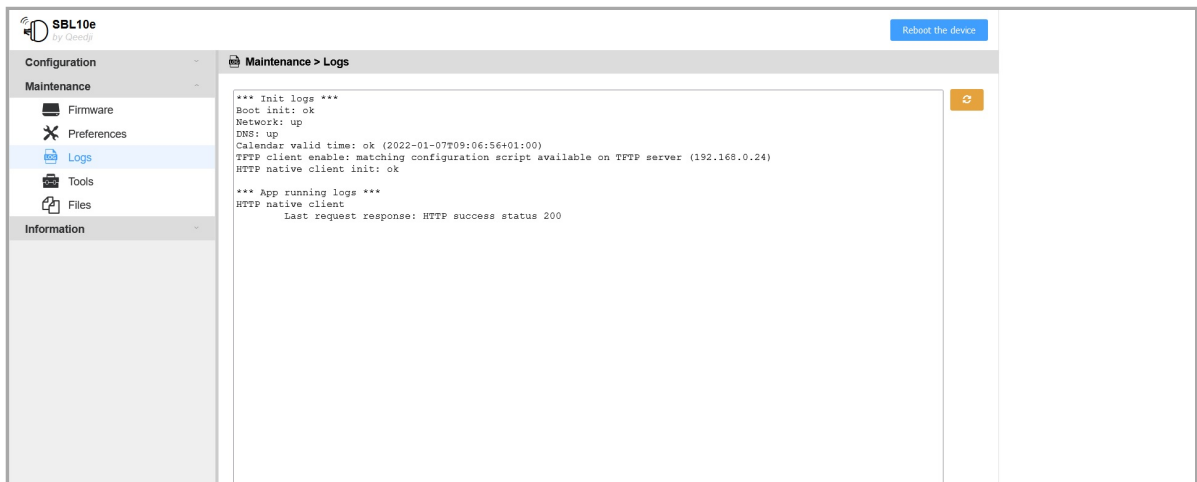

In case your SBL10e device is flashing 6 times in the blue color every 4 seconds meaning that the SBL10e configuration is probably not correct, you are invited to check the logs in this window to try to fix the trouble. It is assumed that the warning linked to the date does not prevent the application to work properly.


The logs are allowing to know whether:

- the datasource server is available,
- some state and color data are existing for this specific device.

3.1.9 Maintenance > Tools

In the **Maintenance** tab, select the **Tools** menu to:

- view the available space on the flash memory storage¹ (max 7916 KiB),
- format the flash memory storage¹,
- add the Trusted certificate (.crt) for the Datasource server .

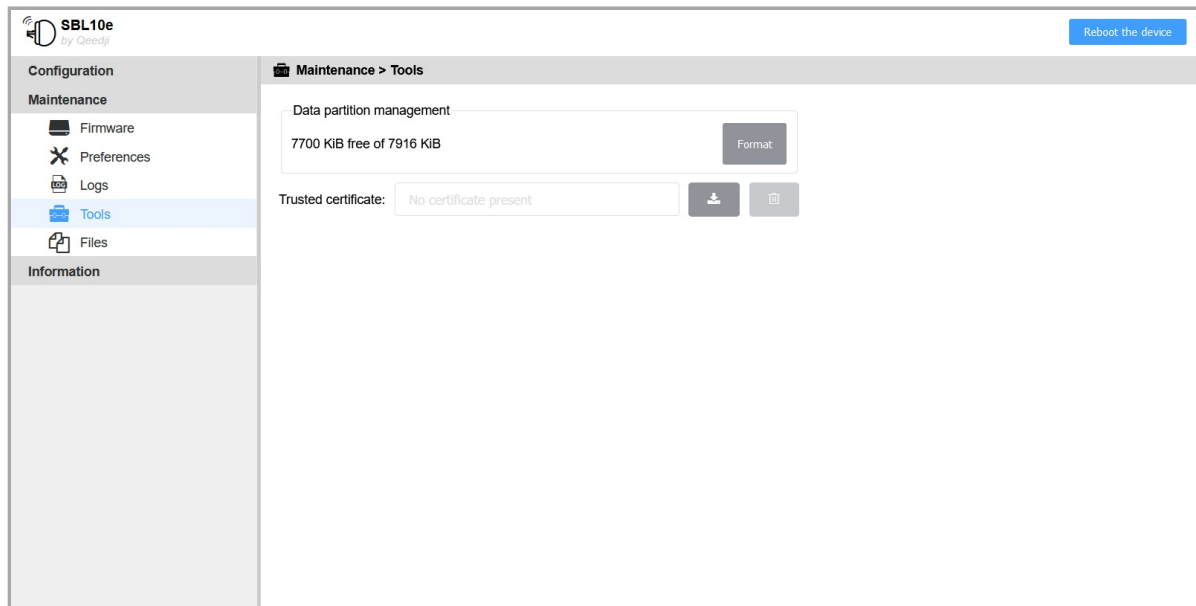

 The trusted certificate is not checked in this version.


¹ The flash memory storage is used to store all the directories and files hosted at the root of the WebDAV directory, and the user preferences as well. In case a flash formatting, the device returns to the default factory settings.

After a `.js` configuration script uploading in the device, the device is rebooting automatically once to take the new configuration into account.

- The `prefs.json` file is available in the `.conf` WebDAV directory of the device as soon as the SBL10e device configuration is modified at least once by the user. After a device configuration updating with a `prefs.json` file, a device reboot is required so that the new configuration is taken into account.
- Pushing a `.js` configuration script in the `.conf` WebDAV directory (`http://<device-ip-addr>/<conf>`) with a WebDAV client could raise a warning at the WebDAV client end, after the `.js` file transferring is completed because the device is automatically rebooting once when it is received. For example, after the `.js` file sending with BitKinex WebDAV is done, another network request is done by the WebDAV client while the device is currently rebooting. So a WebDAV error at the WebDAV client end leads to an automatic file resending which is causing another device reboot and so on, and this, until the WebDAV client application is closed. For example, after the `.js` file sending with CarotDAV WebDAV client, the error leads only to the displaying of a warning message. The user has just to ignore the error at the WebDAV client end.

3.1.11 Information > Device

In the **Information** tab, select the **Device** menu to view system information about the device.

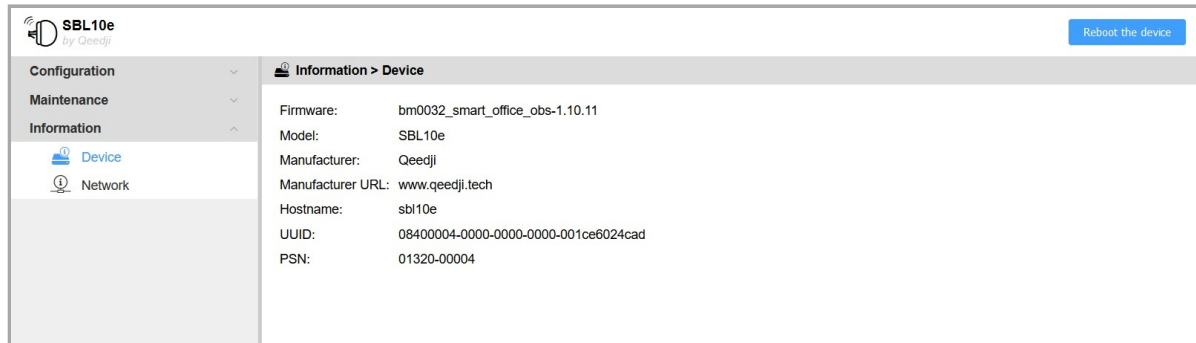

- **Firmware** : label and version of the firmware embedded in the device,
- **Model** : model of the **Qeedji** device,
- **Manufacturer** : product manufacturer name,
- **Manufacturer URL** : manufacturer Website,
- **Hostname** : name of the device on the network,
- **UUID** : Universal Unique Identifier,
- **PSN** : Product Serial Number.

3.1.12 Information > Network

In the Information tab, select the **Network** menu to view a summary of the device's network configuration.



Part IV | Technical information

4.1 Technical specifications

Model		Manufacturer	
SBL10e		Qeedji	
Power supply		Information	
PoE IEEE802.3af		POE power supply input: ES1 / PS2 (48 V – 100 VA)	
Processors			
CPU		Nordic Semiconductor nRF52	
Security processor		ARM CryptoCell 310	
Storage			
Flash Memory for file system			8 MBytes
Network		Other information	
1x Ethernet		10/100 Base T, male connector	
WPAN			
Bluetooth Low Energy 5			
Frequency band: 2.402 to 2.480 GHz			
Tx Power: +8 dBm			
Operating temperature		Storage temperature	
+0 °C to +40 °C		-20 °C to +60 °C	
+32 °F to +104 °F		-4 °F to +140 °F	
Operating humidity		Storage humidity	
< 80 %		< 85 %	
Weight	Dimensions (W x H x D) (RJ45 male connector included)		
35 g	60,5 mm x 60,5 mm x 67 mm		
0,077 lb	2,36" x 2,36" x 2,63"		
Plastic enclosure flame rating			
Base: PVC UL 94-5VA, bulb: Polycarbonate UL 94 V-2			
Warranty			
1 year			

4.2 Conformities

EUROPE

In conformity with the following European directives:

- LVD 2014/35/EU ,
- EMC 2014/30/EU ,
- RED 2014/53/EU .

USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference's by one or more of the following measures:

- reorient or relocate the receiving antenna,
- increase the separation between the equipment and the receiver,
- connect the equipment into an outlet on a circuit different from that to which the receiver is connected,
- consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC's radiation exposure limits set forth for an uncontrolled environment under the following conditions:

- this equipment should be installed and operated such that a minimum separation distance of 20 cm is maintained between the radiator (antenna) and user's/nearby person's body at all times,
- this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- this device may not cause harmful interference,
- this device must accept any interference received, including interference that may cause undesired operation.

Qeedji is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.

CANADA

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- this device may not cause interference,
- this device must accept any interference, including interference that may cause undesired operation of the device.

Part V | Contacts

5.1 Contacts

For further information, please contact us:

- **Technical support:** support@qeedji.tech,
- **Sales department:** sales@qeedji.tech.

Refer to the [Qeedji](#) Website for FAQ, application notes, and software downloads: <https://www.qeedji.tech/>

Qeedji FRANCE
INOVELEC INNES SA
5A rue Pierre Joseph Colin
35700 RENNES

Tel: +33 (0)2 23 20 01 62

Part VI | Appendix

6.1 Appendix: web services

These are the supported web services for the `smart_office_obs` application to command and control the SBL10e:

Webservice path	HTTP method				Query string parameters	Body	Function	From the <code>smart_office_obs</code> application version
	GET	POST	PUT	DELETE				
<code>api/v1/sys/power</code>			yes		<code><state>=rebooting</code>	<code>""</code>	Reboot the device	1.10.11
<code>api/v1/software/version</code>	yes				None	i.e.: <code>{"value": "1.10.13"}</code>	Get the device delivery software version	1.10.11
<code>api/v1/software/label</code>	yes				None	<code>{"value": "bn0032_generic_server"}</code>	Get the device delivery software label	1.10.11
<code>api/v1/sys/sn</code>	yes					PSN Short representation: i.e.: <code>{"value": "01320-00004"}</code>	Get the device SN	1.10.11
<code>api/v1/sys/model-name</code>	yes				None	<code>{"value": "SBL10e"}</code>	Get the device model name	1.10.11
<code>api/v1/sys/mnufacturer</code>	yes				None	<code>{"value": "Qeedji"}</code>	Get the manufacturer	1.10.11
<code>api/v1/sys/mnufacturer-url</code>	yes				None	<code>{"value": "www.qeedji.tech"}</code>	Get Web Site of manufacturer	1.10.11
<code>api/v1/sys/uuid</code>	yes				None	Uuid string value: <code><uuid> = <psn>-<48x0>-<mnc>-48</code> i.e.: <code>{"value": "08400004-0000-0000-0000-001ce6024cad"}</code>	Get the device UUID	1.10.11
<code>api/v1/wpan1/mmc</code>	yes				None	Bluetooth MMC address value user formatted: i.e.: <code>{"value": "db:f0:8c:72:64:a3"}</code>	Get the device Bluetooth MMC address	1.10.11
<code>api/v1/leds/light</code>	yes				None	Get (plain text, separator CR): i.e.: <code>{"state": "steady", "color": "blue"}</code> <code><state>= off steady flashing</code> <code><color>=red orange blue yellow green</code>	Get busylight led color and state	1.10.11
<code>api/v1/sys/datetime</code>	yes				None	<code>{"value": "2021-08-11T06:09:58-02:30"}</code>	Get busylight date and time	1.10.11

Examples syntax with CURL tool:

- reboot the device:

```
curl --user "<USERNAME>:<PASSWORD>" -i -X PUT "http://<DEVICE_IP_ADDR>/api/v1/sys/power?state=rebooting"
```

- get device state & color:

```
curl --user "<USERNAME>:<PASSWORD>" -X GET "http://<DEVICE_IP_ADDR>/api/v1/leds/light"
```

- get device firmware version:

```
curl --user "<USERNAME>:<PASSWORD>" -X GET "http://<DEVICE_IP_ADDR>/api/v1/software/version"
```

6.2 Appendix: Qether

In case an application can not be executed, the SBL10e returns to a **Recovery** mode, waiting for firmware update.

The provided `qether` tool allows to make some remote operations on the SBL10e, based on its device MAC address like:

- SBL10e device firmware upgrade,
- SBL10e device configuration update,
- SBL10e device reboot.

The `<product_type>` is an extract of the device PSN value. For example, the `0132x-xxxx` PSN value leads to the `0132` `<product_type>`.

The `<SBL10e_device_MAC_address>` is the MAC address of the device with the format `00:1C:E6:AB:CD:EF`.

⚠ The MAC address of the device is written on the label stuck at the back of the SBL10e device with the format 00-1C-E6-AB-CD-EF .

Discover command example

This command allows to find out the SBL10e devices available on the local network:

```
qether.exe FF 0132 discover
```

Configuration command syntax

Send a `.js` configuration script and apply it (default parameters):

```
qether.exe <SBL10e_device_MAC_address> <product_type> configure -f configuration.js
```

- When using `Qether`, no specific filename pattern is required for the `.js` configuration script, except the `.js` file extension.
- The `system.httpd.username` preference value is limited to 15 characters max. The `system.httpd.password` preference value is limited to 100 characters max. The alphanumeric characters and the following characters `{ } | ~ [] ! # _ $ & () / ; < = @ | ^ % ? + ~ (, ' .` are supported for the `system.httpd.username` and `system.httpd.password` preference values.
- The `system.hostname` preference value is limited to 15 characters max. The alphanumeric characters, the character `-` and the character `.` are supported for the `system.hostname` preference value.
- To get an IP address with the DHCP server, set `system.lan1.ipv4.static-addr` with the value `false`. Else to work with a static IP address, set `system.lan1.ipv4.static-addr` with the value `true`.

Reboot command syntax

Reboot the target device:

```
qether.exe <SBL10e_device_MAC_address> <product_type> reboot
```

Firmware upgrade command syntax

Send a firmware file, with default transfer parameters, and install it. For example:

```
qether.exe <SBL10e_device_MAC_address> <product type> install -f bm0032_smart_office_obs-sbl10e-setup-1.11.12.bin
```

- Qether needs first to be installed first on your MS-Windows computer. For further information, refer to the [Qether user manual](#).

6.3 Appendix: Device configuration with TFTP server (+ DHCP server code 66)

The SBL10e device can be configured thanks to a .js configuration script (Javascript) hosted on a TFTP ¹ server associated to a DHCP server (code 66 option) properly configured and available on the local network.

¹ Trivial File Transfer Protocol


The .js configuration script downloading can be done as soon as a DHCP server is available, even whether the device is configured with a static IP address. Once connected to the DHCP server, the device can get:


- the IP address value of its network interface, when the option Obtain IP address automatically by DHCP is activated then,
- the primary DNS value when the system.lan1.dns.static user preference is false then,
- the .js configuration script from the TFTP server when the system.tftp.enable user preference is true.

Prerequisites:

- the appropriate .js configuration script must be is available in the exported directory of the TFTP server . It must:
 - be suitable for the device, its firmware type and its firmware version,
 - match an appropriate filename pattern:
 - 000000000000.js or,
 - <device_LAN1_MAC_address>.js (with the format ABCDEFABCDEF.js).

When a .js configuration script is modified on the TFTP server, the device must be restarted once so that the new configuration script is taken into account by the device.

 When using a TFTP server, the configuration.js filename pattern is not supported.


 The downloading of a .js configuration script from a TFTP server can be done only at the device booting-up and when the device has never downloaded it before or when the script content has been modified since the last download (CRC check).

DHCP server configuration

The DHCP server must be configured to be associated to a TFTP server. For that, you need to use code 66 option (TFTP Server), using the IPv4 address value of the TFTP server.

For example, for a Microsoft DHCP server , you need to define the option Boot Server Host Name and give the IPv4 address of the TFTP server. It can be in Extended option and/or Server Options.

 The service must be restarted so that the modifications are fully reflected.

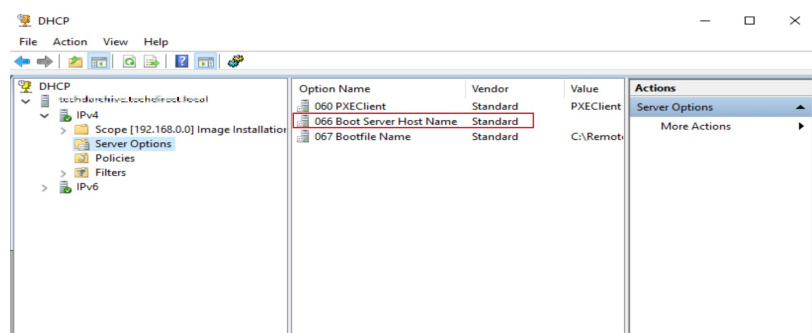


TFTP server configuration

The configuration is depending on the used software client. In all cases, you need to:

- get the directory URL that can be seen by TFTP clients,
- choose a TFTP security None,
- keep the default port (69).

Here is an example of the tftpd32 software with MS-Windows.

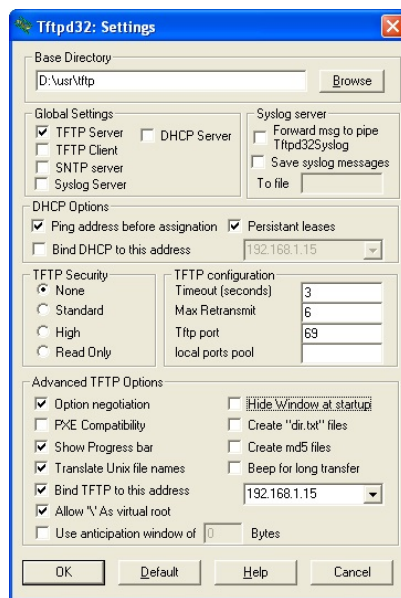

In this example, the TFTP server address is 192.168.1.15 and the exported directory is D:/usr/tftp.

☛ In this pane, enter the IP address of the TFTP server. Indeed entering the TFTP server domain name may prevent the feature to work properly.

Copy the .js configuration script in the exported directory of the TFTP server.

☛ It is recommended to have one .js configuration script per device by following the pattern <MAC>.js.

6.4 Appendix: Devices configuration using Powershell

Your park of Qeedji devices can be configured and maintained using the `PSDevice` Powershell module.

Introduction

This set of *Powershell* functions allows to:

for AQS devices :

- retrieve general information of device, with the `Get-AqsInfos` , functions,
- to retrieve all installed APPs, with the `Get-AqsApps` function,
- install new App with the `Install-AqsApp` function,
- remove an App with the `Remove-AqsApp` function,
- restart new App with the `Restart-AqsApp` function,
- stop new App with the `Stop-AqsApp` function,
- install a new firmware with the `Install-AqsFirmware` function.
- install a configuration script with the `Install-AqsConfiguration` function.

for Bm0032 devices :

- retrieve general information of device, with the `Get-Bm0032Infos` , functions,
- install a new firmware with the `Install-Bm0032Firmware` function.
- install a configuration script with the `Install-Bm0032Configuration` function.

for Gekkota devices :

- retrieve general information of device, with the `Get-GtkInfos` , functions,
- install a new firmware with the `Install-GtkFirmware` function,
- install a configuration script with the `Install-GtkConfiguration` function.

These functions are defined in the `PSDevice` PowerShell module stored in the `Modules\PSDevice\` directory.

Security

By default, the execution of local *Powershell* scripts are not allowed. You can change their execution rights by changing the *PowerShell* security policy. This modification has to be done once with the `Set-ExecutionPolicy` *Powershell* function. Your organization may have to change it according to your security rules.

For example, to authorize the execution of all scripts, launch a *Powershell* console with administrator rights, and type:

```
PS > Set-ExecutionPolicy -ExecutionPolicy Unrestricted -scope CurrentUser
```

For further information, look at the cmdlet `Set-ExecutionPolicy` help page.

If you cannot allow the execution of unsigned local scripts, you can install the provided certificate in the list of authorized root certificates with the command:

```
PS > cd <your_path_to_the_scripts>\Powershell_Innes_Device\Certificate\  
PS > Import-PfxCertificate -FilePath InnesCodeSigningRootCA_1.pfx -CertStoreLocation  
cert:\CurrentUser\Root -Password $(ConvertTo-SecureString "1234" -AsPlainText -Force)
```

To import the *.pfx* certificate, you can also use the MS-Windows application `certmgr.msc` , select the *Trusted Root Certification Authorities* , right clic on *ALL Tasks* , select the *Import* item, select the file and enter the password *1234* . When ended, close the current *Powershell* console.

Usage

To use Device *Powershell* modules, you have 3 possibilities:

1. Either copy the directories under `Modules\` into a standard *Powershell* module installation directory, for example "C:\Program Files\WindowsPowerShell\Modules". Then launch a *Powershell* console
2. Redefine the search variable for *Powershell* modules (the `$Env:PSModulePath` *Powershell* variable) each time you will use theses functions. In this case, launch a *Powershell* console, and type the line below, adapting it to your path. Each time you will launch a new *Powershell* console, you will have to enter it again

For example:

```
PS > $Env:PSModulePath="$Env:PSModulePath;<your_path_to_the_scripts>\Powershell_Innes_Device\Modules"
```

3. Or redefine the search variable for *Powershell* modules in the Windows environment variables. For that, add the path `<your_path_to_the_scripts>\Powershell_Innes_Device\Modules` to the environment variable `PSModulePath` . Then, launch afterwards a *Powershell* console.

To use the functions or get help, you must then import the module(s) with the `Import-Module` function. Example:

```
PS > Import-Module PSDevice
```

Depending on how your get the scripts, you may have this following warning:

```
Security Warning Run only scripts that you trust. While scripts from the Internet can be useful,
this script can potentially harm your computer. Do you want to run \device\scripts\my.ps1?
[D] Do not run [R] Run once [S] Suspend [?] Help (default is "D"):
```

To avoid this message, you can unblock the script files (to do only once):

```
PS > cd <your_path_to_the_scripts>\Powershell_Innes_Device\
PS > dir -Recurse | Unblock-File
```

The `Get-Command` function allows you to list the functions defined in a module. Example:

```
PS > Get-Command -Module PSDevice
```

Answer example:

CommandType	Name	Version	Source
Function	Disable-AqsApp	1.10.10	PSDevice
Function	Enable-AqsApp	1.10.10	PSDevice
Function	Get-AqsApps	1.10.10	PSDevice
Function	Get-AqsInfos	1.10.10	PSDevice
Function	Get-Bm0032Infos	1.10.10	PSDevice
Function	Get-GktInfos	1.10.10	PSDevice
Function	Install-AqsApp	1.10.10	PSDevice
Function	Install-AqsConfiguration	1.10.10	PSDevice
Function	Install-AqsFirmware	1.10.10	PSDevice
Function	Install-Bm0032Configuration	1.10.10	PSDevice
Function	Install-Bm0032Firmware	1.10.10	PSDevice
Function	Install-GktConfiguration	1.10.10	PSDevice
Function	Install-GktFirmware	1.10.10	PSDevice
Function	LogWrite	1.10.10	PSDevice
Function	Remove-AqsApp	1.10.10	PSDevice
Function	Restart-AqsApp	1.10.10	PSDevice
Function	Stop-AqsApp	1.10.10	PSDevice
Function	Test-AqsDevice	1.10.10	PSDevice
Function	Test-Bm0032Device	1.10.10	PSDevice
Function	Test-GktDevice	1.10.10	PSDevice

You can get help on each function of the module by using the standard cmdlet `Get-Help` with options:

- `-detailed` ,
- `-full` ,
- `-examples` .

Example:

```
PS > Get-Help -detailed Install-AqsApp
```

Examples

To use the examples, copy the directories `Examples\` into a standard *Powershell* module installation directory, for example "C:\Program Files\WindowsPowerShell\Modules".

In the directory `Examples`, you can find different powershell scripts which uses the functions of the modules.

You can get help on each example scripts, for example:

```
PS > Get-Help -detailed .\Examples\Example1\Get-DevicesInfos.ps1
```

Example 1: Get-DevicesInfos

The script `Examples\Example1\Get-DevicesInfos` is an example to retrieve informations about a pool of devices described in a json file. It uses the module `PSDevice`.

Example:

```
PS > cd <your_path_to_the_scripts>\Examples\Example1\  
PS > .\Get-PSDevice.ps1 -LogFile result.json
```

If any error occurs, look at the logfile (`result.json` in the example) to see what the problem may be.

This is an example of report:

```
[  
  {  
    "host": "192.168.0.74",  
    "info": {  
      "Psn": "01540-00657",  
      "Platform": "AMP300",  
      "Version": "9.10.19",  
      "Hostname": "AMP300-floor1",  
      "runningApps": [  
        {  
          "Label": "PowerPoint Publisher",  
          "Version": "1.15.10"  
        },  
        {  
          "Label": "PowerPoint Publisher UI",  
          "Version": "1.15.10"  
        }  
      ]  
    }  
  },  
  {  
    "host": "192.168.0.92",  
    "info": {  
      "Psn": "01320-00039",  
      "Hostname": "sbl10-floor2",  
      "Firmware": "bm0032_m365_user-sbl10e-1.12.10",  
      "Platform": "SBL10e"  
    }  
  },  
  {  
    "host": "192.168.0.91",  
    "info": {  
      "Psn": "00910-00216",  
      "Hostname": "DMB400-hall1",  
      "FirmwareVersion": "5.11.13",  
      "Platform": "dmb400"  
    }  
  },  
  {  
    "host": "192.168.10.91",  
    "error": "Not responding"  
  }  
]
```

Example 2.1: upgrade firmware

The script `Examples\Example1\Install-Devices` is an example to install firmware, an app, or a configuration script on a pool of devices described in a json file. The type of component to install is specified with the `-installType` option which can be "install", "app" or "configuration". The components to be installed are stored in the directory specified by the `"installDirPath"` option. Each type of device has an associated subdirectory:

- `aqs` for Aqs device,
- `gekkota` for Gekkota device,
- `bm0032` for Bm0032 device.

It uses the module `PSDevice`.

Open the `Examples\Example2\devices.json` and update with the values corresponding to the devices concerned:

- IPV4 adress,
- WebDAV server login,
- WebDAV server password.

In case you wish to upgrade the firmware of your park of AQS devices, do copy the appropriate firmware .fqs into the following directory:

- `Examples\Example2\install\aq\`

In case you wish to upgrade the firmware of your park of Gekkota devices, do copy the appropriate firmware .frm into the following directory:

- `Examples\Example2\install\gekkota\`

In case you wish to upgrade the firmware of your park of Bm0032 devices, do copy the appropriate firmware .bin into the following directory:

- `Examples\Example2\install\bm0032\`

Command line example:

```
PS > cd <your_path_to_the_scripts>\Examples\Example2\  
PS > .\Install-Devices.ps1
```

If any error occurs, look at the logfile (`result.json` in the example) to see what the problem may be.

Example 2.2: change device configuration

In case you wish to change the configuration of your park of AQS devices, do copy the appropriate `<MAC>.js` configuration script into the following directory:

- `Examples\Example2\install\aq\`

In case you wish to change the configuration of your park of Gekkota devices, do copy the appropriate `<MAC>.js` configuration script into the following directory:

- `Examples\Example2\install\gekkota\`

In case you wish to change the configuration of your park of Bm0032 devices, do copy the appropriate `<MAC>.js` configuration script into the following directory:

- `Examples\Example2\install\bm0032\`

Copy the `Install-Devices.ps1` file, paste it in the same directory and rename it `Configure-Devices.ps1`. Replace in it the part `[string] $installType = "install"`, by the part `[string] $installType = "configuration"`,

Open the `Examples\Example2\devices.json` and update with the values corresponding to the devices concerned:

- IPV4 adress,
- WebDAV server login,
- WebDAV server password.

Example 2.3: install APK

In case you wish to install some APK in your park of AQS devices, do copy the appropriate .apk into the following directory:

- `Examples\Example2\install\aq\`

Copy the `Install-Devices.ps1` file, paste it in the same directory and rename it `InstallApk-Devices.ps1`. Replace in it the part `[string] $installType = "install"`, by the part `[string] $installType = "app"`,

Open the `Examples\Example2\devices.json` and update with the values corresponding to the devices concerned:

- IPV4 adress,
- WebDAV server login,
- WebDAV server password.