

Digital Storage Oscilloscope

VOLTCRAFT®

DSO 4022 / 4042 / 4062 / 4102

Bestell Nr. 122460/122461/122462/122463

© Impressum

Diese Bedienungsanleitung ist eine Publikation von Voltcraft®, 92242 Hirschau, Lindenweg 15, Tel.-Nr. 0180/586 852 723 8.

Alle Rechte einschließlich Übersetzung vorbehalten. Reproduktionen jeder Art, z.B. Fotokopie, Mikroverfilmung, oder die Erfassung in elektronischen Datenverarbeitungsanlagen, bedürfen der schriftlichen Genehmigung des Herausgebers.

Nachdruck, auch auszugsweise, verboten.

Diese Bedienungsanleitung entspricht dem technischen Stand bei Drucklegung. Änderung in Technik und Ausstattung vorbehalten.

© Copyright 2008 by Voltcraft

Table of Contents

SAFETY INSTRUCTION	6
Safety Symbols	6
Safety Guidelines	7
Power cord for the United Kingdom	9
GETTING STARTED	10
Main Features	10
Panel Overview	11
Front Panel	11
Rear Panel	14
Display	15
Setting up the Oscilloscope	16
QUICK REFERENCE	18
Menu Tree and Shortcuts	18
Acquire key	18
Autoset key	19
CH1/2 key	19
Cursor key 1/2	19
Cursor key 2/2	20
Display key	20
Hardcopy key	21
Help key	21
Horizontal menu key	21
Math key 1/2	22
Math key 2/2	22
Measure key	23
Run/Stop key	23
Save/Recall key 1/9	24
Save/Recall key 2/9	24
Save/Recall key 3/9	25
Save/Recall key 4/9	25
Save/Recall key 5/9	26
Save/Recall key 6/9	26
Save/Recall key 7/9	27
Save/Recall key 8/9	27
Save/Recall key 9/9	28
Trigger key 1/4	28

TABLE OF CONTENTS

Trigger key 2/4	29
Trigger key 3/4	29
Trigger key 4/4	30
Utility key 1/4	30
Utility key 2/4	31
Utility key 3/4	31
Utility key 4/4	31
Default Settings	32
Built-in Help	33
MEASUREMENT	34
Basic Measurements	34
Activating a channel	34
Using the Autoset	35
Running and stopping the trigger	36
Changing the horizontal position and scale	37
Changing the vertical position and scale	38
Using the probe compensation signal	39
Automatic Measurements	41
Measurement items	41
Automatically measuring the input signals	43
Cursor Measurements	44
Using the horizontal cursors	44
Using the vertical cursors	45
Math Operations	46
Overview	46
Adding or subtracting signals	47
Using the FFT function	48
CONFIGURATION	49
Acquisition	49
Selecting the acquisition mode	49
Real time vs Equivalent time sampling mode	51
Display	52
Selecting the vector or dot drawing	52
Accumulating the waveform	52
Adjusting the display contrast	53
Selecting the display grid	53
Horizontal View	54
Moving the waveform position horizontally	54
Selecting the horizontal scale	54
Selecting the waveform update mode	55

TABLE OF CONTENTS

Zooming the waveform horizontally	56
Viewing waveforms in the X-Y mode	57
Vertical View (Channel)	58
Moving the waveform position vertically	58
Selecting the vertical scale	58
Selecting the coupling mode	58
Inverting the waveform vertically	59
Limiting the waveform bandwidth	59
Selecting the probe attenuation level	60
Trigger	61
Trigger type	61
Trigger parameter	61
Configuring the edge trigger	63
Configuring the video trigger	65
Configuring the pulse width trigger	66
Manually triggering the signal	68
Remote Control Interface	69
System Settings	70
Viewing the system information	70
Selecting the language	70
SAVE/RECALL	71
File Structures	71
Display image file format	71
Waveform file format	71
Setup file format	73
Using the SD card file utilities	74
Quick Save (HardCopy)	76
Save	78
File type/source/destination	78
Saving the panel settings	79
Saving the waveform	80
Saving the display image	81
Saving all (panel settings, display image, waveform)	82
Recall	84
File type/source/destination	84
Recalling the default panel settings	84
Recalling a reference waveform to the display	86
Recalling panel settings	87
Recalling a waveform	88

MAINTENANCE	90
Vertical Resolution Calibration.....	90
Probe Compensation	91
FAQ	93
The input signal does not appear in the display.....	93
I want to remove some contents from the display.....	93
The waveform does not update (frozen).....	93
The probe waveform is distorted.....	94
Autoset does not catch the signal well.....	94
I want to clean up the cluttered panel settings.	94
The saved display image is too dark on the background....	94
The accuracy does not match the specifications.....	94
The SD card slot does not accept my card.....	94
APPENDIX	95
Fuse Replacement	95
DSO-4000 Series Specifications	96
Model-specific specifications	96
Common specifications	97
Probe Specifications.....	99
DSO-4022/4042 Probe	99
DSO-4062/4102 Probe	99
Declaration of Conformity	100
INDEX	101

S SAFETY INSTRUCTION

This chapter contains important safety instructions that should be followed when operating and storing the oscilloscope. Read the following before any operation to ensure your safety and to keep best condition for the oscilloscope.

Safety Symbols

These safety symbols may appear in this manual or on the oscilloscope.



WARNING

Warning: Identifies conditions or practices that could result in injury or loss of life.



CAUTION

Caution: Identifies conditions or practices that could result in damage to the oscilloscope or to other objects or property.



DANGER High Voltage



Attention: Refer to the Manual



Protective Conductor Terminal



Earth (Ground) Terminal

Safety Guidelines

General Guideline



CAUTION

- Make sure the BNC input voltage does not exceed 300V peak.
- Never connect a hazardous live voltage to the ground side of the BNC connectors. It might lead to fire and electric shock.
- Do not place heavy objects on the oscilloscope.
- Avoid severe impacts or rough handling that may damage the oscilloscope.
- Avoid discharges of static electricity on or near the oscilloscope.
- Use only mating connectors, not bare wires, for the terminals.
- Do not block the cooling fan opening.
- Do not perform measurement at power source and building installation site (Note below).
- The oscilloscope should only be disassembled by a qualified technician.

(Measurement categories) EN 61010-1:2001 specifies the measurement categories and their requirements as follows. The DSO-4000 falls under category II.

- Measurement category IV is for measurement performed at the source of low-voltage installation.
- Measurement category III is for measurement performed in the building installation.
- Measurement category II is for measurement performed on the circuits directly connected to the low voltage installation.
- Measurement category I is for measurements performed on circuits not directly connected to Mains.

Power Supply



WARNING

- AC Input voltage: 100 ~ 240V AC, 47 ~ 63Hz
 - The power supply voltage should not fluctuate more than 10%.
 - Connect the protective grounding conductor of the AC power cord to an earth ground.
-

Fuse



WARNING

- Fuse type: T1A/250V
- To ensure fire protection, replace the fuse only with the specified type and rating.
- Disconnect the power cord before replacing the fuse.
- Make sure the cause of fuse blowout is fixed before replacing the fuse.

Cleaning the oscilloscope

- Disconnect the power cord before cleaning the oscilloscope.
- Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid into the oscilloscope.
- Do not use chemical containing harsh products such as benzene, toluene, xylene, and acetone.

Operation Environment

- Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)
- Relative Humidity: < 80%
- Altitude: < 2000m
- Temperature: 0°C to 50°C

(Pollution Degree) EN 61010-1:2001 specifies the pollution degrees and their requirements as follows. the oscilloscope falls under degree 2.

Pollution refers to "addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity".

- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
 - Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
 - Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.
-

- | | |
|---------------------|---|
| Storage environment | <ul style="list-style-type: none"> • Location: Indoor • Relative Humidity: < 85% • Temperature: 0°C to 50°C |
|---------------------|---|

Power cord for the United Kingdom

When using the oscilloscope in the United Kingdom, make sure the power cord meets the following safety instructions.

NOTE: This lead/appliance must only be wired by competent persons



WARNING: THIS APPLIANCE MUST BE EARTHED

IMPORTANT: The wires in this lead are coloured in accordance with the following code:

Green/ Yellow:	Earth
Blue:	Neutral
Brown:	Live (Phase)



As the colours of the wires in main leads may not correspond with the colours marking identified in your plug/appliance, proceed as follows:
The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with the letter E or by the earth symbol or coloured Green or Green & Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.

The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.

If in doubt, consult the instructions provided with the equipment or contact the supplier.

This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details. As a guide, cable of 0.75mm² should be protected by a 3A or 5A fuse. Larger conductors would normally require 13A types, depending on the connection method used.

Any moulded mains connector that requires removal /replacement must be destroyed by removal of any fuse & fuse carrier and disposed of immediately, as a plug with bared wires is hazardous if engaged in live socket. Any re-wiring must be carried out in accordance with the information detailed on this label.

GETTING STARTED


The Getting started chapter introduces the oscilloscope's main features, appearance, and set up procedure.

Main Features

Model name	Frequency bandwidth	Input channels
DSO-4022	DC – 25MHz (–3dB)	2
DSO-4042	DC – 40MHz (–3dB)	2
DSO-4062	DC – 60MHz (–3dB)	2
DSO-4102	DC – 100MHz (–3dB)	2
Performance	<ul style="list-style-type: none"> • 250MSa/S real-time sampling rate • 25GS/s equivalent-time sampling rate • Up to 10ns peak detection 	
Feature	<ul style="list-style-type: none"> • 5.6 inch color TFT display • Saving and recalling setups and waveforms • 19 automatic measurements • Multi-language menu • Math operation: Add, Subtract, FFT • Edge, video, pulse width trigger • Compact size: (W) 310 x (D) 140 x (H) 142 mm 	
Interface	<ul style="list-style-type: none"> • SD card connector for saving and recalling data • Calibration output • External trigger input 	


Panel Overview


Front Panel

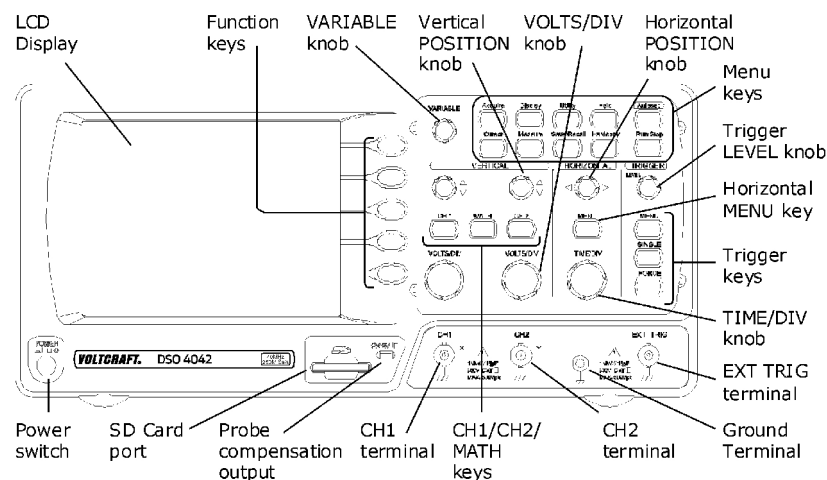


LCD display TFT color, 320 x 234 resolution, wide angle view LCD display.

Function keys:
F1 (top) to
F5 (bottom)  Activates the functions which appear in the left side of the LCD display.













Variable knob  Increases or decreases value and moves to the next or previous parameter.









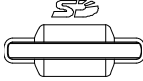

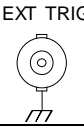

Acquire key  Configures the acquisition mode (page49).

Display key  Configures the display settings (page52).


Cursor key  Runs cursor measurements (page44).

(Continued on next page)

Utility key		Configures the Hardcopy function (page76), shows the system status (page68), selects the menu language (page70), runs the self calibration (page90), and configures the probe compensation signal(page91).
Help key		Shows the Help contents on the display (page33).
Autoset key		Automatically configures the horizontal, vertical, and trigger settings according to the input signal (page35).
Measure key		Configures and runs automatic measurements (page41).
Save/Recall key		Saves and recalls image, waveform, or panel settings (page71).
Hardcopy key		Copies image, waveform, or panel settings to an SD card (page76).
Run/Stop key		Runs or stops triggering (page36).
Trigger level knob		Sets the trigger level (page61).
Trigger menu key		Configures the trigger settings (page61).
Single trigger key		Selects the single trigger mode (page68).
Trigger force key		Acquires the input signal once regardless of the trigger condition at the time (page68).
Horizontal menu key		Configures the horizontal view (page54).

Horizontal position knob		Moves the waveform horizontally (page54).
TIME/DIV knob		Selects the horizontal scale (page54).
Vertical position knob		Moves the waveform vertically (page58).
CH1/CH2 key		Configures the vertical scale and coupling mode for each channel (page58).
VOLTS/DIV knob		Selects the vertical scale (page58).
Input terminal		Accepts input signals: $1M\Omega \pm 2\%$ input impedance, BNC terminal.
Ground terminal		Accepts the DUT ground lead to achieve a common ground.
MATH key		Performs math operations (page46).
SD card connector		Facilitates transferring waveform data, display image, and panel settings (page71).
Probe compensation output		Outputs a 2Vp-p, square signal for compensating the probe (page91) or demonstration.
External trigger input		Accepts an external trigger signal (page61).
Power switch		Powers the oscilloscope on or off.

Rear Panel

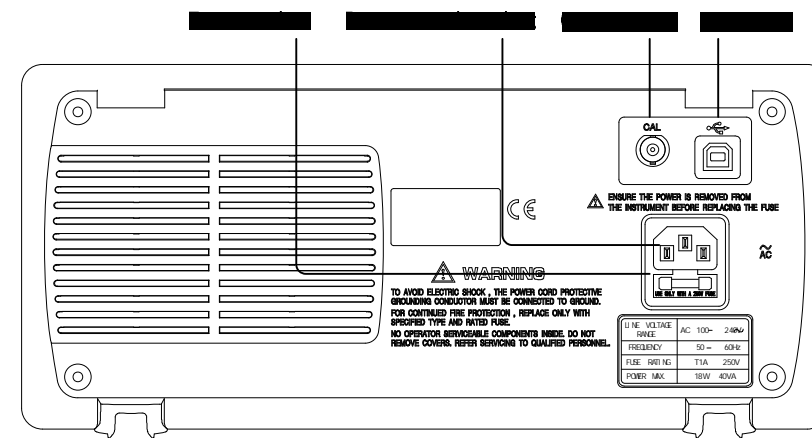

Power cord socket

Power cord socket accepts the AC mains, 100 ~ 240V, 50/60Hz.

Fuse socket

Fuse socket holds the AC main fuse, T1A/250V.

For fuse replacement procedure, see page95.

USB slave port



Accepts a type B (slave) male USB connector for remote controlling the oscilloscope (page69).


Calibration output



Outputs the calibration signal used in vertical scale accuracy calibration (page90).

Display

Waveform marker Waveform position Trigger status Acquisition

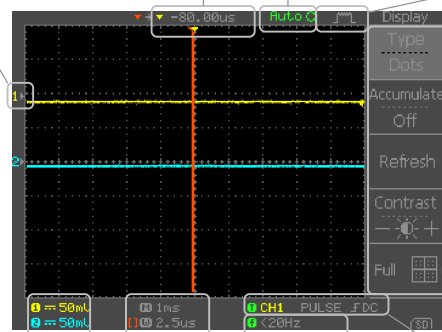

Menu

Vertical status Horizontal status Frequency Trigger condition

Waveforms	Channel 1: Yellow	Channel 2: Blue
Trigger status	Trig'd	A signal is being triggered
	Trig?	Waiting for a trigger condition
	Auto	Updating the input signal regardless of trigger conditions
	STOP	Triggering is stopped
	For trigger setting details, see page61.	
Input signal frequency	Updates the input signal frequency (the trigger source signal) in real-time. " < 20Hz " Indicates that the signal frequency is less than the lower frequency limit (20Hz) and thus not accurate.	
Trigger configuration	Shows the trigger source, type, and slope. In case of the Video trigger, shows the trigger source and polarity.	
Horizontal status	Shows the channel configurations: coupling mode, vertical scale, and horizontal scale.	
Vertical status		


Setting up the Oscilloscope

Background

This section describes how to set up the oscilloscope properly including connecting a signal, adjusting the scale, and compensating the probe. Before operating the oscilloscope in a new environment, run these steps to make sure the oscilloscope is functionally stable.

Procedure


1. Connect the power cord.



2. Press the power switch. The display will become active in approximately 10 seconds.




3. Reset the system by recalling the factory settings. Press the Save/Recall key, then *Default Setup*. For details of factory settings, see page32.



4. Connect the probe between the Channel1 input terminal and probe compensation signal output (2Vp-p, 1kHz square wave).



5. Set the probe attenuation to x10.

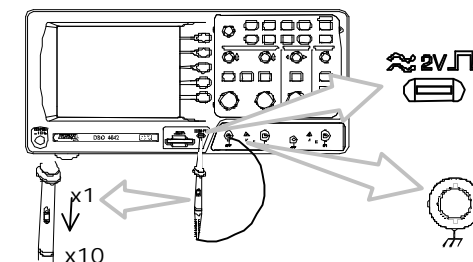



- Press the Autoset key. A square waveform will appear in the center of the display. For details of the Autoset, see page35.



- Press the Display key, then Type and select the vector waveform.

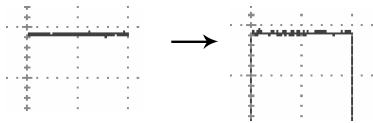

- Turn the adjustment point on the probe to flatten the square waveform edge.

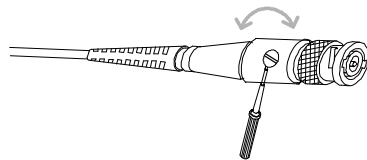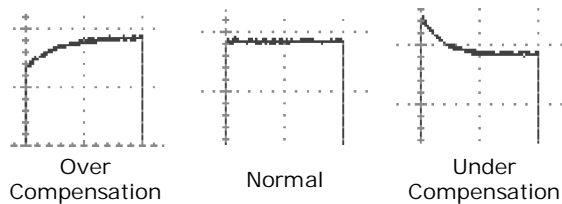

- Setting up the oscilloscope is completed. You may continue with the other operations.
Measurements: page34 Configurations: page49

QUICK REFERENCE

This chapter lists the oscilloscope menu tree, operation shortcuts, built-in help coverage, and default factory settings. Use this chapter as a handy reference to access the oscilloscope functionalities.

Menu Tree and Shortcuts

Normal = Press the functional key for "Normal"

Average ⇐ = Repeatedly press the functional key for "Average"

Normal ~ Average = Select a menu from "Normal" to "Average" and press its functionality key

Normal → VAR ○ = Press the functionality key for "Normal", and then use the Variable knob

Acquire key

Acquire



Select acquisition mode

Normal ~ Peak-Detect

Normal

Average

Select average number

Average ⇐

Peak Detect

2/ 4/ 8/ 16/ 32/
64/ 128/ 256

Sample Rate

Autoset key




Automatically find signal and set scale Autoset

CH1/2 key



Turn channel on/off

CH 1/2

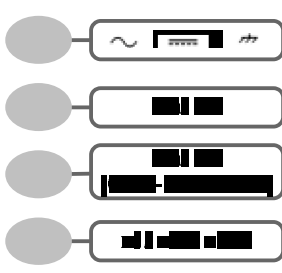

Select coupling mode

Coupling

Invert waveform

Invert

Turn bandwidth limit on/off

BW Limit

Select probe attenuation factor


Probe

Cursor key 1/2



Turn cursor on/off

Cursor



Move X1 cursor

X1 → VAR

Move X2 cursor

X2 → VAR

Move both X1 and X2 cursor

X1X2 → VAR

Switch to Y cursor



X ↔ Y

Cursor key 2/2



Turn cursor on/off

Cursor

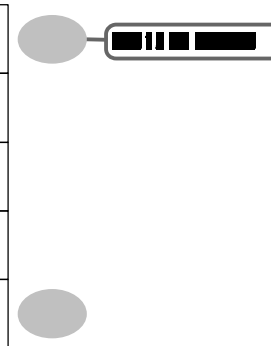

Move Y1 cursor

Y1 → VAR

Move Y2 cursor

Y2 → VAR

Move both Y1 and Y2 cursor

Y1Y2 → VAR

Switch to X cursor


X ↔ Y

Display key



Select waveform type

Type

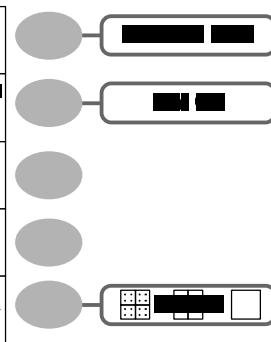

Waveform accumulate On/Off

Accumulate


Refresh accumulation

Refresh


Set display contrast

Contrast → VAR


Select display grid




Hardcopy key




Help key

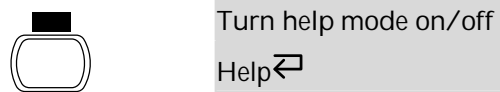


Horizontal menu key

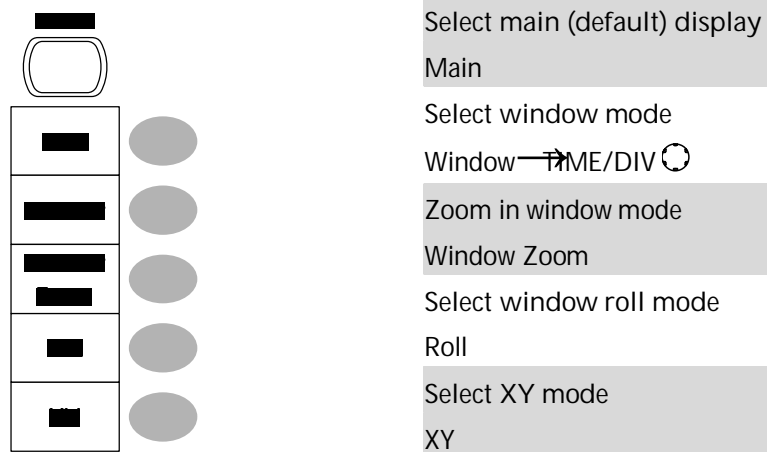


Math key 1/2

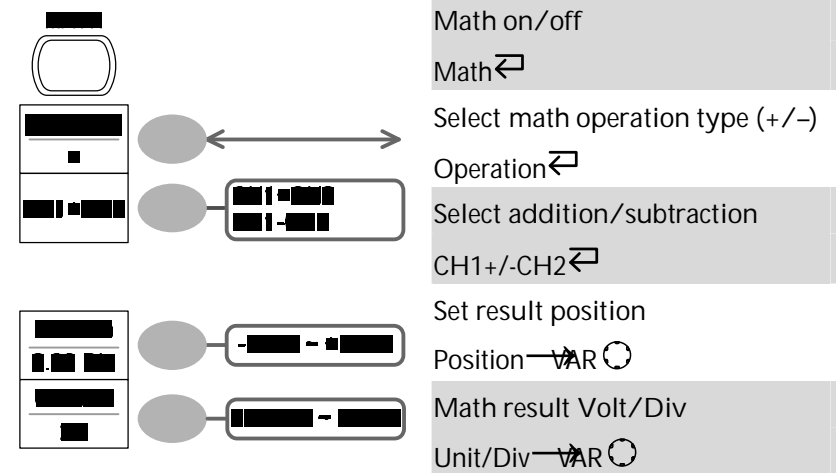

Math key 2/2

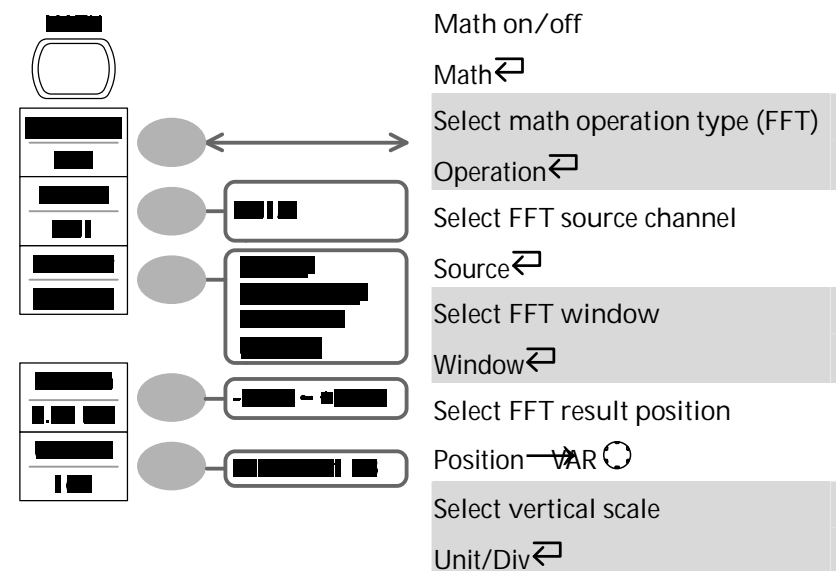


Measure key

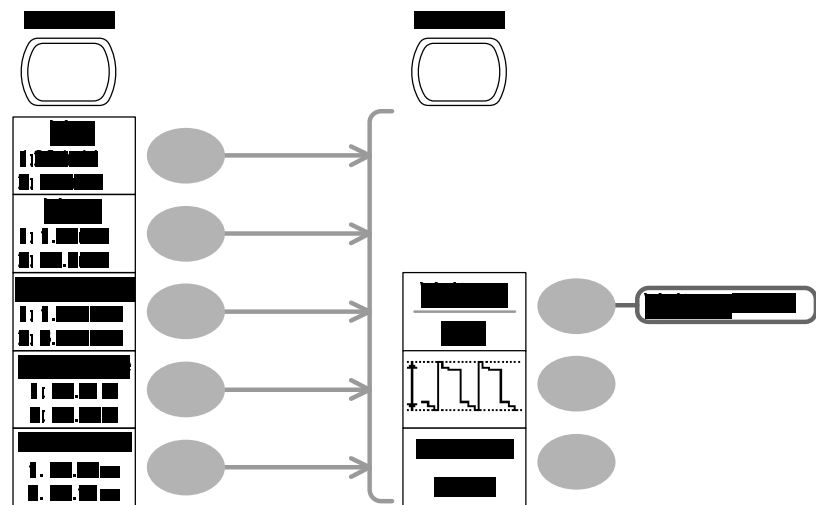


- Turn on/off measurement Measure ↩
- Select measurement type Voltage/Time ↩
- Select measurement item VAR ○ or Icon ↩
- Go back to previous menu Previous Menu

Run/Stop key

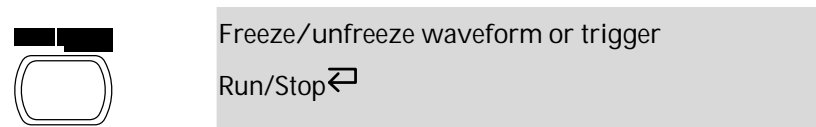


Save/Recall key 1/9

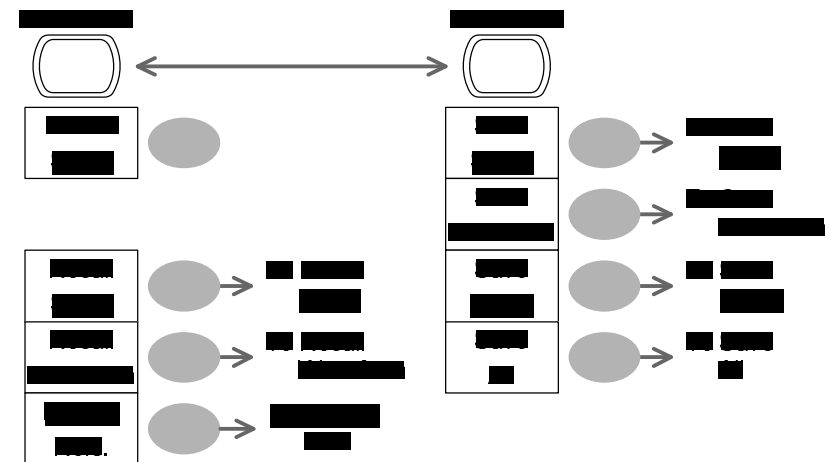


- Switch to Save or Recall menu Save/Recall ↩
- Recall default setup Default Setup


Save/Recall key 2/9

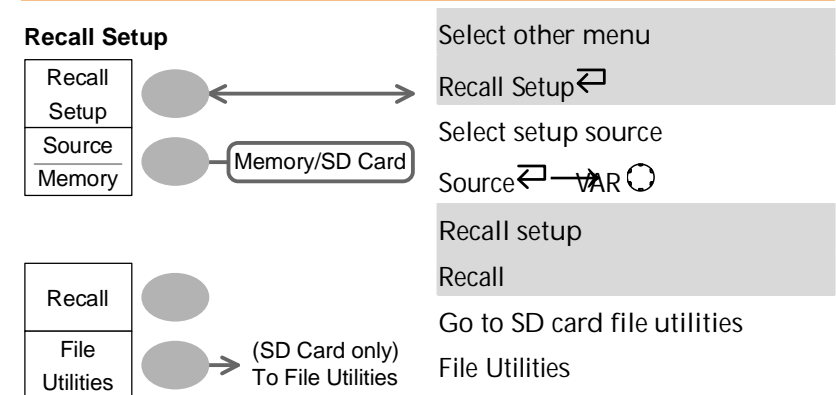


Save/Recall key 3/9

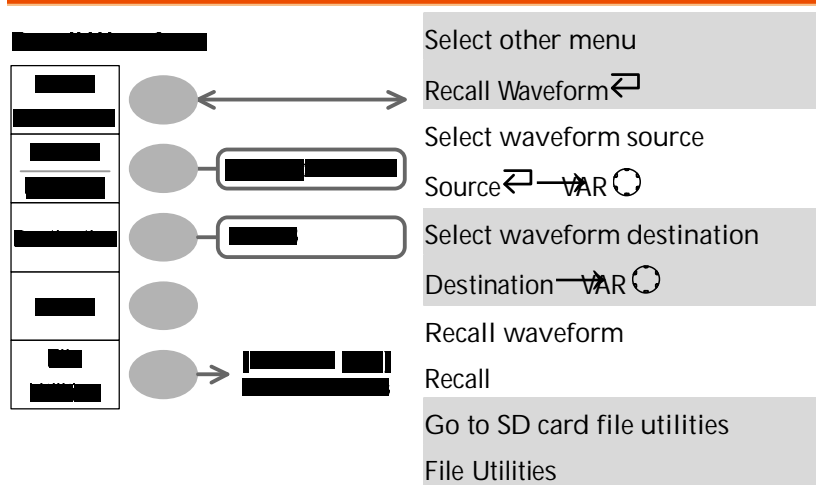


Save/Recall key 4/9

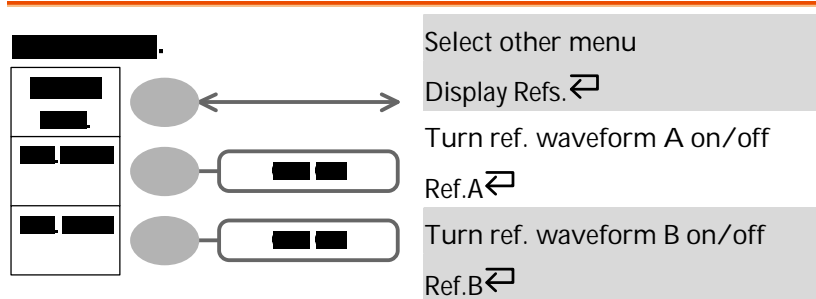


Save/Recall key 5/9

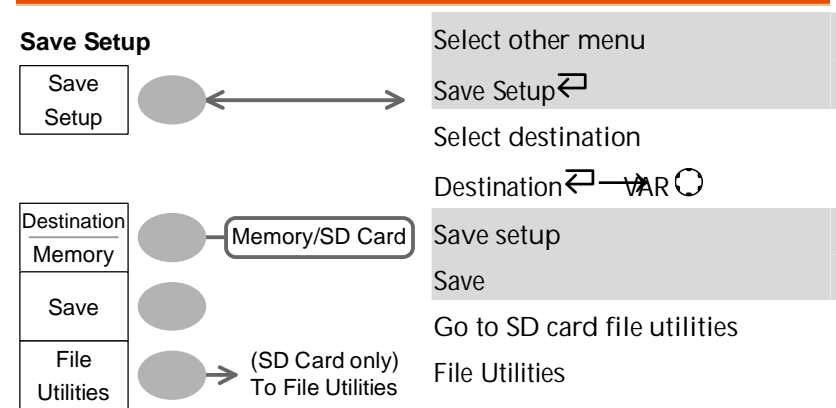


Save/Recall key 6/9

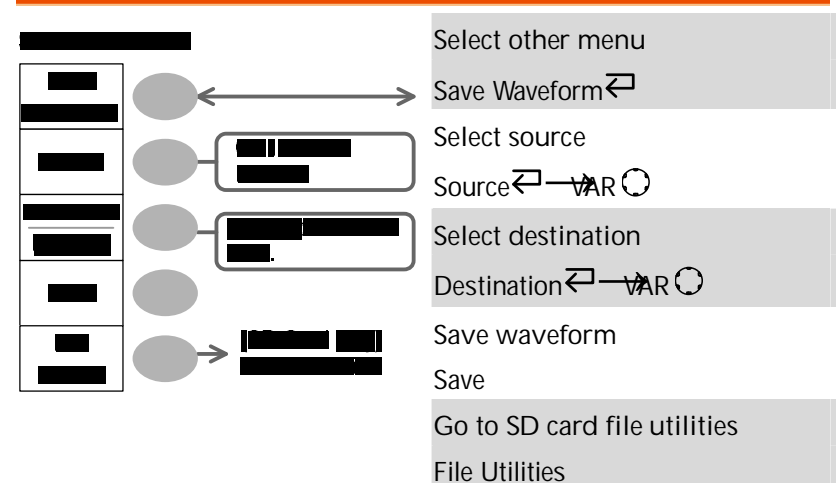


Save/Recall key 7/9

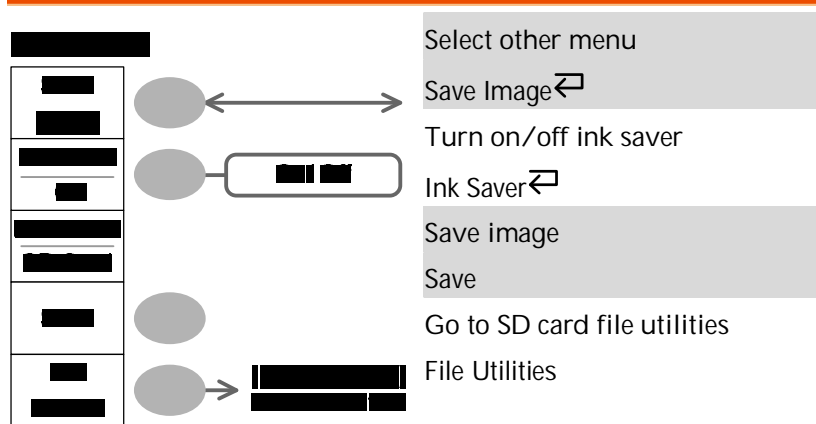


Save/Recall key 8/9

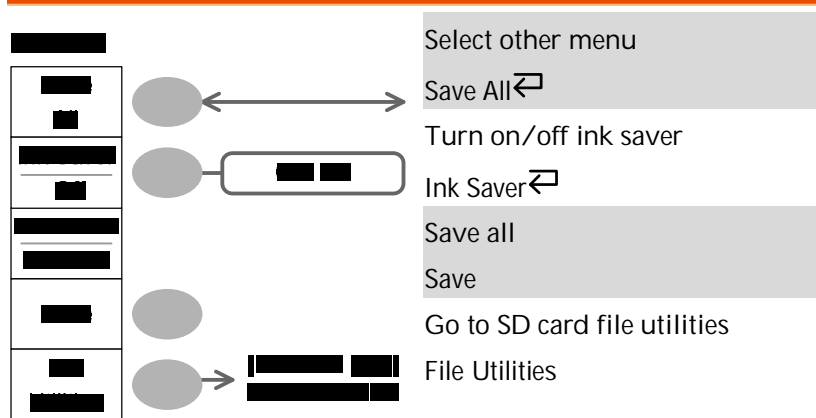

Save/Recall key 9/9

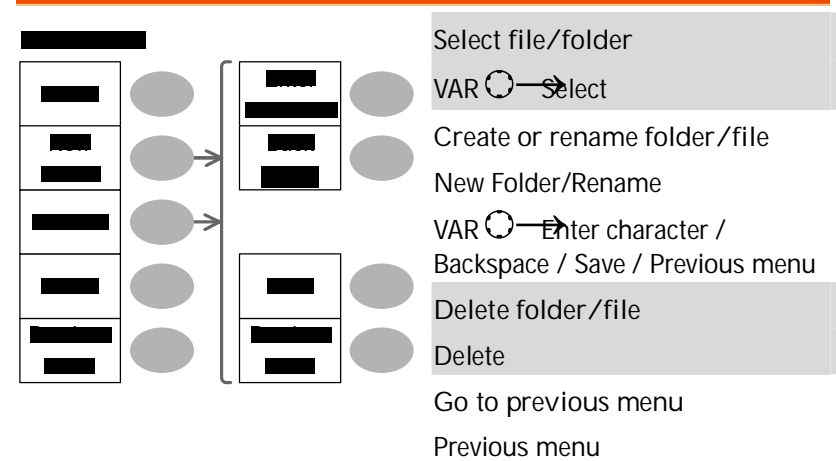


Trigger key 1/4

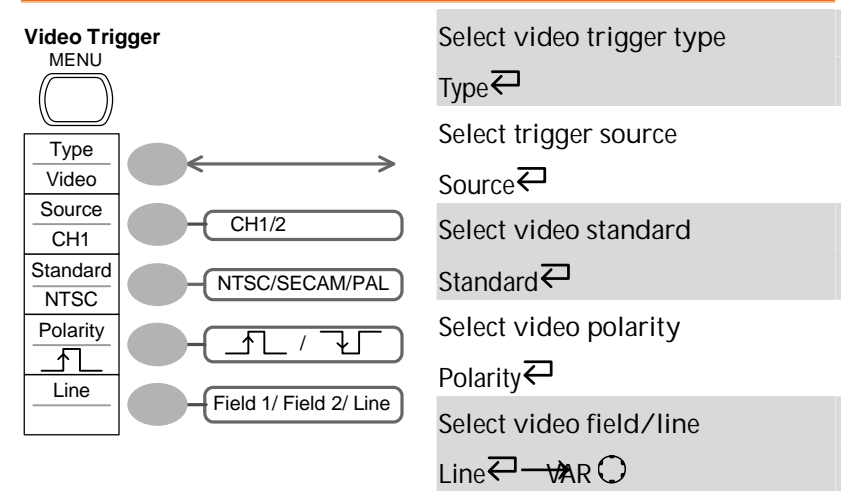


Trigger key 2/4


Edge Trigger

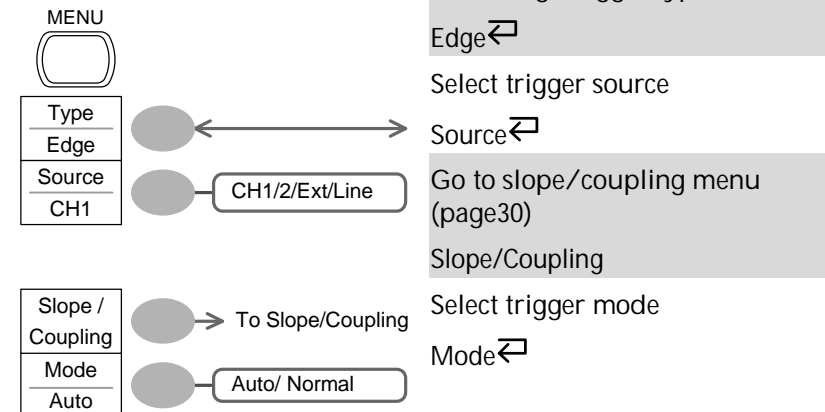


Trigger key 3/4

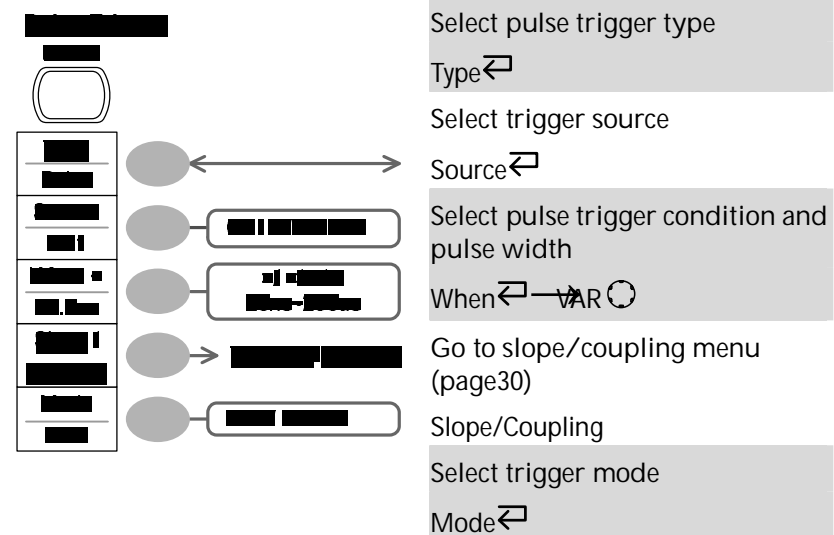

Trigger key 4/4

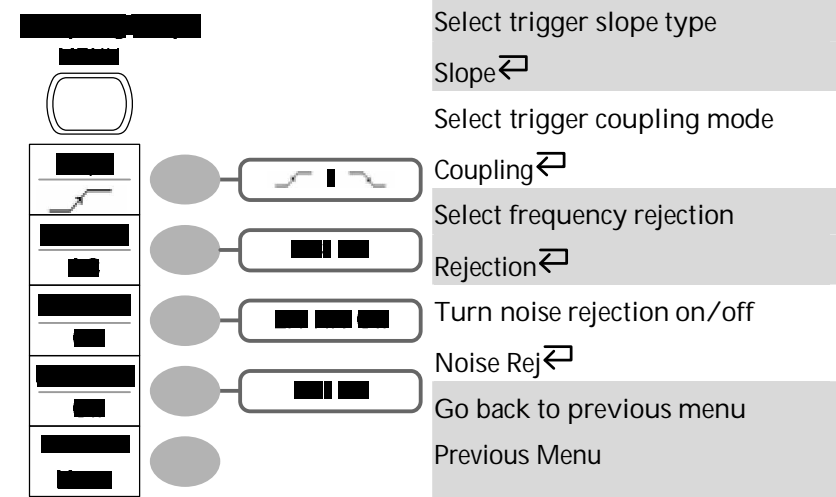

Utility key 1/4

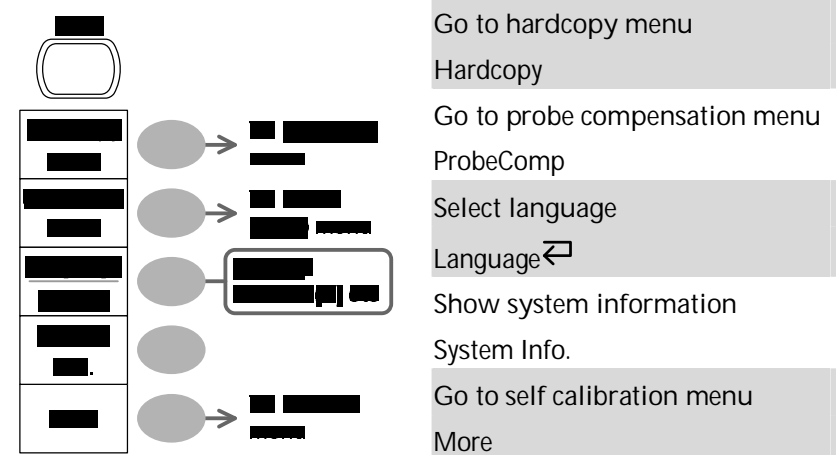

Utility key 2/4

○

Enter self calibration
Self CAL

○

Go to previous menu
Previous Menu

Utility key 3/4

Hardcopy
Function
Save All
Ink Saver
Off

○

SaveImage/
SaveAll

Select Hardcopy function
Function↵

Ink Saver
Off

○

On/ Off

Turn on/off inksaver
Ink Saver↵

Previous
Menu

○

Go to previous menu
Previous Menu↵

Utility key 4/4

○

Select probe compensation signal
Wave Type↵

○

Set frequency for square wave
Frequency↵VAR

○


Set duty cycle for square wave
Duty Cycle↵VAR



○

Go to previous menu
Previous Menu

Default Settings

Here are the factory installed panel settings which appear when pressing the Save/Recall key→
Default Setup.




Acquisition	Mode: Normal	
Channel	Scale: 2V/Div	Invert: Off
	Coupling: DC	Probe attenuation: x1
	BW limit: Off	Channel 1 & 2: On
	(DSO-4102, DSO-4062)	
Cursor	Source: CH1	Cursor: Off
Display	Type: Vectors	Accumulate: Off
	Grid: 	
Horizontal	Scale: 2.5us/Div	Mode: Main Timebase
Math	Type: + (Add)	Position: 0.00 Div
Measure	Item: Vpp, Vavg, Frequency, Duty Cycle, Rise Time	
Trigger	Type: Edge	Source: Channel1
	Mode: Auto	Slope: 
	Coupling: DC	Rejection: Off
	Noise Rejection: Off	
Utility	Hardcopy: SaveImage, InkSaver Off	ProbeComp: Square wave, 1k, 50% duty cycle

Built-in Help

The Help key shows the contents of the built-in help support. When you press a function key, its descriptions appear in the display.



Applicable keys

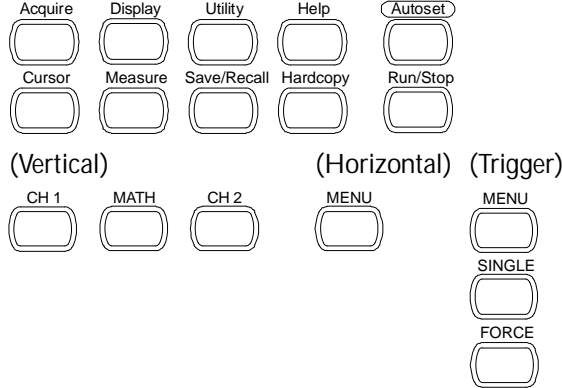

Procedure

- 1. Press the Help key. The display changes to the Help mode.
- 2. Press a functional key to access its help contents. (example: Acquire key)
- 3. Use the Variable knob to scroll the Help contents up and down.
- 4. Press the Help key again to exit the Help mode.



MEASUREMENT

The Measurement chapter describes how to properly observe a signal using the oscilloscope's basic functionalities, and how to observe a signal in detailed manners using one of the advanced functionalities: automatic measurements, cursor measurements, and math opetaions.


Basic Measurements

This section describes the basic operations required in capturing and viewing an input signal. For more detailed operations, see the following chapters.


- Measurements → from page34
- Configurations → from page49

Activating a channel

Activating a channel To activate an input channel, press the Channel key, CH1 or CH2. The channel indicator appears at the left side of the display and the channel icon changes accordingly.



(Continued on next page)

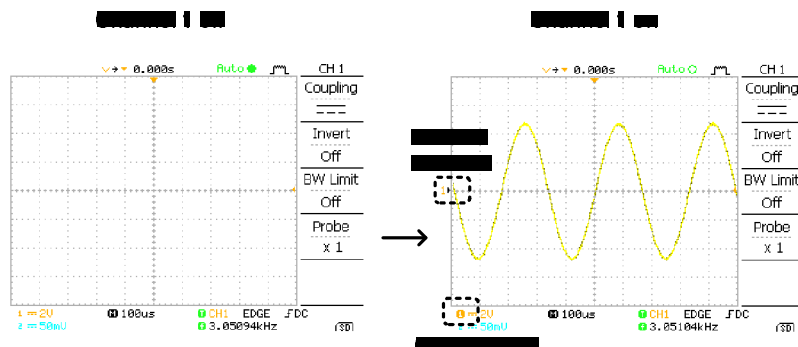

De-activating a channel To de-activate the channel, press the Channel key twice (once if the channel menu is already selected).

Using the Autoset


Background Autoset function automatically configures the panel settings to the best viewing conditions, in the following way.

- Selecting the horizontal scale
- Positioning the waveform horizontally
- Selecting the vertical scale
- Positioning the waveform vertically
- Selecting the trigger source channel
- Activating the channels

Procedure 1. Connect the input signal to the oscilloscope and press the Autoset key.



2. The waveform appears in the center of the display.

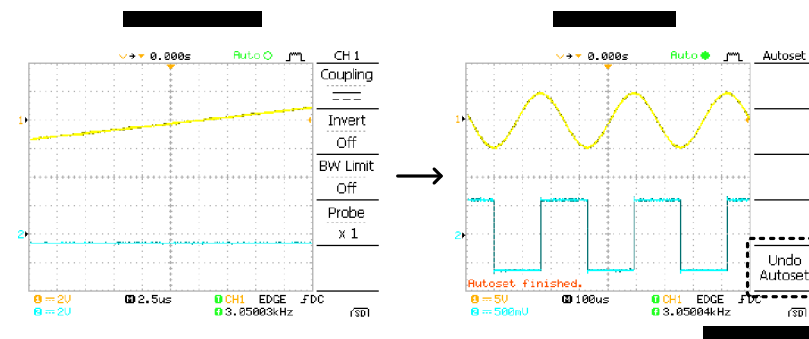

Undoing the Autoset To undo the Autoset, press *Undo* (available for 5 seconds).



Adjusting the trigger level If the waveform is still unstable, try adjusting the trigger level up or down by using the Trigger Level knob.



Limitation Autoset does not work in the following situation.

- Input signal frequency less than 20Hz
- Input signal amplitude less than 30mV

Running and stopping the trigger


Background In the trigger Run mode, the oscilloscope constantly searches for a trigger condition and updates the signal into the display when the condition is met.

In the trigger Stop mode, the oscilloscope stops triggering and thus the last acquired waveforms stay in the display. The trigger icon at the top of the display changes into Stop mode.

Pressing the Trigger Run/Stop key switches between the Run and Stop mode.



(Continued on next page)

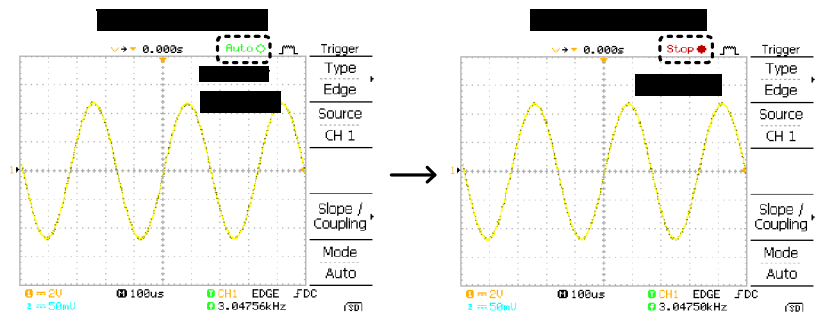

Waveform operation


Waveforms can be moved or scaled in both the Run and Stop mode. For details, see page54 (Horizontal position/scale) and page58 (Vertical position/scale).

Changing the horizontal position and scale

For more detailed configurations, see page54.

Setting the horizontal position

The horizontal position knob moves the waveform left or right. The position indicator moves along with the waveform and the distance from the center point is displayed as the offset in the upper side of the display.

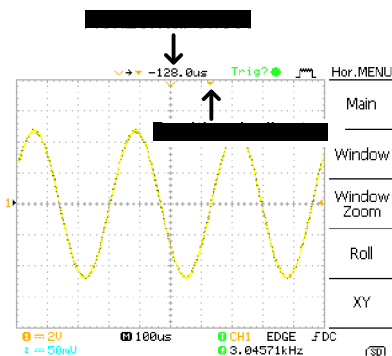


Selecting the horizontal scale

To select the timebase (scale), turn the TIME/DIV knob; left (slow) or right (fast).



Range

1ns/Div ~ 10s/Div, 1-2-5 increment

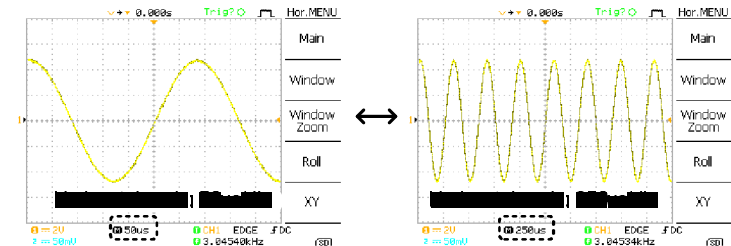

Changing the vertical position and scale

For more detailed configuration, see page58.

Set vertical position

To move the waveform up or down, turn the vertical position knob for each channel.



As the waveform moves, the vertical position of the cursor appears at the bottom left corner of the display.

Run/Stop mode The waveform can be moved vertically in both Run and Stop mode.

Select vertical scale

To change the vertical scale, turn the VOLTS/DIV knob; left (down) or right (up).



Range

2mV/Div ~ 5V/Div, 1-2-5 increments

The vertical scale indicator for each channel on the bottom left of the display changes accordingly.

Stop mode In Stop mode, the vertical scale setting can be changed but the waveform shape stays the same.

Using the probe compensation signal

Background

This section introduces how to use the probe compensation signal for general usage, in case the DUT signal is not available or to get a second signal for comparison. For probe compensation details, see page91.



Note that the frequency accuracy and duty factor are not guaranteed. Therefore the signal should not be used for reference purpose.

Waveform type




Square waveform used for probe compensation. 1k ~ 100kHz, 5% ~ 95%.



Demonstration signal for showing the effects of peak detection. See page49 for peak detection mode details.

View the probe compensation waveform

1. Connect the probe between the compensation signal output and Channel input.

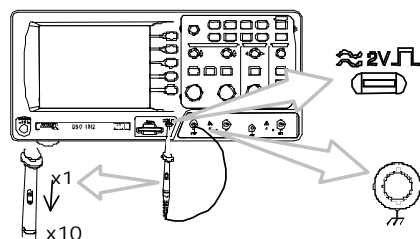

2. Press the Utility key.




3. Press *ProbeComp*.



4. Press *Wave type* repeatedly to select the wave type.




5. (For  only) To change the frequency, press *Frequency* and use the Variable knob.



VARIABLE



Range 1kHz ~ 100kHz

6. (For  only) To change the duty cycle, press *Duty Cycle* and use the Variable knob.



VARIABLE



Range 5% ~ 95%

Probe compensation







For probe compensation details, see page91.








Automatic Measurements

Automatic measurement function measures input signal attributes and updates them in the display.

Measurement items

Overview	Voltage type	Time type
	Vpp	Frequency
	Vmax	Period
	Vmin	RiseTime
	Vamp	FallTime
	Vhi	+Width
	Vlo	-Width
	Vavg	Dutycycle
	Vrms	
	ROVShoot	
	FOVShoot	
	RPREShoot	
	FPREShoot	
Voltage measurement items		
	Vpp	Difference between positive and negative peak voltage (=Vmax – Vmin)
	Vmax	Positive peak voltage.
	Vmin	Negative peak voltage.
	Vamp	Difference between global high and global low voltage (=Vhi – Vlo)
	Vhi	Global high voltage.
	Vlo	Global low voltage.

Vavg		Averaged voltage of the first cycle.
Vrms		RMS (root mean square) voltage.
ROVShoot		Rise overshoot voltage.
FOVShoot		Fall overshoot voltage.
RPREShoot		Rise preshoot voltage.
FPREShoot		Fall preshoot voltage.

Time measurement items		
Freq		Frequency of the waveform.
Period		Waveform cycle time (=1/Freq).
Risetime		Rising time of the pulse (~90%).
Falltime		Falling time of the pulse (~10%).
+Width		Positive pulse width.
-Width		Negative pulse width.
Duty Cycle		Ratio of signal pulse compared with whole cycle =100x (Pulse Width/Cycle)


Automatically measuring the input signals

Viewing the measurement result

1. Press the Measure key.



2. The measurement results appear on the menu bar, constantly updated. Press the menu to change its measurement item.

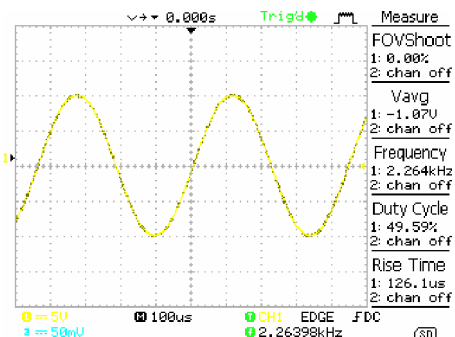


Selecting a measurement item

1. Press F3 repeatedly to select the measurement type: *Voltage or Time.*



2. Use the Variable knob to select the measurement item.



3. Press *Previous Menu* to confirm the item selection and to go back to the measurement results view.



Cursor Measurements

Cursor line, horizontal or vertical, shows the precise position of the input waveforms or math operation result.

Using the horizontal cursors

Procedure

1. Press the Cursor key. The cursors appear in the display.



2. Press X↔Y to select the horizontal (X1&X2) cursor.



3. Press *Source* repeatedly to select the source channel.



Range CH1, 2, Math

4. The cursor measurement results will appear in the menu, F2 to F4.

Parameters

X1	Time position of the left cursor
X2	Time position of the right cursor
Δ	The distance between the X1 and X2
f	The time distance converted to frequency

Moving the horizontal cursors

To move the left cursor, press X1 and then use the Variable knob.









To move the right cursor, press X2 and then use the Variable knob.



To move both cursors at once, press X1X2 and then use the Variable knob.



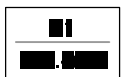Using the vertical cursors

Procedure	1. Press the Cursor key.	
	2. Press X↔Y to select the vertical (Y1&Y2) cursor.	
	3. Press <i>Source</i> repeatedly to select the source channel.	
	Range CH1, 2, Math	
	4. The cursor measurement results will appear in the menu.	
Parameters	Y1	Voltage level of the upper cursor
	Y2	Voltage level of the lower cursor
	Δ	The voltage difference between the upper and lower cursor
Moving the vertical cursors	To move the upper cursor, press Y1 and then use the Variable knob.	
	To move the lower cursor, press Y2 and then use the Variable knob.	
	To move both cursors at once, press Y1Y2 and then use the Variable knob.	







Math Operations

The Math operations can add, subtract, or perform FFT on the input waveforms. The resulted waveform can be measured using the cursors, and saved or recalled just like normal input signals.





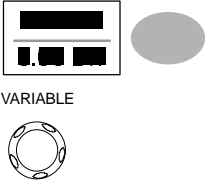


Overview

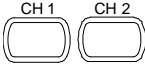Addition (+)	Adds amplitude of CH1 & CH2 signals.	
Subtraction (-)	Extracts the amplitude difference between CH1 & CH2.	
FFT	Runs FFT calculation on a signal. Four types of FFT windows are available: Hanning, Flattop, Rectangular, and Blackman.	
Hanning FFT window	Frequency resolution	Good
	Amplitude resolution	Not good
	Suitable for....	Frequency measurement on periodic waveforms
Flattop FFT window	Frequency resolution	Not good
	Amplitude resolution	Good
	Suitable for....	Amplitude measurement on periodic waveforms
Rectangular FFT window	Frequency resolution	Very good
	Amplitude resolution	Bad
	Suitable for....	Single-shot phenomenon (this mode is the same as having no window at all)
Blackman FFT window	Frequency resolution	Bad
	Amplitude resolution	Very good
	Suitable for....	Amplitude measurement on periodic waveforms

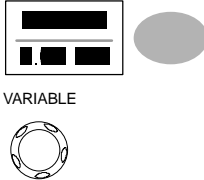Adding or subtracting signals

- | | | |
|-----------|---|--|
| Procedure | 1. Activate both CH1 and CH2. |  |
| | 2. Press the Math key. |  |
| | 3. Press <i>Operation</i> repeatedly to select addition (+) or subtraction (-). |  |
| | 4. The math measurement result appears in the display. |  |
| | 5. To move the math result vertically, press <i>Position</i> and use the Variable knob. |  |
| | 6. To clear the math result from the display, press the Math key again. |  |

Using the FFT function

- | | | |
|-----------|--|---|
| Procedure | 1. Press the Math key. |  |
| | 2. Press <i>Operation</i> repeatedly to select FFT. |  |
| | 3. Press <i>Source</i> repeatedly to select the source channel. |  |
| | 4. Press <i>Window</i> repeatedly to select the FFT window type. |  |
| | 5. The FFT result appears. The horizontal scale changes from time to frequency, and the vertical scale from voltage to dB. | |
| | 6. To move the FFT waveform vertically, press <i>Position</i> and use the Variable knob. |  |
| | Range -12.00 Div ~ +12.00 Div | |
| | 7. To select the vertical scale of FFT waveform, press <i>Unit/Div</i> repeatedly. |  |
| | Range 1, 2, 5, 10, 20 dB/Div | |
| | 8. To clear the FFT result from the display, press the Math key again. |  |










CONFIGURATION

The Configuration chapter describes how to configure panel settings to make measurements and observations suited to the application needs.







Acquisition

The acquisition process samples the analog input signals and converts them into digital format for internal processing. You may select the normal, average, or peak detect acquisition mode.

Selecting the acquisition mode

Procedure	1. Press the Acquire key.						
	2. Select the acquisition mode between <i>Normal</i> , <i>Average</i> and <i>Peak Detect</i> .	<table><tr><td>Normal</td><td></td></tr><tr><td><u>Average</u></td><td></td></tr><tr><td>Peak Detect</td><td></td></tr></table>	Normal		<u>Average</u>		Peak Detect
Normal							
<u>Average</u>							
Peak Detect							
Range	Normal	All of the acquired data is used to draw the waveform.					

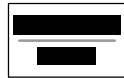Average	Multiple data are averaged to form a waveform. This mode is useful for drawing a noise-free waveform. To select the number, press <i>Average</i> repeatedly. Average number: 2, 4, 8, 16, 32, 64, 128, 256
Peak detect	To activate the Peak detect mode, press <i>Peak-Detect</i> . Only the minimum and maximum value pairs for each acquisition interval (bucket) are used. This mode is useful for catching abnormal glitches in the signal.

Peak detect effect using the probe comp. waveform	1. One of the probe compensation waveforms can demonstrate the peak detection mode. Connect the probe to the probe compensation output.	
	2. Press the Utility key.	
	3. Press <i>ProbeComp</i> .	
	4. Press <i>Wave Type</i> and select the  waveform.	
	5. Press the Autoset key. the oscilloscope positions the waveform in the center of the display.	


6. Press the Acquire key.



7. Press *Normal*.




8. Press *Peak-Detect* and see that a spike noise is captured.



Example

The peak detect mode reveals the occasional glitch.

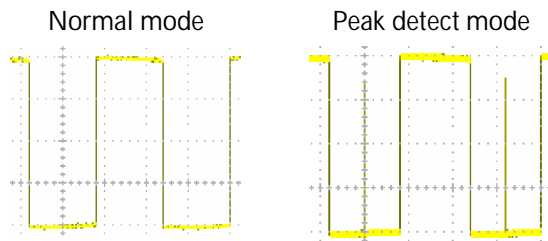

Real time vs Equivalent time sampling mode

Backgrounds	The oscilloscope automatically switches between two sampling modes, Real-time and Equivalent-time, according to the number of active channels and sampling rate.
Real-time sampling	One sampled data is used to reconstruct a single waveform. Short-time events might get lost if the sampling rate gets too high. This mode is used when the sampling rate is relatively low (250MSa/s or lower).
Equivalent-time sampling	Multiple numbers of sampled data are accumulated to reconstruct a single waveform. Restores greater waveform details but takes longer to update the waveform. This mode is used when the sampling rate becomes higher than 250MSa/s. The maximum equivalent-time sampling rate is 25GSa/s.




Display

The Display section describes how to configure the display settings: drawing type, waveform accumulation, contrast adjustment, and grid settings.

Selecting the vector or dot drawing


Procedure	1. Press the Display key.	
	2. Press <i>Type</i> repeatedly to select the waveform drawing.	
Types	Dots	Only the sampled dots are displayed.
	Vectors	The sampled dots are connected by lines.

Accumulating the waveform

Background	Accumulation preserves the old waveform drawings and overwrites new waveforms on top of it. It is useful for observing waveform variation.	
Procedure	1. Press the Display key.	
	2. Press <i>Accumulate</i> to turn on the waveform accumulation.	
	3. To clear the accumulation and start it over (refresh), press <i>Refresh</i> .	

(Continued on next page)

Example

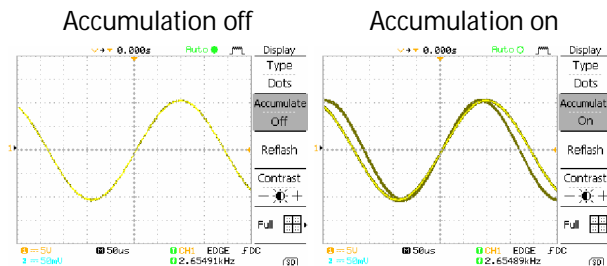

Adjusting the display contrast

Procedure

1. Press the Display key.



2. Press *Contrast*.



3. Turn the Variable knob left to lower the contrast (dark display) or right to raise the contrast (bright display).




Selecting the display grid

Procedure

1. Press the Display key.



2. Press the grid icon repeatedly to select the grid.



Parameters



Shows the full grid.



Shows the outer frame and X/Y axis.



Shows only the outer frame.


Horizontal View

The Horizontal view section describes how to configure the horizontal scale, position, waveform update mode, window zoom, and X-Y mode.

Moving the waveform position horizontally

Procedure


The horizontal position knob moves the waveform left or right. The position indicator at the top of the display shows the center and current position.



Center position




Moving right



Selecting the horizontal scale

Select horizontal scale

To select the timebase (scale), turn the TIME/DIV knob; left (slow) or right (fast).





Range 1ns/Div ~ 10s/Div, 1-2-5 increment

The timebase indicator at the bottom of the display updates the current horizontal scale.



Selecting the waveform update mode

Background	The display update mode is switched automatically or manually according to the horizontal scale.
Main mode	Updates the whole displayed waveform at once. The main mode is automatically selected when the horizontal scale (timebase) is fast. Horizontal scale $\leq 100\text{ms/div}$ Trigger All mode available
Roll mode	Updates and moves the waveform gradually from the right side of the display to the left. The Roll mode is automatically selected when the horizontal scale (timebase). When in the Roll mode, an indicator appears at the bottom of the display. <div style="display: flex; justify-content: space-around; align-items: flex-end;"> <div style="text-align: center;"> <p>Main mode</p>  <p>Timebase $\geq 250\text{ms/div}$ ($\leq 100\text{Sa/s}$)</p> </div> <div style="text-align: center;"> <p>Roll mode</p>  <p>Trigger Auto mode only</p> </div> </div>

Selecting the Roll mode manually 1. Press the Horizontal menu key.



2. Press *Roll*. The horizontal scale automatically becomes 250ms/div and the waveform starts scrolling from the right side of the display (If the oscilloscope is already in the Roll mode, there will be no change).



Zooming the waveform horizontally


Procedure/ range 1. Press the Horizontal Menu key.



2. Press *Window*.



3. Use the horizontal position knob to move the zoom range sideways, and TIME/DIV knob to change the zoom range width.




The width of the bar in the middle of the display is the actual zoomed area.

Zoom range 1ns ~ 1ms

4. Press *Window Zoom*. The specified range gets zoomed.





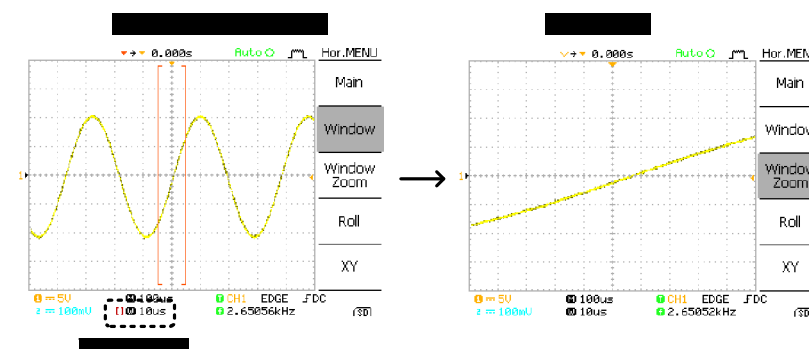

Example




Viewing waveforms in the X-Y mode

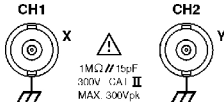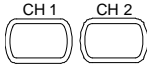Background The X-Y mode compares the voltage of Channel 1 and Channel 2 waveforms in a single display. This mode is useful for observing the phase relationship between the two waveforms.

- Procedure**
1. Connect the signals to Channel 1 (X-axis) and Channel 2 (Y-axis). 
 2. Make sure both Channel 1 and 2 are activated. 
 3. Press the Horizontal key. 
 4. Press XY. The display shows two waveforms in X-Y format; Channel 1 as X-axis, Channel 2 as Y-axis. 

Adjusting the X-Y mode waveform	Horizontal position	CH1 Position knob
	Horizontal scale	CH1 Volts/Div knob
	Vertical position	CH2 Position knob
	Vertical scale	CH2 Volts/Div knob


Example

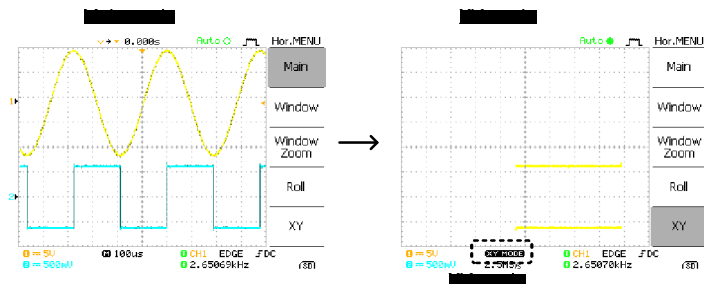


Vertical View (Channel)

The Vertical view section describes how to set the vertical scale, position, bandwidth limitation, coupling mode, and attenuation.

Moving the waveform position vertically



- Procedure** To move the waveform up or down, turn the vertical position knob for each channel. 



Selecting the vertical scale

- Procedure** To change the vertical scale, turn the VOLTS/DIV knob; left (down) or right (up). 

Range 2mV/Div ~ 5V/Div, 1-2-5 increments

Selecting the coupling mode

- Procedure**
1. Press the Channel key. 
 2. Press *Coupling* repeatedly to select the coupling mode. 

- Range**
-  DC coupling mode. The whole portion (AC and DC) of the signal appears on the display.
 -  Ground coupling mode. The display shows only the zero voltage level as a horizontal line. This mode is useful for measuring the signal amplitude with respect to the ground level.



AC coupling mode. Only the AC portion of the signal appears on the display. This mode is useful for observing AC waveforms mixed with DC signal.



Inverting the waveform vertically

Procedure

1. Press the Channel key.



2. Press *Invert*. The waveform becomes inverted (upside down) and the Channel indicator in the display shows a down arrow.

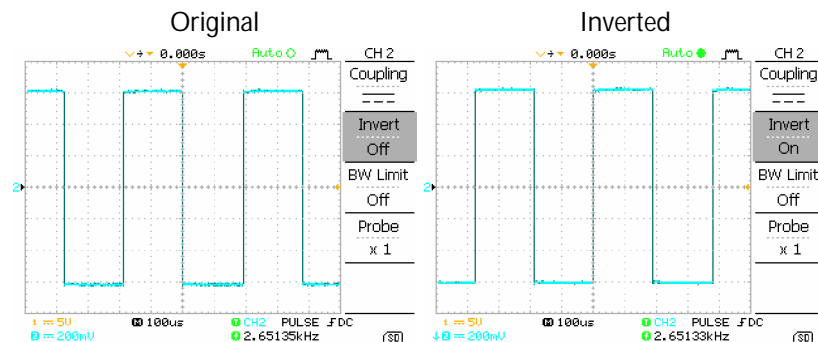

Limiting the waveform bandwidth

Background


Bandwidth limitation puts the input signal into a 20MHz (-3dB) low-pass filter. This function is useful for cutting off high frequency noise to see the clear waveform shape. This function is available only for DSO-4102 and DSO-4062.

Procedure

1. Press the Channel key.




2. Press *BW Limit* to turn on or off the limitation. When turned on, the BW indicator appears next to the Channel indicator in the display.

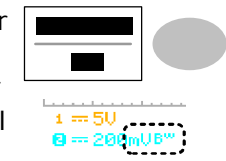


Example

BW Limit Off

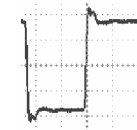

BW Limit On

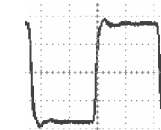

Selecting the probe attenuation level

Background

A signal probe has an attenuation switch to lower the original DUT signal level to the oscilloscope input range, if necessary. The probe attenuation selection adjusts the vertical scale so that the voltage level on the display reflects the real value, not the attenuated level.

Procedure

1. Press the Channel key.



2. Press *Probe* repeatedly to select the attenuation level.



3. The voltage scale in the channel indicator changes accordingly. There is no change in the waveform shape.

Range

x1, x10, x100

Note

The attenuation factor adds no influence on the real signal; it only changes the voltage scale on the display.


Trigger

The Trigger function configures the conditions by which the oscilloscope captures the incoming signals.


Trigger type

Edge	Triggers when the signal crosses an amplitude threshold in either positive or negative slope.
Video	Extracts a sync pulse from a video format signal and triggers on a specific line or field.
Pulse	Triggers when the pulse width of the signal matches the trigger settings.
Indicators	<div> <div>Edge/Pulse</div> <div> <div>CH1 EDGE FDC</div> <div>2.65210kHz</div> <div>(SD)</div> </div> <div>Video</div> <div> <div>CH1 VIDEO P NTSC</div> <div><20Hz</div> <div>(SD)</div> </div> </div> <div> <div>(CH1, Edge, Rising edge, DC coupling)</div> <div>(CH1, Video, Positive polarity, NTSC standard)</div> </div>

Trigger parameter

Trigger source	CH1, 2	Channel 1, 2 input signals
	Line	AC mains signal
	Ext	External trigger input signal
		<div>EXT TRIG</div> 
Trigger mode	Auto	The oscilloscope updates the input signal regardless of the trigger conditions (if there is no trigger event, the oscilloscope generates an internal trigger). Select this mode especially when viewing rolling waveforms at a slow timebase.

The Auto trigger status appears in the upper right corner of the display.



Single

The oscilloscope acquires the input signals once when a trigger event occurs, then stops acquiring. Pressing the Single key triggers on the input signals again.



The Single trigger status appears in the upper right corner of the display.








Normal

The oscilloscope acquires and updates the input signals only when a trigger event occurs.




The Normal trigger status appears in the upper right corner of the display.











Video standard (video trigger)	NTSC	National Television System Committee
	PAL	Phase Alternative by Line
	SECAM	SEquential Couleur A Mémoire
Sync polarity (video trigger)		Positive polarity
		Negative polarity
Video line (video trigger)	Selects the trigger point in the video signal.	
	field	1 or 2
	line	1~263 for NTSC, 1~313 for PAL/SECAM

Pulse condition (pulse trigger)	Sets the pulse width (20ns ~ 200us) and the triggering condition.		
	>	Longer than	= Equal to
	<	Shorter than	≠ Not equal to
Trigger slope		Triggers on the rising edge.	
		Triggers on the falling edge.	
Trigger coupling	AC	Triggers only on AC component.	
	DC	Triggers on AC+DC component.	
Frequency rejection	LF	Puts a high-pass filter and rejects the frequency below 50kHz.	
	HF	Puts a low-pass filter and rejects the frequency above 50kHz.	
Noise rejection	Rejects noise signals.		
Trigger level		Using the trigger level knob moves the trigger point up or down.	




Configuring the edge trigger


- Procedure
1. Press the Trigger menu key. 
 2. Press *Type* repeatedly to select edge trigger. 
 3. Press *Source* repeatedly to select the trigger source. 
- Range Channel 1, 2, Line, Ext


4. Press *Mode* repeatedly to select the Auto or Normal trigger mode. To select the Single trigger mode, press the Single key.  
Range Auto, Normal, Single
5. Press *Slope/coupling* to enter into the trigger slope and coupling selection menu. 
6. Press *Slope* repeatedly to select the trigger slope, rising or falling edge. 
Range Rising edge, falling edge
7. Press *Coupling* repeatedly to select the trigger coupling, DC or AC. 
Range DC, AC
8. Press *Rejection* to select the frequency rejection mode. 
Range LF, HF, Off
9. Press *Noise Rej* to turn the noise rejection on or off. 
Range On, Off
10. Press *Previous* menu to go back to the previous menu. 



Configuring the video trigger

Procedure

- Press the Trigger menu key. 
- Press *Type* repeatedly to select video trigger. The video trigger indicator appears at the bottom of the display. 
- Press *Source* repeatedly to select the trigger source channel. 

Range Channel 1, 2
- Press *Standard* repeatedly to select the video standard. 

Range NTSC, PAL, SECAM
- Press *Polarity* repeatedly to select the video signal polarity. 




Range positive, negative
- Press *Line* repeatedly to select the video field line. Use the Variable knob to select the video line. 




Field 1, 2



Video line NTSC: 1 ~ 262 (Even), 1 ~ 263 (Odd)
PAL/SECAM: 1 ~ 312 (Even), 1 ~ 313 (Odd)

Configuring the pulse width trigger


Procedure











- Press the Trigger menu key. 
- Press *Type* repeatedly to select pulse width trigger. The pulse width trigger indicator appears at the bottom of the display. 
- Press *Source* repeatedly to select the trigger source. 

Range Channel 1, 2, Ext
- Press *Mode* repeatedly to select the trigger mode, Auto or Normal. To select the Single trigger mode, press the Single key. 


Range Auto, Normal, Single
- Press *When* repeatedly to select the pulse condition. Then use the Variable knob to set the pulse width. 



Condition > , < , = , ≠



Width 20ns ~ 200us
- Press *Slope/Coupling* to set trigger slope and coupling. 

7. Press *Slope* repeatedly to select the trigger slope, which also appears at the bottom of the display.
Range Rising edge, falling edge
 
8. Press *Coupling* repeatedly to select the trigger coupling.
Range DC, AC
 
9. Press *Rejection* to select the frequency rejection mode.
Range LF, HF, Off
 
10. Press *Noise Rej* to turn the noise rejection on or off.
Range On, Off
 
11. Press *Previous* menu to go back to the previous menu.
 

Manually triggering the signal

Note This section describes how to manually trigger the input signals when the oscilloscope does not capture them. This section applies to the Normal and Single trigger mode, since in the Auto trigger mode, the oscilloscope keeps updating the input signal regardless of the trigger conditions.


To acquire the signal regardless of trigger conditions	To acquire the input signal regardless of the trigger condition, press the Force key. The oscilloscope captures the signals once.	
--	---	---

In the Single trigger mode	Press the Single key to start waiting for the trigger condition. To break out of the Single mode, press the Run/Stop key. The trigger mode changes to the Normal mode.	 
----------------------------	--	--

Remote Control Interface

The Remote control interface section describes how to set up the USB interface for PC connection. The details of remote control commands are described in the DSO-4000 Programming Manual.





USB connection	PC side	Type A, host
	DSO-4000 side	Type B, slave
	Speed	1.1/2.0 (full speed)

- Procedure
1. Connect the USB cable to the USB slave port. 
 2. When the PC asks for the USB driver, select dso_cdc_1000.inf which is downloadable from the attached CD-R.
 3. On the PC, activate a terminal application such as MTTTY (Multi-Threaded TTY). To check the COM port No., see the Device Manager in the PC. For WindowsXP, select Control panel → System → Hardware tab.
 4. Run this query command via the terminal application.
*idn?
This command should return the manufacturer, model number, serial number, and firmware version in the following format.
Conrad, DSO-4xxx, 000000001, V1.00
 5. Configuring the command interface is completed. Refer to the programming manual for the remote commands and other details.

System Settings



The system settings show the oscilloscope's system information and allow changing the language.

Viewing the system information

- Procedure
1. Press the Utility key. 
 2. Press *More*. 
 3. Press *System Info*. The upper half of the display shows the following information.

 - Manufacturer
 - Model
 - Serial number
 - Firmware version
 4. Press any other key to go back to the waveform display mode. 

Selecting the language

Parameter	Language selection differs according to the region to which the oscilloscope is shipped. <ul style="list-style-type: none">• English• Chinese (traditional)• Chinese (simplified)• Others
-----------	--

- Procedure
1. Press the Utility key. 
 2. Press *Language* repeatedly to select the language. 

SAVE/RECALL

The save function allows saving display image, waveform data, and panel settings into the oscilloscope's internal memory or an external SD card. The recall function allows recalling the default factory settings, waveform data, and panel settings from the oscilloscope's internal memory or an external SD card.

File Structures

Three types of file are available: display image, waveform file, and panel settings.

Display image file format

Format	xxxx.bmp (Windows bitmap format)
Contents	The current display image in 234 x 320 pixels, color mode. The background color can be inverted (Ink saver function).


Waveform file format

Format	xxxx.csv (Comma-separated values format which can be opened in spreadsheet applications such as Microsoft Excel)	
Waveform type	CH1, 2	Input channel signal
	Math	Math operation result (page46)
Storage location	Internal memory	The oscilloscope's internal memory, which can hold 15 waveforms.

- External SD card An SD card (2GB or less, FAT or FAT32 format) can hold practically unlimited number of waveforms.
- Ref A, B The two reference waveforms are used as the buffer to recall a waveform in the display. You have to save a waveform into an internal memory or an SD card, then copy the waveform into the reference waveform slot (A or B), and then recall the reference waveform into the display.

Waveform data format

One division includes 25 points of horizontal and vertical data. The vertical point starts from the center line. The horizontal point starts from the leftmost waveform.

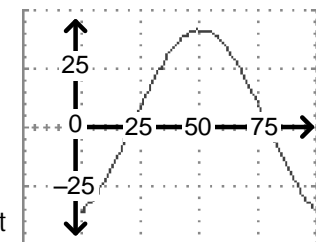

The time or amplitude represented by each data point depends on the vertical and horizontal scale. For example:

Vertical scale: 10mV/div (4mV per point)

Horizontal scale: 100us/div (4us per point)

Waveform file contents: other data





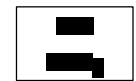

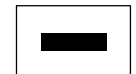
A waveform file also includes the following information.

- Memory length
- source channel
- vertical offset
- vertical scale
- coupling mode
- waveform last dot address
- date and time
- trigger level
- vertical position
- time base
- probe attenuation
- horizontal view
- horizontal scale
- sampling period
- sampling mode



Setup file format

Format	xxxx.set (proprietary format) A setup file saves or recalls the following settings.		
Contents	Acquire	• mode	
	Cursor	• source channel	• cursor on/off
		• cursor location	
	Display	• dots/vectors	• accumulation on/off
		• grid type	
	Measure	• item	
	Utility	• hardcopy type	• ink saver on/off
		• language	
	Horizontal	• display mode	• scale
		• position	
	Trigger	• trigger type	• source channel
		• trigger mode	• video standard
		• video polarity	• video line
		• pulse timing	• slope/coupling
	Channel (vertical)	• vertical scale	• vertical position
		• coupling mode	• invert on/off
		• bandwidth limit on/off (DSO-4102, DSO-4062)	• probe attenuation
	Math	• operation type	• source channel
		• vertical position	• unit/div
		• FFT window	

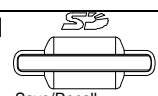Using the SD card file utilities


Background	For the SD card inserted into the oscilloscope, file deletion, folder creation, file/folder rename are available from the front panel.	
SD Card restriction	The DSO-4000 series accept the following SD card. Size: 2GB or less Format: FAT or FAT32	
Procedure	<ol style="list-style-type: none"> 1. Insert an SD card to the card slot. 2. Press the Save/Recall key. Select any save or recall functionality, for example SD card destination in Save image function. 3. Press <i>File Utility</i>. The display shows the SD card contents. 4. Use the Variable knob to move the cursor. Press <i>Select</i> to go into the folder or go back to the previous directory level. 	  <p>(Example)</p>    <p>VARIABLE</p>  

SD card indicator When an SD card is inserted into the oscilloscope, an indicator appears at the right bottom corner of the display. (Unlock the SD card before file operations).




Creating a new folder / renaming a file or folder

1. Move the cursor to the file or folder location and press *New Folder* or *Rename*. The file/folder name and the character map will appear on the display.

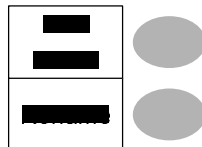

2. Use the Variable knob to move the pointer to the characters. Press *Enter* Character to add a character or *Back Space* to delete a character.

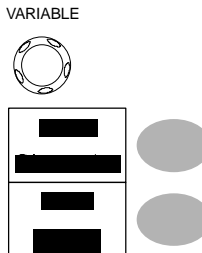

3. When editing is completed, press *Save*. The file/folder creation or rename will be completed.



Deleting a folder or file

1. Move the cursor to the folder or file location and press *Delete*. The message "Press F4 again to confirm this process" appears at the bottom of the display.



2. If the file/folder still needs to be deleted, press *Delete* again to complete the deletion. To cancel the deletion, press any other key.



Quick Save (HardCopy)

Background

The Hardcopy key works as a shortcut for saving display image, waveform data, and panel settings into an SD card.



Hardcopy key can be configured into two types of operation: save image and save all (image, waveform, setup).

Using the Save/Recall key can also save files with more option. For details, see page78.



Functionalities

Save image (*.bmp) Saves the current display image into an SD card.

Save all Saves the following items into an SD card.


- Current display image (*.bmp)
- Current system settings (*.set)
- Current waveform data (*.csv)
- Last stored system settings (*.set)
- Last stored waveform data (*.csv)

SD Card restriction

The DSO-4000 series accept the following SD card.
Size: 2GB or less
Format: FAT or FAT32

Procedure

1. Insert an SD card to the slot.



2. Press the Utility key.



3. Press *Hardcopy Menu*.



4. Press *Function* repeatedly to select *Save Image* or *Save All*.



- To invert the color in the display image, press *Ink Saver* and turn on or off the Ink Saver.



- Press the Hardcopy key. The file or folder will be saved to the root directory of the SD card.



Save

This section describes how to save data using the Save/Recall menu.






File type/source/destination



Item	Source	Destination
Panel setup (xxxx.set)	<ul style="list-style-type: none"> Panel settings 	<ul style="list-style-type: none"> Internal memory: S1 ~ S15 External memory: SD card
Waveform data (xxxx.csv)	<ul style="list-style-type: none"> Channel 1, 2 Math operation result Reference waveform A, B 	<ul style="list-style-type: none"> Internal memory: W1 ~ W15 Reference waveform A, B External memory: SD card
Display image (xxxx.bmp)	<ul style="list-style-type: none"> Display image 	<ul style="list-style-type: none"> External memory: SD card
Save All	<ul style="list-style-type: none"> Display image (xxxx.bmp) Waveform data (xxxx.csv) Panel settings (xxxx.set) 	<ul style="list-style-type: none"> External memory: SD card


SD Card restriction

The DSO-4000 series accept the following SD card.
Size: 2GB or less
Format: FAT or FAT32






Saving the panel settings



- Procedure**
1. (For saving to an external SD card) Insert the card into the slot. 
 2. Press the Save/Recall key twice to recall the Save menu. 
 3. Press *Save Setup*. 
 4. Press *Destination* repeatedly to select the saved location. Use the Variable knob to change the internal memory location (S1 ~ S15).  

Memory	Internal memory, S1 ~ S15
SD card	External card, no practical limitation for the amount of file. When saved, the setup file will be placed in the root directory.
 5. Press *Save* to confirm saving. When completed, a message appears at the bottom of the display. 
- Note**  The file will not be saved if the power is turned off or SD card is disconnected before completion.

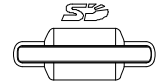- File utilities**
- To edit SD card contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page74. 

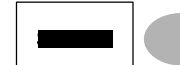Saving the waveform


- Procedure**
1. (For saving to an external SD card) Insert the card into the slot. 
 2. Press the Save/Recall key twice to recall the Save menu. 
 3. Press *Save Waveform*. 
 4. Press *Source*. Use the Variable knob to select the source signal.  

CH1 ~ CH2	Channel 1 ~ 2 signal
Math	Math operation result (page46)
RefA, B	Internally stored reference waveforms A, B
 5. Press *Destination* repeatedly to select the file destination. Use the Variable knob to select the memory location.  

Memory	Internal memory, W1 ~ W15
SD card	External card, no practical limitation for the amount of file. When saved, the waveform will be placed in the root directory.
Ref	Internal reference waveform, A/B

- Press *Save* to confirm saving. When completed, a message appears at the bottom of the display.



Note  The file will not be saved if the power is turned off or the SD card is disconnected before completion.

File utilities


To edit SD card contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page74.



Saving the display image

Procedure

- (For saving to an external SD card) Insert the card into the slot.



- Press the *Save/Recall* key twice to recall the *Save* menu.




- Press *Save Image*.



- Press *Ink Saver* repeatedly to invert the background color (on) or not (off).




- Press *Destination*.



SD card External card, no practical limitation on the amount of file. When saved, the image file will be placed in the root directory.

- Press *Save* to confirm saving. When completed, a message appears at the bottom of the display.



Note  The file will not be saved if the power is turned off or SD card is disconnected before completion.

File utilities


To edit SD card contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page74.



Saving all (panel settings, display image, waveform)

Procedure

- (For saving to an external SD card) Insert the card into the slot.



- Press the *Save/Recall* key twice to recall the *Save* menu.



- Press *Save All*. The following information will be saved.



Setup file (Axxx.set) Two types of setups are saved: the current panel setting and the last internally saved settings (one of S1 ~ S15).


Display image (Axxx.bmp) The current display image in the bitmap format.

Waveform data (Axxxx.csv) Two types of waveform data are saved: the currently active channel data and the last internally saved data (one of W1 ~ W15).

4. Press *Ink Saver* repeatedly to invert the background color (on) or not (off) for the display image.




5. Press *Destination*.



SD card External card, no practical limitation for the amount of file. When saved, the folder will be placed in the root directory.

6. Press *Save* to confirm saving. When completed, a message appears at the bottom of the display.



Note  The file will not be saved if the power is turned off or SD card is disconnected before completion.

7. Together with the current setup/waveform/image, the last saved waveform file (one from W1 ~ W15) and setup file (one from S1 ~ S15) are also included in the folder.

File utilities

To edit SD card contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page74.



Recall


File type/source/destination

Item	Source	Destination
Default panel setup	<ul style="list-style-type: none"> Factory installed setting 	<ul style="list-style-type: none"> Current front panel setting
Reference waveform	<ul style="list-style-type: none"> Internal memory: A, B 	<ul style="list-style-type: none"> Current front panel
Panel setup (DSxxxx.set)	<ul style="list-style-type: none"> Internal memory: S1 ~ S15 External memory: SD card 	<ul style="list-style-type: none"> Current front panel
Waveform data (DSxxxx.csv)	<ul style="list-style-type: none"> Internal memory: W1 ~ W15 External memory: SD card 	<ul style="list-style-type: none"> Reference waveform A, B

SD Card restriction The DSO-4000 series accept the following SD card.
Size: 2GB or less
Format: FAT or FAT32



Recalling the default panel settings

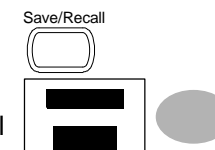- Procedure
1. Press the Save/Recall key.
 2. Press *Default Setup*. The factory installed setting will be recalled.








Setting contents The following is the default panel setting contents.

Acquisition	Mode: Normal	
Channel	Coupling: DC	Invert: Off
	BW limit: Off	Probe attenuation: x1
	(DSO-4102, DSO-4062)	

Cursor	Source: CH1	Horizontal: None
	Vertical: None	
Display	Type: Vectors	Accumulate: Off
	Graticule: 	
Horizontal	Scale: 2.5us/Div	Mode: Main Timebase
Math	Type: + (Add)	Channel: CH1+CH2
	Position: 0.00 Div	Unit/Div: 2V
Measure	Item: Vpp, Vavg, Frequency, Duty cycle, Rise Time	
Trigger	Type: Edge	Source: Channel1
	Mode: Auto	Slope: 
	Coupling: DC	Rejection: Off
	Noise Rejection: Off	
Utility	SaveImage, InkSaver Off	


Recalling a reference waveform to the display

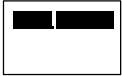- Procedure
1. The reference waveform must be stored in advance. See page80 for details.
 2. Press the Save/Recall key. 
 3. Press *Display Refs.* The reference waveform display menu appears. 
 4. Select the reference waveform, *Ref A* or *Ref B*, and press it. The waveform appears on the display and the period and amplitude of the waveform appears in the menu. 
↓

 5. To clear the waveform from the display, press *RefA/B* again. 

Recalling panel settings

Procedure

1. (For recalling from an external SD card) Insert the card into the slot.




2. Press the Save/Recall key.



3. Press *Recall Setup*.




4. Press *Source* repeatedly to select the file source, internal or external memory. Use the Variable knob to change the memory.

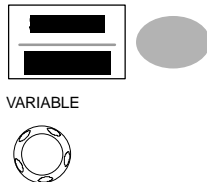

Memory	Internal memory, S1 ~ S15
SD card	External card, no practical limitation on the amount of file. The setup file must be placed in the root directory to be recognized.

5. Press *Recall* to confirm recalling. When completed, a message appears at the bottom of the display.



Note  The file will not be saved if the power is turned Off or SD card is disconnected before completion.

File utilities


To edit SD card contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page74.



Recalling a waveform

Procedure

1. (For recalling from an external SD card) Insert the card into the slot.




2. Press the Save/Recall key.



3. Press *Recall Waveform*. The display shows the available source and destination options.




4. Press *Source* repeatedly to select the file source, internal memory or external SD card. Use the Variable knob to change the memory location (W1 ~ W15).

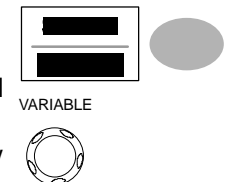


Memory	Internal memory, W1 ~ W15
SD card	External flash drive, no practical limitation on the amount of file. The waveform file must be placed in the root directory to be recognized.

5. Press *Destination*. Use the Variable knob to select the memory location.

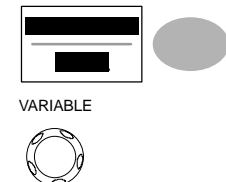

RefA, B	Internally stored reference waveforms A, B
---------	--

6. Press *Recall* to confirm recalling. When completed, a message appears at the bottom of the display.



Note The file will not be saved if the power is turned off or SD card is disconnected before completion.

File utilities

To edit SD card contents (create/ delete/ rename files and folders), press *File Utilities*. For details, see page74.



MAINTENANCE

Two types of maintenance operations are available: calibrating the vertical resolution, and compensating the probe. Run these operations when using the oscilloscope in a new environment.

Vertical Resolution Calibration

Procedure

1. Press the Utility key.



2. Press *More*.




3. Press *Self Cal Menu*.



4. Press *Vertical*. The message "Set CAL to CH1, then press F5" appears at the bottom of the display.




5. Connect the calibration signal between the rear panel CAL out terminal and the Channel1 input.



6. Press F5. The calibration automatically starts.

- The Channel1 calibration will complete in less than 5 minutes.



- When finished, connect the calibration signal to the Channel 2 input and repeat the procedure.




- The calibration is completed and the display goes back to the previous state.

Probe Compensation

Procedure

- Connect the probe between Channel1 input and the probe compensation output (2Vp-p, 1kHz square wave) on the front panel. Set the probe attenuation to x10.

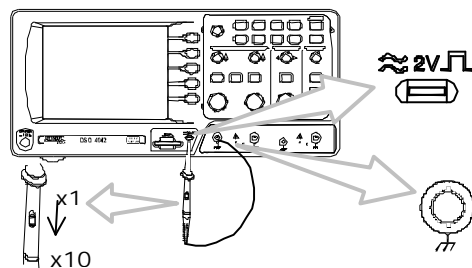

- Press the Utility key.



- Press *ProbeComp*.





- Press *Wavetype* repeatedly to select the standard square wave.





- Press the Autoset key. The compensation signal will appear in the display.



- Press the Display key, then *Type* to select the vector waveform.

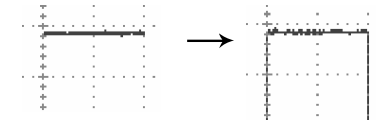

- Turn the adjustment point on the probe until the signal edge becomes sharp.

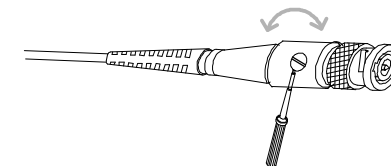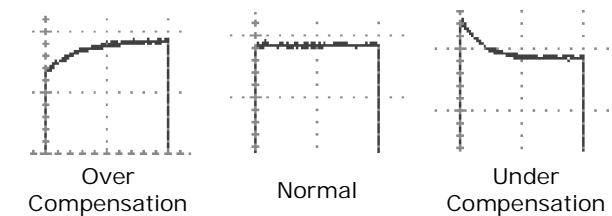

FAQ

- The input signal does not appear in the display.
- I want to remove some contents from the display.
- The waveform does not update (frozen).
- The probe waveform is distorted.
- Autoset does not catch the signal well.
- I want to clean up the cluttered panel settings.
- The accuracy does not match the specifications.
- The SD card slot does not accept my card.

The input signal does not appear in the display.

Make sure you have activated the channel. If not, press the CH key. If the signal still does not appear, press the Autoset key.

I want to remove some contents from the display.

To clear the math result, press the Math key twice (page46).
To clear the cursor, press the Cursor key again (page44).
To clear the Help contents, press the Help key again (page33).

The waveform does not update (frozen).

Press the Run/Stop key to unfreeze the waveform. See page36 for details. For trigger setting details, see page61.

The probe waveform is distorted.

You might need to compensate the probe. For details, see page91. Note that the frequency accuracy and duty factor are not specified for probe compensation waveform and therefore it should not be used for other reference purpose.

Autoset does not catch the signal well.

Autoset function cannot catch signals under 30mV or 30Hz. Please use the manual operation. See page35 for details.

I want to clean up the cluttered panel settings.

Recall the default settings by pressing the Save/Recall key→Default Setting. For default setting contents, see page32.

The saved display image is too dark on the background.

Use the Inksaver function which reverses the background color. For details, see page81.

The accuracy does not match the specifications.

Make sure the device is powered on for at least 30 minutes, within +20°C~+30°C. This is necessary to stabilize the unit to match the specification.

The SD card slot does not accept my card.


Make sure it is a 1. Standard SD card (MMC and SDHC are not supported), 2. 2GB or less, and 3. FAT or FAT32 formatted.

For more information, please contact your local dealer.


APPENDIX

Fuse Replacement

- Procedure
1. Take off the power cord and remove the fuse socket using a minus driver.

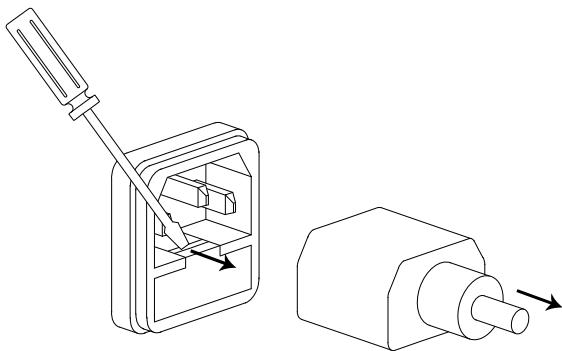

2. Replace the fuse in the holder.

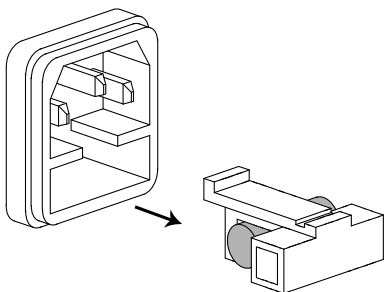

Ratings T1A, 250V

DSO-4000 Series Specifications

The specifications apply when the oscilloscope is powered on for at least 30 minutes under +20°C~+30°C.

Model-specific specifications

DSO-4022	Bandwidth (–3dB)	DC coupling: DC ~ 25MHz AC coupling: 10Hz ~ 25MHz
	Bandwidth Limit	None
	Trigger Sensitivity	Approx. 0.5div or 5mV
	External Trigger Sensitivity	~ 50mV
DSO-4042	Rise Time	< 14ns approx.
	Bandwidth (–3dB)	DC coupling: DC ~ 40MHz AC coupling: 10Hz ~ 40MHz
	Bandwidth Limit	None
	Trigger Sensitivity	0.5div or 5mV (DC ~ 25MHz) 1.5div or 15mV (25MHz~40MHz)
DSO-4062	External Trigger Sensitivity	~ 50mV
	Rise Time	< 8.75ns approx.
	Bandwidth (–3dB)	DC coupling: DC ~ 60MHz AC coupling: 10Hz ~ 60MHz
	Bandwidth Limit	20MHz (–3dB)
DSO-4102	Trigger Sensitivity	0.5div or 5mV (DC ~ 25MHz) 1.5div or 15mV (25MHz~60MHz)
	External Trigger Sensitivity	~ 50mV (DC~25MHz) ~ 100mV (25MHz~60MHz)
	Rise Time	< 5.8ns approx.
	Bandwidth (–3dB)	DC coupling: DC ~ 100MHz AC coupling: 10Hz ~ 100MHz
	Bandwidth Limit	20MHz (–3dB)
	Trigger Sensitivity	0.5div or 5mV (DC ~ 25MHz) 1.5div or 15mV (25MHz~100MHz)
	External Trigger Sensitivity	~ 50mV (DC~25MHz) ~ 100mV (25MHz~100MHz)
	Rise Time	< 3.5ns approx.

Common specifications

Vertical	Sensitivity	2mV/div~5V/Div (1-2-5 increments)
	Accuracy	$\pm (3\% \times \text{Readout} + 0.1 \text{ div} + 1 \text{ mV})$
	Bandwidth	See model-specific specifications
	Rise Time	See model-specific specifications
	Input Coupling	AC, DC, Ground
	Input Impedance	$1\text{M}\Omega \pm 2\%$, $\sim 15\text{pF}$
	Polarity	Normal, Invert
	Maximum Input	300V (DC+AC peak), CAT II
	Math Operation	+, -, FFT
Trigger	Offset Range	2mV/div~50mV/div: $\pm 0.4\text{V}$ 10mV/div~500mV/div: $\pm 4\text{V}$ 1V/div~5V/div: $\pm 40\text{V}$
	Sources	CH1, CH2, Line, EXT
	Modes	Auto, Normal, Single, TV, Edge, Pulse
	Coupling	AC, DC, LFrej, HFrej, Noise rej
External trigger	Sensitivity	See model-specific specifications
	Range	DC: $\pm 15\text{V}$, AC: $\pm 2\text{V}$
	Sensitivity	See model-specific specifications
	Input Impedance	$1\text{M}\Omega \pm 2\%$, $\sim 16\text{pF}$
Horizontal	Maximum Input	300V (DC+AC peak), CATII
	Range	1ns/div~10s/div, 1-2-5 increment Roll: 250ms/div – 10s/div
	Modes	Main, Window, Window Zoom, Roll, X-Y
	Accuracy	$\pm 0.01\%$
X-Y Mode	Pre-Trigger	10 div maximum
	Post-Trigger	1000 div
	X-Axis Input	Channel 1
Signal Acquisition	Y-Axis Input	Channel 2
	Phase Shift	$\pm 3^\circ$ at 100kHz
	Real-Time	250M Sa/s maximum
	Equivalent	25G Sa/s maximum
	Vertical	8 bits
	Resolution	
	Record Length	4k points maximum
	Acquisition	Normal, Peak Detect, Average
	Peak Detection	10ns (500ns/div ~ 10s/div)
Average		2, 4, 8, 16, 32, 64, 128, 256

Cursors and Measurement	Voltage	Vpp, Vamp, Vavg, Vrms, Vhi, Vlo, Vmax, Vmin, Rise Preshoot/ Overshoot, Fall Preshoot/ Overshoot
	Time	Freq, Period, Rise Time, Fall Time, + Width, – Width, Duty Cycle
	Cursors	Voltage difference (ΔV) and Time difference (ΔT) between cursors
	Auto Counter	Resolution: 6 digits, Accuracy: $\pm 2\%$ Signal source: All available trigger source except the Video trigger
Control Panel Function	Autoset	Automatically adjust Vertical Volt/div, Horizontal Time/div, and Trigger level
	Save/Recall	Up to 15 sets of measurement conditions and waveforms
Display	LCD	5.6 inch, TFT, brightness adjustable
	Resolution (dots)	234 (Vertical) x 320 (Horizontal)
	Graticule	8 x 10 divisions
	Display Contrast	Adjustable
Interface	USB Slave Connector	USB1.1 & 2.0 full speed compatible (printers and flash disk not supported)
	SD Card Slot	Image (BMP) and waveform data (CSV)
	Frequency range	1kHz ~ 100kHz adjustable, 1kHz step
Probe Compensation Signal	Duty cycle	5% ~ 95% adjustable, 5% step
	Amplitude	$2V_{pp} \pm 3\%$
Power Source	Line Voltage	100V~240V AC, 47Hz~63Hz
	Power	18W, 40VA maximum
	Consumption	
	Fuse Rating	1A slow, 250V
Operation Environment	Ambient temperature	0 ~ 50°C
	Relative humidity	$\leq 80\%$ @35°C
Storage Environment	Ambient temperature	-20 ~ 70°C
	Relative humidity	$\leq 80\%$ @70°C
Dimensions		341.5 (W) x 162.3 (H) x 159 (D) mm
Weight		Approx. 2.5kg

Probe Specifications

DSO-4022/4042 Probe

Applicable model & probe	DSO-4022, DSO-4042 GTP-060A-4
Position x 10	Attenuation Ratio 10:1 Bandwidth DC ~ 60MHz Input Resistance 10M Ω when used with 1M Ω input Input Capacitance 30pF approx. Maximum Input Voltage 600Vpeak CATII Derating with frequency
Position x 1	Attenuation Ratio 1:1 Bandwidth DC ~ 6MHz Input Resistance 1M Ω when used with 1M Ω input Input Capacitance 200pF approx. Maximum Input Voltage 200Vpeak CATII Derating with frequency
Operating Cond.	Temperature -10°C ~ 55°C Relative Humidity \leq 85% @35°C
Safety Standard	EN 61010-031 CAT II

DSO-4062/4102 Probe

Applicable model & probe	DSO-4062 GTP-060A-2	DSO-4102 GTP-100A-2
Position x 10	Attenuation Ratio 10:1 Bandwidth DC ~ 60MHz Input Resistance 10M Ω when used with 1M Ω input Input Capacitance 23pF approx. Maximum Input Voltage 500V CAT I, 300V CAT II (DC+Peak AC) Derating with frequency	DC ~ 100MHz 17pF approx.
Position x 1	Attenuation Ratio 1:1 Bandwidth DC ~ 6MHz Input Resistance 1M Ω when used with 1M Ω input Input Capacitance 180pF approx. Maximum Input Voltage 300V CAT I, 150V CAT II (DC+Peak AC) Derating with frequency	47pF approx.
Operating Cond.	Temperature -10°C ~ 55°C Relative Humidity \leq 85% @35°C	
Safety Standard	EN 61010-031 CAT II	

Declaration of Conformity

The below mentioned products

Type of Product: Digital Storage Oscilloscope

Model Number: DSO-4022, DSO-4042, DSO-4062, DSO-4102

are herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Law of Member States relating to Electromagnetic Compatibility (2004/108/EC) and Low Voltage Directive (2006/95/EC).

For the evaluation regarding the Electromagnetic Compatibility and Low Voltage Directive, the following standards were applied:

© EMC

EN 61326-1: Electrical equipment for measurement, control and laboratory use — EMC requirements (2006)	
Conducted Emission	Electrical Fast Transients
Radiated Emission	EN 61000-4-4: 2004
EN 55011: Class A 1998 + A1:1999 + A2:2002	
Current Harmonics	Surge Immunity
EN 61000-3-2: 2000 + A2:2005	EN 61000-4-5: 1995 + A1:2001
Voltage Fluctuations	Conducted Susceptibility
EN 61000-3-3: 1995 + A1:2001 + A2:2005	EN 61000-4-6: 1996 + A1:2001
Electrostatic Discharge	Power Frequency Magnetic Field
EN 61000-4-2: 1995 + A1:1998 + A2:2001	EN 61000-4-8: 1993 + A1:2001
Radiated Immunity	Voltage Dip/ Interruption
EN 61000-4-3: 2002 + A1:2002	EN 61000-4-11: 2004

© Safety

Low Voltage Equipment Directive 2006/95/EC
Safety Requirements
IEC/EN 61010-1: 2001

INDEX

AC coupling.....	59	cycle time measure.....	42
accumulating waveform.....	52	DC coupling.....	58
acquisition.....	49	default setup.....	84
menu tree.....	18	contents.....	32
specification.....	97	menu tree.....	24
addition.....	47	display.....	53
menu tree.....	22	contrast setting.....	53
amplitude measure.....	41	diagram.....	15
auto set.....	35	grid setting.....	53
exception.....	36	menu tree.....	20
faq.....	94	shortcut.....	20
specification.....	98	specification.....	98
auto trigger.....	61	display image.....	94
automatic measurement.....	43	faq.....	71
menu tree.....	23	file format.....	81
overview.....	41	save.....	27
shortcut.....	23	save menu tree.....	27
specification.....	98	dot waveform.....	52
average acquisition.....	50	duty cycle measure.....	42
average voltage measure.....	42	edge trigger.....	63
bandwidth limitation.....	59	menu tree.....	29
blackman window.....	46	EN61010.....	100
calibration, vertical resolution.....	90	measurement category.....	7
caution symbol.....	6	pollution degree.....	8
channel.....	34	environment.....	98
faq.....	93	safety instruction.....	8
menu tree.....	19	equivalent time sampling.....	51
shortcut.....	19	external trigger.....	61
cleaning the instrument.....	8	input terminal.....	13
configure remote control.....	69	falling time measure.....	42
coupling mode.....	58	FFT.....	48
menu tree.....	19	menu tree.....	22
cursor.....	44	overview.....	46
faq.....	93	file format.....	71
menu tree.....	19	firmware version.....	70
shortcut.....	19	flattop window.....	46
specification.....	98	force trigger.....	68
		frequency measure.....	42

frequency rejection.....	63	peak detect acquisition.....	50
front panel diagram.....	11	peak to peak measure.....	41
fuse replacement.....	95	peak voltage measure.....	41
safety instruction.....	8	power on/off.....	7
general purpose signal.....	39	safety instruction.....	14
ground.....	58	switch overview.....	14
coupling.....	6	preshoot voltage measure.....	42
symbol.....	13	probe.....	91
terminal.....	46	attenuation level.....	60
hanning window.....	76	attenuation menu tree.....	19
hardcopy.....	31	compensation menu tree.....	31
menu tree.....	31	compensation signal overview.....	94
shortcut.....	33	faq.....	50
help.....	93	peak detect demonstration.....	42
faq.....	41	pulse time measure.....	66
high voltage measure.....	54	pulse width trigger.....	63
horizontal.....	37	condition.....	29
basic operation.....	44	menu tree.....	51
cursor operation.....	21	real time sampling.....	14
menu tree.....	54	rear panel diagram.....	84
position.....	54	recall.....	84
scale.....	21	default setup.....	24
shortcut.....	97	menu tree.....	86
specification.....	99	reference waveform.....	87
IEC 1010-1.....	81	setup.....	24
ink saver.....	77	shortcut.....	88
in display save.....	83	waveform.....	46
in hardcopy.....	15	rectangular window.....	25
in save all.....	59	reference waveform.....	86
input frequency indicator.....	70	menu tree.....	69
invert waveform.....	10	recall.....	42
language selection.....	41	remote control interface.....	55
list of features.....	93	rising time measure.....	42
low voltage measure.....	22	roll mode.....	55
math.....	22	root mean square measure.....	36
faq.....	10	run/stop.....	93
menu tree.....	41	faq.....	78
shortcut.....	63	display image.....	81
model difference.....	49	menu tree.....	79
negative peak measure.....	62	setup.....	24
noise rejection.....	62	shortcut.....	98
normal acquisition.....	62	specification.....	80
normal trigger.....	42	waveform.....	82
NTSC.....	62	save all.....	27
overshoot voltage measure.....	62	menu tree.....	SD card
PAL.....			

faq	94	status indicator	15
file menu tree	28	video	65
file operation	74	UK power cord	9
SECAM	62	USB for remote control	69
serial number	70	utility	
service operation		key overview	12
about disassembly	7	menu tree	30
contact	94	shortcut	30
setting up the oscilloscope	16	vector waveform	52
setup		vertical	58
default contents	32	basic operation	38
file format	73	cursor operation	45
how to save	79	position	58
recall	87	resolution calibration	90
recall menu tree	24	scale	58
save menu tree	26	specification	97
single trigger	68	video line	62
single trigger mode	62	video trigger	65
specifications	96	menu tree	28
faq	94	warning symbol	6
subtraction	47	waveform	
menu tree	22	file format	71
system information	70	invert waveform	59
timebase indicator	54	recall	88
trigger	61	recall menu tree	25
coupling	63	roll mode	55
edge	63	save	80
force	68	savemenu tree	26
indicator	61	x-y mode	57
level knob	63	zoom mode	56
menu tree	28	waveform accumulation	52
parameter	61	x-y mode	57
pulse width	66	specification	97
shortcut	28	zoom waveform	56
specification	97		