



# EFEM4RT1170UG

Enabling Additional Edgefast BT PAL Examples on M4 core  
for RT1170

Rev. 2 — 13 June 2022

User manual

## Document information

Information	Content
Keywords	EdgeFast examples, M7, M4, toolchains, IAR, ARMGCC
Abstract	This document describes the steps to migrate EdgeFast examples from M7 to M4 with different toolchains



## 1 Introduction

RT1170 works with two cores: M7 and M4, on which both all EdgeFast examples can run. However, all the EdgeFast examples in the release package are enabled on M7. Only the A2DP source example is enabled on M4.

EdgeFast projects for both the cores share the demo source files but with different project settings. Therefore, the examples can be migrated.

This document describes the steps to migrate EdgeFast examples from M7 to M4 with different toolchains. There are four main steps required. Additionally, you can also delete the function.

1. Create an M4 project
2. Rearrange source files
3. Rearrange project files
4. Adjust project settings
5. Delete function

In this document, the `peripheral_ht` example is used to demonstrate how to enable EdgeFast examples on M4 core with IAR and ARMGCC.

## 2 IAR

This section describes the steps to create an M4 project with IAR, rearrange source and project files, adjust project settings, and delete function.

### 2.1 Create an M4 project

To create an M4 project, perform the following steps:

1. Copy the folder `cm4` in the directory `<install_dir>\boards\evkmimxrt1170\edgefast_bluetooth_examples\A2DP_source\cm4` into the folder in which the example should be enabled. In this case, copy the folder `cm4` into the directory `<install_dir>\boards\evkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht`.
2. Open the folder `iar` in the directory `<install_dir>\boards\evkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht\cm4\iar`.
3. Rename the files. Change the file name `a2dp_source_cm4` to `peripheral_ht_cm4` in all the respective files.



4. Open the files `peripheral_ht_cm4.eww` and `peripheral_ht_cm4.ewp` with a text editor, such as Notepad, Notepad++, Sublime, or Visual Studio Code.
5. Search and replace all `a2dp_source_cm4` with `peripheral_ht_cm4`, and then save the files.

## Enabling Additional Edgefast BT PAL Examples on M4 core for RT1170

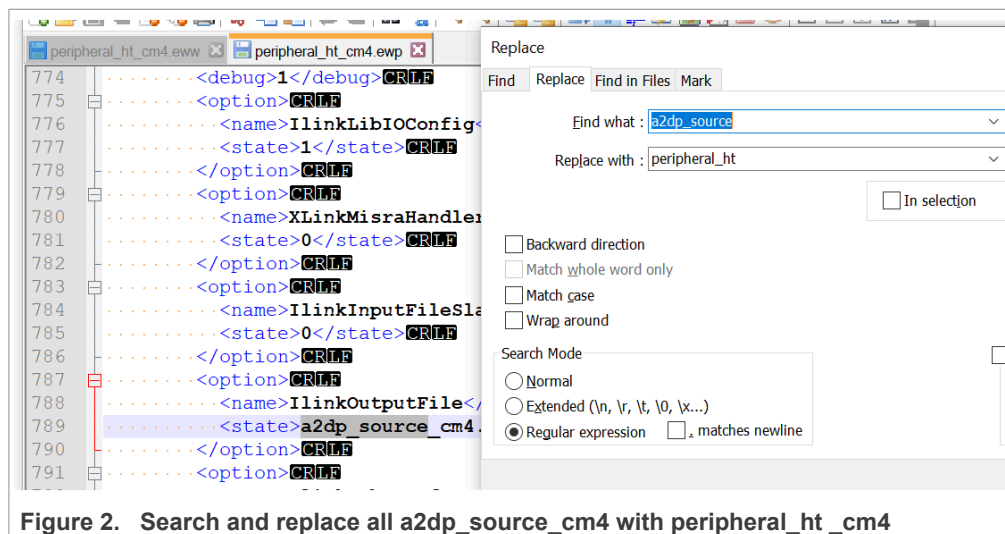


Figure 2. Search and replace all a2dp\_source\_cm4 with peripheral\_ht\_cm4

## 2.2 Rearrange source files

To rearrange source files, perform the following steps:

1. Open the folder *cm4* in the directory `<install_dir> boards\levkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht\cm4` and delete all files with the extensions \*.c and \*.h.
2. Copy the files with the extensions \*.c and \*.h from the folder *boards\levkmimxrt1170\edgefast\_bluetooth\_examples\peripheral\_ht\cm7* to the folder `<install_dir> boards\levkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht\cm4`.

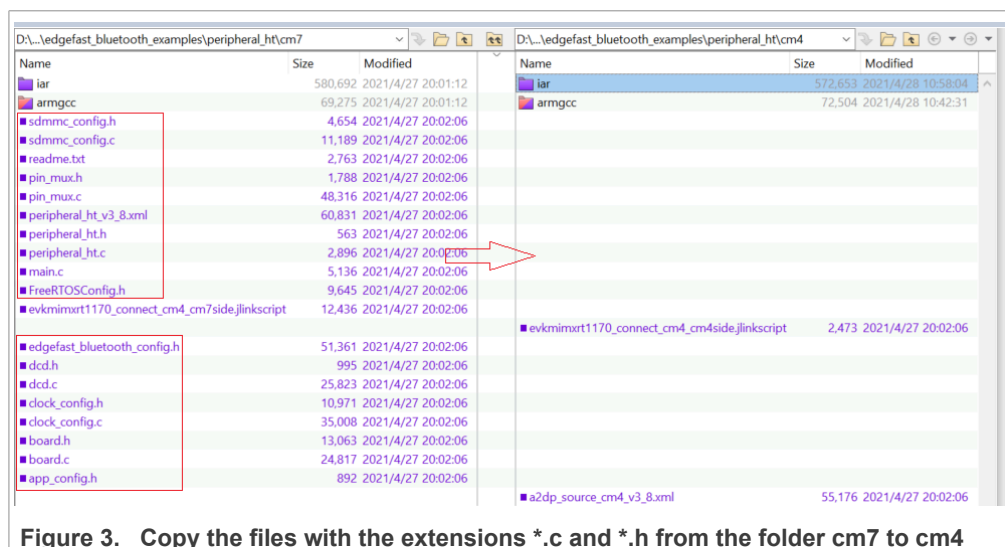


Figure 3. Copy the files with the extensions \*.c and \*.h from the folder cm7 to cm4

## 2.3 Rearrange project files

To rearrange project files, perform the following steps:

1. Open the *peripheral\_ht\_cm7* and *peripheral\_ht\_cm4* IAR projects in the directories `<install_dir> boards\levkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht`

\cm7\iar and <install\_dir> boards\evkmimxrt1170\edgefast\_bluetooth\_examples\peripheral\_ht \cm4\iar.

- a. Compare the whole project directory, find file groups that the cm7 project has but are missing in the cm4 project. Add the missing file groups from the cm7 project into the cm4 project.
  - b. Compare the difference between the two groups with the same name. Remove files that do not exist in the cm7 project but exist in the cm4 project. Find files that are available in the cm7 project but are missing in the cm4 project. Add the missing files from the cm7 project into the cm4 project.
2. For example, in [Figure 4](#), the files in the source group in the cm4 project must be removed, and the files in the path: <install\_dir>boards\evkmimxrt1170\edgefast\_bluetooth\_examples\peripheral\_ht with the same name as the files in the cm7 project must be added into the source group.

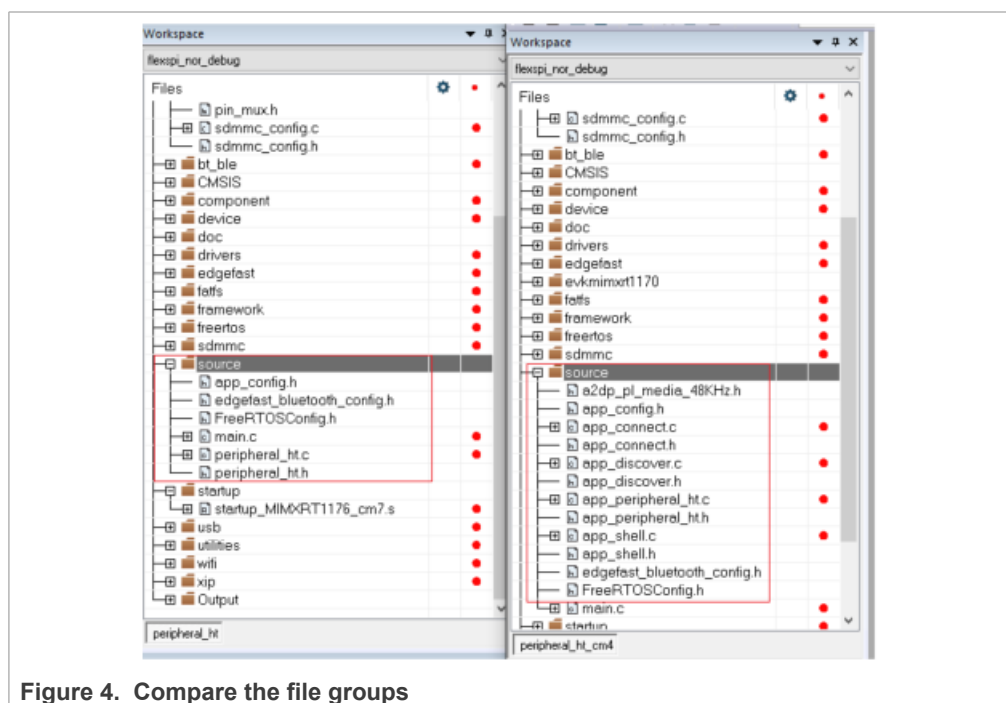


Figure 4. Compare the file groups

3. Compare the services group. The peripheral hts profile is in the services folder. Add the hts.c file to the services group of the cm4 folder.

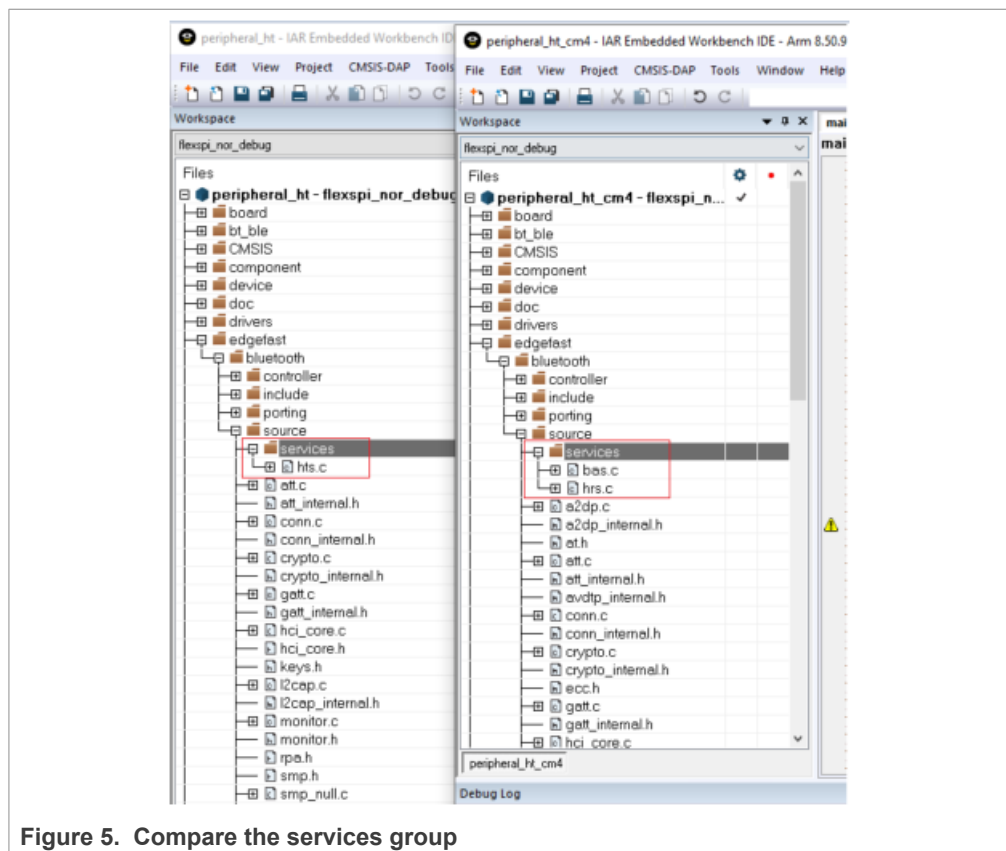


Figure 5. Compare the services group

## 2.4 Adjust project settings

To adjust the project settings, perform the following steps:

1. Compare the macro in the project settings: **Option > C/C++ compiler > Preprocessor**.
2. Find the macros that do not exist in the **cm4** project but are available in the **cm7** project. Delete these macro. The rule is that **m7** macro setting should be same with **m4**.

## Enabling Additional Edgefast BT PAL Examples on M4 core for RT1170

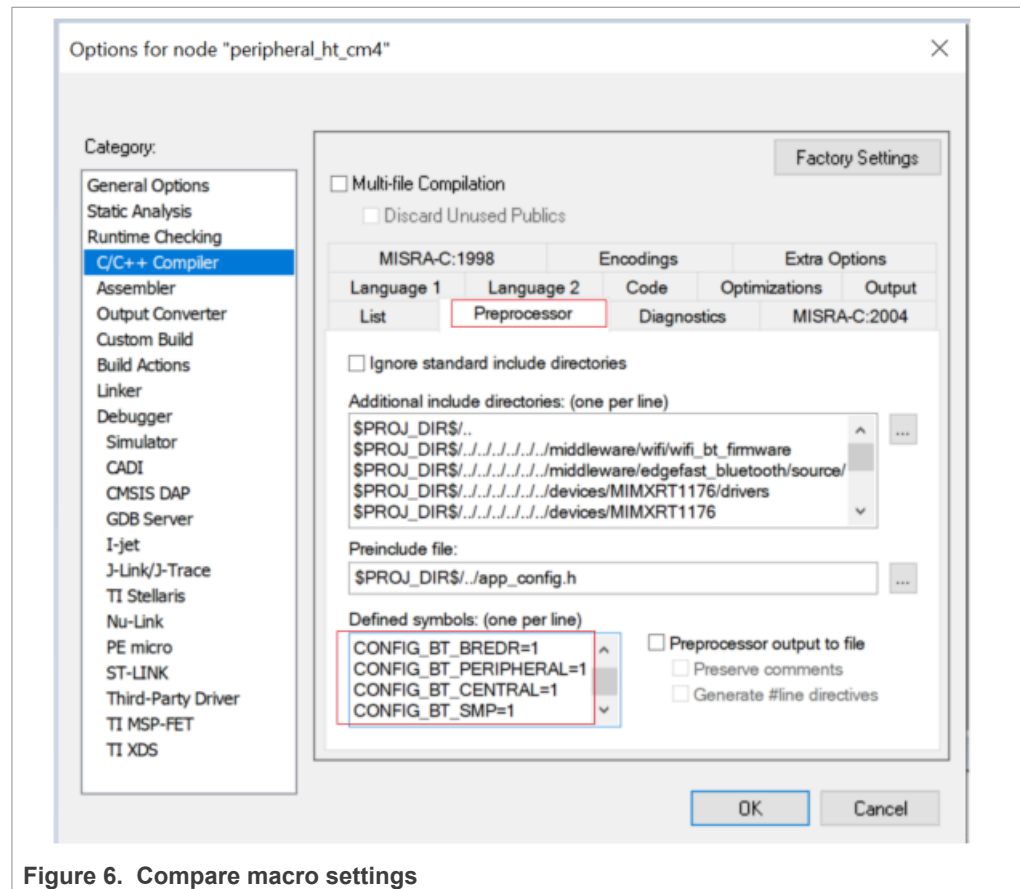


Figure 6. Compare macro settings

The macros are in the **peripheral\_ht\_cm4.ewp** file.

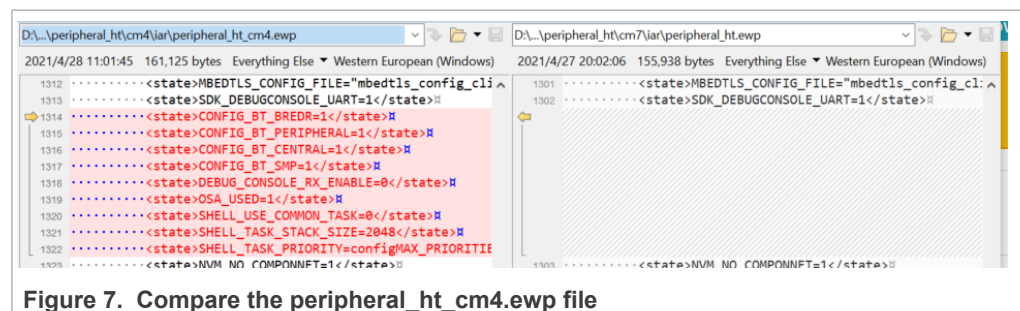


Figure 7. Compare the peripheral\_ht\_cm4.ewp file

## 2.5 Delete function

As a final step, remove the function “*SCB\_DisableDCache()*” in *main.c*.

On the completion of the above steps, the M7 project successfully migrates to an M4 project. You can now download and debug the M4 example project.

## 3 Arm GCC

This section describes the steps to create an M4 project with Arm GCC, rearrange source and project files, adjust project settings, and delete function.

### 3.1 Create an M4 project

To create an M4 project, perform the following steps:

1. Copy the folder `<install_dir>boards\levkmimxrt1170\edgefast_bluetooth_examples\la2dp_source\cm4` into another folder in which the example should be enabled. In this case, copy the folder `<install_dir>boards\levkmimxrt1170\edgefast_bluetooth_examples\la2dp_source\cm4` into `<install_dir>boards\levkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht\cm4`.
2. Open the file `CMakeLists.txt` located in the path: `<install_dir>boards\levkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht\cm4\armgcc`.
3. Search and replace all `a2dp_source_cm4` with `peripheral_ht_cm4`, and then save the files.

### 3.2 Rearrange source files

To rearrange source files, perform the following steps:

1. Open the folder `<install_dir>boards\levkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht\cm4` and delete all files with the extensions `*.c` and `*.h`.
2. Copy the files with the extensions `*.c` and `*.h` in the folder `<install_dir>boards\levkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht\cm7` to the folder `<install_dir>boards\levkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht\cm4`.

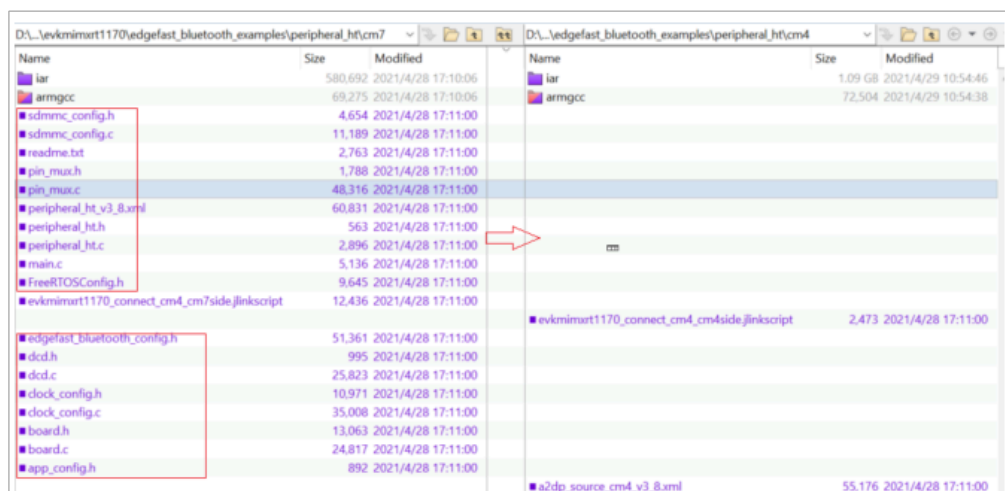


Figure 8. Copy the files with the extensions `*.c` and `*.h` from the folder `cm7` to `cm4`

### 3.3 Rearrange project files

To rearrange project files, perform the following steps:

1. Open the `CMakeLists.txt` of the two examples respectively. The two files are in the `<install_dir>boards\levkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht\cm7\armgcc` and `<install_dir>boards\levkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht\cm4\armgcc` folders respectively.
2. Search the section `add_executable`. Compare the difference between the two sections. Remove files that do not exist in the `cm7` project but are available in the `cm4` project. Add the files that exist in the `cm7` project but are not available in the



## Enabling Additional Edgefast BT PAL Examples on M4 core for RT1170

cm4 project into the cm4 project. For example, in [Figure 9](#) the files in the red box should be removed and the files in the green box must be added into the cm4 project.

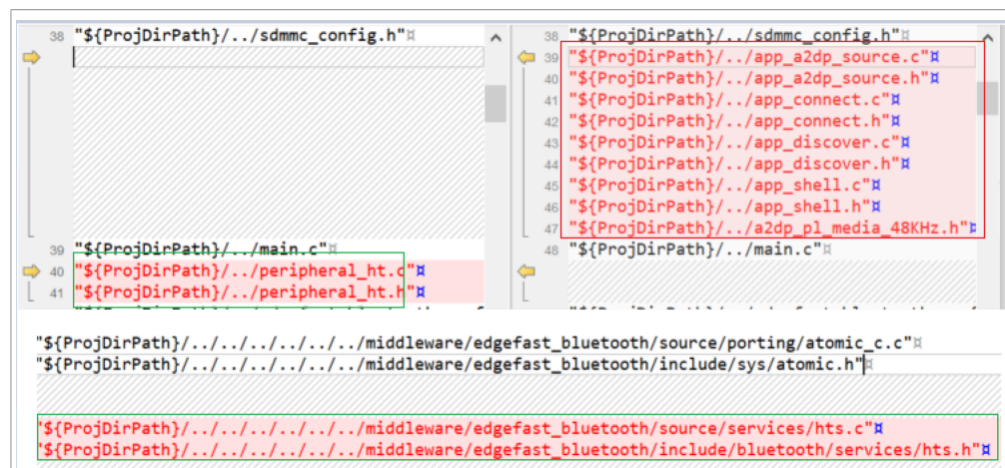


Figure 9. Compare the difference

### 3.4 Adjust project setting

To adjust the project settings, perform the following steps:

1. Open the *flags.cmake* of the two examples respectively. The two files are in the `<install_dir>boards\levkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht\cm7\armgcc` and `<install_dir>boards\levkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht\cm4\armgcc` folders respectively.
2. Search the **CMAKE\_C\_FLAGS\_DEBUG** section.
  - a. Compare the macro between the two sections.
  - b. Add the macros that do not exist in the **cm4** project but are available in the **cm7** project into the cm4 project. The rule is that macro setting should be same.
  - c. Delete the macros highlighted in the red rectangle.

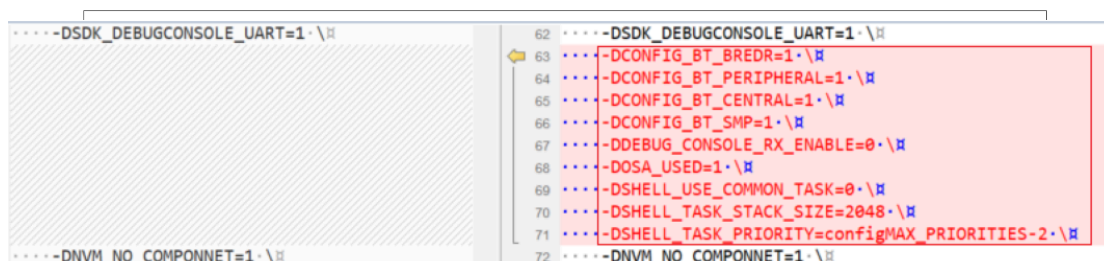


Figure 10. Delete macros

### 3.5 Delete function

As a final step, remove the function "SCB\_DisableDCache()" in main.c.

On the completion of the above steps, the M7 project successfully migrates to an M4 project. You can now download and debug the M4 example project.



## 4 MDK

This section describes the steps to create an M4 project with MDK, rearrange source and project files, adjust project settings, and delete function.

### 4.1 Create an M4 project

1. Copy folder *cm4* from `<install_dir>boards\evkmimxrt1170\edgefast_bluetooth_examples\l2dp_source\cm4` into the folder in where the example must be enabled. In this case, copy folder *cm4* into directory `<install_dir>\boards\evkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht`.
2. Open folder *mdk* from `<install_dir>boards\evkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht\cm4\mdk`.

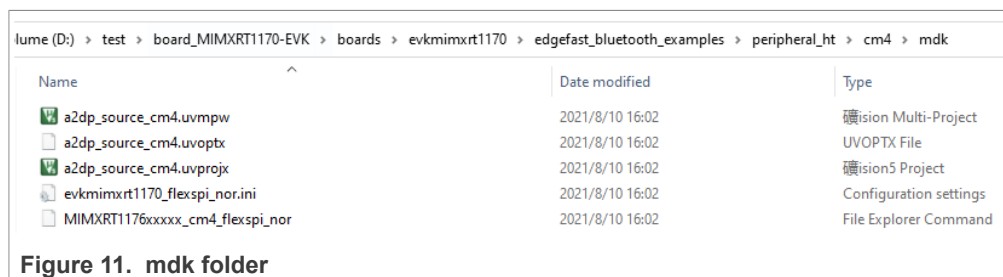


Figure 11. mdk folder

3. Change the filename *a2dp\_source\_cm4* to *peripheral\_ht\_cm4* respectively.
4. Open the files *peripheral\_ht\_cm4.uvmpw* and *peripheral\_ht\_cm4.uvoptx*, *peripheral\_ht\_cm4.uvprojx* with a text editor, such as Notepad, Notepad++, Sublime, or Visual Studio code.
5. Search and replace *a2dp\_source\_cm4* with *peripheral\_ht\_cm4*, and then save the files.

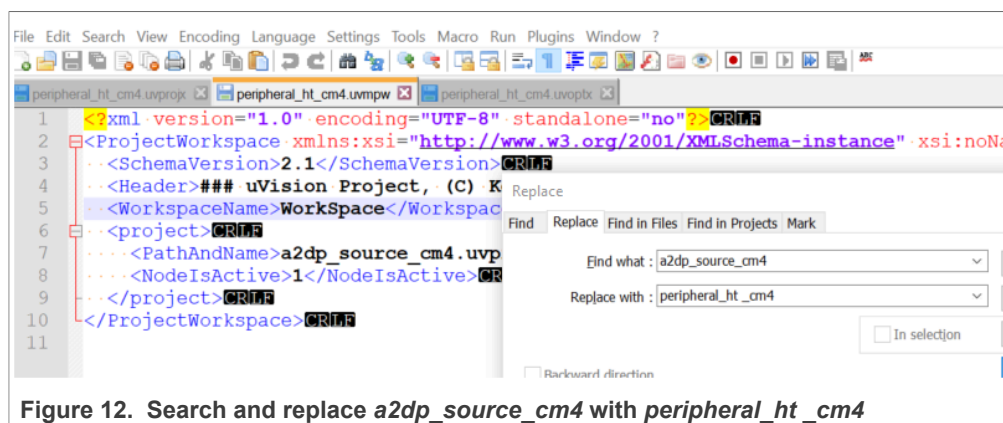


Figure 12. Search and replace *a2dp\_source\_cm4* with *peripheral\_ht\_cm4*

### 4.2 Rearrange source files

1. Open folder *cm4* in `<install_dir>boards\evkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht\cm4`, and delete all files with the .c and .h file name extension.
2. Copy files with the .c and .h filename extension in folder *cm7* with directory `<install_dir>boards\evkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht\cm7` to folder *cm4* with directory `<install_dir>boards\evkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht\cm4`.

## Enabling Additional Edgefast BT PAL Examples on M4 core for RT1170

Name	Size	Modified	Name	Size	Modified
mdk	340,906	2021/8/10 16:02:06	mdk	359,537	2021/8/11 13:40:2
iar	585,436	2021/8/10 16:02:06	iar	579,736	2021/8/11 13:38:5
armgcc	74,332	2021/8/10 16:02:06	armgcc	78,527	2021/8/11 13:38:5
sdmmc_config.h	4,826	2021/8/10 16:02:26			
sdmmc_config.c	11,295	2021/8/10 16:02:26			
readme.txt	4,400	2021/8/10 16:02:26			
pin_mux.h	2,979	2021/8/10 16:02:26			
pin_mux.c	47,603	2021/8/10 16:02:26			
peripheral_ht_v3_8.xml	69,330	2021/8/10 16:02:26			
peripheral_ht.h	563	2021/8/10 16:02:26			
peripheral_ht.c	4,293	2021/8/10 16:02:26			
main.c	5,136	2021/8/10 16:02:26			
FreeRTOSConfig.h	9,645	2021/8/10 16:02:26			
evkmimrt1170_connect_cm4_cm7side.linksc...	12,436	2021/8/10 16:02:26			
edgefast_bluetooth_config.h	58,443	2021/8/10 16:02:26	evkmimrt1170_connect_cm4_cm4side.linksc...	2,473	2021/8/10 16:02:2
dcd.h	995	2021/8/10 16:02:26			
dcd.c	24,269	2021/8/10 16:02:26			
clock_config.h	11,205	2021/8/10 16:02:26			
clock_config.c	35,730	2021/8/10 16:02:26			
board.h	10,487	2021/8/10 16:02:26			
board.c	24,817	2021/8/10 16:02:26			
app_config.h	1,128	2021/8/10 16:02:26			

Figure 13. Rearrange source files

### 4.3 Rearrange project files

1. Open the *peripheral\_ht\_cm7* and *peripheral\_ht\_cm4* IAR projects. The two workspaces are located in `<install_dir>\boards\evkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht\cm7\mdk` and `<install_dir>\boards\evkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht\cm4\mdk` respectively.
  - Compare the whole project directory, find file groups that the cm7 project has but the cm4 project not and then add these groups into the cm4 project.
  - Compare the difference between the two groups with the same name, remove files that do not exist in the cm7 project but exist in the cm4 project; find files that the cm7 project has but the cm4 project not and then add these files into the cm4 project.
2. For the *source* group, in this case, the files in the source group in the cm4 project must be removed, and the files in the path `<install_dir>\boards\evkmimxrt1170\boards\evkmimxrt1170\edgefast_bluetooth_examples\peripheral_ht\cm4` with the same name as the files in the cm7 project must be added into the *source* group.

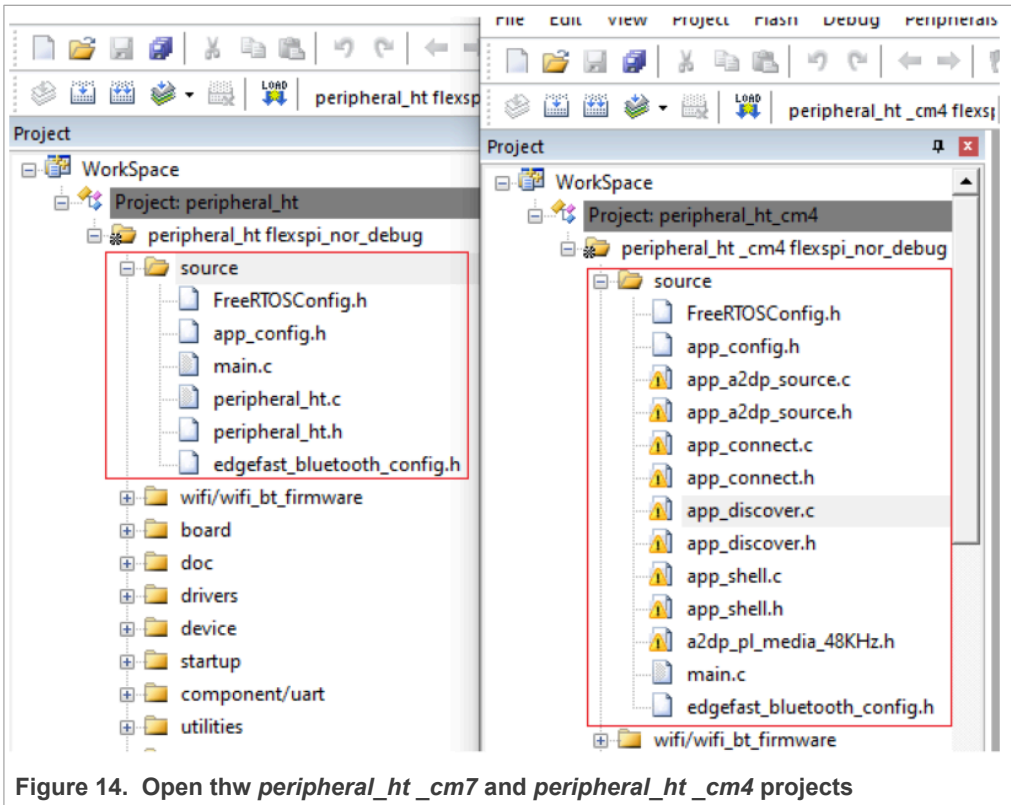


Figure 14. Open thw *peripheral\_ht\_cm7* and *peripheral\_ht\_cm4* projects

3. Compare the **service: group**.

Peripheral hts profile is located in “**service**” folder. Add the hts.c file to the services group of the cm4 folder.

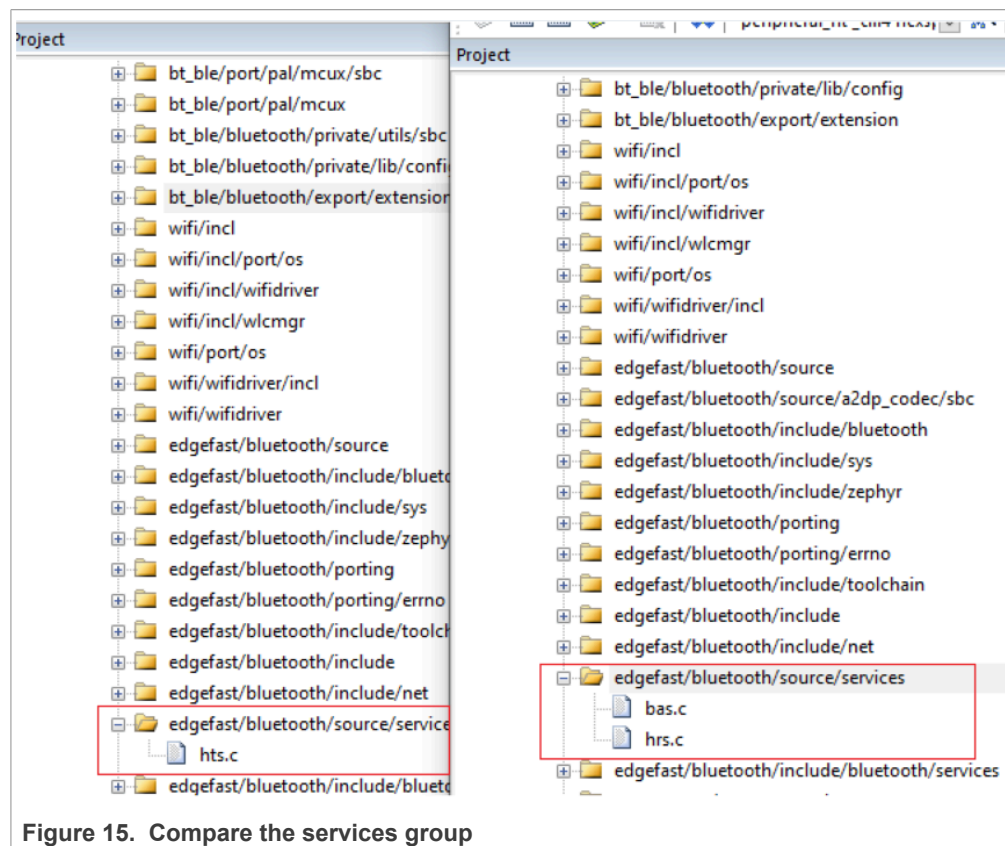


Figure 15. Compare the services group

#### 4.4 Adjust project settings

1. Compare the macro in the project settings: *preprocessor symbols*.
2. Compare the macro that does exist in the cm4 project but exists in the cm7 project.
3. Delete the following macro. The rule is that m7 macro setting should be same as m4 .

## Enabling Additional Edgefast BT PAL Examples on M4 core for RT1170

The macro could also be found in `peripheral_ht_cm4.uvprojx`.

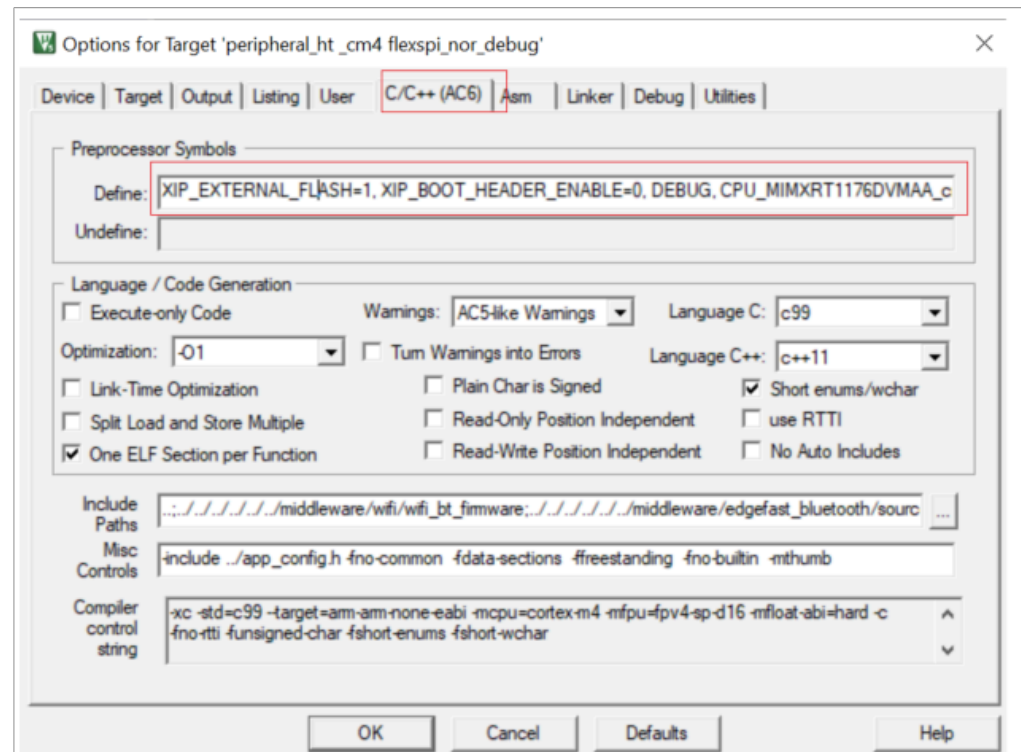


Figure 16. Compare preprocessor symbols

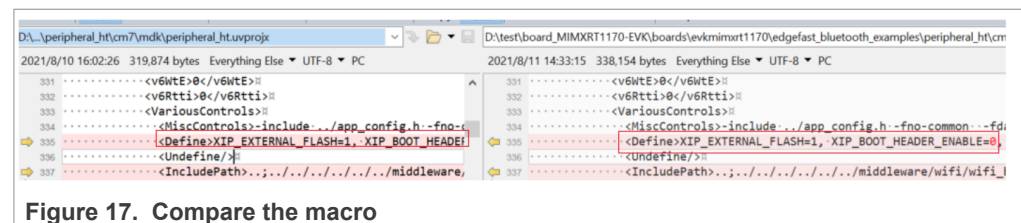


Figure 17. Compare the macro

## 4.5 Delete function

Remove function `SCB_DisableDCache()` in `main.c`.

On successful completion of the above steps, the M7 project is changed to the M4 project. You can now download and debug the M4 example project.

## 5 Note

The above steps are based on the **a2dp\_source** example and help enable the **peripheral\_ht** example on the **m4** core. You can use the same steps for other examples and migrate them from an **m7** project to an **m4** project.

## 6 Revision history

[Table 1](#) summarizes revisions to this document.

### Revision history

Revision number	Date	Substantive changes
0	10 June 2021	Initial release
1	19 August 2021	Updated for MCUXSDK 2.10.1
2	13 June 2022	Layout updated for MCUXSDK 2.12.0

## 7 Legal information

### 7.1 Definitions

**Draft** — A draft status on a document indicates that the content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included in a draft version of a document and shall have no liability for the consequences of use of such information.

### 7.2 Disclaimers

**Limited warranty and liability** — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. NXP Semiconductors takes no responsibility for the content in this document if provided by an information source outside of NXP Semiconductors.

In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the Terms and conditions of commercial sale of NXP Semiconductors.

**Right to make changes** — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

**Suitability for use** — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors and its suppliers accept no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

**Applications** — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification. Customers are responsible for the design and operation of their applications and products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.

**Terms and conditions of commercial sale** — NXP Semiconductors products are sold subject to the general terms and conditions of commercial sale, as published at <http://www.nxp.com/profile/terms>, unless otherwise agreed in a valid written individual agreement. In case an individual agreement is concluded only the terms and conditions of the respective agreement shall apply. NXP Semiconductors hereby expressly objects to applying the customer's general terms and conditions with regard to the purchase of NXP Semiconductors products by customer.

**Export control** — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

**Suitability for use in non-automotive qualified products** — Unless this data sheet expressly states that this specific NXP Semiconductors product is automotive qualified, the product is not suitable for automotive use. It is neither qualified nor tested in accordance with automotive testing or application requirements. NXP Semiconductors accepts no liability for inclusion and/or use of non-automotive qualified products in automotive equipment or applications.

In the event that customer uses the product for design-in and use in automotive applications to automotive specifications and standards, customer (a) shall use the product without NXP Semiconductors' warranty of the product for such automotive applications, use and specifications, and (b) whenever customer uses the product for automotive applications beyond NXP Semiconductors' specifications such use shall be solely at customer's own risk, and (c) customer fully indemnifies NXP Semiconductors for any liability, damages or failed product claims resulting from customer design and use of the product for automotive applications beyond NXP Semiconductors' standard warranty and NXP Semiconductors' product specifications.

**Translations** — A non-English (translated) version of a document, including the legal information in that document, is for reference only. The English version shall prevail in case of any discrepancy between the translated and English versions.

**Security** — Customer understands that all NXP products may be subject to unidentified vulnerabilities or may support established security standards or specifications with known limitations. Customer is responsible for the design and operation of its applications and products throughout their lifecycles to reduce the effect of these vulnerabilities on customer's applications and products. Customer's responsibility also extends to other open and/or proprietary technologies supported by NXP products for use in customer's applications. NXP accepts no liability for any vulnerability. Customer should regularly check security updates from NXP and follow up appropriately. Customer shall select products with security features that best meet rules, regulations, and standards of the intended application and make the ultimate design decisions regarding its products and is solely responsible for compliance with all legal, regulatory, and security related requirements concerning its products, regardless of any information or support that may be provided by NXP.

NXP has a Product Security Incident Response Team (PSIRT) (reachable at [PSIRT@nxp.com](mailto:PSIRT@nxp.com)) that manages the investigation, reporting, and solution release to security vulnerabilities of NXP products.

### 7.3 Trademarks

Notice: All referenced brands, product names, service names, and trademarks are the property of their respective owners.

**NXP** — wordmark and logo are trademarks of NXP B.V.



## Contents

<b>1</b>	<b>Introduction .....</b>	<b>2</b>
<b>2</b>	<b>IAR .....</b>	<b>2</b>
2.1	Create an M4 project .....	2
2.2	Rearrange source files .....	3
2.3	Rearrange project files .....	3
2.4	Adjust project settings .....	5
2.5	Delete function .....	6
<b>3</b>	<b>Arm GCC .....</b>	<b>6</b>
3.1	Create an M4 project .....	7
3.2	Rearrange source files .....	7
3.3	Rearrange project files .....	7
3.4	Adjust project setting .....	8
3.5	Delete function .....	8
<b>4</b>	<b>MDK .....</b>	<b>9</b>
4.1	Create an M4 project .....	9
4.2	Rearrange source files .....	9
4.3	Rearrange project files .....	10
4.4	Adjust project settings .....	12
4.5	Delete function .....	13
<b>5</b>	<b>Note .....</b>	<b>13</b>
<b>6</b>	<b>Revision history .....</b>	<b>14</b>
<b>7</b>	<b>Legal information .....</b>	<b>15</b>

Please be aware that important notices concerning this document and the product(s) described herein, have been included in section 'Legal information'.

© NXP B.V. 2022.

All rights reserved.

For more information, please visit: <http://www.nxp.com>

For sales office addresses, please send an email to: [salesaddresses@nxp.com](mailto:salesaddresses@nxp.com)

Date of release: 13 June 2022

Document identifier: EFEM4RT1170UG

Document number: