

Table of contents

The CM32M433R MCU.....	2
1. Chip introduction.....	2
2. Reference documents.....	2
3. Purchase links.....	3
The CM32M433R-START development board.....	4
1. Introduction.....	4
2. Reference documents.....	5
3. Purchase links.....	5
CM32M433R-START quick start guide.....	6
1. Download and execution of Nuclei Studio.....	6
2. Import CM32M4xxR SDK.....	7
3. Create a new HelloWorld project.....	7
4. Project introduction.....	9
5. Project compilation.....	10
6. Execution.....	10
7. Debugging.....	13
Reference documents.....	14
CM32M433R-START on-board peripherals use.....	15
1. Import Nuclei Board Labs.....	15
2. New project.....	16
3. Project introduction.....	16
4. Execution.....	17
Reference documents.....	17

The CM32M433R MCU

Original post: <https://www.rvmcu.com/quickstart-show-id-13.html>

1. Chip introduction


The CM32M4xxR series chips are the first low-power and large-capacity microcontrollers based on RISC-V architecture launched by China Mobile Xinsheng Technology. This series of MCUs has the characteristics of high performance, high reliability, high security, and low power consumption, and can be widely used in smart door locks, IoT gateways, interactive panels, measurement and control terminals, student education, consumer electronics and other related fields.

CONNECTIVITY

- ✓ 3×SPI, 1×QSPI
- ✓ 7×U(S)ART
- ✓ 2×CAN2.0B
- ✓ 4×I2C
- ✓ 2×I2S

SECURITY

- ✓ TRNG
- ✓ DES/AES
- ✓ SHA/MD5
- ✓ SM3/SM4

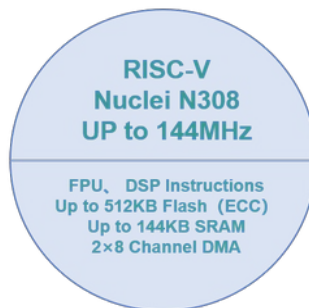

TIMER

- ✓ 2×16bit advanced timer
- ✓ 2×16bit basic timer
- ✓ 4×16bit timer
- ✓ 2×64bit systick

ANALOG

- ✓ 4×12bit 5Mps ADC
- ✓ 2×12bit 1Mps DAC
- ✓ 4×op-amps
- ✓ 7×comparators
- ✓ 1×temperature sensor

- Core: Nuclei N308 (RV32IMACFP)
- Main frequency: 144MHz
- Memory: built-in 512KB Flash, 144KB SRAM
- Operating voltage: 1.8V ~ 3.6V
- Built-in cryptographic algorithm hardware acceleration engine
- Peripheral Resources: timers (General Purpose Timer, Advanced Timer, Basic Timer), SPI, I2S, QSPI, I2C, USART, UART, CAN, ADC, DAC, TSC, GPIO

2. Reference documents

- CM32M433R reference manual:
<https://www.rvmcu.com/app/quickstart/skins/default/doc/CM32M4xxR-user-guide-V1.4.pdf>
- CM32M433R data sheet:
<https://www.rvmcu.com/app/quickstart/skins/default/doc/CM32M4xxR-datasheet-V1.4.pdf>
- Quick start guide:
https://www.xinshengcmiot.cn/xinsheng/static/file_20220301115957.pdf

- Nuclei Instruction Set Architecture Manual: https://doc.nucleisys.com/nuclei_spec/
- Nuclei N300 series processor core data book:
<https://www.nucleisys.com/upload/file/2020/02/1582893657-2424.pdf>
- Other documents available at: <https://user.nucleisys.com/> (registration required)
- Development tools: <https://nucleisys.com/download.php>

3. Purchase links

Retail purchase

Taobao: <https://item.taobao.com/item.htm?id=677606472384>

Volume Purchase

Contact: Manager Han

Tel: +86 18111213896


E-mail: hanyongchao@cmiot.chinamobile.com

The CM32M433R-START development board

Original post: <https://www.rvmcu.com/quickstart-show-id-14.html>

1. Introduction

CM32M433R-START is a RISC-V development board based on China Mobile's CM32M433R MCU. It features an on-board emulator and Arduino-compatible female headers.

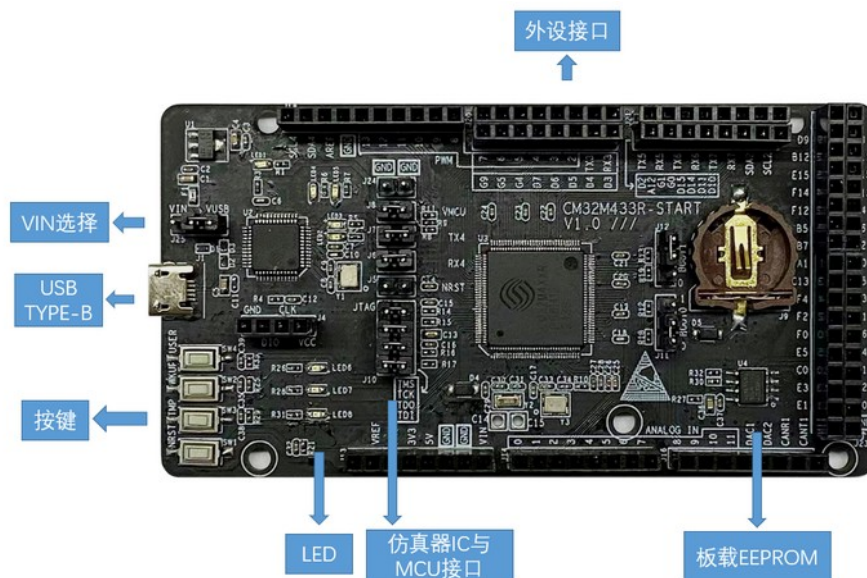

CM32M433R-START development board features:

- Microcontroller: CM32M433R
 - Core: Nuclei N308 (RV32IMACFP)
 - Main frequency: 144MHz
 - Memory: 512KB Flash, 144KB SRAM
 - Working voltage: 1.8~3.6V
 - Peripheral resources: Timers (4 general-purpose timers, 2 advanced timers, 2 basic timers) SPI3, I2S2, QSPI1, I2C4, UART4, CAN2, ADC2, DAC2
- Power supply mode: USB or 5V DC external power supply
- Size: 10.1*5.3cm
- Peripherals and interfaces:
 - USB Micro-B interface: download, debug, power supply
 - Arduino-compatible standard single row 2.54mm female headers
 - JTAG interface: MCU and debugger can be separated to work independently
 - Reset button
 - 3 user buttons
 - 3 user LED

2. Reference documents

Introduction to the CM32M433R: see previous chapter

CM32M433R-START development board schematic:

<https://www.rvmcu.com/app/quickstart/skins/default/doc/cm32m433r-start-sch.pdf>

CM32M433R-START development board user manual:

<https://www.rvmcu.com/app/quickstart/skins/default/doc/CM32M433R-START-User-Manual-V1.pdf>

3. Purchase links

Taobao: <https://item.taobao.com/item.htm?id=671656606437>

Aliexpress: <https://www.aliexpress.com/item/1005004333840765.html>


CM32M433R-START quick start guide

Original post: <https://www.rvmcu.com/quickstart-show-id-15.html>


1. Download and execution of Nuclei Studio

Nuclei Studio can be downloaded from the "Documents and Tools" page of Nuclei's official website (<https://www.nucleisys.com/download.php>).

Nuclei continuously updates and maintains the tools it provides, so it is recommended to use the latest version.

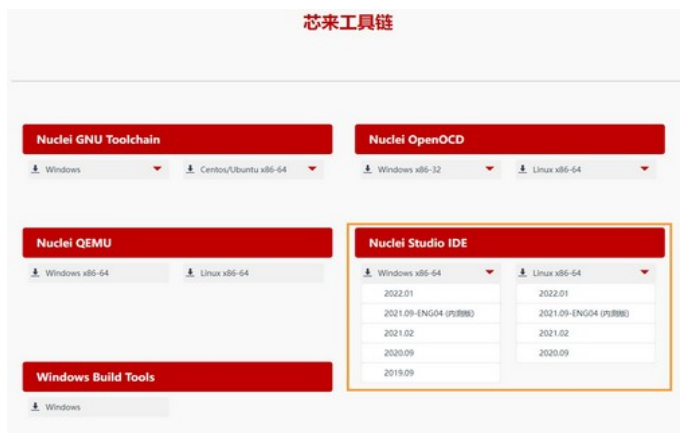


Simply unzip the compressed package and run the executable file under the NucleiStudio folder to start the Nuclei Studio IDE.

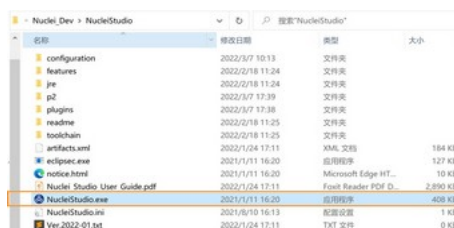


The installation procedure is similar under Linux, the executable file name is "NucleiStudio".

After starting the Nuclei Studio IDE for the first time, a dialogue box will pop up asking to set the path of the Workspace directory, which will be used to store the subsequently created project files.

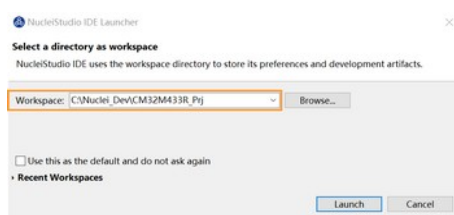


After setting the Workspace directory, click the "Launch" button to start Nuclei Studio. The Nuclei Studio interface after the first startup is shown below.

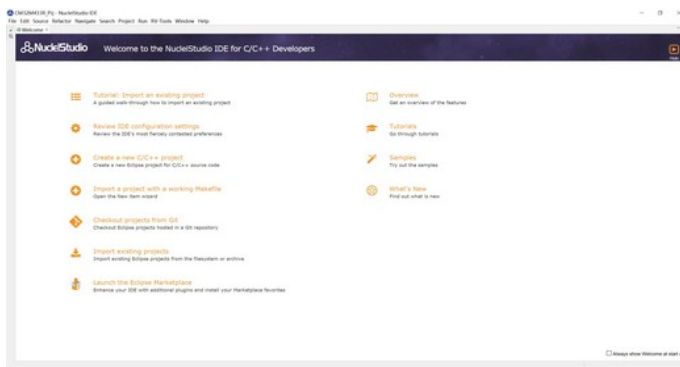


2. Import CM32M4xxR SDK


Select "RV-Tools —> Nuclei Package Management" in the Nuclei Studio menu bar, the pop-up dialogue box below will show up.

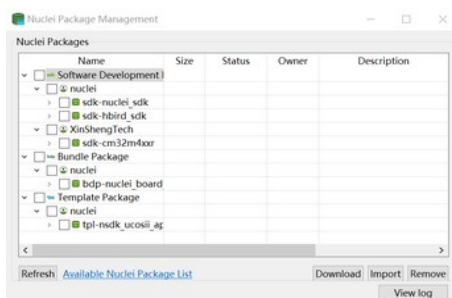

Expand "sdk-cm32m4xxr" to see that its status is "Not Installed".

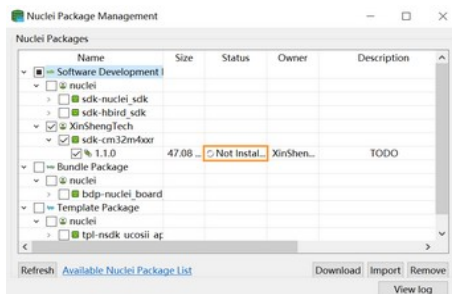


Check "sdk-cm32m4xxr" and click "Download" to import the CM32M4xxR SDK. After completion, the status will be displayed as "Installed".

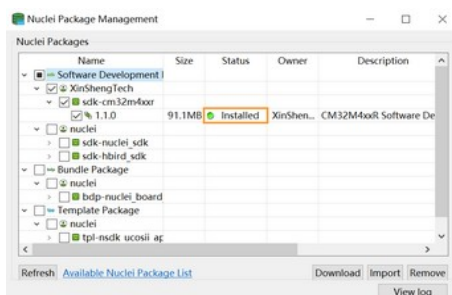


3. Create a new HelloWorld project


Select "File —> New —> New Nuclei RISC-V C/C++ Project" in the Nuclei Studio menu bar.

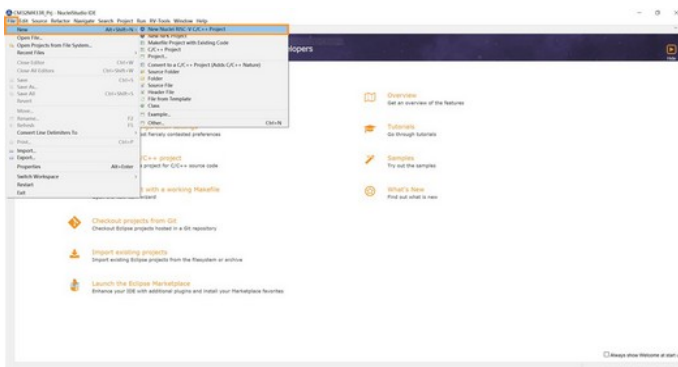

In the pop-up dialogue box, select "sdk-cm32m4xxr" under the "CM32M433R_START" column, and click "Next".

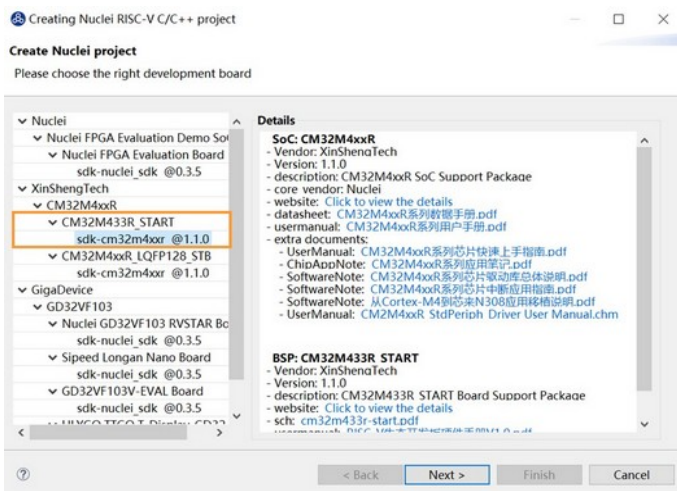

Enter the project name "printf" in the "Project Name" column, select "Printf @app-START Printf" in the "Project Example" drop-down column, and leave other settings unchanged. Click "Finish" to complete the creation of the project.

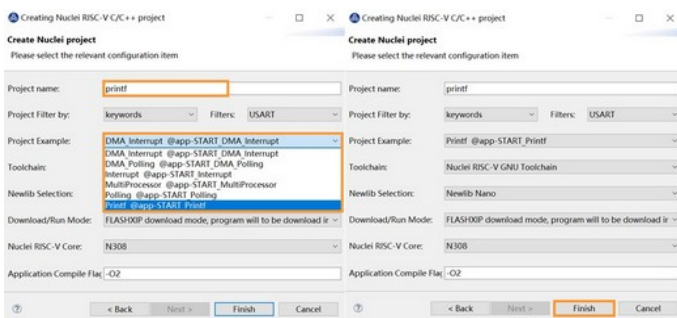


Once the project is created, the user interface looks as shown below. From the Project Explorer column on the left, you can see that the created project already includes support for the CM32M4xxR SDK.

5. Project compilation

The newly created project has already set the configuration options related to the compilation link, and you can click the "hammer" button on the Nuclei Studio IDE menu to compile directly.

If the compilation is successful, it will be displayed as shown below. You can see the code size of the generated executable file, including the text segment, data segment, and bss segment, as well as the decimal and hexadecimal values of the total size. The compiled files are stored in the Debug directory.

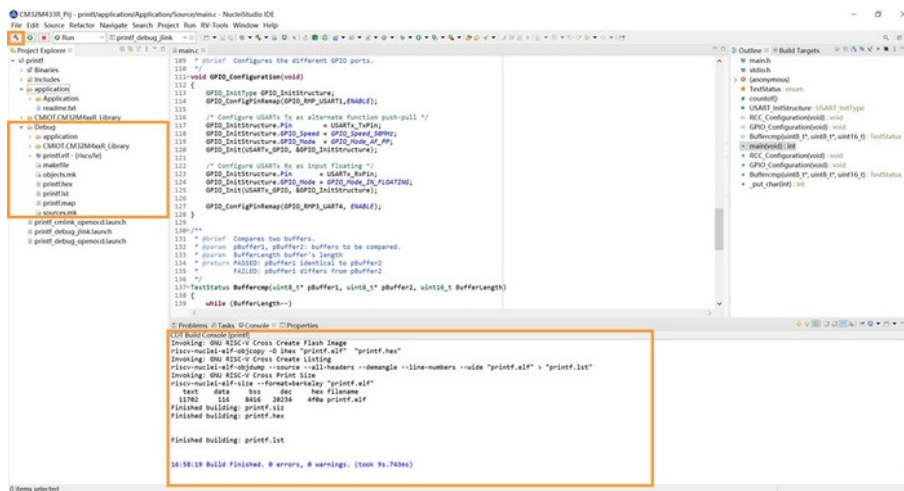

6. Execution

First, you need to connect the CM32M433R-START development board to the PC through a Micro USB cable. Once connected, the red power light on the board will light up.



The first time you use the CM32M433R-START development board, you need to install the driver for it:

- Driver for Windows:
<https://www.rvmcu.com/app/quickstart/skins/default/software/CM32M4xxR-Support-Pack-v1.0.2-win32-x32.zip>
- Driver for Linux:
<https://www.rvmcu.com/app/quickstart/skins/default/software/CM32M4xxR-Support-Pack-v1.0.2-linux-x64.tar.gz>



There is no need to check the installation of the JLink support package here.

The on-board debugger also includes a UART-to-USB adapter. Therefore, after connecting the CM32M433R-START development board to the PC, it will be recognized by the host as 2 COM serial port, which can be viewed through the device manager of the PC:



For the Linux system environment, the specific operations are as follows (taking the Ubuntu 20.04 system environment as an example)

- Use the `lsusb` command to view the status of the USB device:

```
lsusb
# After running this command, the following information will be displayed.
...
Bus 001 Device 003: ID 7777:5740 CMIOT CM-LINK
```

- Use the following command to find the tty device corresponding to the debugging interface:

```
ls -al /dev/serial/by-id | grep usb-CMIOT.*
# After running this command, the following information will be displayed.
...
..usb-CMIOT_CM-LINK_36021150334136353314415E-if00 -> ../../ttyACM0
..usb-CMIOT_CM-LINK_36021150334136353314415E-if02 -> ../../ttyACM1
```

- Add the host user to the dialout group:


```
# Run this command to display the host user name
whoami
# Assuming the host user name is displayed as your_user_name,
# run the following command to add your_user_name to the dialout group
sudo usermod -a -G dialout your_user_name
```

- Confirm whether the host user belongs to the dialout group


```
groups
# As long as dialout is seen from the displayed groups, it means that the host user
# belongs to this group, indicating that the setting is successful
```

- You need to log out and then back in for this change to take effect


The serial port debugging tool is integrated in the Nuclei Studio IDE. Select "Window->Show View->Terminal" in the menu bar, then click the "Display" icon button in the "Terminal" window to open the serial port tool configuration interface.

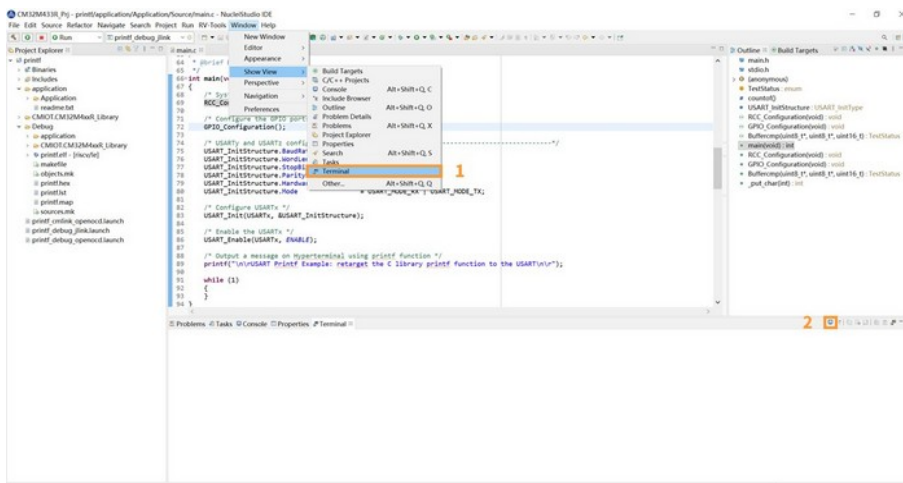


In the pop-up window, set the parameters related to serial communication: 115200 baud, 8 data bits, no parity, 1 stop bit (115200-8-N-1). Select the serial port to match the device determined earlier.

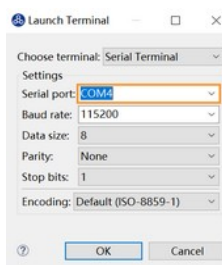

In the "Launch Bar" under the Nuclei Studio IDE menu bar, set the mode to "Run" and configure it to "printf_cmlink_opencd", as shown below.

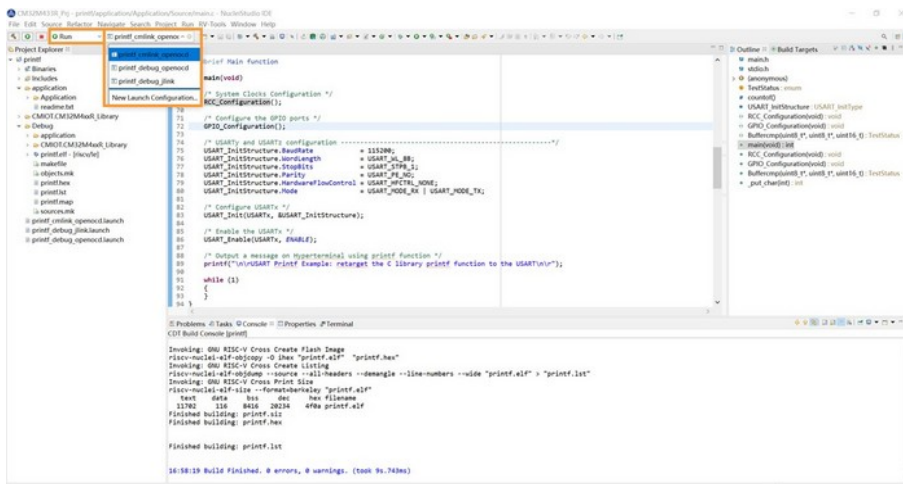


Once configured, click the green "Run" button to start downloading the program to the CM32M433R-START development board and run the sample project. The following message should display in the Terminal window.

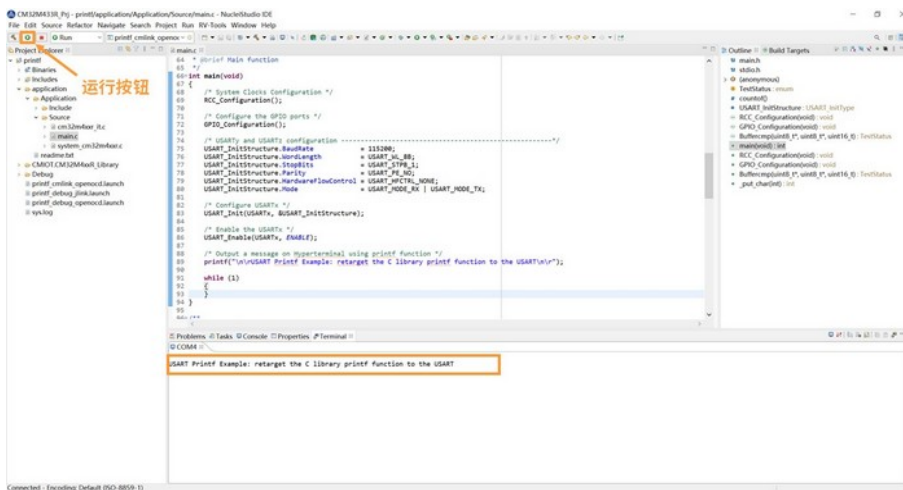


7. Debugging

Similarly to the previous step, set the mode to "Debug" in the "Launch Bar" under the Nuclei Studio IDE menu bar, and configure it to "printf_cmlink_openscd", as shown below.

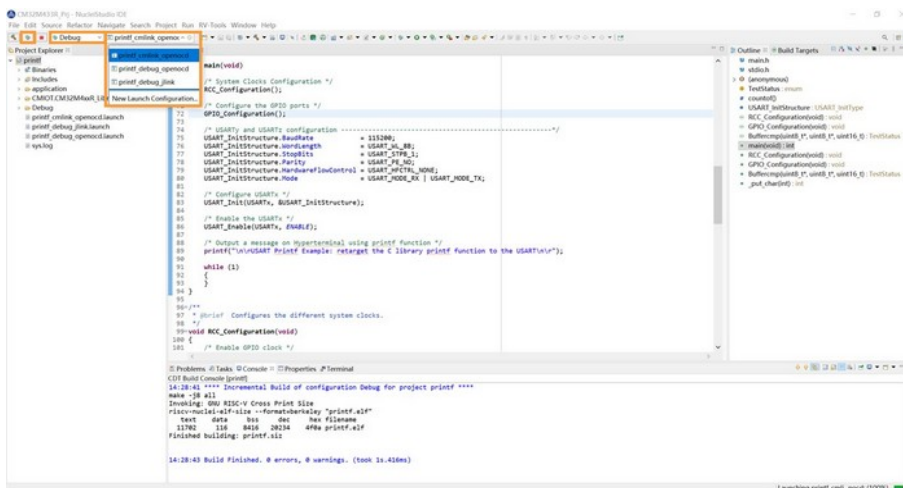

Then, click the "Beetle" button to start downloading the program to the CM32M433R-START development board, and enter the debugging mode, the interface is shown below.

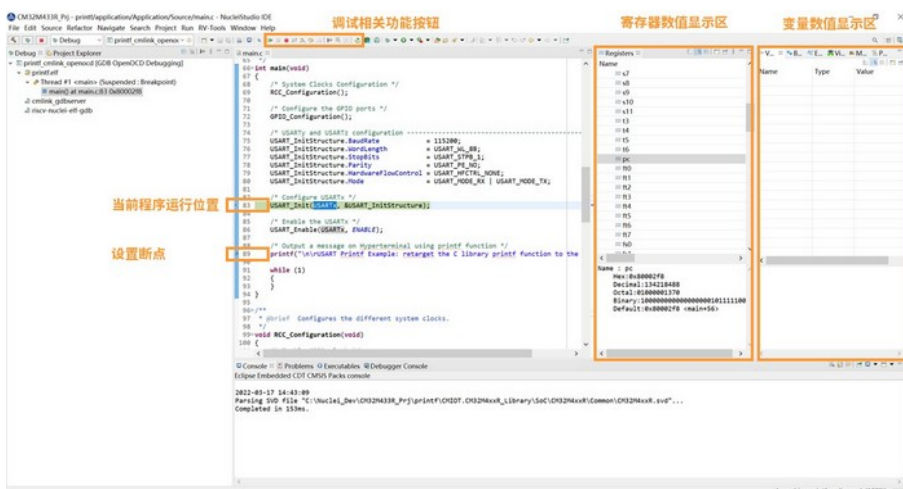

Reference documents

Nuclei Studio user manual: <https://www.rvmcu.com/nucleistudio-userguide-id-25.html>

CM32M433R-START development board schematic:

<https://www.rvmcu.com/app/quickstart/skins/default/doc/cm32m433r-start-sch.pdf>

CM32M4xxR user manual:

<https://www.rvmcu.com/app/quickstart/skins/default/doc/CM32M4xxR-user-guide-V1.4.pdf>

CM32M433R-START on-board peripherals use

Original post: <https://www.rvmcu.com/quickstart-show-id-14.html>


This document mainly guides users on how to import NPK that contains more routines for the CM32M433R-START development board, and create related application projects for onboard peripherals. It is intended for users who already have a certain background. For a detailed introduction to the process of downloading and installing Nuclei Studio IDE, compiling, debugging and running, please refer to CM32M433R-START quick start guide.

1. Import Nuclei Board Labs


Nuclei Board Labs is a package provided by Nuclei for its hardware platforms (including the CM32M433R-START development board) and used in the courses of the Nuclei University Program. It is maintained on Github (<https://github.com/Nuclei-Software/nuclei-board-labs>) and NPK can be directly imported and used in the Nuclei Studio IDE.

Nuclei Board Labs only provides application layer code, which needs to be used with the underlying SDK. It is thus necessary to import the CM32M4xxR SDK beforehand.

- Download the zip package directly from the Nuclei Board Labs Github repository as shown below.

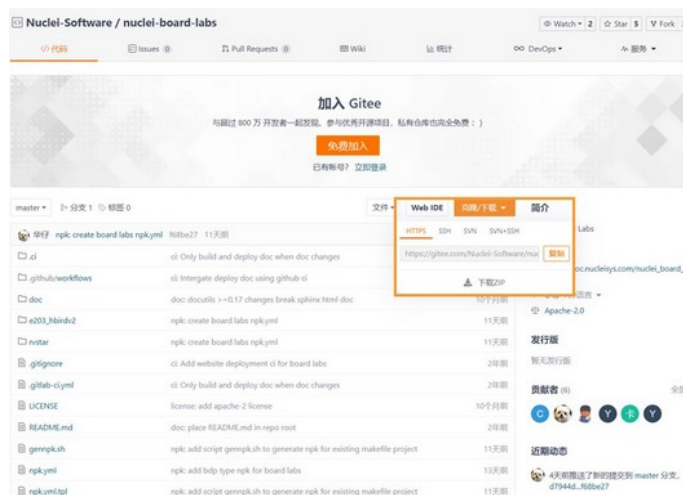


- Start Nuclei Studio IDE, open "Nuclei Package Management", click the "Import" button in the pop-up dialogue box, and add the downloaded Nuclei Board Labs zip package.

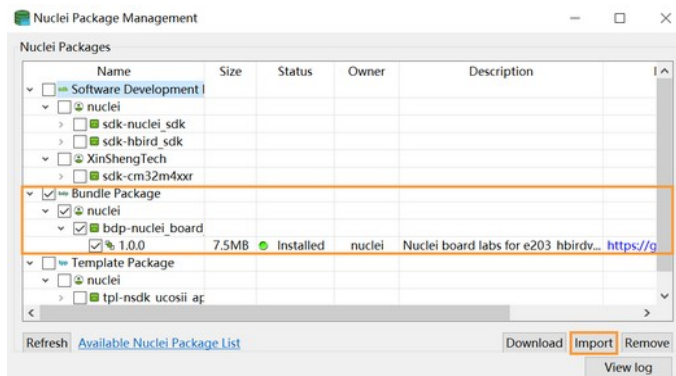

2. New project

Create a new project and select "CM32M433R-START running_led lab" as template. Leave other settings unchanged.

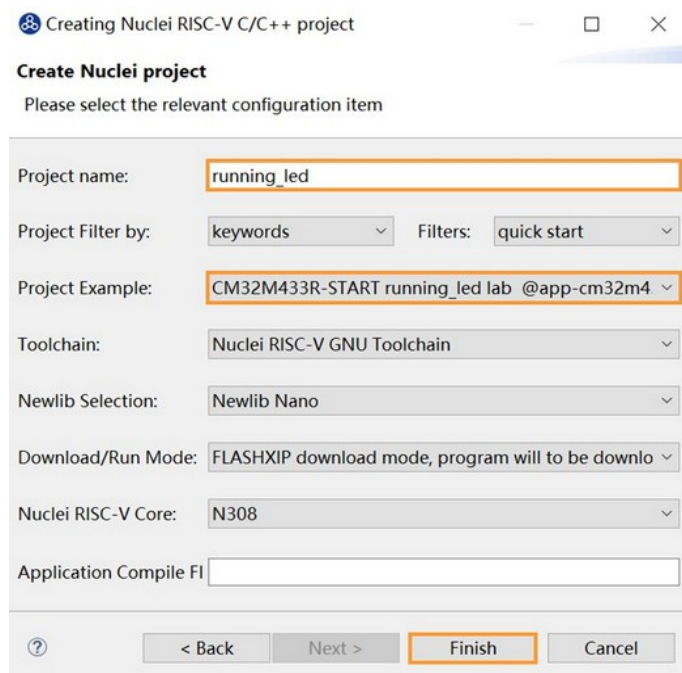


3. Project introduction

The main function implements the following steps:

- Initialize the serial port for printing
- Initialize the GPIO connected to the onboard LED
- Initialize the GPIO connected to the onboard button
- Print the usage instructions
- Loop: detect which button is pressed and toggle the corresponding LED

4. Execution

The picture below shows serial port output on the left, and the outcome of the different key presses on the right.

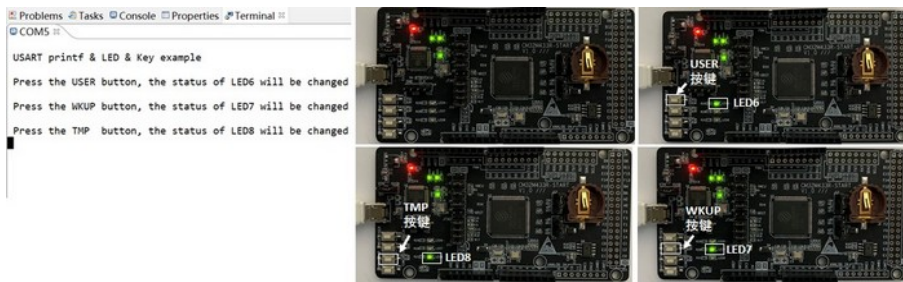

Reference documents

CM32M433R-START quick start guide: <https://www.rvmcu.com/quickstart-show-id-15.html>
(also translated in this document)

Nuclei Studio user manual: <https://www.rvmcu.com/nucleistudio-userguide-id-25.html>

CM32M433R-START development board schematic:
<https://www.rvmcu.com/app/quickstart/skins/default/doc/cm32m433r-start-sch.pdf>

CM32M4xxR user manual:
<https://www.rvmcu.com/app/quickstart/skins/default/doc/CM32M4xxR-user-guide-V1.4.pdf>