



HaLow Module

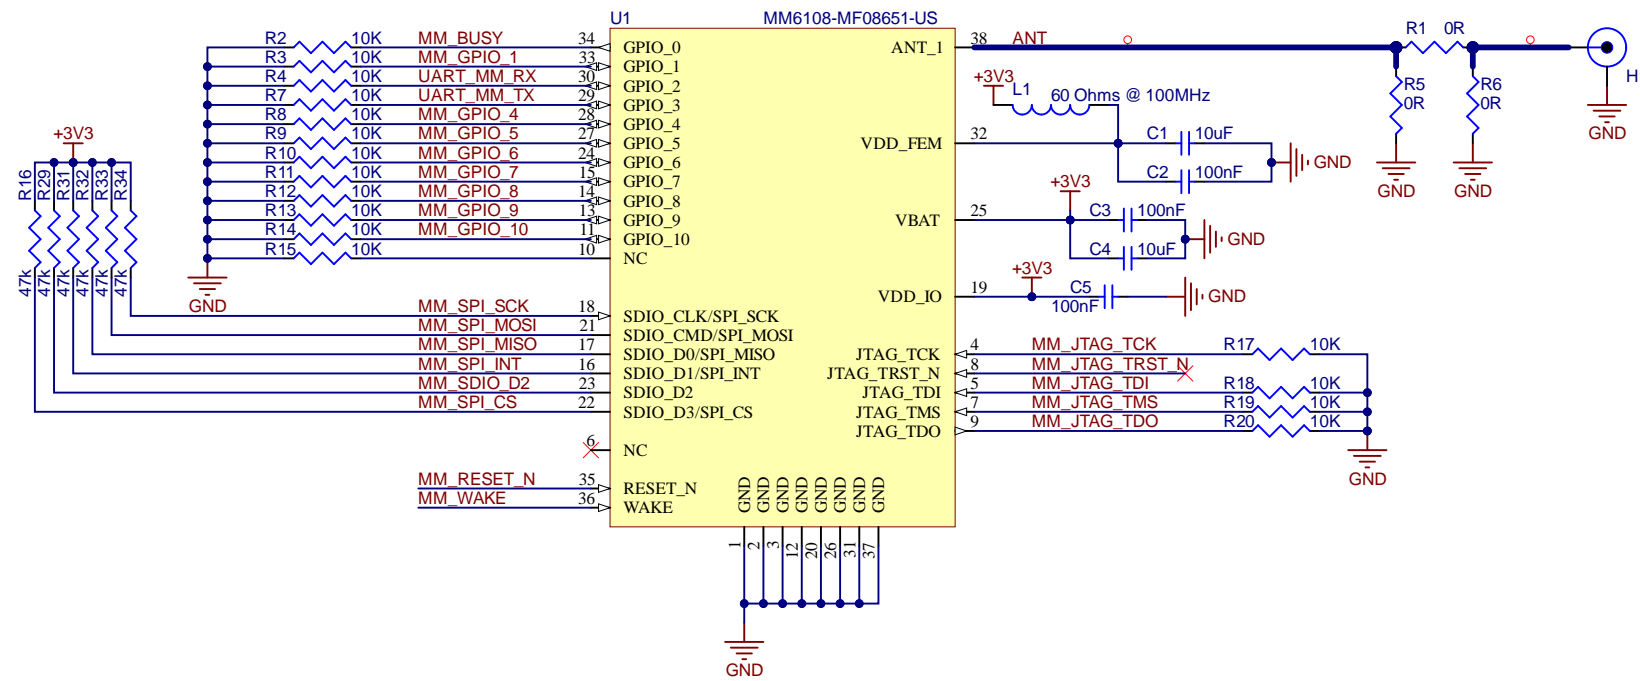


Pico 2 Connectors

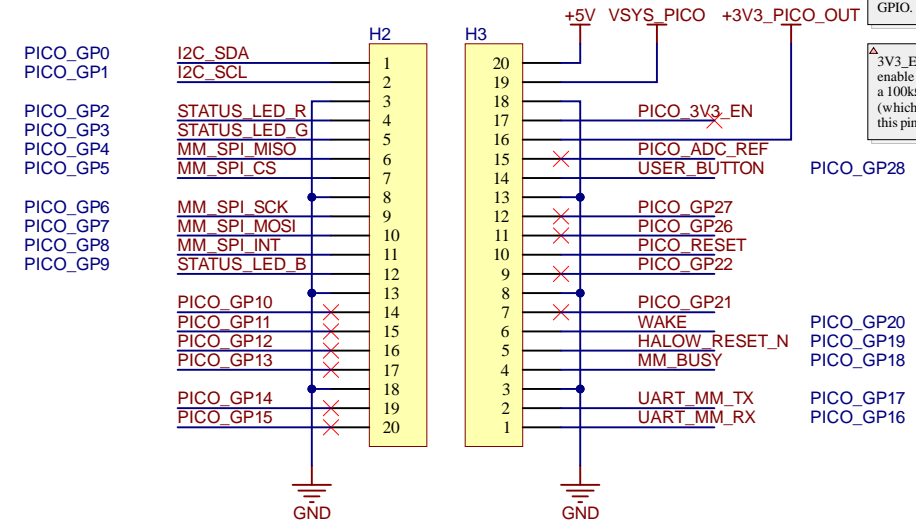


▲ VSYS is the main system input voltage, which can vary in the allowed range 1.8V to 5.5V, and is used by the on-board SMPS to generate the 3.3V for the RP2350 and its GPIO.

Δ 3V3_EN connects to the on-board SMPS enable pin, and is pulled high (to VSYS) via a 100kΩ resistor. To disable the 3.3V (which also de-powers the RP2350), short this pin low.


Battery Connector

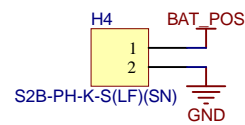


Battery Charging IC

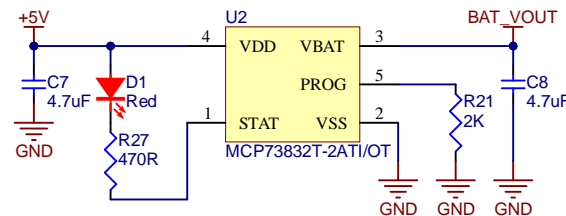


Power Indication

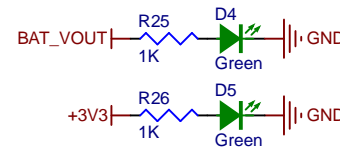


HaLow To Pico Connections

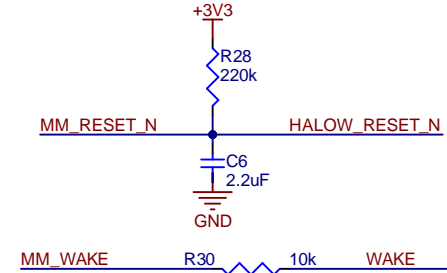

QWIIIC Connector

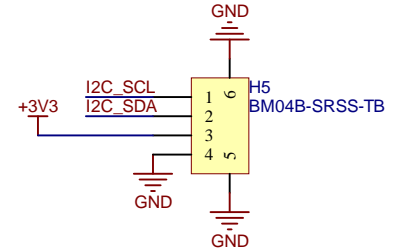


Battery Reverse Polarity Protection

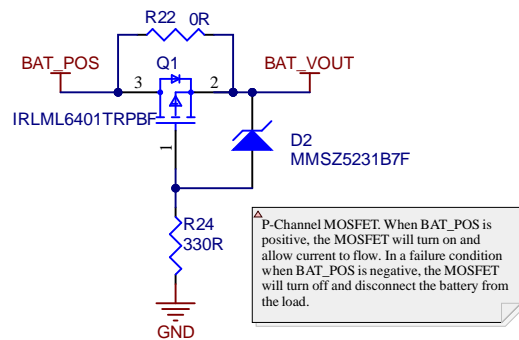

▲ P-Channel MOSFET: When BAT_POS is positive, the MOSFET will turn on and allow current to flow. In a failure condition when BAT_POS is negative, the MOSFET will turn off and disconnect the battery from the load.


Load Sharing Circuit

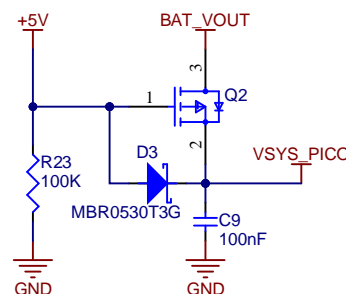


△ P-Channel MOSFET. When 5V is supplied, Q2 will turn off and disconnect the battery from the load. When 5V is not supplied, Q2 will turn on and connect the battery to the load. Should use a MOSFET with a low R_{ds} to minimise power loss.

⚠ Schottky Diode prevents current flowing from the battery into the 5V source. Need to choose part carefully with low reverse leakage current.


Current Measurement




Reset and User Button



User LEDs

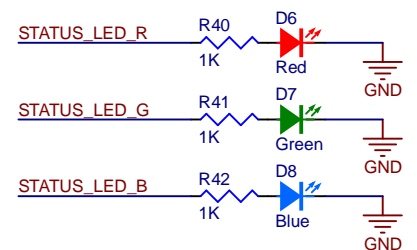

Temperature/Humidity Sensor

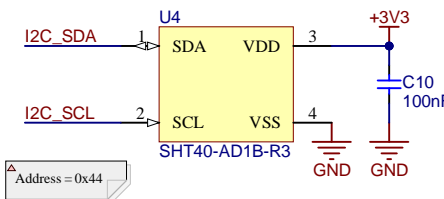

Mounting Holes



Title Main		
Size A3	Number	Revision 1.0
Date: 12/05/2024	Sheet 1 of 2	
File: C:\Users\...\pico2hat_halow.SchDoc	Drawn By: J. Garnier	

	1	2	3	4
A				
B				
C				
D				

Revision History	
1.0	- First release.

Title		
Revision History		
Size	Number	Revision
A4		1.0
Date:	12/05/2024	Sheet 2 of 2
File:	C:\Users\...\Revision_History.SchDoc	Drawn By: J. Garnier