

Power Systems

Progress codes



Power Systems

Progress codes



Note

Before using this information and the product it supports, read the information in “Safety notices” on page v, “Notices” on page 127, the *IBM Systems Safety Notices* manual, G229-9054, and the *IBM Environmental Notices and User Guide*, Z125-5823.

This edition applies to IBM Power Systems™ servers that contain the POWER7 processor and to all associated models.

© Copyright IBM Corporation 2010, 2013.

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

Contents

Safety notices	v
Progress codes overview	1
AIX IPL progress codes	3
AIX diagnostic load progress indicators	41
Dump progress indicators (dump status codes)	45
AIX crash progress codes (category 1)	47
AIX crash progress codes (category 2)	49
AIX crash progress codes (category 3)	51
(C1xx) Service processor progress codes	53
(C2xx) Virtual service processor progress codes	75
(C3xx, C5xx, C6xx) IPL status progress codes.	79
(C7xx) Server firmware IPL status progress codes	87
(C9xx) IPL status progress codes	89
(CAxx) Partition firmware progress codes	93
(CF00) Linux kernel boot progress codes	109
(D1xx) Service processor firmware progress codes	111
(D1xx) Service processor status progress codes	113
(D1xx) Service processor dump status progress codes	115
(D1xx) Platform dump status progress codes	119
(D2xx) Partition status progress codes	121
(D6xx) General status progress codes.	123
(D9xx) General status progress codes.	125
Notices	127
Trademarks	128
Electronic emission notices	128
Class A Notices.	129
Class B Notices.	132
Terms and conditions.	135

Safety notices

Safety notices may be printed throughout this guide:

- **DANGER** notices call attention to a situation that is potentially lethal or extremely hazardous to people.
- **CAUTION** notices call attention to a situation that is potentially hazardous to people because of some existing condition.
- **Attention** notices call attention to the possibility of damage to a program, device, system, or data.

World Trade safety information

Several countries require the safety information contained in product publications to be presented in their national languages. If this requirement applies to your country, safety information documentation is included in the publications package (such as in printed documentation, on DVD, or as part of the product) shipped with the product. The documentation contains the safety information in your national language with references to the U.S. English source. Before using a U.S. English publication to install, operate, or service this product, you must first become familiar with the related safety information documentation. You should also refer to the safety information documentation any time you do not clearly understand any safety information in the U.S. English publications.

Replacement or additional copies of safety information documentation can be obtained by calling the IBM Hotline at 1-800-300-8751.

German safety information

Das Produkt ist nicht für den Einsatz an Bildschirmarbeitsplätzen im Sinne § 2 der Bildschirmarbeitsverordnung geeignet.

Laser safety information

IBM® servers can use I/O cards or features that are fiber-optic based and that utilize lasers or LEDs.

Laser compliance

IBM servers may be installed inside or outside of an IT equipment rack.

DANGER

When working on or around the system, observe the following precautions:

Electrical voltage and current from power, telephone, and communication cables are hazardous. To avoid a shock hazard:

- Connect power to this unit only with the IBM provided power cord. Do not use the IBM provided power cord for any other product.
- Do not open or service any power supply assembly.
- Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.
- The product might be equipped with multiple power cords. To remove all hazardous voltages, disconnect all power cords.
- Connect all power cords to a properly wired and grounded electrical outlet. Ensure that the outlet supplies proper voltage and phase rotation according to the system rating plate.
- Connect any equipment that will be attached to this product to properly wired outlets.
- When possible, use one hand only to connect or disconnect signal cables.
- Never turn on any equipment when there is evidence of fire, water, or structural damage.
- Disconnect the attached power cords, telecommunications systems, networks, and modems before you open the device covers, unless instructed otherwise in the installation and configuration procedures.
- Connect and disconnect cables as described in the following procedures when installing, moving, or opening covers on this product or attached devices.

To Disconnect:

1. Turn off everything (unless instructed otherwise).
2. Remove the power cords from the outlets.
3. Remove the signal cables from the connectors.
4. Remove all cables from the devices.

To Connect:

1. Turn off everything (unless instructed otherwise).
2. Attach all cables to the devices.
3. Attach the signal cables to the connectors.
4. Attach the power cords to the outlets.
5. Turn on the devices.

(D005)

DANGER

Observe the following precautions when working on or around your IT rack system:

- Heavy equipment—personal injury or equipment damage might result if mishandled.
- Always lower the leveling pads on the rack cabinet.
- Always install stabilizer brackets on the rack cabinet.
- To avoid hazardous conditions due to uneven mechanical loading, always install the heaviest devices in the bottom of the rack cabinet. Always install servers and optional devices starting from the bottom of the rack cabinet.
- Rack-mounted devices are not to be used as shelves or work spaces. Do not place objects on top of rack-mounted devices.



- Each rack cabinet might have more than one power cord. Be sure to disconnect all power cords in the rack cabinet when directed to disconnect power during servicing.
- Connect all devices installed in a rack cabinet to power devices installed in the same rack cabinet. Do not plug a power cord from a device installed in one rack cabinet into a power device installed in a different rack cabinet.
- An electrical outlet that is not correctly wired could place hazardous voltage on the metal parts of the system or the devices that attach to the system. It is the responsibility of the customer to ensure that the outlet is correctly wired and grounded to prevent an electrical shock.

CAUTION

- Do not install a unit in a rack where the internal rack ambient temperatures will exceed the manufacturer's recommended ambient temperature for all your rack-mounted devices.
- Do not install a unit in a rack where the air flow is compromised. Ensure that air flow is not blocked or reduced on any side, front, or back of a unit used for air flow through the unit.
- Consideration should be given to the connection of the equipment to the supply circuit so that overloading of the circuits does not compromise the supply wiring or overcurrent protection. To provide the correct power connection to a rack, refer to the rating labels located on the equipment in the rack to determine the total power requirement of the supply circuit.
- *(For sliding drawers.)* Do not pull out or install any drawer or feature if the rack stabilizer brackets are not attached to the rack. Do not pull out more than one drawer at a time. The rack might become unstable if you pull out more than one drawer at a time.
- *(For fixed drawers.)* This drawer is a fixed drawer and must not be moved for servicing unless specified by the manufacturer. Attempting to move the drawer partially or completely out of the rack might cause the rack to become unstable or cause the drawer to fall out of the rack.

(R001)

CAUTION:

Removing components from the upper positions in the rack cabinet improves rack stability during relocation. Follow these general guidelines whenever you relocate a populated rack cabinet within a room or building:

- Reduce the weight of the rack cabinet by removing equipment starting at the top of the rack cabinet. When possible, restore the rack cabinet to the configuration of the rack cabinet as you received it. If this configuration is not known, you must observe the following precautions:
 - Remove all devices in the 32U position and above.
 - Ensure that the heaviest devices are installed in the bottom of the rack cabinet.
 - Ensure that there are no empty U-levels between devices installed in the rack cabinet below the 32U level.
- If the rack cabinet you are relocating is part of a suite of rack cabinets, detach the rack cabinet from the suite.
- Inspect the route that you plan to take to eliminate potential hazards.
- Verify that the route that you choose can support the weight of the loaded rack cabinet. Refer to the documentation that comes with your rack cabinet for the weight of a loaded rack cabinet.
- Verify that all door openings are at least 760 x 230 mm (30 x 80 in.).
- Ensure that all devices, shelves, drawers, doors, and cables are secure.
- Ensure that the four leveling pads are raised to their highest position.
- Ensure that there is no stabilizer bracket installed on the rack cabinet during movement.
- Do not use a ramp inclined at more than 10 degrees.
- When the rack cabinet is in the new location, complete the following steps:
 - Lower the four leveling pads.
 - Install stabilizer brackets on the rack cabinet.
 - If you removed any devices from the rack cabinet, repopulate the rack cabinet from the lowest position to the highest position.
- If a long-distance relocation is required, restore the rack cabinet to the configuration of the rack cabinet as you received it. Pack the rack cabinet in the original packaging material, or equivalent. Also lower the leveling pads to raise the casters off of the pallet and bolt the rack cabinet to the pallet.

(R002)


(L001)



(L002)



(L003)

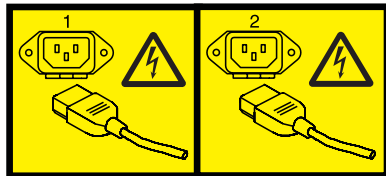

or



All lasers are certified in the U.S. to conform to the requirements of DHHS 21 CFR Subchapter J for class 1 laser products. Outside the U.S., they are certified to be in compliance with IEC 60825 as a class 1 laser product. Consult the label on each part for laser certification numbers and approval information.

CAUTION:

This product might contain one or more of the following devices: CD-ROM drive, DVD-ROM drive, DVD-RAM drive, or laser module, which are Class 1 laser products. Note the following information:

- Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.
- Use of the controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.

(C026)

CAUTION:

Data processing environments can contain equipment transmitting on system links with laser modules that operate at greater than Class 1 power levels. For this reason, never look into the end of an optical fiber cable or open receptacle. (C027)

CAUTION:

This product contains a Class 1M laser. Do not view directly with optical instruments. (C028)

CAUTION:

Some laser products contain an embedded Class 3A or Class 3B laser diode. Note the following information: laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam. (C030)

CAUTION:

The battery contains lithium. To avoid possible explosion, do not burn or charge the battery.

Do Not:

- ___ Throw or immerse into water
- ___ Heat to more than 100°C (212°F)
- ___ Repair or disassemble

Exchange only with the IBM-approved part. Recycle or discard the battery as instructed by local regulations. In the United States, IBM has a process for the collection of this battery. For information, call 1-800-426-4333. Have the IBM part number for the battery unit available when you call. (C003)

Power and cabling information for NEBS (Network Equipment-Building System) GR-1089-CORE

The following comments apply to the IBM servers that have been designated as conforming to NEBS (Network Equipment-Building System) GR-1089-CORE:

The equipment is suitable for installation in the following:

- Network telecommunications facilities
- Locations where the NEC (National Electrical Code) applies

The intrabuilding ports of this equipment are suitable for connection to intrabuilding or unexposed wiring or cabling only. The intrabuilding ports of this equipment *must not* be metalically connected to the interfaces that connect to the OSP (outside plant) or its wiring. These interfaces are designed for use as intrabuilding interfaces only (Type 2 or Type 4 ports as described in GR-1089-CORE) and require isolation from the exposed OSP cabling. The addition of primary protectors is not sufficient protection to connect these interfaces metalically to OSP wiring.

Note: All Ethernet cables must be shielded and grounded at both ends.

The ac-powered system does not require the use of an external surge protection device (SPD).

The dc-powered system employs an isolated DC return (DC-I) design. The DC battery return terminal *shall not* be connected to the chassis or frame ground.

Progress codes overview

Progress codes (or checkpoints) offer information about the stages involved in powering on and performing initial program load (IPL). Progress codes do not always indicate an error. Use progress code information if your server has paused indefinitely without displaying a system reference code. The information provided indicates the most appropriate action for that progress code.

Use this information for reference only. To perform any service action, use the management console.

AIX IPL progress codes

This section provides descriptions for the numbers and characters that display on the operator panel and descriptions of the location codes used to identify a particular item.

Note: The AIX® IPL progress codes occur only when running the AIX operating system or booting standalone diagnostics. The codes do not occur on servers running the Linux operating system or on Linux partitions.

Operator panel display numbers

This section contains a list of the various numbers and characters that display in the operator panel display. There are three categories of numbers and characters.

- The first group tracks the progress of the configuration program.
- The second group tracks the progress of the diagnostics.
- The third group provides information about messages that follow an 888 sequence.

AIX configuration program indicators

The numbers in this list display on the operator panel as the system loads the AIX operating system and prepares the hardware by loading software drivers.

Note: Some systems may produce 4-digit codes. If the leftmost digit of a 4-digit code is 0, use the three rightmost digits.

02E6	02E6	Explanation: PCI 64-bit Fibre Channel Arbitrated Loop Adapter being configured.
02E7	02E7	Explanation: Configuration method unable to determine if the SCSI adapter type is SE or DE type.
0440	0440	Explanation: 9.1GB Ultra SCSI Disk Drive being identified or configured.
0441	0441	Explanation: 18.2 GB Ultra SCSI Disk Drive being identified or configured.
0444	0444	Explanation: 2-Port Multiprotocol PCI Adapter (ASIC) being identified or configured.
0447	0447	
0458	0458	Explanation: 36 GB DAT72 Tape Drive
0459	0459	Explanation: 36 GB DAT72 Tape Drive
045D	045D	Explanation: 200 GB HH LTO2 Tape drive
0500	0500	Explanation: Querying Standard I/O slot.
0501	0501	Explanation: Querying card in Slot 1.
0502	0502	Explanation: Querying card in Slot 2.
0503	0503	

0504 • 0530

Explanation: Querying card in Slot 3.

0504 0504

Explanation: Querying card in Slot 4.

0505 0505

Explanation: Querying card in Slot 5.

0506 0506

Explanation: Querying card in Slot 6.

0507 0507

Explanation: Querying card in Slot 7.

0508 0508

Explanation: Querying card in Slot 8.

0510 0510

Explanation: Starting device configuration.

0511 0511

Explanation: Device configuration completed.

0512 0512

Explanation: Restoring device configuration files from media.

0513 0513

Explanation: Restoring basic operating system installation files from media.

0516 0516

Explanation: Contacting server during network boot.

0517 0517

Explanation: Mounting client remote file system during network IPL.

0518 0518

Explanation: Remote mount of the **root (/)** and **/usr** file systems failed during network boot.

0520 0520

Explanation: Bus configuration running.

0521 0521

Explanation: **/etc/init** invoked **cfgmgr** with invalid options; **/etc/init** has been corrupted or incorrectly modified (irrecoverable error).

0522 0522

Explanation: The configuration manager has been invoked with conflicting options (irrecoverable error).

0523 0523

Explanation: The configuration manager is unable to access the ODM database (irrecoverable error).

0524 0524

Explanation: The configuration manager is unable to access the **config.rules** object in the ODM database (irrecoverable error).

0525 0525

Explanation: The configuration manager is unable to get data from a customized device object in the ODM database (irrecoverable error).

0526 0526

Explanation: The configuration manager is unable to get data from a customized device driver object in the ODM database (irrecoverable error).

0527 0527

Explanation: The configuration manager was invoked with the phase 1 flag; running phase 1 at this point is not permitted (irrecoverable error).

0528 0528

Explanation: The configuration manager cannot find sequence rule, or no program name was specified in the ODM database (irrecoverable error).

0529 0529

Explanation: The configuration manager is unable to update ODM data (irrecoverable error).

0530 0530

Explanation: The **savebase** program returned an error.

0531 0531

Explanation: The configuration manager is unable to access the PdAt object class (irrecoverable error).

0532 0532

Explanation: There is not enough memory to continue (malloc failure); irrecoverable error.

0533 0533

Explanation: The configuration manager could not find a configuration method for a device.

0534 0534

Explanation: The configuration manager could not find a configuration method for a device.

0535 0535

Explanation: HIPPI diagnostics interface driver being configured.

0536 0536

Explanation: The configuration manager encountered more than one sequence rule specified in the same phase (irrecoverable error).

0537 0537

Explanation: The configuration manager encountered an error when invoking the program in the sequence rule.

0538 0538

Explanation: The configuration manager is going to invoke a configuration method.

0539 0539

Explanation: The configuration method has terminated, and control has returned to the configuration manager.

0541 0541

Explanation: A DLT tape device is being configured.

0542 0542

Explanation: 7208-345 60 GB tape drive, 7334-410 60 GB tape drive

0549 0549

Explanation: Console could not be configured for the Copy a System Dump Menu.

0551 0551

Explanation: IPL vary-on is running.

0552 0552

Explanation: IPL vary-on failed.

0553 0553

Explanation: IPL phase 1 is complete.

0554 0554

Explanation: The boot device could not be opened or read, or unable to define NFS swap device during network boot.

0555 0555

Explanation: An ODM error occurred when trying to vary-on the rootvg, or unable to create an NFS swap device during network boot.

0556 0556

Explanation: Logical Volume Manager encountered error during IPL vary-on.

0557 0557

Explanation: The root file system does not mount.

0558 0558

Explanation: There is not enough memory to continue the system IPL.

0559 0559

Explanation: Less than 2 MB of good memory are available to load the AIX kernel.

0569 0569

Explanation: FCS SCSI protocol device is being configured (32 bits).

0570 0570

Explanation: Virtual SCSI devices being configured.

0571 **0571**
Explanation: HIPPI common function device driver being configured.

0572 **0572**
Explanation: HIPPI IPI-3 master transport driver being configured.

0573 **0573**
Explanation: HIPPI IPI-3 slave transport driver being configured.

0574 **0574**
Explanation: HIPPI IPI-3 transport services user interface device driver being configured.

0575 **0575**
Explanation: A 9570 disk-array driver being configured.

0576 **0576**
Explanation: Generic async device driver being configured.

0577 **0577**
Explanation: Generic SCSI device driver being configured.

0578 **0578**
Explanation: Generic commo device driver being configured.

0579 **0579**
Explanation: Device driver being configured for a generic device.

0580 **0580**
Explanation: HIPPI TCP/IP network interface driver being configured.

0581 **0581**
Explanation: Configuring TCP/IP.

0582 **0582**
Explanation: Configuring Token-Ring data link control.

0583 **0583**
Explanation: Configuring an Ethernet data link control.

0584 **0584**
Explanation: Configuring an IEEE Ethernet data link control.

0585 **0585**
Explanation: Configuring an SDLC MPQP data link control.

0586 **0586**
Explanation: Configuring a QLLC X.25 data link control.

0587 **0587**
Explanation: Configuring a NETBIOS.

0588 **0588**
Explanation: Configuring a Bisync Read-Write (BSCRW).

0589 **0589**
Explanation: SCSI target mode device being configured.

0590 **0590**
Explanation: Diskless remote paging device being configured.

0591 **0591**
Explanation: Configuring an LVM device driver.

0592 **0592**
Explanation: Configuring an HFT device driver.

0593 **0593**
Explanation: Configuring SNA device drivers.

0594 **0594**
Explanation: Asynchronous I/O being defined or configured.

0595	0595
Explanation: X.31 pseudo-device being configured.	
0596	0596
Explanation: SNA DLC/LAPE pseudo-device being configured.	
0597	0597
Explanation: OCS software being configured.	
0598	0598
Explanation: OCS hosts being configured during system reboot.	
0599	0599
Explanation: Configuring FDDI data link control.	
059B	059B
Explanation: FCS SCSI protocol device being configured (64 bits).	
05C0	05C0
Explanation: Streams-based hardware drive being configured.	
05C1	05C1
Explanation: Streams-based X.25 protocol being configured.	
05C2	05C2
Explanation: Streams-based X.25 COMIO emulator driver being configured.	
05C3	05C3
Explanation: Streams-based X.25 TCP/IP interface driver being configured.	
05C4	05C4
Explanation: FCS adapter device driver being configured.	
05C5	05C5
Explanation: SCB network device driver for FCS being configured.	

05C6	05C6
Explanation: AIX SNA channel being configured.	
0600	0600
Explanation: Starting network boot portion of <code>/sbin/rc.boot</code> .	
0602	0602
Explanation: Configuring network parent devices.	
0603	0603
Explanation: <code>/usr/lib/methods/defsys</code> , <code>/usr/lib/methods/cfgsys</code> , or <code>/usr/lib/methods/cfgbus</code> failed.	
0604	0604
Explanation: Configuring physical network boot device.	
0605	0605
Explanation: Configuration of physical network boot device failed.	
0606	0606
Explanation: Running <code>/usr/sbin/ifconfig</code> on logical network boot device.	
0607	0607
Explanation: <code>/usr/sbin/ifconfig</code> failed.	
0608	0608
Explanation: Attempting to retrieve the <code>client.info</code> file with <code>tftp</code> . Note: Note that a flashing 608 indicates multiple attempt(s) to retrieve the <code>client_info</code> file are occurring.	
0609	0609
Explanation: The <code>client.info</code> file does not exist or it is zero length.	
060B	060B
Explanation: 18.2 GB 68-pin LVD SCSI Disk Drive being configured.	

0610 **0610**

Explanation: Attempting remote mount of NFS file system.

0611 **0611**

Explanation: Remote mount of the NFS file system failed.

0612 **0612**

Explanation: Accessing remote files; unconfiguring network boot device.

0613 **0613**

Explanation: 8 mm 80 GB VXA-2 tape device

0614 **0614**

Explanation: Configuring local paging devices.

0615 **0615**

Explanation: Configuration of a local paging device failed.

0616 **0616**

Explanation: Converting from diskless to dataless configuration.

0617 **0617**

Explanation: Diskless to dataless configuration failed.

0618 **0618**

Explanation: Configuring remote (NFS) paging devices.

0619 **0619**

Explanation: Configuration of a remote (NFS) paging device failed.

061B **061B**

Explanation: 36.4 GB 80-pin LVD SCSI Disk Drive being configured.

061D **061D**

Explanation: 36.4 GB 80-pin LVD SCSI Disk Drive being configured.

061E **061E**

Explanation: 18.2 GB 68-pin LVD SCSI Disk Drive being configured.

0620 **0620**

Explanation: Updating special device files and ODM in permanent file system with data from boot RAM file system.

0621 **0621**

Explanation: 9.1 GB LVD 80-pin SCSI Drive being configured.

0622 **0622**

Explanation: Boot process configuring for operating system installation.

062D **062D**

Explanation: 9.1 GB 68-pin LVD SCSI Disk Drive being configured.

062E **062E**

Explanation: 9.1GB 68-pin LVD SCSI Disk Drive being configured.

0636 **0636**

Explanation: TURBOWAYS™ 622 Mbps PCI MMF ATM Adapter.

0637 **0637**

Explanation: Dual Channel PCI-2 Ultra2 SCSI Adapter being configured.

0638 **0638**

Explanation: 4.5 GB Ultra SCSI Single Ended Disk Drive being configured.

0639 **0639**

Explanation: 9.1 GB 10K RPM Ultra SCSI Disk Drive (68-pin).

063A **063A**

Explanation: See 62D.

063B 063B

Explanation: 9.1 GB 80-pin LVD SCSI Disk Drive being configured.

063C 063C

Explanation: See 60B.

063D 063D

Explanation: 18.2 GB 80-pin LVD SCSI Disk Drive being configured.

063E 063E

Explanation: 36.4 GB 68-pin LVD SCSI Disk Drive being configured.

063F 063F

Explanation: See 61B.

0640 0640

Explanation: 9.1 GB 10K RPM Ultra SCSI Disk Drive (80-pin).

0643 0643

Explanation: 18.2 GB LVD 80-pin SCA-2 connector SCSI Disk Drive being configured.

0646 0646

Explanation: High-Speed Token-Ring PCI Adapter being configured.

064A 064A

Explanation: See 62E.

064B 064B

Explanation: 9.1 GB 80-pin LVD SCSI Disk Drive being configured.

064C 064C

Explanation: See 61E.

064D 064D

Explanation: 18.2 GB LVD 80-pin Drive/Carrier being configured.

064E 064E

Explanation: 36.4 GB 68-pin LVD SCSI Disk Drive being configured.

064F 064F

Explanation: See 61D.

0650 0650

Explanation: SCSD disk drive being configured.

0653 0653

Explanation: 18.2 GB Ultra-SCSI 16-bit Disk Drive being configured.

0655 0655

Explanation: GXT130P Graphics adapter being configured.

0657 0657

Explanation: GXT2000P graphics adapter being configured.

0658 0658

Explanation: 2102 Fibre Channel Disk Subsystem Controller Drawer being identified or configured.

0663 0663

Explanation: The ARTIC960RxD Digital Trunk Quad PCI Adapter or the ARTIC960RxF Digital Trunk Resource Adapter being configured.

0664 0664

Explanation: 32x (MAX) SCSI-2 CD-ROM drive being configured.

0667 0667

Explanation: PCI 3-Channel Ultra2 SCSI RAID Adapter being configured.

0669 0669

Explanation: PCI Gigabit Ethernet Adapter being configured.

066A 066A

Explanation: PCI Gigabit Ethernet Adapter being configured.

066C 066C

Explanation: 10/100/1000 Base-T Ethernet PCI Adapter.

066D 066D

Explanation: PCI 4-Channel Ultra-3 SCSI RAID Adapter.

066E 066E

Explanation: 4.7 GB DVD-RAM drive.

0674 0674

Explanation: ESCON™ Channel PCI Adapter being configured.

0678 0678

Explanation: 12 GB 4 mm SCSI tape drive

067B 067B

Explanation: PCI Cryptographic Coprocessor being configured.

0682 0682

Explanation: 20x0 (MAX) SCSI-2 CD-ROM Drive being configured.

0689 0689

Explanation: 4.5 GB Ultra SCSI Single Ended Disk Drive being configured.

068C 068C

Explanation: 20 GB 4-mm Tape Drive being configured.

068E 068E

Explanation: POWER GXT6000P PCI Graphics Adapter.

0690 0690

Explanation: 9.1 GB Ultra SCSI Single Ended Disk Drive being configured.

069B 069B

Explanation: 64-bit/66 MHz PCI ATM 155 MMF PCI adapter being configured.

069D 069D

Explanation: 64-bit/66 MHz PCI ATM 155 UTP PCI adapter being configured.

06CC 06CC

Explanation: SSA disk drive being configured.

0700 0700

Explanation: A 1.1 GB 8-bit SCSI disk drive being identified or configured.

0701 0701

Explanation: A 1.1 GB 16-bit SCSI disk drive being identified or configured.

0702 0702

Explanation: A 1.1 GB 16-bit differential SCSI disk drive being identified or configured.

0703 0703

Explanation: A 2.2 GB 8-bit SCSI disk drive being identified or configured.

0704 0704

Explanation: A 2.2 GB 16-bit SCSI disk drive being identified or configured.

0705 0705

Explanation: The configuration method for the 2.2 GB 16-bit differential SCSI disk drive is being run. If an irrecoverable error occurs, the system halts.

0706 0706

Explanation: A 4.5 GB 16-bit SCSI disk drive being identified or configured.

0707 0707

Explanation: A 4.5 GB 16-bit differential SCSI disk drive being identified or configured.

0708 0708

Explanation: An L2 cache being identified or configured.

0709	0709
Explanation: 128 port ISA adapter being configured	
0710	0710
Explanation: POWER GXT150M graphics adapter being identified or configured.	
0711	0711
Explanation: Unknown adapter being identified or configured.	
0712	0712
Explanation: Graphics slot bus configuration is executing.	
0713	0713
Explanation: The IBM ARTIC960 device being configured.	
0714	0714
Explanation: A video capture adapter being configured.	
0717	0717
Explanation: TP Ethernet Adapter being configured.	
0718	0718
Explanation: GXT500 Graphics Adapter being configured.	
0720	0720
Explanation: Unknown read/write optical drive type being configured.	
0721	0721
Explanation: Unknown disk or SCSI device being identified or configured.	
0722	0722
Explanation: Unknown disk drive being identified or configured.	
0723	0723
Explanation: Unknown CD-ROM drive being identified or configured.	

0724	0724
Explanation: Unknown tape drive being identified or configured.	
0725	0725
Explanation: Unknown display adapter being identified or configured.	
0726	0726
Explanation: Unknown input device being identified or configured.	
0727	0727
Explanation: Unknown async device being identified or configured.	
0728	0728
Explanation: Parallel printer being identified or configured.	
0729	0729
Explanation: Unknown parallel device being identified or configured.	
0730	0730
Explanation: Unknown diskette drive being identified or configured.	
0731	0731
Explanation: PTY being identified or configured.	
0732	0732
Explanation: Unknown SCSI initiator type being configured.	
0733	0733
Explanation: 7 GB 8-mm tape drive being configured.	
0734	0734
Explanation: 4x SCSI-2 640 MB CD-ROM Drive being configured.	
0736	0736
Explanation: Quiet Touch keyboard and speaker cable being configured.	

0741 **0741**
Explanation: 1080 MB SCSI Disk Drive being configured.

0745 **0745**
Explanation: 16 GB 4-mm Tape Auto Loader being configured.

0746 **0746**
Explanation: SCSI-2 Fast/Wide PCI Adapter being configured.

0747 **0747**
Explanation: SCSI-2 Differential Fast/Wide PCI Adapter being configured.

0749 **0749**
Explanation: 7331 Model 205 Tape Library being configured.

0751 **0751**
Explanation: SCSI 32-bit SE F/W RAID Adapter being configured.

0754 **0754**
Explanation: 1.1 GB 16-bit SCSI disk drive being configured.

0755 **0755**
Explanation: 2.2 GB 16-bit SCSI disk drive being configured.

0756 **0756**
Explanation: 4.5 GB 16-bit SCSI disk drive being configured.

0757 **0757**
Explanation: External 13 GB 1/4-inch tape being configured.

0763 **0763**
Explanation: SP Switch MX Adapter being configured.

0764 **0764**
Explanation: SP System Attachment Adapter being configured.

0772 **0772**
Explanation: 4.5 GB SCSI F/W Disk Drive being configured.

0773 **0773**
Explanation: 9.1 GB SCSI F/W Disk Drive being configured.

0774 **0774**
Explanation: 9.1 GB External SCSI Disk Drive being configured.

0776 **0776**
Explanation: PCI Token-Ring Adapter being identified or configured.

0777 **0777**
Explanation: 10/100 Ethernet Tx PCI Adapter being identified or configured.

0778 **0778**
Explanation: POWER GXT3000P 3D PCI Graphics adapter being configured.

077B **077B**
Explanation: 4-Port 10/100 Ethernet Tx PCI Adapter being identified or configured.

077C **077C**
Explanation: A 1.0 GB 16-bit SCSI disk drive being identified or configured.

0783 **0783**
Explanation: 4-mm DDS-2 Tape Autoloader being configured.

0789 **0789**
Explanation: 2.6 GB External Optical Drive being configured.

078B **078B**
Explanation: POWER GXT4000P PCI Graphics Adapter.

078D	078D
Explanation: GXT300P 2D Graphics adapter being configured.	
0790	0790
Explanation: Multi-bus Integrated Ethernet Adapter being identified or configured.	
0797	0797
Explanation: TURBOWAYS 155 UTP/STP ATM Adapter being identified or configured.	
0798	0798
Explanation: Video streamer adapter being identified or configured.	
0799	0799
Explanation: 2-Port Multiprotocol PCI adapter being identified or configured.	
079C	079C
Explanation: ISA bus configuration executing.	
07C0	07C0
Explanation: CPU/System Interface being configured.	
07C1	07C1
Explanation: Business Audio Subsystem being identified or configured.	
07CC	07CC
Explanation: PCMCIA bus configuration executing.	
0800	0800
Explanation: TURBOWAYS 155 MMF ATM Adapter being identified or configured.	
0803	0803
Explanation: 7336 Tape Library robotics being configured.	
0804	0804
Explanation: 8x Speed SCSI-2 CD-ROM Drive being configured.	

0806	0806
Explanation: POWER GXT800 PCI Graphics adapter being configured.	
0807	0807
Explanation: SCSI Device Enclosure being configured.	
080C	080C
Explanation: SSA 4-Port Adapter being identified or configured.	
0811	0811
Explanation: Processor complex being identified or configured.	
0812	0812
Explanation: Memory being identified or configured.	
0813	0813
Explanation: Battery for time-of-day, NVRAM, and so on being identified or configured, or system I/O control logic being identified or configured.	
0814	0814
Explanation: NVRAM being identified or configured.	
0815	0815
Explanation: Floating-point processor test.	
0816	0816
Explanation: Operator panel logic being identified or configured.	
0817	0817
Explanation: Time-of-day logic being identified or configured.	
0819	0819
Explanation: Graphics input device adapter being identified or configured.	
0821	0821
Explanation: Standard keyboard adapter being identified or configured.	

0823 0823

Explanation: Standard mouse adapter being identified or configured.

0824 0824

Explanation: Standard tablet adapter being identified or configured.

0825 0825

Explanation: Standard speaker adapter being identified or configured.

0826 0826

Explanation: Serial Port 1 adapter being identified or configured.

0827 0827

Explanation: Parallel port adapter being identified or configured.

0828 0828

Explanation: Standard diskette adapter being identified or configured.

0831 0831

Explanation: 3151 adapter being identified or configured, or Serial Port 2 being identified or configured.

0834 0834

Explanation: 64-port async controller being identified or configured.

0835 0835

Explanation: 16-port async concentrator being identified or configured.

0836 0836

Explanation: 128-port async controller being identified or configured.

0837 0837

Explanation: A 128-port remote asynchronous node (RAN) is being identified or configured.

0838 0838

Explanation: Network Terminal Accelerator Adapter being identified or configured.

0839 0839

Explanation: 7318 Serial Communications Server being configured.

0840 0840

Explanation: PCI Single-Ended Ultra SCSI Adapter being configured.

0841 0841

Explanation: 8-port async adapter (EIA-232) being identified or configured.

0842 0842

Explanation: 8-port async adapter (EIA-422A) being identified or configured.

0843 0843

Explanation: 8-port async adapter (MIL-STD-188) being identified or configured.

0844 0844

Explanation: 7135 RAIDiant Array disk drive subsystem controller being identified or configured.

0845 0845

Explanation: 7135 RAIDiant Array disk drive subsystem drawer being identified or configured.

0846 0846

Explanation: RAIDiant Array SCSI 1.3 GB Disk Drive being configured.

0847 0847

Explanation: 16-port serial adapter (EIA-232) being identified or configured.

0848 0848

Explanation: 16-port serial adapter (EIA-422) being identified or configured.

0849 0849

Explanation: X.25 Interface Coprocessor/2 adapter being identified or configured.

0850 0850

Explanation: Token-Ring network adapter being identified or configured.

0851 0851

Explanation: T1/J1 Portmaster adapter being identified or configured.

0852 0852

Explanation: Ethernet adapter being identified or configured.

0854 0854

Explanation: 3270 Host Connection Program/6000 connection being identified or configured.

0855 0855

Explanation: Portmaster Adapter/A being identified or configured.

0857 0857

Explanation: FSLA adapter being identified or configured.

0858 0858

Explanation: 5085/5086/5088 adapter being identified or configured.

0859 0859

Explanation: FDDI adapter being identified or configured.

085C 085C

Explanation: Token-Ring High-Performance LAN adapter being identified or configured.

0861 0861

Explanation: Optical adapter being identified or configured.

0862 0862

Explanation: Block Multiplexer Channel Adapter being identified or configured.

0865 0865

Explanation: ESCON® Channel Adapter or emulator being identified or configured.

0866 0866

Explanation: SCSI adapter being identified or configured.

0867 0867

Explanation: Async expansion adapter being identified or configured.

0868 0868

Explanation: SCSI adapter being identified or configured.

0869 0869

Explanation: SCSI adapter being identified or configured.

0870 0870

Explanation: Serial disk drive adapter being identified or configured.

0871 0871

Explanation: Graphics subsystem adapter being identified or configured.

0872 0872

Explanation: Grayscale graphics adapter being identified or configured.

0874 0874

Explanation: Color graphics adapter being identified or configured.

0875 0875

Explanation: Vendor generic communication adapter being configured.

0876 0876

Explanation: 8-bit color graphics processor being identified or configured.

0877 0877

Explanation: POWER Gt3/POWER Gt4 being identified or configured.

0878 0878

Explanation: POWER Gt4 graphics processor card being configured.

0879 0879

Explanation: A 24-bit color MEV2 type graphics card is being configured.

0880 0880

Explanation: POWER Gt1 adapter being identified or configured.

0887 0887

Explanation: POWER Gt1 adapter being identified or configured.

0889 0889

Explanation: SCSI adapter being identified or configured.

0890 0890

Explanation: SCSI-2 Differential Fast/Wide and Single-Ended Fast/Wide Adapter/A being configured.

0891 0891

Explanation: Vendor SCSI adapter being identified or configured.

0892 0892

Explanation: Vendor display adapter being identified or configured.

0893 0893

Explanation: Vendor LAN adapter being identified or configured.

0894 0894

Explanation: Vendor async/communications adapter being identified or configured.

0895 0895

Explanation: Vendor IEEE 488 adapter being identified or configured.

0896 0896

Explanation: Vendor VME bus adapter being identified or configured.

0897 0897

Explanation: S/370 Channel Emulator adapter being identified or configured.

0898 0898

Explanation: POWER Gt1x graphics adapter being identified or configured.

0899 0899

Explanation: 3490 attached tape drive being identified or configured.

089C 089C

Explanation: A multimedia SCSI CD-ROM being identified or configured.

0900 0900

Explanation: GXT110P Graphics Adapter being identified or configured.

0901 0901

Explanation: Vendor SCSI device being identified or configured.

0902 0902

Explanation: Vendor display device being identified or configured.

0903 0903

Explanation: Vendor async device being identified or configured.

0904 0904

Explanation: Vendor parallel device being identified or configured.

0905 0905

Explanation: A vendor (non-IBM) adapter is being identified or configured.

0908 0908

Explanation: POWER GXT1000™ Graphics subsystem being identified or configured.

0910 0910

Explanation: 1/4 GB Fiber Channel/266 Standard Adapter being identified or configured.

0911 0911

Explanation: Fiber Channel/1063 Adapter Short Wave being configured.

0912 0912

Explanation: 2.0 GB SCSI-2 differential disk drive being identified or configured.

0913 0913

Explanation: 1.0 GB differential disk drive being identified or configured.

0914 0914

Explanation: 5 GB 8-mm differential tape drive being identified or configured.

0915 0915

Explanation: 4 GB 4-mm tape drive being identified or configured.

0916 0916

Explanation: A generic (non-IBM) Non-SCSI tape drive adapter is being identified or configured.

0917 0917

Explanation: A 2.0 GB 16-bit differential SCSI disk drive being identified or configured.

0918 0918

Explanation: A 2.0 GB 16-bit single-ended SCSI disk drive being identified or configured.

0920 0920

Explanation: Bridge Box being identified or configured.

0921 0921

Explanation: 101 keyboard being identified or configured.

0922 0922

Explanation: 102 keyboard being identified or configured.

0923 0923

Explanation: Kanji keyboard being identified or configured.

0924 0924

Explanation: Two-button mouse being identified or configured.

0925 0925

Explanation: Three-button mouse being identified or configured.

0926 0926

Explanation: 5083 tablet being identified or configured.

0927 0927

Explanation: 5083 tablet being identified or configured.

0928 0928

Explanation: Standard speaker being identified or configured.

0929 0929

Explanation: Dials being identified or configured.

0930 0930

Explanation: Lighted program function keys (LPFK) being identified or configured.

0931 **0931**
Explanation: IP router being identified or configured.

0933 **0933**
Explanation: Async planar being identified or configured.

0934 **0934**
Explanation: Async expansion drawer being identified or configured.

0935 **0935**
Explanation: 3.5-inch diskette drive being identified or configured.

0936 **0936**
Explanation: 5.25-inch diskette drive being identified or configured.

0937 **0937**
Explanation: An HIPPI adapter being configured.

0938 **0938**
Explanation: Serial HIPPI PCI adapter being configured.

0942 **0942**
Explanation: Serial HIPPI PCI adapter being configured.

0943 **0943**
Explanation: A 3480 or 3490 control unit attached to a System/370 Channel Emulator/A adapter are being identified or configured.

0944 **0944**
Explanation: 100 MB ATM adapter being identified or configured.

0945 **0945**
Explanation: 1.0 GB SCSI differential disk drive being identified or configured.

0946 **0946**
Explanation: A generic (non-IBM) Serial Port 3 adapter is being identified or configured.

0947 **0947**
Explanation: A 730 MB SCSI disk drive being configured.

0948 **0948**
Explanation: Portable disk drive being identified or configured.

0949 **0949**
Explanation: Unknown direct bus-attach device being identified or configured.

0950 **0950**
Explanation: Missing SCSI device being identified or configured.

0951 **0951**
Explanation: 670 MB SCSI disk drive being identified or configured.

0952 **0952**
Explanation: 355 MB SCSI disk drive being identified or configured.

0953 **0953**
Explanation: 320 MB SCSI disk drive being identified or configured.

0954 **0954**
Explanation: 400 MB SCSI disk drive being identified or configured.

0955 **0955**
Explanation: 857 MB SCSI disk drive being identified or configured.

0956 **0956**
Explanation: 670 MB SCSI disk drive electronics card being identified or configured.

0957 **0957**
Explanation: 120 MB DBA disk drive being identified or configured.

0958 0958

Explanation: 160 MB Database Administrator (DBA) disk drive being identified or configured.

0959 0959

Explanation: 160 MB SCSI disk drive being identified or configured.

0960 0960

Explanation: 1.37 GB SCSI disk drive being identified or configured.

0964 0964

Explanation: Internal 20 GB 8-mm tape drive identified or configured.

0968 0968

Explanation: 1.0 GB SCSI disk drive being identified or configured.

0970 0970

Explanation: Half-inch, 9-track tape drive being identified or configured.

0971 0971

Explanation: 150 MB 1/4-inch tape drive being identified or configured.

0972 0972

Explanation: 2.3 GB 8-mm SCSI tape drive being identified or configured.

0973 0973

Explanation: Other SCSI tape drive being identified or configured.

0974 0974

Explanation: CD-ROM drive being identified or configured.

0975 0975

Explanation: An optical disk drive being identified or configured.

0977 0977

Explanation: M-Audio Capture and Playback Adapter being identified or configured.

0981 0981

Explanation: 540 MB SCSI-2 single-ended disk drive being identified or configured.

0984 0984

Explanation: 1 GB 8-bit disk drive being identified or configured.

0985 0985

Explanation: M-Video Capture Adapter being identified or configured.

0986 0986

Explanation: 2.4 GB SCSI disk drive being identified or configured.

0987 0987

Explanation: An Enhanced SCSI CD-ROM drive being identified or configured.

0989 0989

Explanation: 200 MB SCSI disk drive being identified or configured.

0990 0990

Explanation: 2.0 GB SCSI-2 single-ended disk drive being identified or configured.

0991 0991

Explanation: 525 MB 1/4-inch cartridge tape drive being identified or configured.

0994 0994

Explanation: 5 GB 8-mm tape drive being identified or configured.

0995 0995

Explanation: 1.2GB 1/4-inch cartridge tape drive being identified or configured.

0996	0996
------	------

Explanation: A single-port, multiprotocol communications adapter being identified or configured.

0997	0997
------	------

Explanation: FDDI adapter being identified or configured.

0998	0998
------	------

Explanation: 2.0 GB 4-mm tape drive being identified or configured.

0999	0999
------	------

Explanation: 7137 or 3514 Disk Array Subsystem being configured.

0D46	0D46
------	------

Explanation: Token-Ring cable.

0D81	0D81
------	------

Explanation: T2 Ethernet Adapter being configured.

2000	2000
------	------

Explanation: Dynamic LPAR CPU Addition

2001	2001
------	------

Explanation: Dynamic LPAR CPU Removal

2002	2002
------	------

Explanation: Dynamic LPAR Memory Addition

2003	2003
------	------

Explanation: Dynamic LPAR Memory Removal

2004	2004
------	------

Explanation: DLPAR Maximum Memory size too large

2005	2005
------	------

Explanation: Partition migration operation in progress

2006	2006
------	------

Explanation: Partition hibernation phase in progress

2007	2007
------	------

Explanation: Dynamic LPAR Encryption Accelerator operation in progress

2010	2010
------	------

Explanation: HTX miscompare

2011	2011
------	------

Explanation: Configuring device model 2107 fcp

2012	2012
------	------

Explanation: Configuring device model 2107 iscsi

2013	2013
------	------

Explanation: Configuring MR-1750 (device model 1750) fcp

2014	2014
------	------

Explanation: Configuring MR-1750 (device model 1750) iscsi

2015	2015
------	------

Explanation: Configuring SVC (device model 2145) fcp

2016	2016
------	------

Explanation: Configuring SVCCISCO (device model 2062) fcp

2017	2017
------	------

Explanation: Configuring SVCCISCO (device model 2062) iscsi

2018	2018
------	------

Explanation: Configuring Virtual Management Channel driver

2019	2019
------	------

Explanation: Configuring vty server

201B	201B
------	------

Explanation: Configuring a virtual SCSI optical device

201D	201D
Explanation: Configuring USB Serial Device	
2020	2020
Explanation: Configuring InfiniBand™ ICM kernel component	
2021	2021
Explanation: Configuring TCP InfiniB and Interface kernel component	
2022	2022
Explanation: Configuring PCI Express bus	
2023	2023
Explanation: Configuring InfiniBand adapter configured as PCI Memory Controller	
2024	2024
Explanation: Configuring InfiniBand adapter PCI Memory Controller w/ alt PCI Device ID	
2025	2025
Explanation: Configuring VASI (Virtual Asynchronous Services Interface) Adapter	
2026	2026
Explanation: Configuring nfso option in rc.boot	
2027	2027
Explanation: Configuring MPIO DS4K Device	
2028	2028
Explanation: Boot process searching for cluster repository disk	
2030	2030
Explanation: Configuring USB Audio Device	
2040	2040
Explanation: Configuring device model DS3/4K fcp	
2041	2041
Explanation: Configuring device model DS3/4K isci	

2042	2042
Explanation: Configuring device model DS3/4K sas	
2064	2064
Explanation: Attempt to configure 64-bit enviroment failed	
2501	2501
Explanation: Configuring Common Character Mode (CCM) enabled graphic adapter	
2502	2502
Explanation: Configuring PCI-X 266 Planar 3 GB SAS integrated adapter	
2503	2503
Explanation: Configuring PCI-X 266 Planar 3 GB SAS RAID integrated adapter	
2504	2504
Explanation: Configuring a PCIe x1 Auxiliary Cache a dapter	
2505	2505
Explanation: Configuring a PCI-X266 Planar 3Gb SAS RAID Adapter	
2506	2506
Explanation: Configuring JS12/JS23 PCI-X266 Planar 3Gb SAS Adapter	
2507	2507
Explanation: Configuring JS22 PCI-X266 Planar 3Gb SAS Adapter	
2512	2512
Explanation: Configuring PCI-X DDR quad channel Ultra320 SCSI RAID adapter	
2513	2513
Explanation: Configuring PCI-X DDR quad channel Ultra320 SCSI RAID adapter	
2514	2514
Explanation: Configuring PCI-X DDR quad channel Ultra320 SCSI RAID adapter	

2515	2515
Explanation:	Configuring a PCI-X DDR JBOD SAS adapter
2516	2516
Explanation:	Configuring a PCI-X Express DDR JBOD SAS adapter
2517	2517
Explanation:	Configuring PCI-XDDR RAID SAS adapter
2518	2518
Explanation:	Configuring PCIe RAID SAS adapter
2519	2519
Explanation:	Configuring PCI-X DDR RAID Adapter
251B	251B
Explanation:	Configuring PCI-Express High End RAID Adapter
251D	251D
Explanation:	Configuring PCI-X DDR Auxiliary Cache Controller
251E	251E
Explanation:	Configuring PCI-Express Auxiliary Write Cache Controller
2520	2520
Explanation:	PCI Dual-Channel Ultra-3 SCSI adapter being identified or configured.
2521	2521
Explanation:	Configuring Integrated Dual Channel Ultra 3 SCSI
2522	2522
Explanation:	PCI-X Dual Channel Ultra320 SCSI Adapter
2523	2523
Explanation:	PCI-X Ultra320 SCSI RAID Adapter

2524	2524
Explanation:	Configuring Integrated DART (Cog)
2525	2525
Explanation:	Configuring integrated PCI-X dual channel U320 SCSI RAID enablement card.
2526	2526
Explanation:	PCI-X Ultra320 SCSI RAID Battery Pack
2527	2527
Explanation:	PCI-X Quad Channel U320 SCSI RAID Adapter
2528	2528
Explanation:	PCI-X Dual Channel Ultra320 SCSI adapter
2529	2529
Explanation:	PCI-X Dual Channel Ultra320 SCSI RAID adapter
252B	252B
Explanation:	PCI-X Dual Channel Ultra320 SCSI RAID adapter
252D	252D
Explanation:	PCI-X DDR Dual Channel Ultra320 SCSI RAID adapter
252E	252E
Explanation:	Configuring PCI-X DDR Auxiliary Cache Adapter
2530	2530
Explanation:	10/100 Mbps Ethernet PCI Adapter II being configured.
2531	2531
Explanation:	Configuring 10 Gigabit-LR Ethernet PCI-X adapter
2532	2532
Explanation:	Configuring 10 Gigabit-SR Ethernet PCI-X adapter

2533	2533
Explanation: 10 GB Ethernet -SR PCI-X 2.0 DDR adapter being configured	
2534	2534
Explanation: 10 GB Ethernet -LR PCI-X 2.0 DDR adapter being configured	
2535	2535
Explanation: 4-Port 10/100/1000 Base-TX Ethernet PCI-X Adapter being configured.	
2536	2536
Explanation: Configuring Gigabit Ethernet-SX adapter	
2537	2537
Explanation: Configuring Ethernet-SX PCIe Adapter	
2538	2538
Explanation: Configuring Ethernet-TX PCIe Adapter	
2539	2539
Explanation: Configuring PCI Express 10Gb Ethernet-SX adapter	
253B	253B
Explanation: Configuring 15000 rpm 292 GB FC Disk	
253D	253D
Explanation: Configuring 7200 rpm 400 GB FC-NL Disk	
253E	253E
Explanation: Configuring 7200 rpm 400 GB FC-NL Disk	
2540	2540
Explanation: Configuring 10K rpm 300 GB FC Disk	
2541	2541
Explanation: Configuring 10K rpm 146 GB FC Disk	
2542	2542
Explanation: Configuring 10K rpm 73 GB FC Disk	

2543	2543
Explanation: Reserved	
2544	2544
Explanation: Configuring 15K rpm 146 GB FC Disk	
2545	2545
Explanation: Configuring 15K rpm 73 GB FC Disk	
2546	2546
Explanation: Configuring 15K rpm 36 GB FC Disk	
2547	2547
Explanation: Generic 522 bites per sector SCSI JBOD (not osdisk) Disk Drive	
2548	2548
Explanation: Configuring 36 GB 2.5 inch SCSD SFF HDD	
2549	2549
Explanation: Configuring 73 GB 2.5 inch SCSD SFF HDD	
254A	254A
Explanation: Configuring 4-port FCS adapter	
254B	254B
Explanation: Configuring enclosure for FCS adapter	
254C	254C
Explanation: Configuring 2-port FCS adapter	
254D	254D
Explanation: Configuring enclosure for FCS adapter	
254E	254E
Explanation: Fibre Channel Expansion Card	
254F	254F
Explanation: Configuring FCS SCSI Protocol device	

2550 • 256E

2550	2550
Explanation: Configuring a POWER GXT4500P graphics adapter	
2551	2551
Explanation: Configuring a POWER GXT6500P graphics adapter	
2552	2552
Explanation: Configuring 36 GB SAS 2.5 inch SFF HDD	
2553	2553
Explanation: Configuring 73 GB SAS 2.5 inch SFF HDD	
2554	2554
Explanation: Configuring 36 GB SAS 3.5 inch HDD	
2555	2555
Explanation: Configuring 73 GB SAS 3.5 inch HDD	
2556	2556
Explanation: Configuring 146 GB SAS 3.5 inch HDD	
2557	2557
Explanation: Configuring 300 GB SAS 3.5 inch HDD	
2558	2558
Explanation: Configuring 15K rpm 300 GB SCSI HDD (80 pin)	
2559	2559
Explanation: Configuring 15K rpm 36 GB SCSI HDD	
255B	255B
Explanation: Configuring 15K rpm 73 GB SCSI HDD	
255D	255D
Explanation: Configuring 15K rpm 146 GB SCSI HDD	
255E	255E
Explanation: Configuring 15K rpm 300 GB SCSI HDD	

2560	2560
Explanation: Configuring USB Keyboard	
2561	2561
Explanation: Configuring USB Mouse	
2562	2562
Explanation: Keyboard/Mouse Attachment Card-PCI being configured.	
2563	2563
Explanation: All USB Busses are being enumerated	
2564	2564
Explanation: Keyboard/Mouse Attachment Card-PCI being configured.	
2565	2565
Explanation: Configuring adapter or native EHCI USB	
2566	2566
Explanation: USB 3.5 inch Micro Diskette Drive	
2567	2567
Explanation: Configuring JS20 integrated OHCI USB adapter	
2568	2568
Explanation: Generic USB CD-ROM Drive	
2569	2569
Explanation: Configuring USB DVDROM drive	
256B	256B
Explanation: Configuring USB 3D mouse	
256D	256D
Explanation: 4Gb Fibre Channel adapter being configured	
256E	256E
Explanation: Configuring a 4-port 10/100/1000 Base-TX PCI express adapter	

2570	2570
Explanation: Configuring an IBM cryptographic accelerator PCI adapter	
2571	2571
Explanation: 2-Port PCI Asynchronous EIA-232 Adapter	
2572	2572
Explanation: PCI-X Cryptographic Coprocessor Card	
2573	2573
Explanation: Configuring 146 GB SAS SFF HDD	
2574	2574
Explanation: Configuring 15K rpm 36 GB SAS SFF HDD	
2575	2575
Explanation: Configuring 15K rpm 73GB SAS SFF HDD	
2576	2576
Explanation: Configuring 4-port PCIe Serial Adapter	
2577	2577
Explanation: Battery: IBM Cryptographic PCI-X Adapter	
2578	2578
Explanation: Configuring IBM Y4 Cryptographic Coprocessor PCIe Adapter	
2579	2579
Explanation: Battery: IBM Y4 Cryptographic PCIe Adapter	
257B	257B
Explanation: Configuring 4-port FC-AL RAID Adapter	
257D	257D
Explanation: Configuring 8-port FC-AL RAID Adapter	

2580	2580
Explanation: Configuring a SCSI accessed fault-tolerant enclosure (SAF-TE) device	
2581	2581
Explanation: 1 GB iSCSI TOE PCI-X adapter is being configured (copper connector)	
2582	2582
Explanation: iSCSI protocol device associated with an iSCSI adapter is being configured	
2583	2583
Explanation: 1 GB iSCSI TOE PCI-X adapter being configured (copper connector)	
2584	2584
Explanation: IDE DVD-RAM drive being configured	
2585	2585
Explanation: IDE DVD-ROM drive being configured	
2586	2586
Explanation: Configuring host Ethernet adapter	
2587	2587
Explanation: Configuring a Slimline DVD-ROM drive	
2588	2588
Explanation: Configuring a 4.7 GB Slimline DVD-RAM drive	
2589	2589
Explanation: Configuring the common SCSI protocol driver	
258B	258B
Explanation: Configuring Logical Host Ethernet Adapter	
258D	258D
Explanation: Configuring MPT2 Common SCSI protocol driver	

2590	2590
Explanation: IDE CD-ROM drive being configured	
2591	2591
Explanation: IDE DVD-ROM drive being configured.	
2592	2592
Explanation: IDE DVD-ROM drive being configured.	
2593	2593
Explanation: IDE DVD-RAM drive being configured.	
2594	2594
Explanation: 4.7 GB IDE Slimline DVD-RAM drive	
2595	2595
Explanation: IDE Slimline DVD-ROM drive	
2596	2596
Explanation: Configuring USB CDROM drive	
2597	2597
Explanation: Configuring USB DVDROM drive	
2598	2598
Explanation: Configuring USB CDROM drive	
2599	2599
Explanation: Configuring USB DVDROM	
259B	259B
Explanation: Configuring Slimline UBE IDE DVD-RAM drive	
259D	259D
Explanation: Configuring Slimline UBE IDE DVD-RAM drive	
25A0	25A0
Explanation: I/O Planar Control Logic for IDE devices	
25A1	25A1
Explanation: Configuring USB Mass Storage Device	

25A2	25A2
Explanation: Configuring USB DVD-RAM	
25A3	25A3
Explanation: Configuring PCIe Integrated Serial Adapter	
25A4	25A4
Explanation: Configuring PCIe 2-port Serial Adapter	
25B0	25B0
Explanation: Configuring iSCSI protocol device	
25B1	25B1
Explanation: Configuring Tivoli Storage Manager FC asynchronous event protocol driver	
25B2	25B2
Explanation: Configuring Virtual I/O Ethernet Adapter	
25B3	25B3
Explanation: Configuring VSCSI client adapter	
25B4	25B4
Explanation: Configuring VSCSI virtual disk	
25B5	25B5
Explanation: Configuring VSCSI virtual CDROM	
25B6	25B6
Explanation: Configuring Virtual I/O Bus	
25B7	25B7
Explanation: Configuring VSCSI virtual SCSI server driver	
25B8	25B8
Explanation: Configuring VSCSI virtual target device	
25B9	25B9
Explanation: Ethernet Adapter (Fiber)	

25BB	25BB
Explanation: Configuring Slimline UBE IDE DVDROM Drive	
25BD	25BD
Explanation: Configuring Slimline UBE IDE DVDROM Drive	
25C0	25C0
Explanation: Gigabit Ethernet-SX PCI-X adapter	
25C1	25C1
Explanation: 10/100/1000 base-TX Ethernet PCI-X adapter	
25C2	25C2
Explanation: Dual Port Gigabit SX Ethernet PCI-X Adapter	
25C3	25C3
Explanation: 10/100/1000 Base-TX Dual Port PCI-Adapter	
25C4	25C4
Explanation: Broadcom Dual-Port Gigabit Ethernet PCI-X Adapter	
25D0	25D0
Explanation: Configuring a PCI audio adapter	
25D1	25D1
Explanation: Configuring ATI controller	
25D2	25D2
Explanation: LSI SAS adapter	
25D3	25D3
Explanation: Configuring 2-port 6Gb LSI SAS Expansion adapter	
25D4	25D4
Explanation: Configuring 2-port 6Gb LSI SAS Expansion CFFe Adapter	

25D5	25D5
Explanation: Configuring 4-port 6Gb LSI SAS Expansion adapter	
25E0	25E0
Explanation: Configuring Switch network interface adapter	
25E1	25E1
Explanation: Configuring Switch network interface adapter	
25E2	25E2
Explanation: Configuring Switch network interface adapter	
25E3	25E3
Explanation: Configuring Switch network interface adapter	
25E4	25E4
Explanation: Configuring GXT7000e Advanced 3D PCI Express Graphics Adapter	
25E5	25E5
Explanation: Configuring PCI-E 2D Graphics Adapter	
25E6	25E6
Explanation: Configuring Low Profile PCI-E 2D Graphics Adapter	
25E7	25E7
Explanation: Reserved	
25E8	25E8
Explanation: Configuring PCI-X 2D Graphics Adapter	
25F0	25F0
Explanation: Configuring SCSD iSCSI Disk Drive	
25F1	25F1
Explanation: Configuring SCSD iSCSI CDROM Drive	

25F2 • 2614

25F2	25F2
Explanation: Configuring SCSD iSCSI Read/Write Optical Device	
25F3	25F3
Explanation: Configuring OEM iSCSI Disk Drive	
25F4	25F4
Explanation: Configuring OEM iSCSI CD-ROM Drive	
25F5	25F5
Explanation: Configuring OEM iSCSI Read/Write Optical Device	
25F6	25F6
Explanation: Configuring iSCSI SCSD Tape Drive	
25F7	25F7
Explanation: Configuring iSCSI ost Tape Drive	
25F8	25F8
Explanation: Configuring a 1 GB PCI-X iSCSI TOE Ethernet adapter (copper)	
25F9	25F9
Explanation: Reserved	
25FA	25FA
Explanation: Reserved	
2600	2600
Explanation: PCI 64-bit Fibre Channel Arbitrated Loop Adapter being configured.	
2601	2601
Explanation: PCI 64-bit Fibre Channel Arbitrated Loop Adapter being configured.	
2602	2602
Explanation: PCI 64-Bit 4 GB fibre channel adapter	
2603	2603
Explanation: Configuring 4Gb PCIe Fibre Channel Adapter	

2604	2604
Explanation: Configuring Emulex FC daughter card (SFF)	
2605	2605
Explanation: Configuring Emulex 8Gb PCIe 1-port FC adapter	
2606	2606
Explanation: Configuring 8Gb FC Dual Port PCIe Adapter	
2607	2607
Explanation: Configuring Emulex 8Gb PCIe 2-port FC daughter card	
2608	2608
Explanation: Configuring 8Gb PCIe 4-port FC adapter	
2609	2609
Explanation: Configuring Emulex 16Gb PCIe2 2-port FC adapter	
260B	260B
Explanation: Configuring Emulex SLI-4 FC SCSI protocol driver	
2610	2610
Explanation: Configuring Quantum SDLT320 tape drive	
2611	2611
Explanation: 36/72 GB 4 mm internal tape drive	
2612	2612
Explanation: 80/160 GB internal tape drive with VXA2 technology	
2613	2613
Explanation: 200/400 GB LTO2 Tape drive	
2614	2614
Explanation: VXA3 160/320 GB Tape Drive	

2615	2615
Explanation:	Configuring a DAT160 80GB tape drive
2616	2616
Explanation:	Configuring a 36/72GB 4mm Internal Tape Drive
2617	2617
Explanation:	Configuring a LTO3 400 GB tape drive
2618	2618
Explanation:	Configuring a SAS 400 GB/1.6 TB Ultrium 4 tape drive
2619	2619
Explanation:	Configuring 3.5 inch 80GB DAT160 SAS Tape Drive
2620	2620
Explanation:	Configuring InfiniBand adapter
2621	2621
Explanation:	PCI-X Dual-port 4x HCA Adapter being configured
2622	2622
Explanation:	Configuring InfiniBand Device
2623	2623
Explanation:	Configuring 4x InfiniBand PCI-E adapter
2624	2624
Explanation:	Configuring 4X PCIe DDR InfiniB and Host Channel adapter
2625	2625
Explanation:	Configuring 4X PCIe QDR InfiniBand Host Channel adapter
2626	2626
Explanation:	Configuring 4X PCIe QDR InfiniBand Host Channel Blade adapter

2627	2627
Explanation:	Configuring 4X PCIe QDR InfiniBand Host Channel Mezz adapter
2628	2628
Explanation:	Configuring PCIe RoCE Adapter
2629	2629
Explanation:	Identifying PCIe QDR Host Channel Adapter
262B	262B
Explanation:	Configuring PCIe RoCE Adapter
2630	2630
Explanation:	Configuring integrated IDE controller
2631	2631
Explanation:	Integrated IDE controller
2632	2632
Explanation:	Configuring RoHS compliant 73GB 80pin 15Krpm ATX carrier
2633	2633
Explanation:	Configuring RoHS compliant 146GB 80pin 15Krpm ATX carrier
2634	2634
Explanation:	Configuring RoHS compliant 300GB 80pin 15Krpm ATX carrier
2640	2640
Explanation:	IDE Disk Drive, 2.5 inch
2641	2641
Explanation:	73 GB SCSI disk drive 68 pin 10K rpm being identified or configured.
2642	2642
Explanation:	73 GB SCSI disk drive 80 pin 10K rpm with u3 carrier being identified or configured.

2643 2643

Explanation: 73 GB SCSI disk drive 80 pin 10K rpm with u3 carrier being identified or configured. (For OpenPower™ systems)

2644 2644

Explanation: 146 GB SCSI disk drive 68 pin 10K rpm being identified or configured.

2645 2645

Explanation: 146 GB SCSI disk drive 80 pin 10K rpm with u3 carrier being identified or configured.

2646 2646

Explanation: 146 GB SCSI disk drive 80 pin 10K rpm with u3 carrier being identified or configured. (For OpenPower systems)

2647 2647

Explanation: 300 GB SCSI disk drive 68 pin 10K rpm being identified or configured.

2648 2648

Explanation: 300 GB SCSI disk drive 80 pin 10K rpm with u3 carrier being identified or configured.

2649 2649

Explanation: 300 GB SCSI disk drive 80 pin 10K rpm with u3 carrier being identified or configured. (For OpenPower systems)

264B 264B

Explanation: 36 GB SCSI disk drive 80 pin 15K rpm with u3 carrier being identified or configured.

264D 264D

Explanation: 36 GB SCSI disk drive 80 pin 15K rpm with u3 carrier being identified or configured. (For OpenPower systems)

264E 264E

Explanation: 73 GB SCSI disk drive 80 pin 15K rpm with u3 carrier being identified or configured.

2650 2650

Explanation: ESS iSCSI devices being identified or configured.

2651 2651

Explanation: SVC being identified or configured.

2652 2652

Explanation: SVCCISCOi being identified or configured.

2653 2653

Explanation: 73 GB SCSI disk drive 80 pin 15K rpm with u3 carrier being identified or configured. (For HV systems)

2654 2654

Explanation: 146 GB SCSI disk drive 80 pin 15K rpm with u3 carrier being identified or configured.

2655 2655

Explanation: 146 GB SCSI disk drive 80 pin 15K rpm with u3 carrier being identified or configured. (For OpenPower systems)

2656 2656

Explanation: 73 GB SCSI disk drive 80 pin 15K rpm being identified or configured.

2657 2657

Explanation: 146 GB SCSI disk drive 80 pin 15K rpm being identified or configured.

2658 2658

Explanation: 73 GB SCSI disk drive 80 pin 10K rpm being identified or configured.

2659 2659

Explanation: 146 GB SCSI disk drive 80 pin 10K rpm being identified or configured.

265B 265B

Explanation: 300 GB SCSI disk drive 80 pin 10K rpm being identified or configured.

265D 265D

Explanation: Configuring generic SATA Attached IDE DVD/DRAM

265E **265E**
Explanation: Configuring generic SATA Attached IDE DVDROM Device

2660 **2660**
Explanation: Configuring generic SATA DVDROM Device

2661 **2661**
Explanation: Configuring generic SATA DVDROM Device

2662 **2662**
Explanation: Configuring generic SATA Optical Device

2663 **2663**
Explanation: Configuring generic SAS SCSD Disk Drive

2664 **2664**
Explanation: Configuring generic SAS Disk Drive

2665 **2665**
Explanation: Configuring generic SAS RAID Array

2666 **2666**
Explanation: Configuring generic SAS PDISK

2667 **2667**
Explanation: An electronics tray, also known as the enclosure services manager is being identified or configured

2668 **2668**
Explanation: Configuring generic Virtual SAS SCSI Enclosure Services Device

2669 **2669**
Explanation: Configuring generic SAS Target Mode Device

266B **266B**
Explanation: Configuring generic SAS Other Target Mode Device

266D **266D**
Explanation: Configuring generic SAS SCSD Tape Drive

266E **266E**
Explanation: Configuring generic SAS Tape Drive

2670 **2670**
Explanation: 73 GB SFF SAS Disk Drive 10K rpm being identified or configured

2671 **2671**
Explanation: 146 GB SFF SAS Disk Drive 10K rpm being identified or configured

2672 **2672**
Explanation: 300 GB SFF SAS Disk Drive 10K rpm being identified or configured

2673 **2673**
Explanation: Configuring 73 GB 3.5 inch SAS DASD

2674 **2674**
Explanation: Configuring 146 GB 3.5 inch SAS DASD

2675 **2675**
Explanation: Configuring 300 GB 3.5 inch SAS DASD

2676 **2676**
Explanation: Configuring 7200 rpm 750 GB FC-NL Disk

2677 **2677**
Explanation: Configuring 7200 rpm 1000 GB FC-NL Disk

2678 **2678**
Explanation: Configuring 36GB 3.5 inch SAS DASD

2679 **2679**
Explanation: Configuring Slimline SATA DVDROM drive

267B	267B
Explanation:	Configuring Slimline SATA DVDRAM drive
267D	267D
Explanation:	Configuring 15K rpm 450 GB FC Disk
2680	2680
Explanation:	A generic SAS adapter is being identified or configured
2681	2681
Explanation:	DVD tray assembly.
2684	2684
Explanation:	Configuring 73 GB 15K RPM SFF Disk Drive
2685	2685
Explanation:	Configuring 146 GB 15K RPM SFF Disk Drive
2687	2687
Explanation:	Configuring 73 GB SAS SFF Solid State Drive
2690	2690
Explanation:	Configuring 600 GB 15K RPM SAS Disk Drive
2691	2691
Explanation:	Configuring 15K rpm 600 GB FC Disk
2692	2692
Explanation:	Configuring 146 GB 15K RPM SFF SAS HDD
2693	2693
Explanation:	Configuring 300 GB 15K RPM SFF SAS HDD
2694	2694
Explanation:	Configuring 146 GB 10K rpm 2.5 inch SFF SAS HDD

2695	2695
Explanation:	Configuring 300 GB 10K rpm 2.5 inch SFF SAS HDD
2696	2696
Explanation:	Configuring 73 GB 15K RPM SFF SAS Drive
2697	2697
Explanation:	Configuring 146 GB 15K RPM SFF SAS Drive
2698	2698
Explanation:	Configuring 7200 rpm 2TB SATA Drive
2699	2699
Explanation:	Configuring 600 GB 10K RPM SAS SFF Disk Drive
269B	269B
Explanation:	Configuring 450 GB 10K RPM SFF SAS Hard Drive
269D	269D
Explanation:	Configuring 600 GB 10K RPM SFF SAS Hard Drive
26B0	26B0
Explanation:	Configuring 73 GB 3.5 inch FC-AL Solid State Drive
26B1	26B1
Explanation:	Configuring 146 GB 3.5 inch FC-AL Solid State Drive
26B2	26B2
Explanation:	Configuring 292 GB 3.5 inch FC-AL Solid State Drive
26B3	26B3
Explanation:	Configuring 100 GB SATA 1.8 inch Solid State Drive
26B4	26B4
Explanation:	Configuring 200 GB SATA Solid State Drive

26B5	26B5
Explanation:	Configuring 400 GB SATA 1.8 inch Solid State Drive
26B6	26B6
Explanation:	Configuring 300 GB SAS SFF Solid State Drive
26B7	26B7
Explanation:	Configuring 600 GB FC 3.5 inch Solid State Drive
26B8	26B8
Explanation:	Configuring 200 GB 2.5 inch Smart Modular SSD
26B9	26B9
Explanation:	Configuring 400 GB 2.5 inch SFF SAS SSD
26BD	26BD
Explanation:	Reserved
26D0	26D0
Explanation:	Configuring DAT320 160GB SAS Tape Drive
26D1	26D1
Explanation:	Configuring DAT320 160GB USB Tape Drive
26D2	26D2
Explanation:	Configuring 600 GB 10K RPM SFF SAS Disk Drive
26D3	26D3
Explanation:	Configuring 300 GB 15K RPM SFF SAS Disk Drive
26D4	26D4
Explanation:	Configuring 900 GB 2.5 inch 10K RPM SFF SAS HDD
26D5	26D5
Explanation:	Configuring 300 GB 2.5 inch 15K RPM SFF SAS HDD

26D6	26D6
Explanation:	Configuring 450 GB 2.5 inch 15K RPM SFF SAS HDD
26D7	26D7
Explanation:	Configuring 900 GB 10K RPM SAS SFF Disk Drive
26D8	26D8
Explanation:	Configuring 1 TB 7.2K RPM 3.5 inch SAS HDD
26D9	26D9
Explanation:	Configuring 2 TB 7.2K RPM 3.5 inch SAS HDD
26DB	26DB
Explanation:	Configuring 3 TB 7.2K RPM 3.5 inch SAS HDD
26DD	26DD
Explanation:	Configuring 900 GB 10K RPM 2.5 inch SFF SAS HDD
26E0	26E0
Explanation:	Configuring Internal RDX USB Dock
26E1	26E1
Explanation:	Configuring External RDX USB Dock
26E2	26E2
Explanation:	Reserved
26E3	26E3
Explanation:	Reserved
26E4	26E4
Explanation:	Reserved
26E5	26E5
Explanation:	Configuring SAS HH LTO-5 Tape Drive
26E6	26E6
Explanation:	Configuring USB Tape Drive

26E7	26E7
Explanation:	Configuring Enhanced Internal RDX USB Dock

26E9	26E9
Explanation:	Configuring Enhanced External RDX USB Dock

26EB	26EB
Explanation:	Reserved

26ED	26ED
Explanation:	Reserved

2700	2700
Explanation:	Configuring NPIV FC SCSI protocol device

2701	2701
Explanation:	Configuring NPIV FC SCSI protocol device

2702	2702
Explanation:	Boot failed due to insufficient VRM

2703	2703
Explanation:	Configuring Paging Device - Logical Volume

2704	2704
Explanation:	Configuring Paging Device - Disk

2705	2705
Explanation:	Configuring Virtual Tape

2706	2706
Explanation:	Configuring Pool Device

2707	2707
Explanation:	Configuring Virtual Fiber Channel (vfc) Host Device

2708	2708
Explanation:	Configuring VSCSI Virtual Tape

2709	2709
Explanation:	Configuring Virtual Block Storage Device

270B	270B
Explanation:	Configuring Cluster Storage Framework

270D	270D
Explanation:	Configuring Virtual SCSI Log

2710	2710
Explanation:	Configuring OHCI USB Native or 4-port PCIe Adapter

2711	2711
Explanation:	Configuring Loopback Device

2720	2720
Explanation:	Configuring Slimline SATA DVD/CD Drive

2722	2722
Explanation:	Configuring 2.5 TB SAS HH LTO-6 Tape Drive

2723	2723
Explanation:	Configuring 2.5 TB FC HH LTO-6 Tape Drive

2730	2730
Explanation:	Configuring VIOS Object

2731	2731
Explanation:	Configuring VIOS Cluster Object

2732	2732
Explanation:	Configuring VIOS LPM Pseudo device

2740	2740
Explanation:	Configuring 400 GB 2.5 inch SFF SAS SSD

2741	2741
Explanation:	Reserved

2742	2742
Explanation:	Configuring Interposer w/ 400 GB SATA 1.8 inch SSD
2743	2743
Explanation:	Configuring 800 GB SAS SFF SSD
2750	2750
Explanation:	Configuring 16Gb PCIe2 2-port FC Mezz adapter
2751	2751
Explanation:	Configuring Copper 10Gb PCIe2 2-port FCoE Adapter
2752	2752
Explanation:	Configuring Copper 10Gb PCIe2 2-port FCoE VF
2753	2753
Explanation:	Configuring SR 10Gb PCIe2 2-port FCoE Adapter
2754	2754
Explanation:	Configuring SR 10Gb PCIe2 2-port FCoE VF
2755	2755
Explanation:	Configuring 16Gb PCIe2 4-port FC NGP Mezz Adapter
2756	2756
Explanation:	Configuring 16Gb PCIe2 2-port FC adapter
2757	2757
Explanation:	Configuring 16Gb PCIe2 2-port FC adapter
2770	2770
Explanation:	Configuring 2-port 10Gb RoCE Mezz Adapter
2771	2771
Explanation:	Configuring 2-port 10Gb RoCE Mezz Adapter

2777	2777
Explanation:	Configuring PCIe QDR InfiniBand adapter
27D2	27D2
Explanation:	1.2 TB SFF SAS Disk Drive 10K rpm being identified or configured
2800	2800
Explanation:	Configuring virtual suspend device
2801	2801
Explanation:	Configuring virtual suspend adapter
2D00	2D00
Explanation:	Reserved
2D01	2D01
Explanation:	PCI-X Quad Channel U320 SCSI RAID Battery Pack
2D02	2D02
Explanation:	Generic USB Reference to Controller/Adapter
2D03	2D03
Explanation:	Reserved
2D04	2D04
Explanation:	Reserved
2D05	2D05
Explanation:	PCI-X266 Planar 3 GB SAS RAID adapter battery pack
2D06	2D06
Explanation:	Reserved
2D07	2D07
Explanation:	Configuring a PCI X DDR Auxiliary Cache adapter
2D08	2D08
Explanation:	Configuring PCI Express x8 Ext Dual-x4 3Gb SAS RAID Adapter

2D09	2D09
Explanation: Configuring PCI-X Ext x2 3Gb SAS RAID Adapter	
2D0B	2D0B
Explanation: PCI express x8 Ext Dual-x4 3Gb SAS RAID adapter being configured.	
2D0D	2D0D
Explanation: Configuring PCI Express x8 Ext. Dual-x4 3Gb SAS RAID Adapter	
2D0E	2D0E
Explanation: Reserved	
2D10	2D10
Explanation: Configuring RSSM Storage Device	
2D11	2D11
Explanation: Configuring PCIe3 RAID SAS Adapter Quad-port 6Gb x8	
2D12	2D12
Explanation: Configuring PCIe2 SAS Adapter Quad-port 6Gb	
2D13	2D13
Explanation: Configuring PCIe2 SAS Adapter Quad-port 6Gb	
2D14	2D14
Explanation: PCI express x8 Planar 3Gb SAS Adapter being configured.	
2D15	2D15
Explanation: PCI express x8 Planar 3Gb SAS RAID Adapter being configured.	
2D16	2D16
Explanation: PCI-X DDR Planar 3Gb SAS Adapter	
2D17	2D17
Explanation: PCI-X DDR Planar 3Gb SAS RAID Adapter	

2D18	2D18
Explanation: PCI-X DDR Planar 3Gb SAS RAID Adapter	
2D19	2D19
Explanation: Reserved	
2D1B	2D1B
Explanation: Reserved	
2D1D	2D1D
Explanation: Configuring PCIe2 RAID SAS Adapter Dual-port 6Gb	
2D1F	2D1F
Explanation: PCIe2 1.8GB Cache RAID SAS Adapter Tri-port 6Gb	
2D20	2D20
Explanation: PCIe2 1.8GB Cache RAID SAS Adapter Tri-port 6Gb	
2D21	2D21
Explanation: Configuring PCIe3 12GB Cache RAID SAS Adapter Quad-port 6Gb x8	
2D22	2D22
Explanation: Configuring PCIe2 3.6GB Cache RAID SAS Adapter Quad-port 6Gb	
2D23	2D23
Explanation: Configuring PCIe x1 Planar 3Gb SAS Adapter	
2D24	2D24
Explanation: Configuring PCIe2 3.6GB Cache RAID SAS Enclosure 6Gb	
2D25	2D25
Explanation: Configuring PCIe x4 Planar 3Gb SAS Adapter	
2D26	2D26
Explanation: Configuring PCIe x4 Planar 3Gb SAS RAID Adapter	

2D27	2D27
Explanation:	Configuring PCIe x4 Internal 3Gb SAS Adapter
2D28	2D28
Explanation:	Configuring PCIe x4 Internal 3Gb SAS RAID Adapter
2D29	2D29
Explanation:	Configuring PCIe x8 Internal 3Gb SAS Adapter
2D30	2D30
Explanation:	Configuring PCIe2 1.8GB RAID and SSD SAS Adapter 6Gb
2D31	2D31
Explanation:	Configuring PCIe2 3.6GB RAID and SSD SAS Adapter 6Gb
2D40	2D40
Explanation:	Configuring PCIe RAID and SSD SAS 3Gb Adapter
2D41	2D41
Explanation:	Reserved
2E00	2E00
Explanation:	Configuring SLIM Expansion Gb Ethernet-SX PCI-X Adapter
2E01	2E01
Explanation:	10Gb Ethernet-SR PCIe Adapter
2E02	2E02
Explanation:	10Gb Ethernet-LR PCIe Adapter
2E03	2E03
Explanation:	Configuring 10Gb Ethernet-SR PCIe Host Bus Adapter
2E04	2E04
Explanation:	Configuring 10Gb Ethernet-CX4 PCIe Host Bus Adapter

2E08	2E08
Explanation:	Configuring 4X Copper Twinax 10Gb PCIe Ethernet Adapter
2E09	2E09
Explanation:	Configuring 4X Copper Twinax 1Gb PCIe Ethernet Adapter
2E0B	2E0B
Explanation:	Configuring 4X SR SFP+ 10Gb PCIe Ethernet Adapter
2E0D	2E0D
Explanation:	Configuring 4X SR SFP+ 1Gb PCIe Ethernet Adapter
2E10	2E10
Explanation:	Configuring Qlogic 2432 FC Adapter
2E11	2E11
Explanation:	Configuring Qlogic 8Gb PCIe FC Adapter
2E12	2E12
Explanation:	8 Gb Fibre Channel adapter being configured
2E13	2E13
Explanation:	Configuring Qlogic 4Gb PCIe FC Blade Expansion Adapter
2E14	2E14
Explanation:	Configuring Qlogic 8Gb PCIe FC Blade Expansion Adapter
2E15	2E15
Explanation:	Configuring Qlogic 8Gb PCIe FC Blade Expansion Adapter
2E16	2E16
Explanation:	Configuring Qlogic 8Gb 2-port PCIe FC Mezz Card
2E17	2E17
Explanation:	Configuring low-profile 8Gb 4-port PCIe2 FC Adapter

2E18 • 2E57

2E18 **2E18**

Explanation: Reserved Configuring Qlogic 8Gb 2-port PCIe2 FC Adapter

2E20 **2E20**

Explanation: Configuring 10Gb PCIe FCoE CNA Slot FC Adapter

2E21 **2E21**

Explanation: Configuring Qlogic 10Gb PCIe FCoE CNA FC Daughtercard

2E22 **2E22**

Explanation: Configuring 10Gb PCIe FCoE CNA Slot Ethernet Adapter

2E23 **2E23**

Explanation: Configuring 10Gb PCIe2 FCoE VF

2E28 **2E28**

Explanation: Configuring 10Gb PCIe2 FCoE ITE Mezz VF

2E30 **2E30**

Explanation: Configuring 10Gb PCIe SFP+ SR Ethernet Adapter

2E31 **2E31**

Explanation: Configuring 10Gb PCIe SFP+ Twinax Ethernet Adapter

2E32 **2E32**

Explanation: Configuring 1Gb PCIe UTP Ethernet Adapter

2E33 **2E33**

Explanation: Configuring 1Gb 4-port PCIe Ethernet Adapter

2E34 **2E34**

Explanation: Configuring 1Gb 2-port PCIe Ethernet Adapter

2E35 **2E35**

Explanation: Configuring PCIe Combo 8Gb FC with 1Gb Ethernet

2E36 **2E36**

Explanation: Configuring 1Gb 2-port PCIe Integrated Ethernet Adapter

2E37 **2E37**

Explanation: Configuring PCIe2 4-port 10GbE Mezz Adapter

2E38 **2E38**

Explanation: Configuring Int Multifunction Adapter w/ SR Optical 10GbE

2E39 **2E39**

Explanation: Configuring Int Multifunction Adapter w/ Copper SFP+ 10GbE

2E3B **2E3B**

Explanation: Configuring Int Multifunction Adapter w/ Base-TX 10/100/1000 1GbE

2E3D **2E3D**

Explanation: Configuring 1Gb 2-port PCIe Ethernet Adapter

2E40 **2E40**

Explanation: Configuring 1Gb 2-port PCIe Ethernet Adapter

2E41 **2E41**

Explanation: Configuring 1Gb 2-port PCIe Ethernet Adapter

2E52 **2E52**

Explanation: Configuring 10GbE 8-port NGP Mezz adapter

2E53 **2E53**

Explanation: Configuring 10GbE-SR 4-port adapter

2E55 **2E55**

Explanation: Configuring 10GbE-SR/1GBaseT 4-port adapter

2E57 **2E57**

Explanation: Configuring 10GbE-Cu 4-port Integrated adapter

2E63 **2E63****Explanation:** Configuring 10GbE 2-port GX++ Gen2 adapter

2F00 **2F00****Explanation:** Configuring BluRay Writer

2F01 **2F01****Explanation:** Configuring BluRay Reader

3000 **3000****Explanation:** GPFS Raid Services

AIX diagnostic load progress indicators

This section contains a list of the various numbers and characters that display in the operator panel display that track the progress of diagnostics.

Note: Some systems might produce 4-digit codes. If the leftmost digit of a 4-digit code is 0, use the three rightmost digits.

0C00	0C00
------	------

Explanation: AIX Install/Maintenance loaded successfully.

0C01	0C01
------	------

Explanation: Insert the first diagnostic diskette.

0C02	0C02
------	------

Explanation: Diskettes inserted out of sequence.

0C03	0C03
------	------

Explanation: The wrong diskette is in diskette drive.

0C04	0C04
------	------

Explanation: The loading stopped with an irrecoverable error.

0C05	0C05
------	------

Explanation: A diskette error occurred.

0C06	0C06
------	------

Explanation: The `rc.boot` configuration shell script is unable to determine type of boot.

0C07	0C07
------	------

Explanation: Insert the next diagnostic diskette.

0C08	0C08
------	------

Explanation: RAM file system started incorrectly.

0C09	0C09
------	------

Explanation: The diskette drive is reading or writing a diskette.

0C10	0C10
------	------

Explanation: Unknown system platform

0C20	0C20
------	------

Explanation: An unexpected halt occurred, and the system is configured to enter the kernel debug program instead of entering a system dump.

0C21	0C21
------	------

Explanation: The `ifconfig` command was unable to configure the network for the client network host.

0C22	0C22
------	------

Explanation: The `tftp` command was unable to read client's *ClientHostName*.info file during a client network boot.

0C24	0C24
------	------

Explanation: Unable to read client's *ClientHostName*.info file during a client network boot.

0C25	0C25
------	------

Explanation: Client did not mount remote miniroot during network install.

0C26	0C26
------	------

Explanation: Client did not mount the `/usr` file system during the network boot.

0C29	0C29
------	------

Explanation: The system was unable to configure the network device.

0C31	0C31
------	------

Explanation: Select the console display for the diagnostics. To select No console display, set the key mode switch to Normal, then to Service. The diagnostic programs then load and run the diagnostics automatically. If you continue to get the message, check the cables and make sure you are using the serial port.

0C32	0C32
------	------

0C33 • 0C61

Explanation: A directly attached display (HFT) was selected.

0C33 0C33

Explanation: A TTY terminal attached to serial ports S1 or S2 was selected.

0C34 0C34

Explanation: A file was selected. The console messages store in a file.

0C35 0C35

Explanation: No console found.

0C40 0C40

Explanation: Configuration files are being restored.

0C41 0C41

Explanation: Could not determine the boot type or device.

0C42 0C42

Explanation: Extracting data files from diskette.

0C43 0C43

Explanation: Cannot access the boot/install tape.

0C44 0C44

Explanation: Initializing installation database with target disk information.

0C45 0C45

Explanation: Cannot configure the console.

0C46 0C46

Explanation: Normal installation processing.

0C47 0C47

Explanation: Could not create a physical volume identifier (PVID) on disk.

0C48 0C48

Explanation: Prompting you for input.

0C49 0C49

Explanation: Could not create or form the JFS log.

0C50 0C50

Explanation: Creating root volume group on target disks.

0C51 0C51

Explanation: No paging devices were found.

0C52 0C52

Explanation: Changing from RAM environment to disk environment.

0C53 0C53

Explanation: Not enough space in the **/tmp** directory to do a preservation installation.

0C54 0C54

Explanation: Installing either BOS or additional packages.

0C55 0C55

Explanation: Could not remove the specified logical volume in a preservation installation.

0C56 0C56

Explanation: Running user-defined customization.

0C57 0C57

Explanation: Failure to restore BOS.

0C58 0C58

Explanation: Displaying message to turn the key.

0C59 0C59

Explanation: Could not copy either device special files, device ODM, or volume group information from RAM to disk.

0C61 0C61

Explanation: Failed to create the boot image.

0C62 **0C62**

Explanation: Loading platform dependent debug files.

0C63 **0C63**

Explanation: Loading platform dependent data files.

0C64 **0C64**

Explanation: Failed to load platform dependent data files.

0C70 **0C70**

Explanation: Problem Mounting diagnostic boot media. An example of the boot media would be a CD-ROM disc.

0C71 **0C71**

Explanation: AIX diagnostics are not supported on this system, or there is not enough memory to run the diagnostics.

0C72 **0C72**

Explanation: There is a problem copying files from the diagnostic boot media into the RAM file system. An example of the boot media would be a CD-ROM disc.

0C99 **0C99**

Explanation: Diagnostics have completed. This code is only used when there is no console.

Dump progress indicators (dump status codes)

The following dump progress indicators, or dump status codes, are part of a Type 102 message.

Note: When a lowercase c is listed, it displays in the lower half of the character position. Some systems produce 4-digit codes. The two leftmost positions can have blanks or zeros. Use the two rightmost digits.

00C0	00C0
------	------

Explanation: The dump completed successfully.

Explanation: Unknown dump failure.

00C1	00C1
------	------

Explanation: The dump failed due to an I/O error.

00C2	00C2
------	------

Explanation: A dump, requested by the user, is started.

00C3	00C3
------	------

Explanation: The dump is inhibited.

00C4	00C4
------	------

Explanation: The dump device is not large enough.

00C5	00C5
------	------

Explanation: The dump did not start, or the dump crashed.

00C6	00C6
------	------

Explanation: Dumping to a secondary dump device.

00C7	00C7
------	------

Explanation: Reserved.

00C8	00C8
------	------

Explanation: The dump function is disabled.

00C9	00C9
------	------

Explanation: A dump is in progress.

00CB	00CB
------	------

Explanation: A firmware-assisted system dump is in progress

00CC	00CC
------	------

AIX crash progress codes (category 1)

Crash codes produce a Type 102 message. A Type 102 message indicates that a software or hardware error occurred during system execution of an application.

For category 1 crash codes, dump analysis is the appropriate first action in Problem Determination. Begin the Problem Determination process with software support.

888-102-300 888-102-300

Explanation: Data storage interrupt from the processor.

888-102-32X 888-102-32X

Explanation: Data storage interrupt because of an I/O exception from IOCC.

888-102-38X 888-102-38X

Explanation: Data storage interrupt because of an I/O exception from SLA.

888-102-400 888-102-400

Explanation: Instruction storage interrupt.

888-102-700 888-102-700

Explanation: Program interrupt.

AIX crash progress codes (category 2)

Crash codes produce a Type 102 message. A Type 102 message indicates that a software or hardware error occurred during system execution of an application.

For category 2 crash codes, dump analysis most likely will not aid in Problem Determination. Begin the Problem Determination process with hardware support.

888-102-200 888-102-200

Explanation: Machine check because of a memory bus error.

888-102-201 888-102-201

Explanation: Machine check because of a memory timeout.

888-102-202 888-102-202

Explanation: Machine check because of a memory card failure.

888-102-203 888-102-203

Explanation: Machine check because of an out of range address.

888-102-204 888-102-204

Explanation: Machine check because of an attempt to write to ROS.

888-102-205 888-102-205

Explanation: Machine check because of an uncorrectable address parity.

888-102-206 888-102-206

Explanation: Machine check because of an uncorrectable ECC error.

888-102-207 888-102-207

Explanation: Machine check because of an unidentified error.

888-102-208 888-102-208

Explanation: Machine check due to an L2 uncorrectable ECC.

888-102-500 888-102-500

Explanation: External interrupt because of a scrub memory bus error.

888-102-501 888-102-501

Explanation: External interrupt because of an unidentified error.

888-102-51X 888-102-51X

Explanation: External interrupt because of a DMA memory bus error.

888-102-52X 888-102-52X

Explanation: External interrupt because of an IOCC channel check.

888-102-53X 888-102-53X

Explanation: External interrupt from an IOCC bus timeout; x represents the IOCC number.

888-102-54X 888-102-54X

Explanation: External interrupt because of an IOCC keyboard check.

888-102-800 888-102-800

Explanation: Floating point is not available.

AIX crash progress codes (category 3)

Crash codes produce a Type 102 message. A Type 102 message indicates that a software or hardware error occurred during system execution of an application.

For category 3 crash codes, both software and hardware support may be needed in Problem Determination. Go to the 888 sequence in the operator panel display to assist in problem isolation.

888-102-000 888-102-000

Explanation: Unexpected system interrupt.

888-102-558 888-102-558

Explanation: There is not enough memory to continue the system IPL.

888-102-600 888-102-600

Explanation: AIX 4.3.3.3 and above: Alignment Interrupt. If pre-AIX 4.3.3.3: AIX has crashed because the Portability Assist Layer (PAL) for this machine type has detected a problem.

888-102-605 888-102-605

Explanation: AIX 4.3.3.3 and above: AIX has crashed because the Portability Assist Layer (PAL) for this machine type has detected a problem.

(C1xx) Service processor progress codes

C10010XX C10010XX

Explanation: Pre-standby

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1001F00 C1001F00

Explanation: Pre-standby: starting initial transition file

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1001F0D C1001F0D

Explanation: Pre-standby: discovery completed in initial transition file.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

Problem determination: While this checkpoint is being displayed, the service processor card is reading the system VPD; this may take as long as 15 minutes (on systems with maximum configurations or many disk drives) before displaying the next checkpoint. You should wait at least 15 minutes for this checkpoint to change before deciding that the system is hung.

C1001F0F C1001F0F

Explanation: Pre-standby: waiting for standby synchronization from initial transition file

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1001FFF C1001FFF

Explanation: Pre-standby: completed initial transition file

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X01 C1009X01

Explanation: Hardware object manager: (HOM): the cancontinue flag is being cleared.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation

Procedures chapter in your host server Service Guide.

C1009X02 C1009X02

Explanation: Hardware object manager: (HOM): erase HOM IPL step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X04 C1009X04

Explanation: Hardware object manager: (HOM): build cards IPL step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X08 C1009X08

Explanation: Hardware object manager: (HOM): build processors IPL step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X0C C1009X0C

Explanation: Hardware object manager: (HOM): build chips IPL step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X10 C1009X10

Explanation: Hardware object manager: (HOM): initialize HOM.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X14 C1009X14

Explanation: Hardware object manager: (HOM): validate HOM.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X18 C1009X18

C1009X1C • C1009X44

Explanation: Hardware object manager: (HOM): GARD in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X1C C1009X1C

Explanation: Hardware object manager: (HOM): clock test in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X20 C1009X20

Explanation: Frequency control IPL step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X24 C1009X24

Explanation: Asset protection IPL step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X28 C1009X28

Explanation: Memory configuration IPL step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X2C C1009X2C

Explanation: Processor CFAM initialization in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X30 C1009X30

Explanation: Processor self-synchronization in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X34 C1009X34

Explanation: Processor mask attentions being initialized.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X38 C1009X38

Explanation: Processor check ring IPL step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X39 C1009X39

Explanation: Processor L2 line delete in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X3A C1009X3A

Explanation: Load processor gpctr IPL step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X3C C1009X3C

Explanation: Processor ABIST step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X40 C1009X40

Explanation: Processor LBIST step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X44 C1009X44

Explanation: Processor array initialization step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X46 C1009X46

Explanation: Processor AVP initialization step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X48 C1009X48

Explanation: Processor flush IPL step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X4C C1009X4C

Explanation: Processor wiretest IPL step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X50 C1009X50

Explanation: Processor long scan IPL step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X54 C1009X54

Explanation: Start processor clocks IPL step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X58 C1009X58

Explanation: Processor SCOM initialization step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X5C C1009X5C

Explanation: Processor interface alignment procedure in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X5E C1009X5E

Explanation: Processor AVP L2 test case in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X60 C1009X60

Explanation: Processor random data test in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X64 C1009X64

Explanation: Processor enable machine check test in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X66 C1009X66

Explanation: Concurrent initialization in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X68 C1009X68

Explanation: Processor fabric initialization step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X6C C1009X6C

Explanation: Processor PSI initialization step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X70 C1009X70

Explanation: ASIC CFAM initialization step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X74 C1009X74

Explanation: ASIC mask attentions being set up.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X78 C1009X78

Explanation: ASIC check rings being set up.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X7C C1009X7C

Explanation: ASIC ABIST test being run.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X80 C1009X80

Explanation: ASIC LBIST test being run.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X82 C1009X82

Explanation: ASIC RGC being reset.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X84 C1009X84

Explanation: ASIC being flushed.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X88 C1009X88

Explanation: ASIC long scan initialization in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X8C C1009X8C

Explanation: ASIC start clocks in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X90 C1009X90

Explanation: Wire test in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X92 C1009X92

Explanation: ASIC restore erepair in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X94 C1009X94

Explanation: ASIC transmit/receive initialization step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X98 C1009X98

Explanation: ASIC wrap test in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X9C C1009X9C

Explanation: ASIC SCOM initialization step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009X9E C1009X9E

Explanation: ASIC HSS set up in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009XA0 C1009XA0

Explanation: ASIC onyx BIST in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009XA4 C1009XA4

Explanation: ASIC interface alignment step in progress.

Response: Perform isolation procedure FSPSPC1. To

locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009XA8 C1009XA8

Explanation: ASIC random data test in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009XAC C1009XAC

Explanation: ASIC enable machine check step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009XB0 C1009XB0

Explanation: ASIC I/O initialization step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009XB4 C1009XB4

Explanation: ASIC DRAM initialization step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009XB8 C1009XB8

Explanation: ASIC memory diagnostic step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009XB9 C1009XB9

Explanation: PSI diagnostic step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009XBB C1009XBB

Explanation: Restore L3 line delete step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009XBD C1009XBD

Explanation: AVP memory test case in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009XC0 C1009XC0

Explanation: Node interface alignment procedure in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009XC4 C1009XC4

Explanation: Dump initialization step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009XC8 C1009XC8

Explanation: Start PRD step in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009XCC C1009XCC

Explanation: Message passing waiting period has begun.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009XD0 C1009XD0

Explanation: Message passing waiting period has begun.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1009XD4 C1009XD4

Explanation: EI (Elastic Interface) calibration step in progress .

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100B101 C100B101

Explanation: Firmware update via the USB port on the service processor: the firmware image is being installed on one side of the flash.

C100B102 C100B102

Explanation: Firmware update via the USB port on the service processor: the firmware image is being installed on the other side of the flash.

C100B103 C100B103

Explanation: Firmware update via the USB port on the service processor: the firmware installation has been completed successfully. This checkpoint will stay in the control (operator) panel's display for about 10 seconds after the installation is complete, then it will be cleared.

C100B104 C100B104

Explanation: Firmware update via the USB port on the service processor: the firmware installation has failed.

C100C100 C100C100

Explanation: Starting power-up.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C102 C100C102

Explanation: Network initialization complete; waiting on VPD from processor.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C103 C100C103

Explanation: Waiting on VPD from processor.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C104 C100C104

Explanation: Processor VPD collection is complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C106 C100C106

Explanation: Checking of the number of processors is complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C107 C100C107

Explanation: Waiting on VPD from sensors.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C108 C100C108

Explanation: Sensor VPD collection is complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C10A C100C10A

Explanation: Waiting for BPC's IP addresses to be sent from the HMC. The control panel toggles between C100C10A and C100C10B every 5 seconds or so until the addresses are received.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C10B C100C10B

Explanation: Waiting for BPC's IP addresses to be sent from the HMC.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C10C C100C10C

Explanation: Waiting for the BPC to come up to standby and turn off block power. The control panel toggles between C100C10C and C100C10D every 5 seconds or so until the BPC is at standby and the block power has been turned off.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C10D C100C10D

Explanation: Waiting for the BPC to come up to standby and turn off block power.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation

Procedures chapter in your host server Service Guide.

C100C110 C100C110

Explanation: Waiting for serial polling. The control panel toggles between C100C110 and C100C111 every 5 seconds or so until valid PBC UART data is received from the DCAs.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C111 C100C111

Explanation: Waiting for serial polling.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C112 C100C112

Explanation: Collecting the TMS is complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C114 C100C114

Explanation: Waiting for the BPC to respond to the TMS command from SPCN. The control panel toggles between C100C114 and C100C115 every 5 seconds or so until the BPC has responded.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C115 C100C115

Explanation: Waiting for the BPC to respond to the TMS command from SPCN.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C116 C100C116

Explanation: Waiting for the BPC to respond to the enclosure TMS command from SPCN. The control panel toggles between C100C116 and C100C117 every 5 seconds or so until the BPC has responded.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C117 C100C117

Explanation: Waiting for the BPC to respond to the enclosure TMS command from SPCN.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C118 C100C118

Explanation: Waiting for the BPC to respond to the secure VPD command from SPCN. The control panel toggles between C100C118 and C100C119 every 5 seconds or so until the BPC has responded.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C119 C100C119

Explanation: Waiting for the BPC to respond to the secure VPD command from SPCN.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C120 C100C120

Explanation: Waiting for power off delay to be complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C121 C100C121

Explanation: Waiting for power off delay to be complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C122 C100C122

Explanation: Power off delay is complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C128 C100C128

Explanation: Waiting for the processor subsystem to show up in the BPC polling data. The control panel toggles between C100C128 and C100C129 every 5 seconds or so until the processor subsystem is present in the polling data.

Response: Perform isolation procedure FSPSPC1. To

locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C129 C100C129

Explanation: Waiting for the processor subsystem to show up in the BPC polling data.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C140 C100C140

Explanation: Checking the voltage adjustment.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C142 C100C142

Explanation: Checking of the voltage adjustment is complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C14E C100C14E

Explanation: Waiting for the voltage adjustment delay to be complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C14F C100C14F

Explanation: Waiting for the voltage adjustment delay to be complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C150 C100C150

Explanation: Checking the VRM voltage adjustment.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C152 C100C152

Explanation: Waiting for the VRM voltage adjustment delay to be complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C153 C100C153

Explanation: Waiting for the VRM voltage adjustment delay to be complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C154 C100C154

Explanation: Checking of the VRM voltage adjustment is complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C160 C100C160

Explanation: Power check in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C162 C100C162

Explanation: Checking for power supply power.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C164 C100C164

Explanation: Waiting for the power supply power to come up.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C165 C100C165

Explanation: Waiting for the power supply power to come up.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C166 C100C166

Explanation: REGS power check in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C168 C100C168

Explanation: Waiting for the REGS power check to be complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C169 C100C169

Explanation: Waiting for the REGS power check to be complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C170 C100C170

Explanation: Waiting for the BPC's response to the power-on request.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C171 C100C171

Explanation: Waiting for the BPC's response to the power-on request.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C172 C100C172

Explanation: BPC's response to the power-on request has been received; waiting on all processor subsystems to respond with **powered up** to BPC's polling query. The control panel toggles between C100C172 and C100C173 every 5 seconds or so until all processor subsystems report that they are powered up.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C173 C100C173

Explanation: Waiting on all processor subsystems to respond with **powered up** to BPC's polling query.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C174 C100C174

Explanation: Waiting for the BPC to report why power-on failed. The control panel toggles between C100C174 and C100C175 every 5 seconds or so until the report is received.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C175 C100C175

Explanation: Waiting for the BPC to report why power-on failed.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C180 C100C180

Explanation: Activating the power good signals.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C184 C100C184

Explanation: The power-on delay is complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C1A0 C100C1A0

Explanation: Waiting on the power good signals.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C1A1 C100C1A1

Explanation: Waiting on the power good signals.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C1A2 C100C1A2

Explanation: Waiting on the power good signal is complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C1B0 C100C1B0

Explanation: Waiting to power down.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C1B1 C100C1B1

Explanation: Waiting to power down.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C1B2 C100C1B2

Explanation: The power down delay is complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C1B4 C100C1B4

Explanation: The SPCN is waiting for power down.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C1B5 C100C1B5

Explanation: The SPCN is waiting for power down.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C1B6 C100C1B6

Explanation: Powering down the device is complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C1B7 C100C1B7

Explanation: Reserved.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C1B8 C100C1B8

Explanation: The request to power off the processor subsystem is complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C1BA C100C1BA

Explanation: Waiting on the BPC to respond to the power-off command to the I/O drawers from SPCN. The control panel toggles between C100C1BA and C100C1BB every 5 seconds or so until the I/O drawers respond.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C1BB C100C1BB

Explanation: Waiting on the BPC to respond to the power-off command to the I/O drawers from SPCN.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C1BE C100C1BE

Explanation: The power down operation is complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C1CF C100C1CF

Explanation: A critical fault has occurred. An SRC will be posted and logged soon.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100C1FF C100C1FF

Explanation: The power-on process is complete.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C100D009 C100D009

Explanation: Licensed Internal Code (system) running initialization

C1011F00 C1011F00

Explanation: Pre-standby: starting independent initial transition file (primary/secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1011FFF C1011FFF

Explanation: Pre-standby: completed independent initial transition file (primary/secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1021F00 C1021F00

Explanation: Pre-standby: starting primaryInitial transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1021FFF C1021FFF

Explanation: Pre-standby: completed primaryInitial transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1031F00 C1031F00

Explanation: Pre-standby: starting secondaryInitial transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1031FFF C1031FFF

Explanation: Pre-standby: completed secondaryInitial transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C103A1XX C103A1XX

Explanation: Hypervisor code modules are being transferred to system storage

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C103A2XX C103A2XX

Explanation: Hypervisor data areas are being built in system storage

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C103A3XX C103A3XX

Explanation: Hypervisor data structures are being transferred to system storage

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C103A400 C103A400

Explanation: Special purpose registers are loaded and instructions are started on the system processors

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C103A401 C103A401

Explanation: Instructions have been started on the system processors

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C103C2XX C103C2XX

Explanation: The service processor is waiting for the batteries in the uninterruptible power supply (UPS) to charge prior to automatic power on-IPL. The last byte (xx) will increment while waiting on the UPS batteries.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1041F00 C1041F00

Explanation: Pre-standby: starting GardedInitial transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1041FFF C1041FFF

Explanation: Pre-standby: completed GardedInitial transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C104550X C104550X

Explanation: The system reboot is waiting until the sibling service processor reaches the termination state. The last nibble (x) will toggle between 0 and 1.

C10F2000 • C1212000

C10F2000 C10F2000

Explanation: Halt: starting halt transition file

C10F20FF C10F20FF

Explanation: Halt: completing halt transition file

C1112000 C1112000

Explanation: Power on: starting Standby-PowerOnTransition transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C11120FF C11120FF

Explanation: Power on: completed Standby-PowerOnTransition transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1122000 C1122000

Explanation: Power on: starting PowerOnTransition-PoweredOn transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C11220FF C11220FF

Explanation: Power on: completed PowerOnTransition-PoweredOn transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1132000 C1132000

Explanation: Power on: starting PoweredOn-IplTransition transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C11320FF C11320FF

Explanation: Power on: completed PoweredOn-IplTransition transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C115E359 C115E359

Explanation: Vital product data (VPD) collection in progress. This progress code may be displayed for a long time on large systems.

Response: Perform isolation procedure FSPSPC1 only if this progress code does not appear to be updating after an hour or more. To locate the isolation procedure go to the Isolation Procedures chapter in your host server service guide.

C116C2XX C116C2XX

Explanation: System power interface is listening for power fault events from SPCN. The last byte (xx) will increment up from 00 to 1F every second while it waits.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1202000 C1202000

Explanation: IPL transition: starting PowerOn/IplTransition-Ipl transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C12020FF C12020FF

Explanation: IPL transition: completed PowerOn/IplTransition-Ipl transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C12040XX C12040XX

Explanation: IPL lock time left until expiration. The last byte (xx) will count down as the IPL lock time runs out (FF-00).

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1212000 C1212000

Explanation: IPL transition: starting Standard/IplTransition-Ipl transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C12120FF C12120FF

Explanation: IPL transition: completed
Standard/IplTransition-Ipl transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1222000 C1222000

Explanation: IPL transition: starting
Flash/IplTransition-Ipl transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C12220FF C12220FF

Explanation: IPL transition: completed
Flash/IplTransition-Ipl transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1232000 C1232000

Explanation: IPL transition: starting
PostDump/IplTransition-Ipl transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C12320FF C12320FF

Explanation: IPL transition: completed
PostDump/IplTransition-Ipl transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1242000 C1242000

Explanation: IPL transition: starting
Idle/IplTransition-Ipl transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C12420FF C12420FF

Explanation: IPL transition: completed
Idle/IplTransition-Ipl transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1252000 C1252000

Explanation: IPL transition: starting
Standby/IplTransition-Ipl transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C12520FF C12520FF

Explanation: IPL transition: completed
Standby/IplTransition-Ipl transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1382000 C1382000

Explanation: IPL: starting HostStarted-BcuSwitched transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C13820FF C13820FF

Explanation: IPL: completed HostStarted-BcuSwitched transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1392000 C1392000

Explanation: IPL: starting BcuSwitched-Runtime transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C13920FF C13920FF

Explanation: IPL: completed BcuSwitched-Runtime transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1402000 C1402000

Explanation: IPL: starting Normal/fast/Ipl-HostStarted transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C14020FF C14020FF

Explanation: IPL: completed Normal/fast/Ipl-HostStarted transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1412000 C1412000

Explanation: IPL: starting Normal/slow/Ipl-HostStarted transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C14120FF C14120FF

Explanation: IPL: completed Normal/slow/Ipl-HostStarted transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1422000 C1422000

Explanation: IPL: starting PostDump/Ipl-HostStarted transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C14220FF C14220FF

Explanation: IPL: completed PostDump/Ipl-HostStarted transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1432000 C1432000

Explanation: IPL: starting Ipl-IdleTransition transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C14320FF C14320FF

Explanation: IPL: completed Ipl-IdleTransition transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1442000 C1442000

Explanation: IPL: starting IdleTransition-Idle transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C14420FF C14420FF

Explanation: IPL: completed IdleTransition-Idle transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1452000 C1452000

Explanation: IPL: starting Ipl-StandbyVerificationTransition transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C14520FF C14520FF

Explanation: IPL: completed Ipl-StandbyVerificationTransition transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1462000 C1462000

Explanation: IPL: starting StandbyVerificationTransition-Standby transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C14620FF C14620FF

Explanation: IPL: completed StandbyVerificationTransition-Standby transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1472000 C1472000

Explanation: IPL: starting normal/ipl-hoststarted transition file (master)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C14720FF C14720FF

Explanation: IPL: completing normal/ipl-hoststarted transition file (master)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1482000 C1482000

Explanation: IPL: starting normal/backup/ipl-hoststarted transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C14820FF C14820FF

Explanation: IPL: completing normal/backup/ipl-hoststarted transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C162E402 C162E402

Explanation: If the system hangs on this checkpoint, the service processor is unable to collect VPD from the service processor.

Failing Item:
• SVCPROC

C162E403 C162E403

Explanation: If the system hangs on this checkpoint, the service processor is unable to collect VPD from the operator panel.

Failing Item:
• CTLPNL

C162E405 C162E405

Explanation: If the system hangs on this checkpoint, the service processor is unable to collect VPD from the VPD card.

Failing Item:
• CAPACTY

C162E408 C162E408

Explanation: If the system hangs on this checkpoint, the service processor is unable to collect VPD from the system backplane.

Failing Item:
• SYSBKPL

C162E410 C162E410

Explanation: If the system hangs on this checkpoint, the service processor is unable to collect VPD from a processor.

Failing Item:
• ANYPROC

C162E41C C162E41C

Explanation: If the system hangs on this checkpoint, the service processor is unable to collect VPD from the system.

Failing Item:
• CAPACTY

C162E41E C162E41E

Explanation: If the system hangs on this checkpoint, the service processor is unable to collect VPD from the enclosure.

Failing Item:
• SYSBKPL

C162E420 C162E420

Explanation: If the system hangs on this checkpoint, the service processor is unable to collect VPD from the IO backplane.

Failing Item:
• IO_HUB

C162E421 C162E421

Explanation: If the system hangs on this checkpoint, the service processor is unable to collect VPD from the IO hub.

Failing Item:
• IO_HUB

C162E430 C162E430

Explanation: If the system hangs on this checkpoint, the service processor is unable to collect VPD from SPCN.

Failing Item:
• SVCPROC

C162E4A0 C162E4A0

Explanation: If the system hangs on this checkpoint, the service processor is unable to collect VPD from the VSBP Starting Point.

Failing Item:
• CAPACTY

C162E4D0 C162E4D0

Explanation: If the system hangs on this checkpoint, the service processor is unable to collect VPD from memory DIMM.

Failing Item:

- MEMDIMM

C1645300 C1645300

Explanation: Starting a data synchronization operation between the primary service processor and the secondary service processor.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1645301 C1645301

Explanation: Completed a data synchronization operation between the primary service processor and the secondary service processor.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1645304 C1645304

Explanation: Redundancy enablement in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1645305 C1645305

Explanation: Redundancy enablement in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1645306 C1645306

Explanation: Redundancy enablement in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C16453XX C16453XX

Explanation: A large data synchronization operation from the primary service processor to the secondary service processor is taking place. The last nibble (x) will toggle between 2 and 3.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1802000 C1802000

Explanation: Termination: starting TerminationTransition-Termination transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C18020FF C18020FF

Explanation: Termination: completed TerminationTransition-Termination transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1902000 C1902000

Explanation: Power off: starting Any-Dpo transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C19020FF C19020FF

Explanation: Power off: completed Any-Dpo transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1912000 C1912000

Explanation: Power off: starting Any-PowerOffTransition transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C19120FF C19120FF

Explanation: Power off: completed Any-PowerOffTransition transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1922000 C1922000

Explanation: Power off: starting PowerOffTransition-PoweredOff transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C19220FF C19220FF

Explanation: Power off: completed
PowerOffTransition-PoweredOff transition file
(primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1C02000 C1C02000

Explanation: Secondary VERIFICATION: starting
Standby-StandbyVerification transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1C020FF C1C020FF

Explanation: Secondary verification: completed
Standby-StandbyVerification transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1C12000 C1C12000

Explanation: Secondary verification: starting
StandbyVerification-Standby transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1C120FF C1C120FF

Explanation: Secondary verification: completed
StandbyVerification-Standby transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1C22000 C1C22000

Explanation: Secondary verification: starting
Runtime-secondaryVerification transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1C220FF C1C220FF

Explanation: Secondary verification: completed
Runtime-secondaryVerification transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1C32000 C1C32000

Explanation: Secondary verification: starting
secondaryVerification-Runtime transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1C320FF C1C320FF

Explanation: Secondary verification: completed
secondaryVerification-Runtime transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1C3C218 C1C3C218

Explanation: The service processor is polling the system power control network (SPCN) firmware looking for power fault events.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1C42000 C1C42000

Explanation: Failover: starting failover/failover-termination transition file (master)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1C420FF C1C420FF

Explanation: Failover: completed failover/failover-termination transition file (master)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1C52000 C1C52000

Explanation: Failover: starting failover/backup/
failover-termination transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1C520FF C1C520FF

Explanation: Failover: completed failover/backup/
failover-termination transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1C62000 C1C62000

Explanation: Failover: starting failover/failover-runtime transition file (master).

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1C620FF C1C620FF

Explanation: Failover: completed failover/failover-runtime transition file (master).

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1C72000 C1C72000

Explanation: Failover: starting failover/backup/failover-standby transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1C720FF C1C720FF

Explanation: Failover: completed failover/backup/failover-standby transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CA2000 C1CA2000

Explanation: Connection monitoring failover: starting survfailover/backup/failover-runtime transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CA20FF C1CA20FF

Explanation: Connection monitoring failover: completed survfailover/backup/failover-runtime transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CB2000 C1CB2000

Explanation: Connection monitoring failover: starting survfailover/backup/failover-termination transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation

Procedures chapter in your host server Service Guide.

C1CB20FF C1CB20FF

Explanation: Connection monitoring failover: completed survfailover/backup/failover-termination transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE200 C1CBE200

Explanation: VPD collection in progress

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE2FF C1CBE2FF

Explanation: VPD collection ending

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE300 C1CBE300

Explanation: Checking the status of VPD collection

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE3FF C1CBE3FF

Explanation: The end of checking the status of VPD collection

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE400 C1CBE400

Explanation: VPD recollection is in progress.

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE401 C1CBE401

Explanation: VPD recollection because of a change in the VPD is in progress

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE402 C1CBE402

Explanation: The old VPD values are being cleared from memory

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE403 C1CBE403

Explanation: The RLCA is being initialized during VPD recollection

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE404 C1CBE404

Explanation: VPD is being recollected

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE405 C1CBE405

Explanation: VPD is being recollected

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE406 C1CBE406

Explanation: VPD is being recollected

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE407 C1CBE407

Explanation: The recollected VPD is being validated

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE408 C1CBE408

Explanation: The VPD tables are being rebuilt with the recollected data

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE409 C1CBE409

Explanation: The NVRAM VPD data is being recollected

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE40A C1CBE40A

Explanation: The RLCA VPD data is being recollected

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE40B C1CBE40B

Explanation: The recollected RLCA VPD data is being written to memory

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE40C C1CBE40C

Explanation: The recollected HVAT VPD data is being written to memory

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE40D C1CBE40D

Explanation: The registers are being updated with the recollected VPD

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE40E C1CBE40E

Explanation: The module table is being rewritten with the recollected VPD

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE40F C1CBE40F

Explanation: The LED table is being rewritten with the recollected VPD

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE410 C1CBE410

Explanation: The LED table is being rewritten with the recollected VPD

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE411 C1CBE411

Explanation: The security of the recollected VPD is being verified

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE4FE C1CBE4FE

Explanation: The state is being updated during VPD recollection

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE4FF C1CBE4FF

Explanation: The recollection of VPD is ending

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE500 C1CBE500

Explanation: The VPD of a single FRU is being recollected

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE600 C1CBE600

Explanation: The VPD of a single FRU module is being recollected

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CBE6FF C1CBE6FF

Explanation: The VPD recollection from a single FRU is ending

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CC2000 C1CC2000

Explanation: Connection monitoring failover: starting survfailover/backup/failover-standby transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1CC20FF C1CC20FF

Explanation: Connection monitoring failover: completed survfailover/backup/failover-standby transition file (secondary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1D22000 C1D22000

Explanation: Dump: starting DumpTransition-Dump transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1D2200D C1D2200D

Explanation: Dump: calling hardware dump from DumpTransition-Dump transition file (master)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1D2200F C1D2200F

Explanation: Dump: calling main store dump from DumpTransition-Dump transition file (master)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1D220FF C1D220FF

Explanation: Dump: completed DumpTransition-Dump transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1E82000 C1E82000

Explanation: Exit error: starting ExitError/Ipl transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1E820FF C1E820FF

Explanation: Exit error: completed ExitError/Ipl transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1E92000 C1E92000

Explanation: Extract exit error: starting ExtractExitError/ipl transition file (master)

C1E920FF C1E920FF

Explanation: Extract exit error: completed ExtractExitError/ipl transition file (master)

C1EA2000 C1EA2000

Explanation: Extract exit error: starting ExtractExitError/Backup/ipl transition file (secondary)

C1EA20FF C1EA20FF

Explanation: Extract exit error: completed ExtractExitError/Backup/ipl transition file (secondary)

C1F22000 C1F22000

Explanation: Reset/reload: starting Reset/Ipl-LimitedRuntime transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1F220FF C1F220FF

Explanation: Reset/reload: completed Reset/Ipl-LimitedRuntime transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1F32000 C1F32000

Explanation: Reset/reload: starting Reset/Ipl-Runtime transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1F320FF C1F320FF

Explanation: Reset/reload: completed Reset/Ipl-Runtime transition file (primary)

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation

Procedures chapter in your host server Service Guide.

C1F42000 C1F42000

Explanation: Reset/reload: starting Reset/Ipl-TerminationTransition transition file (master).

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

C1F420FF C1F420FF

Explanation: Reset/reload: completed Reset/Ipl-TerminationTransition transition file (master).

Response: Perform isolation procedure FSPSPC1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

(C2xx) Virtual service processor progress codes

The C2xx progress codes indicate the progress of a partition IPL that is controlled by the virtual service processor.

The codes represent normal events which do not require any action to be taken. If a partition IPL stalls at a C2xxxxxx progress code, a problem has occurred. Collect all of the SRC words and contact your next level of support.

C2001000	C2001000
Explanation: Partition auto-IPL during a platform IPL	
C2001010	C2001010
Explanation: IPL source	
C2001100	C2001100
Explanation: Adding partition resources to the secondary configuration	
C20011FF	C20011FF
Explanation: Partition resources added successfully	
C2001200	C2001200
Explanation: Checking if IPL is allowed	
C20012FF	C20012FF
Explanation: Partition IPL is allowed to proceed	
C2001300	C2001300
Explanation: Initializing ISL roadmap	
C20013FF	C20013FF
Explanation: ISL roadmap initialized successfully	
C2001400	C2001400
Explanation: Initializing SP Communication Area #1	
C2001410	C2001410
Explanation: Initializing IPL parameters	
C20014FF	C20014FF
Explanation: IPL parameters initialized successfully	
C2002100	C2002100

Explanation: Power on SPCN racks

C2002110	C2002110
Explanation: Issuing a rack power on command	
C200211F	C200211F
Explanation: Rack power on command successful	
C20021FF	C20021FF
Explanation: SPCN rack power on phase complete	
C2002200	C2002200
Explanation: Begin acquiring slot locks	
C20022FF	C20022FF
Explanation: End acquiring slot locks	
C2002300	C2002300
Explanation: Begin acquiring VIO slot locks	
C20023FF	C20023FF
Explanation: End acquiring VIO slot locks	
C2002400	C2002400
Explanation: Begin powering on slots	
C2002450	C2002450
Explanation: Waiting for power on of slots to complete	
C20024FF	C20024FF
Explanation: End powering on slots	
C2002500	C2002500
Explanation: Begin power on VIO slots	

C20025FF • C2006000

C20025FF **C20025FF**

Explanation: End powering on VIO slots

C2003100 **C2003100**

Explanation: Validating ISL command parameters

C2003111 **C2003111**

Explanation: Waiting for Bus object to become operational

C2003112 **C2003112**

Explanation: Waiting for bus unit to become disabled

C2003115 **C2003115**

Explanation: Waiting for creation of bus object

C2003150 **C2003150**

Explanation: Sending ISL command to bus unit

C20031FF **C20031FF**

Explanation: Waiting for ISL command completion

C20032FF **C20032FF**

Explanation: ISL command complete successfully

C2003300 **C2003300**

Explanation: Start SoftPOR of a failed ISL slot

C2003350 **C2003350**

Explanation: Waiting for SoftPOR of a failed ISL slot

C20033FF **C20033FF**

Explanation: Finish SoftPOR of a failed ISL slot

C2004100 **C2004100**

Explanation: Waiting for load source device to enlist

C2004200 **C2004200**

Explanation: Load source device has enlisted

C2004300 **C2004300**

Explanation: Preparing connection to load source device

C20043FF **C20043FF**

Explanation: Load source device is connected

C2005100 **C2005100**

Explanation: Preparing to initiate MSD phase

C2005110 **C2005110**

Explanation: Loading SID 82 from load source device

C2005115 **C2005115**

Explanation: MSD Phase I

C2005120 **C2005120**

Explanation: Writing processor registers into SID 82

C2005125 **C2005125**

Explanation: MSD Phase II

C2005130 **C2005130**

Explanation: Writing main store pages to the load source device

C2005133 **C2005133**

Explanation: Writing hardware page table to the load source device

C2005135 **C2005135**

Explanation: MSD Phase III

C2005140 **C2005140**

Explanation: Storing (final) SID 82 back to the load source device

C2005150 **C2005150**

Explanation: Allocating the hardware page table

C20051FF **C20051FF**

Explanation: MSD processing complete

C2006000 **C2006000**

Explanation: Locating First LID information on the load source

C2006005	C2006005
Explanation: Clearing all partition main store	
C2006010	C2006010
Explanation: Locating Next LID information on the load source	
C2006020	C2006020
Explanation: Verifying LID information	
C2006030	C2006030
Explanation: Priming LP Configuration LID	
C2006040	C2006040
Explanation: Preparing to initiate LID load from load source	
C2006050	C2006050
Explanation: LP Configuration LID primed successfully	
C2006060	C2006060
Explanation: Waiting for LID load to complete	
C20060F0	C20060F0
Explanation: The license information document (LID) was read without the aid of a input output processor (IOP).	
C2006100	C2006100
Explanation: LID load completed successfully	
C2006200	C2006200
Explanation: Loading raw kernel memory image	
C20062FF	C20062FF
Explanation: Loading raw kernel memory image completed successfully	
C2007100	C2007100
Explanation: Disconnecting from load source device	
C2007103	C2007103
Explanation: Removing load source device from LID Manager object	

C2007105	C2007105
Explanation: Preparing to remove the load source IP from the primary partition	
C2007110	C2007110
Explanation: Preparing to remove the load source IOP from the primary partition	
C2007120	C2007120
Explanation: Non-load source IOP has been successfully removed from the primary partition	
C2007125	C2007125
Explanation: Load source IOP has been successfully removed from the primary partition	
C2007130	C2007130
Explanation: Calling fatal error on the Transport Manager bus unit object	
C20071FF	C20071FF
Explanation: Load source is successfully disconnected	
C2008040	C2008040
Explanation: Begin transfer slot locks to partition	
C2008060	C2008060
Explanation: End transfer slot locks to partition	
C2008080	C2008080
Explanation: Begin transfer VIO slot locks to partition	
C20080A0	C20080A0
Explanation: End transfer VIO slot locks to partition	
C20080FF	C20080FF
Explanation: Hypervisor low level session manager object is ready	
C2008100	C2008100
Explanation: Initializing SP Communication Area #2	
C2008104	C2008104
Explanation: Loading data structures into main store	

C2008110 • C200XXXX

C2008110 **C2008110**

Explanation: Initializing event paths

C2008120 **C2008120**

Explanation: Starting processors

C2008130 **C2008130**

Explanation: Begin associate of system ports.

C2008138 **C2008138**

Explanation: Associating system ports to the RPA partition.

C200813F **C200813F**

Explanation: End associate of system ports.

C20081FF **C20081FF**

Explanation: Processors started successfully, now waiting to receive the continue acknowledgement from System Licensed Internal Code

C2008200 **C2008200**

Explanation: Continue acknowledgement received from System Licensed Internal Code

C20082FF **C20082FF**

Explanation: VSP IPL complete successfully

C200XXXX **C200XXXX**

Explanation: Any other Virtual Service Processor Progress Code not listed here.

(C3xx, C5xx, C6xx) IPL status progress codes

A server that stalls during an initial program load (IPL) of the operating system indicates a problem with the operating system code or hardware configuration.

In this case, your only service action is to call your next level of support. If the problem is in the operating system code or hardware configuration, exchanging any hardware FRU will not fix the problem.

Notes:

- The following table contains the C3xxxxxx, C5xxxxxx, and C6xxxxxx IPL status progress codes. Some of these codes can appear on your control panel or management console display. Depending on the system activity and disk configuration the duration of time that each code is displayed can vary. Eventually the system will continue to the next progress code until the IPL status is complete, or if an error is detected an SRC other than a C3xxxxxx, C5xxxxxx, or C6xxxxxx will be displayed.
- There are instances when multiple tasks might be happening at the same time, so the progress code on the panel may not reflect the code module having problems.

The mode of the IPL (A, B, or D) determines, in part, which status SRCs are displayed. The different types of IPL use different progress codes, so you will not see all of the progress codes in the table below when you perform an IPL.

The list of IPL status progress codes uses the following format:

- The message number contains characters that represent a particular action your server performs during initialization of the supported operating system.
- The description identifies the action or procedure that produced the progress code.

C3YXXXXX	C3YXXXXX
----------	----------

Explanation: System Processor or Main Storage Diagnostic in progress

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500C901	C500C901
----------	----------

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500C935	C500C935
----------	----------

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500C920	C500C920
----------	----------

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500C936	C500C936
----------	----------

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500C92B	C500C92B
----------	----------

Explanation: Waiting for console device - error condition only if console not found

C500C93F	C500C93F
----------	----------

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500C92F	C500C92F
----------	----------

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500C940	C500C940
----------	----------

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500C930	C500C930
----------	----------

C500C941	C500C941
----------	----------

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500C945 • C500E240

C500C945 **C500C945**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500C947 **C500C947**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500C94F **C500C94F**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500C950 **C500C950**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500C95F **C500C95F**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500C960 **C500C960**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500C96F **C500C96F**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500C970 **C500C970**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500C980 **C500C980**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500C981 **C500C981**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500C999 **C500C999**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500C9F0 **C500C9F0**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E200 **C500E200**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E201 **C500E201**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E204 **C500E204**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E208 **C500E208**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E210 **C500E210**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E218 **C500E218**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E220 **C500E220**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E228 **C500E228**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E238 **C500E238**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E240 **C500E240**

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E248 C500E248

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E250 C500E250

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E258 C500E258

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E260 C500E260

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E268 C500E268

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E270 C500E270

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E278 C500E278

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E280 C500E280

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E288 C500E288

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E28C C500E28C

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E299 C500E299

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C500E2D0 C500E2D0

Explanation: IBM i IPL status SRC. LIC and hardware initialization.

C5YXXXXX C5YXXXXX

Explanation: Licensed Internal Code system hardware initialization

C6001800 C6001800

Explanation: Licensed Internal Code SPCN setup

C6003900 C6003900

Explanation: SP transfer control of Bus 1 (BCU Switch) to Licensed Internal Code is Complete and Licensed Internal Code Machine Facilities component is initialized. IPL of Bus 1 is in progress.

C6003910 C6003910

Explanation: Licensed Internal Code has initiated PCI Bus Reset to all Bus 1 devices except the SP

C6003911 C6003911

Explanation: Licensed Internal Code has initiated self test of all Bus 1 devices except the SP

C6003912 C6003912

Explanation: Licensed Internal Code is initiating IPL of the Load Source IOP, waiting for the IOP to signal internal reset complete (Immediate Status Acknowledge Bit set to '1')

C6003913 C6003913

Explanation: Licensed Internal Code is initializing the Load Source IOP messaging functions

C6003914 C6003914

Explanation: Licensed Internal Code has detected a Load Source IOP problem and is resetting the IOP, or the IOP has requested a reset after an internal Flash memory Licensed Internal Code update

C6003915 C6003915

Explanation: Licensed Internal Code has initiated the Load Source IOP self-load

C6003916 • C6004022

C6003916 **C6003916**

Explanation: During self-load, the Load Source IOP signalled Licensed Internal Code that it is initiating an internal Flash Memory update or other critical function

C6003917 **C6003917**

Explanation: The Load Source IOP has completed IPL of its operational load, Licensed Internal Code is waiting for the IOP to report its attached IO resources. This is the last progress code normally displayed regarding Load Source IPL

C60039XX **C60039XX**

Explanation: The typical sequence for an A/B/C mode IPL is 3900, 3910, 3911 (warm IPL only), 3912 (warm IPL only), 3913, 3915, 3917, and then other System Licensed Internal Code IPL progress codes. The others are seen when an IOP flash update occurs, usually on a D mode and possibly on a side (source) switch between A and B or C.

C6004001 **C6004001**

Explanation: Static paging

C6004002 **C6004002**

Explanation: Start limited paging, call LID manager

C6004003 **C6004003**

Explanation: Initialize IPL/Termination (IT) data area / set up node address communication area (NACA) pointer

C6004004 **C6004004**

Explanation: Check and update MSD SID

C6004005 **C6004005**

Explanation: Initialize event management is executing

C6004006 **C6004006**

Explanation: IPL all buses

C6004007 **C6004007**

Explanation: Start SLID

C6004008 **C6004008**

Explanation: Initialize I/O service

C6004009 **C6004009**

Explanation: Initialize I/O machine

C6004010 **C6004010**

Explanation: Initialize IDE (interactive device exerciser)

C6004011 **C6004011**

Explanation: Initialize remote services

C6004012 **C6004012**

Explanation: Initialize RMAC component data values

C6004013 **C6004013**

Explanation: Initialize context management

C6004014 **C6004014**

Explanation: Initialize RM (component) seize lock

C6004015 **C6004015**

Explanation: Initialize MISR

C6004016 **C6004016**

Explanation: Set time of day

C6004017 **C6004017**

Explanation: Initialize RM (component) process management

C6004018 **C6004018**

Explanation: Initialize error log

C6004019 **C6004019**

Explanation: Re-initialize the service processor

C6004020 **C6004020**

Explanation: Initialize machine services

C6004021 **C6004021**

Explanation: Initialize performance data collector

C6004022 **C6004022**

Explanation: Initialize event management

C6004023	C6004023
Explanation:	Create MI boundary manager tasks
C6004024	C6004024
Explanation:	Disable CPM
C6004025	C6004025
Explanation:	Initializes battery test
C6004026	C6004026
Explanation:	Hardware card checkout
C6004027	C6004027
Explanation:	Start integrated device exerciser (Type C IPL only)
C6004028	C6004028
Explanation:	Start DST
C6004029	C6004029
Explanation:	Make IPL task not critical
C6004030	C6004030
Explanation:	Free static storage
C6004031	C6004031
Explanation:	Destroy IPL task, DST has been started
C6004033	C6004033
Explanation:	Guest Partition Virtual I/O Initialization Complete
C6004050	C6004050
Explanation:	Storage management recovery is executing
C6004051	C6004051
Explanation:	Start LOG is executing
C6004052	C6004052
Explanation:	Trace table initialization is executing

C6004053	C6004053
Explanation:	Context rebuild is executing. Module called: #RCRBCTX.
C6004054	C6004054
Explanation:	Start Product Activity Log and APPN is executing
C6004055	C6004055
Explanation:	Authority recovery is executing
C6004056	C6004056
Explanation:	Journal recovery is executing
C6004057	C6004057
Explanation:	Data base recovery is executing
C6004058	C6004058
Explanation:	Journal synchronization is executing
C6004059	C6004059
Explanation:	Commit recovery is executing
C6004060	C6004060
Explanation:	Data base initialization is executing
C6004061	C6004061
Explanation:	Journal IPL clean up is executing
C6004062	C6004062
Explanation:	Commit initialization is executing
C6004064	C6004064
Explanation:	System Object Model (SOM) recovery is executing.
C6004065	C6004065
Explanation:	Start operating system is executing
C6004072	C6004072
Explanation:	Storage Management Recovery is complete

C6004073 • C6004275

C6004073 **C6004073**
Explanation: Queueing was notified that full paging is available

C6004074 **C6004074**
Explanation: Breakpoint Manager initialization phase 2 complete

C6004075 **C6004075**
Explanation: Volume stats initialized

C6004076 **C6004076**
Explanation: Lid Manager was notified that full paging is available

C6004077 **C6004077**
Explanation: Recovery directory structure created

C6004078 **C6004078**
Explanation: Link loader was notified that full paging is available

C6004079 **C6004079**
Explanation: Clean up SLIC install structures

C600407A **C600407A**
Explanation: Initialize database storage

C600407B **C600407B**
Explanation: Initialize IFS storage

C600407C **C600407C**
Explanation: HRI was notified that full paging is available

C600407D **C600407D**
Explanation: Authority was notified that full paging is available

C600407E **C600407E**
Explanation: Initialize I/O structures

C600407F **C600407F**
Explanation: Initialize cryptography structures

C6004100 **C6004100**
Explanation: Searching for Load Source Candidate (D-mode only)

C6004101 **C6004101**
Explanation: Opening media-file to install Licensed Internal Code service displays with proper National Language Version

C6004102 **C6004102**
Explanation: Loading and linking from media-file to install Licensed Internal Code service displays with proper National Language Version

C6004201 **C6004201**
Explanation: Storage management recovery

C6004204 **C6004204**
Explanation: Synchronization of mirrored MSD.

C6004205 **C6004205**
Explanation: Synchronization of mirrored data (where xx is percent complete).

C6004240 **C6004240**
Explanation: Reclaim main storage

C6004250 **C6004250**
Explanation: Storage management subset directory recovery

C6004255 **C6004255**
Explanation: Defragmentation utility

C6004260 **C6004260**
Explanation: Storage management directory recovery.

C6004272 **C6004272**
Explanation: ASP overflow recovery

C6004275 **C6004275**
Explanation: Moving data on Load Source to increase reserved area.

C6004300 C6004300

Explanation: Static paging is available for the link/loader

C6004301 C6004301

Explanation: Applying temporary PTFs. If the IPL is terminated at this point, the Licensed Internal Code might need to be installed again.

C6004302 C6004302

Explanation: Applying modules. If the IPL is terminated at this point, the Licensed Internal Code might need to be installed again.

C6004303 C6004303

Explanation: Temporarily applied PTFs have reached the static paging phase

C6004304 C6004304

Explanation: Delayed LID is being requested.

C6004305 C6004305

Explanation: Delayed LID has loaded successfully.

C600432A C600432A

Explanation: Resolving references to run Mode A. The system can be safely terminated while this work is being done.

C600432B C600432B

Explanation: Resolving references to run Mode B. The system may be safely terminated while this work is being done.

C6004330 C6004330

Explanation: Full paging is available; workstation HRI processing

C6004331 C6004331

Explanation: Freeing unused nucleus pages

C6004332 C6004332

Explanation: Permanently applying PTFs. If the IPL is terminated at this point, the Licensed Internal Code might need to be installed again.

C6004400 C6004400

Explanation: Main Storage Dump Manager started (where xx is the number of minutes elapsed waiting for DASD to report in.

C6004401 C6004401

Explanation: Some DASD failed to report in

C6004402 C6004402

Explanation: Storage Management Recovery started

C6004403 C6004403

Explanation: Storage Management Recovery ended

C6004404 C6004404

Explanation: Licensed Internal Code log started. If Auto Copy in progress, xx is the percent complete. Module called: MsdStartSf.

C6004405 C6004405

Explanation: Dump auto copy completed successfully. Module called: MsdStartSf.

C6004406 C6004406

Explanation: Shutdown/Programmed IPL started (MSD related). Module called: MsdStartSf, MsdInit.

C6004500 C6004500

Explanation: Verifying network attributes

C6004501 C6004501

Explanation: Looking for the console

C6004502 C6004502

Explanation: Starting DST display task (SSP only)

C6004503 C6004503

Explanation: Checking possible MRI on media (SSP only)

C6004504 C6004504

Explanation: Verifying system serial number

C6004505 • C6xx4404

C6004505 **C6004505**

Explanation: Verifying system type

C6004506 **C6004506**

Explanation: Verifying system-unique ID

C6004507 **C6004507**

Explanation: Starting 'before DST' DASD checker

C6004508 **C6004508**

Explanation: Verifying system password (if DASD check OK)

C6004509 **C6004509**

Explanation: Starting DASD migration function (only if migrating)

C600450A **C600450A**

Explanation: Starting 'after DST' DASD checker

C6004A57 **C6004A57**

Explanation: Parallel database recovery and is at Pass 1

C6004A60 **C6004A60**

Explanation: Parallel database initialization is at Pass 1

C6004B57 **C6004B57**

Explanation: Parallel database recovery is at Pass 2

C6004B60 **C6004B60**

Explanation: Parallel database initialization is at Pass 2

C6004C57 **C6004C57**

Explanation: Parallel database recovery is at Pass 3

C6004C60 **C6004C60**

Explanation: Parallel database initialization is at Pass 3

C6004F57 **C6004F57**

Explanation: The system is recovering all database objects. This step can take several hours.

C6004F60 **C6004F60**

Explanation: The system is examining all objects during database initialization.

C6xx1800 **C6xx1800**

Explanation: Licensed Internal Code SPCN setup

C6xx4205 **C6xx4205**

Explanation: Synchronization of mirrored data (where xx is percent complete).

C6xx4400 **C6xx4400**

Explanation: Main Storage Dump Manager started (where xx is the number of minutes elapsed waiting for DASD to report in).

C6xx4404 **C6xx4404**

Explanation: Licensed Internal Code log started. If Auto Copy in progress, xx is the percent complete. Module called: MsdStartSf.

(C7xx) Server firmware IPL status progress codes

A server that stalls during an initial program load (IPL) of the server firmware indicates a problem with the server firmware code.

Server firmware IPL status progress codes enable your service provider and next level of support to more easily identify the server firmware component causing the problem.

Note: If the problem is in the server firmware code, exchanging any hardware FRU will not fix the problem.

C7004091 C7004091

Explanation: This is the final IPL status progress code to be displayed before the system reaches standby state. When standby is reached, C7004091 will no longer be displayed.

C700XXXX C700XXXX

Explanation: If the system stalls during an initial program load (IPL) of the server firmware, a problem has occurred with the server firmware code. Exchanging any hardware FRU will not fix the problem.

Problem determination: Collect information on words 3 and 4 of the SRC, and call your next level of support.

(C9xx) IPL status progress codes

Learn about IPL status progress codes that have a format of C9xxxxxx.

As your server performs an IPL, the control panel displays progress codes that indicate the status of the IPL. Often, you can use these progress codes to help you perform problem analysis. The following list offers information on the IPL status progress codes that have a format of C9xxxxxx.

C9002810	C9002810
Explanation: Reclaim machine context	
C9002820	C9002820
Explanation: Resolve system objects	
C9002825	C9002825
Explanation: Convert Work Control Block Table	
C9002830	C9002830
Explanation: System value object	
C90028C0	C90028C0
Explanation: Prepare SPCF job	
C90028C5	C90028C5
Explanation: Initialize system objects	
C9002910	C9002910
Explanation: Start system logging	
C9002920	C9002920
Explanation: Library and object information repository (OIR) cleanup	
C9002925	C9002925
Explanation: Verify POSIX** root directories	
C9002930	C9002930
Explanation: Database cross-reference	
C9002940	C9002940
Explanation: Console configuration	
C9002950	C9002950
Explanation: Install complex objects	

C9002960	C9002960
Explanation: Sign on processing	
C9002965	C9002965
Explanation: Software Management Services (SMS) initialization	
C9002967	C9002967
Explanation: Applying PTFs	
C9002968	C9002968
Explanation: IPL options	
C9002970	C9002970
Explanation: Database recovery part 1, journal recovery part 1	
C9002973	C9002973
Explanation: This recovery step attempts to perform any needed recovery for database files that were being changed, created or deleted when an abnormal system end occurred.	
C9002976	C9002976
Explanation: This recovery step verifies the object recovery list performs any needed recovery for journals and journal receivers.	
C9002978	C9002978
Explanation: This progress code displays after progress codes C9002A70 through C9002976 have been completed	
C9002980	C9002980
Explanation: Storage requirements	
C9002990	C9002990
Explanation: Performance adjustments	

C90029A0 • C9002C40

C90029A0 **C90029A0**

Explanation: System control block

C90029B0 **C90029B0**

Explanation: Spool initialization

C90029C0 **C90029C0**

Explanation: Work control block table

C9002A80 **C9002A80**

Explanation: Before starting system jobs

C9002A85 **C9002A85**

Explanation: Bringing up POSIX SAG

C9002A87 **C9002A87**

Explanation: POSIX SAG restart and signals initialization

C9002A90 **C9002A90**

Explanation: Starting system jobs

C9002A95 **C9002A95**

Explanation: Abnormal Work Control Block Table cleanup

C9002AA0 **C9002AA0**

Explanation: Damage notification

C9002AA1 **C9002AA1**

Explanation: This recovery step either rolls back or completes certain uncompleted database operations that were run under commitment control

C9002AA2 **C9002AA2**

Explanation: This recovery completes certain journal operations that were in progress when the system ended processing

C9002AA3 **C9002AA3**

Explanation: This recovery sends messages to QHST for database files that may have been damaged by a system end

C9002AA4 **C9002AA4**

Explanation: This progress code displays after progress codes C9002AA0 - C9002AA3 have been completed

C9002AA5 **C9002AA5**

Explanation: Integrated File System/New File System (NFS) directory recovery

C9002AAA **C9002AAA**

Explanation: IPL status SRC for spool initialization part 2.

C9002AAC **C9002AAC**

Explanation: Integrated File System conversion

C9002AB0 **C9002AB0**

Explanation: Database recovery part 2

C9002AC0 **C9002AC0**

Explanation: Document Library Object (DLO) recovery

C9002B10 **C9002B10**

Explanation: Establish event monitors

C9002B30 **C9002B30**

Explanation: QLUJ job

C9002B40 **C9002B40**

Explanation: Device configuration

C9002C10 **C9002C10**

Explanation: After system arbiter

C9002C20 **C9002C20**

Explanation: SNADS recovery

C9002C25 **C9002C25**

Explanation: ZMF component (Mail Enablement (OeDS) Framework) recovery

C9002C40 **C9002C40**

Explanation: Work Control Block Table cleanup

C9002CF0 **C9002CF0****Explanation:** Reclaim storage

C9002F00 **C9002F00****Explanation:** IPL complete

(CAxx) Partition firmware progress codes

Partition firmware progress codes offer information about the progress of partition firmware as it is initializing.

In some cases, a server might hang (or stall) at one of these progress codes without displaying an 8-character system reference code (SRC). Only during such a hang condition should you take any service action related to the progress code.

Note: If the control panel displays more than eight characters, use only the first eight characters to find the error in the list. Characters that display after the first eight represent a location code that assists you in diagnosing the problem.

CA000000 CA000000

Explanation: Process control now owned by partition firmware

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA000020 CA000020

Explanation: Checking the firmware levels

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA000030 CA000030

Explanation: Attempting to establish a communication link by using lpevents

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA000032 CA000032

Explanation: Attempting to register lpevent queues

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA000034 CA000034

Explanation: Attempting to exchange cap and allocate lpevents

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA000038 CA000038

Explanation: Attempting to exchange virtual continue events

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA000040 CA000040

Explanation: Attempting to obtain RTAS code lid details

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA000050 CA000050

Explanation: Attempting to load RTAS firmware

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA000060 CA000060

Explanation: Attempting to obtain open firmware details

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA000070 CA000070

Explanation: Attempting to load open firmware

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA000080 CA000080

Explanation: Preparing to start open firmware

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA000090 CA000090

Explanation: Open firmware package corrupted (phase 1).

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA000091 CA000091

Explanation: Attempting to load open firmware

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA0000A0 CA0000A0

Explanation: Open firmware package corrupted (phase 2)

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00D001 CA00D001

Explanation: PCI probe completed, create PCI bridge interrupt routing properties

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00D002 CA00D002

Explanation: PCI adapter nvram hint created; system is rebooting

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00D003 CA00D003

Explanation: PCI probing complete

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWPCI5

CA00D004 CA00D004

Explanation: Start of install-console, loading GUI package

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00D008 CA00D008

Explanation: Initialize console and flush queues

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00D00C CA00D00C

Explanation: The partition firmware is about to search for an NVRAM script.

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- NEXTLVL

CA00D00D CA00D00D

Explanation: Evaluating NVRAM script.

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00D010 CA00D010

Explanation: First pass open firmware initialization complete; establish parameters for restart

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00D011 CA00D011

Explanation: First pass open firmware initialization complete; control returned to initialization firmware

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00D012 CA00D012

Explanation: Second pass open firmware initialization complete; control returned to initialization firmware

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00D013 CA00D013

Explanation: Run-time open firmware initialization complete; control returned to initialization firmware

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00D020 CA00D020

Explanation: The partition firmware is about to download and run the SLIC loader

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00D021 CA00D021

Explanation: The partition firmware is about to download and run the I/O reporter to collect VPD

CA00E101 • CA00E135

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E101 CA00E101

Explanation: Create RTAS node

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E102 CA00E102

Explanation: Load/initialize RTAS

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E105 CA00E105

Explanation: Transfer control to the operating system (normal boot)

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

CA00E10A CA00E10A

Explanation: Load RTAS device tree

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E10B CA00E10B

Explanation: Set RTAS device properties

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E110 CA00E110

Explanation: Create the kdump properties

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E130 CA00E130

Explanation: Build device tree

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E131 CA00E131

Explanation: Create the root node properties

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E134 CA00E134

Explanation: Create memory node

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E135 CA00E135

Explanation: Create HCA node

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E136 CA00E136

Explanation: Create BSR node

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E137 CA00E137

Explanation: Create HEA node

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E138 CA00E138

Explanation: Create options node

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E139 CA00E139

Explanation: Create aliases node and system aliases

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E13A CA00E13A

Explanation: Create packages node

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E13B CA00E13B

Explanation: Create HEA node

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E13C CA00E13C

Explanation: Create HEA port node

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E13D CA00E13D

Explanation: Create high frequency interface (HFI) IO hub node

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E13E CA00E13E

Explanation: Create high frequency interface (HFI) Ethernet node

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E140 CA00E140

Explanation: Loading the operating system

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

CA00E141 CA00E141

Explanation: Synchronize the operating system bootlist to the management module bootlist

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E142 CA00E142

Explanation: Management module bootlist is being set from the operating system boot list

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E143 CA00E143

Explanation: Operating system bootlist is being set from the management module bootlist

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E149 CA00E149

Explanation: Create boot mgr node

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E14C CA00E14C

Explanation: Create terminal emulator node

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E14D CA00E14D

Explanation: Load boot image

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

CA00E150 CA00E150

Explanation: Create host (primary) PCI controller node

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E151 CA00E151

Explanation: Probing PCI bus

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWPCI5

CA00E152 CA00E152

Explanation: Probing for adapter FCODE; evaluate if present

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWPCI5
-

CA00E153 CA00E153

Explanation: End adapter FCODE probing and evaluation

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWPCI5
-

CA00E154 CA00E154

Explanation: Create PCI bridge node

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWPCI5
-

CA00E155 CA00E155

Explanation: Probing PCI bridge secondary bus

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

CA00E156 CA00E156

Explanation: Create plug-in PCI bridge node

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWPCI5
-

CA00E157 CA00E157

Explanation: Probe for virtual function (VF) Fcode; evaluate if present

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWPCI5
-

CA00E158 CA00E158

Explanation: End probing for, and evaluation of, for virtual function (VF) Fcode

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWPCI5
-

CA00E15B CA00E15B

Explanation: Transfer control to Operating System (service mode boot)

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

CA00E15F CA00E15F

Explanation: Adapter VPD evaluation

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWPCI5
-

CA00E170 CA00E170

Explanation: Start of PCI BUS probe

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWPCI5
-

CA00E172 CA00E172

Explanation: First pass PCI device probe

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWPCI5
-

CA00E174 CA00E174

Explanation: Establishing host connection

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWHOST
-

CA00E175 CA00E175

Explanation: BootP request

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWHOST
-

CA00E176 CA00E176

Explanation: TFTP file transfer

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

CA00E177 CA00E177

Explanation: Transfer failure due to TFTP error condition

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

CA00E178 CA00E178

Explanation: Initiating TFTP file transfer

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

CA00E179 CA00E179

Explanation: Closing BOOTP

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

CA00E17B CA00E17B

Explanation: Processor clock speed measurement

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- NEXTLVL
-

CA00E198 CA00E198

Explanation: Rebooting partition to enact changes specified in ibm,client-architecture-support.

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

CA00E199 CA00E199

Explanation: The partition is rebooting to enact changes that were specified the ELF header of the boot image.

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

CA00E19A CA00E19A

Explanation: NVRAM auto-boot? variable not found - assume FALSE

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E19B CA00E19B

Explanation: NVRAM menu? variable not found - assume FALSE

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E19D CA00E19D

Explanation: Create NVRAM node

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E19E CA00E19E

Explanation: Real-time clock (RTC) initialization

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E1A0 CA00E1A0

Explanation: User requested boot to SMS menus by using keyboard entry

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E1A1 CA00E1A1

Explanation: User requested boot to open firmware prompt by using keyboard entry

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E1A2 CA00E1A2

Explanation: User requested boot using default service mode boot list by using keyboard entry

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E1A3 CA00E1A3

Explanation: User requested boot using customized service mode boot list by using keyboard entry

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E1A4 CA00E1A4

Explanation: User requested boot to SMS menus by using the Hardware Management Console or a service processor command

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E1A5 CA00E1A5

Explanation: User requested boot to open firmware prompt by using the HMC or a service processor command

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E1A6 CA00E1A6

Explanation: User requested boot using default service mode boot list by using the HMC or a service processor command

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E1A7 CA00E1A7

Explanation: User requested boot using customized service mode boot list by using the HMC or a service processor command.

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E1AA CA00E1AA

Explanation: System boot check for NVRAM Settings

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E1AB CA00E1AB

Explanation: System booting using the default service mode boot list

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E1AC CA00E1AC

Explanation: System booting using the customized service mode boot list

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E1AD CA00E1AD

Explanation: System booting to the operating system

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E1AE CA00E1AE

Explanation: System booted to SMS multiboot menu by using NVRAM settings

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWMBOOT
-

CA00E1AF CA00E1AF

Explanation: System booted to SMS utilities menu by using NVRAM settings

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E1B0 CA00E1B0

Explanation: Process HMC-specified boot device specifier

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E1B1 CA00E1B1

Explanation: System booting with HMC or hosting-partition directed boot-device repair

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E1B2 CA00E1B2

Explanation: XOFF received, waiting for XON

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWVTHMC

CA00E1B3 CA00E1B3

Explanation: XON received

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWPCI5

CA00E1B4 CA00E1B4

Explanation: HMC or hosting-partition directed boot-string did not load an operating system repair

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- NEXTLVL

CA00E1B5 CA00E1B5

Explanation: Checking for iSCSI disk aliases

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWPCI5

CA00E1D0 CA00E1D0

Explanation: Create PCI SCSI node

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWPCI5

CA00E1D3 CA00E1D3

Explanation: Create SCSI block device node (SD)

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWPCI5

CA00E1D4 CA00E1D4

Explanation: Create SCSI byte device node (ST)

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWPCI5

CA00E1DC CA00E1DC

Explanation: On a Linux or AIX system or partition, the partition firmware (the System Management Services, or SMS) is waiting for a firmware console to be selected. If the system is managed by a management console, open a VTERM and select it as the console. If the system is not managed by a management console, insure that a console is attached, then select that console when prompted.

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWCONS

CA00E1DD CA00E1DD

Explanation: A graphics adapter was selected as the firmware console, but the USB keyboard is not attached.

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWCONS

CA00E1F0 CA00E1F0

Explanation: Start out-of-box experience

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

CA00E1F1 • CA00E1FE

- FWFLASH

CA00E1F1 CA00E1F1

Explanation: Start selftest sequence on one or more devices

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E1F5 CA00E1F5

Explanation: Build boot device list

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

CA00E1F6 CA00E1F6

Explanation: Determine boot device sequence

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E1F7 CA00E1F7

Explanation: Boot invalid or stopped

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

CA00E1F8 CA00E1F8

Explanation: Build boot device list for SCSI adapters (displays the location code of the SCSI adapter being scanned)

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWPCI5

CA00E1F9 CA00E1F9

Explanation: Build boot device list for Fibre Channel adapters (displays the location of the SAN adapter being scanned)

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWPCI5

CA00E1FA CA00E1FA

Explanation: Building device list for SCSI adapters (displays the device ID and device LUN of the devices being scanned)

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWPCI5

CA00E1FB CA00E1FB

Explanation: Scan SCSI bus for attached devices

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWSCSIH

CA00E1FC CA00E1FC

Explanation: Build boot device list for SSA adapters (displays the location code of the SSA adapter being scanned)

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWPCI5

CA00E1FE CA00E1FE

Explanation: Building device list for Fibre Channel (SAN) adapters (displays the WWPN of the fibre-channel adapter being scanned)

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

CA00E1FF CA00E1FF

Explanation: Build device list for Fibre Channel (SAN) adapters (displays the LUN for each device being scanned)

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

CA00E440 CA00E440

Explanation: Validate NVRAM, initialize partitions as needed

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E441 CA00E441

Explanation: Generate /options node NVRAM configuration variable properties

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E442 CA00E442

Explanation: Validate NVRAM partitions

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E443 CA00E443

Explanation: Generate NVRAM configuration variable dictionary words

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E444 CA00E444

Explanation: NVRAM size is less than 8K bytes

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E701 CA00E701

Explanation: Create memory VPD

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E800 CA00E800

Explanation: Initialize gdata for the control (operator) panel

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E820 CA00E820

Explanation: Initializing lpevent

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E830 CA00E830

Explanation: Initializing event scan

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

CA00E840 • CA00E879

Failing Item:

- FWFLASH

CA00E840 CA00E840

Explanation: Initializing hot plug

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E843 CA00E843

Explanation: Initializing interface/aix access

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E850 CA00E850

Explanation: Initializing dynamic reconfiguration

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E860 CA00E860

Explanation: Initializing sensors

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E865 CA00E865

Explanation: Initializing VPD

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E870 CA00E870

Explanation: Initializing pfd's memory manager

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E875 CA00E875

Explanation: Initializing rtas_last_error

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E876 CA00E876

Explanation: Initializing rtas_error_inject

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E877 CA00E877

Explanation: Initialize dump interface

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E879 CA00E879

Explanation: Initialize the platform-assisted kdump interface

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E880 CA00E880

Explanation: Send firmware version data to the hypervisor

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E885 CA00E885

Explanation: Initializing set-power-level

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E886 CA00E886

Explanation: Initializing exit2c

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E887 CA00E887

Explanation: Initialize gdata for activate_firmware

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E890 CA00E890

Explanation: Starting to initialize open firmware

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA00E891 CA00E891

Explanation: Finished initializing open firmware

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00E8A0 CA00E8A0

Explanation: Initializing the pinned page manager

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA00EAA1 CA00EAA1

Explanation: Probe PCI-PCI bridge bus

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWPCI5
-

CA060203 CA060203

Explanation: An alias was modified or created

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH
-

CA26FFFF CA26FFFF

Explanation: An extended amount of time was required while waiting for lpevent to complete.

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

CA26TTSS • CA360001

- FWFLASH

CA26TTSS CA26TTSS

Explanation: Waiting for lpevent of type tt and subtype ss

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

Failing Item:

- FWFLASH

CA279001 CA279001

Explanation: The firmware update image contains an update module that is not present in the current image.

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

CA2799FD CA2799FD

Explanation: The service processor is receiving a server firmware update module

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

CA2799FF CA2799FF

Explanation: The service processor is writing a server firmware update module.

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

CA360001 CA360001

Explanation: Entered H-HFI-VERIFY-INTERFACE-STATE method to check the interface state for an HFI unit id. The wait time may be as long as 1 hour and 15 mins. No intervention is required; do not power off the CEC.

Response: No repair action steps prior to working the failing item list.

Problem determination: No additional problem determination.

(CF00) Linux kernel boot progress codes

CF000012 CF000012

Explanation: Set up initialization.

Problem determination: If the system or partition does not progress past this code, contact your Linux provider.

CF000015 CF000015

Explanation: Set up is complete.

Problem determination: If the system or partition does not progress past this code, contact your Linux provider.

CF000020 CF000020

Explanation: External interrupt controller server initialization.

Problem determination: If the system or partition does not progress past this code, contact your Linux provider.

CF000021 CF000021

Explanation: External interrupt controller server complete.

Problem determination: If the system or partition does not progress past this code, contact your Linux provider.

CF000100 CF000100

Explanation: Memory manager initialization.

Problem determination: If the system or partition does not progress past this code, contact your Linux provider.

(D1xx) Service processor firmware progress codes

A D1xx reference code indicates that an event or exception occurred in service processor firmware.

To resolve any D1xx reference code, determine if the SRC requires a service action or if it is for tracking purposes only.

Diagnostics analyze an event when it occurs to determine if the event requires service or if the event will only be recorded for tracking purposes and future reference. The determination is based on machine type, model, installed features, configuration, topology and activations at the time of the event.

If you do not find the SRC in a serviceable event view then it is a tracking event only and does not require service. Tracking events appear as **informational** or **Misc.** or **temp** in the IBM i product activity log and the Advanced System Manage Interface (ASMI).

D1XXC351 D1XXC351

Explanation: The CEC server firmware aborted.

Response: Determine if this is a tracking or serviceable event. If this is a tracking event, no service actions are required. Otherwise, use the FRU and procedure callouts detailed with the SRC to determine service actions.

D1XXCA01 D1XXCA01

Explanation: Informational message: Items that were deconfigured by the system were guarded out.

D1XXCA02 D1XXCA02

Explanation: Informational message: items that were deconfigured by the user via the ASMI menus were guarded out.

D1XXCA03 D1XXCA03

Explanation: Informational message: The guard data has been cleared.

D1XXCA04 D1XXCA04

Explanation: Informational message: There is a new version of the guard data.

D1XXCA05 D1XXCA05

Explanation: Informational message: The guard data was corrupted, and has been rebuilt.

D1XXCA06 D1XXCA06

Explanation: Informational message: There was an error when opening a file.

D1XXCA07 D1XXCA07

Explanation: Informational message: There was an error when reading a file.

D1XXCA08 D1XXCA08

Explanation: Informational message: There was an error when writing a file.

D1XXCA09 D1XXCA09

Explanation: Informational message: There was an error when closing a file.

D1XXCA0A D1XXCA0A

Explanation: Informational message: There was an link file error.

D1XXCA0B D1XXCA0B

Explanation: Informational message: Failure when setting the DIMM status in the hardware object manager.

D1XXCA0C D1XXCA0C

Explanation: Informational message: Failure when setting the status of a device other than a DIMM.

D1XXCA0D D1XXCA0D

Explanation: Informational message: Failure when reading the system type.

D1XXCA0E D1XXCA0E

Explanation: Informational message: Failure when reading a registry entry.

D1XXCA0F • D1XXCA16

D1XXCA0F D1XXCA0F

Explanation: Informational message: Failure when getting VPD data.

D1XXCA10 D1XXCA10

Explanation: Informational message: Items that had been guarded out were recovered.

D1XXCA11 D1XXCA11

Explanation: Informational message: The resource ID was not found in the list.

D1XXCA12 D1XXCA12

Explanation: Informational message: Manual configuration or deconfiguration is not allowed.

D1XXCA13 D1XXCA13

Explanation: Informational message: The buffer size is invalid.

D1XXCA14 D1XXCA14

Explanation: Informational message: Unable to return a valid guard state for the requested resource.

D1XXCA15 D1XXCA15

Explanation: Informational message: The guard action that was requested is not allowed.

D1XXCA16 D1XXCA16

Explanation: Informational message: Items that were deconfigured by the system (but are eligible for resource recovery) were guarded out.

(D1xx) Service processor status progress codes

D1xx status reference codes, posted by the service processor, offer information about the state of the service processor during a power-off operation.

D1XX900C D1XX900C

Explanation: Breakpoint set in CPU controls has been hit

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1XXB0FF D1XXB0FF

Explanation: Request to initiate power-off program has been sent

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1XXC000 D1XXC000

Explanation: Indicates a message is ready to send to the server firmware to power off

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1XXC001 D1XXC001

Explanation: Waiting for the server firmware to acknowledge the delayed power off notification

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1XXC002 D1XXC002

Explanation: Waiting for the server firmware to send the power off message

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1XXC003 D1XXC003

Explanation: Server firmware handshaking is complete

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

(D1xx) Service processor dump status progress codes

D1xx service processor dump status codes

Service processor dump status codes use the format of D1yy1xxx, where:

- yy indicates the type of data that is being dumped.
- xxx is a counter that increments each time the server stores 4K of data. When these codes occur during a service processor dump, they appear in the control panel display.

D1001XXX D1001XXX

Explanation: Dump error data

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1011XXX D1011XXX

Explanation: Dump sai_header Hardware Management Console (HMC) file

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D101C00F D101C00F

Explanation: No power off to allow debugging for CPU controls

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1021XXX D1021XXX

Explanation: Dump sai_header directory

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1031XXX D1031XXX

Explanation: Dump sai_header fips header

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1041XXX D1041XXX

Explanation: Dump sai_header entry header

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1051XXX D1051XXX

Explanation: Dump core file for failing component

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1061XXX D1061XXX

Explanation: Dump all NVRAM

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1071XXX D1071XXX

Explanation: Dump component trace for failing component

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1081XXX D1081XXX

Explanation: Dump component data from /opt/p0

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1091XXX D1091XXX

Explanation: Dump /opt/p1/*

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1111XXX D1111XXX

Explanation: Dump /opt/p0/*

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1121XXX D1121XXX

Explanation: Dump /opt/p1/*

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1131XXX D1131XXX

Explanation: Dump all traces

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1141XXX D1141XXX

Explanation: Dump code version

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1151XXX D1151XXX

Explanation: Dump all /opt/p3 except rtbl

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1161XXX D1161XXX

Explanation: Dump pddcustomize -r command

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1171XXX D1171XXX

Explanation: Dump registry -l command

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1181XXX D1181XXX

Explanation: Dump all /core/core.* files

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1191XXX D1191XXX

Explanation: Dump BDMP component trace (after dump if enough space)

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D11A1XXX D11A1XXX

Explanation: Dump any state information before dumping starts

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D11B1XXX D11B1XXX

Explanation: Dump /proc filesystem.

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D11C1XXX D11C1XXX

Explanation: Dump mounted filesystem statistics.

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D11D1XXX D11D1XXX

Explanation: Dump environment.

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1231XXX D1231XXX

Explanation: Dump update dump headers

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1241XXX D1241XXX

Explanation: Dump CRC1 calculation off

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1251XXX D1251XXX

Explanation: Dump CRC1 calculation on

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1261XXX D1261XXX

Explanation: Dump CRC2 calculation off

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1271XXX D1271XXX

Explanation: Dump CRC2 calculation on

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1281XXX D1281XXX

Explanation: Dump output the calculated CRC1 (sai_headers)

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1291XXX D1291XXX

Explanation: Dump output the calculated CRC2 (data and data headers)

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D12A1XXX D12A1XXX

Explanation: Jump to the position in dump directly after CRC1

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D12B1XXX D12B1XXX

Explanation: Initialize the headers dump time and serial numbers

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D12C1XXX D12C1XXX

Explanation: Display final SRC to panel

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D12D1XXX D12D1XXX

Explanation: Remove /core/core.app.time.pid

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D12E1XXX D12E1XXX

Explanation: Remove /core/core.*

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D12F1XXX D12F1XXX

Explanation: Display beginning SRC to panel

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1301XXX D1301XXX

Explanation: Turn off error log capture into dump

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1311XXX D1311XXX

Explanation: Turn on error log capture into dump

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1321XXX D1321XXX

Explanation: Store information about existing core files

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1381XXX D1381XXX

Explanation: Invalidate the dump

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1391XXX D1391XXX

Explanation: Check for valid dump sequence

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D13A1XXX D13A1XXX

Explanation: Get dump identity sequence

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D13B1XXX • D1FF1XXX

D13B1XXX D13B1XXX

Explanation: Get dump length sequence

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1FF1XXX D1FF1XXX

Explanation: Dump complete

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

(D1xx) Platform dump status progress codes

D1xx platform dump status codes

Platform dump status codes use the format of D1xx3yzz, where:

- xx is the cage or node ID that the dump component is processing. This varies depending on the node the hardware data is being collected from. It will be set to 0xFF when collecting the mainstore memory data.
- y increments from 0x0 to 0xF (to indicate that the system is not hung).
- zz is the command that is being processed (see the list below).

D1XX3Y01 D1XX3Y01

Explanation: Get SCOM.

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1XX3Y02 D1XX3Y02

Explanation: Get scan ring.

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1XX3Y03 D1XX3Y03

Explanation: Get array values.

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1XX3Y04 D1XX3Y04

Explanation: Stop the clocks.

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1XX3Y05 D1XX3Y05

Explanation: Flush the cache.

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1XX3Y06 D1XX3Y06

Explanation: Get CFAM.

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1XX3Y07 D1XX3Y07

Explanation: Put SCOM.

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1XX3Y08 D1XX3Y08

Explanation: Send command.

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1XX3Y09 D1XX3Y09

Explanation: Get optimized cache.

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1XX3Y0A D1XX3Y0A

Explanation: Get GP register.

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1XX3Y0B D1XX3Y0B

Explanation: Processor clean-up.

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1XX3Y0C D1XX3Y0C

Explanation: Get JTAG register.

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1XX3Y0D D1XX3Y0D

Explanation: Stop clocks without quiescing.

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1XX3YF0 D1XX3YF0

Explanation: Memory collection set-up.

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1XX3YF1 D1XX3YF1

Explanation: Memory collection DMA step.

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

D1XX3YF2 D1XX3YF2

Explanation: Memory collection cleanup.

Response: Perform isolation procedure FSPSPD1. To locate the isolation procedure go to the Isolation Procedures chapter in your host server Service Guide.

(D2xx) Partition status progress codes

D2xxxxxx progress codes are posted by the Virtual Service Processor (VSP) when powering down a partition.

D200A100 D200A100

Explanation: Received MSD SP attention

D200A110 D200A110

Explanation: Received CPM SP attention

D200A120 D200A120

Explanation: Received LL SP attention

D200A130 D200A130

Explanation: Received RPA end-of-life event

D200A200 D200A200

Explanation: Begin partition power down. SRC word 3 contains the reason for the power off.

Problem determination: SRC word 3 power down reasons

- 1: White button power down (also known as delayed power off)
- 2: Partition requested power down
- 3: Partition requested end of life
- 4: System wide shutdown
- 5: Attention link loader
- 6: Attention MSD
- 7: Panel function 3 requested
- 8: Panel function 8 requested
- 9: Panel function 22 requested
- A: Panel function 34 requested

D200B050 D200B050

Explanation: Begin transfer slot locks to VSP

D200B05F D200B05F

Explanation: End transfer slot locks to VSP

D200B060 D200B060

Explanation: Begin transfer VIO slot locks to VSP

D200B06F D200B06F

Explanation: End transfer VIO slot locks to VSP

D200B070 D200B070

Explanation: Begin reset slots

D200B077 D200B077

Explanation: Waiting for reset slots

D200B07F D200B07F

Explanation: End reset slots

D200B080 D200B080

Explanation: Begin reset VIO slots

D200B08F D200B08F

Explanation: End reset VIO slots

D200B090 D200B090

Explanation: Begin soft POR slots

D200B097 D200B097

Explanation: Waiting soft POR slots

D200B09F D200B09F

Explanation: End soft POR slots

D200B100 D200B100

Explanation: Sending Hypervisor reset

D200B1FF D200B1FF

Explanation: Hypervisor reset successfully sent

D200B200 D200B200

Explanation: Begin forced LP reset (after the 1 second timeout)

D200B210 D200B210

Explanation: Send CSP/FSP soft processor reset command (word 3 processor ID, word 4 thread ID)

D200B2FF • D200E1FF

D200B2FF **D200B2FF**

Explanation: End forced LP reset

D200B300 **D200B300**

Explanation: Closing Hypervisor events paths

D200B310 **D200B310**

Explanation: Deactivating panel functions

D200B3FF **D200B3FF**

Explanation: Hypervisor reset complete successfully

D200C100 **D200C100**

Explanation: Sending Hypervisor I/O reset

D200C1FF **D200C1FF**

Explanation: Hypervisor I/O reset sent successfully

D200C200 **D200C200**

Explanation: Deallocating events

D200C2FF **D200C2FF**

Explanation: Hypervisor I/O reset complete successfully

D200D100 **D200D100**

Explanation: Removing partition configuration resources

D200D1FF **D200D1FF**

Explanation: Partition resources removed successfully

D200E050 **D200E050**

Explanation: Begin power off slots

D200E057 **D200E057**

Explanation: Waiting power off slots

D200E05F **D200E05F**

Explanation: End power off slots

D200E060 **D200E060**

Explanation: Begin power off VIO slots

D200E06F **D200E06F**

Explanation: End power off VIO slots

D200E080 **D200E080**

Explanation: Begin release slot locks

D200E08F **D200E08F**

Explanation: End release slot locks

D200E090 **D200E090**

Explanation: Begin release VIO slot locks

D200E09F **D200E09F**

Explanation: End release VIO slot locks

D200E0A0 **D200E0A0**

Explanation: Begin unassociate of system ports

D200E0A8 **D200E0A8**

Explanation: Unassociate system ports from an RPA partition

D200E0AF **D200E0AF**

Explanation: End unassociate of system ports

D200E100 **D200E100**

Explanation: Power off SPCN racks

D200E110 **D200E110**

Explanation: Issuing a rack power off command

D200E120 **D200E120**

Explanation: Rack power off command complete successfully

D200E1FF **D200E1FF**

Explanation: SPCN racks powered off phase complete

(D6xx) General status progress codes

Learn about general status progress codes with a format of D6xxxxxx.

The following list contains general status progress codes with a format of D6xxxxxx in numeric order. The xx after D6 in each progress code represents two hexadecimal numbers that further define the progress code.

D6000298 D6000298

Explanation: Managed system power down started

D6000299 D6000299

Explanation: Managed system power down status

D6000483 D6000483

Explanation: Power failed; delay timer is running

D6000484 D6000484

Explanation: MI run in progress

D600430A D600430A

Explanation: Operating system service partition power down status: indicates that a server firmware code update is in progress for the P-side (permanent) of the managed system.

Problem determination: Your server may display this progress code for an extended period of time where the "xx" increments periodically. Allow the server to complete the processing. Do not interrupt this process.

D600430B D600430B

Explanation: Operating system service partition power down status indicates that a server firmware code update is in progress for the T-side (temporary) of the managed system.

Problem determination: Your server may display this progress code for an extended period of time where the "xx" increments periodically. Allow the server to complete the processing. Do not interrupt this process.

D60043BA D60043BA

Explanation: Operating system service partition power down status indicates that a server firmware code update is in progress to copy the server firmware from the T-side (temporary) of the managed system to the P-side (permanent).

Problem determination: Your server may display this progress code for an extended period of time. Allow

the server to complete the processing. Do not interrupt this process.

D6005500 D6005500

Explanation: Managed system power down status; attempting to delete information from the disk subsystem cache

D6005501 D6005501

Explanation: Managed system power down status; indicates that the information from the disk subsystem cache was deleted successfully

D6005502 D6005502

Explanation: Managed system power down status; indicates that the system failed to delete information from the disk subsystem cache

D6005503 D6005503

Explanation: Managed system power down status, which indicates the information from the disk subsystem cache was deleted with qualified success

D6xx0298 D6xx0298

Explanation: Managed system power down started

D6xx0299 D6xx0299

Explanation: Managed system power down status

D6xx0483 D6xx0483

Explanation: Power failed; delay timer is running

D6xx0484 D6xx0484

Explanation: MI run in progress

D6xx430A D6xx430A

Explanation: Operating system service partition power down status: indicates that a server firmware code

D6xx430B • D6xx5503

update is in progress for the P-side (permanent) of the managed system.

Problem determination: Your server may display this progress code for an extended period of time where the "xx" increments periodically. Allow the server to complete the processing. Do not interrupt this process.

D6xx430B D6xx430B

Explanation: Operating system service partition power down status indicates that a server firmware code update is in progress for the T-side (temporary) of the managed system.

Problem determination: Your server may display this progress code for an extended period of time where the "xx" increments periodically. Allow the server to complete the processing. Do not interrupt this process.

D6xx43BA D6xx43BA

Explanation: Operating system service partition power down status indicates that a server firmware code update is in progress to copy the server firmware from the T-side (temporary) of the managed system to the P-side (permanent).

Problem determination: Your server may display this progress code for an extended period of time. Allow the server to complete the processing. Do not interrupt this process.

D6xx5500 D6xx5500

Explanation: Managed system power down status; attempting to delete information from the disk subsystem cache

D6xx5501 D6xx5501

Explanation: Managed system power down status; indicates that the information from the disk subsystem cache was deleted successfully

D6xx5502 D6xx5502

Explanation: Managed system power down status; indicates that the system failed to delete information from the disk subsystem cache

D6xx5503 D6xx5503

Explanation: Managed system power down status, which indicates the information from the disk subsystem cache was deleted with qualified success

(D9xx) General status progress codes

The D9xx progress codes indicate the progress of powering-off a partition.

Not all progress codes below apply to all operating systems.

D9002740	D9002740
----------	----------

Explanation: Power off immediate

D9002750	D9002750
----------	----------

Explanation: All subsystems ended

D9002760	D9002760
----------	----------

Explanation: Device configuration shutdown

D9002770	D9002770
----------	----------

Explanation: QLUS job ending

D9002780	D9002780
----------	----------

Explanation: Close database cross-reference files

D9002790	D9002790
----------	----------

Explanation: QSYSARB job ending

D90027C0	D90027C0
----------	----------

Explanation: System jobs are ending

Notices

This information was developed for products and services offered in the U.S.A.

The manufacturer may not offer the products, services, or features discussed in this document in other countries. Consult the manufacturer's representative for information on the products and services currently available in your area. Any reference to the manufacturer's product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any intellectual property right of the manufacturer may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any product, program, or service.

The manufacturer may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not grant you any license to these patents. You can send license inquiries, in writing, to the manufacturer.

The following paragraph does not apply to the United Kingdom or any other country where such provisions are inconsistent with local law: THIS PUBLICATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. The manufacturer may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Any references in this information to websites not owned by the manufacturer are provided for convenience only and do not in any manner serve as an endorsement of those websites. The materials at those websites are not part of the materials for this product and use of those websites is at your own risk.

The manufacturer may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any performance data contained herein was determined in a controlled environment. Therefore, the results obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Information concerning products not produced by this manufacturer was obtained from the suppliers of those products, their published announcements or other publicly available sources. This manufacturer has not tested those products and cannot confirm the accuracy of performance, compatibility or any other claims related to products not produced by this manufacturer. Questions on the capabilities of products not produced by this manufacturer should be addressed to the suppliers of those products.

All statements regarding the manufacturer's future direction or intent are subject to change or withdrawal without notice, and represent goals and objectives only.

The manufacturer's prices shown are the manufacturer's suggested retail prices, are current and are subject to change without notice. Dealer prices may vary.

This information is for planning purposes only. The information herein is subject to change before the products described become available.

This information contains examples of data and reports used in daily business operations. To illustrate them as completely as possible, the examples include the names of individuals, companies, brands, and products. All of these names are fictitious and any similarity to the names and addresses used by an actual business enterprise is entirely coincidental.

If you are viewing this information in softcopy, the photographs and color illustrations may not appear.

The drawings and specifications contained herein shall not be reproduced in whole or in part without the written permission of the manufacturer.

The manufacturer has prepared this information for use with the specific machines indicated. The manufacturer makes no representations that it is suitable for any other purpose.

The manufacturer's computer systems contain mechanisms designed to reduce the possibility of undetected data corruption or loss. This risk, however, cannot be eliminated. Users who experience unplanned outages, system failures, power fluctuations or outages, or component failures must verify the accuracy of operations performed and data saved or transmitted by the system at or near the time of the outage or failure. In addition, users must establish procedures to ensure that there is independent data verification before relying on such data in sensitive or critical operations. Users should periodically check the manufacturer's support websites for updated information and fixes applicable to the system and related software.

Homologation statement

This product may not be certified in your country for connection by any means whatsoever to interfaces of public telecommunications networks. Further certification may be required by law prior to making any such connection. Contact an IBM representative or reseller for any questions.

Trademarks

IBM, the IBM logo, and ibm.com are trademarks or registered trademarks of International Business Machines Corp., registered in many jurisdictions worldwide. Other product and service names might be trademarks of IBM or other companies. A current list of IBM trademarks is available on the web at Copyright and trademark information at www.ibm.com/legal/copytrade.shtml.

INFINIBAND, InfiniBand Trade Association, and the INFINIBAND design marks are trademarks and/or service marks of the INFINIBAND Trade Association.

Linux is a registered trademark of Linus Torvalds in the United States, other countries, or both.

Java and all Java-based trademarks and logos are trademarks or registered trademarks of Oracle and/or its affiliates.

UNIX is a registered trademark of The Open Group in the United States and other countries.

Electronic emission notices

When attaching a monitor to the equipment, you must use the designated monitor cable and any interference suppression devices supplied with the monitor.

Class A Notices

The following Class A statements apply to the IBM servers that contain the POWER7[®] processor and its features unless designated as electromagnetic compatibility (EMC) Class B in the feature information.

Federal Communications Commission (FCC) statement

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. IBM is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Industry Canada Compliance Statement

This Class A digital apparatus complies with Canadian ICES-003.

Avis de conformité à la réglementation d'Industrie Canada

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

European Community Compliance Statement

This product is in conformity with the protection requirements of EU Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to electromagnetic compatibility. IBM cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-IBM option cards.

This product has been tested and found to comply with the limits for Class A Information Technology Equipment according to European Standard EN 55022. The limits for Class A equipment were derived for commercial and industrial environments to provide reasonable protection against interference with licensed communication equipment.

European Community contact:
IBM Deutschland GmbH
Technical Regulations, Department M372
IBM-Allee 1, 71139 Ehningen, Germany
Tele: +49 7032 15 2941
email: lugi@de.ibm.com

Warning: This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

VCCI Statement - Japan

この装置は、クラスA 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI-A

The following is a summary of the VCCI Japanese statement in the box above:

This is a Class A product based on the standard of the VCCI Council. If this equipment is used in a domestic environment, radio interference may occur, in which case, the user may be required to take corrective actions.

Japanese Electronics and Information Technology Industries Association (JEITA) Confirmed Harmonics Guideline (products less than or equal to 20 A per phase)

高調波ガイドライン適合品

Japanese Electronics and Information Technology Industries Association (JEITA) Confirmed Harmonics Guideline with Modifications (products greater than 20 A per phase)

高調波ガイドライン準用品

Electromagnetic Interference (EMI) Statement - People's Republic of China

声 明

此为 A 级产品,在生活环境中,
该产品可能会造成无线电干扰。
在这种情况下,可能需要用户对其
干扰采取切实可行的措施。

Declaration: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may need to perform practical action.

Electromagnetic Interference (EMI) Statement - Taiwan

警告使用者：
這是甲類的資訊產品，在
居住的環境中使用時，可
能會造成射頻干擾，在這
種情況下，使用者會被要
求採取某些適當的對策。

The following is a summary of the EMI Taiwan statement above.

Warning: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user will be required to take adequate measures.

IBM Taiwan Contact Information:

台灣IBM 產品服務聯絡方式：
台灣國際商業機器股份有限公司
台北市松仁路7號3樓
電話：0800-016-888

Electromagnetic Interference (EMI) Statement - Korea

이 기기는 업무용(A급)으로 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

Germany Compliance Statement

Deutschsprachiger EU Hinweis: Hinweis für Geräte der Klasse A EU-Richtlinie zur Elektromagnetischen Verträglichkeit

Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie 2004/108/EG zur Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der EN 55022 Klasse A ein.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der IBM empfohlene Kabel angeschlossen werden. IBM übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt ohne Zustimmung von IBM verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung von IBM gesteckt/eingebaut werden.

EN 55022 Klasse A Geräte müssen mit folgendem Warnhinweis versehen werden:
"Warnung: Dieses ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funk-Störungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen zu ergreifen und dafür aufzukommen."

Deutschland: Einhaltung des Gesetzes über die elektromagnetische Verträglichkeit von Geräten

Dieses Produkt entspricht dem "Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG)". Dies ist die Umsetzung der EU-Richtlinie 2004/108/EG in der Bundesrepublik Deutschland.

Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG) (bzw. der EMC EG Richtlinie 2004/108/EG) für Geräte der Klasse A

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen.

Verantwortlich für die Einhaltung der EMV Vorschriften ist der Hersteller:
International Business Machines Corp.
New Orchard Road
Armonk, New York 10504
Tel: 914-499-1900

Der verantwortliche Ansprechpartner des Herstellers in der EU ist:
IBM Deutschland GmbH
Technical Regulations, Abteilung M372
IBM-Allee 1, 71139 Ehningen, Germany
Tel: +49 7032 15 2941
email: lugi@de.ibm.com

Generelle Informationen:

Das Gerät erfüllt die Schutzanforderungen nach EN 55024 und EN 55022 Klasse A.

Electromagnetic Interference (EMI) Statement - Russia

ВНИМАНИЕ! Настоящее изделие относится к классу А.
В жилых помещениях оно может создавать
радиопомехи, для снижения которых необходимы
дополнительные меры

Class B Notices

The following Class B statements apply to features designated as electromagnetic compatibility (EMC) Class B in the feature installation information.

Federal Communications Commission (FCC) statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an IBM-authorized dealer or service representative for help.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Proper cables and connectors are available from IBM-authorized dealers. IBM is not responsible for any radio or television interference caused by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Industry Canada Compliance Statement

This Class B digital apparatus complies with Canadian ICES-003.

Avis de conformité à la réglementation d'Industrie Canada

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

European Community Compliance Statement

This product is in conformity with the protection requirements of EU Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to electromagnetic compatibility. IBM cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-IBM option cards.

This product has been tested and found to comply with the limits for Class B Information Technology Equipment according to European Standard EN 55022. The limits for Class B equipment were derived for typical residential environments to provide reasonable protection against interference with licensed communication equipment.

European Community contact:
IBM Deutschland GmbH
Technical Regulations, Department M372
IBM-Allee 1, 71139 Ehningen, Germany
Tele: +49 7032 15 2941
email: lugi@de.ibm.com

VCCI Statement - Japan

この装置は、クラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

VCCI-B

Japanese Electronics and Information Technology Industries Association (JEITA) Confirmed Harmonics Guideline (products less than or equal to 20 A per phase)

高調波ガイドライン適合品

Japanese Electronics and Information Technology Industries Association (JEITA) Confirmed Harmonics Guideline with Modifications (products greater than 20 A per phase)

高調波ガイドライン準用品

IBM Taiwan Contact Information

台灣IBM 產品服務聯絡方式：
台灣國際商業機器股份有限公司
台北市松仁路7號3樓
電話：0800-016-888

Electromagnetic Interference (EMI) Statement - Korea

이 기기는 가정용(B급)으로 전자파적합기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

Germany Compliance Statement

Deutschsprachiger EU Hinweis: Hinweis für Geräte der Klasse B EU-Richtlinie zur Elektromagnetischen Verträglichkeit

Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie 2004/108/EG zur Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der EN 55022 Klasse B ein.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der IBM empfohlene Kabel angeschlossen werden. IBM übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt ohne Zustimmung von IBM verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung von IBM gesteckt/eingebaut werden.

Deutschland: Einhaltung des Gesetzes über die elektromagnetische Verträglichkeit von Geräten

Dieses Produkt entspricht dem "Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG)". Dies ist die Umsetzung der EU-Richtlinie 2004/108/EG in der Bundesrepublik Deutschland.

Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG) (bzw. der EMC EG Richtlinie 2004/108/EG) für Geräte der Klasse B

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen.

Verantwortlich für die Einhaltung der EMV Vorschriften ist der Hersteller:
International Business Machines Corp.
New Orchard Road
Armonk, New York 10504
Tel: 914-499-1900

Der verantwortliche Ansprechpartner des Herstellers in der EU ist:
IBM Deutschland GmbH
Technical Regulations, Abteilung M372
IBM-Allee 1, 71139 Ehningen, Germany
Tel: +49 7032 15 2941
email: lugi@de.ibm.com

Generelle Informationen:

Das Gerät erfüllt die Schutzanforderungen nach EN 55024 und EN 55022 Klasse B.

Terms and conditions

Permissions for the use of these publications are granted subject to the following terms and conditions.

Applicability: These terms and conditions are in addition to any terms of use for the IBM website.

Personal Use: You may reproduce these publications for your personal, noncommercial use provided that all proprietary notices are preserved. You may not distribute, display or make derivative works of these publications, or any portion thereof, without the express consent of IBM.

Commercial Use: You may reproduce, distribute and display these publications solely within your enterprise provided that all proprietary notices are preserved. You may not make derivative works of these publications, or reproduce, distribute or display these publications or any portion thereof outside your enterprise, without the express consent of IBM.

Rights: Except as expressly granted in this permission, no other permissions, licenses or rights are granted, either express or implied, to the Publications or any information, data, software or other intellectual property contained therein.

IBM reserves the right to withdraw the permissions granted herein whenever, in its discretion, the use of the publications is detrimental to its interest or, as determined by IBM, the above instructions are not being properly followed.

You may not download, export or re-export this information except in full compliance with all applicable laws and regulations, including all United States export laws and regulations.

IBM MAKES NO GUARANTEE ABOUT THE CONTENT OF THESE PUBLICATIONS. THE PUBLICATIONS ARE PROVIDED "AS-IS" AND WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, AND FITNESS FOR A PARTICULAR PURPOSE.



Printed in USA