

# PX2IO – Input / Output and Servo Module

## QUICK START – HARDWARE VERSION 0.2 DEV

### Description

PX2IO is an input/output board providing servo and receiver inputs/outputs. It also provides four solid-state relays and a wide range of additional I/O connectors. The 30-pin expansion bus allows to combine it with other modules to provide additional I/O.

<http://github.com/qgc/hardware>

### Features

- 24 Mhz Cortex-M3 I/O multiplexer
- 6-18V wide supply in, 5V / 2.25 A and 3.3 V / 1 A supply out
- 8x high-speed servo outputs (up to 400 Hz), max. 1 A combined
- PPM sum signal input
- Spektrum receiver input
- S-BUS compatible receiver input
- 2x 0-40 V, 1 A solid-state relay (MOSFET)
- 2x 5 V, 0.5 A solid-state switched 5 V supply (current-limiting)
- PX2 Expansion bus (PX2FMU: Flight Management Unit)
- 50x35x14 mm (1.38x1.97x0.55"), 20g, 30x30 mm mounting

### Connectors, Jumpers and Dimensions


Safety switch connector

Status Leds  
Green: Power on  
Blue: Activity  
Amber: Error

RC Receiver  
PPM sum input or  
S-Bus input

High-speed  
Servo  
Outputs

6-18 V, 2.25 A  
Power in

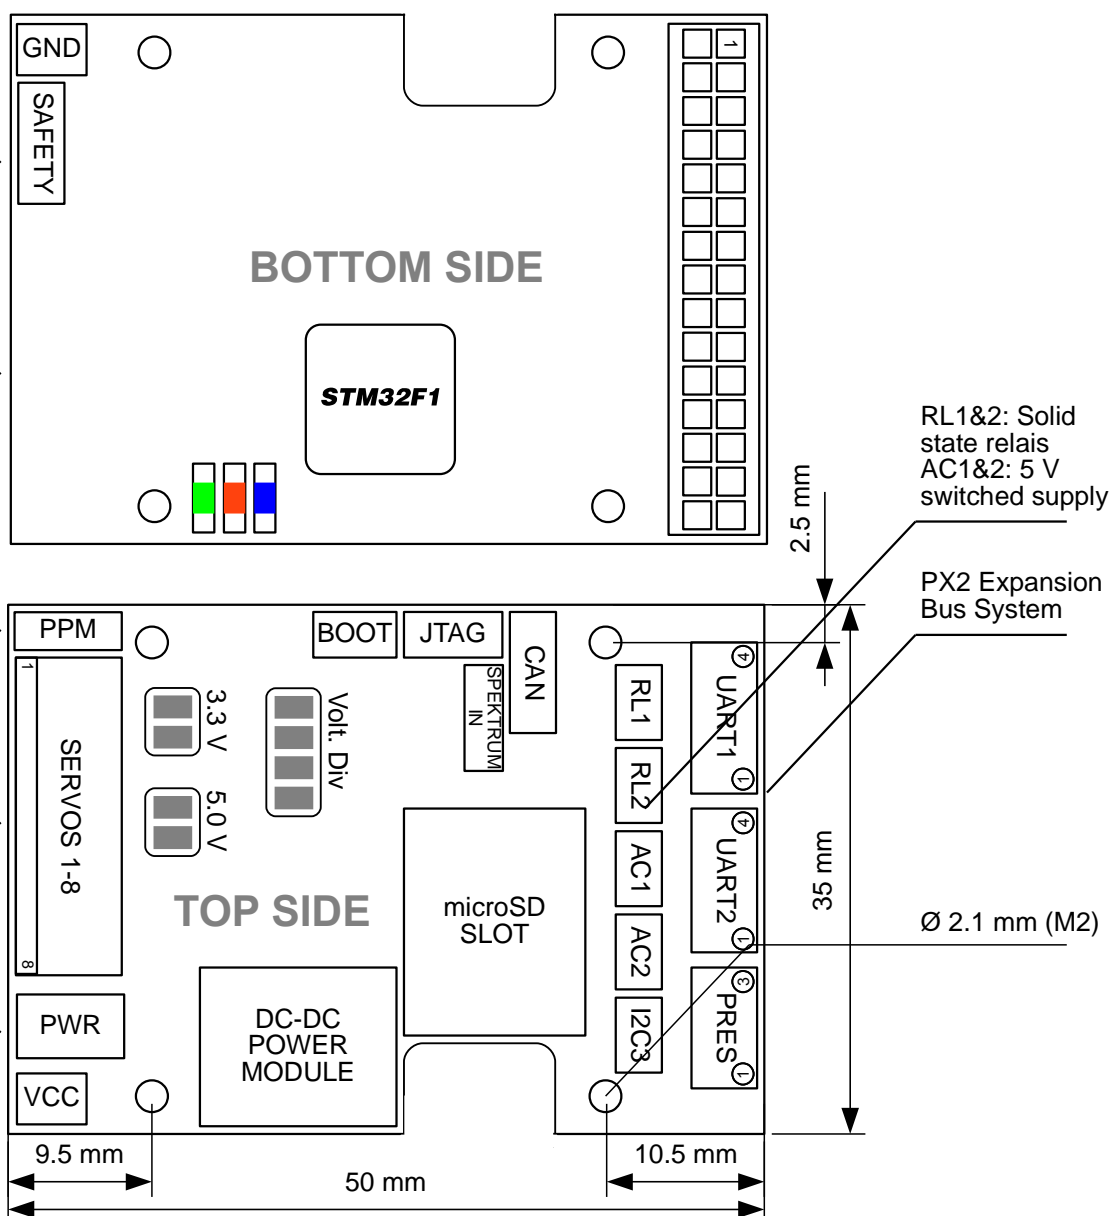


## Pinout and absolute maximum Ratings





- Input: 6-18 V, max current: 2.5 A
- Accessory outputs: 5 V, 0.5 A current limited each
- Peripherals output: 3.3 V, 0.5 A current limited
- Servo Output: 5V, 1.0 A current limited
- Do NOT connect a 6 V servo system without REMOVING diode D1 before

VDD_5V	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
GND	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	
CAN2_RX	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	
USART1_RX_EXT	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	
I2C3_SDA	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	
SPI3_MOSI	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	
SPI3_NSS	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	
UART5_RX	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	
I2C2_SDA	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	
USART2_RTS	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	
USART2_RX	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	
GPIO_EXT1	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	
PC8	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	
ADC123_IN11	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	
ADC123_IN13	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	






Mates 2 mm header: 3M "9532230-2000-AR-PR"

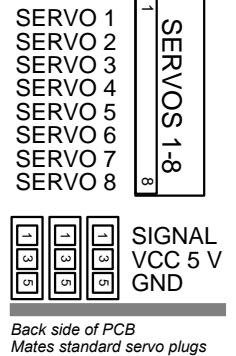


All connectors are oriented the same way as shown in the overview picture. Check the pin 1 markings in the overview if unsure.




Mates 2 pos JST PA housings  
Part # PAP-02V-S(P)  
Crimp terminals  
Part# SPHD-001T-P0.5 (for AWG 22-26 wire)



Mates 4 pos JST ZH housings  
Part # ZHR-4  
Crimp terminals  
Part # SZH-002T-P0.5 (for AWG 28-26 wire)




Mates 3 pos Molex PicoBlade housings  
Part # 51021-0300  
Crimp terminals  
Part # 50058-8000 (for AWG 28 wire)  
Crimp tool  
Part # 0638190400




Mates 2 pos Molex PicoBlade housings  
Part # 51021-0200  
Crimp terminals  
Part # 50058-8000 (for AWG 28 wire)  
Crimp tool  
Part # 0638190400


Mates 4 pos Molex PicoBlade housings  
Part # 51021-0400  
Crimp terminals  
Part # 50058-8000 (for AWG 28 wire)  
Crimp tool  
Part # 0638190400



Mates Spektrum RC receiver cables:  
JST  
Part #  
Crimp terminals  
Part # (for AWG xx wire)



Mates 3-pos servo cable. Solder cables into the holes and connect RC receiver with it.  
Fits 0.1" header (both straight and right-angle)

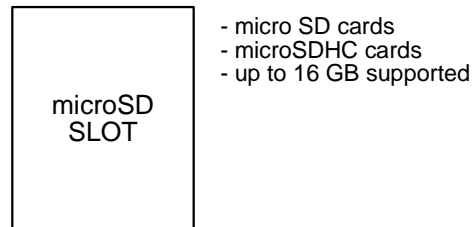

## Upgrading Firmware / Developing Custom Code

PX2IO is designed as failsafe board with a stable codebase. It's code is automatically updated by a connected PX2FMU board if necessary. Building custom firmware is only recommended for very advanced users. To develop custom code, follow the PX2FMU toolchain guide at: [http://www.example.com/developers\\_guide](http://www.example.com/developers_guide)

## Contact, Copyleft and further Information

PX2FMU is an open hardware design, following the XXX open hardware license. You can do XXX with it. PX2FMU was created by XXX. The XXX project contributed XXX.

THIS IS THEN A DISCLAIMER IN CAPS LOCK  
THIS IS THEN A DISCLAIMER IN CAPS LOCK  
THIS IS THEN A DISCLAIMER IN CAPS LOCK  
THIS IS THEN A DISCLAIMER IN CAPS LOCK  
THIS IS THEN A DISCLAIMER IN CAPS LOCK

Further information is available here:

- PX2FMU website
- Appropriate mailing list 1
- Appropriate community 1