

**Check and replace, If cable W576 found defective.**

**Does this solve the problem?**


- 1] Yes
- 2] No
- 3] I don't know

- **Explanation**


During normal yawing with no pressure, the system pressure must be zero, in case if it exceeds above 5 bars this warning will occur.

**IN THE NACELLE:**


Check for loose connection in respective circuit line. (Relay output 813)

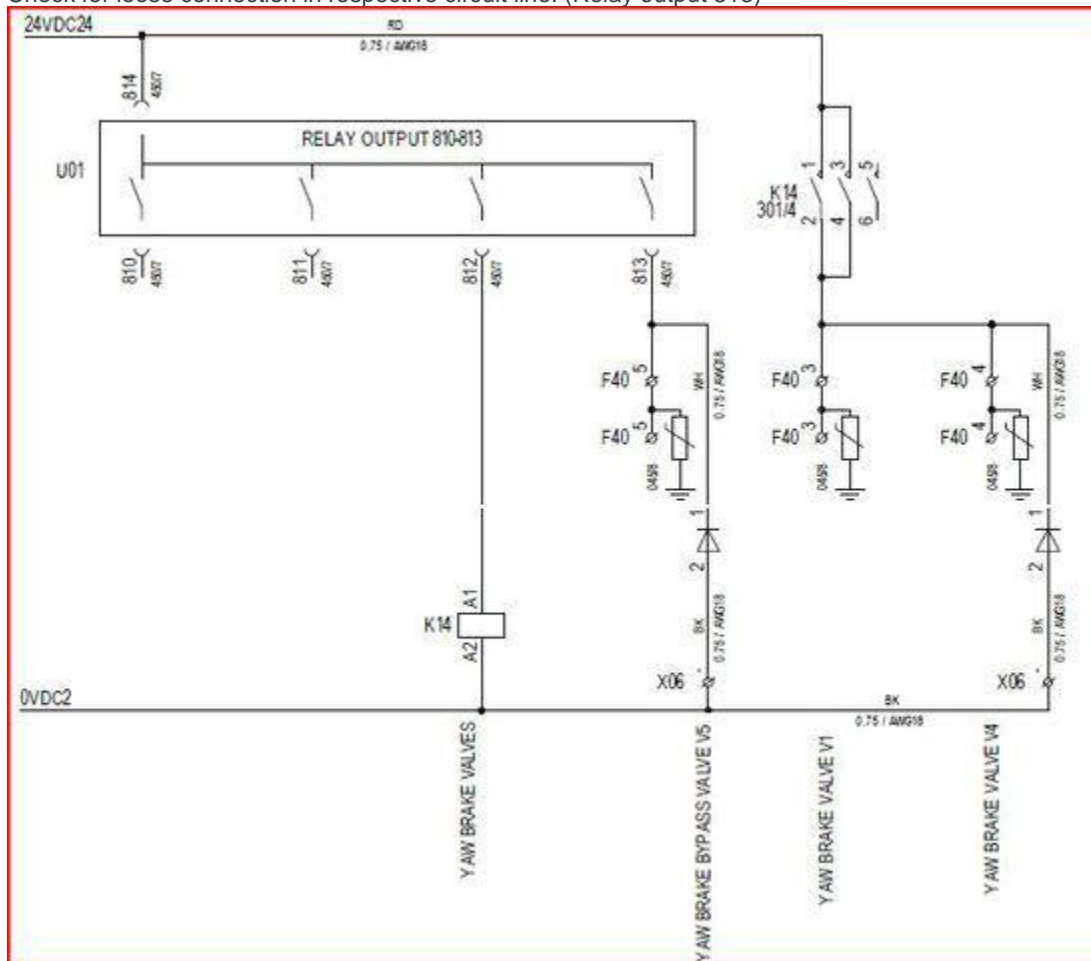

- Ensure the plug is fastened correctly and the cable is properly connected.

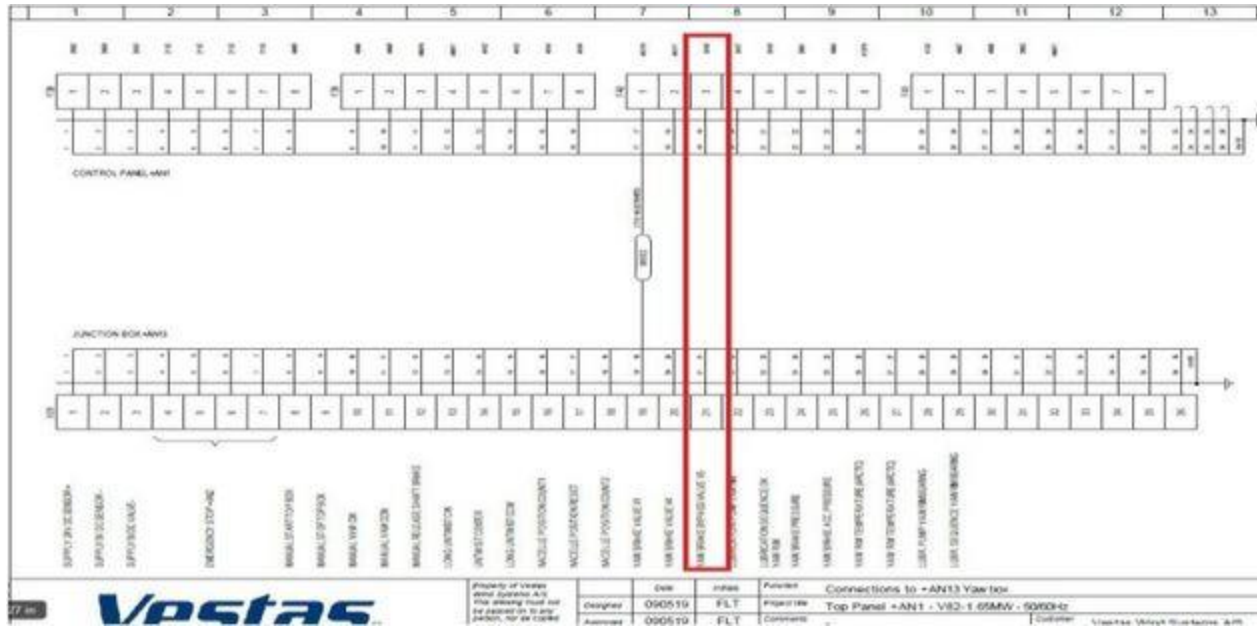

- Check for loose connection in cable (W576) and Check the continuity. If no continuity replace with new.

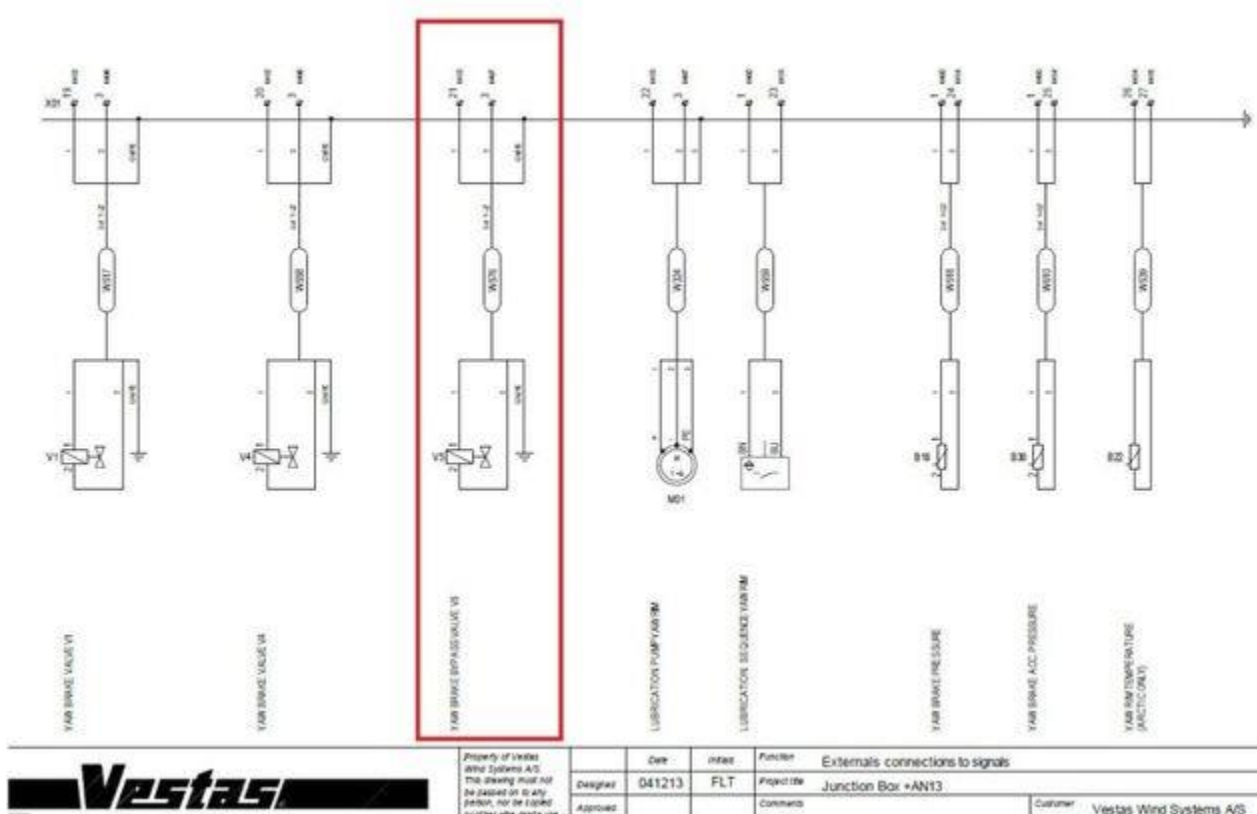

Relevant spare parts	
Description	Item No.
CABLE -W576 NM30T MODUL 3G1	<a href="#">60103204</a>

Relevant documentation	
Description	DMS No.
Electrical diagrams	<a href="#">0000-1638</a>
Top Panel +AN1	<a href="#">0003-2029</a>

### Check and Replace the defective valve or coil.

#### Does this solve the problem?

- 1] Yes
- 2] No
- 3] I don't know


- **Explanation**  
**IN THE NACELLE - PARKER SYSTEM:**  

Check the solenoid valve & coil (POS 0.14) and troubleshoot solenoid valve function. If found defect, replace it.

Parker Yaw Hydraulics system diagram;



Parker system with no (zero) pressure:

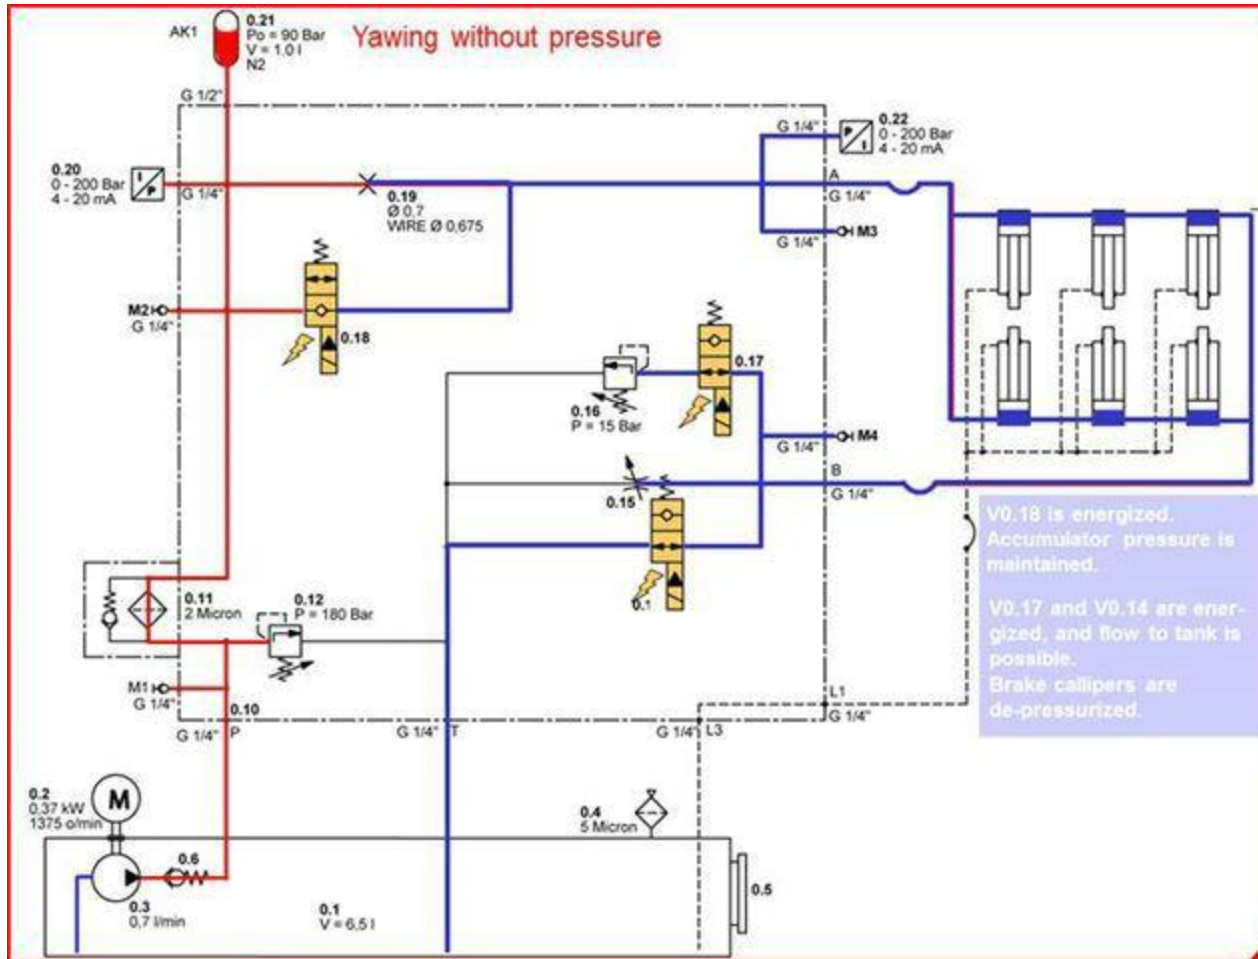

Parker system with drag pressure:

