

# Rockchip Debian Developer Guide

---

ID: RK-KF-YF-913

Release Version: V1.8.0

Release Date: 2024-09-20

Security Level: ☐Top-Secret ☐Secret ☐Internal ☒Public

## DISCLAIMER

THIS DOCUMENT IS PROVIDED “AS IS”. ROCKCHIP ELECTRONICS CO., LTD.(“ROCKCHIP”)DOES NOT PROVIDE ANY WARRANTY OF ANY KIND, EXPRESSED, IMPLIED OR OTHERWISE, WITH RESPECT TO THE ACCURACY, RELIABILITY, COMPLETENESS, MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY REPRESENTATION, INFORMATION AND CONTENT IN THIS DOCUMENT. THIS DOCUMENT IS FOR REFERENCE ONLY. THIS DOCUMENT MAY BE UPDATED OR CHANGED WITHOUT ANY NOTICE AT ANY TIME DUE TO THE UPGRADES OF THE PRODUCT OR ANY OTHER REASONS.

## Trademark Statement

"Rockchip", "瑞芯微", "瑞芯" shall be Rockchip's registered trademarks and owned by Rockchip. All the other trademarks or registered trademarks mentioned in this document shall be owned by their respective owners.

**All rights reserved. ©2024. Rockchip Electronics Co., Ltd.**

Beyond the scope of fair use, neither any entity nor individual shall extract, copy, or distribute this document in any form in whole or in part without the written approval of Rockchip.

Rockchip Electronics Co., Ltd.

No.18 Building, A District, No.89, software Boulevard Fuzhou, Fujian, PRC

Website: [www.rock-chips.com](http://www.rock-chips.com)

Customer service Tel: +86-4007-700-590

Customer service Fax: +86-591-83951833

Customer service e-Mail: [fae@rock-chips.com](mailto:fae@rock-chips.com)

## Preface

## Overview

This document introduces how to use the official Debian distribution to build and adapt to the development of hardware features based on the Rockchip arm platform.

## Chip Support Status

Debian Version	Applicable Platform	Verified Chips
12	ARM	RK3588、RK3576、RK3568、RK3566、RK3562
11	ARM	RK3588、RK3568、RK3566、RK3562、RK3399、RK3288
10	ARM	RK3399PRO、PX30、RK3326、RK3288、RK3328、RK3126C

## Target Audience

This document (this guide) is primarily intended for the following engineers:

Technical Support Engineers

Software Development Engineers

## Revision History

Date	Version	Author	Modification Description
2021-12-30	V1.0.0	Caesar Wang	Initial version
2022-03-10	V1.0.1	Ruby Zhang	Document format update
2022-04-12	V1.1.0	Caesar Wang	Update live-build and FAQ and other related content
2022-05-20	V1.2.0	Caesar Wang	Update Debian11
2022-09-20	V1.3.0	Caesar Wang	Linux5.10 support
2022-11-20	V1.4.0	Caesar Wang	Update mpp/chromium Update boot animation support Update partition management instructions Update FAQ
2023-04-20	V1.5.0	Caesar Wang	Add blueman/rktoolkit repository Update camera/NPU/upgrade and other solution introductions Delete some TODO lists
2023-05-20	V1.5.1	Caesar Wang	Add Cheese instructions Add power management instructions
2023-09-20	V1.6.0	Caesar Wang	Update Cheese instructions Add Debian12 support Debian security and Roadmap update
2023-12-20	V1.7.0	Caesar Wang	Update Cheese, rk-iq related instructions Add Debian FAQ section Optimize some sections of Debian
2024-09-20	V1.8.0	Caesar Wang	Update the latest SDK features Add Debian related packages and patches Optimize some sections of Debian

## Table of Contents

### Rockchip Debian Developer Guide

1. Introduction to Debian
  - 1.1 What is Debian
  - 1.2 Supported Debian Versions
2. Quick Start with Debian
  - 2.1 Environment Setup
  - 2.2 Obtaining the Source Code
  - 2.3 Compilation
3. Debian Directory Structure
4. Debian live-build Usage Guide
  - 4.1 Related Commands
  - 4.2 Software Source Configuration
  - 4.3 Customizing System Packages
    - 4.3.1 Custom Directory
    - 4.3.2 HOOKS
5. Introduction to Debian Precompiled Packages
  - 5.1 Blueman
  - 5.2 Media Process Platform (MPP)
  - 5.3 libv4l
  - 5.4 Chromium
  - 5.5 glmark2
  - 5.6 gst-rkmp
  - 5.7 GStreamer
  - 5.8 gst-plugins-base1.0
  - 5.9 gst-plugins-bad1.0
  - 5.10 gst-plugins-good1.0
  - 5.11 libdrm
  - 5.12 libdrm-cursor
  - 5.13 libmali
  - 5.14 RGA
  - 5.15 Openbox
  - 5.16 pcmanfm
  - 5.17 Pipewire
  - 5.18 wireplumber
  - 5.19 Rockchip Automatic Image Quality
  - 5.20 rkisp
  - 5.21 rknpu2
  - 5.22 rkwifi
  - 5.23 rktoolkit
  - 5.24 X Server
  - 5.25 Weston
  - 5.26 Wayland
6. Basic Skills for Debian Development
  - 6.1 Restructuring Debian Packages
  - 6.2 Debian Docker Construction
  - 6.3 Debian Partition Management
  - 6.4 Debian Graphical Adaptation Solutions
    - 6.4.1 Display Architecture Adaptation Plan
    - 6.4.2 Window Management Adaptation Solutions
    - 6.4.3 Desktop Environment Adaptation Plan
    - 6.4.4 Chromium Adaptation Solution
      - 6.4.4.1 Version
      - 6.4.4.2 How to Test
      - 6.4.4.3 How to Debug
      - 6.4.4.4 Performance Testing

- 6.4.4.5 Additional Information Acquisition
  - 6.4.5 Debian Panfrost Adaptation Scheme
- 6.5 Debian Audio-Video Adaptation Solution
  - 6.5.1 Audio Pulseaudio Path Adaptation
  - 6.5.2 MPP and VPU Adaptation
  - 6.5.3 GStreamer Adaptation
  - 6.5.4 Rokit Adaptation
- 6.6 Debian Network Adaptation Solution
  - 6.6.1 RKWIFI BT Adaptation
- 6.7 Debian Webcam Adaptation Solution
  - 6.7.1 Cheese Adaptation
    - 6.7.1.1 Cheese Unable to Acquire Valid Device Node
    - 6.7.1.2 Frame Loss Issue with High-Resolution Camera in Cheese
    - 6.7.1.3 Format Exceptions in Cheese Acquisition
    - 6.7.1.4 Cheese Recording Freeze Issue
    - 6.7.1.5 Using mpp for Cheese Video Recording Encoding
    - 6.7.1.6 How to Change the Storage Path for Cheese Images and Videos
  - 6.7.2 RKISP Adaptation
  - 6.7.3 RKAIQ Adaptation
    - 6.7.3.1 RKAIQ Debugging
- 6.8 Debian Power Management Adaptation Solution
  - 6.8.1 Power Management Adaptation
  - 6.8.2 Power Management Configuration
- 6.9 Debian AI Adaptation Plan
  - 6.9.1 RKNPU Adaptation
  - 6.9.2 RKNN Testing
- 6.10 Debian Firmware Upgrade Solution
- 6.11 Debian Secure Boot Solution
  - 6.11.1 Secure Boot
- 6.12 Debian Touch Adaptation Solution
- 6.13 Debian USB Device Adaptation Solution
- 6.14 Debian Sensor Adaptation Solution
- 6.15 Debian System Information
  - 6.15.1 Specific Debian Version Number
  - 6.15.2 Debian Version Information
  - 6.15.3 Hardware Information of Debian System
  - 6.15.4 Debian System Log Information
- 6.16 Debian Trimming
- 6.17 Debian Testing
- 6.18 Debugging Tools for Debian
  - 6.18.1 ADB Tools
    - 6.18.1.1 Overview of ADB
    - 6.18.1.2 USB ADB Usage Instructions
  - 6.18.2 Analyzing Boot Performance with systemd-analyze
  - 6.18.3 Performance Tuning Tool
- 7. Debian Security Updates
- 8. Debian Roadmap
- 9. Debian FAQ
  - 9.1 Encountering "noexec or nodev" Issues
  - 9.2 Issues with Downloading "Base Debian"
  - 9.3 Debian11 Base Package Compilation Failure
  - 9.4 Method for Extracting, Modifying, and Re-packaging Debian deb Packages
  - 9.5 How to Add a Swap Partition in Debian
  - 9.6 First System Update on Debian May Trigger Display Service Restart
  - 9.7 Issues with libGL-related dri.so Invocation in Debian
  - 9.8 How to Confirm Hardware Mouse Layer is Active in Debian
  - 9.9 Log Size Issues in Debian
  - 9.10 Issues with Multi-User Target Setup in Debian

9.11	Installing GCC Toolchain on Debian
9.12	Debian Installation of Packages without Auto-Completion
9.13	Supporting DRI3 Extension in Debian X11 System
9.14	How to Set Up the System to Boot into Command Line Mode
9.15	How to Configure Screen Rotation
9.16	Implementing Non-Black Screen Feature in Debian
9.17	How to Remove Desktop Mouse Pointer Display on Debian System
9.18	Steps for Compiling and Porting rkaiq/rkisp Repository in Debian
9.18.1	Overview of Steps
9.19	How to Download Offline Deb Packages in Debian
9.20	How to Check the Version of glibc in Debian
9.21	Debian System Support for Screen Splitting
9.22	Debian XFCE4 Desktop Lock Screen Feature Ineffective
9.23	Compiling Debian Issues for Ubuntu 24.04 on PC
10.	Debian Third-Party Open Source Software and License Information
11.	Debian Reference Materials

# 1. Introduction to Debian

---

## 1.1 What is Debian

Debian is a completely free and open-source Linux operating system widely used on various devices. The reasons for choosing Debian are as follows:

- Debian is free software

Debian is composed of free and open-source software and will always remain 100% free. Everyone is free to use, modify, and distribute it. You can build a Debian system based on Rockchip for secondary development.

- Debian is a stable and secure Linux-based operating system.

Debian is an operating system widely used on various devices, including laptops, desktops, and servers. Since 1993, its stability and reliability have been well-received by users. We provide reasonable default configurations for each software package. Debian developers strive to provide security updates for all packages throughout their lifecycle.

- Debian has extensive hardware support.

Most hardware is supported by the Linux kernel. When free software does not provide sufficient support, proprietary hardware drivers can also be used. Currently, chips such as Rockchip RK3588/RK3576/RK356X/RK3399/RK3288 have been adapted and supported.

- Debian provides smooth updates.

Debian is known for its easy and smooth updates during its release cycle, including easy upgrades to the next major version. Rockchip has already upgraded from Debian Stretch (9) to Debian Buster (10), Bullseye (11), and Bookworm (12).

- Debian is the seed and foundation for many other distributions.

Many popular Linux distributions, such as Ubuntu, Knoppix, PureOS, SteamOS, and Tails, have chosen Debian as their software base. Debian provides all the tools so that everyone can extend the software packages in the Debian archive with packages that meet their own needs.

- The Debian project is a community.

Debian is not just a Linux operating system. The software is produced by hundreds of volunteers from around the world. Even if you are not a programmer or system administrator, you can become a member of the Debian community.

## 1.2 Supported Debian Versions

Version	Supported Architectures	(Estimated) End of Life	Current Status
Debian 9 “Stretch”	armhf and arm64	2022-06	Maintenance Ended
Debian 10 “Buster”	armhf and arm64	2024-06	Under Maintenance
Debian 11 “Bullseye”	armhf and arm64	2026-06	Under Maintenance
Debian 12 “Bookworm”	armhf and arm64	2028-06	In Development

More information on [Debian Long Term Support](#) versions is available on the official website.

## 2. Quick Start with Debian

### 2.1 Environment Setup

We recommend using the Ubuntu 22.04 system for compilation. Other Linux versions may require corresponding adjustments to the software packages. In addition to system requirements, there are also other hardware and software requirements.

Hardware requirements: 64-bit system, disk space greater than 40G. If you are building multiple projects, you will need more disk space.

Software requirements: Ubuntu 22.04 system.

The installation commands for the software packages that the compilation SDK environment setup depends on are as follows:

```
sudo apt-get update && sudo apt-get install git ssh make gcc libssl-dev liblz4-tool expect expect-dev g++ patchelf chrpath gawk texinfo chrpath diffstat binfmt-support qemu-user-static live-build bison flex fakeroot cmake gcc-multilib g++-multilib unzip device-tree-compiler ncurses-dev libgucharmap-2-90-dev bzip2 expat gpgv2 cpp-aarch64-linux-gnu libgmp-dev libmpc-dev bc python-is-python3 python2
```

It is recommended to use the Ubuntu22.04 system or a higher version for development. If you encounter errors during compilation, you can install the corresponding software packages based on the error messages.

## 2.2 Obtaining the Source Code

Obtain the source code from the SDK published by Rockchip's code server, located in the project directory

```
<SDK>/debian.
```

## 2.3 Compilation

- Installation packages required for Debian compilation

```
sudo dpkg -i debian/ubuntu-build-service/packages/*
sudo apt-get install -f

Note: The live-build_*.deb is sourced from
https://mirrors.ustc.edu.cn/debian/pool/main/l/live-build/
The debootstrap_*.deb is sourced from
https://mirrors.ustc.edu.cn/debian/pool/main/d/debootstrap/

Alternatively, you can install the dependency environment by:
sudo apt-get remove live-build
git clone https://salsa.debian.org/live-team/live-build.git --depth 1 -b
debian/1%20230131
cd live-build
rm -rf manpages/po/
sudo make install -j8
```

- Debian Compilation

Navigate to the SDK project and compile directly

```
./build.sh debian
```

Or enter the Debian/ directory:

```
cd debian/
```

Refer to the current directory readme.md.

## 3. Debian Directory Structure

---



```
debian
├─ mk-base-debian.sh ##Retrieve Debian base packages and compile
├─ mk-image.sh ##Package to generate ext4 firmware
├─ mk-rootfs-<debian-version>.sh ##Adapt for Rockchip hardware acceleration
packages
├─ mk-rootfs.sh ##Point to specific Rootfs version, currently Bullseye and
Bookworm versions are available.
├─ overlay ##Common configuration files for Rockchip platform adaptation
├─ overlay-debug ##System frequently used debugging tools
├─ overlay-firmware ##Storage for some device firmware, such as npu/dp, etc.
├─ packages ##Contains precompiled packages for armhf/arm64 system adaptation
with hardware acceleration
├─ packages-patches ##Precompiled packages with patches based on official
versions
├─ readme.md ##Documentation guide
└─ ubuntu-build-service ##Obtain Debian distribution from official sources, can
depend on packages and customize installation of related packages.
```

The entire directory structure is achieved through shell scripts to obtain, build, compile, and install the operating system adapted with Rockchip hardware acceleration packages for the Linux Debian distribution.

## 4. Debian live-build Usage Guide

---

[live build](#) is a suite of scripts for building live system images. The idea behind live build is a toolkit that uses a configuration directory to fully automate and customize all aspects of building live images.

For more usage instructions, refer to the official website [Live manual](#).

Debian package source repository (VCS: [Git](#))

[live-build-git](#)

Debian package source repository (browsable online)

[live-build](#)

### 4.1 Related Commands

- lb config

Create `auto` and `config` directories along with related configuration files in the current directory, and run the `auto/config` script.

- lb clean

Run the `auto/clean` script.

- lb build

Build the system image according to various configuration scripts in the `config` directory.

## 4.2 Software Source Configuration

- Method One

```
lb config --mirror-bootstrap http://mirrors.ustc.edu.cn/debian --mirror-chroot-security http://mirrors.ustc.edu.cn/debian-security/ --mirror-chroot-backports http://mirrors.ustc.edu.cn/debian-backports/
```

chroot mirror: --mirror-chroot, by default, it uses the value of --mirror-bootstrap or creates a config/archives/your-repository.list.chroot file with the source address. The source will be added to the live system's /etc/apt/sources.list.d/ directory.

- Method Two

```
lb config --mirror-binary http://mirrors.ustc.edu.cn/debian --mirror-binary-security http://mirrors.ustc.edu.cn/debian-security/
```

Alternatively, create a config/archives/your-repository.list.binary file with the source address.

## 4.3 Customizing System Packages

- Method One

Place the required package list in the customization/package-lists directory and name it XXX.list.chroot or XXX.list.binary.

- Method Two

Use the --package-lists "XXX" option to specify the package list under /usr/share/live/build/package-lists/.

After executing lb config, it will generate four configuration files under the config directory based on the parameters in this script: binary, bootstrap, chroot, and common. lb build reads these four configuration files, so you can also make specific modifications to the parameters within these four files after lb config.

In auto/config, there are configuration parameters, for example:

```

set -e

echo "I: create configuration"
export LB_BOOTSTRAP_INCLUDE="apt-transport-https gnupg"
lb config --mirror-bootstrap "http://mirrors.ustc.edu.cn/debian" --mirror-chroot "http://mirrors.ustc.edu.cn/debian" --mirror-chroot-security "http://mirrors.ustc.edu.cn/debian-security" --mirror-binary "http://mirrors.ustc.edu.cn/debian" --mirror-binary-security "http://mirrors.ustc.edu.cn/debian-security" --apt-indices false --apt-recommends false --apt-secure false --architectures arm64 --archive-areas 'main contrib non-free' --backports false --binary-filesystem ext4 --binary-images tar --bootappend-live "hostname=linaro-alip username=linaro" --bootloader "syslinux" --bootstrap-qemu-arch arm64 --bootstrap-qemu-static /usr/bin/qemu-aarch64-static --cache false --chroot-filesystem none --compression gzip --debootstrap-options "--variant=minbase --include=apt-transport-https,gnupg" --distribution bullseye --gzip-options '-9 --rsyncable' --iso-publisher 'Linaro; http://www.linaro.org/; linaro-dev@lists.linaro.org' --iso-volume 'Linaro Bullseye $(date +%Y%m%d-%H:%M)' --linux-flavours none --linux-packages none --mode debian --security true --system normal --updates true

```

### 4.3.1 Custom Directory

Custom directories and their files should be placed under the corresponding include directory in `config/`.

`config/binary_local-includes` (with the root directory of the generated image as the root)

`config/chroot_local-includes` (with the root directory of the target system as the root)

### 4.3.2 HOOKS

After each phase of live-build is completed, scripts in the `config/` corresponding hooks are executed.

`config/binary_local-hooks`

`config/chroot_local-hooks`

New versions of live-build will obtain patches from the `live/normal` directories.

```

customization/hooks/live/
├─ 0001-setup_user_linaro.binary
├─ 0002-add_linaro_to_groups.binary
├─ 0003-check_sudoers_for_admin.binary
├─ 0021-silence-systemd.binary
├─ 0022-disable-systemd-services.binary
├─ 0023-lightdm-autologin.binary
└─ 0098-resolvconf.binary

```

## 5. Introduction to Debian Precompiled Packages

```

packages/
├─ arm64/armhf

```

```

|   ├── blueman
|   ├── cheese
|   ├── chromium
|   ├── glmark2
|   ├── gst-plugins-bad1.0
|   ├── gst-plugins-basel.0
|   ├── gst-plugins-good1.0
|   ├── gst-plugins-ugly1.0
|   ├── gstreamer
|   ├── gst-rkmpp
|   ├── libdrm
|   ├── libdrm-cursor
|   ├── libmali
|   ├── libv4l
|   ├── mpp
|   ├── openbox
|   ├── pcmanfm
|   ├── pipewire
|   ├── rga
|   ├── rga2
|   ├── rkaiq
|   ├── rkisp
|   ├── rknpu2
|   ├── rktoolkit
|   ├── rkwifibt
|   ├── wayland
|   ├── weston
|   ├── wireplumber
|   └── xserver

```

## 5.1 Blueman

Blueman is a GTK+ Bluetooth manager. Blueman can efficiently manage the BlueZ API and simplify the following Bluetooth management tasks, such as:

- Dial-up connections for 3G/EDGE/GPRS
- Connect/create Bluetooth networks
- Connect input devices
- Connect audio devices
- Send, receive, and browse files via OBEX (Object Exchange)
- Pairing

Precompiled packages are as follows:

```

blueman/
├── blueman_2.3.5-2_arm64.deb
└── blueman-dbgsym_2.3.5-2_arm64.deb

packages-patches/blueman/
├── 0001-Blueman-Fix-DisplayPasskey-for-Keyboards.patch
└── 0002-Don-t-turn-off-the-bt-power.patch

```

Rockchip has updated the Blueman software package, primarily to address issues encountered by Bluetooth devices (such as keyboards and speakers) during sleep and wake-up processes. Additionally, many third-party Bluetooth and Wi-Fi software attempt to control the power status of hardware modules through the `/dev/rfkill` interface. However, the Rockchip platform uses vendor-provided non-standard drivers, which typically require specific initialization steps and may not function properly after being re-powered. Therefore, the SDK's scripts are responsible for independently managing the power and initialization processes of Wi-Fi and Bluetooth modules to avoid interference from third-party software.

## 5.2 Media Process Platform (MPP)

Rockchip provides a media processing software platform known as Media Process Platform (MPP), which is a general-purpose media processing software platform applicable to the Rockchip chip series. This platform abstracts the complexity of chip-related low-level processing from the application software, with the aim of shielding the differences between different chips and providing users with a unified video media processing interface (Media Process Interface, abbreviated as MPI). The functionalities provided by MPP include:

- Video Decoding  
H.265 / H.264 / H.263 / VP9 / VP8 / MPEG-4 / MPEG-2 / MPEG-1 / VC1 / MJPEG / AV1
- Video Encoding  
H.265 / H.264 / VP8 / MJPEG
- Video Processing  
Video copy, scaling, color space conversion, field video deinterlacing (Deinterlace)

If you encounter issues that require debugging, you can obtain more detailed log information by enabling the following log switches:

```
export mpi_debug=1
export mpp_debug=1
export h264d_debug=1
export mpp_buffer_debug=2
```

Please note that by default, MPP logs are not output directly to the terminal. If you wish to view logs in the terminal, please set:

```
export mpp_syslog_perror=1
```

Debugging log switches for different kernel versions are as follows:

- For 4.19/5.10/6.1 kernels (Linux 4.19 and above):

```
echo 0x100 > /sys/module/rk_vcodec/parameters/mpp_dev_debug
cat /proc/kmsg
```

- For 4.4 kernel (Linux 4.4):

```
echo 0x100 > /sys/module/rk_vcodec/parameters/debug
cat /proc/kmsg
```

After executing the above commands, you will be able to see the execution time of kernel single-frame encoding and decoding, which is very useful for performance evaluation or analyzing issues related to stuttering and smoothness. For example, log information may appear as follows:

```
rk_vcodec: fdf80200.rkvdec:0 session 2269:34 time: 14870 us hw 5430 us
rk_vcodec: fdf80200.rkvdec:0 session 2269:34 time: 13157 us hw 4132 us
rk_vcodec: fdf80200.rkvdec:0 session 2269:34 time: 12976 us hw 4098 us
rk_vcodec: fdf80200.rkvdec:0 session 2269:34 time: 11295 us hw 4070 us
...
```

For more information, please refer to the MPP development documentation in the `<SDK>/docs/Linux/Multimedia` directory of the SDK.

Precompiled packages integrated in Debian are as follows:

```
mpp/
├─ librockchip-mpp-dev_1.5.0-1_arm64.deb
├─ librockchip-mpp1-dbgSYM_1.5.0-1_arm64.deb
├─ librockchip-mpp1_1.5.0-1_arm64.deb
├─ librockchip-vpu0-dbgSYM_1.5.0-1_arm64.deb
├─ librockchip-vpu0_1.5.0-1_arm64.deb
├─ rockchip-mpp-demos-dbgSYM_1.5.0-1_arm64.deb
└─ rockchip-mpp-demos_1.5.0-1_arm64.deb
```

In the Debian system, MPP can be integrated with Rockchip's self-developed Rokit framework and third-party multimedia frameworks such as GStreamer, providing robust multimedia processing support.

**Please note: Due to copyright and commercial licensing restrictions, the official Linux SDK does not provide support for FFmpeg.**

## 5.3 libv4l

A v4l2 plugin for interfacing Chromium browser with mpp to implement hardware decoding.

Precompiled packages:

```
libv4l/
...
├─ libv4l-0_1.22.1-5_arm64.deb
├─ libv4l-0-dbgSYM_1.22.1-5_arm64.deb
├─ libv4l2rds0_1.22.1-5_arm64.deb
├─ libv4l2rds0-dbgSYM_1.22.1-5_arm64.deb
├─ libv4lconvert0_1.22.1-5_arm64.deb
├─ libv4lconvert0-dbgSYM_1.22.1-5_arm64.deb
├─ libv4l-dev_1.22.1-5_arm64.deb
├─ libv4l-rkmpp_1.5.1-1.1_arm64.deb
├─ libv4l-rkmpp-dbgSYM_1.5.1-1.1_arm64.deb
├─ v4l-utils_1.22.1-5_arm64.deb
└─ v4l-utils-dbgSYM_1.22.1-5_arm64.deb
```

The third-party package v4l-utils requires the following patches:

```
|— 0001-libv4l2-Support-mmap-to-libv4l-plugin.patch
|— 0002-libv4l-mplane-Filter-out-multiplane-formats.patch
|— 0003-libv4l-add-V4L2_MEMORY_DMABUF-memory-support.patch
|— 0004-libv4l-mplane-plugin-add-exbuf_ioctl-for-dmabuf.patch
|— 0005-video-max-frame-change-from-32-to-64.patch
|— 0006-Support-builtin-v4l-plugins.patch
|— 0007-libv4l-Disallow-conversion-by-default.patch
```

Then compile libv4l-rkmpp, the plugin for libv4l to interface with mpp.

## 5.4 Chromium

The Chromium browser integrated in Debian is compiled based on Yocto.

```
chromium/
└─ chromium-x11_126.0.6478.126_arm64/armhf.deb
```

The Chromium browser supports a variety of video formats, including H264, VP8, VP9, AV1, etc. Starting from version 105, it added support for the H265 video format. Currently, in the Debian system, support for Chromium video hardware decoding has been integrated, implemented through a customized version of Chromium, V4L2 plugin, and MPP efficient hardware decoding.

Customization of Chromium mainly involves the following modifications:

- Modify Chromium to enable v4l2 vda support, as well as related patches
- Add v4l2 mpp plugin

The disadvantages are:

- a. Decoding only supports vp8, h264, h265, vp9, av1
- b. Encoding only supports vp8 and h264
- c. Requires modification of the compilation of Chromium (to complete the Yocto compilation process)

We currently provide Chromium wayland patches, supporting on systems like Yocto, buildroot, etc.

- Chromium version

```
root@linaro-alip:~# chromium --version
```

Chromium 126.0.6478.126 stable

## 5.5 glmark2

```
glmark2/
|— glmark2-data_2023.01+dfsg-1_all.deb
|— glmark2-drm-dbgsym_2023.01+dfsg-1_arm64.deb
|— glmark2-drm_2023.01+dfsg-1_arm64.deb
|— glmark2-es2-drm-dbgsym_2023.01+dfsg-1_arm64.deb
|— glmark2-es2-drm_2023.01+dfsg-1_arm64.deb
|— glmark2-es2-wayland-dbgsym_2023.01+dfsg-1_arm64.deb
|— glmark2-es2-wayland_2023.01+dfsg-1_arm64.deb
|— glmark2-es2-x11-dbgsym_2023.01+dfsg-1_arm64.deb
|— glmark2-es2-x11_2023.01+dfsg-1_arm64.deb
|— glmark2-wayland-dbgsym_2023.01+dfsg-1_arm64.deb
|— glmark2-wayland_2023.01+dfsg-1_arm64.deb
```

```
|— glmark2-x11-dbgsym_2023.01+dfsg-1_arm64.deb
|— glmark2-x11_2023.01+dfsg-1_arm64.deb
```

Glmark2 is an open-source benchmarking tool for OpenGL 2.0 and ES 2.0, typically used for benchmarking GPUs.

The open-source code [Glmark2](#) has been integrated into Debian for specific testing,

```
usr/local/bin/test_glmark2_*.sh
|— test_glmark2_fullscreen.sh  ### Full screen test
|— test_glmark2_normal.sh  ### Default display resolution test at 800x600
|— test_glmark2_offscreen.sh  ### Screenless test

root@linaro-alip:~# test_glmark2_normal.sh
arm_release_ver: g24p0-00eac0, rk_so_ver: 3
=====
      glmark2 2023.01
=====
      OpenGL Information
      GL_VENDOR:      ARM
      GL_RENDERER:    Mali-G610
      GL_VERSION:     OpenGL ES 3.2 v1.g24p0-
00eac0.98fbd14bd397c6bd1b57c689f07cf638
      Surface Config: buf=24 r=8 g=8 b=8 a=0 depth=24 stencil=0 samples=0
      Surface Size:   1080x1920 fullscreen
=====
[build] use-vbo=false:
---
```

For more usage methods, check the help.

```
root@linaro-alip:~# glmark2-es2 --help
A benchmark for Open GL (ES) 2.0

Options:
  -b, --benchmark BENCH  A benchmark or options to run: '(scene)?(:opt1=vall)*'
                          (the option can be used multiple times)
  -f, --benchmark-file F  Load benchmarks to run from a file containing a
                          list of benchmark descriptions (one per line)
                          (the option can be used multiple times)
  --validate              Run a quick output validation test instead of
                          running the benchmarks
  --data-path PATH        Path to glmark2 models, shaders and textures
                          Default: /usr/share/glmark2
  --frame-end METHOD       How to end a frame [default,none,swap,finish,readpixels]
  --off-screen            Render to an off-screen surface
  --visual-config C       The visual configuration to use for the rendering
                          target: 'red=R:green=G:blue=B:alpha=A:buffer=BUF'.
                          The parameters may be defined in any order, and any
                          omitted parameters assume a default value of '1'
  --reuse-context         Use a single context for all scenes
                          (by default, each scene gets its own context)
  -s, --size WxH          Size of the output window (default: 800x600)
  --fullscreen            Run in fullscreen mode (equivalent to --size -1x-1)
  -l, --list-scenes       Display information about the available scenes
                          and their options
```



```

--show-all-options Show all scene option values used for benchmarks
                    (only explicitly set options are shown by default)
--run-forever       Run indefinitely, looping from the last benchmark
                    back to the first
--annotate          Annotate the benchmarks with on-screen information
                    (same as -b :show-fps=true:title=#info#)
-d, --debug         Display debug messages
-h, --help          Display help

```

## 5.6 gst-rkmpp

GStreamer-Rockchip is an audio and video codec middleware based on GStreamer adapted for the Rockchip platform, mainly interfacing with the mpp interface.

Precompiled packages of GStreamer-Rockchip are as follows:

```

gst-rkmpp/
├─ gstreamer1.0-rockchip1-dbgsym_1.14-4_arm64.deb
└─ gstreamer1.0-rockchip1_1.14-4_arm64.deb

```

## 5.7 GStreamer

GStreamer includes the core framework and core components.

The GStreamer 1.22.0 patch adds DMABUF as part of the system memory, which can make the related memory operations more flexible and efficient, and solve the problem of video looping playback getting stuck. The relevant patches are as follows,

```

├─ 0001-filesrc-Fix-stopping-race-in-pull-mode.patch
├─ 0002-HACK-gstpad-Add-1-sec-timeout-for-activation.patch
├─ 0003-HACK-caps-Consider-dmabuf-subset-of-system-memory.patch
└─ 0004-gst-launch-Fix-random-hang-when-EOS.patch

```

## 5.8 gst-plugins-base1.0

The gst1-plugins-base is a part of the GStreamer project, providing a set of fundamental plugins to support various media processing functions.

Based on the official version of GStreamer's gst-plugins-base, it enhances the performance, compatibility, and functionality of the GStreamer base plugins by optimizing aspects such as decoding, playback, video rendering, user interface management, and file format support. The main modifications are as follows:

- Removed the limitation that certain decoders only emit the drained signal in the top-level container.
- Improved the behavior of playbin and playbin2, including handling end signals, avoiding clearing the buffer on the first end, fixing deadlock issues, and improving video state transitions.
- Added support for DMABUF rendering, especially in the xvimagesink plugin.
- Supported the use of Rockchip RGA 2D acceleration in the video-converter.
- Allowed direct import of DMABUF in the gl plugin, even if EGLImage cannot be used.
- Supported the priority use of DirectDmabufExternal in the OpenGL uploader.
- Added support for specific video formats, such as NV12\_10LE40.

- Allowed disabling window decorations in xvimagesink.
- Applied top-level window position settings.
- Ignored expose redraw events when the video is not ready.
- Added support for preferred audio and video receivers.
- Corrected the error in calculating the bit rate of ADPCM in the RIFF file format.
- Allowed disabling QoS (Quality of Service) by default.
- Supported new video formats NV16\_10LE40.

The patches related to `gst-plugins-base1.0-1.22.0` are as follows:

```
gst1-plugins-base
├─ 0001-Revert-decodebin-only-emit-drained-signal-when-top-c.patch
├─ 0002-playbin2-send-one-about-to-finish-per-group.patch
├─ 0003-playbin-do-not-drain-on-first-EOS.patch
├─ 0004-playbin2-Fix-deadlock-when-hooking-about-to-finish-s.patch
├─ 0005-playbin3-Fix-Qt-videoplayer-cannot-change-video-stat.patch
├─ 0006-playbin2-Add-preferred-audio-video-sink.patch
├─ 0007-HACK-xvimagesink-Support-dma-buffer-rendering.patch
├─ 0008-video-converter-Support-rockchip-RGA-2D-accel.patch
├─ 0009-HACK-gl-egl-allow-direct-dmabuf-import-when-unable-t.patch
├─ 0010-glupload-dmabuf-prefer-DirectDmabufExternal-uploader.patch
├─ 0011-videoconvert-Support-preferred-formats.patch
├─ 0012-glupload-Support-NV12_10LE40-and-NV12-NV12_10LE40-NV.patch
├─ 0013-xvimagesink-Defer-prepare-window-when-getting-zero-w.patch
├─ 0014-riff-Fix-bps-caculation-error-for-ADPCM.patch
├─ 0015-xvimagesink-Allow-disabling-decorations.patch
├─ 0016-xvimagesink-Apply-toplevel-window-s-position.patch
├─ 0017-xvimagesink-Ignore-expose-redraw-when-video-not-read.patch
├─ 0018-gl-x11-Honor-render-rectangle-for-toplevel-window.patch
├─ 0019-gl-wayland-Honor-render-rectangle-for-toplevel-windo.patch
├─ 0020-gl-x11-Allow-disabling-decorations-for-toplevel-wind.patch
├─ 0021-gst-libs-Support-NV16_10LE40.patch
├─ 0022-videodecoder-Allow-disabling-QoS-by-default.patch
```

## 5.9 gst-plugins-bad1.0

The patches under the `gst1-plugins-bad1.0` directory primarily focus on a series of improvements and fixes for the advanced plugin set of GStreamer, covering various aspects such as video processing, audio processing, window management, performance optimization, and compatibility enhancement. The main modifications are as follows:

- Fixed the VUI read error in the H.265 parser.
- Fixed the potential memory leak issue of VC1 streams under specific conditions.
- Support for splitting the MPEG video parser into individual frames.
- Enhanced compatibility and functionality with Wayland and KMS (Kernel Mode Setting) window managers, including support for window position, hierarchy, transparency, fill mode, synchronization mode, and other properties.
- Fixed multiple issues with Wayland windows during preparation, display, and full-screen.
- Optimized the logic of the MPEG-TS demultiplexer for handling large gap PCR groups.
- Fixed the potential issue of double closing shared resource handles for KMS windows under certain conditions.
- Added support for NV12\_10LE40, NV16\_10LE40, and other video formats.
- Support for ignoring corrupted PCR streams.

- Specific optimizations for the Rockchip platform, including the use of Rockchip drivers and support for HDR.
- Improvements for the KMS window manager, including avoiding the selection of disconnected connectors, and support for scaling and full-screen properties in mode setting.
- Allows the use of the JPEG parser when parsing binary auto-insertion.
- Support for using DMABUF in Wayland windows.
- Support for transparent video and touch pointers.

Based on the official GStreamer version of gst-plugins-bad, additional plugins such as kmssink and waylandsink have been added to adapt to some features and problem fixes of the Rockchip platform.

The patches for gst-plugins-bad1.0-1.22.0 are as follows:

```
gstl-plugins-bad
├─ 0001-h265parser-Fix-read-vui-error.patch
├─ 0002-interim-fix-vcl-stream-may-memory-leak-when-pending.patch
├─ 0003-waylandsink-release-frame-callback-when-finalizing.patch
├─ 0004-kmssink-Support-render-rectangle-for-plane.patch
├─ 0005-kmssink-Request-window-handle.patch
├─ 0006-waylandsink-Support-place-below-above.patch
├─ 0007-waylandsink-Enable-changing-window-handle.patch
├─ 0008-kmssink-Support-setting-plane-zpos.patch
├─ 0009-waylandsink-Support-setting-toplevel-window-position.patch
├─ 0010-HACK-gstmpegvideoparse-Split-every-picture.patch
├─ 0011-mpegtsdemux-Create-new-PCR-group-for-big-gap.patch
├─ 0012-gstjpegparse-Allow-parsebin-to-use-it-for-autopluggi.patch
├─ 0013-waylandsink-Drop-frame-when-window-not-ready.patch
├─ 0014-waylandsink-Fix-random-crash.patch
├─ 0015-camerabin2-Support-setting-default-filters.patch
├─ 0016-waylandsink-Defer-prepare-window-when-getting-zero-w.patch
├─ 0017-mpegts-Support-ignoring-broken-PCR-streams-by-default.patch
├─ 0018-waylandsink-Fix-crash-when-setting-fullscreen-proper.patch
├─ 0019-waylandsink-Support-window-layer-property.patch
├─ 0020-waylandsink-Support-window-alpha-property.patch
├─ 0021-waylandsink-Support-window-fill-mode-property.patch
├─ 0022-HACK-kmssink-Open-drm-devnode-directly.patch
├─ 0023-waylandsink-Use-create_immed-to-create-dmabuf.patch
├─ 0024-waylandsink-Support-frame-sync-mode.patch
├─ 0025-kmssink-Support-NV12_10LE40-and-NV12-NV12_10LE40-NV1.patch
├─ 0026-waylandsink-Support-NV12_10LE40-and-NV12-NV12_10LE40.patch
├─ 0027-waylandsink-Use-the-correct-video-info-to-access-all.patch
├─ 0028-waylandsink-Prefer-to-use-waylandsink.patch
├─ 0029-kmssink-Avoid-double-closing-shared-gem-handle.patch
├─ 0030-kmssink-Support-ignoring-aspect-ratio.patch
├─ 0031-kmssink-Support-setting-preferred-frame-syncing-mode.patch
├─ 0032-waylandsink-Support-pointer-and-touch.patch
├─ 0033-waylandsink-Parse-video-size-in-propose_allocation.patch
├─ 0034-waylandsink-Wait-10s-for-toplevel-window-s-configure.patch
├─ 0035-waylandsink-Fix-buffer-size-error-when-video-cropped.patch
├─ 0036-HACK-waylandsink-Set-size-in-wl_subsurface_set_posit.patch
├─ 0037-waylandsink-Support-transparent-video.patch
├─ 0038-kmssink-Improve-monitor-and-plane-selection.patch
├─ 0039-kmssink-Support-scaling-in-modesetting.patch
├─ 0040-kmssink-Support-fullscreen-prop.patch
├─ 0041-av1parser-Don-t-consider-unknown-metadata-OBUs-a-bit.patch
├─ 0042-kmssink-Avoid-src-size-overflow.patch
├─ 0043-waylandsink-Support-force-trying-dmabuf.patch
```

## 5.10 gst-plugins-good1.0

Patches in the `gst1-plugins-good1.0` directory primarily address the adaptation of GStreamer's "good" plugin set for v4l2, rga, and other plugins to accommodate certain features and issue fixes on the Rockchip platform. The main modifications are as follows:

- Added support for Rockchip RGA 2D accelerators for video flipping processing.
- Support for setting the default video device.
- Filtering out unavailable Rockchip video sources.
- Support for setting the maximum video capture resolution.
- Increased the VIDEO\_MAX\_FRAME limit to support more frame buffers.
- Support for setting the minimum buffer count for V4L2.
- Support for configuring buffer sharing.
- Support for bypassing buffer cache cleaning to improve the performance of the V4L2 source.

The patches for gst-plugins-good1.0-1.22.0 are as follows:


```
gst1-plugins-good/
└─ 0001-qt demux-don-t-skip-the-stream-duration-longer-than-3.patch
└─ 0002-HACK-flacparse-Handle-metadata-127.patch
└─ 0003-autodetect-Add-preferred-for-autovideosink-autoaudio.patch
└─ 0004-v4l2-Support-preferred-formats.patch
└─ 0005-video-flip-Support-Rockchip-RGA-2D-accel.patch
└─ 0006-v4l2src-Support-setting-default-device.patch
└─ 0007-v4l2src-Filter-out-unavailable-RK-sources.patch
└─ 0008-v4l2src-Support-setting-max-resolution.patch
└─ 0009-matroska-demux-parse-Disable-QoS-lace-skipping-by-de.patch
└─ 0010-v4l2-Increase-VIDEO_MAX_FRAME-to-64.patch
└─ 0011-v4l2-Support-setting-v4l2-min-buffers.patch
└─ 0012-v4l2-Support-disabling-buffer-sharing.patch
```

## 5.11 libdrm

Based on the official LIBDRM version, the main modifications are as follows:

- By default, open the Rockchip DRM device.
- By default, bypass the authentication DRM API, such as `drmGetBusid`, `drmSetBusid`, `drmGetMagic`, `drmAuthMagic`, `drmSetInterfaceVersion`, `drmSetMaster`, `drmDropMaster`.

LIBDRM is a cross-driver middleware that allows user-space applications (e.g., as Mesa and 2D drivers) to communicate with the kernel through the DRI protocol. Refer to the following DRM structure diagram:

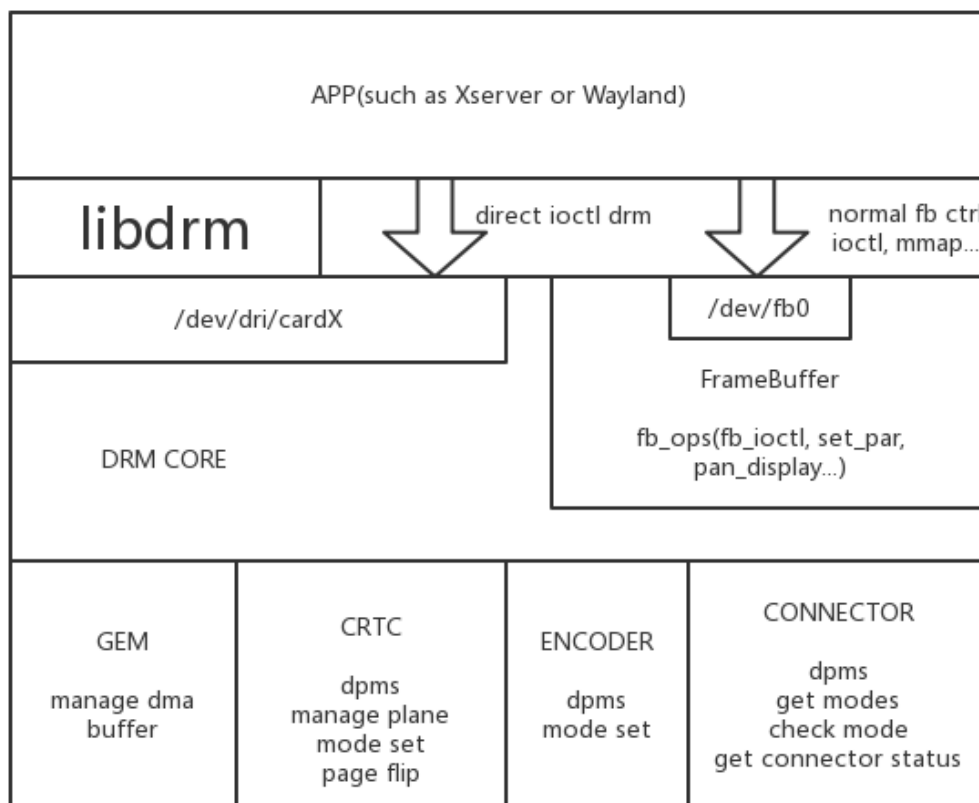

Precompiled libdrm packages are as follows:

```
libdrm
├─ libdrm2_2.4.114-1_arm64.deb
├─ libdrm2-dbgsym_2.4.114-1_arm64.deb
├─ libdrm-common_2.4.114-1_all.deb
├─ libdrm-dev_2.4.114-1_arm64.deb
├─ libdrm-tests_2.4.114-1_arm64.deb
└─ libdrm-tests-dbgsym_2.4.114-1_arm64.deb
```

Patches are as follows:

```
├─ 0001-tests-meson.build-disable-nouveau-tests-for-static-b.patch
├─ 0002-modetest-Speed-up-dumping-info.patch
├─ 0003-HACK-Open-Rockchip-drm-device-by-default.patch
└─ 0004-HACK-Bypass-auth-APIs-by-default.patch
```

## 5.12 libdrm-cursor

This package is primarily used for issues with only AFBC layers on RK3566/RK3568, with three main functionalities:

- The vop does not have a mouse layer, supporting the use of overlay as a mouse layer.
- Support for the display of overlay layers in AFBC format.
- Handling of abnormal situations where the mouse exceeds boundary limits.

Configuration features of drm-cursor are as follows:

```
$cat /etc/drm-cursor.conf

# Configure file for libdrm-cursor.
#
#debug=
# log-file=
# hide=1 # hide cursors
# atomic=0 # disable atomic drm API
# max-fps=60
# allow-overlay=1 # allowing overlay planes
# prefer-afbc=0 # prefer plane with AFBC modifier supported
# num-surfaces=8 # num of egl surfaces to avoid edge moving corruption
# prefer-plane=65
# prefer-planes=61,65
# crtc-blocklist=64,83
```

Default log is located at /var/log/drm-cursor.log

Precompiled packages of libdrm-cursor are as follows:

```
libdrm-cursor/
├─ libdrm-cursor-dbgSYM_1.4.1-1_arm64.deb
├─ libdrm-cursor-dev_1.4.1-1_arm64.deb
└─ libdrm-cursor_1.4.1-1_arm64.deb
```

## 5.13 libmali

libmali is the software development kit for the ARM Mali GPU series. Rockchip provides a series of pre-compiled libmali Debian packages to streamline the development process.

Mali GPU is a graphics acceleration platform that adheres to open standards, supporting 2D and 3D graphics rendering as well as general-purpose computing on the GPU (GPGPU). The GPU support under the Rockchip Linux system includes the following APIs:

- OpenGL ES 1.1, 2.0, 3.2
- Vulkan 1.0, 1.1
- OpenCL 2.0

Note: Although OpenGL ES is supported, the full OpenGL API is not supported.

The naming of the software packages follows this rule: GPU model - software version - hardware version (if differentiated, such as r1p0 to distinguish between RK3288 and RK3288w) - compilation options.

Regarding compilation options, please note the following points:

- The version without a suffix is x11-gbm, where GBM is a memory management mechanism based on DRM configuration, suitable for EGLFS programs, and does not depend on X11 or Wayland display services.
- Wayland and Wayland-gbm versions are used for the Wayland display environment.
- The dummy version is primarily used for the rockit multimedia development environment.

Different chip platforms may support different types of APIs, and specific information should be referred to the respective chip manuals.

```
libmali/
├─ libmali-valhall-g610-g13p0-dummy-dbgsym_1.9-1_arm64.deb
├─ libmali-valhall-g610-g13p0-dummy_1.9-1_arm64.deb
├─ libmali-valhall-g610-g13p0-gbm-dbgsym_1.9-1_arm64.deb
├─ libmali-valhall-g610-g13p0-gbm_1.9-1_arm64.deb
├─ libmali-valhall-g610-g13p0-wayland-gbm-dbgsym_1.9-1_arm64.deb
├─ libmali-valhall-g610-g13p0-wayland-gbm_1.9-1_arm64.deb
├─ libmali-valhall-g610-g13p0-x11-gbm-dbgsym_1.9-1_arm64.deb
├─ libmali-valhall-g610-g13p0-x11-gbm_1.9-1_arm64.deb
...
```

## 5.14 RGA

Rockchip RGA is an independent 2D raster graphics acceleration unit. It accelerates 2D graphic operations, such as point/line drawing, image scaling, rotation, bitmaps, image composition, etc.

Precompiled packages are as follows:

Among them:

- RGA is suitable for RK kernel 4.4 and other older versions, mainly corresponding to the im2d branch of the linux-rga repository.
- RGA2 is suitable for RK kernel 4.19, 5.10, 6.1, and other newer versions, mainly corresponding to the multi\_rga\_im2d\_api branch of the linux-rga repository.

```
rga/
├─ librga-dev_2.1.0-1_arm64.deb
├─ librga2-deb
└─ librga2_2.1.0-1_arm64.deb

rga2
├─ librga2_2.2.0-1_arm64.deb
├─ librga2-dbgsym_2.2.0-1_arm64.deb
└─ librga-dev_2.2.0-1_arm64.deb
```

## 5.15 Openbox

Openbox is a lightweight X11 window manager. Improvements have been made to the official version of the Openbox window manager, adding support for outline movement and limiting the interval of movement.

```
Modify /home/linaro/.config/openbox/lxde-rc.xml to wireframe, change the
drawContents content:
<drawContents>yes</drawContents> to <drawContents>no</drawContents>

Set moveInterval to limit the interval of window movement:
<moveInterval>50</moveInterval>
```

For more details, refer to [Openbox](#)

Precompiled package as follows:

```
openbox/  
└─ openbox_3.6.1-10_arm64.deb
```

## 5.16 pcmanfm

is a lightweight file manager, primarily used for lightweight desktop environments, such as LXDE (Lightweight X11 Desktop Environment). It adds support for outlines based on the official version.

Precompiled packages are as follows:

```
pcmanfm/  
├─ pcmanfm_1.3.2-1_arm64.deb  
└─ pcmanfm-dbgsym_1.3.2-1_arm64.deb
```

## 5.17 Pipewire

Pipewire is an open-source multimedia service framework designed to provide flexible, low-latency audio and video pipelines for modern Linux systems. It is intended to replace older multimedia frameworks such as PulseAudio and the JACK Audio Connection Kit, offering a more modern and efficient solution. The update of the pipewire package is mainly due to the recording noise issue in the official version of Debian 12, for details refer to [official bug](#).

Precompiled packages are as follows:

```
pipewire/  
└─ libspa-0.2-modules_0.3.65-3+deb12u1_arm64.deb
```

## 5.18 wireplumber

WirePlumber is an open-source audio and video routing tool built on the PipeWire framework. It provides a flexible pipeline system for handling audio and video streams. The official version modifications are primarily aimed at adapting the automatic sound switching feature.

Precompiled packages are as follows:

```
wireplumber/  
├─ gir1.2-wp-0.4_0.4.13-1_arm64.deb  
├─ libwireplumber-0.4-0_0.4.13-1_arm64.deb  
├─ libwireplumber-0.4-0-dbgsym_0.4.13-1_arm64.deb  
├─ libwireplumber-0.4-dev_0.4.13-1_arm64.deb  
├─ wireplumber_0.4.13-1_arm64.deb  
├─ wireplumber-dbgsym_0.4.13-1_arm64.deb  
└─ wireplumber-doc_0.4.13-1_all.deb
```



## 5.19 Rockchip Automatic Image Quality

Full name Rockchip Automatic Image Quality, automatically adjusts the image signal processor. Mainly implements Camera 3A effects, suitable for ISP2.x chips, such as RK3588, RK3576, RK356X, and other chips.

Precompiled packages are as follows:

```
rkaiq/
├─ camera_engine_rkaiq_rk3562_arm64.deb ##Suitable for RK3562 series chips
├─ camera_engine_rkaiq_rk3568_arm64.deb ##Suitable for RK3566/RK3568 series chips
├─ camera_engine_rkaiq_rk3576_arm64.deb ##Suitable for RK3576 series chips
└─ camera_engine_rkaiq_rk3588_arm64.deb ##Suitable for RK3588 series chips
```

## 5.20 rkisp

Full name Rockchip Image Signal Processor, an image signal processor. It mainly achieves Camera 3A effects and is suitable for ISP1.X chips, such as RK3288, RK3399, RK3326, PX30, etc.

Precompiled package is as follows:

```
rkisp/
└─ camera_engine_rkisp_v2.3.0_arm64.deb
```

## 5.21 rknpu2

Full name Rockchip Neural Processing Unit, neural network processing unit. RKNPU, users need to first run the RKNN-Toolkit2 tool on the computer to convert the trained model into RKNN format model, and then use RKNN C API or Python API for deployment on the development board. The RKNN software stack can help users quickly deploy AI models to Rockchip chips. Currently, it can be used on chips such as RK356X, RK3576, RK3588, etc.

Integration package is as follows:

```
rknpu2/
└─ rknpu2.tar
```

## 5.22 rkwifi

Debugged WIFI-BT related modules based on the Rockchip platform, which includes firmware, tools, configuration files, etc.

Precompiled packages are as follows:

```
rkwifi/
├─ rkwifi-broadcom-firmware_1.0.0-1_arm64.deb
├─ rkwifi-dev-tools-dbg_1.0.0-1_arm64.deb
└─ rkwifi-dev-tools_1.0.0-1_arm64.deb
```

## 5.23 rktoolkit

rktoolkit is a specialized toolkit for Rockchip, including tools such as

```
io/update/vendor_storage/modetest/stressapptest/memtester/vendor_storage , etc.:
```

Precompiled packages are as follows:

```
rktoolkit/  
├─ rktoolkit_1.0.0-1_arm64.deb  
└─ rktoolkit-dbgSYM_1.0.0-1_arm64.deb
```

## 5.24 X Server

The X server is a shortened term for the graphical interface server within the Linux system. Common Linux desktop environments such as XFCE, KDE, and GNOME are all supported by the X server. Currently, Debian uses the lightweight LXDE/XFCE desktop environment. Below is a comparison of various desktop environments and window managers available for Linux:

Desktop Environment/Window Manager	Memory Usage	CPU Usage	Type
KDE 4.6	363MB	4%	Desktop Environment
Unity	271MB	14%	Desktop Environment
GNOME 3	193MB	10%	Desktop Environment
GNOME 2.x	191MB	1%	Desktop Environment
XFCE 4.8	144MB	10%	Desktop Environment
LXDE	85MB	10%	Desktop Environment
IceWM	85MB	2%	Desktop Environment
Enlightenment (E17 Standard)	72MB	1%	Window Manager
Fluxbox	69MB	1%	Window Manager
OpenBox	60MB	1%	Window Manager
JWM	58MB	1%	Window Manager

Rockchip provides the following enhanced features for X Server:

- Specified Graphics Card:

Allows users to manually specify a graphics card or integrated graphics. Through the OutputClass section, devices using the "rockchip" driver are designated as the primary GPU to prevent display anomalies caused by automatic enumeration.

- Hardware Acceleration:

Supports glamor and exa acceleration modes. Glamor uses the GPU for rendering composition, while exa uses Rockchip RGA 2D hardware for rendering composition (exa is commented out by default and must be uncommented to use). These settings are typically configured in the /etc/X11/xorg.conf.d/20-modesetting.conf file.

- Tear Prevention:

By setting FlipFB to "always", tear prevention is always enabled to avoid screen tearing, but this may result in up to a 50% performance loss.

- Performance Optimization:

The commented-out MaxFlipRate option can be used to limit the refresh rate and dropped frames to reduce performance loss.

- EDID Disable:

Setting NoEDID to "true" disables EDID, which is typically used when the EDID information of the monitor is inaccurate.

- Gamma Correction:

Enabling UseGammaLUT allows the use of a Gamma correction lookup table (LUT) to improve color display.

- Virtual Screen Size:

The commented-out VirtualSize option can be used to set the virtual screen size, which is scaled by the VOP hardware.

- Physical Display Padding:

The commented-out Padding option can be used to set the padding for the physical display to adjust the blank areas around the screen edges.

- Screen and Monitor Settings:

A default screen and monitor are defined, associating them with the previously defined devices, and setting the default rotation mode to "normal". Users can set the screen to normal (normal), left (left), right (right), and other rotation modes through the Rotate option in the configuration file.

The specific configuration file is as follows:

```
### Use Rockchip DRM driver
Section "OutputClass"
    Identifier   "RockchipDRM"
    MatchDriver "rockchip"
    Option       "PrimaryGPU"      "yes"
EndSection

Section "Device"
    Identifier   "Rockchip Graphics"
    Driver       "modesetting"

### Use Rockchip RGA 2D HW accel
# Option       "AccelMethod"      "exa"
```

```

### Use GPU HW accel
Option      "AccelMethod"      "glamor"

Option      "DRI"              "2"

### Set to "always" to avoid tearing, could lead to up 50% performance loss
Option      "FlipFB"           "always"

### Limit flip rate and drop frames for "FlipFB" to reduce performance lost
#   Option   "MaxFlipRate"      "60"

Option      "NoEDID"           "true"
Option      "UseGammaLUT"      "true"

### Set virtual screen size (scaled by VOP hardware)
#   Option   "VirtualSize"      "DSI-1:600x1080"

### Set physical display paddings <top,bottom,left,right>
#   Option   "Padding"          "DSI-1:180,300,300,540"

EndSection

Section "Screen"
    Identifier   "Default Screen"
    Device       "Rockchip Graphics"
    Monitor      "Default Monitor"
EndSection

### Valid values for rotation are "normal", "left", "right"
Section "Monitor"
    Identifier   "Default Monitor"
    Option       "Rotate"        "normal"
EndSection

```

Precompiled packages are as follows:

```

Debian10 xserver/
├─ xserver-common_1.20.4-1+deb10u3_all.deb
├─ xserver-xorg-core-dbgsym_1.20.4-1+deb10u3_arm64.deb
├─ xserver-xorg-core_1.20.4-1+deb10u3_arm64.deb
├─ xserver-xorg-dev_1.20.4-1+deb10u3_arm64.deb
├─ xserver-xorg-legacy-dbgsym_1.20.4-1+deb10u3_arm64.deb
└─ xserver-xorg-legacy_1.20.4-1+deb10u3_arm64.deb

Debian11 xserver/
├─ xserver-common_1.20.11-1_all.deb
├─ xserver-xorg-core-dbgsym_1.20.11-1_arm64.deb
├─ xserver-xorg-core_1.20.11-1_arm64.deb
├─ xserver-xorg-dev_1.20.11-1_arm64.deb
├─ xserver-xorg-legacy-dbgsym_1.20.11-1_arm64.deb
└─ xserver-xorg-legacy_1.20.11-1_arm64.deb

Debian12 xserver/
├─ xserver-common_21.1.7-3_all.deb
├─ xserver-xorg-core-dbgsym_21.1.7-3_arm64.deb
└─ xserver-xorg-core_21.1.7-3_arm64.deb

```

```
|— xserver-xorg-dev_21.1.7-3_arm64.deb
|— xserver-xorg-legacy-dbgsym_21.1.7-3_arm64.deb
└— xserver-xorg-legacy_21.1.7-3_arm64.deb
```

The startup log is located at `/var/log/Xorg*`. The specific version of Xserver can be confirmed using the following method:

```
root@linaro-alip:~# cat /var/log/Xorg.0.log |grep "X.Org X Server"
X.Org X Server 1.20.11
```

Rockchip's corresponding modifications can be confirmed using the following method:

```
root@linaro-alip:~# cat /var/log/Xorg.0.log |grep xorg-server
[ 26.786] xorg-server f805fe554 modesetting: Filter out invalid format
modifiers (https://www.debian.org/support)
```

## 5.25 Weston

Weston is a reference implementation based on the Wayland protocol, an open-source display server. The modifications based on the official version are as follows:

- Dynamic screen state management (resolution, rotation, power on/off, freeze, position)
- Configurable mouse size, native mouse is too small on high-resolution screens
- Desktop icons
- Efficient VNC screen sharing
- Mirror mode
- Support for user-level virtual VT
- Support for cropped screens
- Boot animation

Precompiled packages are as follows:

```
weston/
|— libweston-10-0_10.0.1-1_arm64.deb
|— libweston-10-0-dbgsym_10.0.1-1_arm64.deb
|— libweston-10-dev_10.0.1-1_arm64.deb
|— weston_10.0.1-1_arm64.deb
└— weston-dbgsym_10.0.1-1_arm64.deb
```

## 5.26 Wayland

Wayland is a new open-source display protocol that offers an advanced alternative to the traditional X Window System (widely known as X11). Based on the latest official version, we have implemented key functional enhancements, including support for wayland-egl and the addition of socket wait functionality in Wayland clients.

Precompiled packages are as follows:

```
wayland
├─ libwayland-bin_1.21.0-1_arm64.deb
├─ libwayland-client0_1.21.0-1_arm64.deb
├─ libwayland-cursor0_1.21.0-1_arm64.deb
├─ libwayland-dev_1.21.0-1_arm64.deb
├─ libwayland-egl1_1.21.0-1_arm64.deb
├─ libwayland-egl-backend-dev_1.21.0-1_arm64.deb
└─ libwayland-server0_1.21.0-1_arm64.deb
```

## 6. Basic Skills for Debian Development

### 6.1 Restructuring Debian Packages

[Debian Third-Party Packages](#) modification and repackaging steps are as follows:

- `apt-get build-dep <pkg> ## Install build dependencies`
- `apt source <pkg> ## Download the source code of package <pkg>`
- Create git and apply patches
- `dpkg-buildpackage -b -uc -us -d ## Repackage and compile`

For example: Changing the Xserver package, modify and repack the deb, the method is as follows

**Note to confirm that** `/etc/apt/sources.list` **has deb-src enabled, and also update the source with** `apt update`

```
- Install build dependencies
`apt-get build-dep xorg-server-source`

- Download Xorg-xserver source code
`apt source xorg-server-source`

- Create git and apply patches
$ cd xorg-server_*
$ git init && git add .
$ git commit -s "xxxxx"

- Start compiling and packaging deb
dpkg-buildpackage -b -uc -us -d
```

### 6.2 Debian Docker Construction

Supports building Docker compilation-related source code through a PC environment and packaging it into deb for easy integration into the system.

For specific reference, see

`<SDK>/docs/en/Linux/Docker/Rockchip_Developer_Guide_Debian_Docker_EN.pdf`

## 6.3 Debian Partition Management

The Debian system supports partition handling such as check, resize, and mount rootfs/oem/userdata at boot time.

A service related to `resize-all.service` is added to the system, supporting the resize function for partitions of various formats.

The system service is located at `/lib/systemd/system/resize-all.service` and the main executable files are `/usr/bin/resize-helper` and `/usr/bin/disk-helper`.

The debugging log is in `/var/log/resize-all.log`, for example:

```
root@linaro-alip:~# cat /var/log/resize-all.log
Start resizing all internal mounted partitions
Log saved to /var/log/resize-all.log
[19]: Handling /dev/sda8 /userdata ext4 rw,relatime,stripe=128
[18]: Handling /dev/sda7 /oem ext4 rw,relatime
[0]: Handling /dev/sda6 / ext4 rw,relatime
[19]: Already resized /dev/sda8(ext4)
[18]: Already resized /dev/sda7(ext4)
[0]: Already resized /dev/sda6(ext4)
```

Regarding partition mounting, the normal Kernel cmdline `root=PARTUUID=614e0000-0000` will be mounted on the root directory by rootfs, and oem/userdata is written in `/etc/fstab` where systemd will handle the mounting during startup.

```
root@linaro-alip:/# cat /etc/fstab
/* <file system> <mount point> <type> <options> <dump> <pass> */
proc /proc proc defaults 0 0
devtmpfs /dev devtmpfs defaults 0 0
devpts /dev/pts devpts mode=0620,ptmxmode=0666,gid=5 0 0
tmpfs /dev/shm tmpfs nosuid,nodev,noexec 0 0
sysfs /sys sysfs defaults 0 0
debugfs /sys/kernel/debug debugfs defaults 0 0
pstore /sys/fs/pstore pstore defaults 0 0
PARTLABEL=oem /oem ext4 defaults 0 2
PARTLABEL=userdata /userdata ext4 defaults 0 2
```

File system: Device name or UUID, or the path of a network file system (NFS).

Mount point: The mount point of the file system, such as / or /mnt/mydrive.

File system type: Such as ext4, ntfs, swap, etc.

Mount options: Options used when mounting, such as defaults, ro (read-only), noatime, etc. Multiple options are separated by commas.

dump: This field is used for the dump command, usually set to 0, indicating no backup is needed.

pass: This field is used for the fsck command, the number indicates the order of fsck checking. The root file system is usually 1, other file systems are 2, set to 0 means no check.

## 6.4 Debian Graphical Adaptation Solutions

Currently, the display architecture primarily supports X11 and Wayland, with the main combinations being as follows:

- Default adaptation combination for X11 systems:

```
xfce4/lxde + xserver + lightdm
```

- Default adaptation combination for WAYLAND systems:

```
Weston+Wayland or gnome + Wayland + gdm3
```

### 6.4.1 Display Architecture Adaptation Plan

- The current pairing of X11/Xserver is with lightweight desktop environments like LXDE/XFCE, and the desktop manager uses lightdm.
- GNOME, as a mainstream desktop environment, primarily works in conjunction with the WAYLAND display server protocol and is configured through the gdm3 desktop manager. To test WAYLAND-related demonstration programs, one can switch to the Weston desktop environment, which is the same as the desktop system built through Buildroot or Yocto in the SDK.

### 6.4.2 Window Management Adaptation Solutions

- Openbox

The Openbox project is a fast, lightweight, and highly extensible window manager that fully complies with standards. The Openbox 3 series is a completely new window manager that does not inherit any code from previous similar software, although it still looks similar to Blackbox (the code of Openbox 2 series is based on Blackbox 0.65.0). Openbox can be used as a standalone operating environment, and it can also be used as a window manager to replace the default window manager of desktop environments like KDE and Gnome.

- KWin

KWin is a [window manager](#) in the [X Window](#) system. It is part of the [KDesktop Environment \(KDE\)](#), although it can be used standalone or with other desktop environments. In KDE 4, KWin added support for compositing mode and [OpenGL](#).

- Xfwm

Xfwm4 is the native window manager of Xfce4. It uses a simple and flexible pixel-based theme engine that uses images in the .xpm format. Xfwm4 also uses a text file to configure other options. Additionally, you can choose gtk theme colors.

### 6.4.3 Desktop Environment Adaptation Plan

- GNOME



GNOME 3, as the new version of GNOME, has significant changes compared to GNOME 2.x. GNOME 3 is relatively intuitive, and you can click on "Activities" in the upper left corner or swipe to view applications, workspace partitions, etc.

Currently, distribution versions such as Debian use GNOME 3 as the default desktop environment.

- KDE

KDE has a Windows-like "Start Menu" with a gorgeous interface. Many distribution versions, such as OpenSUSE, PCLinuxOS, and Mandriva, use KDE as the default desktop environment.

- XFCE

It consumes fewer resources than GNOME and KDE. Suitable for lightweight desktops. Similar to the Windows interface environment.

- LXDE

LXDE is also one of the four major desktop environments, a lightweight desktop that consumes fewer resources.

## 6.4.4 Chromium Adaptation Solution

The Chromium browser supports a variety of video formats, including H264, VP8, VP9, AV1, etc. Starting from version 105, it has added support for the H265 video format. Currently, in the Debian system, support for Chromium video hardware decoding has been integrated, achieved through a customized version of Chromium, V4L2 plugin, and MPP efficient hardware decoding.

The main modifications in the customized Chromium are as follows:

- Modify Chromium to enable v4l2 vda support, as well as related patches
- Add v4l2 mpp plugin

The drawbacks are:

- a. Decoding only supports vp8, h264, h265, vp9, av1
- b. Encoding only supports vp8 and h264
- c. Requires modification of the compilation of Chromium (complete compilation process through Yocto)

We currently provide Chromium Wayland patches, which support systems such as Yocto and Buildroot.

The general process involves enabling V4L2 VDA/VEA in Chromium, creating a virtual v4l2 node at boot, and Chromium's operations on the virtual device being intercepted by v4l-utils to the v4l-rkmpp plugin, converting it into a call to the mpp interface.

### 6.4.4.1 Version

```
root@linaro-alip:~# chromium --version
Chromium 126.0.6478.126 stable
```

### 6.4.4.2 How to Test

Use the following command to perform the test:

```
chromium --no-sandbox file:///usr/local/test.mp4
```

The specific test script is located at `/rockchip-test/chromium/test_chromium_with_video.sh`

```
root@linaro-alip:~# /rockchip-test/chromium/test_chromium_with_video.sh
mpp[3048]: mpp_info: mpp version: 48962a10 author: Hongjin Li    2024-09-19
fix[avsd]: Fix attach dev error issue
[ 73.431901] rk_vcodec: 27b00100.rkvdec:0 session 3129:1 time: 2893 us hw 2681
us
[ 73.434160] rk_vcodec: 27b00100.rkvdec:0 session 3129:1 time: 2169 us hw 1935
us
[ 73.437078] rk_vcodec: 27b00100.rkvdec:0 session 3129:1 time: 1500 us hw 1400
us
[ 73.440013] rk_vcodec: 27b00100.rkvdec:0 session 3129:1 time: 1526 us hw 1497
us
[ 73.441579] rk_vcodec: 27b00100.rkvdec:0 session 3129:1 time: 1345 us hw 1314
us
...
```

Linux4.19/5.10/6.1+ can check whether hardware decoding is invoked with the following command:

```
export mpp_syslog_perror=1
echo 0x100 > /sys/module/rk_vcodec/parameters/mpp_dev_debug
```

Linux4.4 can check whether hardware decoding is invoked with the following command:

```
export mpp_syslog_perror=1
echo 0x4 > /sys/module/rk_vcodec/parameters/debug
```

#### 6.4.4.3 How to Debug

If you encounter some issues, turn on the following switches to get more logs for debugging.

```
export mpi_debug=1
export mpp_debug=1
export h264d_debug=1
```

You can actually check the GPU utilization rate to determine whether hardware acceleration is being used:

```
cat /sys/devices/platform/*gpu/utilisation
```

If acceleration or hardware decoding is not being used, you need to analyze the reasons in detail, such as GPU-related issues, libv4l adaptation problems, or some other permission-related issues.

For example, create related device nodes in `/etc/init.d/rockchip.sh`

```

/* Create dummy video node for chromium V4L2 VDA/VEA with rkmpv plugin */
echo dec > /dev/video-dec0
echo enc > /dev/video-enc0
chmod 660 /dev/video-*
chown root.video /dev/video-*

/* The chromium using fixed pathes for libv4l2.so */
ln -rsf /usr/lib/*/libv4l2.so /usr/lib/
[ -e /usr/lib/aarch64-linux-gnu/ ] && ln -Tsf lib /usr/lib64

```

Also, handle the permissions of related kernel nodes in `/etc/udev/rules.d/99-rockchip-permissions.rules`, such as below:

```

ACTION=="remove", GOTO="permissions_end"

/* VPU devices */
KERNEL=="avsd", MODE="0660", GROUP="video"
KERNEL=="vepu", MODE="0660", GROUP="video"
KERNEL=="h265e", MODE="0660", GROUP="video"
KERNEL=="rkvddec", MODE="0660", GROUP="video"
KERNEL=="rkvinc", MODE="0660", GROUP="video"
KERNEL=="mpp_service", MODE="0660", GROUP="video"
KERNEL=="vpu[_]service", MODE="0660", GROUP="video"
KERNEL=="hevc[_]service", MODE="0660", GROUP="video"

/* RGA device */
KERNEL=="rga", MODE="0660", GROUP="video"

/* MALI devices (/dev/mali for mali400) */
KERNEL=="mali*", MODE="0660", GROUP="video"

```

#### 6.4.4.4 Performance Testing

By default, the display uses GPU acceleration mode, and the general process of video hardware decoding is that Chromium enables V4L2 VDA/VEA. Upon booting, a virtual V4L2 node is created, and Chromium's operations on the virtual device are intercepted by v4l-utils to the v4l-rkmpv plugin, which is then converted into a call to the mpp interface. Common web page testing browsers include the following:

- [ARES-6](#)

ARES-6 measures the execution time of the latest JavaScript features, and browsers that start quickly and run smoothly have an advantage.

- [Basemark Web 3.0](#)

Basemark Web 3.0 is a comprehensive web browser performance benchmark that tests your browser's ability to run web applications, measuring real-world client performance to detect browser bottlenecks.

- [JetStream 2](#)

JetStream 2 is a JavaScript and WebAssembly benchmark suite focused on the most advanced web applications. Browsers that start quickly, execute code rapidly, and run smoothly score higher.

- [MotionMark 1.2](#)

MotionMark is a graphics benchmark that measures a browser's ability to animate complex scenes at target frame rates.

- [Octane](#)

Octane is an early general JavaScript performance benchmark that has been deprecated. It can indeed measure the performance of the JS engine, but it does not accurately reflect the optimization of the JS engine for modern web applications. Optimizations made for Octane often lack impact on real-world web pages, and in some cases, these optimizations can slow down real-world websites.

- [Speedometer 2.1](#)

Speedometer is a browser benchmark that measures the responsiveness of web applications. It uses demo web applications to simulate user actions, such as adding to-do items. Compared to Octane, Speedometer more accurately reflects the optimization of the JS engine for modern web applications.

#### 6.4.4.5 Additional Information Acquisition

For more Chromium information, you can enter `chrome://about` in the URL.

```
List of Chrome URLs
chrome://about
...
chrome://flags
chrome://gcm-internals
chrome://gpu
chrome://help
chrome://histograms
chrome://history
chrome://indexeddb-internals
chrome://inspect
chrome://interstitials
chrome://invalidations
chrome://settings
chrome://version
chrome://webrtc-internals
chrome://webrtc-logs
List of chrome://internals pages
chrome://internals/web-app
```

For Debug

The following pages are for debugging purposes only. Because they crash or hang the renderer, they're not linked directly; you can type them into the address bar if you need them.

```
chrome://badcastcrash/
chrome://memory-exhaust/
chrome://memory-pressure-critical/
chrome://memory-pressure-moderate/
...
chrome://quit/
chrome://restart/
```

## 6.4.5 Debian Panfrost Adaptation Scheme

Refer to the official Debian [Panfrost Adaptation](#)

## 6.5 Debian Audio-Video Adaptation Solution

Introduction to the general video encoding and decoding process on the Rockchip platform

```
vpu_service --> mpp --> GStreamer/rockit --> app
vpu_service: Driver
mpp: The video encoding and decoding middleware on the Rockchip platform, refer
to the mpp documentation for details
GStreamer/rockit: Interface with app and other components
```

Currently, on the Debian system, GStreamer is mainly used to interface with app and encoding/decoding components.

Encoding and decoding functions can also be tested directly through the mpp provided test interfaces (such as `mpi_dec_test\mpi_enc_test...`)

mpp source code reference `<SDK>/external/mpp/`

Test demo reference: `<SDK>/external/mpp/test`

Refer to the specific SDK documentation `Rockchip_Developer_Guide_MPP_CN.pdf`

### 6.5.1 Audio Pulseaudio Path Adaptation

By default, audio uses pulseaudio, and it is typically sufficient to configure `/etc/pulse/default.pa`.

Currently, the SDK supports adaptation for ES8388 and RK809 codecs.

```
+set-default-source alsa_input.platform-es8388-
sound.HiFi__hw_rockchipes8388__source
+set-default-sink alsa_output.platform-es8388-sound.HiFi__hw_rockchipes8388__sink
+set-default-source alsa_input.platform-rk809-
sound.HiFi__hw_rockchiprk809__source
+set-default-sink alsa_output.platform-rk809-sound.HiFi__hw_rockchiprk809__sink
```

If you need to add support for more codecs, obtain relevant information through the following commands:

```
pactl list sinks short
pactl list sources short
```

For more detailed information, refer to the Debian official [PulseAudio](#) and

`<SDK>/docs/Common/AUDIO/Rockchip_Developer_Guide_PulseAudio_EN.pdf`.

### 6.5.2 MPP and VPU Adaptation

By default, MPP is precompiled into deb and integrated in

```
/usr/lib/aarch64-linux-gnu/librockchip_mpp.so
/usr/lib/aarch64-linux-gnu/librockchip_mpp.so.0
/usr/lib/aarch64-linux-gnu/librockchip_mpp.so.1
```

Also ensure that the kernel has `/dev/mpp_service` related nodes.

For specific reference, see `<SDK>/docs/Linux/Multimedia/Rockchip_Developer_Guide_MPP_EN.pdf`

### 6.5.3 GStreamer Adaptation

For specific reference, see

`<SDK>/docs/Linux/Multimedia/Rockchip_User_Guide_Linux_Gstreamer_EN.pdf`

### 6.5.4 Rockit Adaptation

Refer to `<SDK>/docs/Linux/Multimedia/Rockchip_User_Guide_Linux_Rockit_EN.pdf`

## 6.6 Debian Network Adaptation Solution

### 6.6.1 RKWIFIBT Adaptation

Refer to `<SDK>/docs/Linux/Wifibt/Rockchip_Developer_Guide_Linux_WIFI_BT_EN.pdf`

## 6.7 Debian Webcam Adaptation Solution

The default system's webcam application is cheese, which calls `GStreamer->mpp->vpu` to achieve the encoding and decoding implementation on the Rockchip platform. If cheese is not needed, GStreamer is also integrated to directly call the USB camera and adapt to the Rockchip's 3A effects for the MIPI/CSI camera. For example, the test script is as follows:

```
/rockchip-test$ tree -L 1 camera/
camera/
├─ camera_rkaiq_test.sh
├─ camera_rkisp_test.sh
├─ camera_stresstest.sh
├─ camera_test.sh
└─ camera_usb_test.sh
```

### 6.7.1 Cheese Adaptation

Cheese is a camera application used under the Debian system, offering some interesting features such as applying real-time effects, taking photos, and recording videos. Cheese supports almost all common types of cameras, including built-in and USB cameras.

Here are some features of Cheese:

- Real-time effects: Cheese allows you to apply real-time effects when taking photos or recording videos. These effects include black and white, comic, fisheye, oil painting, etc.
- Taking photos and recording videos: Cheese allows you to use the camera to take photos and record videos, and supports various different resolutions and video formats.
- Automatic saving: Cheese can automatically save the photos you take and the videos you record. You can also manually select the save location and file name.
- Video preview: Cheese provides real-time video preview, making it convenient for you to preview the effect before shooting.
- Compatibility: Cheese supports almost all common types of cameras, including built-in and USB cameras.

To adapt the cheese app, address the following related issues encountered.

#### 6.7.1.1 Cheese Unable to Acquire Valid Device Node

Cheese defaults to searching for valid devices with names related to video\*, and the actual device name information for Rockchip ISP is as follows (including rkisp\_mainpath, rkisp\_selfpath, etc.).

```
root@rk3568:~# grep ' ' /sys/class/video4linux/video*/name
/sys/class/video4linux/video0/name:rkisp_mainpath
/sys/class/video4linux/video1/name:rkisp_selfpath
/sys/class/video4linux/video2/name:rkisp_rawwr0
/sys/class/video4linux/video3/name:rkisp_rawwr2
/sys/class/video4linux/video4/name:rkisp_rawwr3
/sys/class/video4linux/video5/name:rkisp_rawrd0_m
/sys/class/video4linux/video6/name:rkisp_rawrd2_s
/sys/class/video4linux/video7/name:rkisp-statistics
/sys/class/video4linux/video8/name:rkisp-input-param
```

Currently resolved by filtering through the GStreamer v4l2 plugin.

Set the relevant environment variables in `/etc/profile.d/gst.sh`:

```
# Default device for v4l2src
export GST_V4L2SRC_DEFAULT_DEVICE=/dev/video-camera0

# Available RK devices for v4l2src
export GST_V4L2SRC_RK_DEVICES=_mainpath_selfpath:_bypass:_scale
```

#### 6.7.1.2 Frame Loss Issue with High-Resolution Camera in Cheese

When Cheese opens the imx415, the mipi sensor experiences frame loss, exhibiting the following phenomena:

```
root@linaro-alip:/# cheese -d rkisp_mainpath

[ 488.510646] rkisp0-vir0: MIPI drop frame
[ 488.544222] rkisp0-vir0: MIPI drop frame
[ 488.577718] rkisp0-vir0: MIPI drop frame
[ 488.611408] rkisp0-vir0: MIPI drop frame
[ 488.644975] rkisp0-vir0: MIPI drop frame
[ 488.678581] rkisp0-vir0: MIPI drop frame

Output      rkisp_mainpath Format:UYVY Size:4672x3504
```

The size obtained from the device is 4672x3504, which exceeds the range supported by our hardware.

Currently, the maximum output of ISP's mp is limited to 3840x2160 through the Gstreamer v4l2 plugin.

Set the relevant environment variables in `/etc/profile.d/gst.sh`:

```
# Max resolution for v4l2src
export GST_V4L2SRC_MAX_RESOLUTION=3840x2160
```

### 6.7.1.3 Format Exceptions in Cheese Acquisition

Some formats may not be supported in the ISP driver, for instance, although the kernel ISP driver reports support for certain formats, there may still be some formats that are not supported.

For example:

```
root@linaro-alip:~# v4l2-ctl --list-formats-ext -d /dev/video8
ioctl: VIDIOC_ENUM_FMT
    Type: Video Capture Multiplanar

    [0]: 'UYVY' (UYVY 4:2:2)
        Size: Stepwise 32x16 - 4672x3504 with step 8/8
    [1]: '422P' (Planar YUV 4:2:2)
        Size: Stepwise 32x16 - 4672x3504 with step 8/8
    [2]: 'NV16' (Y/CbCr 4:2:2)
        Size: Stepwise 32x16 - 4672x3504 with step 8/8
    ...
```

Currently, formats such as NV12 and NV16 are tested and found to be normal, but the I420 format displays content abnormally, and there may be many unsupported formats. Early Windows applications often prioritize RGB formats, and if the ISP driver reports support for RGB formats but actually does not, it will cause many applications to malfunction.

Solution: Currently, preferred formats are selected through Gstreamer v4l2 environment variables.

Set the relevant environment variables in `/etc/profile.d/gst.sh`:

```
# Preferred formats for videoconvert
export GST_VIDEO_CONVERT_PREFERRED_FORMAT=NV12:NV16:I420:YUY2
```

### 6.7.1.4 Cheese Recording Freeze Issue

In Cheese, the hard-coded software vp8enc is used, but it can cause native pulseaudio to malfunction and freeze.

Solution: Currently, support for software vp8enc encoding is added through GStreamer and pulseaudio is updated.

Set the relevant environment variables in `/etc/profile.d/gst.sh`:

```
export GST_MPP_VP8ENC_FAKE_VP8ENC=1
```



### 6.7.1.5 Using mpp for Cheese Video Recording Encoding

Cheese defaults to using the vvp8enc software encoder, which has poor performance. The default modification is as follows:

Force the use of the mppvp8enc hardware encoding in Rockchip mpp.

```
--- a/libcheese/cheese-camera.c
+++ b/libcheese/cheese-camera.c
@@ -442,7 +442,7 @@ cheese_camera_set_video_recording (CheeseCamera *camera,
GError **error)
    gboolean res;
    /* Check if we can use global preset for vp8enc. */
-   video_enc = gst_element_factory_make ("vp8enc", "vp8enc");
+   video_enc = gst_element_factory_make ("mppvp8enc", "vp8enc");
    video_preset = (gchar *) &CHEESE_VIDEO_ENC_PRESET;
    res = gst_preset_load_preset (GST_PRESET (video_enc), video_preset);
```

You can confirm this way:

```
root@linaro-alip:/# gst-inspect-1.0 |grep vp8
vpx:  vp8dec: On2 VP8 Decoder
vpx:  vp8enc: On2 VP8 Encoder
rtp:  rtpvp8depay: RTP VP8 depayloader
rtp:  rtpvp8pay: RTP VP8 payloader
rockchipmpp:  mppvp8enc: Rockchip Mpp VP8 Encoder
```

Below is the encoding support status for Rockchip chips.

- **Encoding Capability Specification Table**

Chip Name	H264	H265	VP8
RK3588	7680x4320@30f	7680x4320@30f	1920x1088@30f
RK3566/RK3568	1920x1088@60f	1920x1088@60f	N/A
RK3562	1920x1088@60f	N/A	N/A
RK3399	1920x1088@30f	N/A	1920x1088@30f
RK3328	1920x1088@30f	1920x1088@30f	1920x1088@30f
RK3288	1920x1088@30f	N/A	1920x1088@30f
RK3326	1920x1088@30f	N/A	1920x1088@30f
PX30	1920x1088@30f	N/A	1920x1088@30f
RK312X	1920x1088@30f	N/A	1920x1088@30f

### 6.7.1.6 How to Change the Storage Path for Cheese Images and Videos

The default storage path for images or videos is in the directory `~/.gnome2/cheese`. If you need to change the path, follow these steps to change it:

```
cat << EOF > ~/.config/user-dirs.dirs
> #!/bin/bash
> XDG_DESKTOP_DIR="$HOME/Desktop"
> XDG_DOWNLOAD_DIR="$HOME/Downloads"
> XDG_TEMPLATES_DIR="$HOME/Templates"
> XDG_PUBLICSHARE_DIR="$HOME/Public"
> XDG_DOCUMENTS_DIR="$HOME/Documents"
> XDG_MUSIC_DIR="$HOME/Music"
> XDG_PICTURES_DIR="$HOME/Pictures"
> XDG_VIDEOS_DIR="$HOME/Videos"
> EOF
```

Where `XDG_VIDEOS_DIR` is the video path, and `XDG_PICTURES_DIR` is the image path.

## 6.7.2 RKISP Adaptation

Supports ISP1.X mainly applicable to chips such as RK3399/RK3288/PX30/RK3326

```
rkisp/
└─ camera_engine_rkisp-v2.2.0_arm64.deb
```

## 6.7.3 RKAIQ Adaptation

Supports different versions of ISP21/30/32-Lite, mainly applicable to RK3566/RK3568/RK3588/RK3562 and other chips

```
rkaiq/
├─ camera_engine_rkaiq_rk3562_arm64.deb
├─ camera_engine_rkaiq_rk3568_arm64.deb
└─ camera_engine_rkaiq_rk3588_arm64.deb
```

### 6.7.3.1 RKAIQ Debugging

- Confirm the rkaiq version and related logs

```

root@linaro-alip:/# cat /var/log/syslog |grep rkaiq
...
Jun 18 17:37:50 linaro-alip rkaiq: ***** VERSION INFOS
*****
Jun 18 17:37:50 linaro-alip rkaiq: version release date: 2023-10-07
Jun 18 17:37:50 linaro-alip rkaiq:          AIQ:          AIQ v5.0x4.0
Jun 18 17:37:50 linaro-alip rkaiq:      IQ_PARSER:      Calib
v1.4.8,magicCode:1170944
Jun 18 17:37:50 linaro-alip rkaiq: ***** VERSION INFOS END
*****

```

- Check if the rkaiq service is running

```

root@linaro-alip:/# ps aux |grep rkaiq
root    2339  0.0  0.4 163020 8076 ?        Sl  17:37   0:00 /usr/bin/rkaiq_3A_server
root    2340  0.0  0.0  8508 1240 ?        S   17:37   0:00 logger -t rkaiq
root    2699  0.0  0.0  6264  604 ttyFIQ0 S+   17:42   0:00 grep rkaiq

```

- Kernel ISP Debugging Log

```

echo 3 > /sys/module/video_rkisp/parameters/debug
echo 3 > /sys/module/video_rkcif/parameters/debug

```

- rkaiq Debugging Log

AE Module Log:

```
echo 0x1ff4 > /tmp/.rkaiq_log
```

AWB Module Log:

```
echo 0x2ff4 > /tmp/.rkaiq_log
```

AF Module Log:

```
echo 0x4ff4 > /tmp/.rkaiq_log
```

HDR Module Log:

```
echo 0x20ff3 > /tmp/.rkaiq_log
```

NR Module Log:

```
echo 0x40ff4 > /tmp/.rkaiq_log
```

Dehaze Log:

```
echo 0x2000ff3 > /tmp/.rkaiq_log
```

Sharp Log:

```
echo 0x80000ff4 > /tmp/.rkaiq_log
```

CAMHW Log:

```
echo 0x400000ff4 > /tmp/.rkaiq_log
```

- Check Device Node Information

```

root@linaro-alip:/# grep '' /sys/class/video4linux/video*/name
/sys/class/video4linux/video0/name:stream_cif_mipi_id0
/sys/class/video4linux/video1/name:stream_cif_mipi_id1
/sys/class/video4linux/video2/name:stream_cif_mipi_id2
/sys/class/video4linux/video3/name:stream_cif_mipi_id3
/sys/class/video4linux/video4/name:rkcif_scale_ch0
/sys/class/video4linux/video5/name:rkcif_scale_ch1
/sys/class/video4linux/video6/name:rkcif_scale_ch2
/sys/class/video4linux/video7/name:rkcif_scale_ch3
/sys/class/video4linux/video8/name:rkcif_tools_id0
/sys/class/video4linux/video9/name:rkcif_tools_id1
/sys/class/video4linux/video10/name:rkcif_tools_id2
...

```

## 6.8 Debian Power Management Adaptation Solution

### 6.8.1 Power Management Adaptation

Power management on Debian is quite complex, with different systems having multiple standby paths, such as: the power-key.sh button standby we added (pm-utils or directly writing nodes), pm-utils command standby (writing nodes after executing hook scripts).

Automatic standby in power management of desktop systems like xfce4, mate, gnome, etc., is generally prioritized with systemd, followed by consolekit or pm-utils systemd (directly writing nodes). Here, we uniformly prioritize letting systemd default to using pm-utils to implement the standby and wake-up process.

Debian's `overlay/etc/Powermanager` has integrated related configuration files by default.

```

├─ 01npu
├─ 02npu
├─ 03wifibt
├─ 04wifibt
├─ power-key.conf
├─ power-key.sh
├─ triggerhappy
└─ triggerhappy.service

```

You can check that `etc/init.d/rockchip.sh` has some special processing for power management. Especially for the NPU and RKWIFIBT parts, and also add power button processing.

```

# support power management
if [ -e "/usr/sbin/pm-suspend" -a -e /etc/Powermanager ] ;
then
    mv /etc/Powermanager/power-key.sh /usr/bin/
    mv /etc/Powermanager/power-key.conf /etc/triggerhappy/triggers.d/
    if [[ "$CHIPNAME" == "rk3399pro" ]];
    then
        mv /etc/Powermanager/01npu /usr/lib/pm-utils/sleep.d/
        mv /etc/Powermanager/02npu /lib/systemd/system-sleep/
    fi
    mv /etc/Powermanager/03wifibt /usr/lib/pm-utils/sleep.d/
    mv /etc/Powermanager/04wifibt /lib/systemd/system-sleep/
    mv /etc/Powermanager/triggerhappy /etc/init.d/triggerhappy

```

```
rm /etc/Powermanager -rf
service triggerhappy restart
fi
```

If there are other special modules that need wake-up processing, they can be placed in the following two configuration directories.

```
/usr/lib/pm-utils/sleep.d/ and /lib/systemd/system-sleep/
```

For standby and wake-up testing, refer to [/rockchip-test/suspend\\_resume/suspend\\_resume.sh](#).

For specific handling of sleep and wake-up related to other chips, you can refer to the development document [<SDK>/docs/en/Common/TRUST/Rockchip\\_RK3588\\_Developer\\_Guide\\_System\\_Suspend\\_EN.pdf](#).

## 6.8.2 Power Management Configuration

This section primarily discusses the power management configuration of xfce4, mainly involving DPMS and sleep standby-related configurations. The specific configuration is described as follows:

```
#!/etc/xdg/xfce4/xfconf/xfce-perchannel-xml/xfce4-power-manager.xml

<channel name="xfce4-power-manager" version="1.0">
  <property name="xfce4-power-manager" type="empty">
    <!-- Let other power manager(e.g. trigger-happy) handle power key -->
    <property name="power-button-action" type="uint" value="0"/>

    <!-- Disable DPMS(auto screen-off) by default -->
    <property name="dpms-enabled" type="bool" value="false"/>
    <property name="blank-on-ac" type="int" value="0"/>

    <!-- Disable Screen lock by default -->
    <property name="lock-screen-suspend-hibernate" type="bool" value="false"/>
  </property>
</channel>
```

## 6.9 Debian AI Adaptation Plan

Rockchip platform NPU-related adaptation, RKNPU mainly used for model conversion, model inference, model performance evaluation functions, etc.

### 6.9.1 RKNPU Adaptation

Primarily used for chips such as RK3568/RK3566/RK3588

```
rknpu2/
└─ rknpu2.tar
```

## 6.9.2 RKNN Testing

Primarily includes NPU frequency scaling/stress/demo-related testing

```
/rockchip-test/npu2/  
├─ npu_freq_scaling.sh  
├─ npu_stress_test.sh  
├─ npu_test.sh  
├─ rknn_demo.sh  
└─ rknn_stress_test
```

## 6.10 Debian Firmware Upgrade Solution

Debian firmware upgrade methods are primarily as follows:

- USB upgrade
- SD card or USB flash drive boot upgrade
- Burner upgrade
- OTA upgrade

Among them, OTA upgrades are divided into Recovery upgrades (including Loader, Parameter, other partitions, customer-defined partitions), A/B partition upgrades, and differential upgrades.

For details, refer to

```
<SDK>/docs/en/Linux/Recovery/Rockchip_Developer_Guide_Linux_Upgrade_EN.pdf
```

## 6.11 Debian Secure Boot Solution

### 6.11.1 Secure Boot

Secure Boot is primarily divided into AVB and FIT methods, with the following support for each chip:

Chip Name	Kernel Verification Method	Kernel Version	Storage Medium
RK3399/RK3288	AVB	4.4	eFuse
RK3308/RK3328/RK3326/PX30/RK3358	AVB	4.4	OTP
RK3588/RK3562/RK3566/RK3568	FIT	5.10	OTP

For details, refer to

```
<SDK>/docs/en/Linux/Security/Rockchip_Developer_Guide_Linux_Secure_Boot_EN.pdf
```

## 6.12 Debian Touch Adaptation Solution

X server configuration needs to be set up, configure the maxrix-related parameters or test with command line to see

## 6.13 Debian USB Device Adaptation Solution

Currently, support for services related to usbdevice has been added to support functions such as usb adb/acm/hid/mtp/ntb/rndis/uac1/uac2/ums/uv.

The system service is located at `/lib/systemd/system/usbdevice.service`, with the main executable being `/usr/bin/usbdevice`.

USB-related functions can be configured through `/etc/profile.d/usbdevice.sh`, for example:

```
#!/bin/sh

# The env variables below can be overridden

# option: adb acm hid mtp ntb rndis uac1 uac2 ums uv
export USB_FUNCS="adb"

export UMS_FILE=/userdata/ums_shared.img
export UMS_SIZE=256M
export UMS_FSTYPE=vfat
export UMS_MOUNT=0
export UMS_MOUNTPOINT=/mnt/ums
export UMS_RO=0
```

Debugging logs are located at `/tmp/usbdevice.log`, and the supported USB functions can be checked through the configuration file `/tmp/.usbdevice`.

## 6.14 Debian Sensor Adaptation Solution

gsensor/lensor..

- Install the lm-sensors package

```
sudo apt-get install lm-sensors
```

- Detect sensors on the system

```
sudo sensors-detect
```

This will scan your system for sensors and prompt you to enable support for each type of sensor. Follow the prompts to enable support for the sensors you wish to use.

- Test the installation

```
sensors
```

## 6.15 Debian System Information

### 6.15.1 Specific Debian Version Number

```
root@linaro-alip:~# cat /etc/debian_version
11.8
```

### 6.15.2 Debian Version Information

```
root@linaro-alip:~# cat /etc/os-release
PRETTY_NAME="Debian GNU/Linux 11 (bullseye)"
NAME="Debian GNU/Linux"
VERSION_ID="11"
VERSION="11 (bullseye)"
VERSION_CODENAME=bullseye
ID=debian
HOME_URL="https://www.debian.org/"
SUPPORT_URL="https://www.debian.org/support"
BUG_REPORT_URL="https://bugs.debian.org/"
BUILD_INFO="root@pc April 27, 2022 Wednesday 11:49:33 CST"
```

### 6.15.3 Hardware Information of Debian System

```
root@linaro-alip:~# hardinfo -r
Computer
Summary
Operating System
Kernel Modules
Boots
Languages
Filesystems
Display
Environment Variables
Development
Users
Groups
...
```

### 6.15.4 Debian System Log Information

```
/info/
└─ clk_summary -> /sys/kernel/debug/clk/clk_summary
└─ cmdline -> /proc/cmdline
└─ cpuinfo -> /proc/cpuinfo
└─ device-tree -> /proc/device-tree
└─ diskstats -> /proc/diskstats
└─ dma_buf -> /sys/kernel/debug/dma_buf
└─ dri -> /sys/kernel/debug/dri
```



```

└─ fstab -> /etc/fstab
└─ gpio -> /sys/kernel/debug/gpio
└─ interrupts -> /proc/interrupts
└─ iomem -> /proc/iomem
└─ kallsyms -> /proc/kallsyms
└─ log -> /var/log
└─ meminfo -> /proc/meminfo
└─ mountall.log -> /tmp/mountall.log
└─ os-release -> /etc/os-release
└─ partitions -> /proc/partitions
└─ pinctrl -> /sys/kernel/debug/pinctrl/
└─ rkcif-mipi-lvds -> /proc/rkcif-mipi-lvds
└─ rk_dmacbuf -> /proc/rk_dmacbuf
└─ rkisp0-vir0 -> /proc/rkisp0-vir0
└─ slabinfo -> /proc/slabinfo
└─ softirqs -> /proc/softirqs
└─ version -> /proc/version
└─ wakeup_sources -> /sys/kernel/debug/wakeup_sources

...

```

## 6.16 Debian Trimming

The Debian distribution requires increasingly more disk space with the addition of new features in each version. Here, we focus on some component trimming for the desktop version on the Rockchip arm platform.

To trim the firmware, you can cut:

- Base firmware packages, such as

```

debian/ubuntu-build-service/bullseye-desktop-arm64/customization/package-
lists/linaro.list.chroot

```

- Newly added packages in the rockchip shell script

```

mk-rootfs-buster.sh

```

Additionally, the following can be removed from the firmware:

- The mesa libgl1-mesa-dri package, in /usr/lib/\*/dri/, only retain kms\_swrast\_dri.so and swrast\_dri.so, as others are not used.
- The linux-firmware package (if present), in /usr/lib/firmware, only retain the firmware you use (customers generally do not need it).
- packages, only retain the x11 mali packages corresponding to your chip.
- var/cache

Furthermore, when creating the image, you can also adjust the size of the dd image file inside mk-image.sh, for example:

```

truncate -s 2500M rootfs.img
mkfs.ext4 -d binary rootfs.img

```

The main system space usage is as follows:

```

root@pc:/# du -sh */
120M    bin/
22M boot/
12K dev/
10M etc/
20K home/
1.6G    lib/
4.0K    media/
4.0K    mnt/
4.0K    opt/
4.0K    proc/
36M rockchip-test/
28K root/
44K run/
26M sbin/
4.0K    srv/
4.0K    sys/
18M system/
4.0K    tmp/
1.3G    usr/
73M var/
8.0K    vendor/

```

You can also view the space occupied by installed packages in the system in the following way:

```

dpkg-query -Wf '${Installed-size}K\t${Package}\t${Status}\n' | grep -w installed
| column -t|sort -h

```

## 6.17 Debian Testing

- Integration of Rockchip Stress Testing Script

The `rockchip_test` integrates functionality, stress, and performance-related tests.

```

root@linaro-alip:~# /rockchip-test/rockchip_test.sh

cpu test:                1 (cpufreq stresstest)
ddr test:                 2 (memtester & stressapptest)
gpu test:                 3 (use glmark2)
npu test:                 4 (npu2:rk3588)
auto reboot test:        5 (reboot tests)
suspend_resume test:     6 (suspend & resume)
nand power lost test:    7 (S5 stress tests)
flash stress test:       8 (flash tests)
audio test:              9 (audio tests)
recovery test:           10 (default wipe all)
bluetooth test:          11 (bluetooth on&off test)
wifi test:               12 (wifi on&off test)
ethernet test:           13 (ethernet tests)
camera test:             14 (use rkaiq_demo)
video test:              15 (use gstreamer-wayland and app_demo)
chromium test:           16 (chromium with video hardware acceleration)
hardware information:    17 (to get the hardware information)

```

```

*****

```

```
please input your test module:
```

## 6.18 Debugging Tools for Debian

### 6.18.1 ADB Tools

#### 6.18.1.1 Overview of ADB

- Running the device's shell (command line)
- Managing port mapping for emulators or devices
- Uploading/Downloading files between the computer and the device
- Installing local software on Debian devices
- ADB is a "client-server" program, where the client mainly refers to the PC, and the server is the physical machine or virtual machine of the Debian device. Depending on how the PC connects to the Debian device, ADB can be divided into two categories:  
Network ADB: The host connects to the STB device via wired/wireless network (same local area network)  
USB ADB: The host connects to the STB device via a USB cable

#### 6.18.1.2 USB ADB Usage Instructions

Limitations of USB ADB usage include:

- Only supports USB OTG ports
- Does not support multiple clients using simultaneously
- Only supports host connection to one device, does not support connection to multiple devices

Connection steps are as follows:

To test if the connection is successful, run the "adb devices" command. If the machine's serial number is displayed, it indicates a successful connection.

### 6.18.2 Analyzing Boot Performance with systemd-analyze

`systemd-analyze` is a tool for analyzing boot performance, used to analyze the time consumed by services during startup.

- Display the time consumed by each initialization step

```
root@linaro-alip:/# systemd-analyze time
Startup finished in 1.523s (kernel) + 3.833s (userspace) = 5.357s
graphical.target reached after 3.810s in userspace
```

- List the initialization time of all units

```
root@linaro-alip:/# systemd-analyze blame

1.680s rkwwifibt.service
1.368s keyboard-setup.service
1.148s console-setup.service
588ms bluelan-mechanism.service
557ms dev-mmcb1k0p6.device
```

```

495ms usbdevice.service
319ms udisks2.service
287ms resize-all.service
283ms systemd-udev-trigger.service
246ms systemd-journal-flush.service
203ms user@0.service
198ms user@1000.service
196ms NetworkManager.service
185ms nginx.service
185ms systemd-rfkill.service
184ms systemd-journald.service
...

```

### 6.18.3 Performance Tuning Tool

Performance tuning tool `perf`, usage introduction is as follows:

```
apt install -fy linux-perf-5.10
```

```
root@linaro-alip:/# perf
```

```
usage: perf [--version] [--help] [OPTIONS] COMMAND [ARGS]
```

The most commonly used perf commands are:

annotate	Read perf.data (created by perf record) and display annotated code
archive	Create archive with object files with build-ids found in perf.data file
bench	General framework for benchmark suites
buildid-cache	Manage build-id cache.
buildid-list	List the buildids in a perf.data file
c2c	Shared Data C2C/HITM Analyzer.
config	Get and set variables in a configuration file.
data	Data file related processing
diff	Read perf.data files and display the differential profile
evlist	List the event names in a perf.data file
ftrace	simple wrapper for kernel's ftrace functionality
inject	Filter to augment the events stream with additional information
kallsyms	Searches running kernel for symbols
kmem	Tool to trace/measure kernel memory properties
kvm	Tool to trace/measure kvm guest os
list	List all symbolic event types
lock	Analyze lock events
mem	Profile memory accesses
record	Run a command and record its profile into perf.data
report	Read perf.data (created by perf record) and display the profile
sched	Tool to trace/measure scheduler properties (latencies)
script	Read perf.data (created by perf record) and display trace output
stat	Run a command and gather performance counter statistics
test	Runs sanity tests.
timechart	Tool to visualize total system behavior during a workload
top	System profiling tool.

version	display the version of perf binary
probe	Define new dynamic tracepoints
trace	strace inspired tool

## 7. Debian Security Updates

Debian Security Updates reference as follows:

[Debian-security](#)

Additionally, you can use APT to conveniently obtain the latest security updates. To ensure your Debian operating system receives the latest security updates, please add the following line to your

`/etc/apt/sources.list` file:

```
deb http://security.debian.org/debian-security bookworm-security main contrib  
non-free non-free-firmware
```

After saving the changes, please execute the following two commands to download and install security updates:

```
apt-get update && apt-get upgrade
```

If you find a security issue in your packages or someone else's packages, please contact the security team via the email address `team@security.debian.org`. They track existing security issues, can help maintainers resolve security issues or fix them themselves, and are responsible for sending security advisories and maintaining `security.debian.org`.

### Latest Alerts

The following page is a brief archive of security alerts published on the `debian-security-announce` mailing list.

```
[2023/08/07] DSA-5471-1 libhtmlcleaner-java security update  
[2023/08/06] DSA-5470-1 python-werkzeug security update  
[2023/08/05] DSA-5469-1 thunderbird security update  
[2023/08/05] DSA-5468-1 webkit2gtk security update  
[2023/08/04] DSA-5467-1 chromium security update  
[2023/08/04] DSA-5466-1 ntpsec security update  
[2023/08/03] DSA-5465-1 python-django security update  
[2023/08/03] DSA-5464-1 firefox-esr security update  
[2023/07/30] DSA-5463-1 thunderbird security update  
[2023/07/30] DSA-5462-1 linux security update  
[2023/07/30] DSA-5461-1 linux security update  
[2023/07/26] DSA-5460-1 curl security update  
[2023/07/25] DSA-5459-1 amd64-microcode security update  
[2023/07/25] DSA-5458-1 openjdk-17 security update  
[2023/07/22] DSA-5457-1 webkit2gtk security update  
[2023/07/20] DSA-5456-1 chromium security update  
[2023/07/17] DSA-5455-1 iperf3 security update  
[2023/07/16] DSA-5454-1 kanboard security update  
[2023/07/16] DSA-5453-1 linux security update  
[2023/07/14] DSA-5452-1 gpac security update  
[2023/07/09] DSA-5451-1 thunderbird security update
```

## 8. Debian Roadmap

Currently, the official Debian versions supported by RK range from stretch (9) to bookworm (12), with the main maintenance focus on bullseye (11).

Version	Debian Released	SDK Released	EOL LTS
Stretch (9)	2017-06-17	2018-06-20	2022-07-01
Buster (10)	2019-07-06	2020-12-11	2024-06-30
Bullseye (11)	2021-08-14	2022-01-15	~ 2026
Bookworm (12)	2023-06-10	2023 Q4	~ 2028

Debian LTS versions are updated every two years.

For specific reference, please consult the official Debian release information:

[Debian-Release](#)

## 9. Debian FAQ

This section primarily addresses common questions about Debian GNU/Linux on the Rockchip platform, with other references available in the official [Debian FAQ](#).

### 9.1 Encountering "noexec or nodev" Issues

```
noexec or nodev issue /usr/share/debootstrap/functions: line 1450:
.../rootfs/ubuntu-build-service/buster-desktop-arm64/chroot/test-dev-null:
Permission denied E: Cannot install into target '/rootfs/ubuntu-build-
service/buster-desktop-arm64/chroot' mounted with noexec or nodev
```

Resolution:

```
mount -o remount,exec,dev xxx
(Where xxx is the project directory path, then recompile)
```

Additionally, if encountering other compilation exceptions, first rule out the use of a file system type that is ext2/ext4.

### 9.2 Issues with Downloading "Base Debian"

- Due to the need to access foreign websites to compile Base Debian, and the frequent download failures when accessing foreign websites from within China:

Debian uses live build, and the mirror source can be changed to domestic as follows:

32-bit system:

```
+++ b/ubuntu-build-service/{buster/bullseye}-desktop-armhf/configure
@@ -11,6 +11,11 @@ set -e
echo "I: create configuration"
export LB_BOOTSTRAP_INCLUDE="apt-transport-https gnupg"
lb config + --mirror-bootstrap "http://mirrors.ustc.edu.cn/debian" + --mirror-
chroot "http://mirrors.ustc.edu.cn/debian" + --mirror-chroot-security
"http://mirrors.ustc.edu.cn/debian-security" + --mirror-binary
"http://mirrors.ustc.edu.cn/debian" + --mirror-binary-security
"http://mirrors.ustc.edu.cn/debian-security" --apt-indices false --apt-
recommends false --apt-secure false 64-bit system:
--- a/ubuntu-build-service/{buster/bullseye}-desktop-arm64/configure
+++ b/ubuntu-build-service/{buster/bullseye}-desktop-arm64/configure
@@ -11,6 +11,11 @@ set -e
echo "I: create configuration"
export LB_BOOTSTRAP_INCLUDE="apt-transport-https gnupg"
lb config + --mirror-bootstrap "http://mirrors.ustc.edu.cn/debian" + --mirror-
chroot "http://mirrors.ustc.edu.cn/debian" + --mirror-chroot-security
"http://mirrors.ustc.edu.cn/debian-security" + --mirror-binary
"http://mirrors.ustc.edu.cn/debian" + --mirror-binary-security
"http://mirrors.ustc.edu.cn/debian-security" --apt-indices false --apt-
recommends false --apt-secure false ``
```

If other network issues prevent package downloads, there are pre-compiled packages shared on [Baidu Cloud Disk] (<https://eyun.baidu.com/s/3bqwrvo7>). Place them in the current directory and proceed to the next step directly.

### Error Mounting /dev Due to Abnormal Operations

For instance, encountering an issue like "askpass command or cannot use one"

The cause might be frequent abnormal operations during the compilation process (CTRL+C), leading to the error mentioned above. It can be fixed by the following method:

**sudo -S umount /dev**

### Issues with Multiple Mounts Causing Errors in /dev

For instance, encountering an error like `sudo: unable to allocate pty: No such device`.

The cause might be due to multiple mounts during the compilation process, leading to the error mentioned above. It can be fixed by following these steps:

**ssh @<IP\_address> -T sudo -S umount /dev -l**

```
### How to View System Information
```

```
#### How to check the Debian version of the system
```

```
root@linaro-alip:~# cat /etc/debian_version
11.1
```

```
#### How to Check if Debian is Using X11 or Wayland
```

```
On an X11 system:
```

```
$ echo $XDG_SESSION_TYPE
x11
```

```
On a Wayland system:
```

```
$ echo $XDG_SESSION_TYPE
wayland
```

```
#### How to Check System Partition Status
```

```
root@linaro-alip:~# parted -l
```

```
Model: MMC BJTD4R (sd/mmc)
```

```
Disk /dev/mmcblk0: 31.3GB
```

```
Sector size (logical/physical): 512B/512B
```

```
Partition Table: gpt
```

```
Disk Flags:
```

Number	Start	End	Size	File system	Name	Flags
1	8389kB	12.6MB	4194kB		uboot	
2	12.6MB	16.8MB	4194kB		misc	
3	16.8MB	83.9MB	67.1MB		boot	
4	83.9MB	218MB	134MB		recovery	
5	218MB	252MB	33.6MB		backup	
6	252MB	15.3GB	15.0GB	ext4	rootfs	
7	15.3GB	15.4GB	134MB	ext2	oem	
8	15.6GB	31.3GB	15.6GB	ext2	userdata	

```
#### SSH Service Exception
```

```
This is an issue existing in Debian10 or earlier versions. Add the following to
/etc/rc.local:
```



```

```shell

/*
rc.local

This script is executed at the end of each multiuser runlevel.
Make sure that the script will "exit 0" on success or any other
value on error.

In order to enable or disable this script just change the execution
bits.

By default this script does nothing.
Generate the SSH keys if non-existent
*/
if [ ! -f /etc/ssh/ssh_host_rsa_key ]
then
    /* else ssh service start in dpkg-reconfigure will fail */
    systemctl stop ssh.socket||true
    dpkg-reconfigure openssh-server
fi

exit 0

```

## 9.3 Debian11 Base Package Compilation Failure

Encountering errors similar to the following:

```

W: Failure trying to run: /sbin/ldconfig
W: See //debootstrap/debootstrap.log for details

```

The main requirement is that the PC's kernel version must be 5.10+, which is a bug present in older versions of QEMU. There are two main solutions:

- The PC's kernel version must meet the requirement of 5.10+.

Check the PC kernel version

```

cat /proc/version
Linux version 5.13.0-39-generic

```

- Update the system's QEMU

Refer to [QEMU](#).

## 9.4 Method for Extracting, Modifying, and Re-packaging Debian deb Packages

If you wish to modify and repackage an existing deb package, follow these steps:

```
# Extract the package files into the extract directory
dpkg -X xxx.deb extract/

# Extract the package control information into extract/DEBIAN/
dpkg -e xxx.deb extract/DEBIAN/

# Modify the file XXX

# Repackage the modified content to generate a deb package
dpkg-deb -b extract/ .
```

## 9.5 How to Add a Swap Partition in Debian

When the system's physical memory is insufficient, you can increase the swap virtual memory partition in Debian for use by currently running programs. For example, create a 2G virtual memory.

- Create a swap file

```
cd /opt
mkdir swap
dd if=/dev/zero of=swapfile bs=1024 count=2000000
# count represents the size, which is 2G here.
```

- Convert the file to a swap file

```
sudo mkswap swapfile
```

- Activate the swap file

```
swapon /opt/swapfile

To deactivate:
swapoff /opt/swapfile
```

To mount it automatically after booting, you can add it to the `/etc/fstab` file  
eg: `/opt/swapfile swap swap defaults 0 0`

- Verify if it takes effect

```
root@linaro-alip:/opt# free -h
```

	total	used	free	shared	buff/cache	available
Memory:	1.9Gi	390Mi	91Mi	75Mi	1.5Gi	1.4Gi
Swap:	1.9Gi	0B	1.9Gi			

## 9.6 First System Update on Debian May Trigger Display Service Restart

General Debian, for compatibility with various chips, will install various differential packages such as libmali isp when /etc/init.d/rockchip.sh is executed for the first time, based on the chip. After the installation, the display service will be restarted. For standalone projects, this difference can be handled during the image-making process.

## 9.7 Issues with libGL-related dri.so Invocation in Debian

Explanation is as follows:

- EGL is an extension of OpenGL for the ARM platform targeting the x window system, functionally equivalent to the glx library on x86.
- Since Xorg uses the Driver modesetting, which by default loads libglx.so (disabling glx can cause some applications that detect the glx environment to fail to start), libglx.so searches for dri implementation libraries in the system. However, Xorg 2D acceleration is directly based on DRM and does not implement the dri library, so during startup, libglx.so will report the following error.

```
AIGLX error: dlopen of /usr/lib/aarch64-linux-gnu/dri/rockchip_dri.so failed
```

This has no impact on system operation and does not need to be processed.

For the same reason, some applications may report the following errors during startup, which do not need to be processed and will not affect the operation of the application.

```
libGL error: unable to load driver: rockchip_dri.so
libGL error: driver pointer missing
libGL error: failed to load driver: rockchip
```

## 9.8 How to Confirm Hardware Mouse Layer is Active in Debian

- Kernel dts configuration is set up

Logs similar to the following:

```
root@linaro-alip:~# dmesg |grep cursor
[ 2.062561] rockchip-vop2 fe040000.vop: [drm:vop2_bind] Cluster1-win0 as
cursor plane for vp0
[ 2.062669] rockchip-vop2 fe040000.vop: [drm:vop2_bind] Cluster0-win0 as
cursor plane for vp1
```

- modetest to check if the layer is reported

```

102      0      0      0,0      0,0      0      0x00000002
  formats: XR30 AR30 XB30 AB30 XR24 AR24 XB24 AB24 RG24 BG24 RG16 BG16 YU08 YU10
YUYV Y210
  props:
    8 type:
      flags: immutable enum
      enums: Overlay=0 Primary=1 Cursor=2
      value: 2

```

- Check if the summary calls the hardware mouse layer

```
root@linaro-alip:~# cat /sys/kernel/debug/dri/0/summary |grep 64 x 64
```

If steps 1/2 are both present, and if there are still issues, then check `/var/log/drm-cursor.log` for any abnormalities.

## 9.9 Log Size Issues in Debian

Debian provides **logrotate** specifically for managing log files. Logrotate is designed to simplify the management of log files for systems that generate many log files. Logrotate supports automatic rotation, compression, deletion, and sending of log-related emails. Logrotate can be set to run daily, weekly, monthly, or when the size of the log file reaches a certain value. Typically, logrotate is set up as a daily cron job.

```
apt install -fy logrotate cron
```

## 9.10 Issues with Multi-User Target Setup in Debian

Upon system startup, the `systemd` process attempts to initiate `/lib/systemd/system/default.target` (typically a symbolic link to "graphical.target" for graphical interface systems). You can obtain the status with the following command:

```
systemctl get-default
graphical.target
```

Set up multi-user mode (command-line system)

```
systemctl set-default multi-user.target
```

After rebooting, the interface is found to be stuck on the logo, unable to enter the system.

The normal system startup sequence is `sysinit->multi-user->graphic`. If set to `multi-user.target`, it means the graphical interface has not started. At this point, VT2 (terminal interaction needs to be enabled), which means the kernel needs to enable the following two macros:

```

CONFIG_FRAMEBUFFER_CONSOLE=y
CONFIG_VT=y

### Debian Username and Password

```

The default username and password for the system are `linaro` and `linaro`, respectively.  
The `root` account can be logged into without a password, and you can switch to it via the command line with `sudo su`.

### ### Debian XFCE Desktop Icon Double-Click Exception

The XFCE desktop has a native bug that can be bypassed by checking `Settings--->Desktop--->Icons` and selecting `Single-click to activate items`.

### ### Chromium Browser Will Have Command-Line Flag: --no-sandbox

Unless using non-hardware acceleration, the official native browser version. Otherwise, custom browser versions need to be started with the `-no-sandbox` parameter, because sandbox is permission management, controlling file access, without sandbox to allow access to hardware nodes, to achieve hard acceleration.

### ### Setting up DRI2 Extension Support in Debian System X11

The glmark2-es2 in the SDK and the Mali GPU library send display through the dri2 interface.

For specific implementation details, you can refer to the relevant code of the xserver:

```
./hw/xfree86/drivers/modesetting/dri2.c  
ms_dri2_get_msc  
ms_dri2_schedule_wait_msc
```

You can confirm whether DRI2 is supported by Xserver through the following log:

```
root@linaro-alip:/# grep -i dri2 /var/log/Xorg.0.log  
[ 47.696] (II) modeset(0): [DRI2] Setup complete  
[ 47.699] (II) modeset(0): [DRI2] DRI driver: Rockchip  
[ 47.712] (II) modeset(0): [DRI2] VDPAU driver: Rockchip  
[ 48.502] (II) Initializing extension DRI2
```

Below is a test code snippet for DRI2 named dri2-test.c

```
```c  
  
#include <stdlib.h>  
#include <stdio.h>  
#include <xcb/xcb.h>  
#include <xcb/dri2.h>  
#include <X11/Xlib.h>  
#include <X11/Xlib-xcb.h>  
  
int main(void)  
{  
    xcb_connection_t *c;  
    xcb_dri2_connect_cookie_t cookie;  
    xcb_dri2_connect_reply_t *reply;  
    Display *display = XOpenDisplay(NULL);  
    Window window = DefaultRootWindow(display);  
    c = XGetXCBConnection(display);
```

```

        cookie = xcb_dri2_connect(c, window, XCB_DRI2_DRIVER_TYPE_DRI);
        reply = xcb_dri2_connect_reply(c, cookie, 0);
        printf("%s[%d] device(%s)\n", __func__, __LINE__,
xcb_dri2_connect_device_name (reply));
        c = xcb_connect(NULL, NULL);
        xcb_screen_t *screen = xcb_setup_roots_iterator(xcb_get_setup(c)).data;
        cookie = xcb_dri2_connect(c, screen->root, XCB_DRI2_DRIVER_TYPE_DRI);
        reply = xcb_dri2_connect_reply(c, cookie, 0);
        printf("%s[%d] device(%s)\n", __func__, __LINE__,
xcb_dri2_connect_device_name (reply));
        return 0;
    }

```

Compile and test:

```

$ gcc dri2-test.c -lxcb -lxcb-dri2 -lX11 -lX11-xcb -o dri2-test
$ ./dri2-test
main[21] device(/dev/dri/card0)
main[27] device(/dev/dri/card0)

```

## 9.11 Installing GCC Toolchain on Debian

Run the following commands to install:

```
apt update && apt install -y build-essential manpages-dev
```

After installation, confirm the GCC version:

```

root@linaro-alip:/# gcc -v
Using built-in specs.
COLLECT_GCC=gcc
COLLECT_LTO_WRAPPER=/usr/lib/gcc/aarch64-linux-gnu/10/lto-wrapper
Target: aarch64-linux-gnu
Configured with: ../src/configure -v --with-pkgversion='Debian 10.2.1-6' --with-
bugurl=file:///usr/share/doc/gcc-10/README.Bugs --enable-
languages=c,ada,c++,go,d,fortranx
Thread model: posix
Supported LTO compression algorithms: zlib zstd
gcc version 10.2.1 20210110 (Debian 10.2.1-6)

```

## 9.12 Debian Installation of Packages without Auto-Completion

This is a common operation for Linux systems, where all major Linux distributions require the manual installation of the bash-completion package.

For specific operations, please search on Baidu for details, which generally include:

```
sudo apt-get install bash-completion
source /etc/bash_completion
```

## 9.13 Supporting DRI3 Extension in Debian X11 System

The DRI3 extension is part of X11 and provides improved support for direct rendering. In Debian systems, DRI3 is typically enabled by default. As it is a low-level protocol, it is not usually executed directly without external calls.

To use the DRI3 extension in applications, you need to refer to the relevant documentation of DRI3 and write code to call the corresponding interfaces. For example, you can use the DRI3 interfaces provided by the XCB (X protocol C-language Binding) library. Below are the steps on how to install and view these interfaces in the Debian system:

- **Install XCB DRI3 Development Library**

Use the following command to install the libxcb-dri3 development library:

```
sudo apt-get install libxcb-dri3-dev
```

This will install the necessary libraries and header files so that you can use DRI3-related features in your applications.

- **View DRI3 Interfaces**

To view the definition and available functions of the DRI3 interface, you can check the `dri3.h` header file:

```
vi /usr/include/xcb/dri3.h
```

This file contains the specific implementation of the DRI3 interface, which can help you understand how to use the DRI3 extension in your applications.

By following these steps, you can start to leverage the DRI3 extension in the Debian system to develop or improve your graphics applications. Remember to refer to the official documentation of XCB and DRI3 when writing applications to ensure correct and efficient use of these interfaces.

## 9.14 How to Set Up the System to Boot into Command Line Mode

General approach is:

- Uninstall xserver
- Enable `CONFIG_FRAMEBUFFER_CONSOLE`, `CONFIG_DRM_FBDEV_EMULATION`, `CONFIG_VT`, `CONFIG_VT_CONSOLE` in the kernel

## 9.15 How to Configure Screen Rotation

Refer to `/etc/X11/xorg.conf.d/20-modesetting.conf`

```
...
Section "Screen"
    Identifier "Default Screen"
    Device     "Rockchip Graphics"
    Monitor    "Default Monitor"
    DefaultDepth 24
    SubSection "Display"
        Depth 24
        Modes  "1024x600"
    EndSubSection
EndSection

### Valid values for rotation are "normal", "left", "right"
Section "Monitor"
    Identifier "HDMI-A-1"
    Option     "Rotate" "inverted"
    Option     "Position" "0x0"
EndSection
Section "Monitor"
    Identifier "DSI-1"
    Option     "Rotate" "left"
    Option     "Position" "0x0"
EndSection
```

## 9.16 Implementing Non-Black Screen Feature in Debian

Black screen occurs from the startup of the X service to the display of desktop applications (time-consuming within the desktop application itself).

If you wish to maintain the logo during this time, you can add it in the following manner:

Before executing `Xorg.wrap` in `/usr/bin/X`, add:

```
export XSERVER_FREEZE_DISPLAY=/.freeze_xserver
touch $XSERVER_FREEZE_DISPLAY
$(sleep 6; rm $XSERVER_FREEZE_DISPLAY) &
```

Freeze for 6 seconds, then display the desktop. The duration of the freeze can be reasonably changed according to specific product requirements.



```
{
    export XSERVER_FREEZE_DISPLAY=./freeze_xserver
    touch $XSERVER_FREEZE_DISPLAY
    while sleep .5; do
        pgrep panel && break # Wait for the status bar service
    done
    sleep 2 # Wait for the status bar to be drawn
    rm $XSERVER_FREEZE_DISPLAY
}&
```

## 9.17 How to Remove Desktop Mouse Pointer Display on Debian System

The native mechanism is designed this way, primarily to accommodate applications that do not support touch, as the Xserver will forcibly convert the first touch event into a mouse event.

If you wish to bypass this, you can try the following three methods:

- Use a transparent mouse theme (for specifics, please search online)
- Modify the source code of hw/xfree86/drivers/modesetting/drmmode\_display.c, remove the calls to `drmModeSetCursor` and `drmModeMoveCursor`
- If the SDK includes the `drm-cursor` library, modify `/etc/drm-cursor.conf`, add `hide=1`

## 9.18 Steps for Compiling and Porting rkaiq/rkisp Repository in Debian

How to correctly port the rkaiq/rkisp functionality, which is normally debugged in Buildroot, to Debian?

### 9.18.1 Overview of Steps

For instance, the RK3588 chip can switch to use a lower version of GCC and GLIBC to generate a port to a third-party system.

Step One: Modify Buildroot configuration to support GCC 8

```
```diff
```

```
diff --git a/configs/rockchip/chips/rk3588.config b/configs/rockchip/chips/rk3588.config
index f806813a6e..affb5e71ad 100644
--- a/configs/rockchip/chips/rk3588.config
+++ b/configs/rockchip/chips/rk3588.config
@@ -1,4 +1,4 @@
-BR2_cortex_a76_a55=y
+BR2_cortex_a72_a53=y
BR2_PACKAGE_RK3588=y
BR2_ROOTFS_OVERLAY+="board/rockchip/rk3588/fs-overlay/"
BR2_TARGET_GENERIC_HOSTNAME="rk3588"
diff --git a/package/gcc/Config.in.host b/package/gcc/Config.in.host
index 7556e1ece6..c917823f57 100644
```

```
--- a/package/gcc/Config.in.host
+++ b/package/gcc/Config.in.host
@@ -17,7 +17,6 @@ config BR2_GCC_VERSION_ARC
config BR2_GCC_VERSION_8_X
    bool "gcc 8.x"

    • depends on !BR2_ARCH_NEEDS_GCC_AT_LEAST_9
```

## ARC HS48 rel 31 only supported by gcc arc fork.

---

```
depends on !BR2_archs4x_rel31
select BR2_TOOLCHAIN_GCC_AT_LEAST_8
```

Step Two: Set Buildroot configuration to use GCC 8 and GLIBC 2.28 by default for compilation.

```
buildroot#cat configs/rockchip_rk3588_glibc2.28_defconfig
```

```
#include "../rockchip_rk3588_defconfig"
BR2_GCC_VERSION_8_X=y
BR2_PACKAGE_GLIBC_2_28=y
```

Step Three: Use Buildroot to compile with the corresponding configuration.

Set up the Buildroot environment and compile the camera-engine-rkaiq module.

```
```shell

<SDK>#source buildroot/envsetup.sh rockchip_rk3588_glibc2.28
<SDK>## cd buildroot
buildroot# make camera-engine-rkaiq
```

After compilation, port the generated files (e.g., `output/rockchip_rk3588_glibc2.28/build/camera-engine-rkaiq-1.0/camera-engine-rkaiq-1.0.tar`) to the Debian system.

## 9.19 How to Download Offline Deb Packages in Debian

```
root@linaro-alip:/# apt-get download <package name>
```

## 9.20 How to Check the Version of glibc in Debian

```
root@linaro-alip:/# ldd --version
ldd (Debian GLIBC 2.31-13+deb11u7) 2.31
or
# /lib/libc.so.6
GNU C Library (GNU libc) stable release version 2.35.
```

## 9.21 Debian System Support for Screen Splitting

The customer's screen is a physical split-screen with a resolution of 3840x2160 split into 3840x720. The underlying output resolution must be 3840x2160 to light up the screen, but the lit screen only displays the 720 part, with another 1440 resolution at the bottom that the mouse can scroll into but does not display.

The latest xserver has added padding support.

Configuration method:

```
+++ b/overlay/etc/X11/xorg.conf.d/20-modesetting.conf
@ -2,6 +2,9 @ Section "Device"
Identifier "Rockchip Graphics"
Driver "modesetting"

+ Option "VirtualSize" "LVDS-1:3840x720"
+ Option "Padding" "LVDS-1:0,1440,0,0"
```

/etc/X11/xorg.conf.d/20-modesetting.conf should be modified according to the above method.

VirtualSize is configured for the resolution that the application wants to see, and Padding is configured according to the order of pixels cut off from top to bottom and left to right.

If the screen text is not clear, the Padding order can be changed to: left right top bottom

Option "VirtualSize" "DSI-1:1920x316"

Option "Padding" "DSI-1:0,0,0,764"

The mouse moves relatively and does not normally require special modifications. If there is a ratio or positional offset, you can try changing to a software mouse (kernel dts configuration to remove the mouse layer, or configure SWcursor in the upper layer modesetting conf).

Search for cursor deletion in kernel dts, similar to:

```
kernel/arch/arm64/boot/dts/rockchip# ag cursor
rk3566-evb2-lp4x-v10-linux.dts
12:      cursor-win-id = <ROCKCHIP_VOP2_CLUSTER0>;
```

Or:

```
--- a/overlay/etc/X11/xorg.conf.d/20-modesetting.conf
+++ b/overlay/etc/X11/xorg.conf.d/20-modesetting.conf
@@ -2,6 +2,8 @@ Section "Device"
     Identifier   "Rockchip Graphics"
     Driver       "modesetting"

+    Option       "SWcursor"          "TRUE"
```

## 9.22 Debian XFCE4 Desktop Lock Screen Feature Ineffective

The XFCE desktop's lock screen feature in the upper right corner requires the installation of the light-locker package.

```
sudo apt install -y light-locker
```

## 9.23 Compiling Debian Issues for Ubuntu 24.04 on PC

If you encounter issues with `/sbin/ldconfig` failing to run, this may be due to improper configuration of the QEMU environment. To resolve this issue, please replace the QEMU executable in the `device/rockchip/common/tools/x86_64/qemu-aarch64-static` directory within the SDK, and then restart your system. Before making the replacement, ensure that you have backed up the relevant files.

Note that as of now, versions of QEMU after V8.1.1 have compatibility issues with the old version of `ldconfig`. For details, see the [official bug report #2072564](#).

# 10. Debian Third-Party Open Source Software and License Information

---

Debian open source information is explained here, refer to the official website [legal](#)

## 11. Debian Reference Materials

---

Refer to the official Debian documentation [debian-docs](#)

Refer to the official stable Debian packages [packages](#)