

1 Overview

This document provides specifications for a *firefly simulator*. This device is intended to simulate the light displays of common fireflies, such as *Photinus pyralis*. The *firefly simulator* will provide means to control the brightness, duration, and other relevant parameters of the simulated light display. Light-emitting diodes (LEDs) will be used as the light source, and the color of the display can be altered by connecting different LED types to the simulator.

The *firefly simulator* can be configured via commands issued to it from a host computer, as shown in Fig. 221. The physical link between the host computer and the *firefly simulator* is an asynchronous serial communications interface, which can be accomplished with a common and inexpensive USB adapter. The *firefly simulator* also can return status information to the host computer via the same interface.

Once configured, the *firefly simulator* can be used in a stand-alone mode, without requiring a connection to a host computer. Pushbuttons on the *firefly simulator* can be used to activate light displays that were previously configured. When in the stand-alone mode, the simulator can be powered by a USB powerbank.

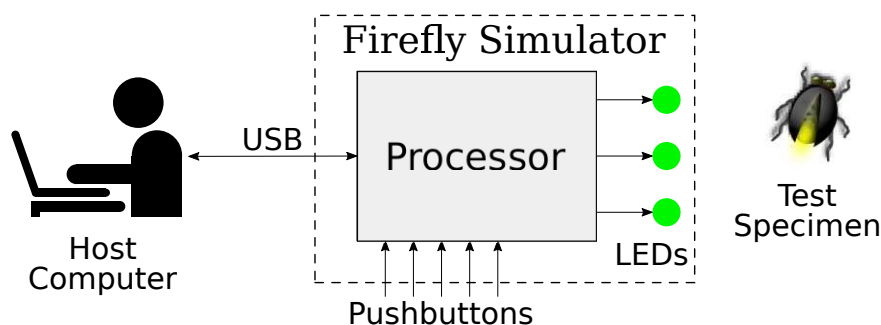


Figure 1: Firefly Simulator Block Diagram

This document describes the minimum required functionality of the *firefly simulator*. Possible future enhancements to the simulator include:

- The ability to sense the behavior of a test specimen and use that behavior to modify the parameters of a light display.
- The ability to record information about simulator activity on non-volatile memory, such as a removable Secure Digital (SD) memory card.
- The addition of a real-time clock (RTC) to the *firefly simulator* so that timestamps can be added to response messages from the simulator to the host computer.


2 References

1. *IEEE Standard for Transitions, Pulses, and Related Waveforms*, IEEE Standard 181, 2011.
2. [*Data elements and interchange formats – Information interchange – Representation of dates and times*, ISO 8601](#)

3 Definitions

abort

A pushbutton input to the *firefly simulator*. Pressing this button causes the simulator to stop any repeated *flashes* or *patterns*, and to bring the *illumination level* to 0% on all *channels*.

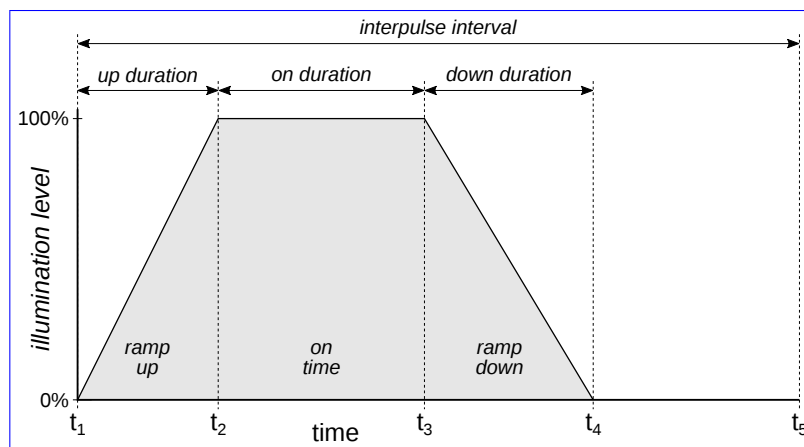Figure 2: *blink* *flash* waveform

ASCII

The American Standard Code for Information Interchange. The letters in the English alphabet, the decimal digits, and common punctuation marks are assigned a unique 7-bit binary code.

~~blink~~—The process of bringing the illumination level of an LED from 0% to 100% then back to 0% illumination. A *blink* consists of a *ramp up*, followed by an *on time*, followed by a *ramp down*. A *blink* begins at t_1 and ends at t_4 , as shown in Fig. ??.

The interval from t_1 to t_2 is the *ramp up*. The interval from t_2 to t_3 is the *on time*. The interval from t_3 to t_4 is the *ramp down*.

~~channel~~

The *channel* of an LED is an integer that specifies which physical output connector of the firefly simulator is connected to the physical LED. The value of *channel* is an integer and shall not be less than 1 and not greater than *max channel*.

Note that the *channel* is not the pin number of any particular microcontroller. An implementation of the firefly simulator must perform the appropriate mapping of an *LED's channel* to an appropriate physical pin on the output device.

down duration The length of the *ramp down* interval. The *down duration* is equal to $t_4 - t_3$, as shown in Fig. 2. The *down duration* shall be a non-negative integer value with units of milliseconds. The value of *down duration* shall not be less than 0 or greater than 32 767.

event An external event that can be recognized by the firefly simulator. Details TBD.

flash The process of bringing the illumination level of an LED from 0% to 100% then back to 0% illumination. A flash consists of a ramp up, followed by an on time, followed by a ramp down. A flash begins at t_1 and ends at t_4 , as shown in Fig. 2. The interval from t_1 to t_2 is the ramp up. The interval from t_2 to t_3 is the on time. The interval from t_3 to t_4 is the ramp down. The interval from t_4 to t_5 is the interpulse interval.

Note the definition of a flash primarily specifies the timing behavior of the flash. The selection of a specific physical LED and its max brightness are part of the definition of an LED.

flash pattern interval The total time duration of a pattern. This interval includes the time of all flashes in the pattern as well as the subsequent time when there are no flashes, as shown in Fig. 3. The flash pattern interval is a parameter of a pattern.

illumination level The brightness of an LED at any given point in time, as a percentage of that LED's max brightness. The illumination level and max brightness values indirectly translate to the average current passing through the physical LED.

At any given point in time, the average current for an LED is

$$I_{AVG} = \frac{\text{illumination level}}{100} \times \frac{\text{max brightness}}{100} \times I_{max}$$

interpulse interval The total time duration of a flash. This interval includes the time when the LED is illuminated as well as the subsequent time when the LED is not illuminated, from t_1 to t_5 in Fig. 2. The interpulse interval is a parameter of a flash.

message A sequence of message fields, separated by the ASCII comma character (decimal 44) and terminated by either the ASCII Line Feed (decimal 10), the ASCII Carriage Return (decimal 13), or both the Line Feed and the Carriage Return. There shall not be a comma before the first field in a message nor after the last field.

message field A sequence of one or more ASCII characters from the set of ~~uppercase~~ letters (A through Z ~~and a through z~~), decimal digits (0 through 9), and the punctuation characters required for a timestamp (colon, minus, plus, period). A message field shall not include ~~any characters or values other than the uppercase letters and decimal digits~~ a comma.

max brightness The maximum duty factor of the pulse-width modulation signal that controls the illumination level of an LED. The max brightness is a characteristic of an LED. The value of max brightness is an integer and shall be not less than 1 and not greater than 100.

max channel The number of physical LED channels available on a particular implementation of a firefly simulator. The value of max channel shall not be less than 1 or greater than 127 for any implementation of a firefly simulator.

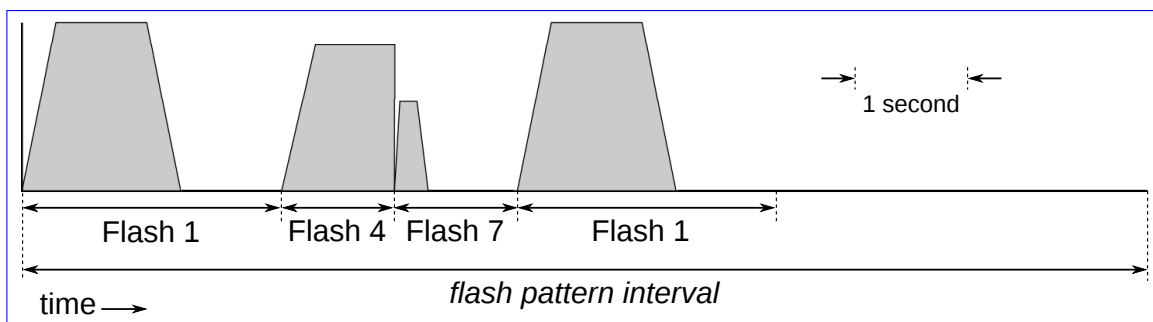


Figure 3: Example pattern timeline(without a wait event)

max <u>blink event</u>	The number of unique <u>blink event</u> configurations available on a particular implementation of a <i>firefly simulator</i> . The value of max <u>blink event</u> shall not be less than <u>0 or greater than 127 for any implementation of a firefly simulator</u> .
<u>max flash</u>	The number of unique <u>flash</u> configurations available on a particular implementation of a <i>firefly simulator</i> . The value of max <u>flash</u> shall not be less than 1 or greater than 127 for any implementation of a <i>firefly simulator</i> .
max <u>LED</u>	The number of unique <u>LED</u> configurations available on a particular implementation of a <i>firefly simulator</i> . The value of max <u>LED</u> shall not be less than 1 or greater than 127 for any implementation of a <i>firefly simulator</i> .
<u>max pattern</u>	The number of unique <u>pattern</u> configurations available on a particular implementation of a <i>firefly simulator</i> . The value of max <u>pattern</u> shall not be less than 1 or greater than 127 for any implementation of a <i>firefly simulator</i> .
on duration	The length of the <i>on time</i> interval. The <i>on duration</i> is equal to $t_3 - t_2$, as shown in Fig. ?? 2. The value of <i>on duration</i> shall be a positive, non-zero integer with units of milliseconds. The value of <i>on duration</i> shall not be less than 1 or greater than 32 767.
on time	The period of time during a <u>blink flash</u> when the <i>LED</i> is constantly at an illumination level of 100%.
pattern	A sequence of up to four <u>16 blinks with user-specified delays before each blink, as shown in Fig. ??</u> , flashes, possibly followed by a period of time where there are no flashes. Note that the definition of a <i>pattern</i> specifies only the sequence of <i>flashes</i> that should occur as well as the total duration of the <i>pattern</i> .
ramp down	The process of linearly decreasing the <i>illumination level</i> of an <i>LED</i> from 100% to 0%.
ramp up	The process of linearly increasing the <i>illumination level</i> of an <i>LED</i> from 0% to 100%.
<u>time stamp</u>	A representation of the current date and time used as <i>message field</i> . The <i>time stamp</i> shall conform to ISO 8601. The format of the <i>time stamp</i> is TBD.
up duration	The length of the <i>ramp up</i> interval. The <i>up duration</i> is equal to $t_2 - t_1$, as shown in Fig. ?? 2. The value of <i>up duration</i> shall be a non-negative integer with units of milliseconds. The value of <i>up duration</i> shall not be less than 0 or greater than 32 767.

4 Resolution and Accuracy

4.1 Brightness

The *firefly simulator* does not directly control the brightness of a physical LED. Instead, the simulator controls the average current provided to the LED. The simulator's configuration messages allow the actual average current (I_{AVG}) of an LED to be specified with a resolution of $\pm 1\%$ of the maximum available current (I_{MAX}). The maximum available current, and the precision which with the current can be specified, will be determined by the circuitry associated with a given physical LED and need not be the same for all LEDs.

4.2 Time

Values that represent time shall have units of milliseconds and a resolution of 1 ms. The accuracy of all pulse durations and time delays generated by the *firefly simulator* over an interpulse interval shall have a maximum error of ± 10 ms. The cumulative timing error over a flash pattern interval shall not exceed 200 ms.

5 Configuration Messages

The *firefly simulator* is configured via a serial communications interface to a host computer. The host computer can set the values of all parameters for *LEDs*, *blinksflashes*, and *patterns*. A unique configuration message format is specified for configuring an *LED*, configuring a *blinkflash*, or configuring a *pattern*.

5.1 *capacity query/capacity response messages*

The *capacity query message* can be used by the host computer to determine the capabilities of a *firefly simulator*.

Table 1: Definition of the *capacity query message*

Field Number	Field Name	Description	Format
1	Header	Unique first character for an <i>capacity query message</i>	This field shall be the uppercase letter 'C'.

The *firefly simulator* will respond to the *capacity query message* by sending a *capacity response message* to the host computer.

Table 2: Definition of the capacity response message

Field Number	Field Name	Description	Format
1	<u>message type</u>	<u>Unique identifier for this message type</u>	<u>This field shall contain the lowercase letter 'c'.</u>
<u>2</u>	<u>time stamp</u>	<u>The current data and time</u>	<u>This field is TBD</u>
<u>3</u>	<u>temperature</u>	<u>The current ambient temperature, in degrees Celsius.</u>	<u>This field shall contain a decimal integer from 0 to 127.</u>
<u>4</u>	<i>max channel</i>	The number of physical LEDs available	This field shall contain a decimal integer from 1 to 127.
2 <u>5</u>	<i>max blinkLED</i>	The number of available blink LED definitions	This field shall contain a decimal integer from 1 to 127.
3 <u>6</u>	<u>max flash</u>	<u>The number of available flash definitions</u>	<u>This field shall contain a decimal integer from 1 to 127.</u>
<u>7</u>	<u>max event</u>	<u>The number of available event definitions</u>	<u>This field shall contain a decimal integer from 1 to 127.</u>
<u>8</u>	<i>max pattern</i>	The number of available <i>pattern</i> definitions	This field shall contain a decimal integer from 1 to 127.

5.2 LED configuration message

An *LED configuration message* is sent from the host computer to the firefly simulator. Every *LED configuration message* shall contain ~~three~~four *message fields*, as shown in Table ~~??~~3.

As an example, the three messages below could be sent by the host computer in order to configure three LEDs. This example assumes that LED 2 uses physical channel 1 and has a max brightness of 100%. LEDs 3 and 5 use the same physical channel (i.e. the same physical LED) but with different levels of max brightness: 87% and 53%, respectively. The LED numbers, channel numbers, and max brightness levels shown here were chosen arbitrarily; the purpose of this example is only to illustrate the syntax of the LED configuration message.

L,2,1,100
L,3,6,87
L,5,6,53

Table 3: Definition of the LED configuration message

Field Number	Field Name	Description	Format
1	Header	Unique first character for an <i>LED configuration message</i>	This field shall be the uppercase letter 'L'.
2	LED channel <u>LED number</u>	A unique identifier for each physical LED <u>LED definition</u>	<u>This field shall contain a decimal integer from 1 to max LED.</u>
<u>3</u>	<u>LED channel</u>	<u>The physical channel associated with this LED</u>	This field shall contain a decimal integer from 1 to max channel.
3 <u>4</u>	<i>max brightness</i>	The maximum brightness level for the LED <u>LED</u>	This field shall contain a decimal integer from 1 to 100.

5.3 ~~blink configuration message~~ flash configuration message

An ~~blink~~ flash configuration message is sent from the host computer to the firefly simulator. This message provides the parameters for a single ~~blink~~ flash of an LED, as shown in Table ~~??~~4.

As an example, the three messages below could be sent by the host computer in order to configure the three flashes shown in Fig. 3. This example assumes that flash 1 uses LED 2, flash 4 uses LED 3, and flash 7 uses LED 5. The flash and LED numbers were chosen arbitrarily; the purpose of this example is only to illustrate the syntax of the flash configuration message.

F, 1, 2, 300, 800, 300, 2300
F, 4, 3, 300, 700, 0, 1000
F, 7, 5, 50, 150, 100, 1100

5.4 *pattern configuration message*

An *pattern configuration message* is sent from the host computer to the firefly simulator. This message provides the parameters for a single *pattern* of one or more ~~blinks~~ flashes, as shown in Table 5. Note that the same ~~blink~~ flash may be repeated within a ~~pattern~~ or up to four different.

A pattern may contain from 1 to 16 flashes. Therefore, field 4 in the ~~blinks~~ pattern configuration message may be ~~combined~~ repeated to define the desired flashes in the pattern. If the *pattern configuration message* specifies fewer than 16 flashes then the unspecified flashes shall have a default flash number of 0 (zero) and will be ignored during execution of the *pattern*.

As an example, the message below could be sent by the host computer in order to configure the *pattern* shown in Fig. 3. This particular pattern was arbitrarily designated as pattern 5. It contains four flashes, but one of the previously defined flashes was repeated. The total duration of this pattern (i.e. the flash pattern interval) is 10 s.

P, 5, 10000, 1, 4, 7, 1

Table 4: Definition of ~~a *blink configuration message*~~the *flash configuration message*

Field Number	Field Name	Description	Format
1	Header	Unique first character for a <i>blink</i> <u><i>flash</i></u> <i>configuration message</i>	This field shall be the uppercase letter ‘B’.
2	<i>blink</i> <u><i>flash</i></u> number	A unique identifier for each <i>blink</i> <u><i>flash</i></u> definition	This field shall contain a decimal integer from 1 to <i>max blink</i> <u><i>max flash</i></u> .
3	LED number	Identifier for the <i>LED</i> to be illuminated in this <i>blink</i> <u><i>flash</i></u>	This field shall contain a decimal integer from 1 to <i>max channel</i> .
4	<i>up duration</i>	The duration of the <i>ramp up</i> in milliseconds	This field shall contain a decimal integer from 0 to 32 767.
5	<i>on duration</i>	The duration of the <i>on time</i> in milliseconds	This field shall contain a decimal integer from 1 to 32 767.
6	<i>down duration</i>	The duration of the <i>ramp down</i> in milliseconds	This field shall contain a decimal integer from 0 to 32 767.
<u>7</u>	<u><i>interpulse interval</i></u>	<u>The duration of the entire <i>flash</i> in milliseconds</u>	<u>This field shall contain a decimal integer from 0 to 32 767.</u>

Table 5: Definition of ~~a~~the *pattern configuration message*

Field Number	Field Name	Description	Format
1	Header	Unique first character for a <i>pattern configuration message</i>	This field shall be the uppercase letter ‘P’.
2	<i>pattern number</i>	A unique identifier for each <i>pattern</i> definition	This field shall be a decimal integer from 1 to <i>max pattern</i> .
3	Delay 1 <u><i>flash</i> <i>pattern interval number</i></u>	The <u>total</u> duration of the delay from the beginning of the pattern to the first <i>blink</i> <u><i>pattern</i></u> , in milliseconds	This field shall contain a decimal integer from 0 to 32767 . <u>32 767</u> .
4	Blink 1 <u><i>flash</i> list</u>	The identifier of the first <i>blink</i> in the pattern This field shall contain a decimal integer from 0 to <i>max blink</i> . A value of 0 causes this blink to be omitted from the pattern. 5 Delay 2 The duration of the delay from the end of the first <i>blink</i> to the beginning of the second <i>blink</i> , in milliseconds This field shall contain a decimal integer from 0 to 32767. 6 Blink 2 The identifier of the second <u>number of a <i>flash</i> to be included in the <i>blink</i></u> <i>in the pattern</i> .	This field shall contain a decimal integer from 0 to <i>max blink</i>. A value of 0 causes this blink to be omitted from the pattern. 7 Wait 1 The identifier of a <i>wait event</i> This field shall be a single decimal digit from ‘0’ to ‘9’. A value of ‘0’ indicates that there is no <i>wait event</i>. 8 Delay 3 The duration of the delay inserted before the beginning of the third <i>blink</i>, in milliseconds This field shall contain a decimal integer from 0 to 32767. 9 Blink 3 The identifier of the third <u>decimal integer from 1 to <i>blink</i></u> <i>in the pattern</i> This field shall contain a decimal integer from 0 to <i>max blink</i>. A value of 0 causes this blink to be omitted from the pattern. <u><i>max flash</i></u> .

6 ~~Command Messages~~

6 Command and Response Messages

The host computer can command the *firefly simulator* to turn on an *LED* at a specified *illumination level*, repeatedly execute a specific ~~*blinkflash*~~, repeatedly execute a specific *pattern*, or ~~execute all~~ repeatedly execute a set of available *patterns* in a pseudorandom order.

Once the *firefly simulator* has received and started executing a command message it will not respond to any messages sent by the host computer. Every command must be terminated by pressing the *abort* button before the *firefly simulator* will respond to messages from the host computer.

6.1 *Execute LED message*

An *Execute LED message* is sent from the host computer to the firefly simulator. This message can be used to turn an LED on ~~or off~~ for testing or calibration purposes. Every *Execute LED message* shall contain three *message fields*, as shown in Table 6.

Table 6: Definition of the *Execute LED message*

Field Number	Field Name	Description	Format
1	Header	Unique first two characters for an <i>Execute LED message</i>	This field shall be the uppercase letters 'XL'.
2	<i>LED channel</i>	A unique identifier for a physical LED	This field shall contain a decimal integer from 1 to <i>max channel</i> .
3	<i>illumination level</i>	Sets a constant value for the <i>illumination level</i> of the <i>LED</i>	This field shall contain a decimal integer from 0 to 100. A value of 100 causes the <i>illumination level</i> of the LED to be set at a constant value of 100% (of the <i>LED's max brightness level</i>). A '0' shall cause the <i>illumination level</i> of the LED to be set at 0% (completely dark).

6.2 ~~*Execute blink message*~~*Execute flash message*

An *Execute ~~blink~~flash message* is sent from the host computer to the firefly simulator. This message can be used to cause the firefly simulator to repeatedly execute a specific ~~*blinksequence*~~. ~~Every~~ flash. Every *Execute ~~blink~~flash message* shall contain ~~three~~ two *message fields*, as shown in Table ~~??~~7.

~~This command can be terminated before the simulator reaches the specified repeat count by TBD.~~

Table 7: Definition of ~~Execute blink message~~the Execute flash message

Field Number	Field Name	Description	Format
1	Header	Unique first two characters for an <i>Execute blinkflash message</i>	This field shall be the uppercase letters ' XB <u>XF</u> '.
2	blink <u>flash</u> number	A unique identifier for a blink <u>flash</u>	This field shall contain a decimal integer from 1 to <i>max blinkflash</i> .
3	Repeat A positive, non-zero integer value specifying the number of times that the <i>blink</i> should be repeated. This field shall a decimal integer from 1 to 32767.		

6.3 *Execute pattern message*

An *Execute pattern message* is sent from the host computer to the firefly simulator. This message can be used to cause the firefly simulator to repeatedly execute a specific *pattern*. Every *Execute pattern message* shall contain ~~three~~two *message fields*, as shown in Table 8.

~~This command can be terminated before the simulator reaches the specified repeat count by TBD.~~

Table 8: Definition of the *Execute pattern message*

Field Number	Field Name	Description	Format
1	Header	Unique first two characters for an <i>Execute pattern message</i>	This field shall be the uppercase letters 'XP'.
2	<i>pattern number</i>	A unique identifier for a <i>pattern</i>	This field shall contain a decimal integer from 1 to <i>max pattern</i> .

The firefly simulator shall respond to the execute pattern message by sending a pattern start message to the host computer, as shown in Table 9. The pattern start message shall be sent when every occurrence of a pattern begins.

Table 9: Definition of the pattern start message

<u>Field Number</u>	<u>Field Name</u>	<u>Description</u>	<u>Format</u>
<u>1</u>	<u>message type</u>	<u>Unique identifier for this message type</u>	<u>This field shall contain the lowercase letter 'p'.</u>
<u>2</u>	<u>time stamp</u>	<u>The current data and time</u>	<u>This field is TBD</u>
3	Repeat <u>temperature</u>	A positive, non-zero integer value specifying the number of times that the <u>The current ambient temperature, in degrees Celsius.</u>	<u>This field shall contain a decimal integer from 0 to 127.</u>
<u>4</u>	pattern should be repeated	<u>The pattern number of the pattern that will be executed.</u>	This field shall <u>contain</u> a decimal integer from 1 to 32767 <u>127</u> .

6.4 *Execute random pattern message*

An *Execute random pattern message* is sent from the host computer to the *firefly simulator*. This message can be used to cause the simulator to pseudo-randomly select and execute patterns from the set of ~~all configured patterns~~. ~~The simulator will continuously execute patterns until TBD~~TBD.

The firefly simulator shall send a pattern start message to the host computer before beginning each pattern.

Table 10: Definition of the *Execute random pattern message*

Field Number	Field Name	Description	Format
1	Header	Unique first two characters for an <i>Execute random pattern message</i>	This field shall be the uppercase letters 'XR'.

6.5 Event response message

The *firefly simulator* shall respond to an *event* by sending an *event response message* to the host computer, as shown in Table 11.

Table 11: Definition of the *event response message*

<u>Field Number</u>	<u>Field Name</u>	<u>Description</u>	<u>Format</u>
<u>1</u>	<u>message type</u>	<u>Unique identifier for this message type</u>	<u>This field shall contain the lowercase letter 'e'.</u>
<u>2</u>	<u>time stamp</u>	<u>The current data and time</u>	<u>This field is TBD</u>
<u>3</u>	<u>temperature</u>	<u>The current ambient temperature, in degrees Celsius.</u>	<u>This field shall contain a decimal integer from 0 to 127.</u>
<u>4</u>	<u>pattern</u>	<u>The <i>event number</i> of the <i>event</i> that occurred.</u>	<u>This field shall contain a decimal integer from 1 to 127.</u>

7 Revision History

From version 1.0 to version 2.0:

- Added ISO 8601 to references
- Added definitions of terms *abort*, *flash pattern interval*, *interpulse interval*, *max event*, *max LED*, *time stamp*
- The term *blink* is replaced with the term *flash*.
- Added *time stamp* and *temperature* fields to the *capacity response message*
- Added examples of typical messages
- Definition and configuration message for *pattern* was significantly changed.
- Removed the repeat count field from all *execute* commands; these commands must now be terminated by the *abort*
- Updated diagram of *flash* timing to include *interpulse interval*.
- Updated diagram of *pattern* timing to include *flash pattern interval*.
- Added definition of *start pattern message*.