

Yujin Kobuki ROS2 setup documentation

Ugnius Stašaitis ugnius@dev.stasaitis.me

2026-01-10

Contents

Short description	1
GitHub repos	1
1. Setting up the base system(s)	2
1. Installing Ubuntu.	2
2. Installing ROS2	2
1. On the Kobuki:	2
2. On the Desktop	2
3. Testing the base ROS2 installation and communication	2
4. Installing the Kobuki packages on ROS2	3
5. Note on launch files for the Kobuki packages	4
6. Configuring keyboard control via ROS2	4
7. Setting up LIDAR, SLAM and using RVIZ	5
1. Package install	6
2. Robot state publisher	6
3. Linking the lidar	7
4. Launching the nodes	7
5. Using Rviz2	7
8. Smoothing and muxing inputs	8
1. Cmd_vel_mux setup	9
2. Velocity smoother setup	9
9. Bringing up the Nav2 stack	12
10. Connecting an Xbox controller	12
11. Useful links	13

Short description

This document covers installing and setting up ROS2 on a RaspberryPI (the Kobuki robot) and a more powerful desktop PC/VM/Distrobox machine. It also covers acquiring, compiling and configuring ROS2 packages for the Kobuki which allow the robot to be teleoperated and/or controlled via a lidar-powered navigation stack.

GitHub repos

This document is also available on github in a more copy-paste friendly form:

<https://github.com/kobuki-ktu/docs>

The **kobuki-ktu** GitHub also contains all the forked repos used in this document. All the repos have patches applied in order to work out-of-the-box at time time of writing.

1. Setting up the base system(s)

1. Installing Ubuntu.

Since this guide is using ROS Jazzy, you will need to install Ubuntu 24.04.3 LTS (Noble). ##### 1. On the Kobuki 1. Download [RaspberryPi Imager](#) 2. Select The Ubuntu server LTS 64-bit image. 3. Use the [super secret menu](#) to configure the WIFI and SSH access. 4. Flash the image 5. Insert the SD card into the PI and power it up!

A note on SSH: I highly recommend using SSH to configure the RaspberryPI you'll be using to control the Kobuki. If you're not familiar with SSH and how to set it up, a useful article can be found [here](#).

2. Setting up another machine You will need another machine for ROS capabilities which the RaspberryPI is not powerful enough to properly run (eg.: Rviz2, compiling heavy ROS packages)

You have 4 options for this (ordered from simplest and easiest to hardest and most advanced):

1. If you have a spare machine, you can simply install Ubuntu on it.
2. You can install Ubuntu on a spare partition and dual-boot.
3. Set up a virtual machine (*this is the method I used*)
 - If you're running Linux, I recommend using [Virtual Machine Manager](#).
 - If you're running Windows - there's [VirtualBox](#).

In either case, you will need to set up bridged networking on the VM in order for the VM to be able to communicate with the RaspberryPI. This process is moderately complex on Linux and I cannot comment how easy/hard it is to do on Windows.

4. Using containers
 - You can run [ROS on Docker](#). *Note: this works really well, but needs a lot of setup.*
 - If you're running Linux, [Distrobox](#) can let you run a containerized Ubuntu instance on your distro of choice.
 - If you're running Windows, you can experiment using the Windows Subsystem for Linux, but I have no idea how well it will work for this use case.

2. Installing ROS2

1. On the Kobuki:

```
wget https://raw.githubusercontent.com/kobuki-ktu/Utils/master/install_ros2_kobuki.sh
bash install_ros2_kobuki.sh
```

2. On the Desktop

```
wget https://raw.githubusercontent.com/kobuki-ktu/Utils/master/install_ros2_desktop.sh
bash install_ros2_desktop.sh
```

3. Testing the base ROS2 installation and communication

Ensure both machines are connected to the same network.

On the Kobuki run:

```
ros2 run demo_nodes_cpp talker
```

On the Desktop run:

```
ros2 run demo_nodes_cpp listener
```

If everything is set up and working correctly, you will see the Kobuki transmitting “Hello World” messages and the Desktop machine successfully receiving them.

4. Installing the Kobuki packages on ROS2

Install a udev rule for the Kobuki, so it always appears as `/dev/kobuki` when connected to the RaspberryPI (instead of `/dev/ttyUSBx`).

```
wget https://raw.githubusercontent.com/kobuki-ktu/kobuki_ftdi/devel/60-kobuki.rules
sudo cp 60-kobuki.rules /etc/udev/rules.d
sudo service udev reload
sudo service udev restart
```

The Kobuki ROS packages are not available on the ROS Jazzy repos, as such, we will have to build them from source.

The packages depend on ECL, however, a few of the required ones are/were unavailable on the ROS jazzy repos, so we must also build them from source.

The Kobuki and ECL source code is available on my GitHub fork. The fork also has a few patches applied, since the original ECL code needs a few small fixes in order to compile on current C++ compilers.

```
mkdir -p ~/kobuki/src
cd ~/kobuki
```

```
git clone https://github.com/kobuki-ktu/ecl_lite.git ~/kobuki/src/ecl_lite
git clone https://github.com/kobuki-ktu/ecl_core.git ~/kobuki/src/ecl_core
```

ECL dependencies

```
sudo apt install -y ros-jazzy-angles
sudo apt install -y ros-jazzy-diagnostic-updater
sudo apt install -y ros-jazzy-ecl-build
sudo apt install -y ros-jazzy-sophus
```

```
colcon build
```

TIP: If a package fails to build, you can try to build the packages by groups:

```
colcon build --packages-select-regex ecl
```

Or even one by one:

```
colcon build --packages-select-regex ecl_time
```

If ECL was compiled successfully, we can now compile the Kobuki packages:

```
mkdir -p ~/kobuki/src
cd ~/kobuki
```

```
git clone https://github.com/kobuki-ktu/kobuki_core.git \
~/kobuki/src/kobuki_core
git clone https://github.com/kobuki-ktu/kobuki_ros_interfaces.git \
~/kobuki/src/kobuki_ros_interfaces
git clone https://github.com/kobuki-ktu/kobuki_ros.git \
~/kobuki/src/kobuki_ros
git clone https://github.com/kobuki-ktu/kobuki_velocity_smoother.git \
~/kobuki/src/kobuki_velocity_smoother
```

```
colcon build
```

After installing the packages, you will need to activate your ROS2 overlay (environment) each time you want to use these packages:

```
source ~/kobuki/install/setup.bash
```

TIP: Add this command to your `.bashrc`

If everything built correctly, try connecting the Kobuki to the RaspberryPI and running this command:

```
kobuki-simple-keyop
```

You should be able to control the robot via keyboard input

Note: this is only testing the base Kobuki driver, which is communicating with the robot directly - not through ROS2

5. Note on launch files for the Kobuki packages

As the Kobuki project is no longer maintained, many of the original launch files for the Kobuki ROS2 nodes need small to moderate ammounts of fixup in order to work properly. As such, commands like:

```
ros2 launch kobuki_random_walker kobuki_random_walker_app.launch
```

are not going to work directly since they're using the original launch files

If you'll want to build more complex behaviour, you'll also need to edit the launch files in order to configure packages and connect them together.

You should always make a copy of the launch files instead of editing them directly

In every single ROS package you compiled via `colcon`, the launch files will be located in

```
~/kobuki/install/<package_name>/share/<package_name>/launch
```

In every single ROS package you install via `apt install`, the launch files will be located in

```
/opt/ros/jazzy/share/<package_name>/launch
```

6. Configuring keyboard control via ROS2

Keyboard control via ROS2 will require you to install a package for sending keyboard commands to ROS2.

```
sudo apt install -y ros-jazzy-teleop-twist-keyboard
```

The next steps will require you to launch multiple terminals or use `tmux`

In one terminal run:

```
ros2 launch kobuki_node kobuki_node-launch.py
```

This connects the Kobuki driver to ROS and exposes various ROS topics for controlling the robot and getting information out of it.

You can see these topics by running this command in another terminal

```
ros2 topic list
```

Note: the `kobuki_node` must be running for you to see the topic list.

The output will look something like this:

```
<...>
/commands/controller_info
/commands/digital_output
/commands/external_power
/commands/led1
```

```

/commands/led2
/commands/motor_power
/commands/reset_odometry
/commands/sound
/commands/velocity
/controller_info
/debug/raw_control_command
/debug/raw_data_command
/debug/raw_data_stream
/diagnostics
/events/bumper
/events/button
/events/cliff
/events/digital_input
/events/power_system
/events/robot_state
/events/wheel_drop
<...>

```

We are interested in the `/commands/velocity` topic if we want to move the robot.

If you run

```
ros2 topic info /commands/velocity
```

You will see the type of ROS messages it accepts, the number of ROS nodes which are publishing to it, and the number of nodes which are subscribed to it.

```

Type: geometry_msgs/msg/Twist
Publisher count: 0
Subscription count: 1

```

In this case the subscriber is the `kobuki_node` which is listening for `geometry_msgs/msg/Twist` messages.

Lets send some of these messages!

This command runs another ROS node which will send messages to `/commands/velocity` (launch it in another terminal)

```

ros2 run teleop_twist_keyboard teleop_twist_keyboard \
--ros-args --remap cmd_vel:=/commands/velocity

```

Note: We use the `--remap cmd_vel:=/commands/velocity` because by default this package outputs messages to the `/cmd_vel` topic, but the Kobuki is listening on `/commands/velocity`. This redirects the messages to the correct destination. It would also be valid to remap the `kobuki_node`'s input from `/commands/velocity` to `/cmd_vel` - it would also serve the same purpose.

Once you've launched the keyboard node, try moving the robot.

You can observe what values the are sent to `/commands/velocity` by calling this command in another terminal.

```
ros2 topic echo /commands/velocity
```

If you're using the recommended 2 machine setup and the other machine is connected to the same network as the Kobuki and ROS2 is installed correctly, you can control the Robot from the other machine!

Simply run ONLY the `kobuki_node` on the Kobuki, and ONLY the `teleop_twist_node` on the other machine.

7. Setting up LIDAR, SLAM and using RVIZ

To enable autonomous mapping and navigation on the Kobuki, we will first need to set up LIDAR and SLAM.

In the setup I used, I had the `rpi-lidar A1`. Your mileage may vary using other models.

1. Package install

For this we are going to use 2 packages:

`rpilidar_ros` and `slam_toolbox`

`slam toolbox` can be simply installed via:

```
sudo apt install -y ros-jazzy-slam-toolbox
```

`rpi-lidar`, however, will have to be compiled from source:

```
git clone https://github.com/kobuki-ktu/rplidar_ros2.git ~/kobuki/src/rpilidar_ros2
```

```
`colcon build --packages-select-regex rpilidar`
```

2. Robot state publisher

Before we can launch anything, we must launch a very important node which is named the `robot_state publisher`. The purpose of this node is to set up transformations between various local/global coordinate reference frames. These transforms basically describe where everything is located in relation to each other physically on the robot. Many ROS packages rely on this information to function properly.

In order to launch the `robot_state_publisher` we must first create a launch file:

```
from launch import LaunchDescription
from launch.actions import DeclareLaunchArgument
from launch.conditions import IfCondition, UnlessCondition
from launch.substitutions import Command, LaunchConfiguration
from launch_ros.actions import Node
from launch_ros.substitutions import FindPackageShare
import os

def generate_launch_description():
    pkg_share = FindPackageShare(package='kobuki_description').find('kobuki_description')
    default_model_path = os.path.join(pkg_share, 'urdf', 'kobuki_standalone.urdf.xacro')

    robot_state_publisher_node = Node(
        package='robot_state_publisher',
        executable='robot_state_publisher',
        parameters=[{'robot_description': Command(['xacro ', LaunchConfiguration('model')])}]
    )
    return LaunchDescription([
        DeclareLaunchArgument(name='model', default_value=default_model_path,
            description='Absolute path to robot model file'),
        robot_state_publisher_node,
    ])
```

The important thing to note here is the `default_model_path` which is set to the Kobuki's URDF file. This file contains the actual description of the robot, from which the transformations mentioned above are automatically generated. You can read more about URDF [here](#).

Before you launch the file you must also install the `xacro` tool:

```
sudo apt install -y ros-jazzy-xacro
```

Once you save the above file to disk, you can launch it like this:

```
ros2 launch robot_state_publisher.py.launch
```

(In this case the file was saved under the name `robot_state_publisher.py.launch`)

3. Linking the lidar

The provided URDF file only provides transforms for the base components of the robot. Since we're adding a LIDAR module, ROS also expects it to be linked via transforms to the physical robot.

To to this, we add a manual transform, which sets the location of the lidar module's coordinate reference frame to be inside the robot.

```
ros2 run tf2_ros static_transform_publisher 0 0 0 0 0 0 base_link laser
```

This links the `laser` frame to the `base_link` frame.

You can view the entire transform tree by running

```
ros2 run tf2_tools view_frames
```

This generates a pdf with a view of all the transforms. Your transform tree should look like this if you set everything up correctly:

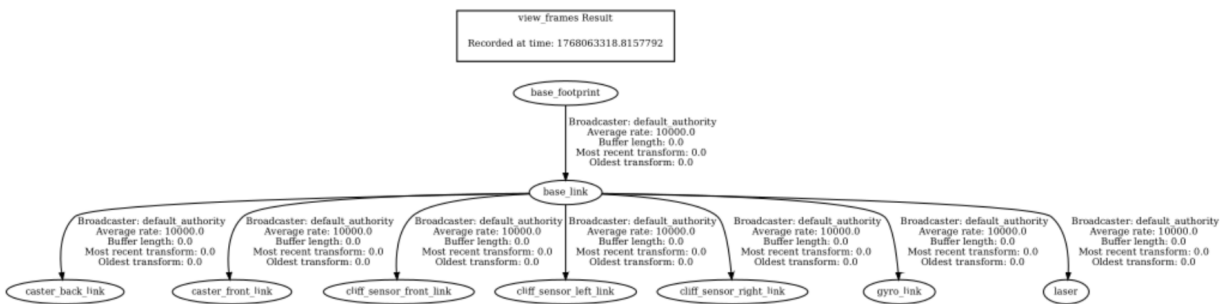


Figure 1: TF-TREE

4. Launching the nodes

If everything was compiled, installed and configured successfully, we can try and launch the nodes:

The LIDAR node can be launched via:

```
ros2 launch rplidar_ros rplidar.launch.py
```

It publishes data to the `/scan` topic.

Note: the Rplidar package and/or A1 module can be flaky and crash while starting. You may try to plug the LIDAR module into another USB port on the PI if this happens.

To launch `slam_toolbox` run:

```
ros2 launch slam_toolbox online_sync_launch.py
```

5. Using Rviz2

[Guide on Rviz2 usage](#)

To see the map which is generated by SLAM, you only need to add the `map display` type to Rviz.


You can also add the `RobotModel` display type to see a 3D model of the Kobuki's current location on the map. However, this requires you to have the Kobuki packages installed on the machine you are running Rviz2 on.

Try moving the robot around and you should see the map update.

If you want the mapping to be more responsive you can find `slam_toolbox`'s launch config file and tune these fields:

- `minimum_travel_distance`
- `minimum_travel_heading`
- `minimum_time_interval`

8. Smoothing and muxing inputs

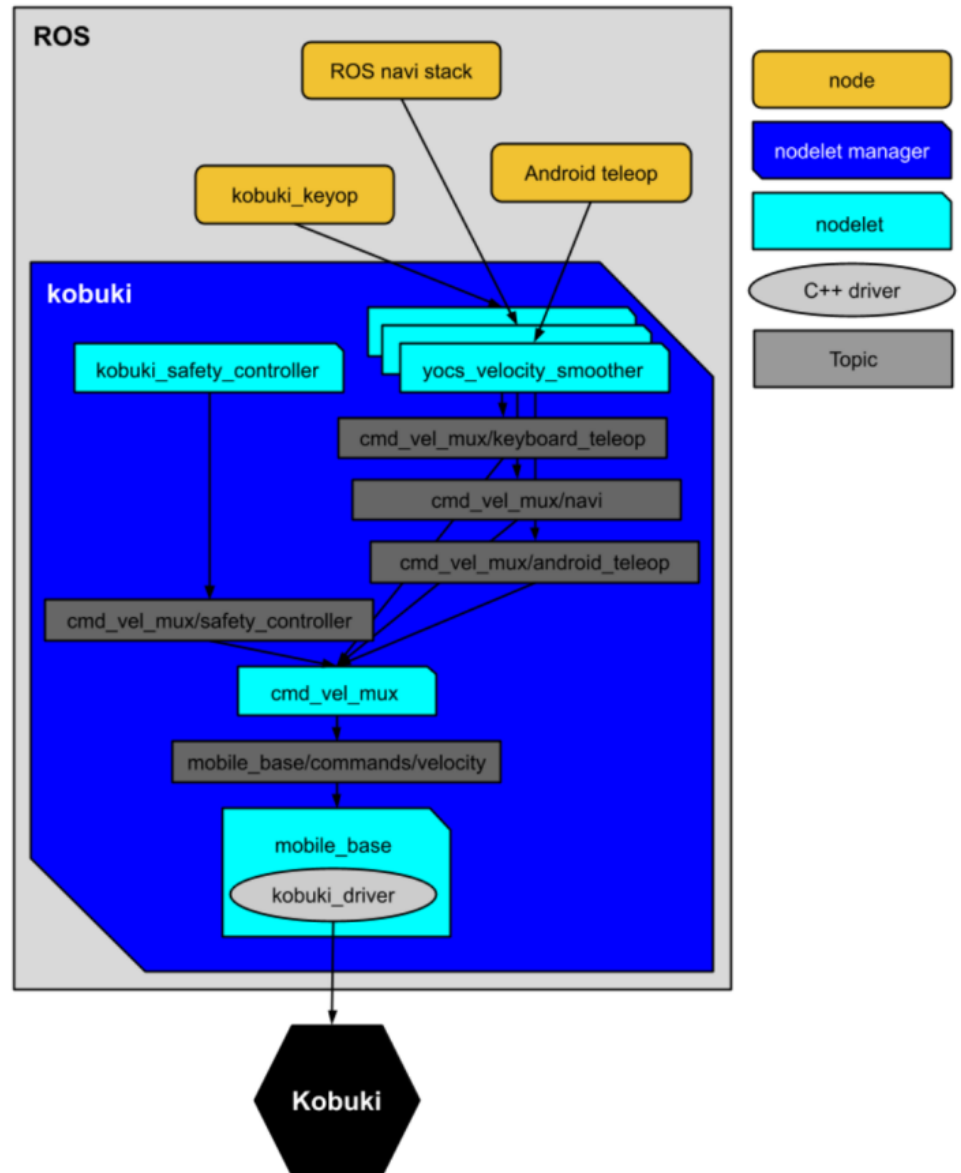

The Kobuki's control diagram:

Before we do autonomous navigation it would be a good idea to give ourselves a manual control override if the robot tries to do anything stupid.

This can be achieved using the `cmd_vel_mux` package.

It is also a good idea to smooth all the inputs so the robot doesn't jerk during acceleration or braking and doesn't cause damage to itself.

This can be achieved using the `kobuki_velocity_smoother` package.

1. Cmd_vel_mux setup

This is the launch file for the cmd_vel_mux package. (Set the params_file path according to your setup)

```
import os

import ament_index_python.packages
import launch
import launch_ros.actions

import yaml

def generate_launch_description():
    share_dir =
        ament_index_python.packages.get_package_share_directory('cmd_vel_mux')
    params_file = '/home/pi/launch/kobuki/velocity_mux/cmd_vel_mux_params.yaml'
    with open(params_file, 'r') as f:
        params = yaml.safe_load(f)['cmd_vel_mux']['ros__parameters']

    cmd_vel_mux_node = launch_ros.actions.Node(
        package='cmd_vel_mux',
        executable='cmd_vel_mux_node',
        output='both',
        parameters=[params]
    )

    return launch.LaunchDescription([cmd_vel_mux_node])
```

This is the params file for 3 different input sources (topics):

```
cmd_vel_mux:
  ros__parameters:
    subscribers:
      navigation_stack:
        topic:      "cmd_vel_mux/navigation"
        timeout:    1.0
        priority:    1
        short_desc:  "Navigation stack controller"
      joystick:
        topic:      "cmd_vel_mux/joystick"
        timeout:    0.1
        priority:    10
        short_desc:  "Keyboard operation"
      keyboard_operation:
        topic:      "cmd_vel_mux/keyop"
        timeout:    0.1
        priority:    20
        short_desc:  "Keyboard operation"
```

2. Velocity smoother setup

This is the launch file for the velocity smoother(s) (set the params file(s) locations based on your own setup):

```
import os

import ament_index_python.packages
```

```

import launch
import launch_ros.actions

import yaml

def generate_launch_description():
    params_file_keyop =
        '/home/pi/launch/kobuki/velocity_smoother/keyop_velocity_smoother_params.yaml'
    with open(params_file_keyop, 'r') as f:
        params = yaml.safe_load(f)['kobuki_velocity_smoother']['ros__parameters']
    velocity_smoother_node_keyop = launch_ros.actions.Node(
        package='kobuki_velocity_smoother',
        remappings=[
            ('/kobuki_velocity_smoother_keyop/input', '/cmd_vel_raw/keyop'),
            ('/kobuki_velocity_smoother_keyop/smoothed', '/cmd_vel_mux/keyop'),
            ('/kobuki_velocity_smoother_keyop/feedback/cmd_vel', '/cmd_vel'),
            ('/kobuki_velocity_smoother_keyop/feedback/odometry', '/odom'),
        ],
        executable='velocity_smoother',
        name='kobuki_velocity_smoother_keyop',
        output='both',
        parameters=[params])

    params_file_navigation =
        '/home/pi/launch/kobuki/velocity_smoother/navigation_velocity_smoother_params.yaml'
    with open(params_file_navigation, 'r') as f:
        params = yaml.safe_load(f)['kobuki_velocity_smoother']['ros__parameters']
    velocity_smoother_node_navigation = launch_ros.actions.Node(
        package='kobuki_velocity_smoother',
        remappings=[
            ('/kobuki_velocity_smoother_navigation/input', '/cmd_vel_raw/navigation'),
            ('/kobuki_velocity_smoother_navigation/smoothed', '/cmd_vel_mux/navigation'),
            ('/kobuki_velocity_smoother_navigation/feedback/cmd_vel', '/cmd_vel'),
            ('/kobuki_velocity_smoother_navigation/feedback/odometry', '/odom'),
        ],
        executable='velocity_smoother',
        name='kobuki_velocity_smoother_navigation',
        output='both',
        parameters=[params])

    params_file_joystick =
        '/home/pi/launch/kobuki/velocity_smoother/joystick_velocity_smoother_params.yaml'
    with open(params_file_navigation, 'r') as f:
        params = yaml.safe_load(f)['kobuki_velocity_smoother']['ros__parameters']
    velocity_smoother_node_joystick = launch_ros.actions.Node(
        package='kobuki_velocity_smoother',
        remappings=[
            ('/kobuki_velocity_smoother_joystick/input', '/cmd_vel_raw/joystick'),
            ('/kobuki_velocity_smoother_joystick/smoothed', '/cmd_vel_mux/joystick'),
            ('/kobuki_velocity_smoother_joystick/feedback/cmd_vel', '/cmd_vel'),
            ('/kobuki_velocity_smoother_joystick/feedback/odometry', '/odom'),
        ],

```

```

    executable='velocity_smoother',
    name='kobuki_velocity_smoother_joystick',
    output='both',
    parameters=[params])

    return launch.LaunchDescription(
        [velocity_smoother_node_keyop,
         velocity_smoother_node_navigation,
         velocity_smoother_node_joystick])

```

You will notice, that each input source needs it's own smoother. Accordingly, each smoother need's it's own config (or you can use the same one for all three if you want the same behaviour for all input sources)

This is an example params file for the velocity smoother(s):

```

# Example configuration:
# - velocity limits are around a 10% above the physical limits
# - acceleration limits are just low enough to avoid jerking
kobuki_velocity_smoother:
  ros__parameters:
    # limits
    speed_lim_v: 0.8
    speed_lim_w: 5.4

    accel_lim_v: 0.3
    accel_lim_w: 3.5

    # multiply the acceleration limit by this to permit faster decelerations
    decel_factor: 1.0

    # recompute smoothed velocities at this rate
    frequency: 20.0

    # feedback type:
    # 0 - none
    # 1 - odometry
    # 2 - actual commanded velocity (e.g. after it's been piped through a mux)
    feedback: 2

```

You can read more about the different settings [here](#).

Note: If you want to use this exact setup, you will need to remap the `kobuki_node` launch file to listen on `cmd_vel` instead of `commands/velocity`.

This can be achieved via the following launch file:

```

import os

import ament_index_python.packages
import launch
import launch_ros.actions

import yaml

def generate_launch_description():
    share_dir = ament_index_python.packages.get_package_share_directory('kobuki_node')
    # There are two different ways to pass parameters to a non-composed node;

```

```

# either by specifying the path to the file containing the parameters, or by
# passing a dictionary containing the key -> value pairs of the parameters.
# When starting a *composed* node on the other hand, only the dictionary
# style is supported. To keep the code between the non-composed and
# composed launch file similar, we use that style here as well.
params_file = os.path.join(share_dir, 'config', 'kobuki_node_params.yaml')
with open(params_file, 'r') as f:
    params = yaml.safe_load(f)['kobuki_ros_node']['ros__parameters']
kobuki_ros_node = launch_ros.actions.Node(
    package='kobuki_node',
    remappings=[
        ('/commands/velocity', '/cmd_vel'),
    ],
    executable='kobuki_ros_node',
    output='both',
    parameters=[params])

return launch.LaunchDescription([kobuki_ros_node])

```

9. Bringing up the Nav2 stack

First of all, install the Nav2 packages:

```

sudo apt install ros-jazzy-navigation2
sudo apt install ros-jazzy-nav2-bringup

```

If you set up the Robot state publisher, LIDAR and SLAM correctly, Nav2 should in theory, just work. However, if you set up the velocity smoothers and muxer, you'll probably need to remap some of the topics where velocity commands are sent.

```
ros2 launch navigation_launch.py
```

If the topics are wired up correctly, and the navigation stack starts up successfully, you can make the robot find a path on the map and move to the target location simply by sending a goal pose message through the Rviz UI.

Note: You may be better off running the NAV2 stack on your other, more powerful machine. If you want to run it locally, you will need to do some changes to Nav2 config files, since the RPI4 is not powerful enough to run the system properly on default settings.

In my testing replacing MPPI with DWB in the controller node yielded good results.

You should also probably disable all non-essential nodes, reduce update frequencies, increase timeouts.

10. Connecting an Xbox controller

Install teleop_twist_joy:

```
sudo apt install -y ros-jazzy-teleop-twist-joy
```

If you have a bluetooth controller, you'll need to pair it. A useful guide on how to pair a bluetooth device via the commandline on an RPI can be found [here](#).

A useful package for testing if a controller is working correctly and identifying it's button and axis codes is joystick

```
sudo apt install -y joystick
```

Launch it via to test your controller:

```
jstest /dev/input/js0
```

Create a config file for your controller or use one of the packaged presets. This is example is using an xbox controller's preset:

```
ros2 launch teleop_twist_joy teleop-launch.py joy_config:='xbox' \  
  joy_vel:='cmd_vel_raw/joystick'
```

11. Useful links

Nav2 docs: https://docs.nav2.org/setup_guides/index.html

Kobuki control info: <https://wiki.ros.org/kobuki/Tutorials/Kobuki's%20Control%20System>

Kobuki Ros2 porting guide: <https://idorobotics.com/2024/02/20/ros2-on-kobuki-turtlebot/>

Original (outdated) kobuki docs: <https://kobuki.readthedocs.io/en/devel/software.html>

Kobuki velocity smoother docs: https://wiki.ros.org/yocs_velocity_smoother/indigo